




## Drilling Installation



1. Install bracket rails



2 Mark the punching crew installation

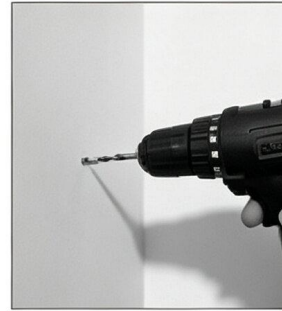

3. Drill 6 mm screw holes in the wall studs



4. Install expansion nails in the holes



5. Install the clip on the expansion nails



6 Put the glass shelf onto the bottom crew (note: tighten the glass clamp screws at the bottom crew)



7. Complete installation