


ASSEMBLY INSTRUCTION


Before you begin, Please follow Assembly Instruction carefully. Then follow them step by step.

PART LIST		
A	TABLE TOP	1 PC
B	TABLE LEGS	4 PCS
HARDWARE LIST		
C	JCBB BOLT (LONG)	8 PCS
D	FLAT WASHER	8 PCS
E	ALLEN KEY	1 PC
F	SPRING WASHER	8 PCS

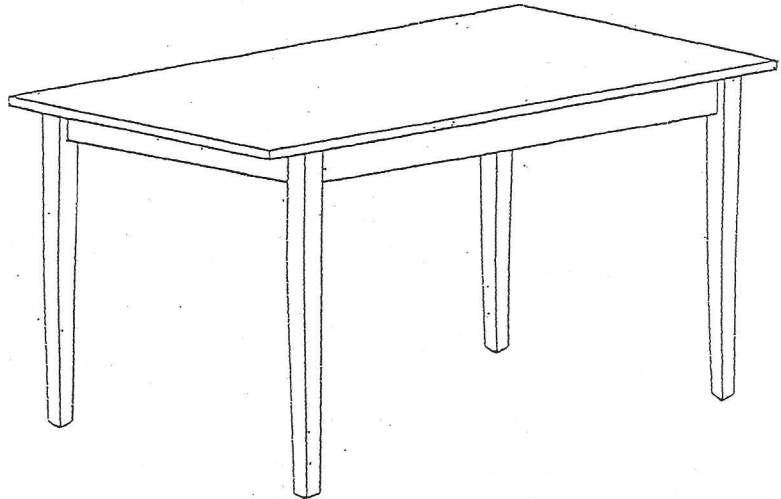

IMPORTANT NOTE: PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.

FIX THE TABLE LEGS(B) TO THE CORNER BLOCK WITH JCBB BOLT (C) SPRING WASHER (F) AND FLAT WASHER (D). THEN TIGHTEN THE JCBB BOLT (C) BY USING THE ALLEN KEY (E).

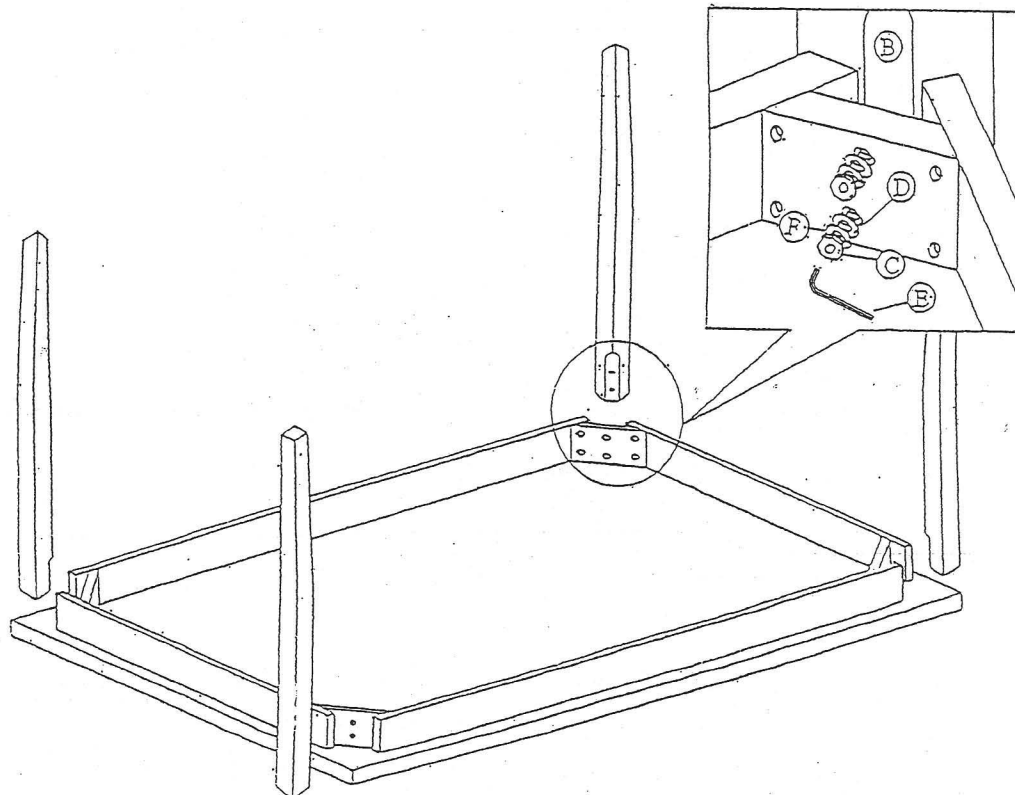





C. CHAIR






ASSEMBLY INSTRUCTIONS

Page 1 of 1

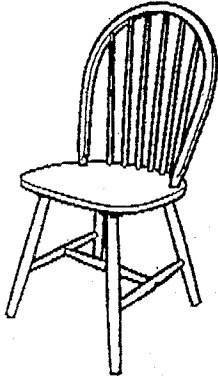
Model : Spindleback Windsor
Chair (RTA)




No.	Parts List (1 Chair)	Qty.
P1.	 Seat	1 pc.
P2.	 Side Frame	2 pcs.
P3.	 Stretcher	1 pc.

No.	Hardware List (1 Chair)	Qty.
H1.	 Allen Key	1 pc.
H2.	 M6 x 50 JCBC Screw	2 pcs.
H3.	 M7 x 40 JCBC-W Screw	8 pcs.
H4.	 Barrel Nut	2 pcs.
H5.	 Wood Button	2 pcs.


Step 1

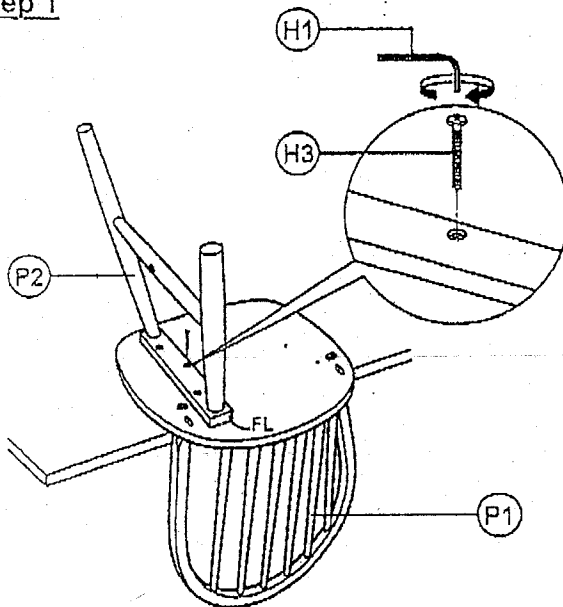


Step 2

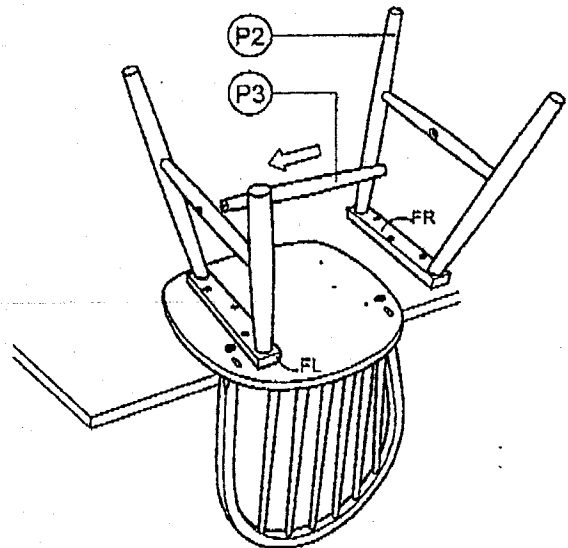

Step 3

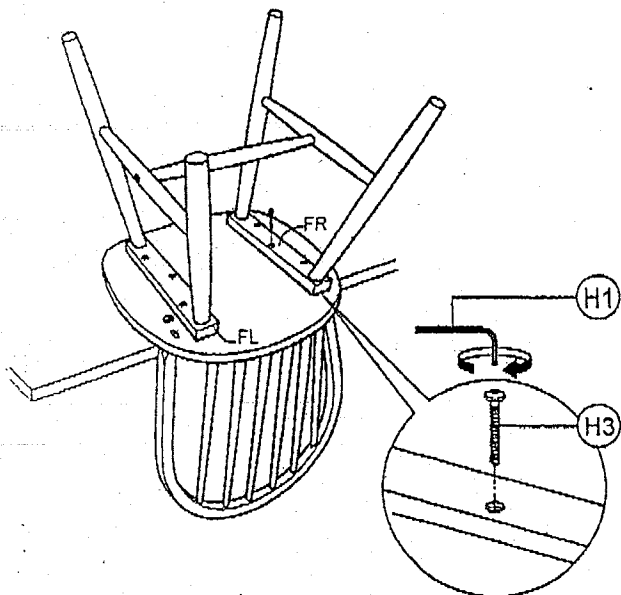

Step 4

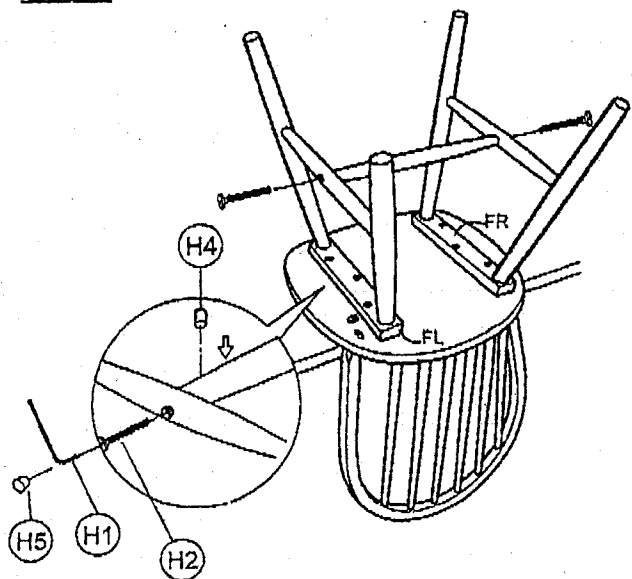

AFTER A FEW DAYS OF INITIAL ASSEMBLY AND CHAIR HAVE ACCLIMATED TO NEW ENVIRONMENT,
RETIGHTEN ALL HARDWARE.