
BD06
INSTRUCTION MANUAL

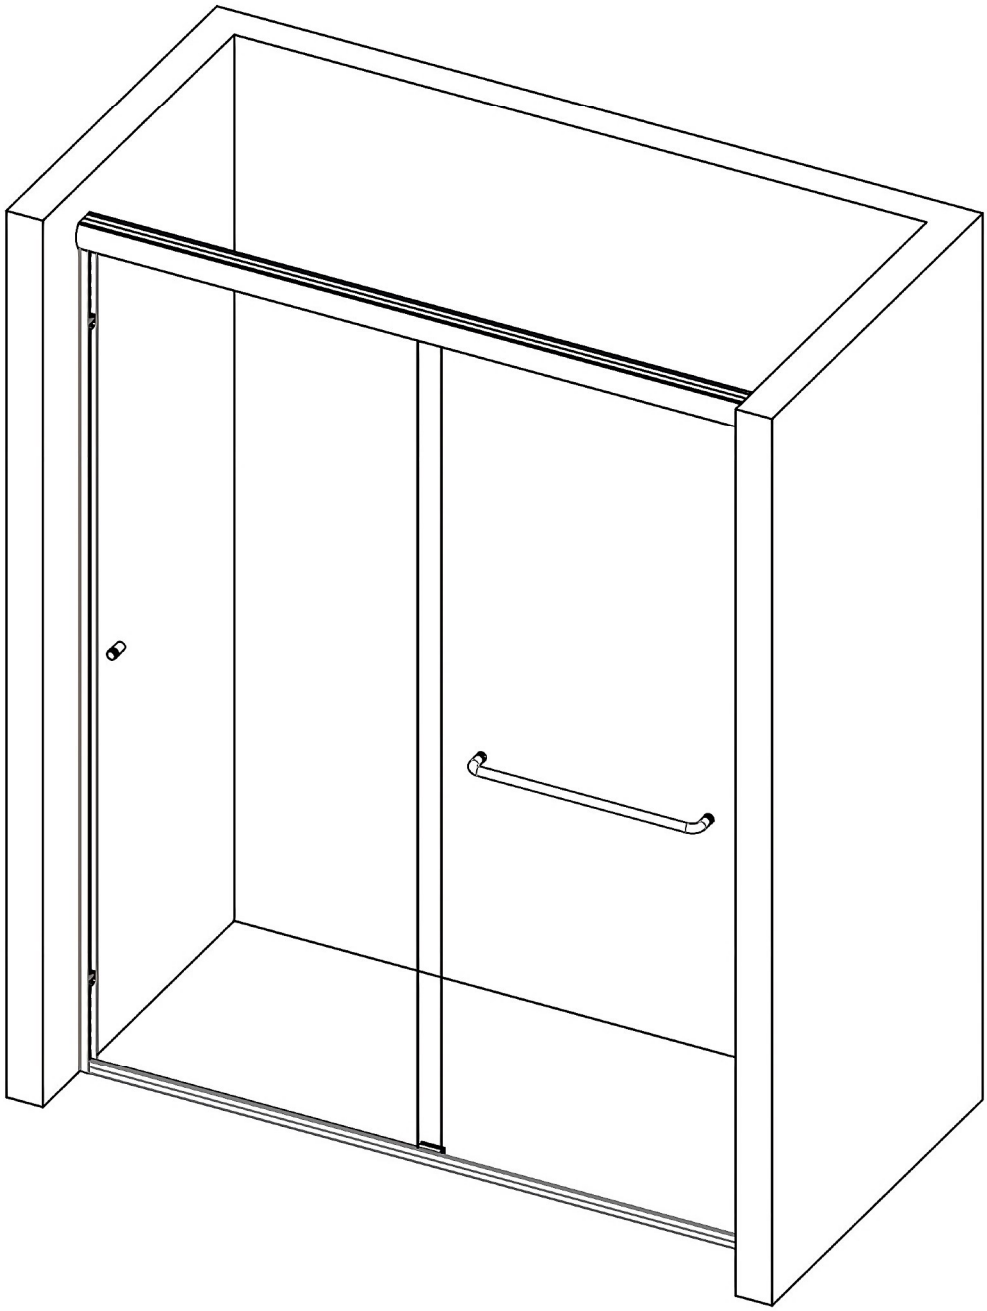




2 PEOPLE REQUIRED

CATALOG






Detail Diagram.....1
Parts List.....2
Installation Notes.....3
Tools Required.....4
Installation Steps.....5
Safety Tips.....17
Trouble Shooting Guide.....18
Customer Service.....19





Detail Diagram

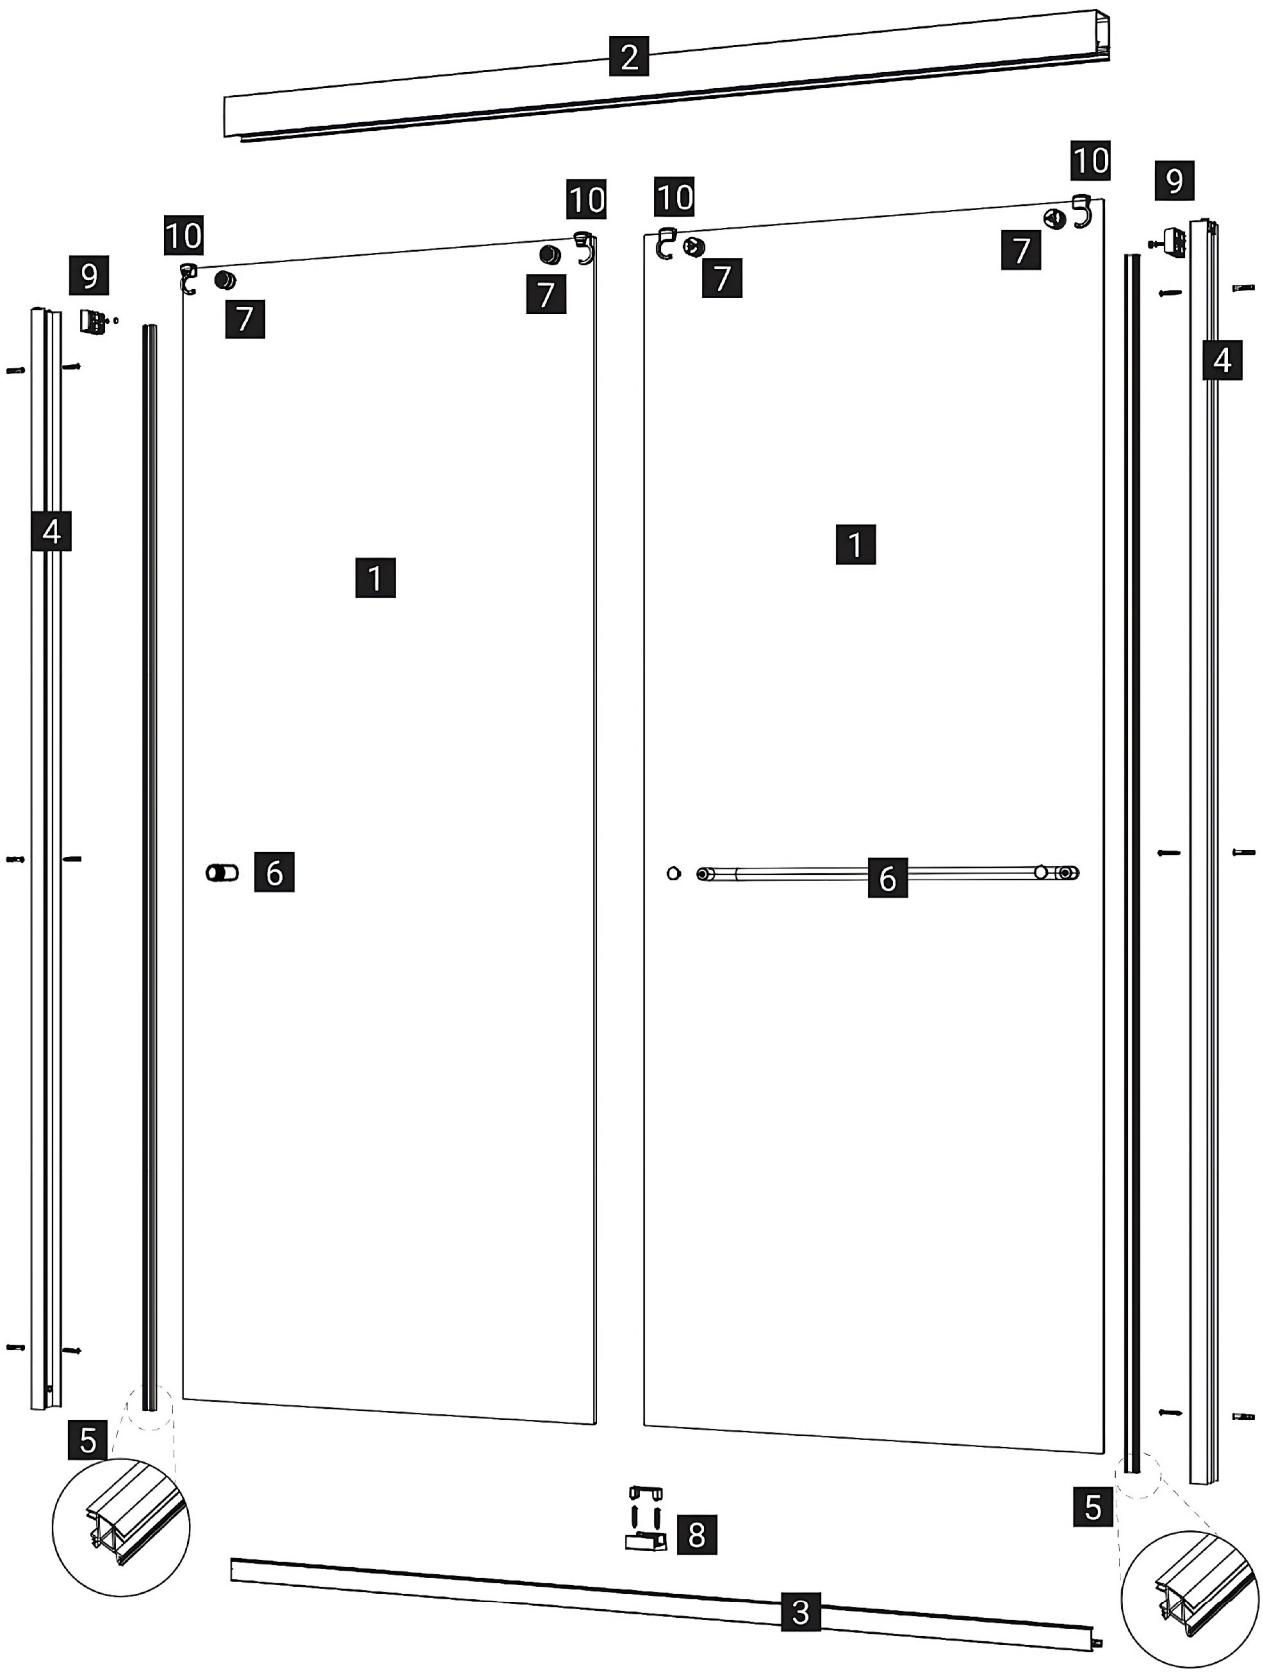

Part List


Check all parts according to the list before assembly
Feel free to contact us if you need assistance

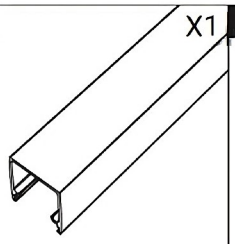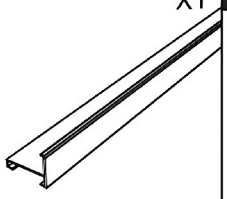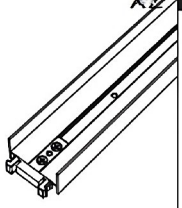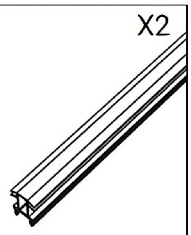1 X2	2 X1	3 X1	4 X2	5 X2
				
Active Panel	Header	Threshold	Vertical Jambs	Rubber Tape

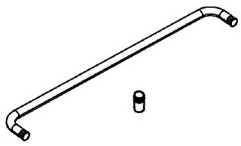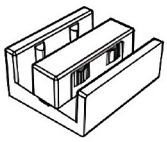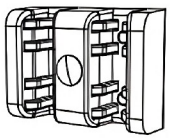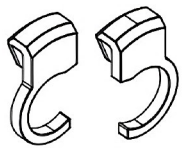6 X1	7 X4	8 X1	9 X2	X4
				 (L X 2 / R X 2)
Towel Bar and Finger Pull	Roller	Bottom Guide	Anti-Collision Rubber	Roller Guard

NOTE

The Rubber Tape has already been pre-installed onto the Vertical Jambs during packaging. Before the actual installation, it is necessary to remove the Rubber Tape. It is recommended to pull it out from the end to avoid damaging the Rubber Tape.

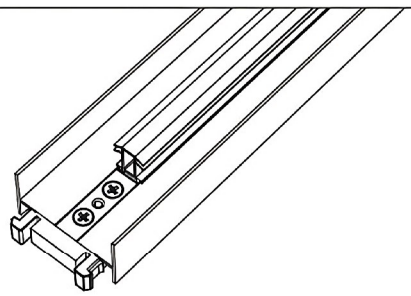

Screws and Expansion Anchors (16 pcs)



ST4x40 Phillips Round Head Self-Tapping Screw (6pcs)



ST4x12 Phillips Round Head Self-Tapping Screw (2pcs)



ST4x16 Phillips Countersunk Self-Tapping Screws (2 pcs)



Ø6x25 Gray Expansion Anchors (6pcs)

Allen Wrenches 3.0mm (2 pcs)



NOTES BEFORE
INSTALLATION

I. Prepare the tools. (Please refer to page 4)

2. All the measurements and installation should do after the tile finish.

3. Make sure shower base is horizontal and both wall are vertical, if shower base not horizontal or the wall not vertical, please contact our installation support.

4. Understand the names and uses of individual accessories of shower door.(Please refer to page 1 ~ 2)

5.Installation must be performed by a licensed professional contractor.

6. Please watch the installation video or call us for installation support.

(Link https://www.youtube.com/@showerdoorfactory)

7. To stretch width or cut the guide rail, Please contact us first to get installation support.

8. The plastic protectors on the glass corner cant move till all the installation steps finished.

9. It's better to repenish some glass glue at the tile wall seams to avoid leakage after the installation is completed.

TOOLS REQUIRED

(Please bring your own tools)



Safty glasses



Rubberhammer



Spirit level



Power drill

φ 6 a n d φ 3 . 2



Tape measure



Screw driver



Pencil



Hacksaw



Silicone Gun

Modified Silane(Silyl) Polymer




Drill Bits

01 Use a level to measure both side walls to verify whether they are vertically aligned or inclined. Next, confirm that the base surface is horizontally level. If necessary, make appropriate adjustments prior to installation.


Required


Verify threshold and wall with a level.

Ensure the installation location maintains a clearance greater than 1/4" from the bathtub or wall outline.

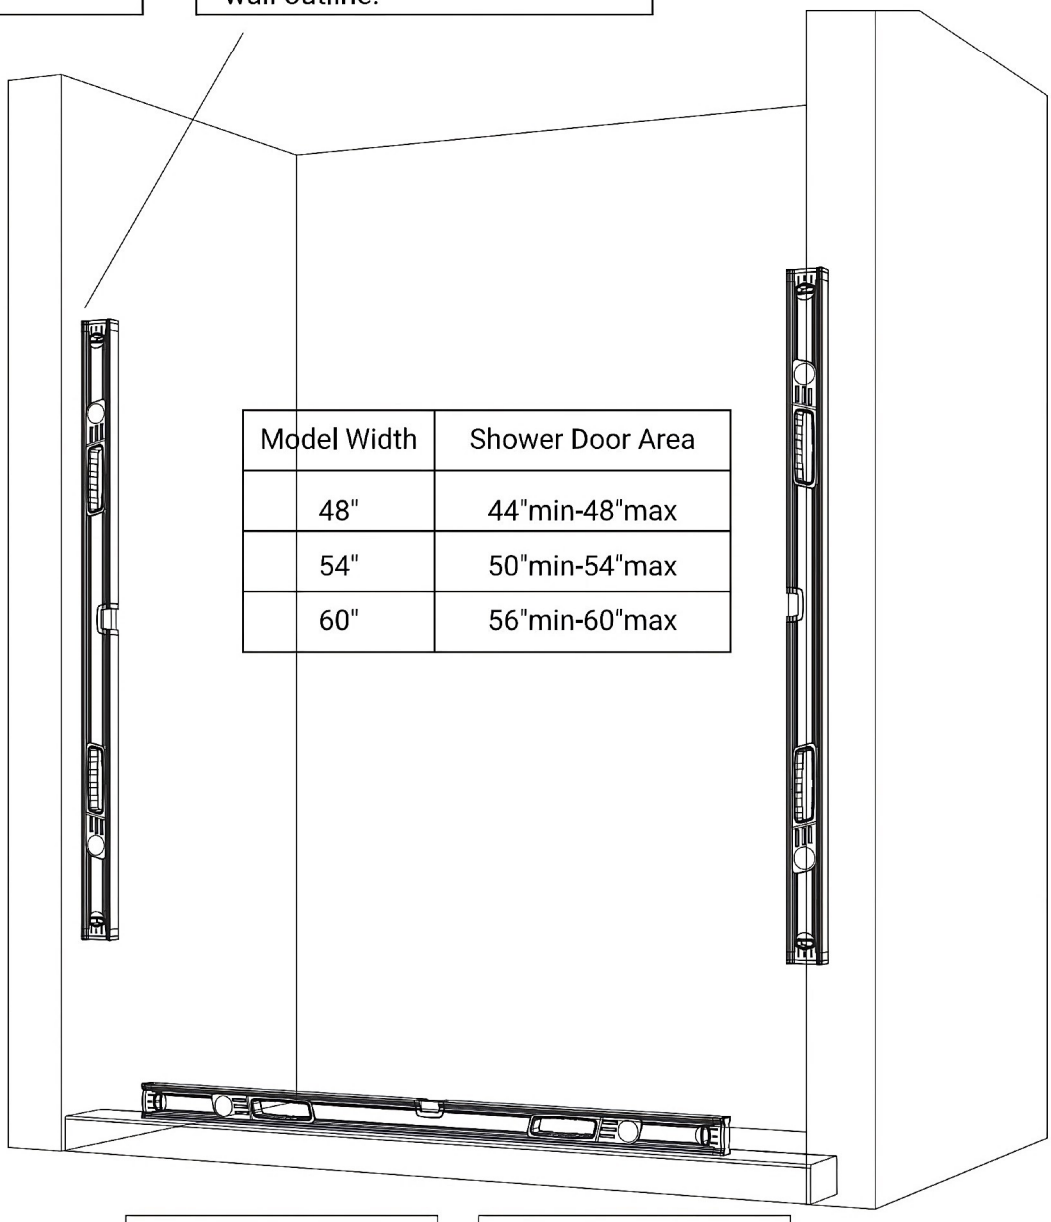



Model Width	Shower Door Area
48"	44"min-48"max
54"	50"min-54"max
60"	56"min-60"max

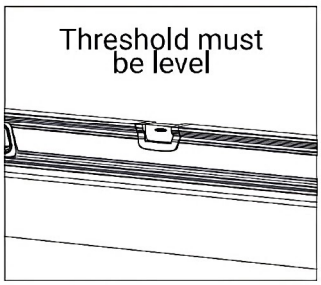

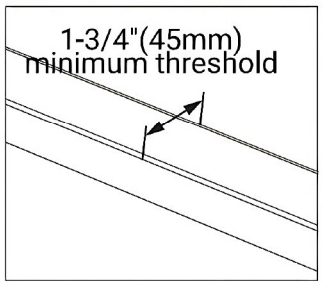

02 Install the four rollers for the two glass panels as shown in the picture.

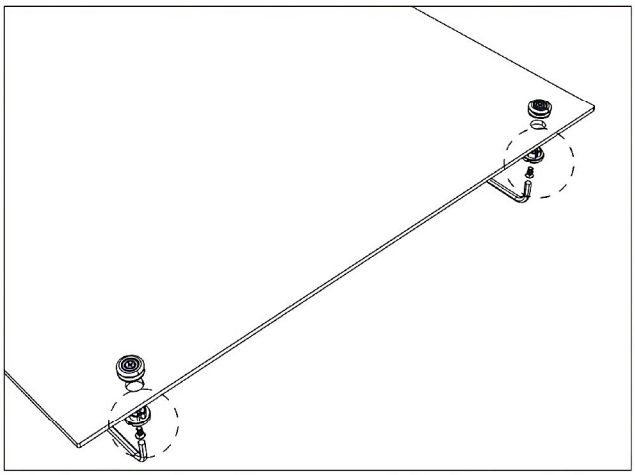


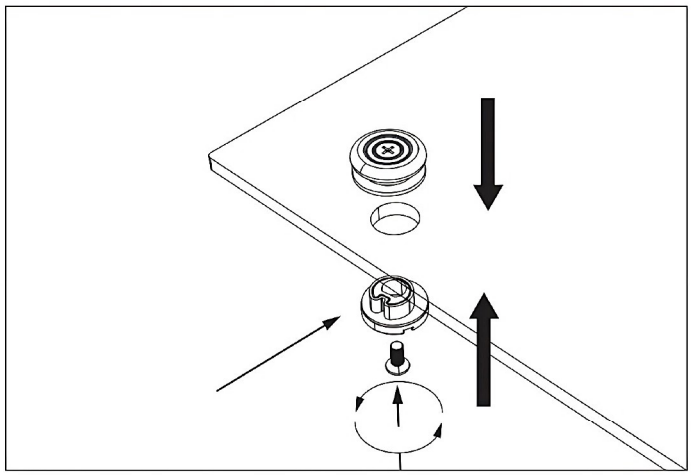

NOTE:
To facilitate subsequent height adjustments of the glass panels, ensure this component is oriented toward the outside of the glass, as illustrated.


03 Position the rollers and handles according to the illustration for the desired final installation result.

It is recommended to install the handles at the final stage. If installed earlier, strictly avoid using the handles to lift or carry the glass panels.

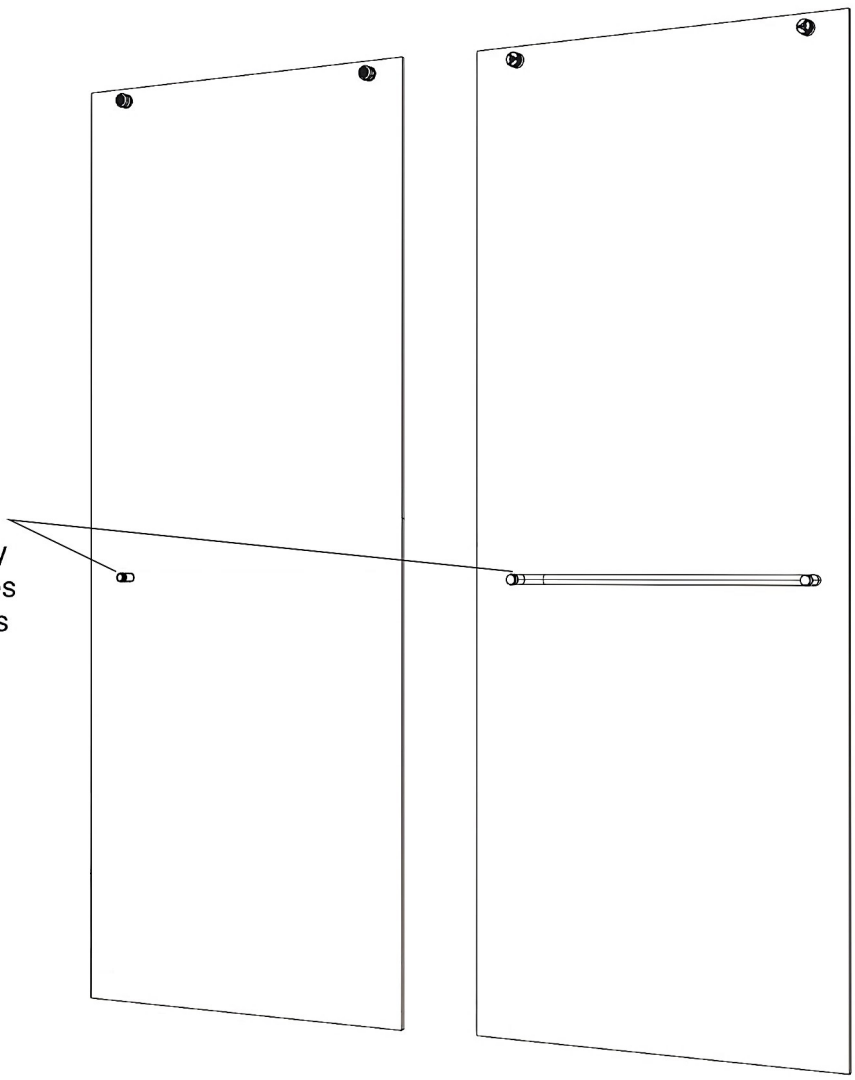

04 1. Measure the finished opening width at the base and at the specified height of the model. Record these dimensions as "W1" (top) and "W2" (bottom) for use in Step #5.
2. Meanwhile, verify whether the threshold is level and the walls are vertical (plumb).

This model will only accommodate up to 1/4"(6mm) for out-of-plumb condition.

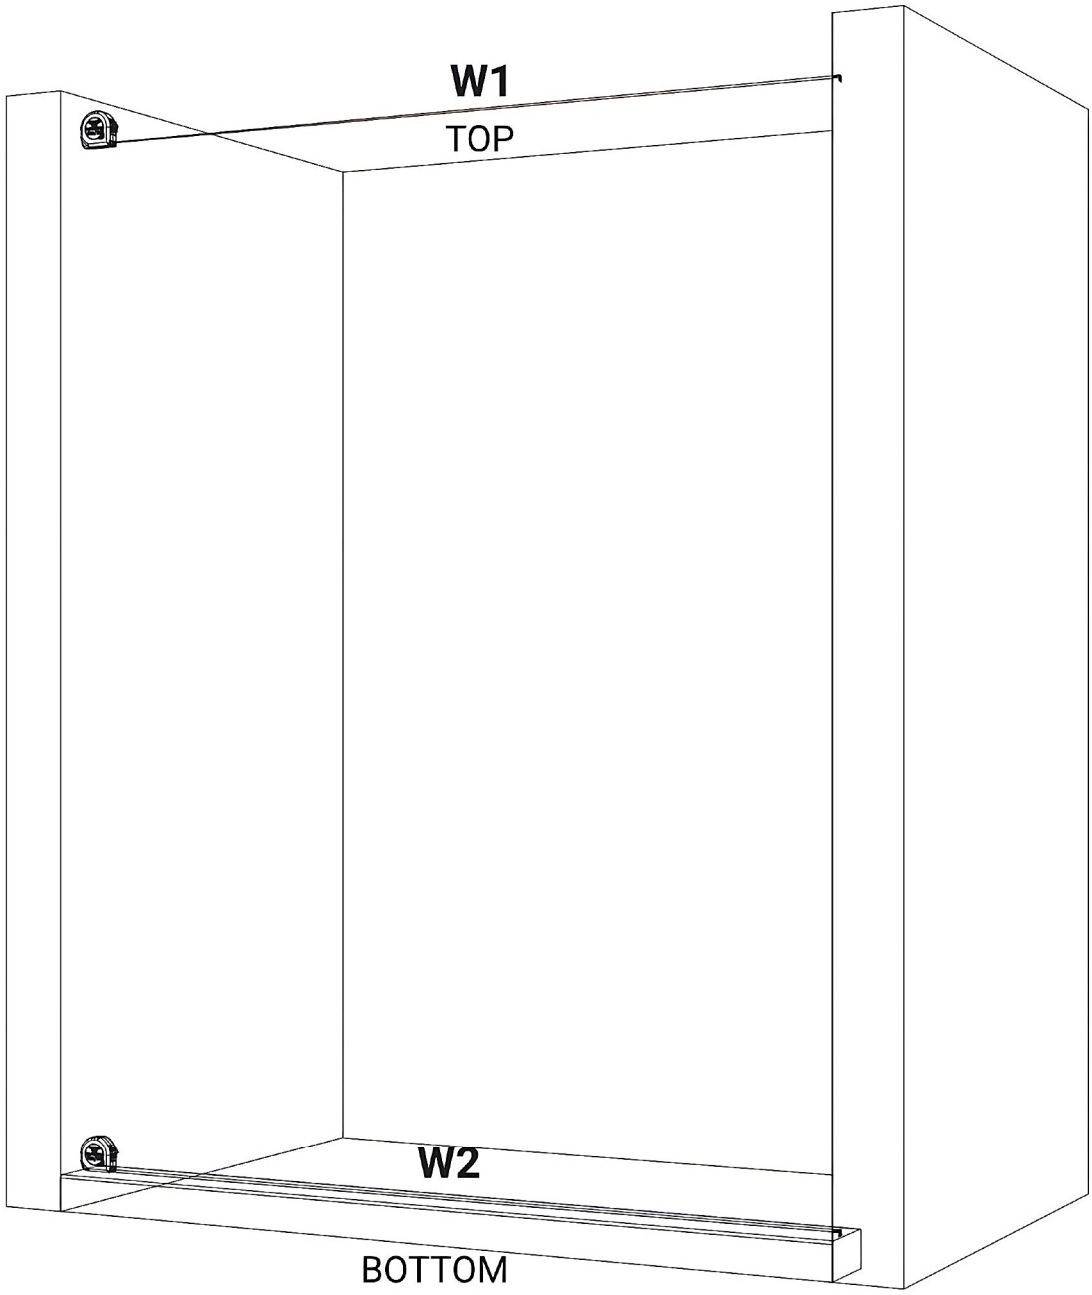


Finished opening top (W1) _____

Finished opening bottom (W2) _____

05 Use a wood saw or hacksaw to cut the Header and Threshold, adjusting their lengths to match the finished opening width.


Cut the Header to: "W1"(top) dimension -1/16"

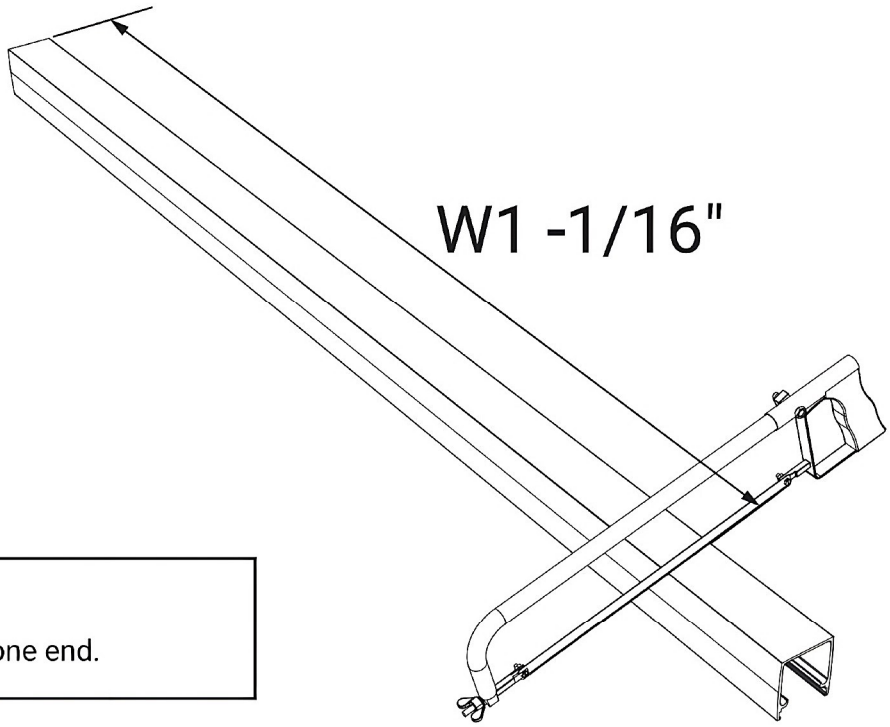

Header

Only cut from one end.


Cut the Threshold to: "W2"(bottom) dimension - 13/16"
Use a metal file to remove any burrs from the cut ends.

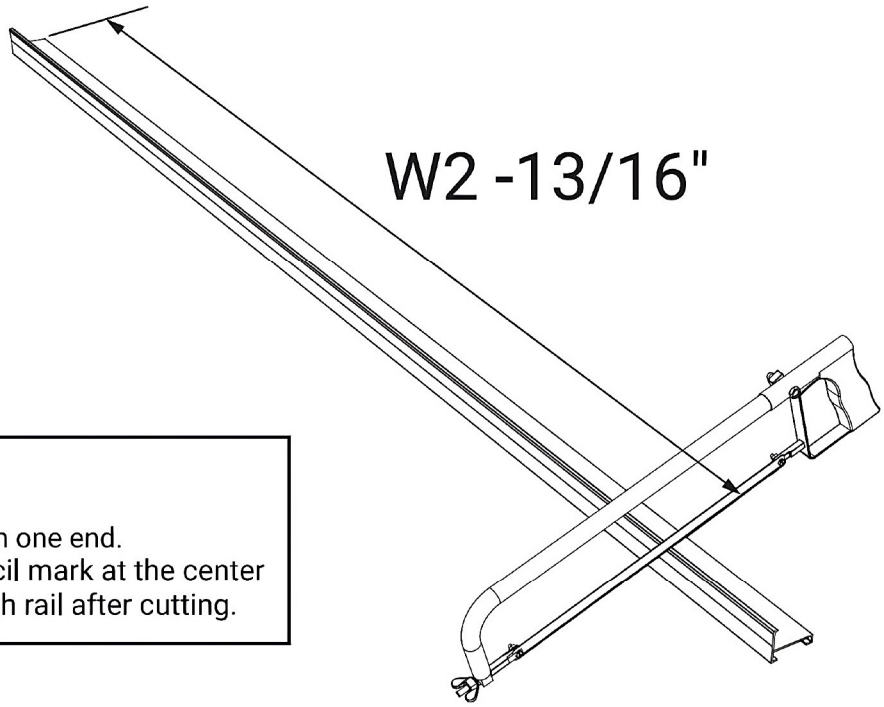


Threshold

Only cut from one end.
Make a pencil mark at the center point on each rail after cutting.

06 Before starting this step, pull out the pre-installed rubber strips from the ends.
Ensure that the left and right Vertical Jambs are as parallel to each other as possible before marking the wall for drilling.

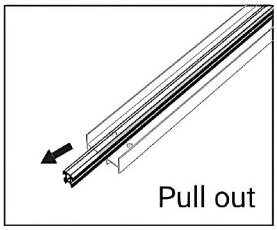


Before starting this step, pull out the Rubber Tape from the end to avoid damaging it.

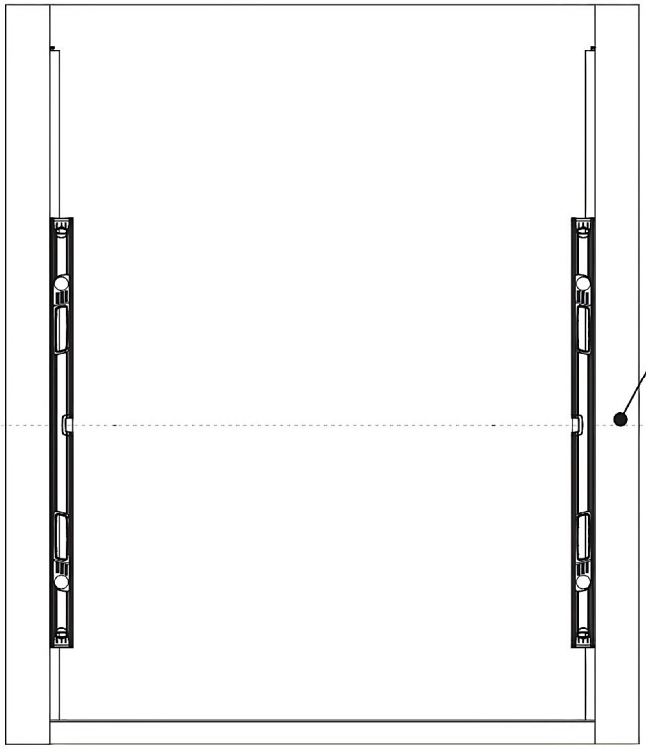



Required

Ensure that both Vertical Jambs are kept as parallel to each other as possible.


07 As shown in the figure, simply use vertical jambs to mark and drill holes between the left and right wall materials.Then use a 6 mm diameter drill bit to drill holes at the marked locations, and finally use a hammer to drive the Ø6x25 gray expansion anchor bolts into the holes.

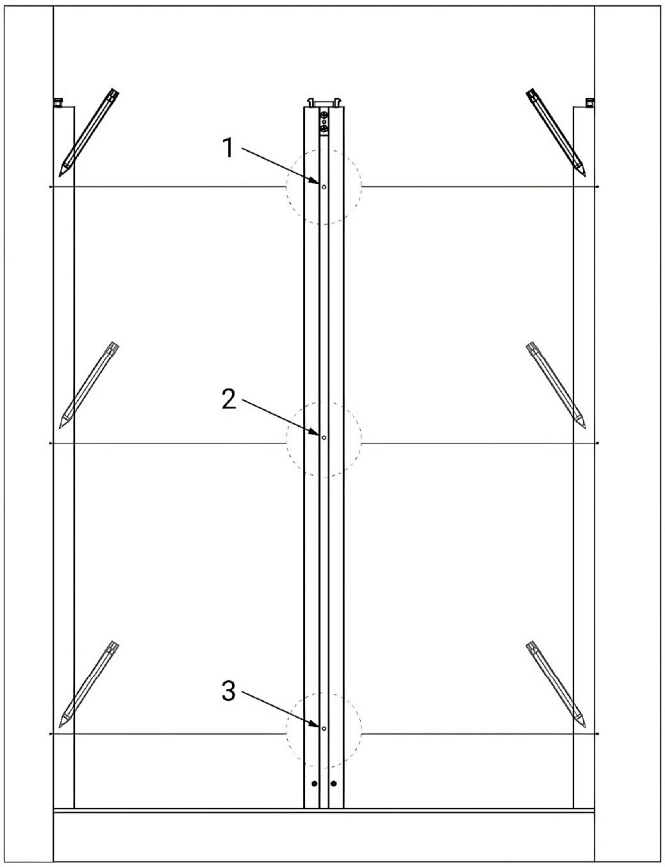

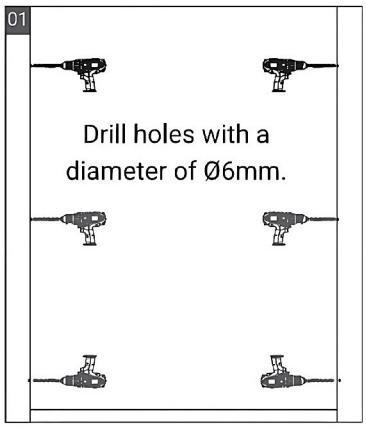


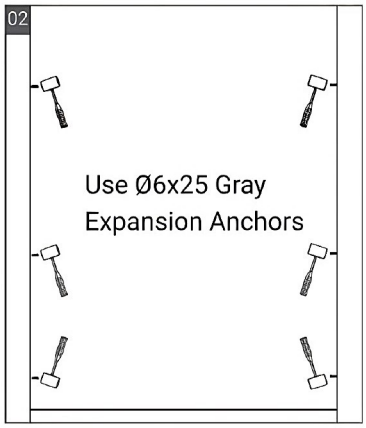


08 Use ST4x40 Phillips Round Head Self-Tapping Screws to secure the Vertical Jambs.

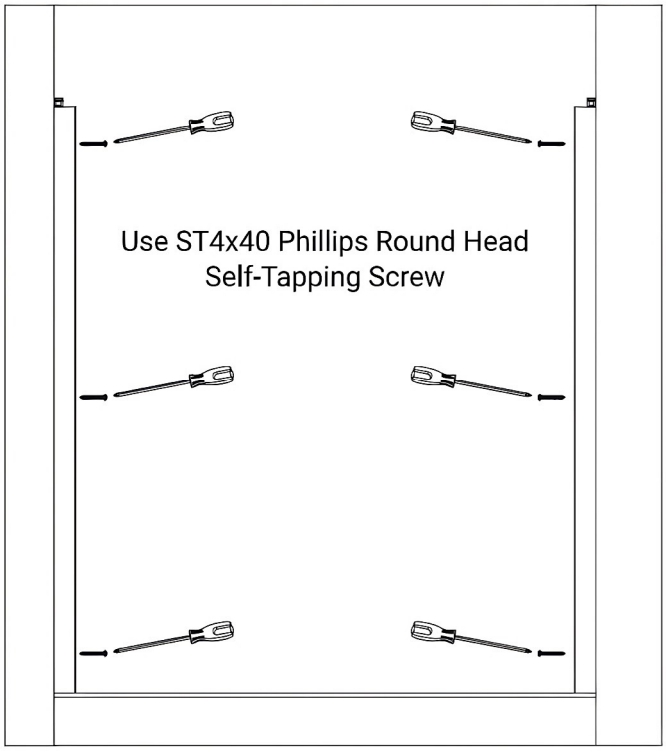


09 Install the Anti-Collision Rubber on both sides.

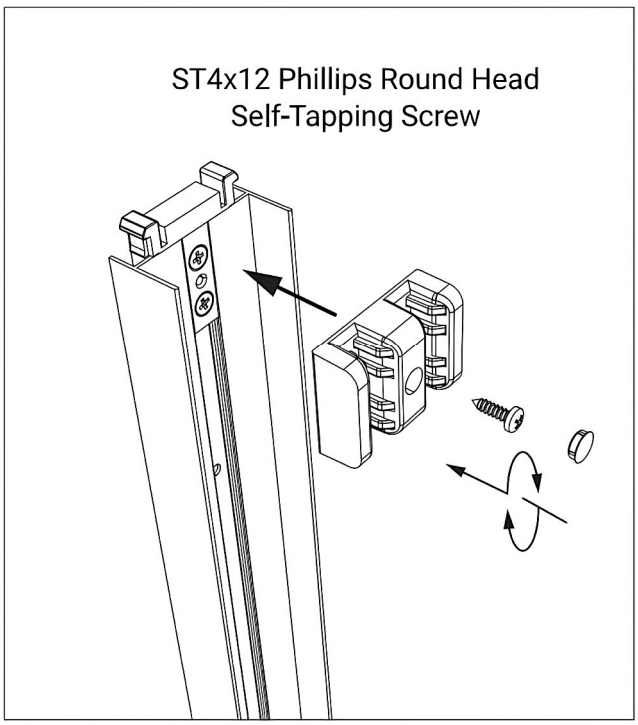


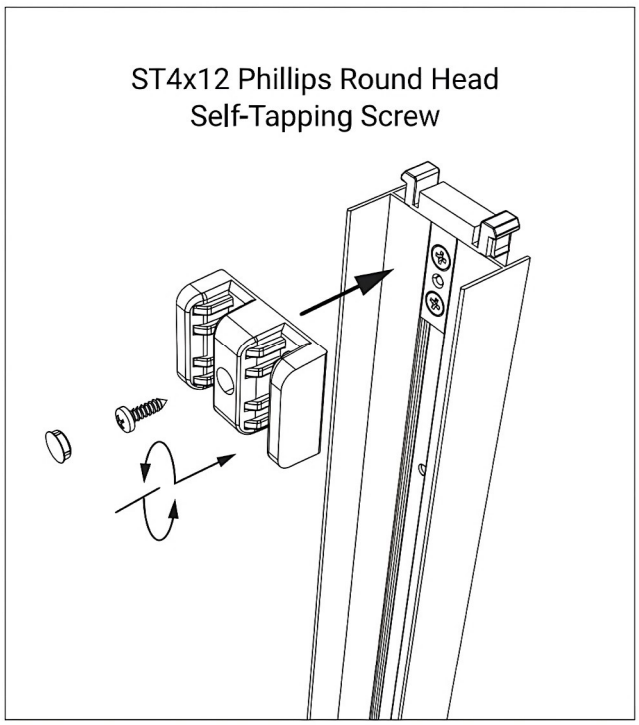


⑩ Press the rubber tape into the groove from bottom to top.

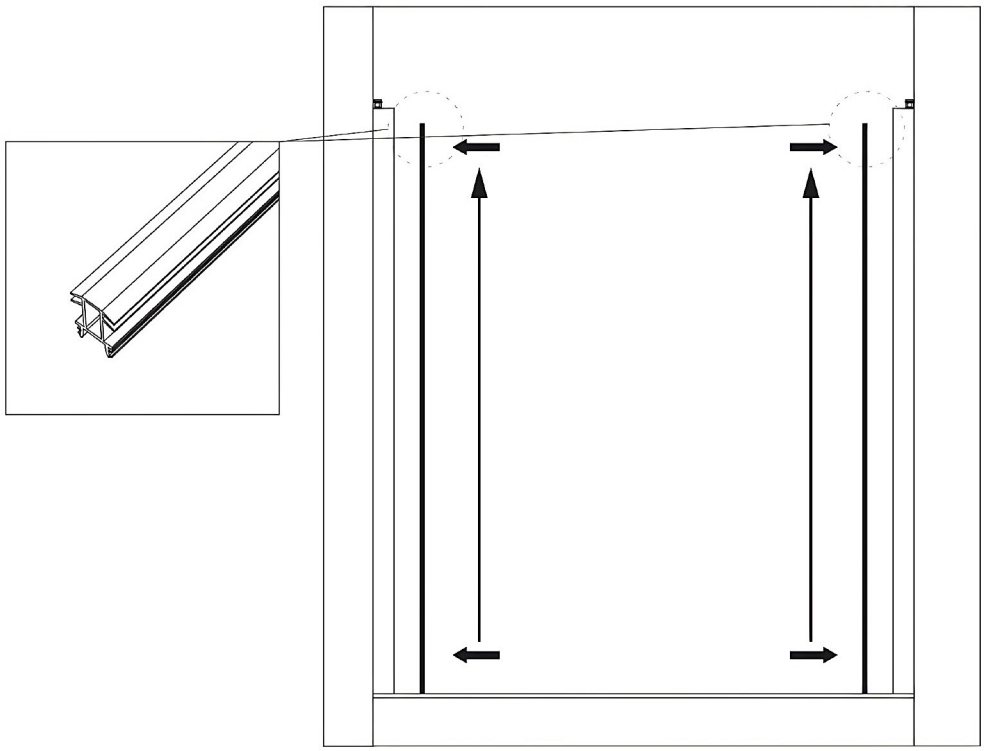

⑪ Position the Bottom Guide at the center mark of the threshold. Remove the decorative cover and set it aside.Mark the screw holes on the threshold with a pencil.Drill the holes using a 3.2mm diameter drill bit, then secure the Bottom Guide with ST4x16 Phillips Countersunk Self-Tapping Screws.

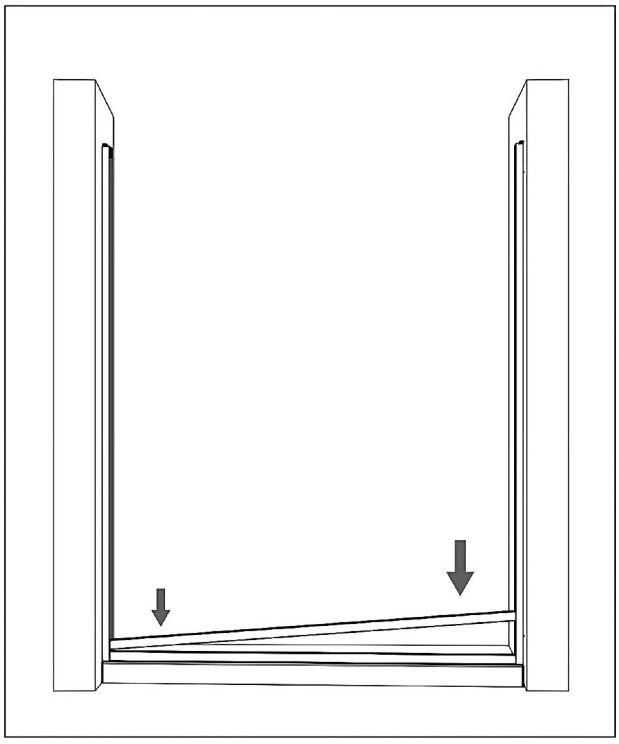


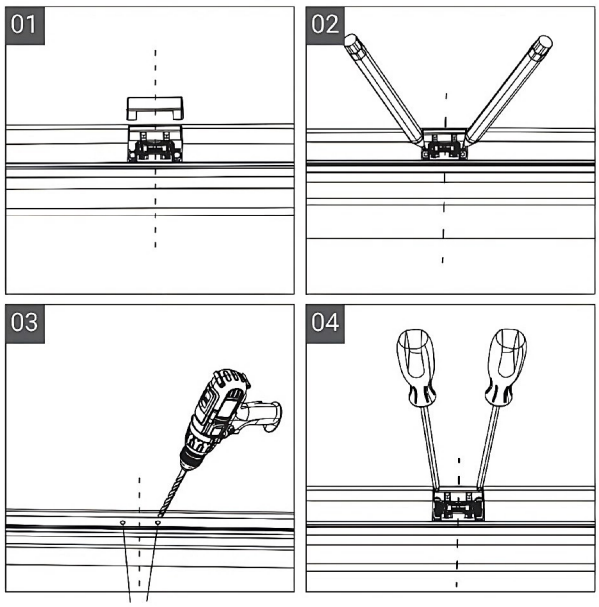


Φ3.2

ST4x16 Phillips Countersunk Self-Tapping Screws


⑫ Secure the Header in the mounting brackets.

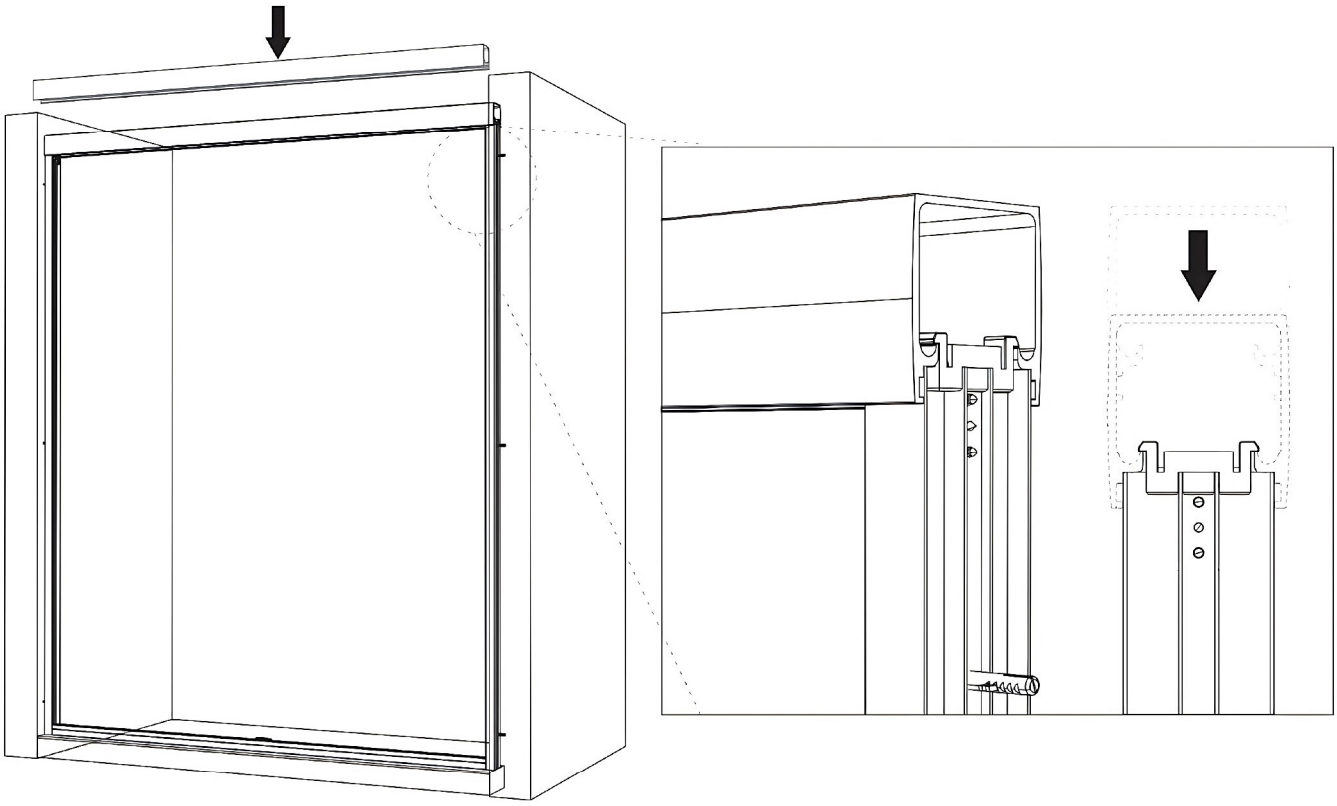


⑬ Lift the glass door designated for the inner side into position (keep the corner protection pads on the glass to prevent damage).

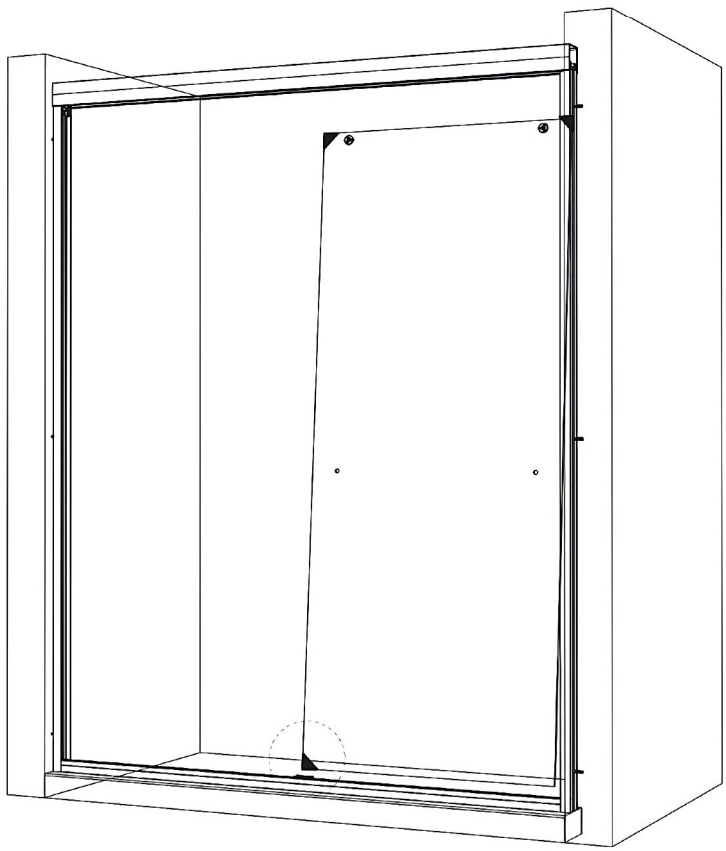



14 Lift the glass door designated for the outer side into place. Insert the top rollers into the Header first, then guide the bottom edge of the glass into the slider. Repeat the same procedure for the inner glass door.

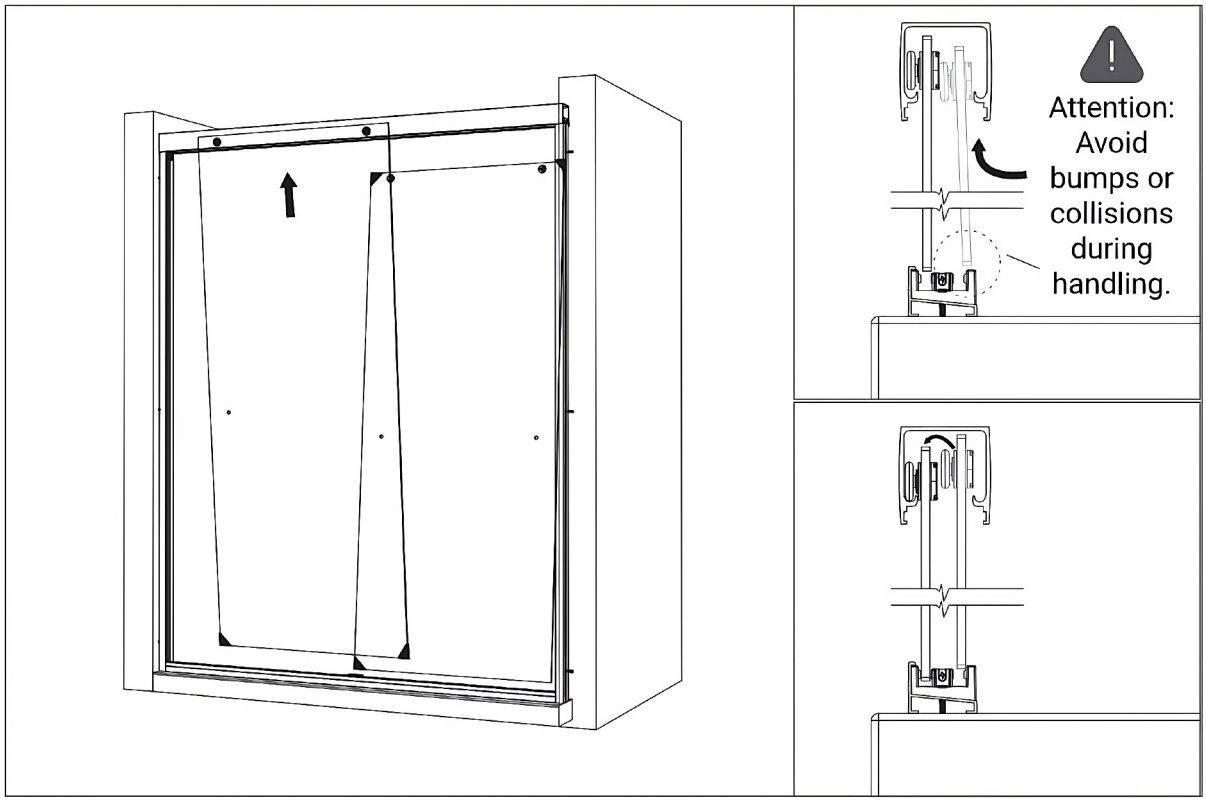

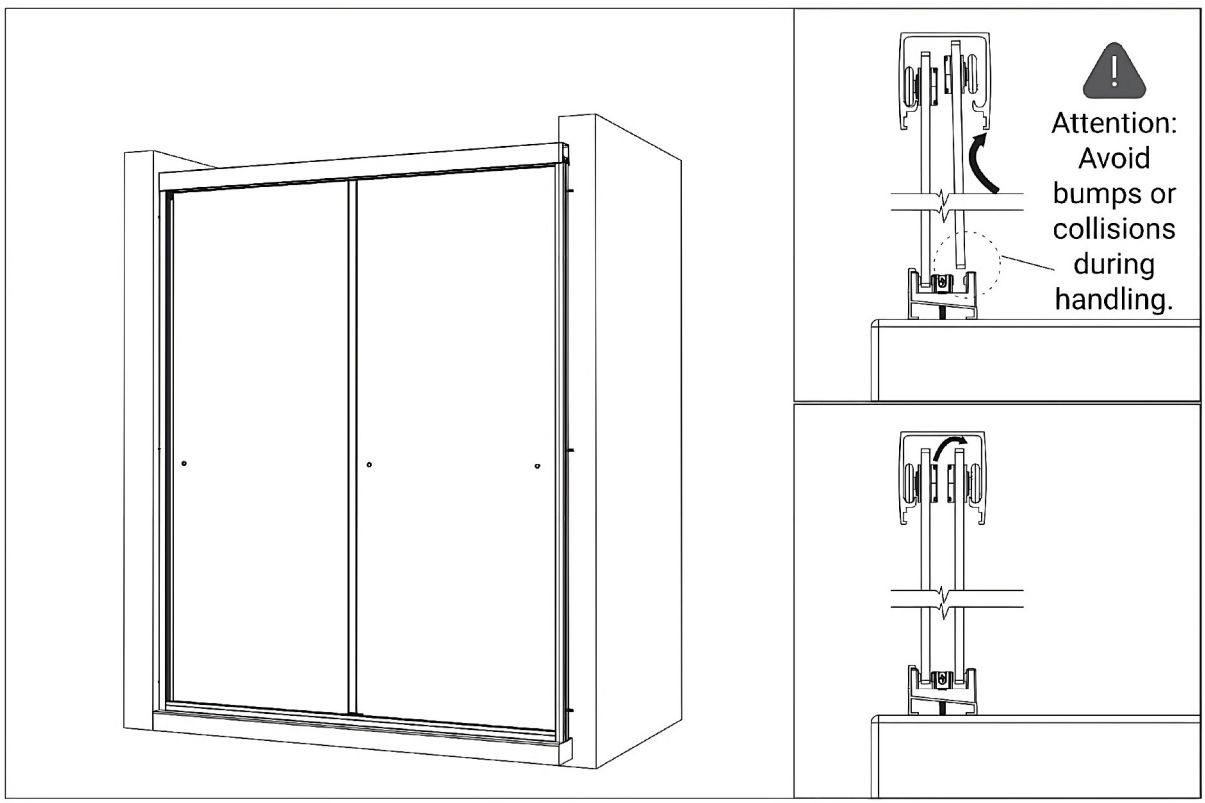



15 Install the towel bar and finger pull on both sides of the shower door glass as shown in the illustration.

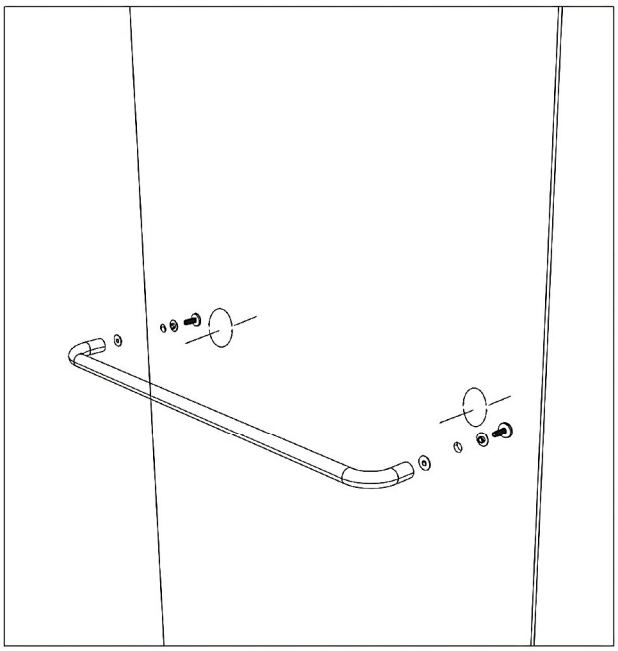

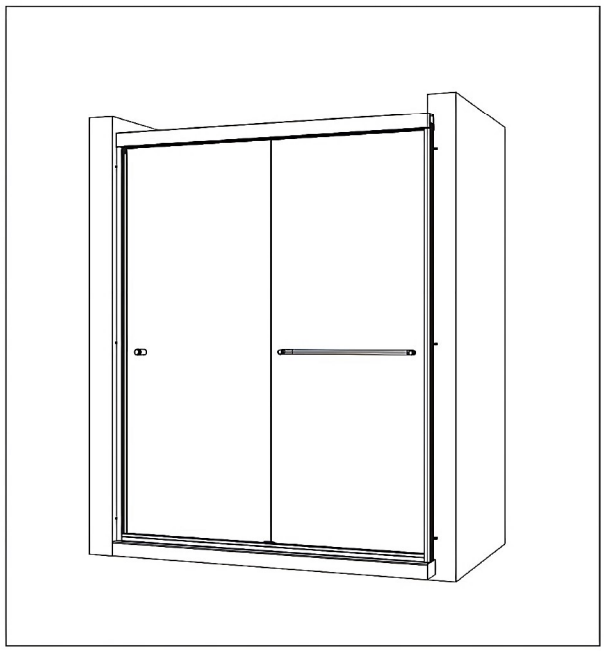


16 Test the sliding function of both doors. If the glass is unstable or difficult to slide, you can adjust the tension by slightly tightening or loosening the screws on either side of the Bottom Guide.

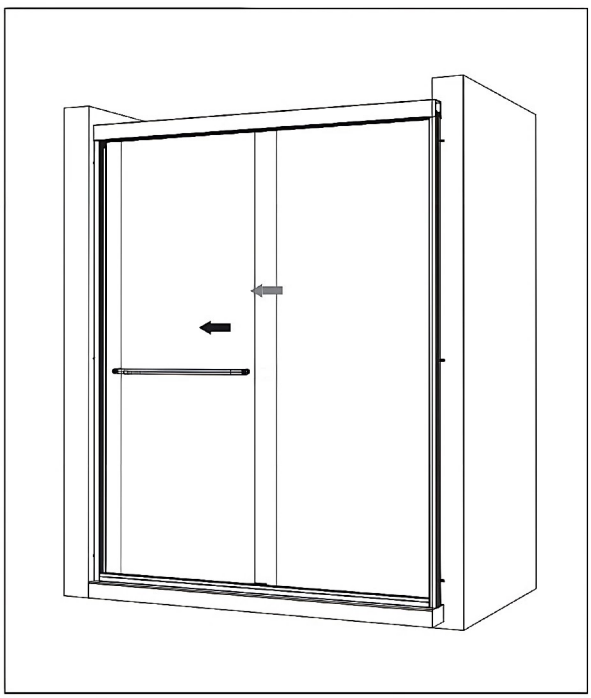


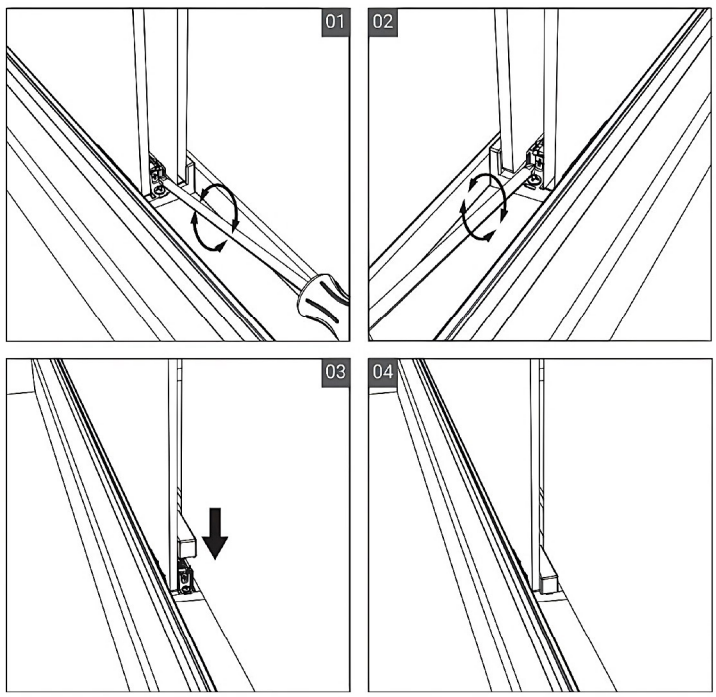


⑰ Adjust the rollers eccentrically to ensure the door is perpendicular to the wall.
Note: In cases where the wall is uneven, vertical alignment can only be achieved on one side.

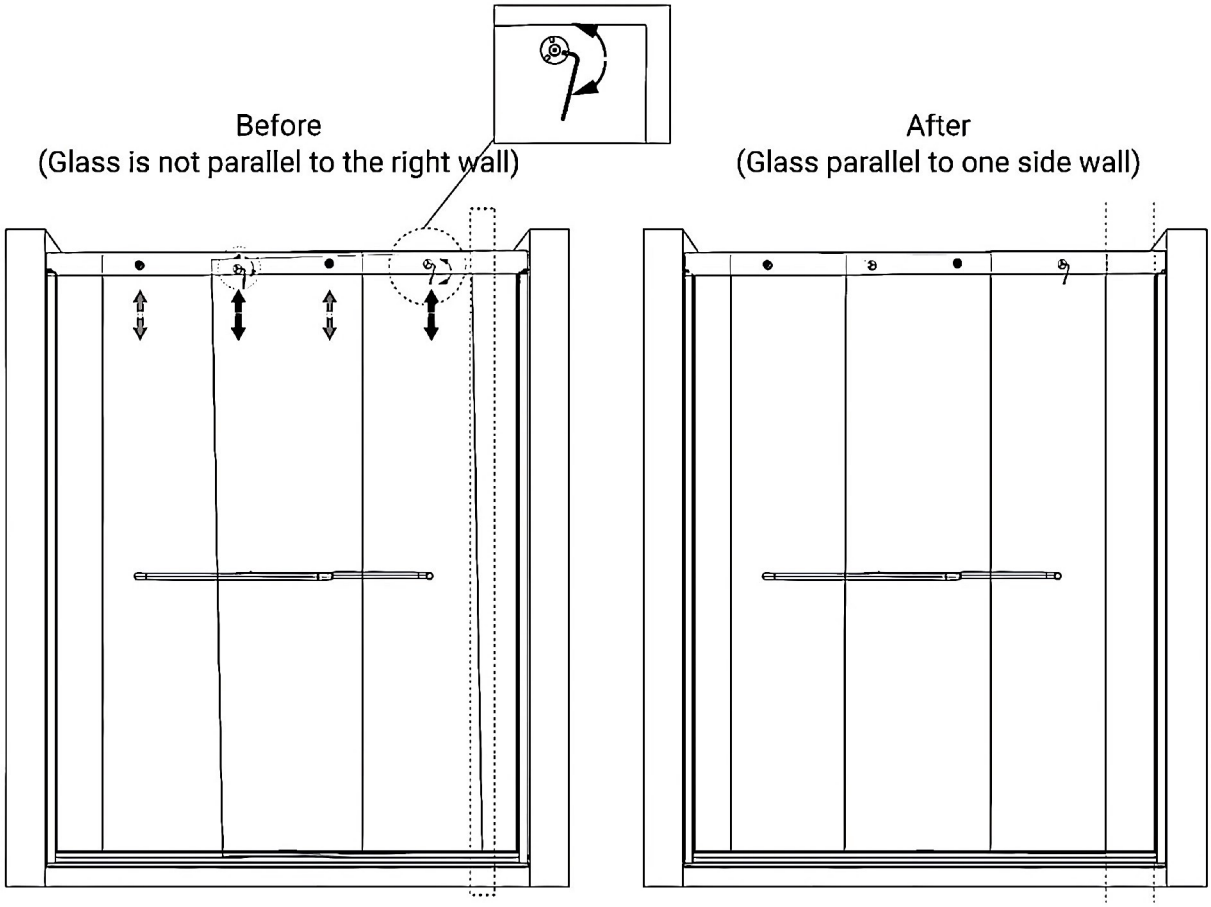


⑱ Slide the hook from one side of the glass toward the roller until it is in position, as shown in the illustration.

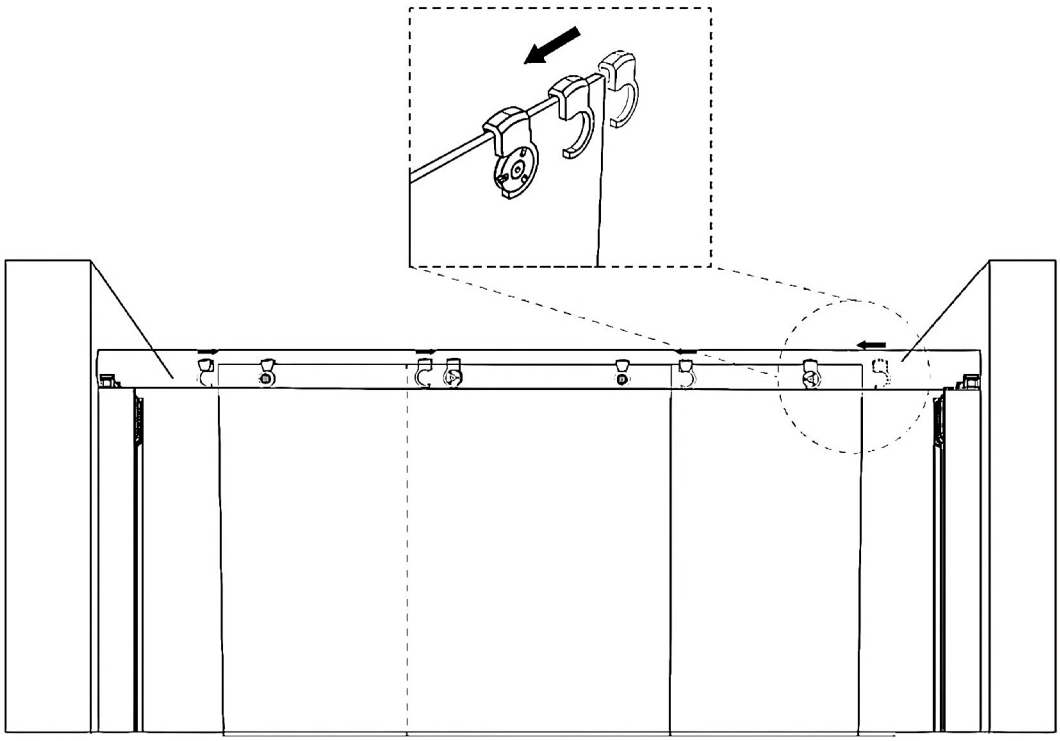

19 Finally, apply silicone sealant along both sides of the shower door and the threshold as shown in the illustration.Allow it to cure for 24 hours before using the shower normally.

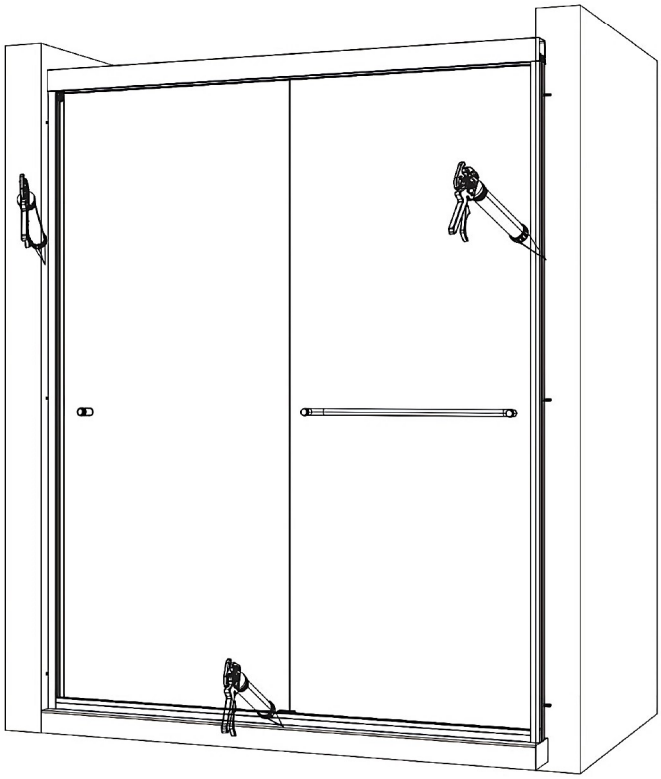



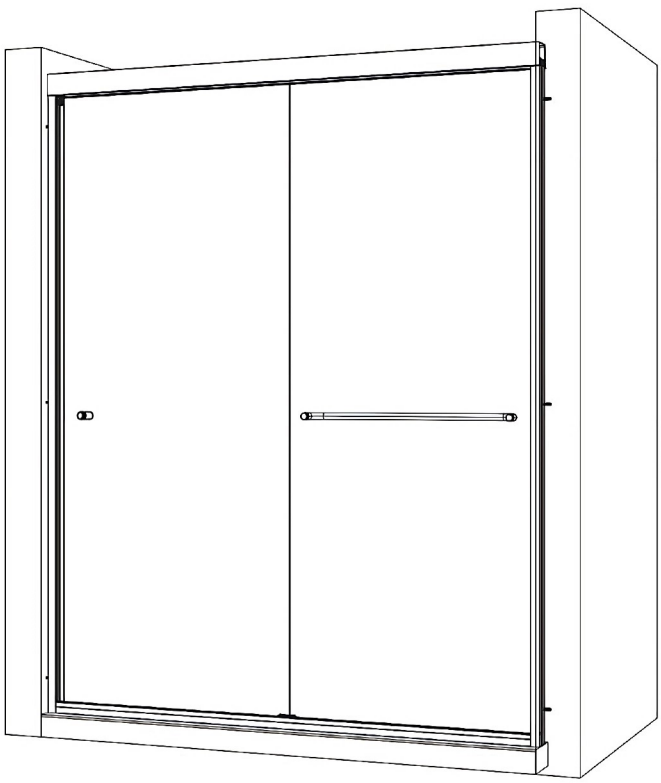

SAFETY TIPS

1. Do not remove the slide glass protection corners during installation, remove them only after installation is complete.

2. Wear protective equipment when drilling, cutting guide rail and anti-splash threshold.

3. Careful installation of the glass is required during installation, please do not step on the glass to avoid bumping.

.4. Wait 24 hours after installation before using the shower.

MAINTENANCE AND CARE:

1. Shower door glass is double-sided easy-clean glass. For daily cleaning using moist soft cloth to wipe away surface water and stains, reduce the use of cleaning agents to extend the easy-clean performance. It's recommended to use soft cloth to clean the residual water stains on the glass and hardware after shower. Silicone squeegee is available.

2. Do not use any sharp cleaning tools or cleaning agents with abrasive ingredients to clean the glass.

3. Caustic cleaners should not be used, such as alcohol. Long-term use of corrosive cleaners will cause discoloration of the hardware. Reducing the use of cleaners will prolong the use of the hardware & glass appearance. You can use small amount of anhydrous ethanol or detergent to clean stubborn water stains or calculus on the hardware.

4. Do not let the shower water directly wash the bottom of slide door.

TROUBLE SHOOTING
GUIDE AND NOTE

Shower doors don't close tightly issues:

Q: When I close the door, the door closes then backs out and never closes tight. How should I do?

A: First please check that the anti collision block is installed on both sides, it will hold the glass in place when closing the door to keep it closed. Then use a level to check your guide rail and glass level status, if not installed level, you can adjust the top roller to adjust the sliding glass level and height. Even if your guide rail is a little tilted, the anti collision block will help to complete the closing action and hold the sliding glass, if guide rail is tilted severely, you may need to re-drill.

Shower door leaking issues:

Q1: The bottom of the inner door leaks, how should I do?

A1: Please confirm product wall bracket punching data are correct and the anti-splash threshold glue seals well without leaking, then following adjustment steps need to be made:

1. Adjust the angle of the shower head, avoid the shower water directly wash the bottom of the slide door.

2. Please adjust the height of the top roller to reduce the height of the glass.

Complete these 2 steps would solve it, if there still leak please contact customer service for support.

About Returns

Shower door leaking issues:

Please contact our customer service to confirm the return steps before returning or get order replacement.

Customer Service:

(626) 825-9868

Email:

showerdoorservice@gmail.com

Installation Video:

https://www.youtube.com/@showerdoorfactory