


# Assembly Instruction













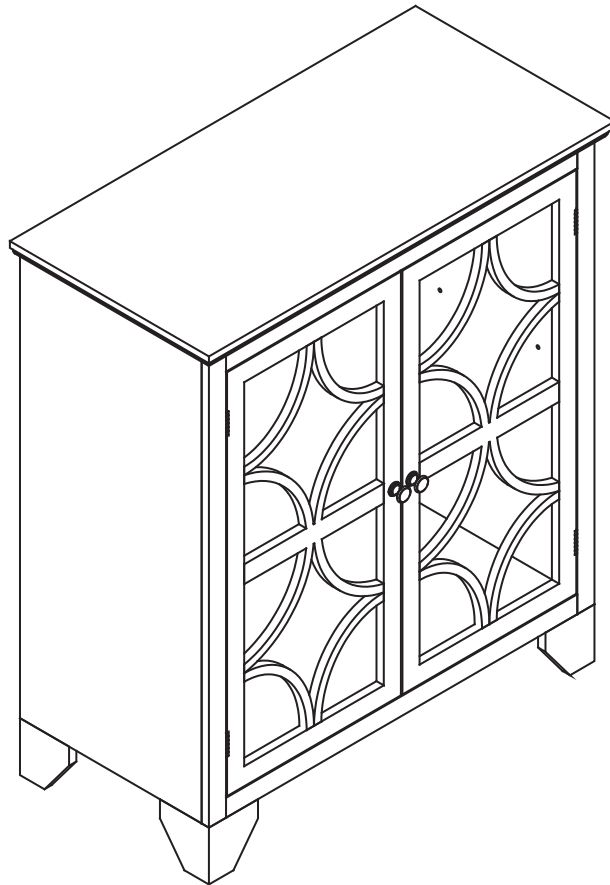


## **Thank you for purchasing our product!**






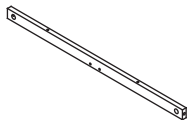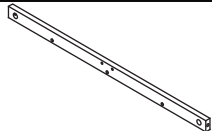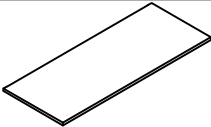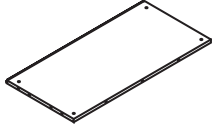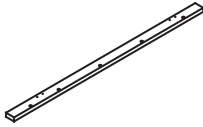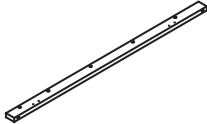









Please assemble the products with the guidance of these assembly instruction. Contact our friendly customer service department with any comments or in case there is any missing or damaged parts or hardware. Replacements for missing or damaged parts or hardware are normally shipped within 2 to 3 business days.


We appreciate your business!

## PART LIST


1	Top panel		x1
2	Right Side Panel		x1
3	Left Side Panel		x1
4	Up Front Rail		x1
5	Bottom Front Rail		x1
6	Door Panel		x2
7	Shelf		x1
8	Back Panel		x1
9	Right Leg		x4
10	Block		x2
11	Bottom Panel		x1
12	Right Side Rail		x1
13	Left Side Rail		x1

## HARDWARE LIST

A	Camlock Bolts		x20
B	Camlock		x20
C	Wood Dowels		x17
D	Magnetic catch		x2
E	Screw 3 x 14mm		x20
F	Hinges		x4
G	Screw 3 x 12mm		x20
H	Leg Screw 6 x 30mm		x4
I	Screw 4 x 40mm		x2
J	Metal Bar		x4
K	Handle		x2
L	Handle Bolt 4 x 20mm		x2
M	Metal Pin		x4
N	Screw 3 x 12mm		x4
O	Screw 4 x 35mm		x4


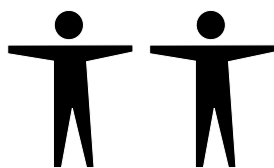


TWO PERSON ASSEMBLY REQUIRED.

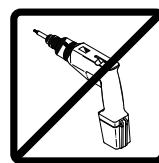

Do not use power tool


## Assembly of camlock (A&B)

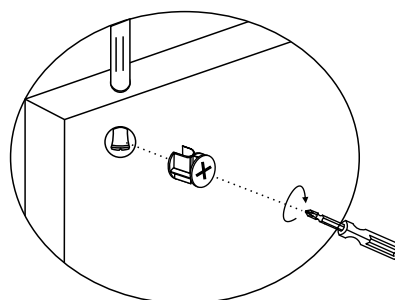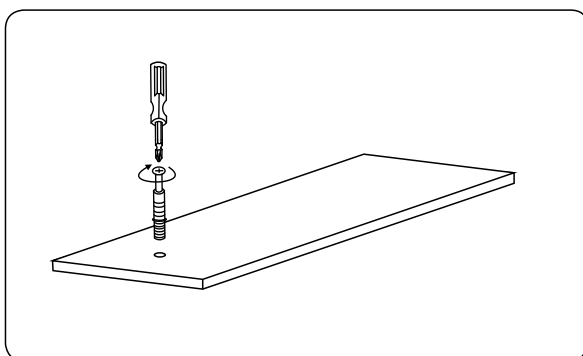

Screw camlock bolt to wood part

Do not tighten camlock unless is instructed


To assemble camlock, ensure long side of the + is facing the bolt before inserting into hole

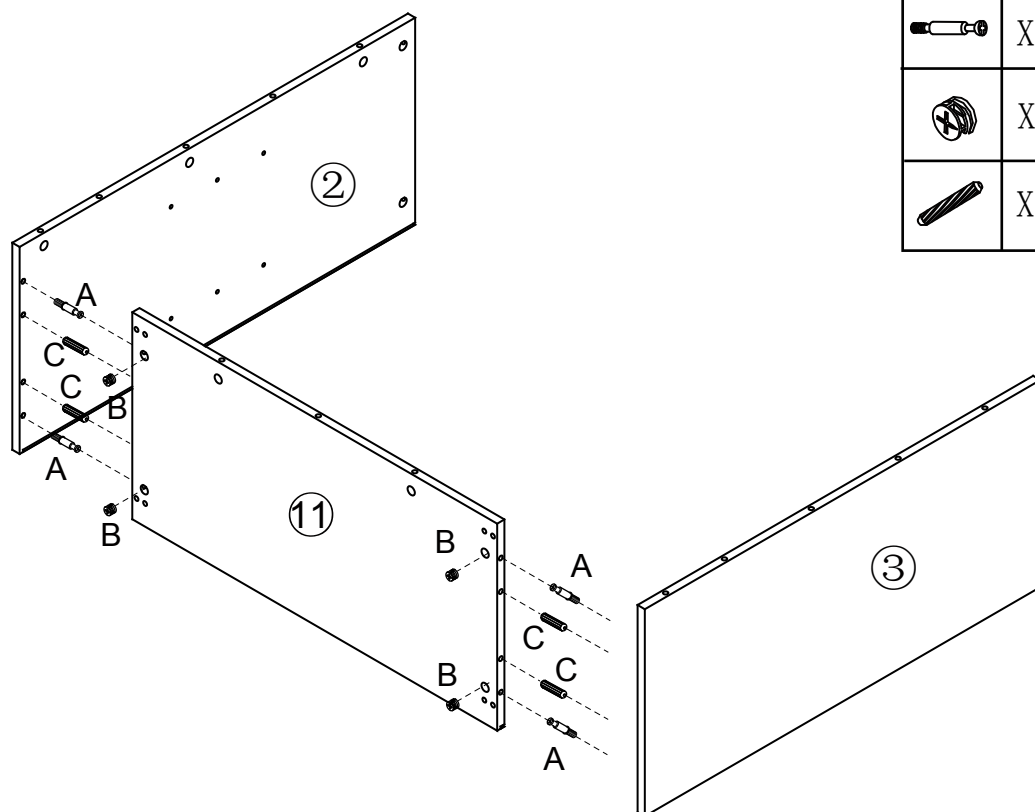

	X4
	X4
	X4

### STEP 1


Assemble Right Side Panel (2), Left Side Panel (3) to Bottom Panel (11) by using Camlock Bolt (A), Camlock (B) & Wood Dowel (C).

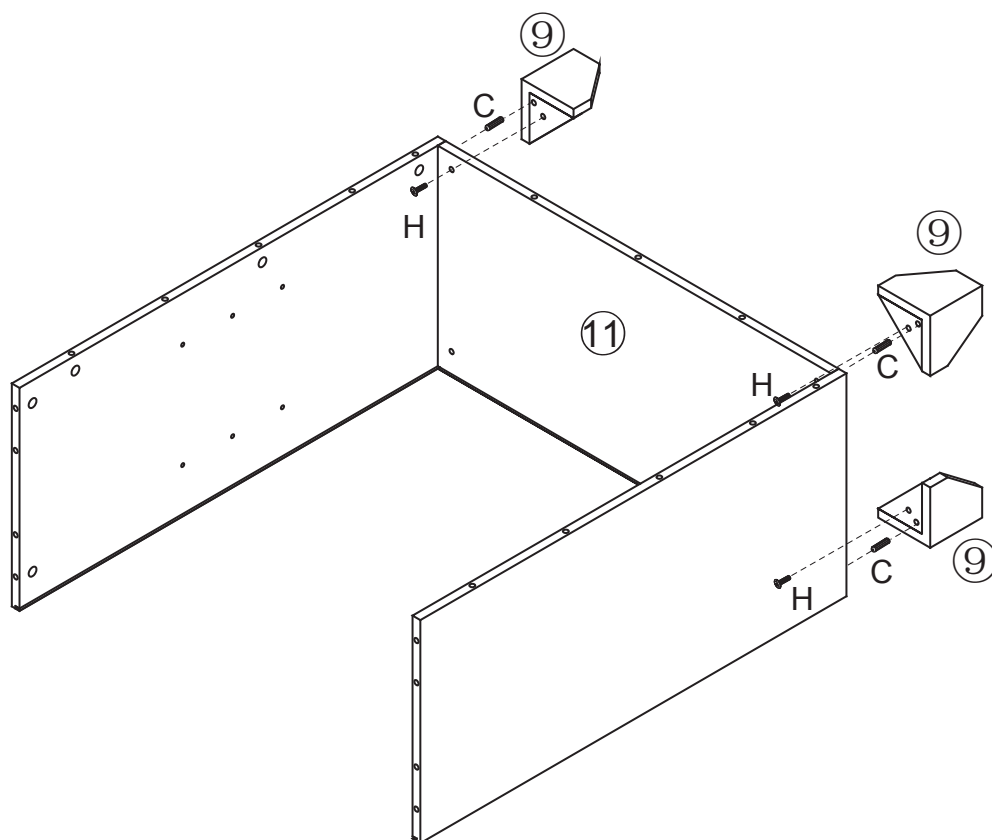

	X4
	X4

## STEP 2


Assemble Leg (9) to Bottom Panel (11) by using Wood Dowel(C) & Leg Screw (H) as shown.

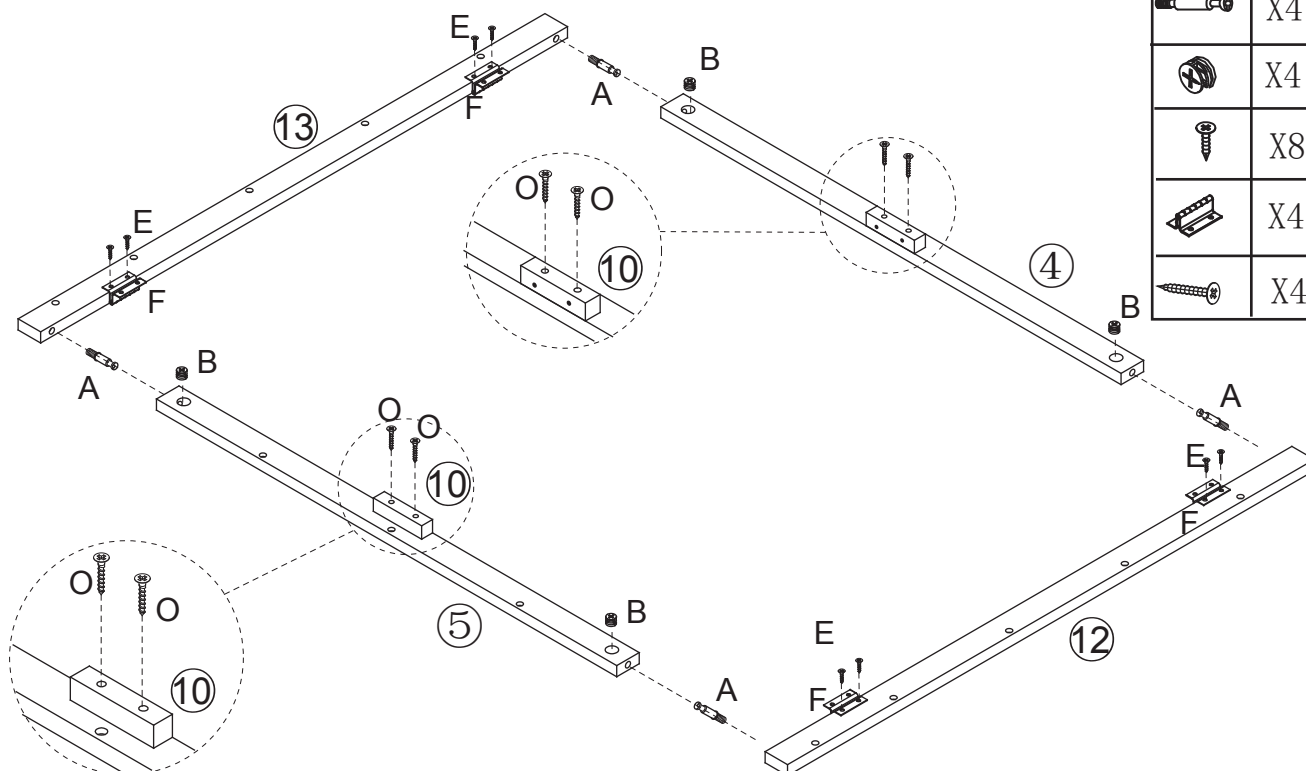

	X4
	X4
	X8
	X4
	X4

## STEP 3

Assemble Up Front Rail (4), Bottom Front Rail (5) to Right Side Rail (12) by using Camlock Bolt (A) & Camlock (B).  
 Assemble Hinges (F) to Right Side Rail (12) & Left Side Rail (13) by using Screw (E).  
 Assemble Block (10) to Up Front Rail (4), Bottom Front Rail (5) by using Screw (O) as Shown.

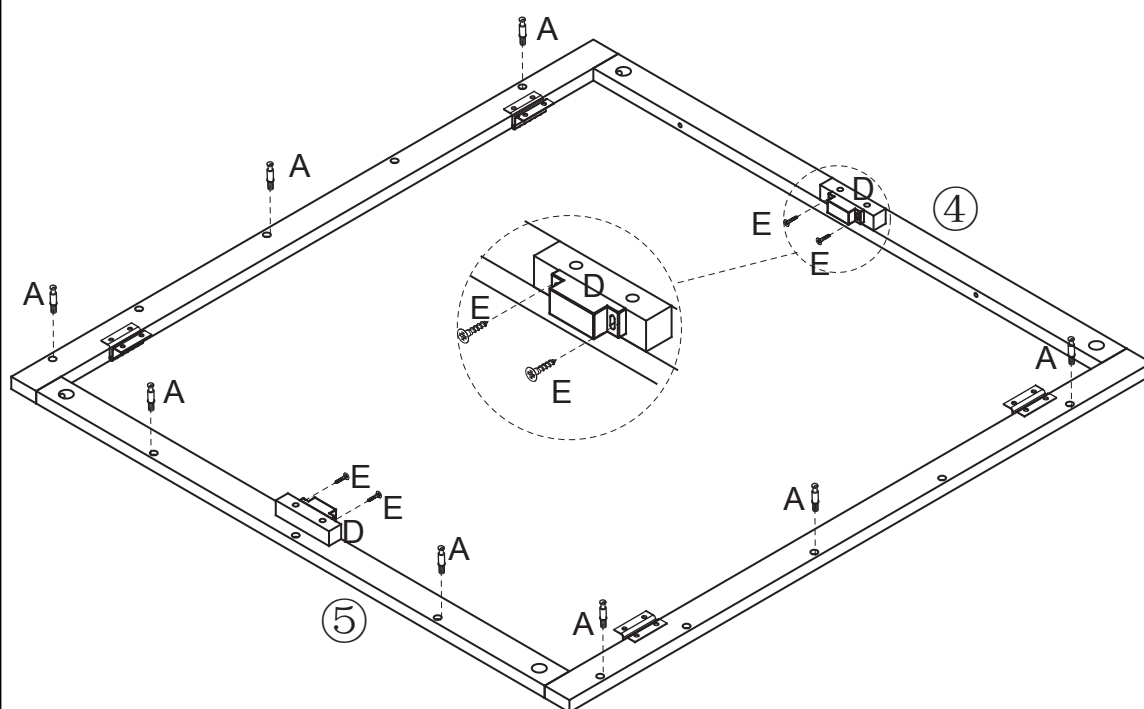


	X8
	X4
	X2

## STEP 4

Assemble Camlock bolt (A) to Framework as shown.


Assemble Magnetic Catch (D) to Up Front Rail(4),Bottom Front Rail(5) by using Screw (E) as shown.

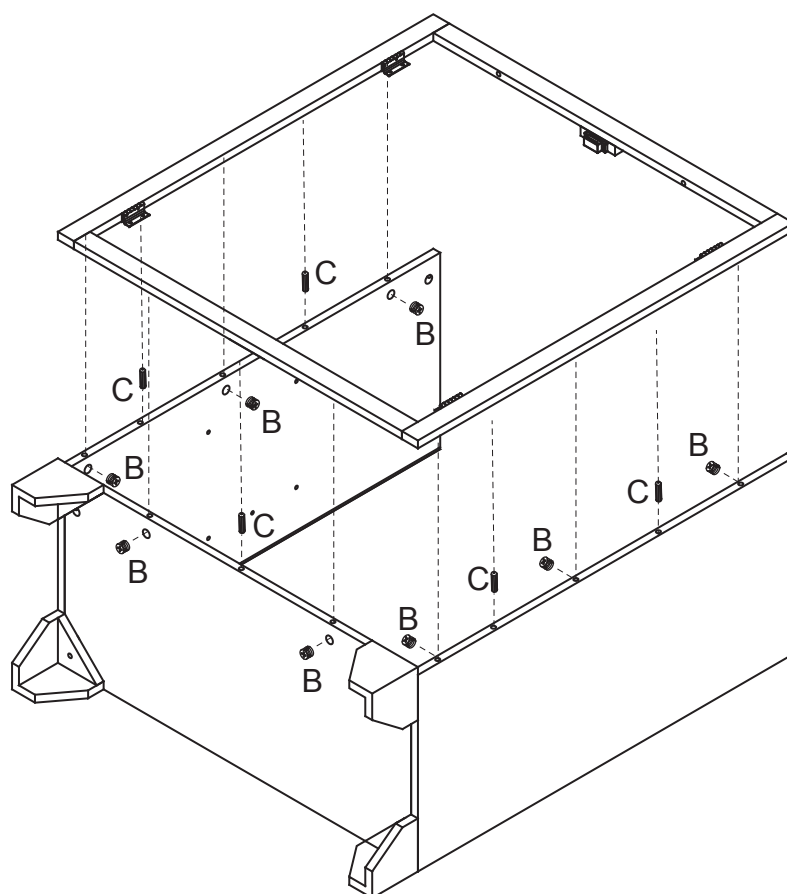

	X8
	X5

## STEP 5


Attach Framework to Assembly Unit and tighten it by using Camlock(B) and Wood Dowel(C) as shown.

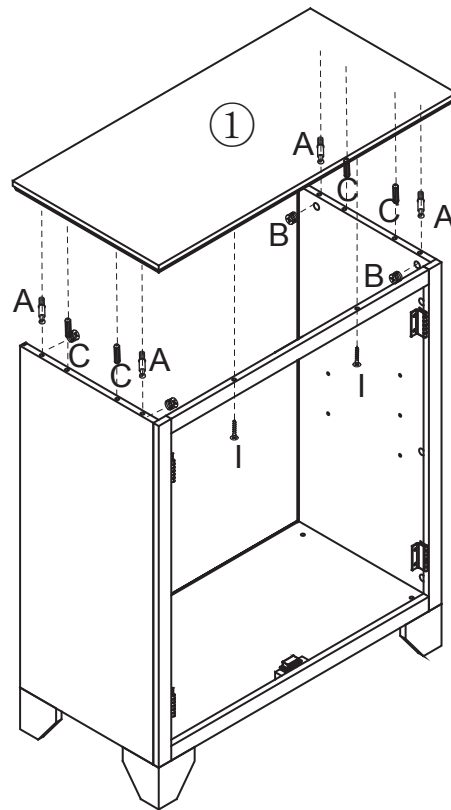

	X4
	X4
	X2

## STEP 6



Attach the Top panel (1) to Assembled unit by using by using Camlock Bolt (A) , Camlock (B) & Wood Dowel(C) & Screw (I) as shown.

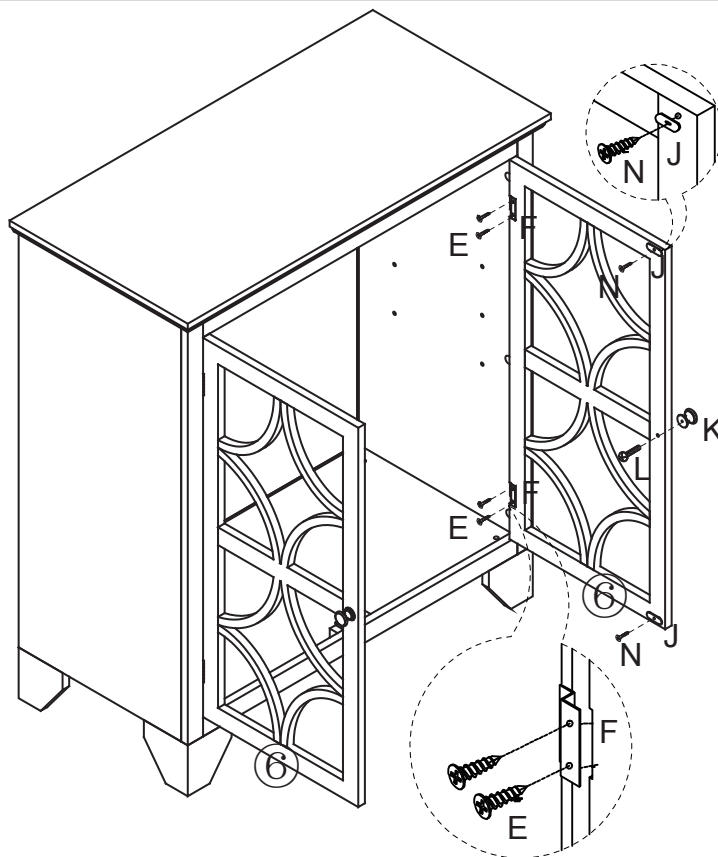

	X8
	X4
	X4
	X2
	X2




## STEP 7

Assemble Handle (K) & Metal Bar (J) to Door Panel by using Handle Bolt (L) & Screw (N). Assemble Door Panel (6) to assembled unit by using Hinge (F) & Screw (E) as shown.

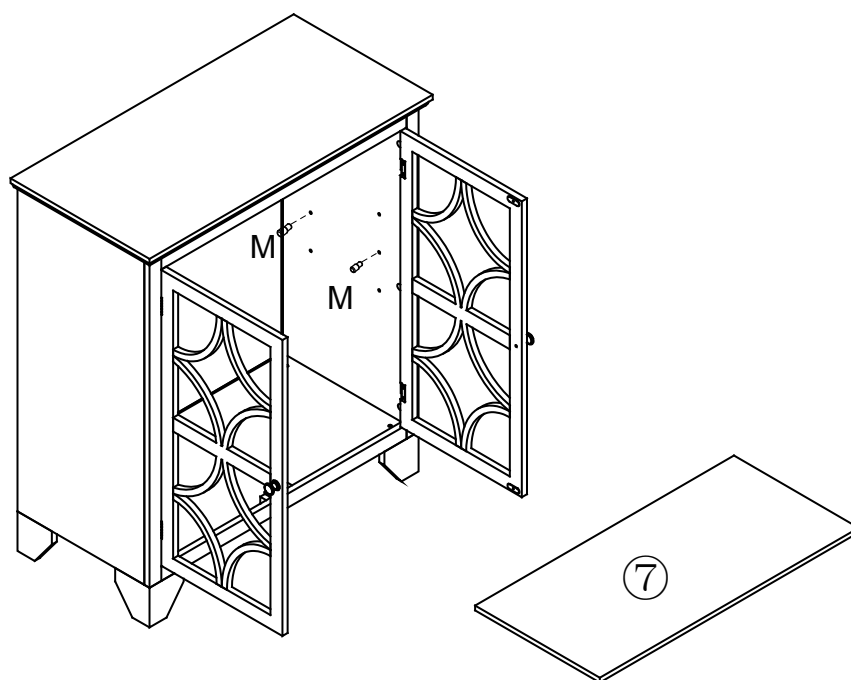

## STEP 8

Install the Metal Pin (M) to Side Panel, then put the Shelf (7) to assembled unit as shown.

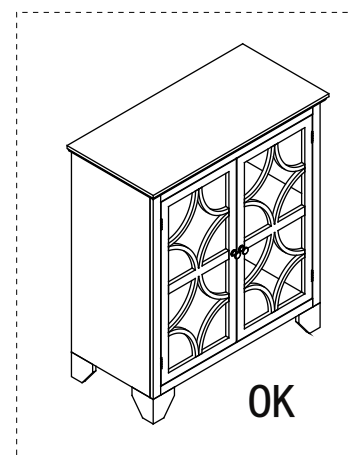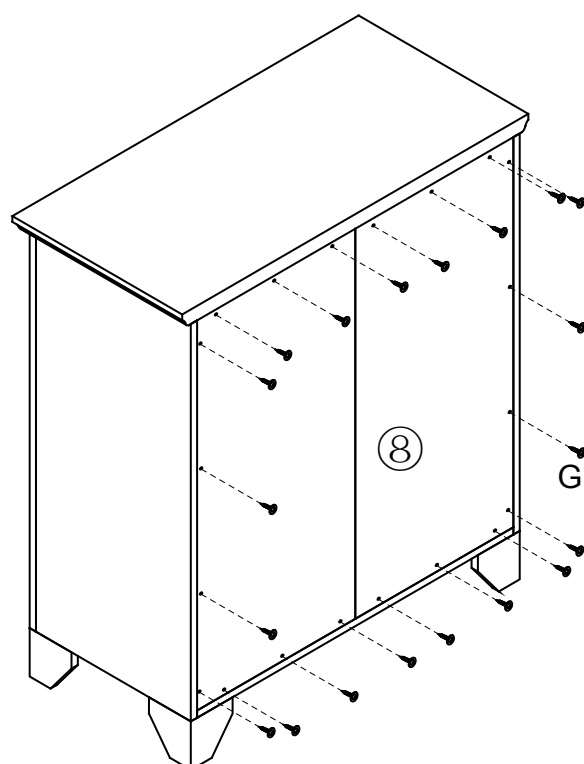

## STEP 9

Assemble the Back Panel (8) to assembled unit by using Screw (G) as shown.