


25" STAND SIDE TABLE WITH 3-SIDED GLASS ELECTRIC FIREPLACE

ASSEMBLY, CARE & USE INSTRUCTIONS

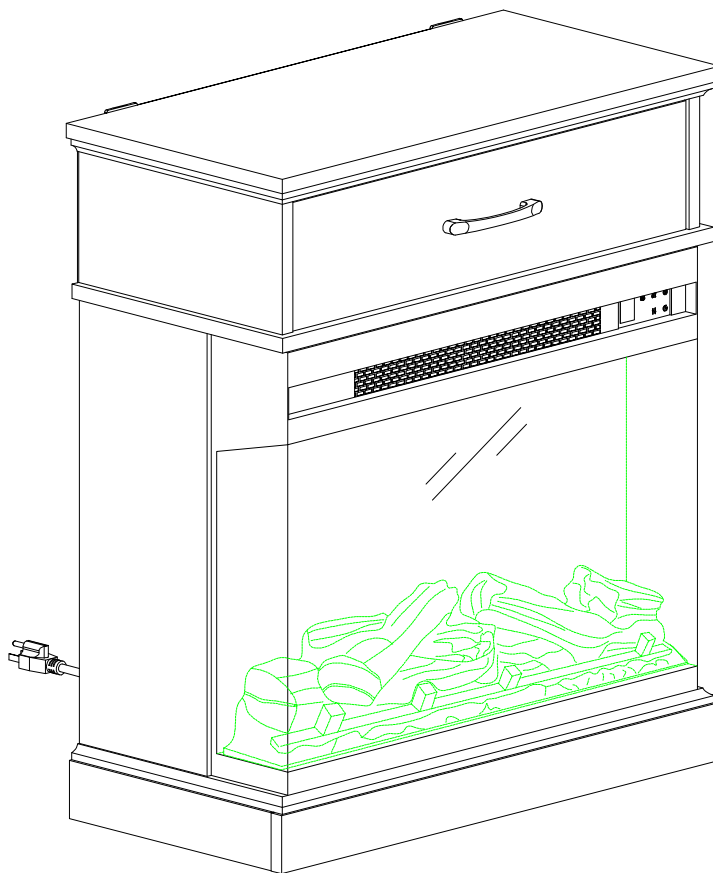

W106-2322D5-BK BLACK COLOR

THANK YOU

We appreciate the trust to purchase our electric fireplace media mantel. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing us!

Made in China

ASSEMBLY TIPS

Before you begin, locate the instructions and hardware. Take out all the parts and compare them to the diagrams below. Be sure you have all the parts and can identify them.

Two people are required to assemble this product. Assembly time will take approximately 30-90 minutes.

Before assembly, use scissors to unwrap the parts from the packaging.

DO NOT use a box cutter or exacto-knife as you may cut into the mantel pieces inside the box and damage the finish. Check for the hardware tie which is RED and located inside the packaging, taped to the top box.

DO NOT discard any pieces.

CAUTION


There are small components used in the construction of this product.

Loose items should be kept away from pets and children to avoid a choking hazard. Keep all plastic and packaging film away from pets and children to avoid suffocation.


CARE AND MAINTENANCE

1. Dust your fireplace mantel regularly with a soft non-lint producing cloth or household dusting product.
2. You can clean your fireplace insert with a gentle non-abrasive household cleaner. Make sure to dry your fireplace immediately with a soft cloth or towel.

TOOLS REQUIRED (NOT INCLUDES)



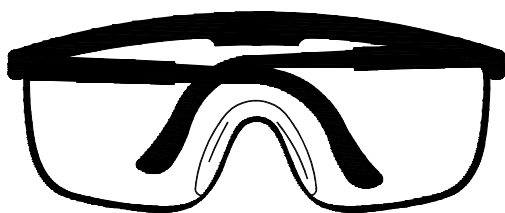


Safety goggles


















Phillips screwdriver

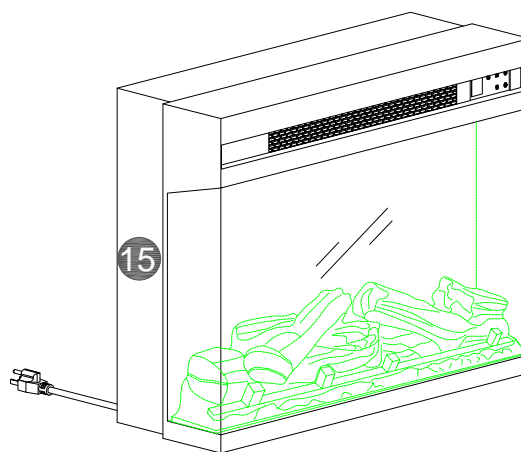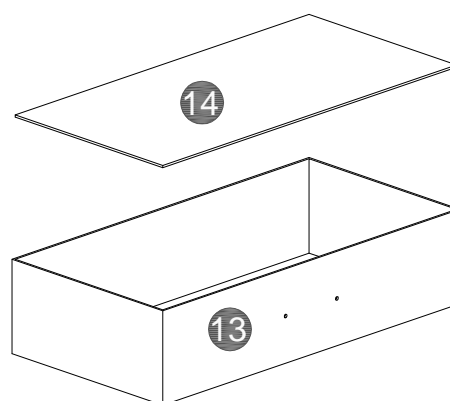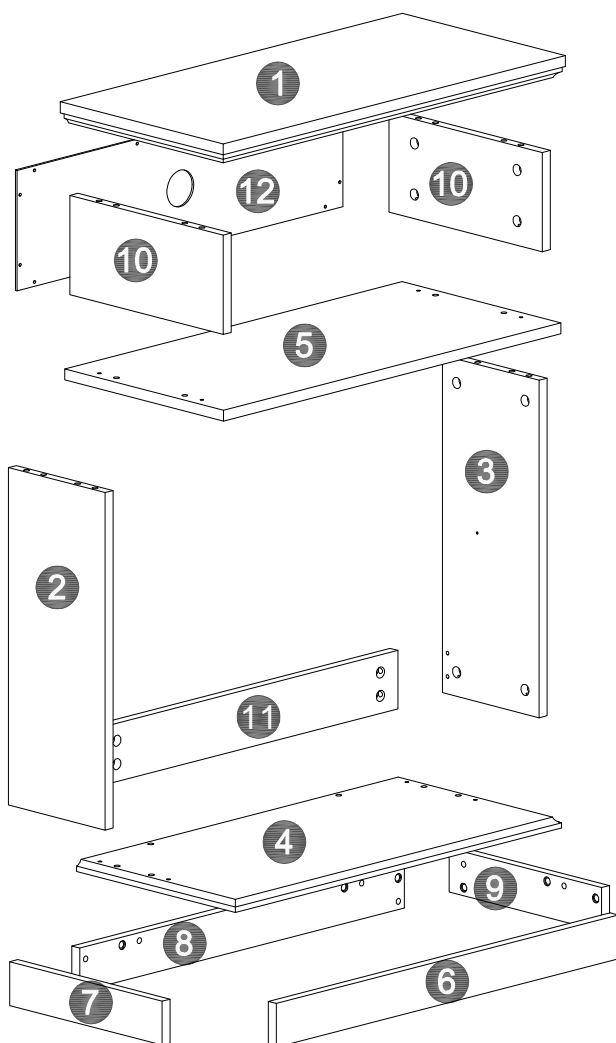














PARTS LIST

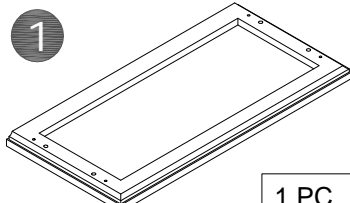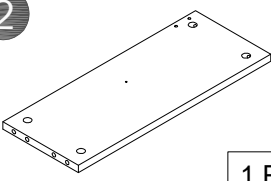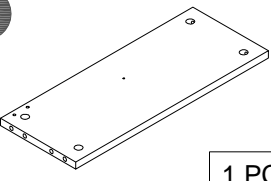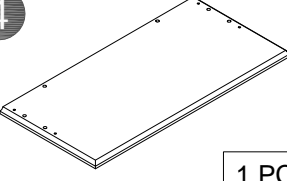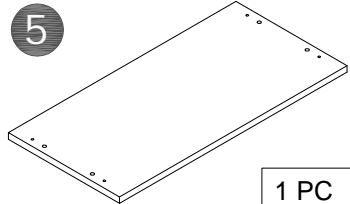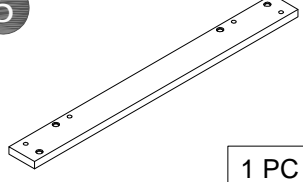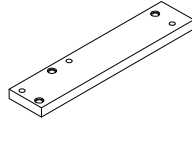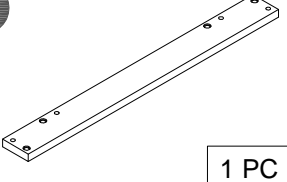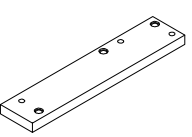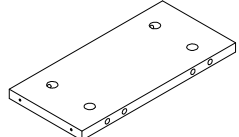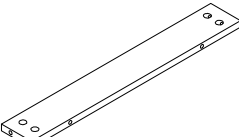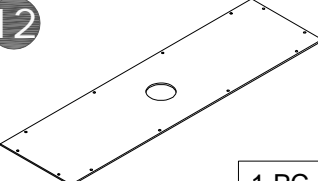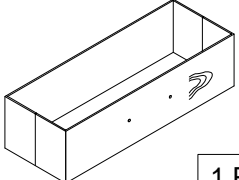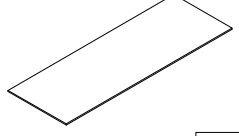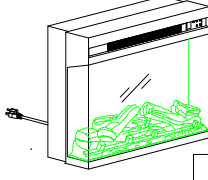

Assembly steps(EN)


1  1 PC	2  1 PC	3  1 PC	4  1 PC
5  1 PC	6  1 PC	7  1 PC	8  1 PC
9  1 PC	10  2 PCS	11  1 PC	12  1 PC
13  1 PC	14  1 PC	15  1 PC	

HARDWARE LIST:


A  20 PCS	B  ø15*12 20 PCS	C  Ø8*30mm 18 PCS	D  M6*12mm 20 PCS
E  10 PCS	F  ø3*14mm 12 PCS	G  ø4*35mm 4 PCS	H  4 PCS
I  4 PCS	J  2 PCS	K  ø4*16mm 4 PCS	L  1 PC
M  M4*8mm 2 PCS	N  20 PCS	O  M4 1 PC	



Assembly steps(EN)

STEP 1

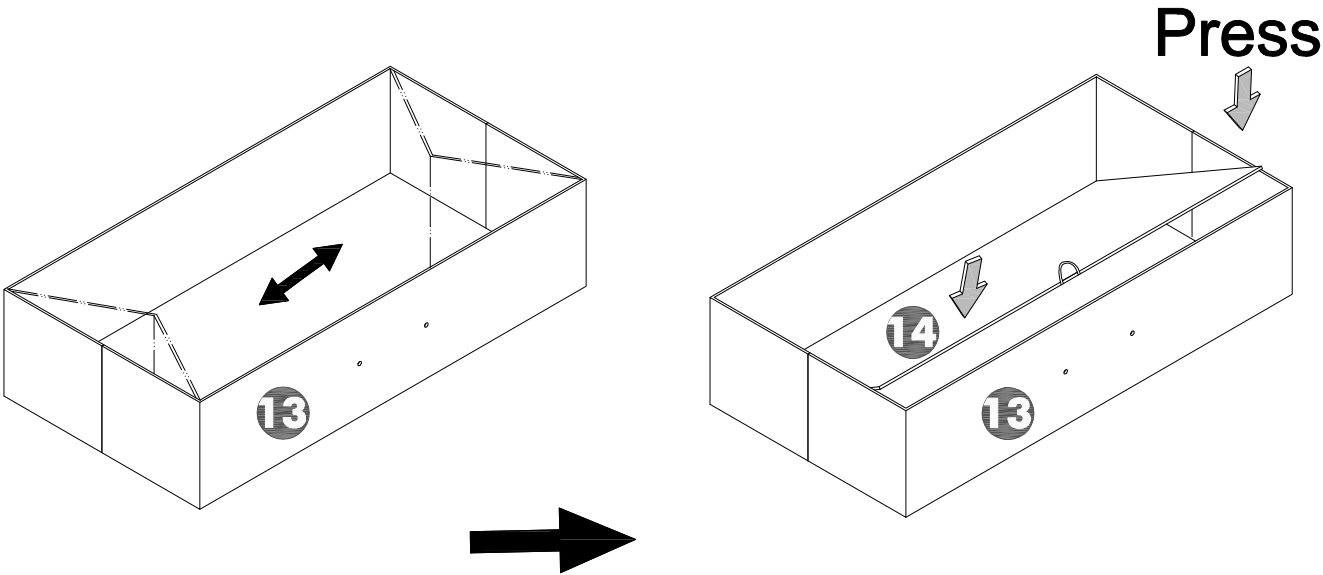





STEP 2



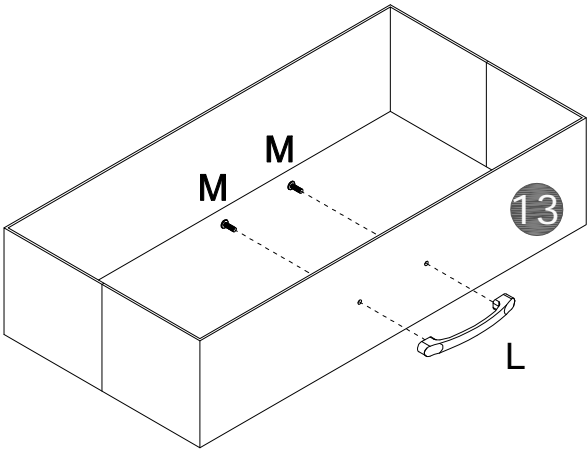


L	1		
M	2	M4*8MM	


Assembly steps(EN)



STEP 3

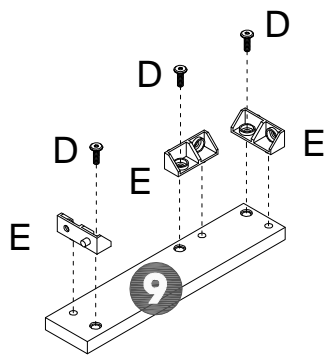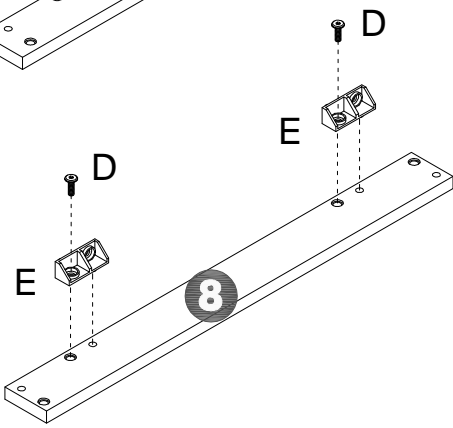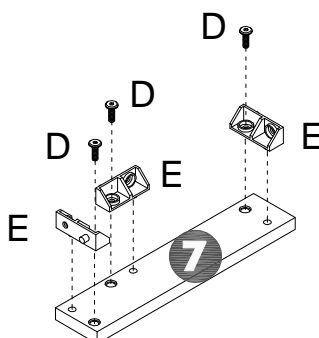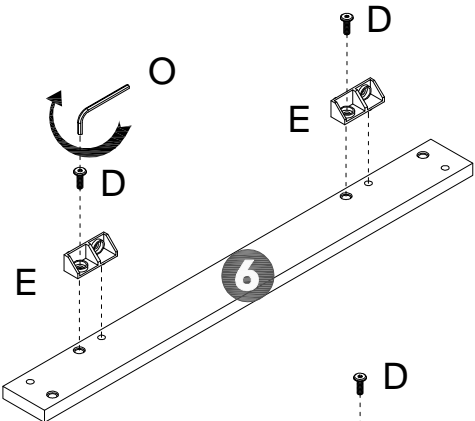

O	M4		
E	10		
D	10	M6*12MM	


STEP 4

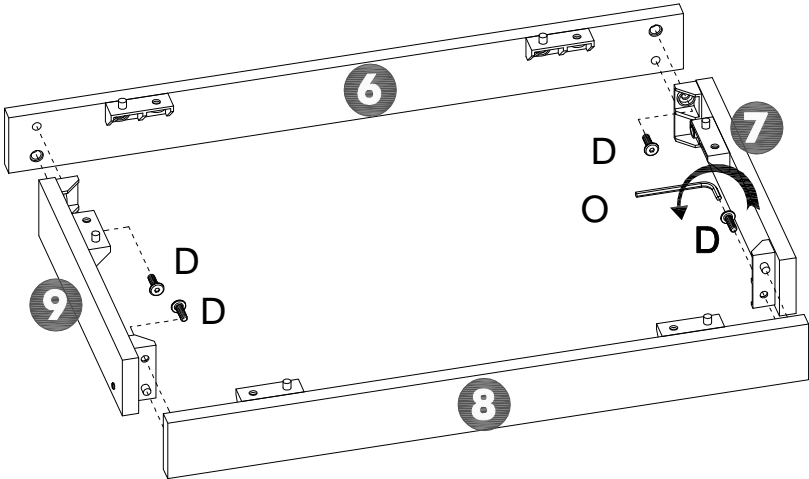


O	M4		
D	4	M6*12MM	

Assembly steps(EN)

STEP 5

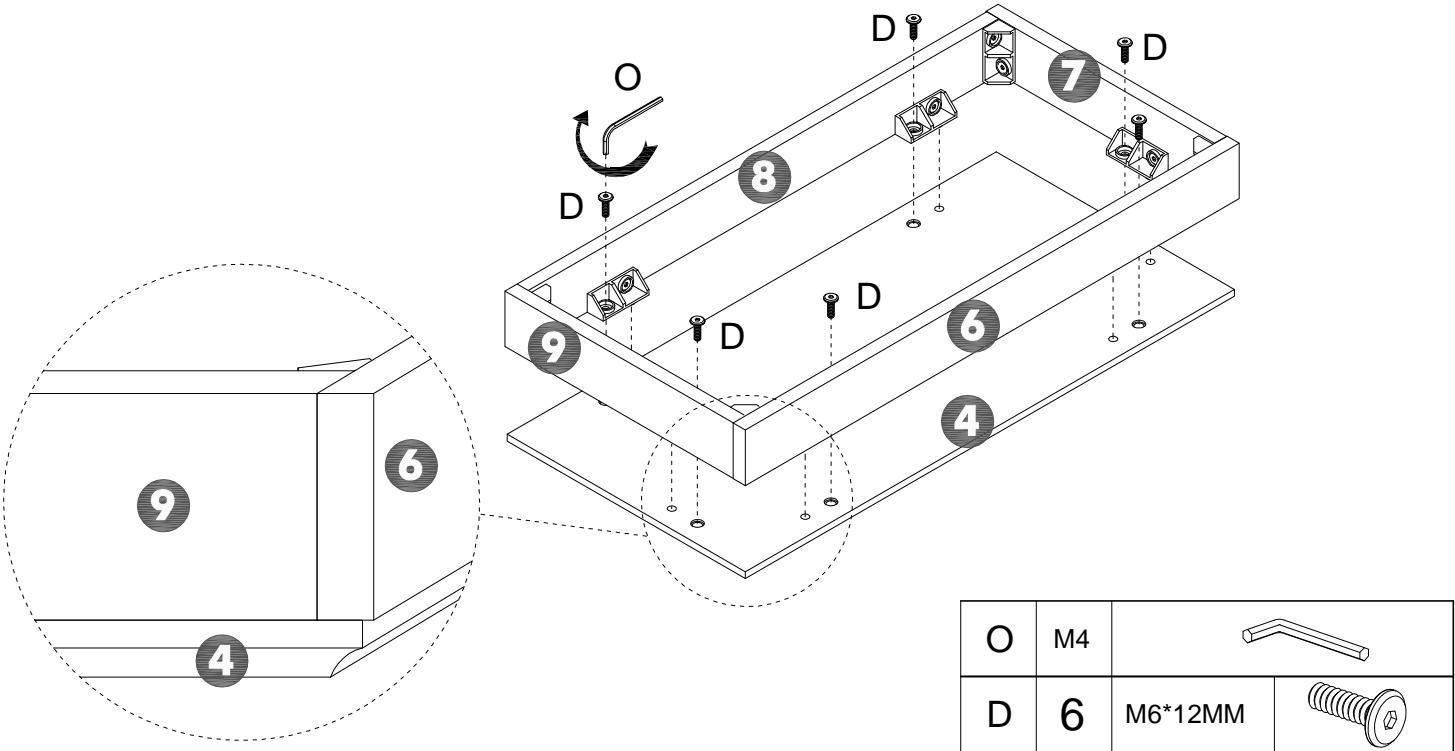


STEP 6

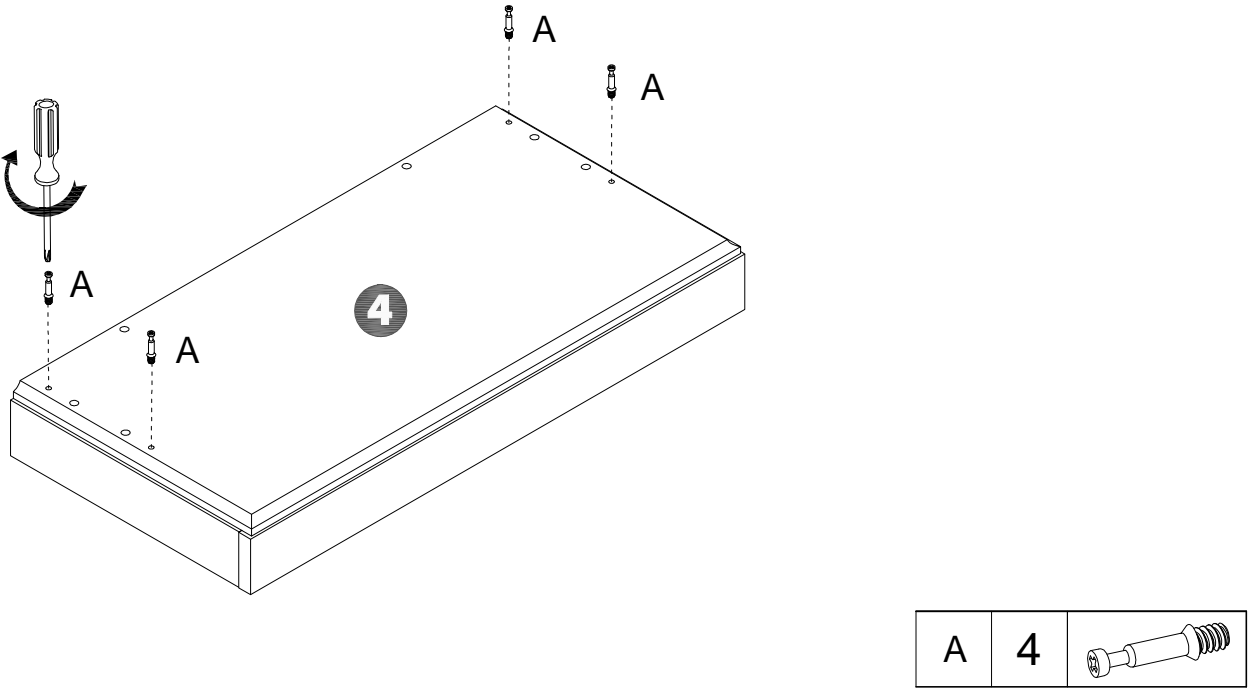


Assembly steps(EN)

STEP 7

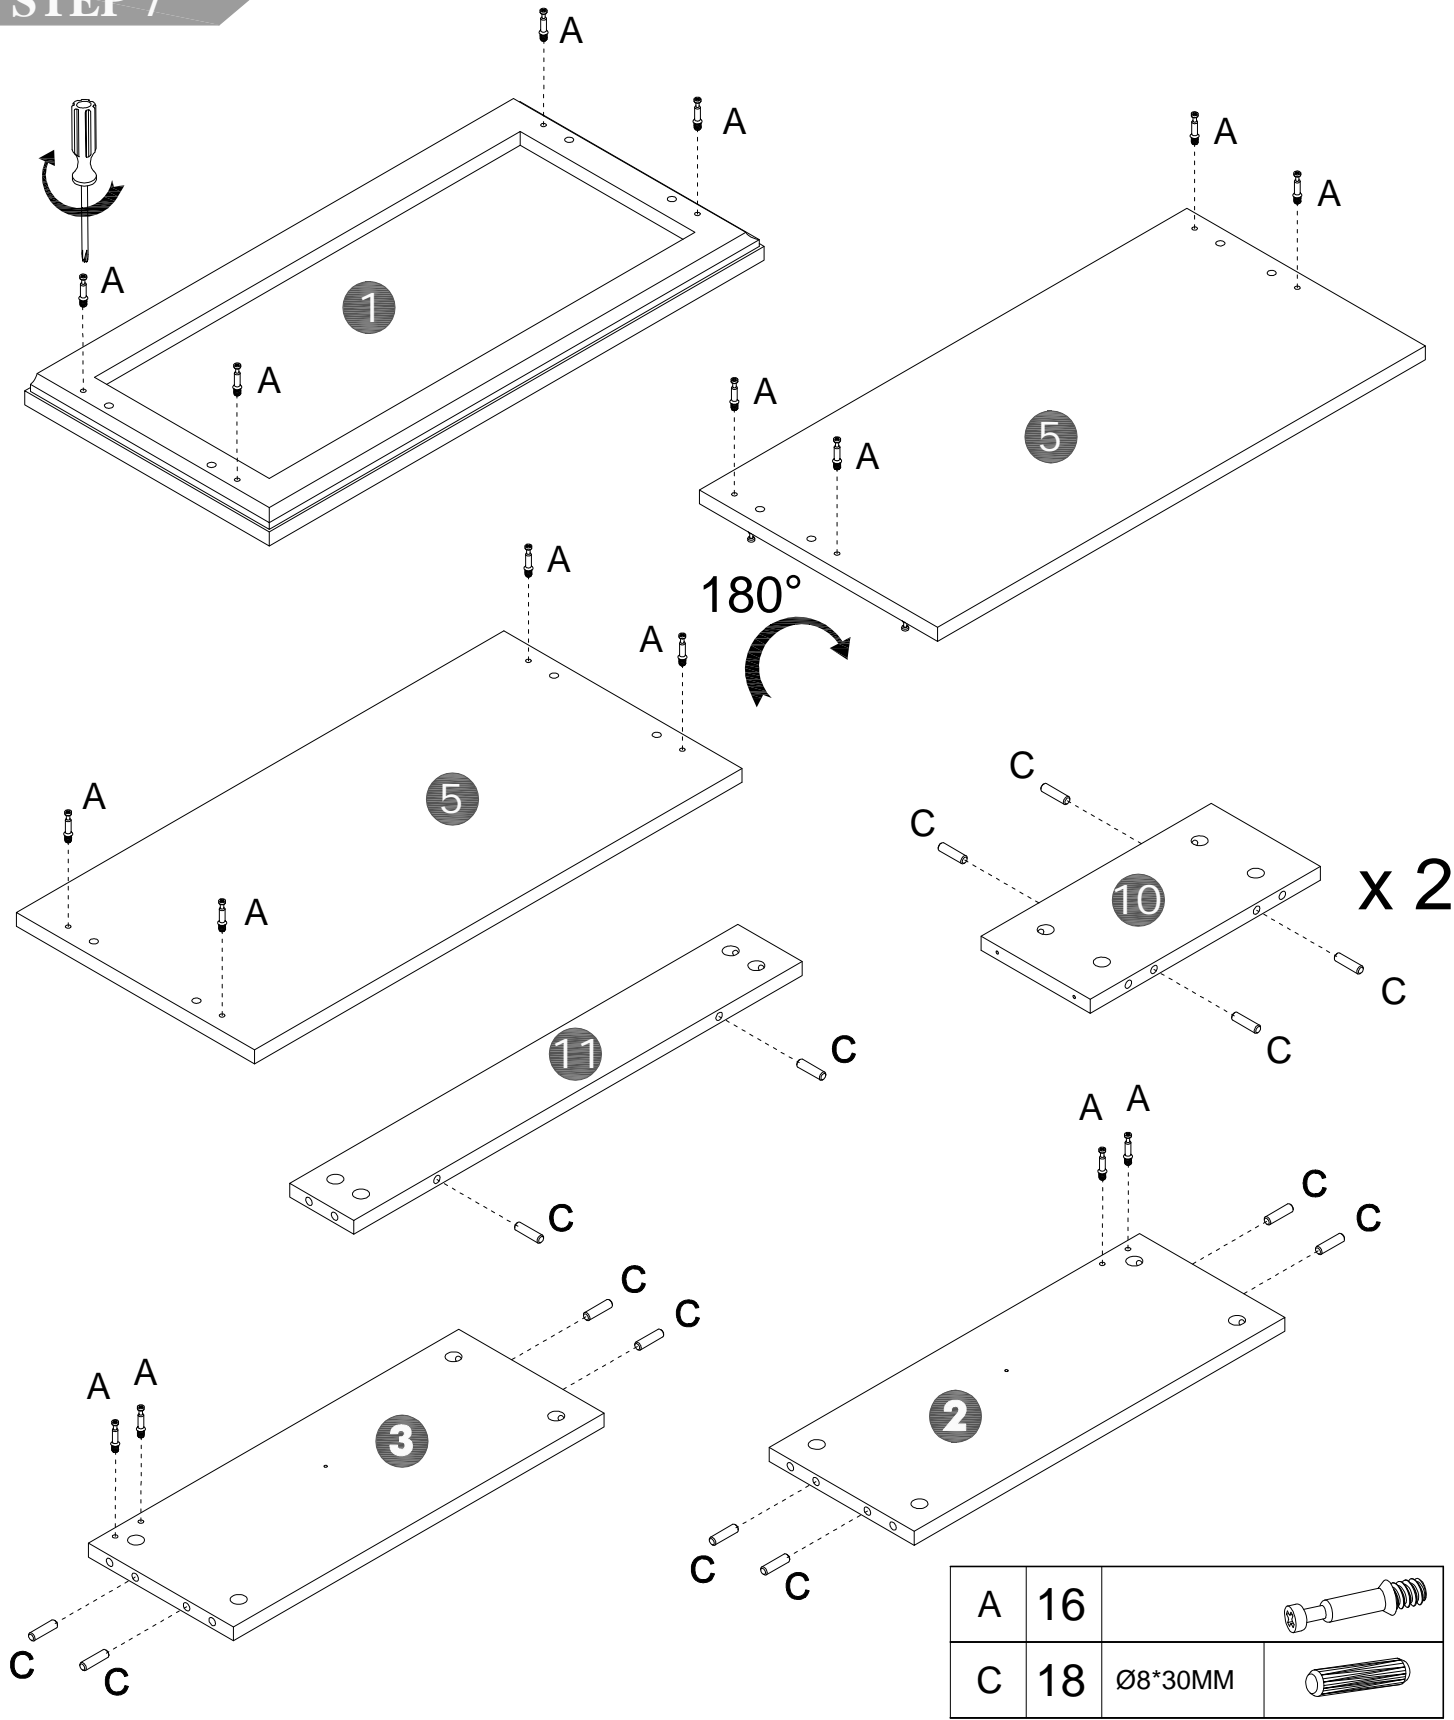


Assembly steps(EN)

STEP 8


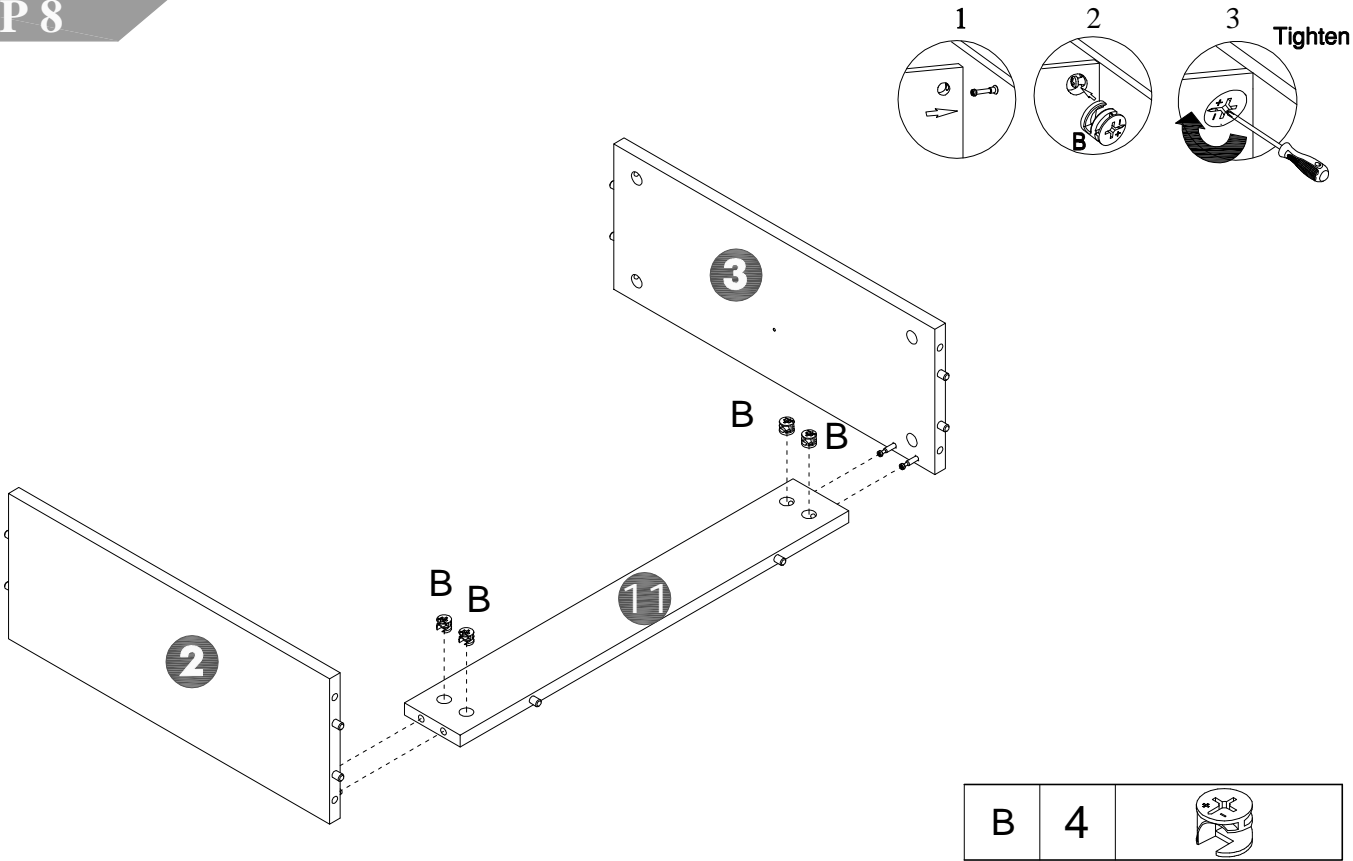


STEP 9

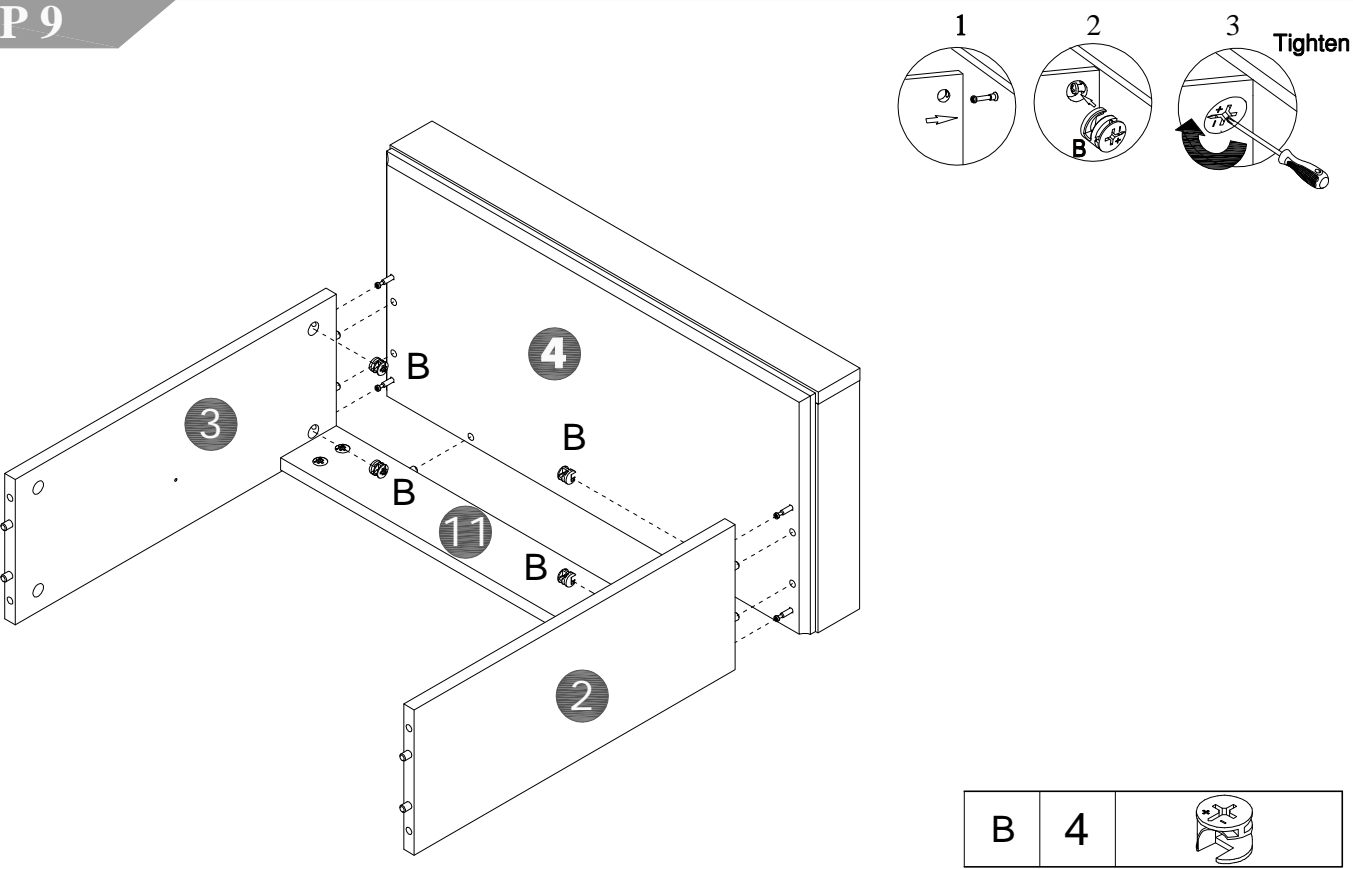



Assembly steps(EN)

STEP 10

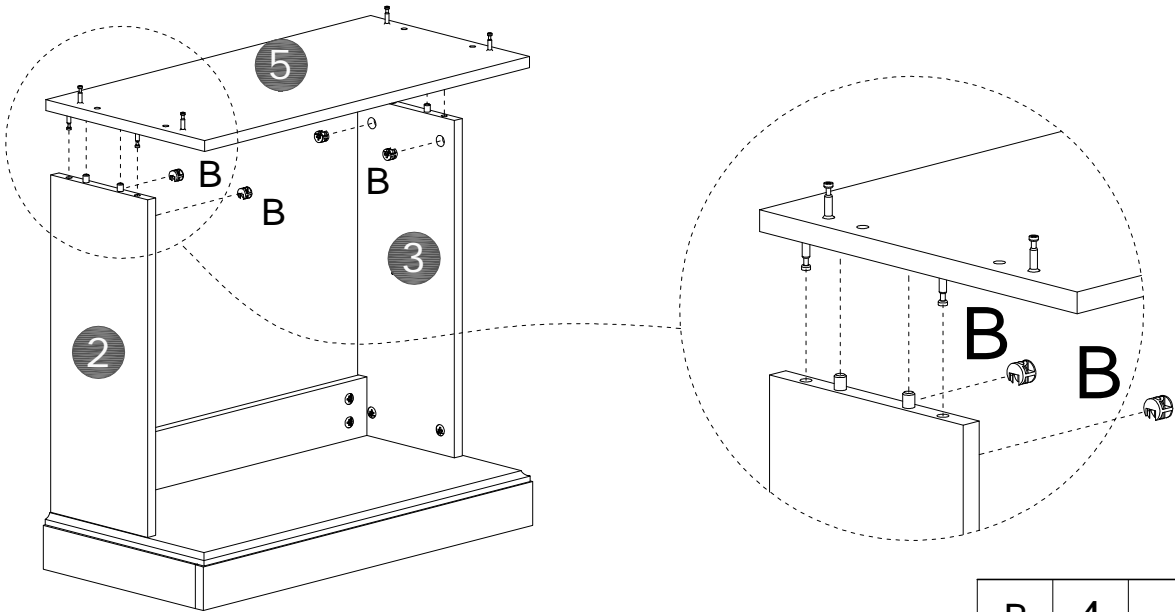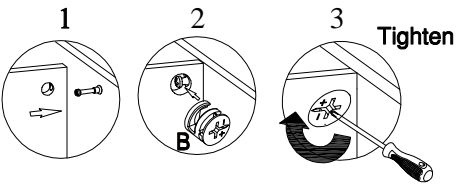

B	4	
---	---	--



STEP 11

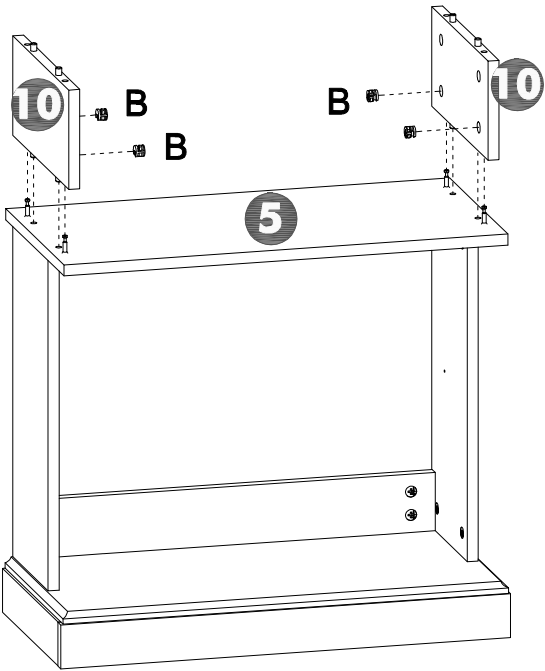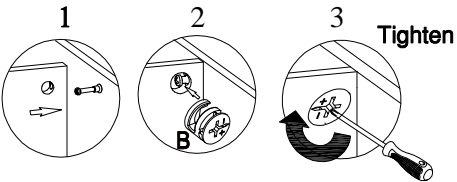

B	4	
---	---	--


Assembly steps(EN)

STEP 12

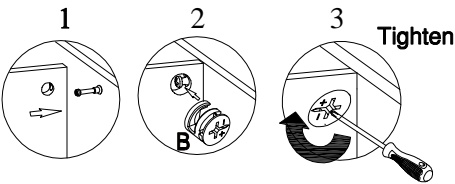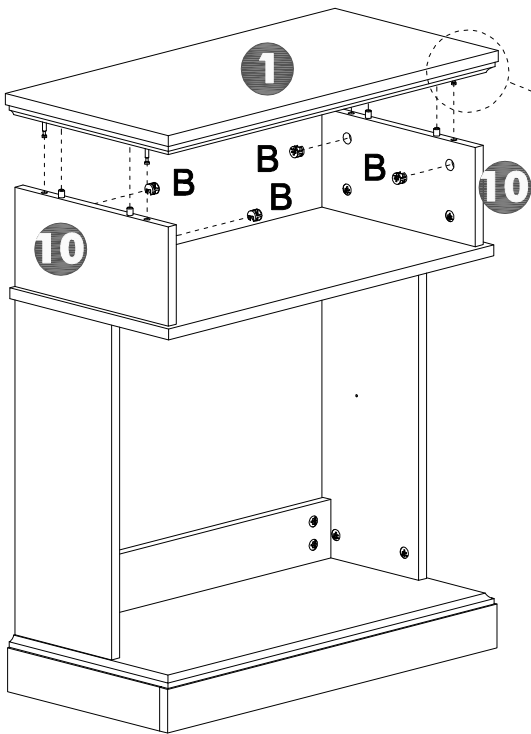

B	4	
---	---	--



STEP 13

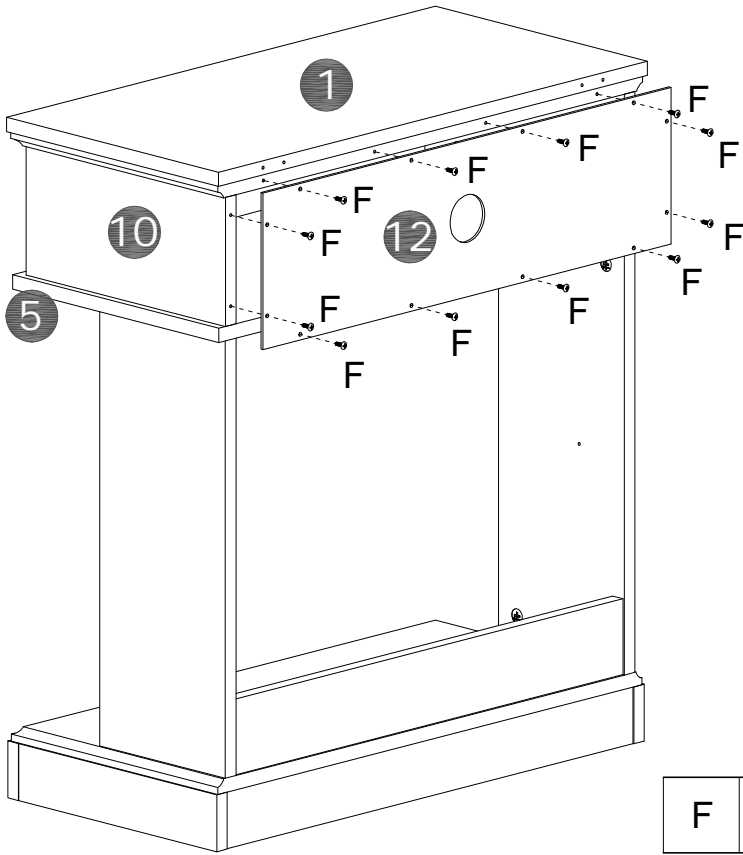

F	12	Ø3*14MM	
---	----	---------	--


Assembly steps(EN)

STEP 14

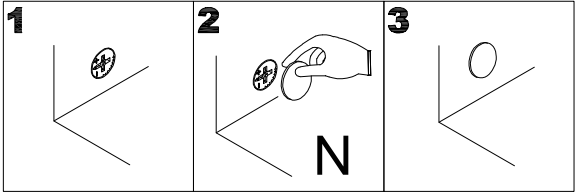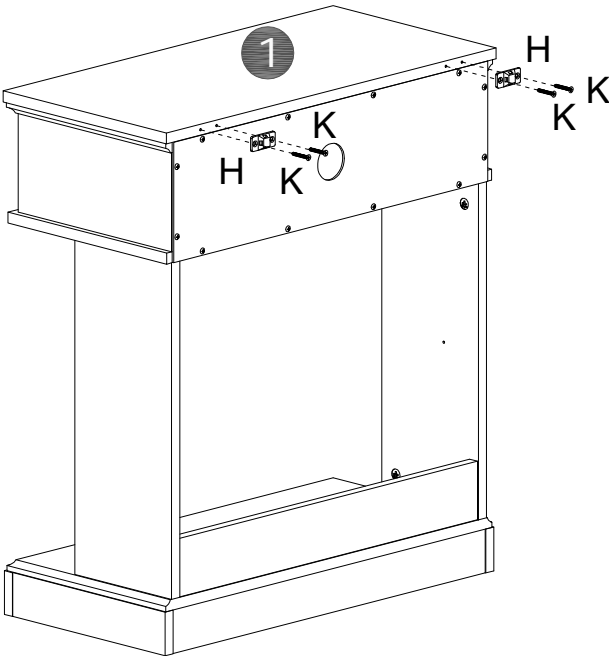

N	20		
H	2		
K	4	Ø4*16MM	

STEP 15

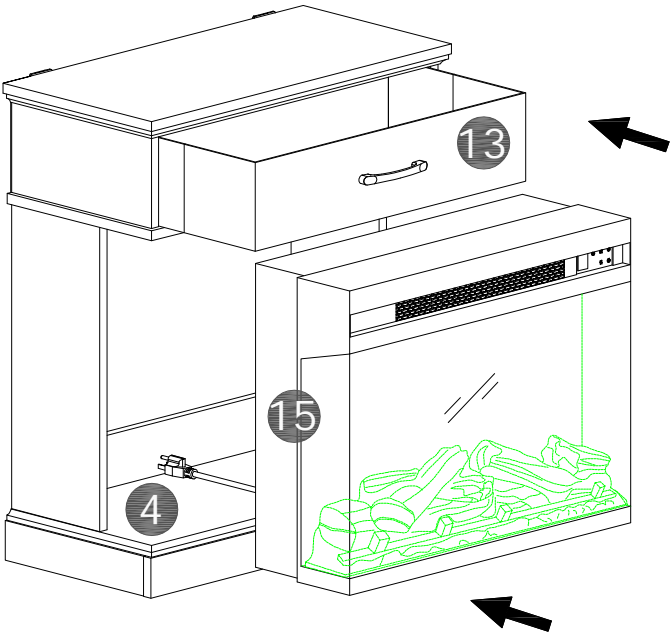


Kindly reminder:
The installation of insert and Two
Corner Codes and Screws, please
refer to the instruction of insert,
thanks!

An assistant is required.

Assembly steps(EN)



STEP 16

Open the bolt so that the corner code in Figure 2 can be stuck

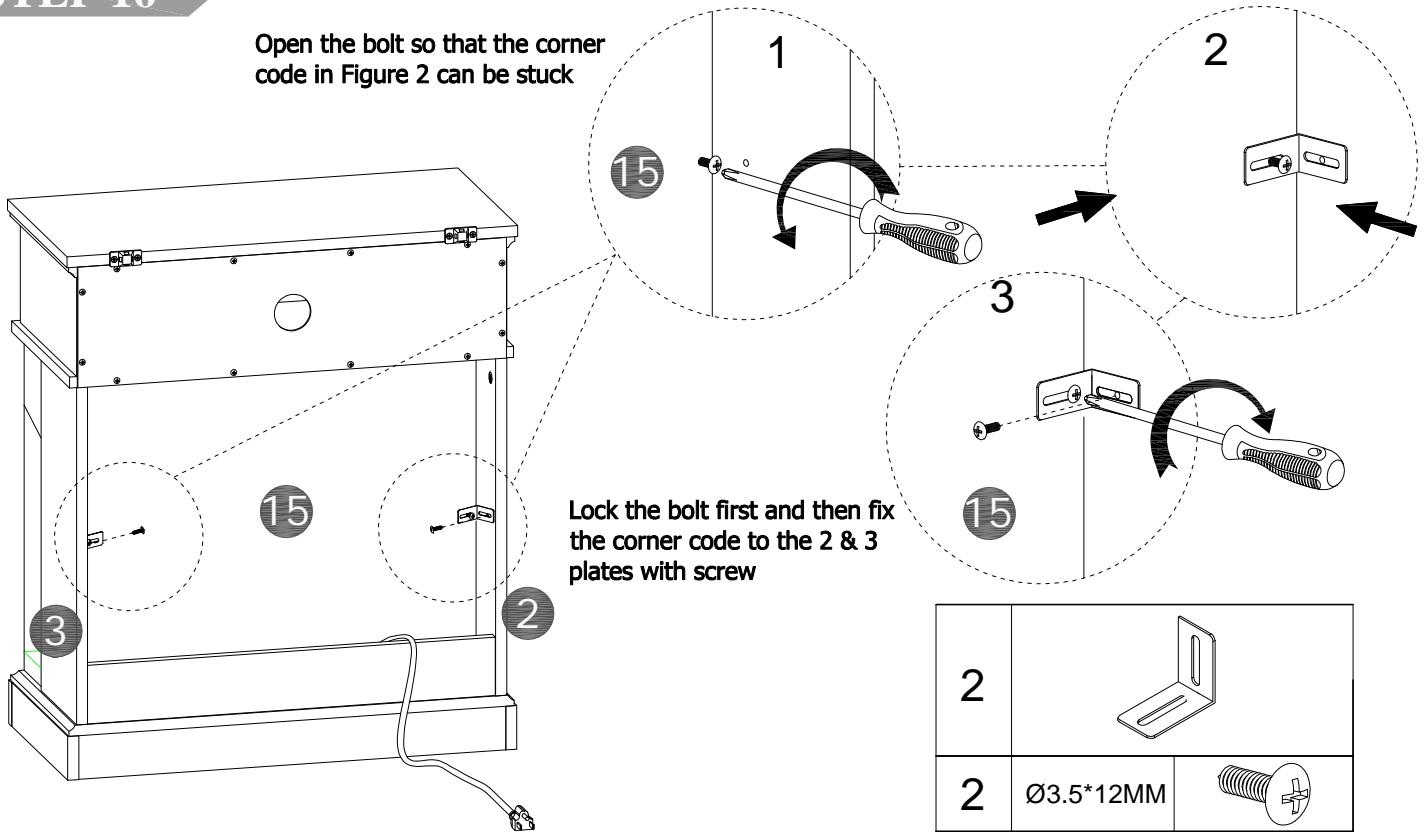

STEP 17

1. Place unit in desired location.
2. Locate wall stud nearest unit center.
3. On wall, mark the center of the hole.
4. If a wall stud cannot be located mark hollow wall at unit center.

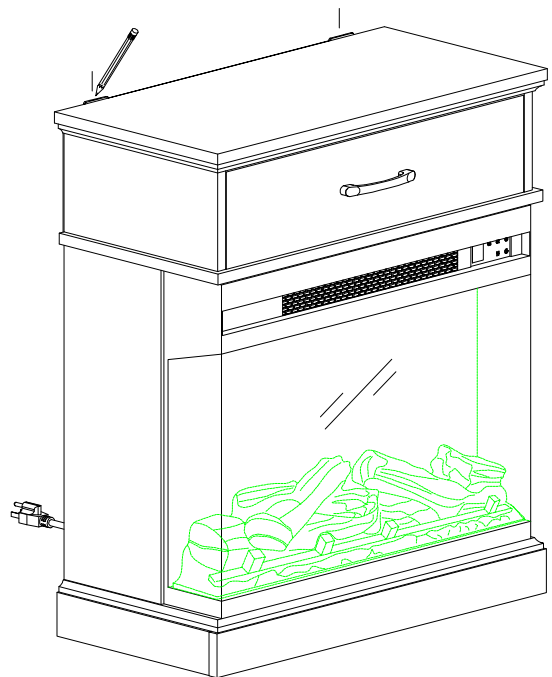
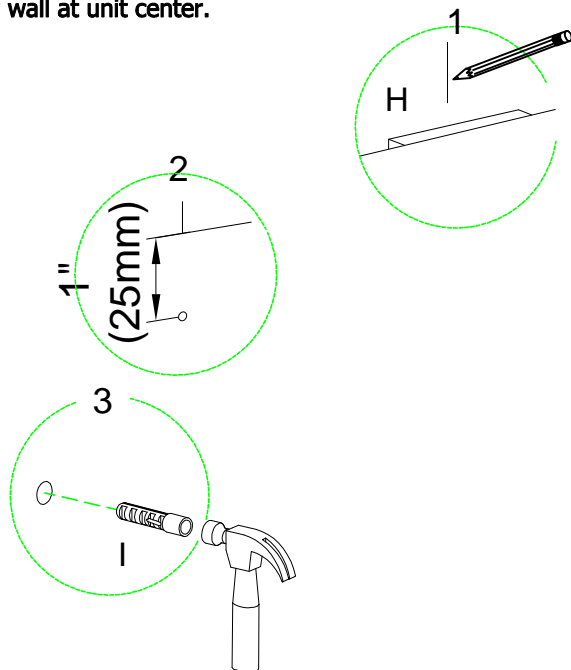





1	4	
---	---	--

Assembly steps(EN)


STEP 18

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert strap thru bracket attached to wall.
3. Pull lightly til strap stops. Assembly is complete.

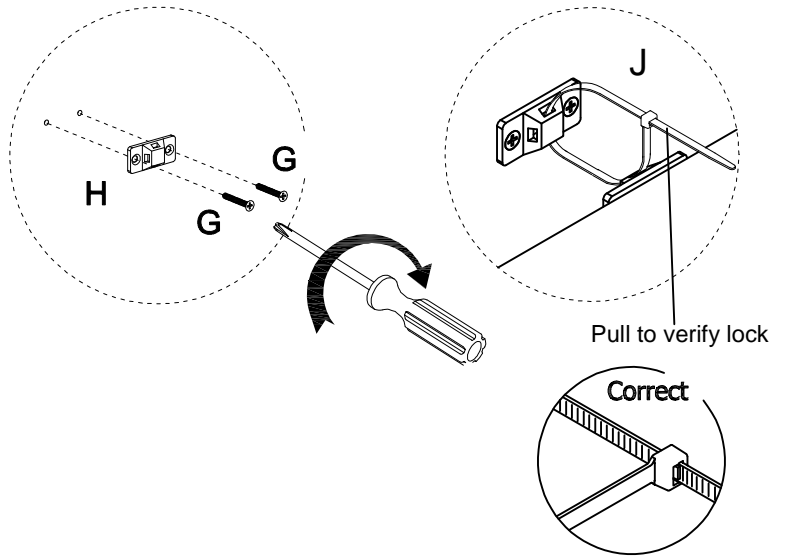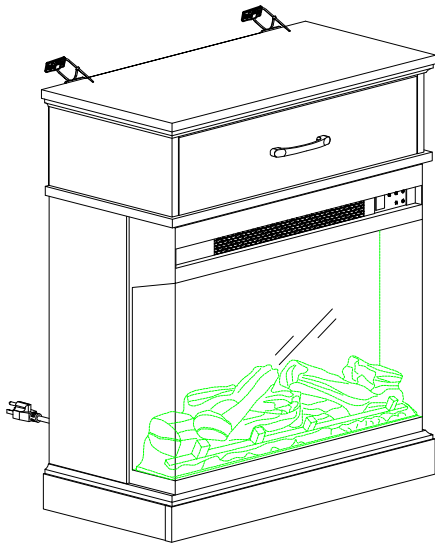

J	2	 Nylon Cable Tie	
H	2		
G	4	Ø4*35MM	

STEP 19

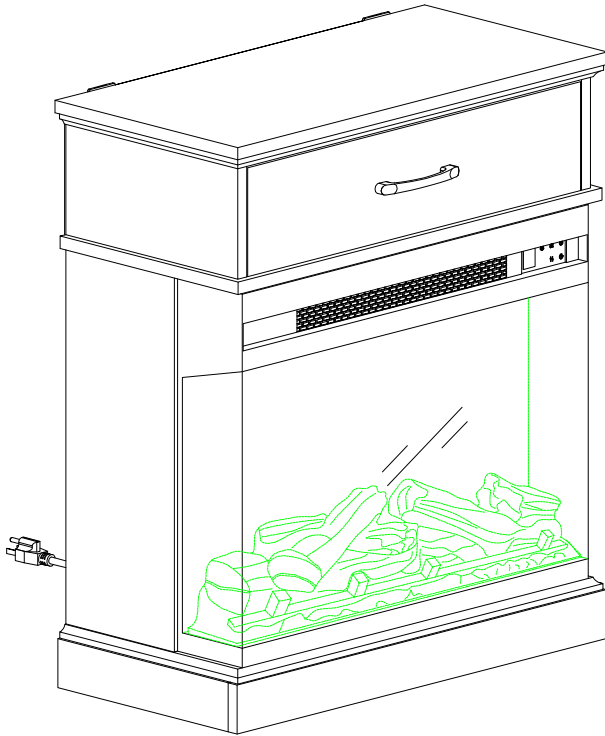

Final Assembly