


Owner Manual

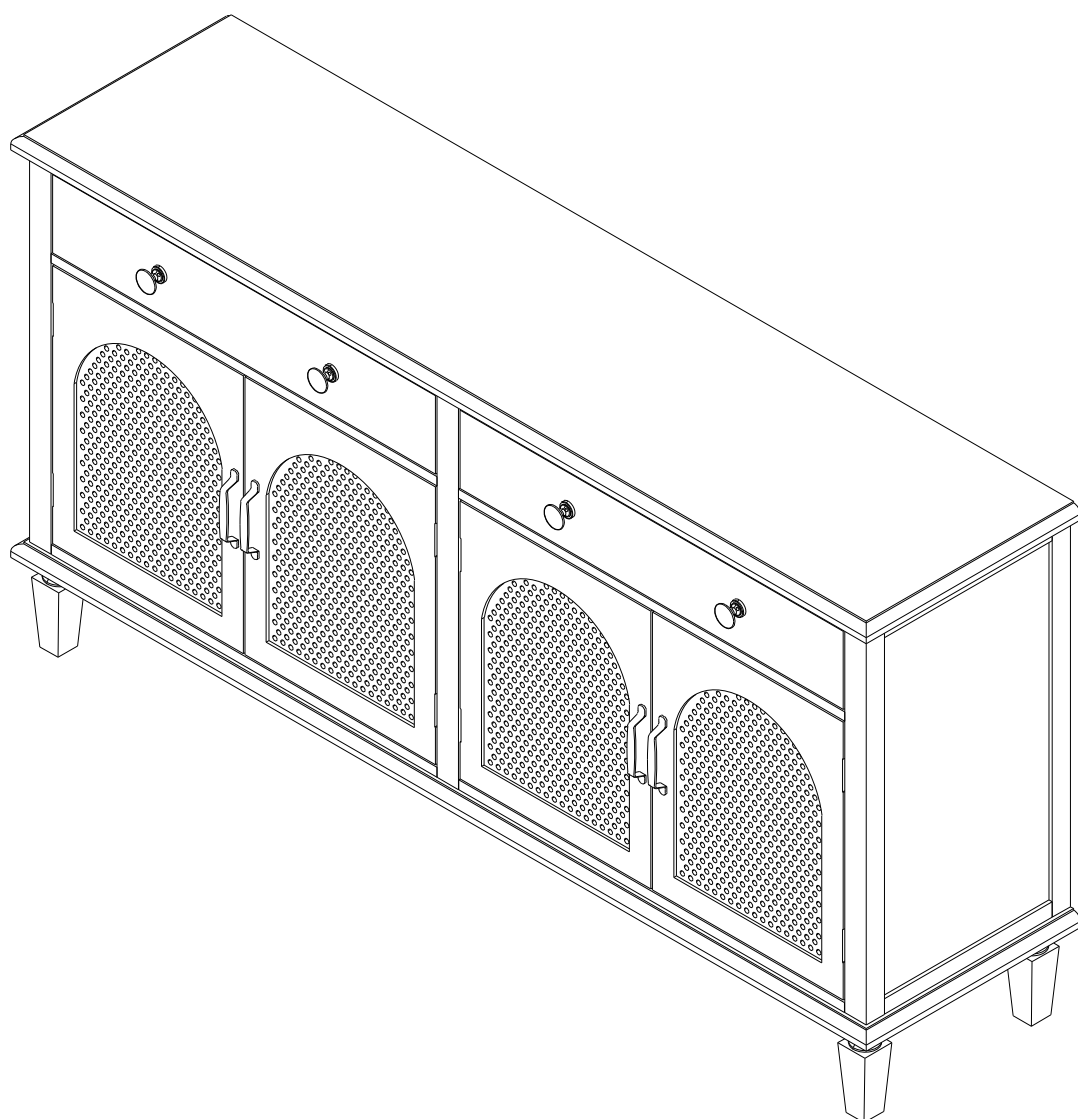

MAINTENANCE AND WARNINGS

Thank You For Choosing Our Furniture.


Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product.

NOTE :


This brochure contains IMPORTANT safety info. Please read and keep it for future reference.



Weight Limitation
200 LBS

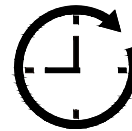

Installation:
65 minutes.

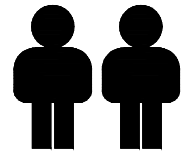

Two Person



Before You Start

Please follow the steps below:



Unbox the package and check if all parts and accessories are complete.



If you find something missing, stop assembly and contact your supplier immediately.



Please do not completely tighten all the hardware until the entire assembly is completed! Be sure to tighten all the hardware once the assembly completed.



NOTE: Should be assembled on soft surface to keep balance.

After-Sales Service

- If you encounter any issues or need technical support during use, please contact our after-sales team. We offer long-term maintenance and warranty services.



Warranty



We strive to offer high , quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.



Are you having difficulty with assembly? Missing parts? Please send email with your order number




For return, please check the return policy with the retailer or market place you bought from. Appreciate your purchasing from us. Pop up your life by our furniture piece!

Daily Maintenance


- Keep furniture away from heat.
- Do not use cleaning agents containing acids, alkalis, or corrosive substances, as they may damage the surface. It is recommended to use neutral cleaning agents or specialized furniture cleaners.
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, for residential use only.

Exploded Diagram

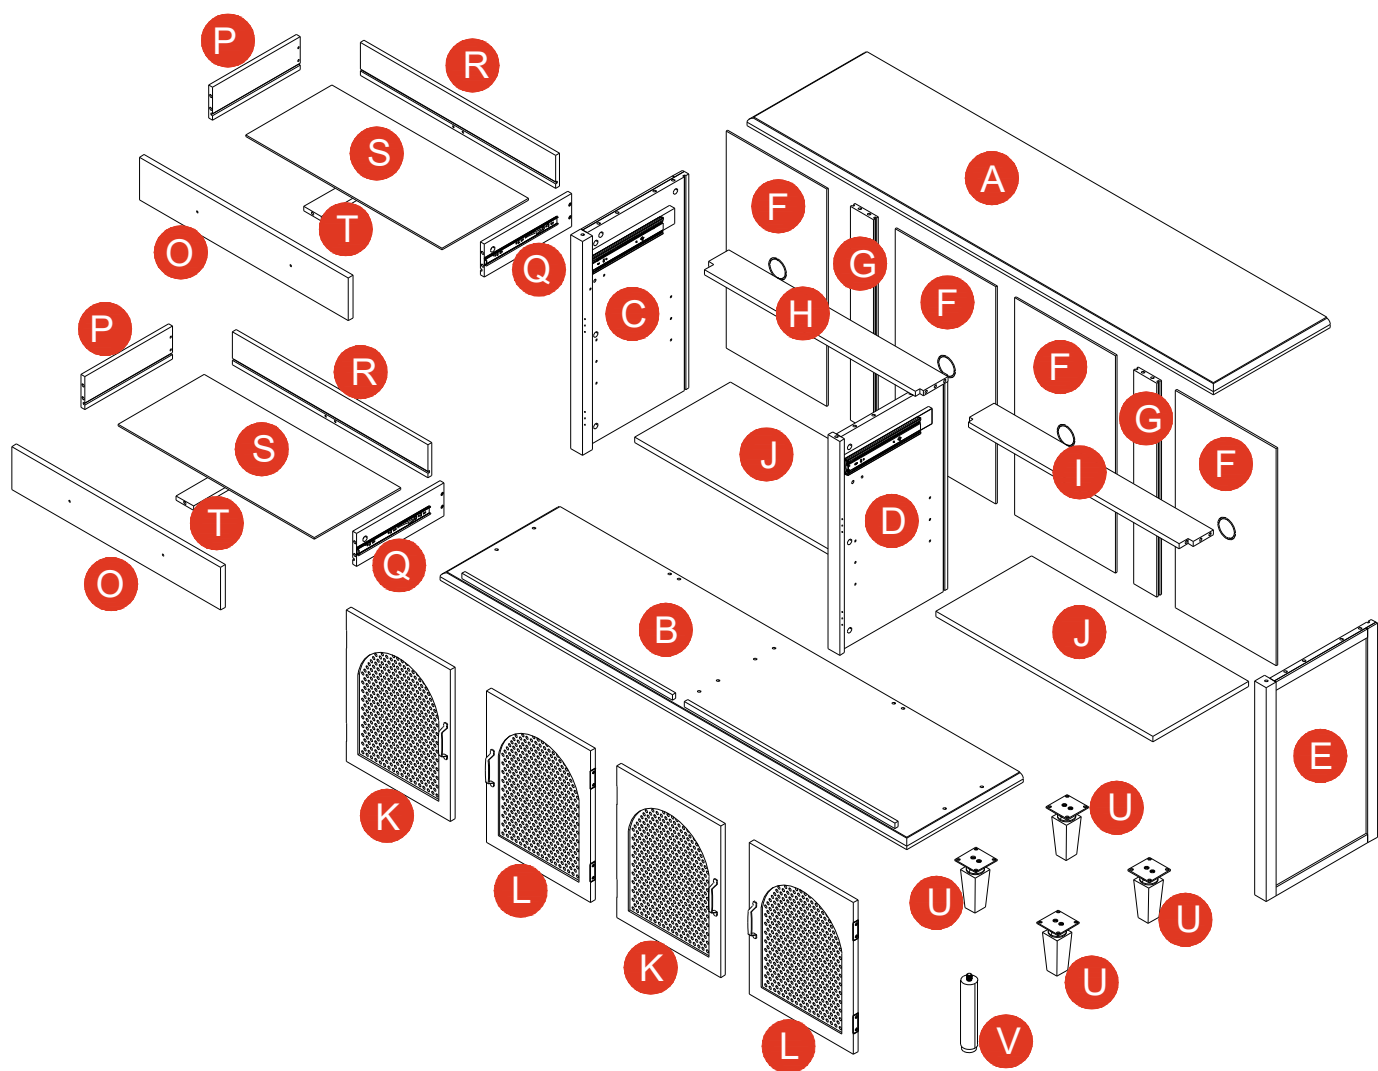


Parts List

A x1

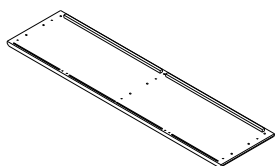


Top panel

B x1

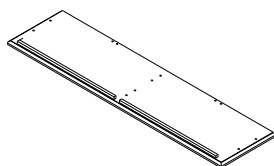


Bottom panel

C x1

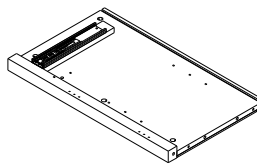


Left side panel

D x1

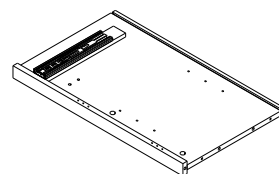


Middle side panel

E x1

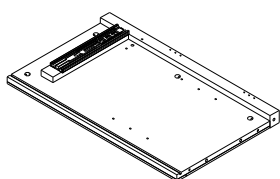


Right Side panel

F x4

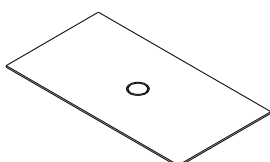


Back panel

G x2

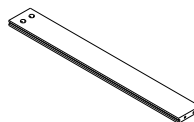


Support board

H x1

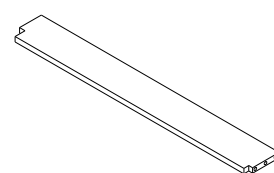


connect rod

I x1

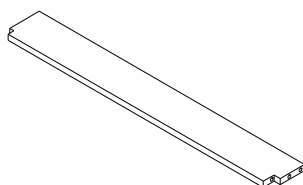


connect rod

J x2

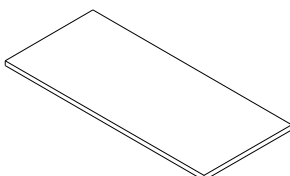


Shelf board

K x2

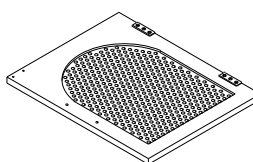


Door panel

L x2

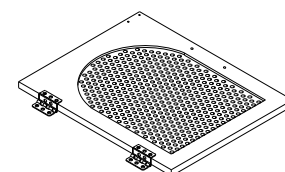


Door panel

O x2

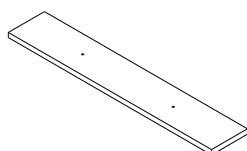


Drawer face

P x2

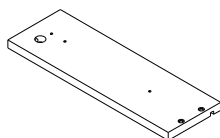


Pull-out left side panel

Q x2

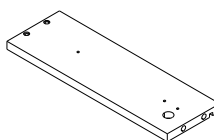

Pull-out right side panel


R x2

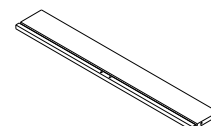

Pull-out back panel


Parts List

S x2

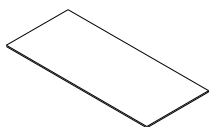


Pull-out bottom panel

T x2

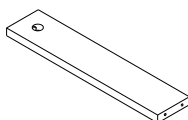

support panel

U x4



Legs


V x1



Leg

Hardware List

1 x20+2



Bolt
M6*35mm

2 x24+2




Cam bolt
M15*12mm

3 x26+3




Wood Dowel
Ø8*30mm

4 x10+1



Screw
Ø7*40mm

5 x24+3



Screw
Ø3*16mm

6 x24+2



Sticker

7 x12




Bolt
Ø4*20mm

8 x8




Shelf support

9 x4




Door catch

10 x2

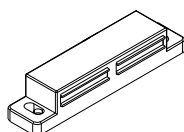


Door catch

11 x4



Plastic buckle

12 x2



Plastic belt

13 x16+1



Bot
Ø6x12mm

14 x4



Handle

15 x32+3




Screw
Ø3.5*14mm

16 x4




Expansion pipe
L30mm

17 x16+2




Screw
Ø4*30mm

18 x1




Screwdriver

19 x1

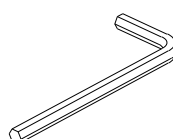


Allen key

20 x2



Bolt
M6*70mm

21 x4



Handle

22 x16




Retaining clip


Assembly Instructions

Step 01

Prepare for (A)

- 1.Tighten (1) into the corresponding hole of (A)
- 2.Align the holes in (A), insert (3) by hand



1	 x 10	M6*35mm
18	 x 1	Screwdriver

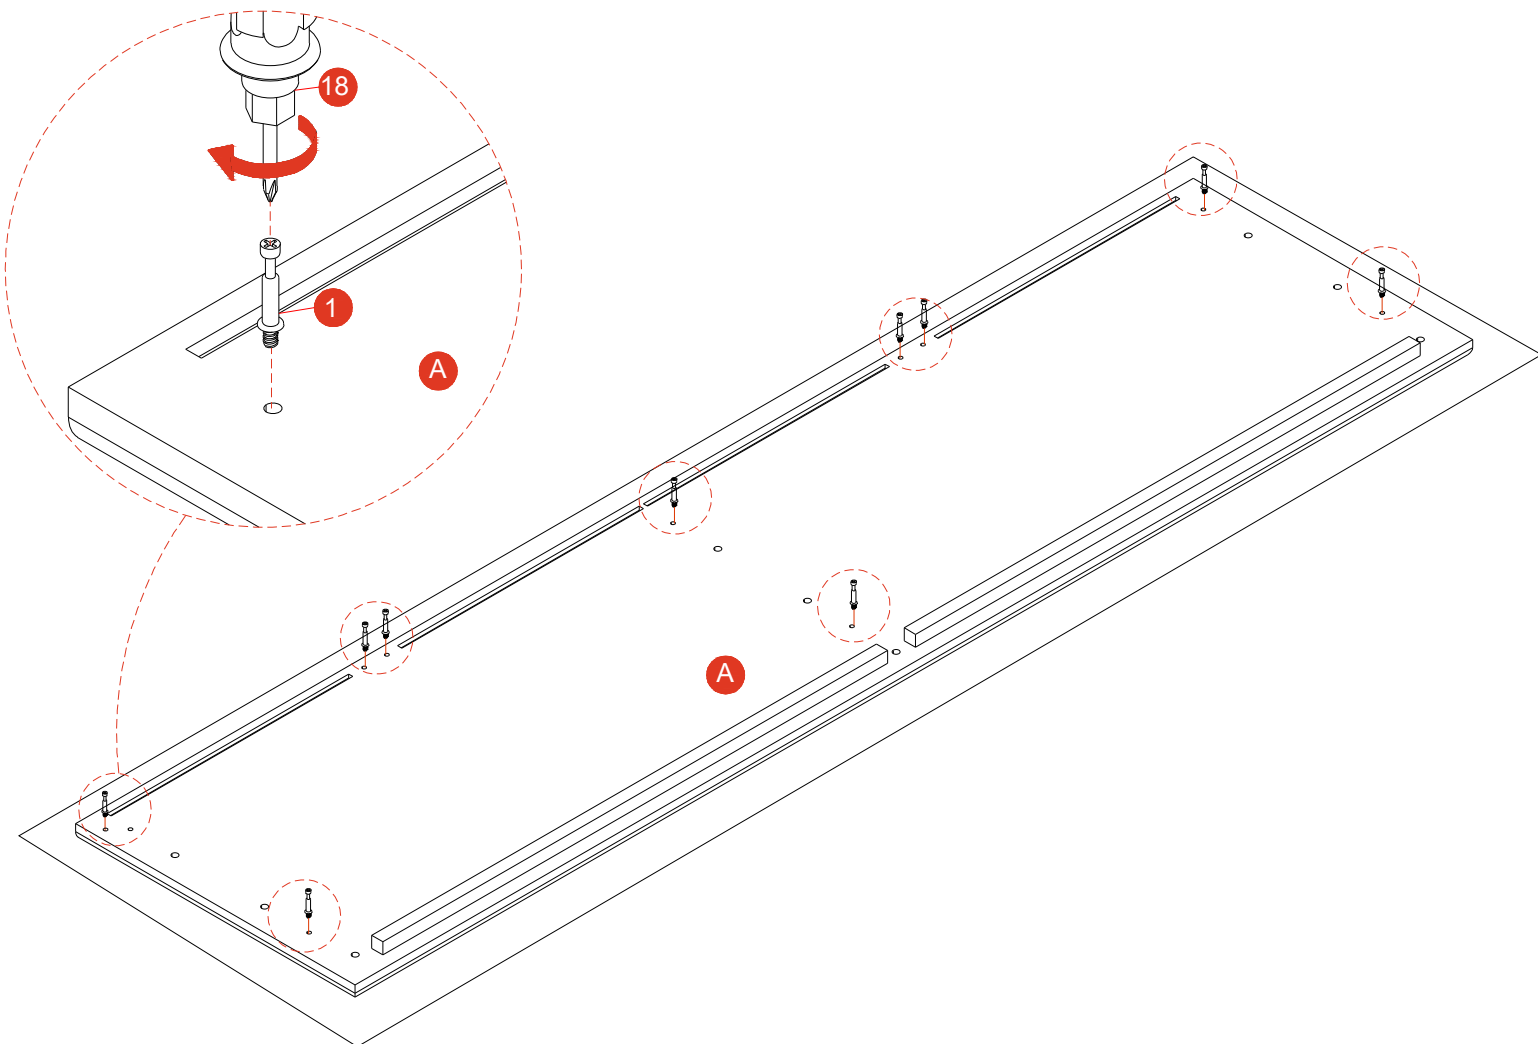

Step 02



Connect (D) with (A), insert (2) into the corresponding hole of (D).
Connect (G) with (A), insert (2) into the corresponding hole of (G).
Then tighten (2) with (18), cover (2) with (6)


18		x 1	Screwdriver
2		x 6	M15*12 mm
6		x 6	Sticker
3		x 3	Ø8*30 mm

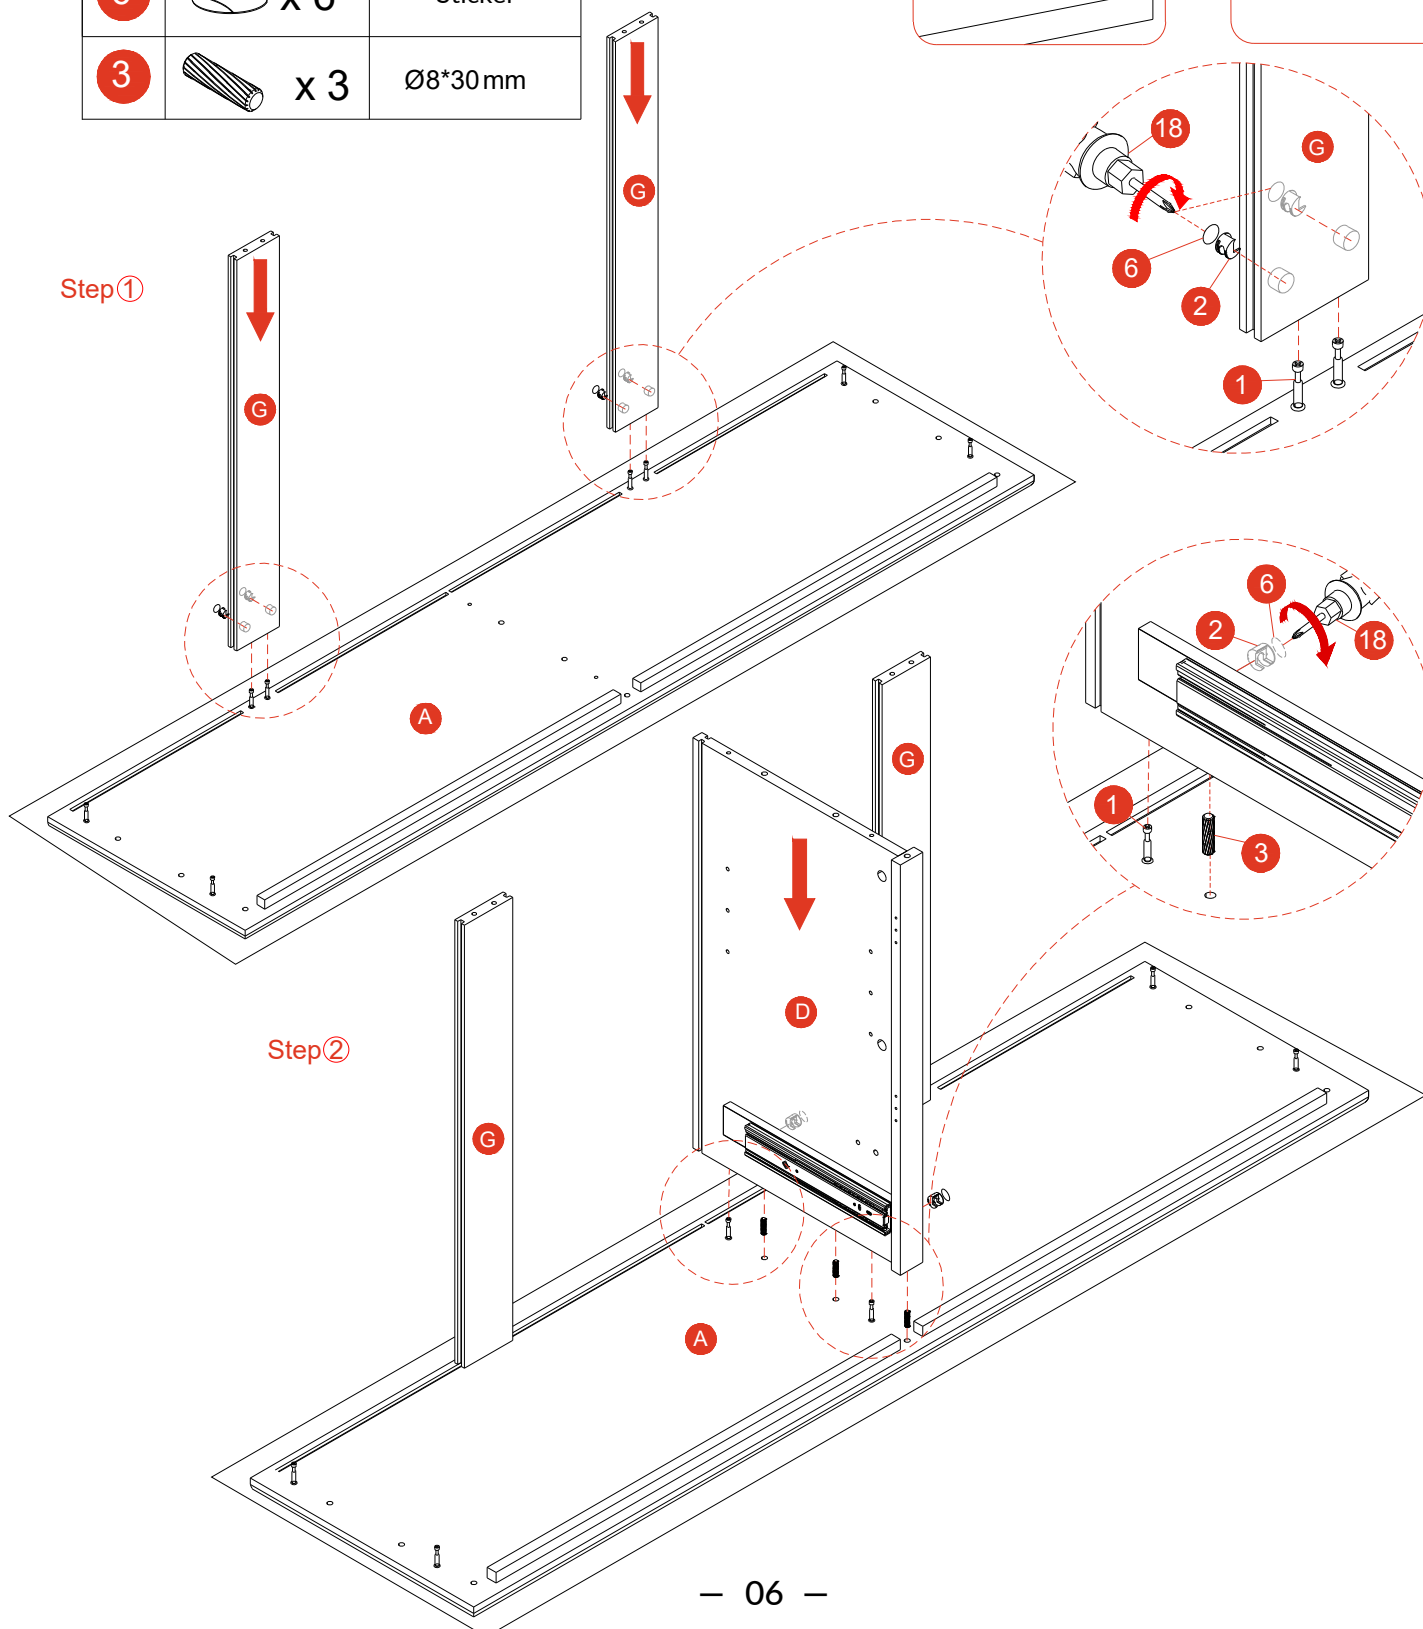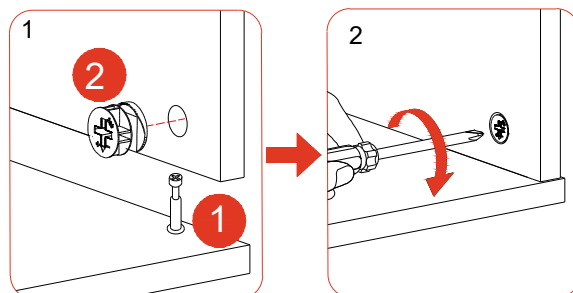

Step 03

- 1.Tighten (1) into the corresponding hole of (C)
- 2.Tighten (1) into the corresponding hole of (E)



18	 x 1	Screwdriver
1	 x 4	M6*35mm

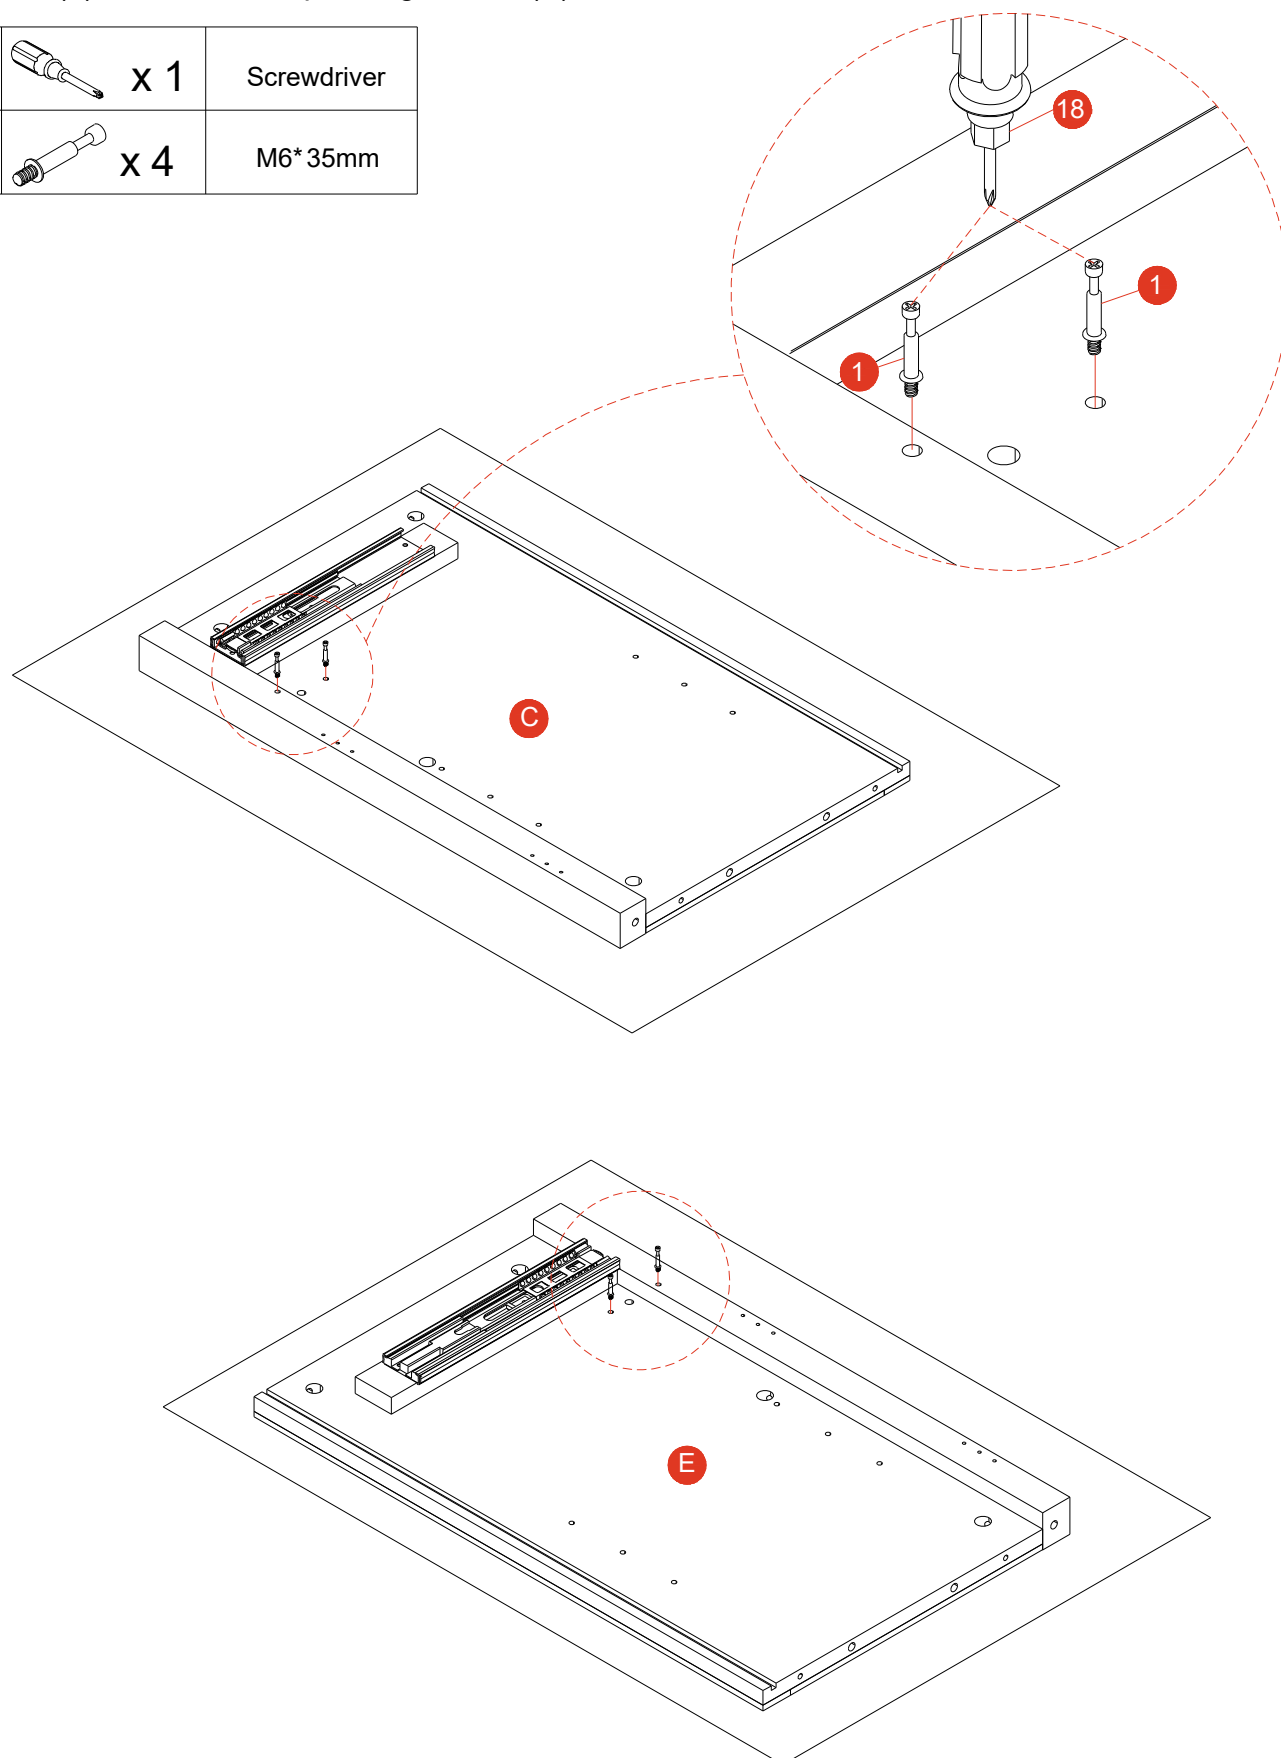

Step 04

(20) pass through the through hole of (D)


20	 x 2	M6*70mm
----	---	---------

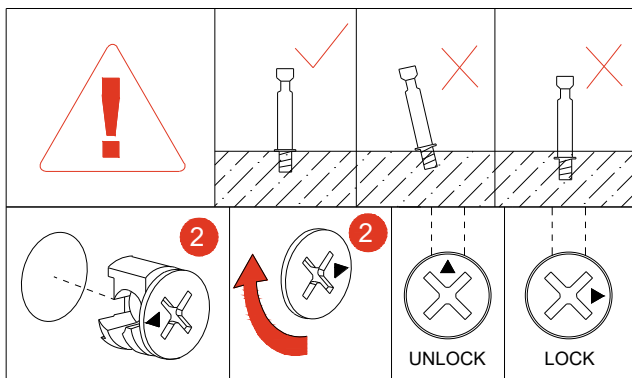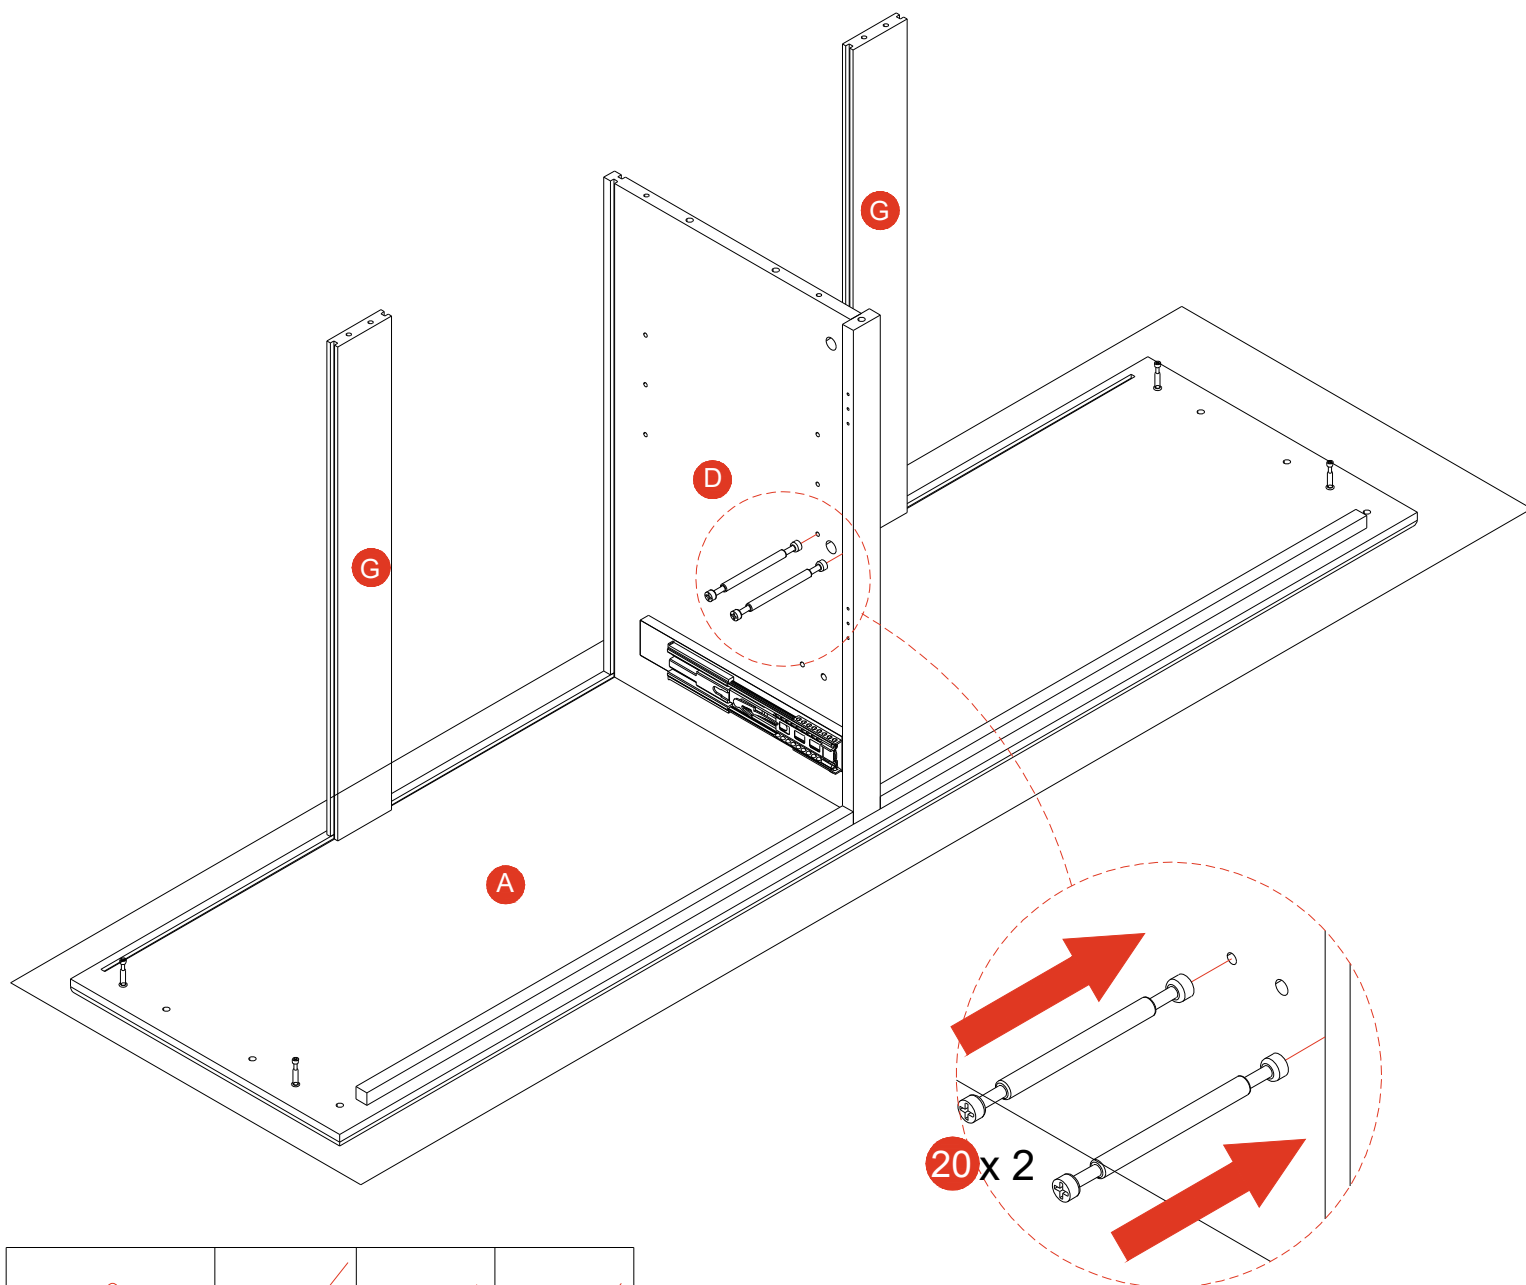

Step 05


Attach (10) to (H&I) with (15) as picture shown
Align the holes in (H&I), insert (3) by hand.



18	 x 1	Screwdriver
15	 x 4	Ø 3.5*14mm
10	 x 2	Door catch
3	 x 4	Ø8*30mm

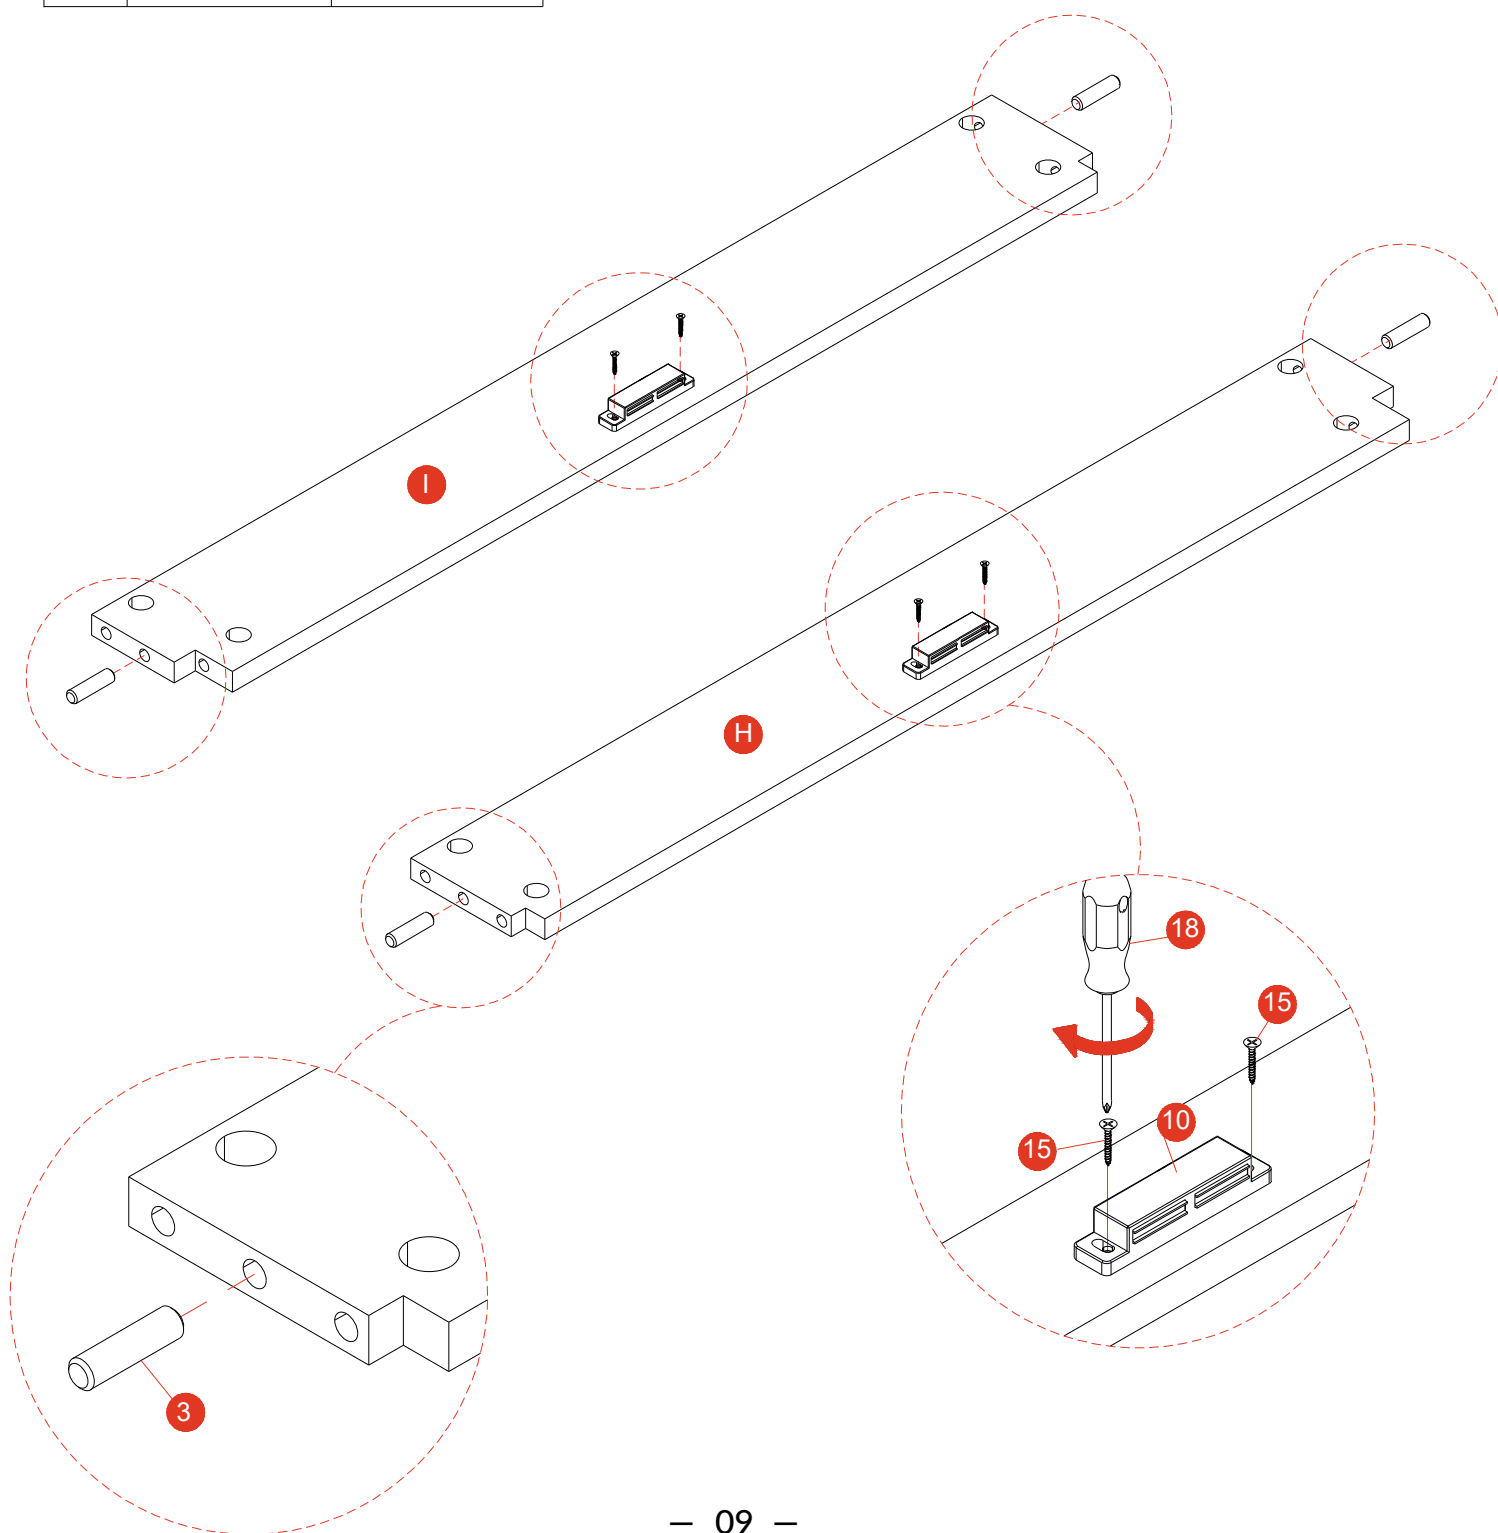

Step 06

- 1, Align the holes in (A), insert (3) by hand.
- 2, Connect (D) with (H) first, then connect (C) with (H), please note that (C) must be raised just more higher than (1), then Connect (A) with (C)
- 3, Insert (2) into the corresponding hole of (H&C), then tighten (2) by (18)
- 4, Cover (2) with (6)

3	 x 3	Ø8*30mm
2	 x 4	M15*12mm
6	 x 4	Sticker
18	 x 1	Screwdriver

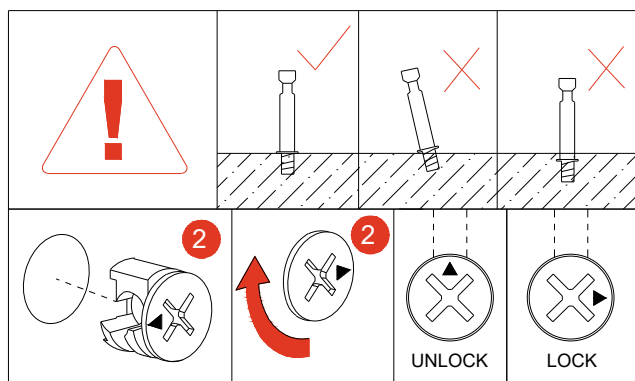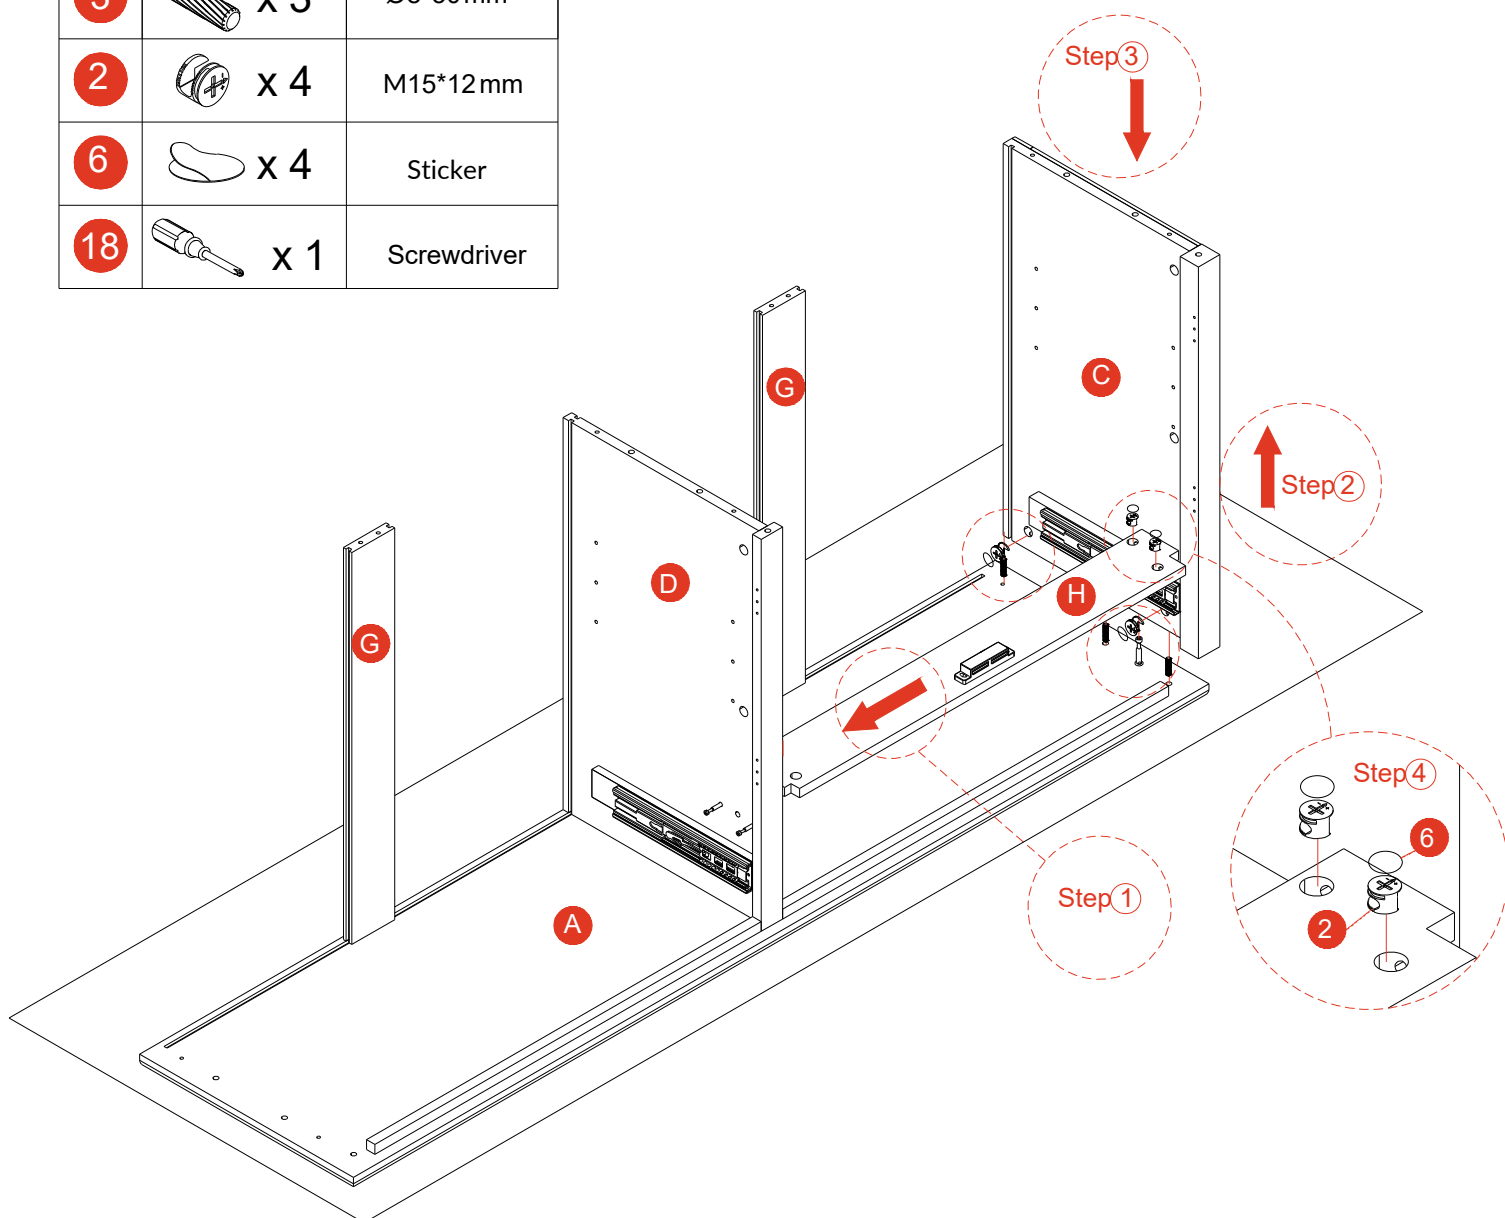

Step 07

The same method




1, Align the holes in (A), insert (3) by hand.

2, Connect (D) with (I) first, then connect (E) with (I), please note that (E) must be raised just more

3, Insert (2) into the corresponding hole of (I&E), then tighten (2) by (18)

4, Cover (2) with (6)




3	 x 3	Ø8*30mm
18	 x 1	Screwdriver
2	 x 4	M15*12 mm
6	 x 4	Sticker

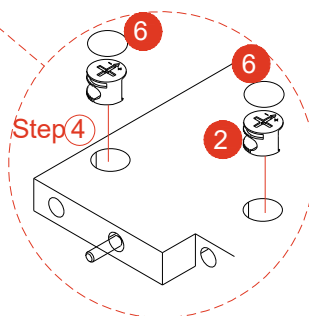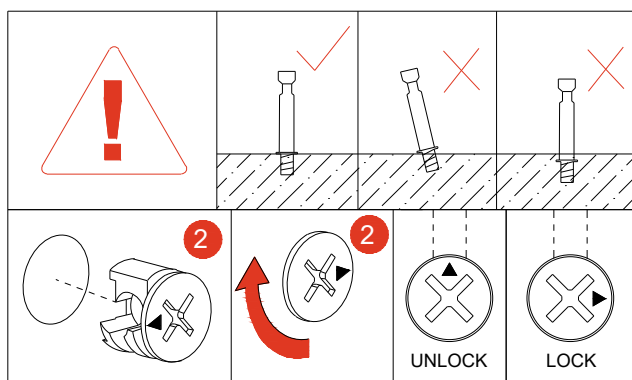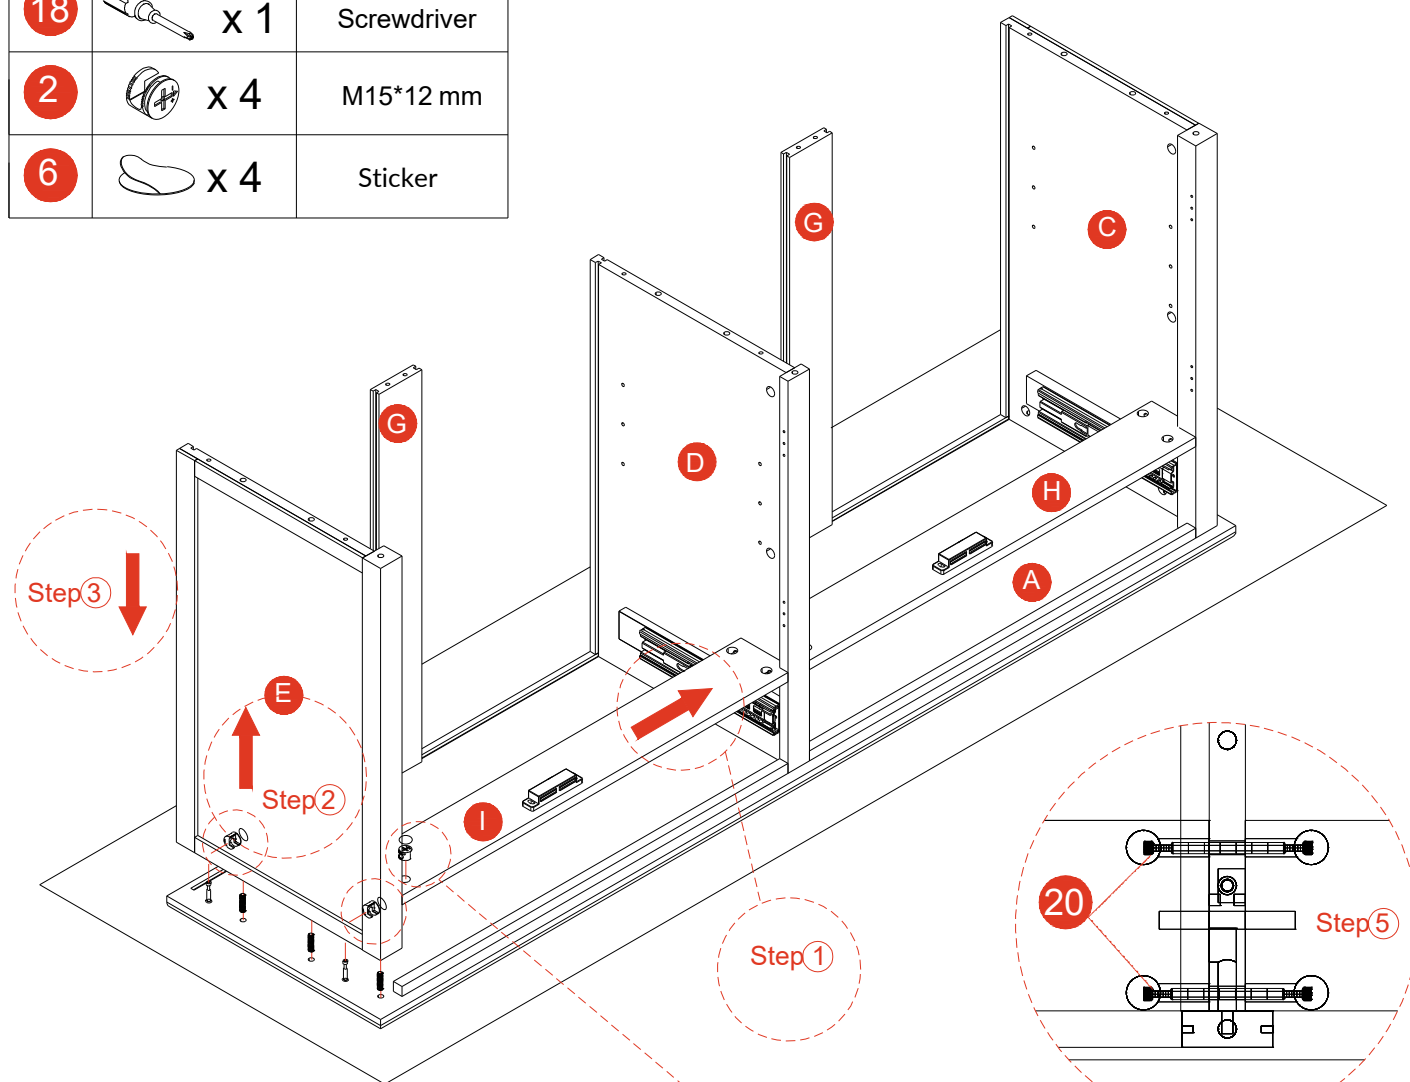

Step 08


- 1, Before insert (2) into (H&I), please make sure that (20) exposed evenly at both ends.
- 2, Rotate (2) to 90 degrees one side first, then rotate (2) to 90 degrees the other side as well. there is a arrow on the (2).
- 3, Make sure that (2) engages (20), then tighten (2) by (18)
- 4, Cover (2) with (6)

18	 x 1	Screwdriver
2	 x 4	M15*12 mm
6	 x 4	Sticker

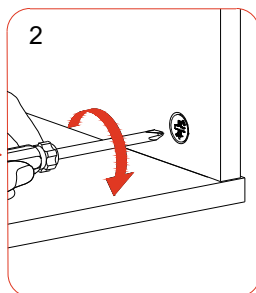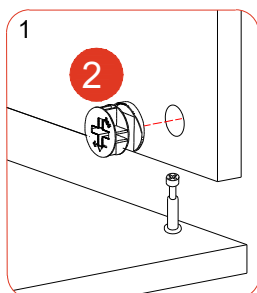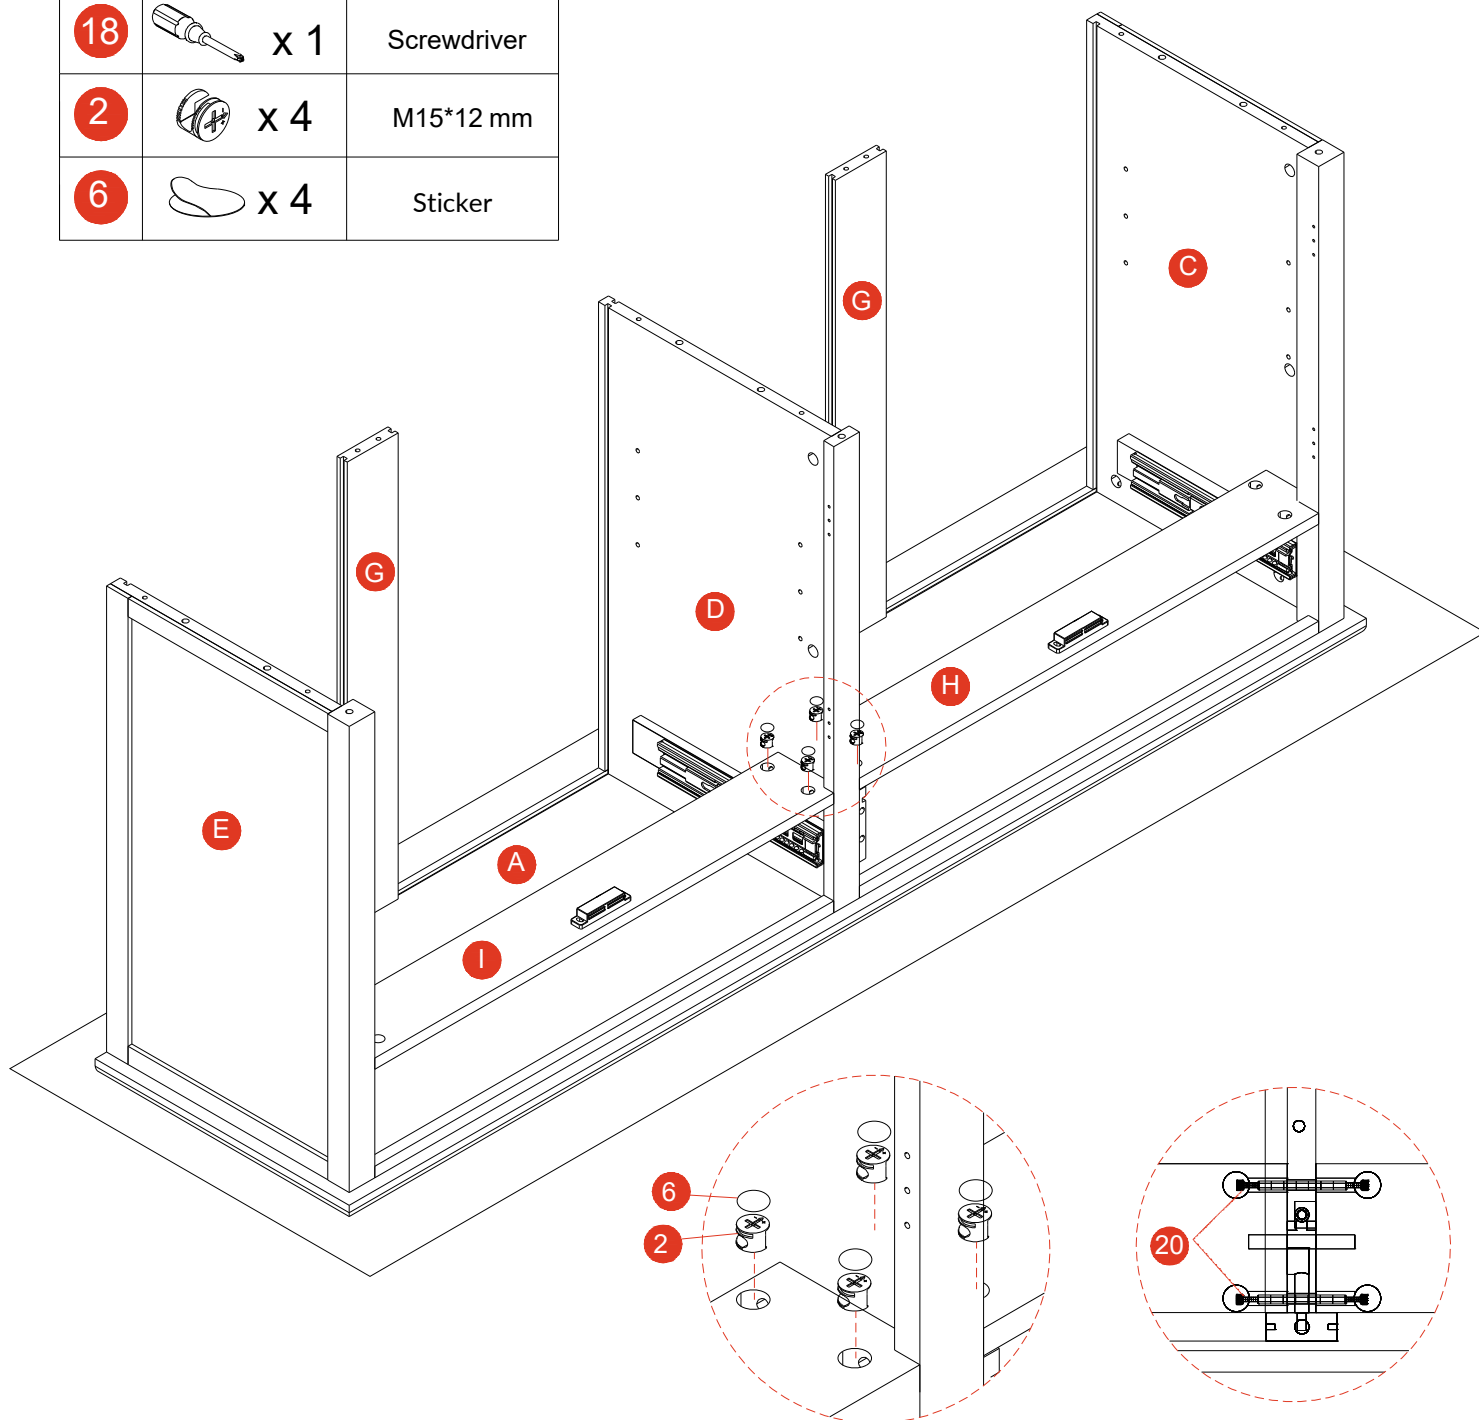


Step 09


Slide in (F) into the groove in (E,G) and (G,D) and (D,G) and (G,C)
make sure they are also in groove in (A)

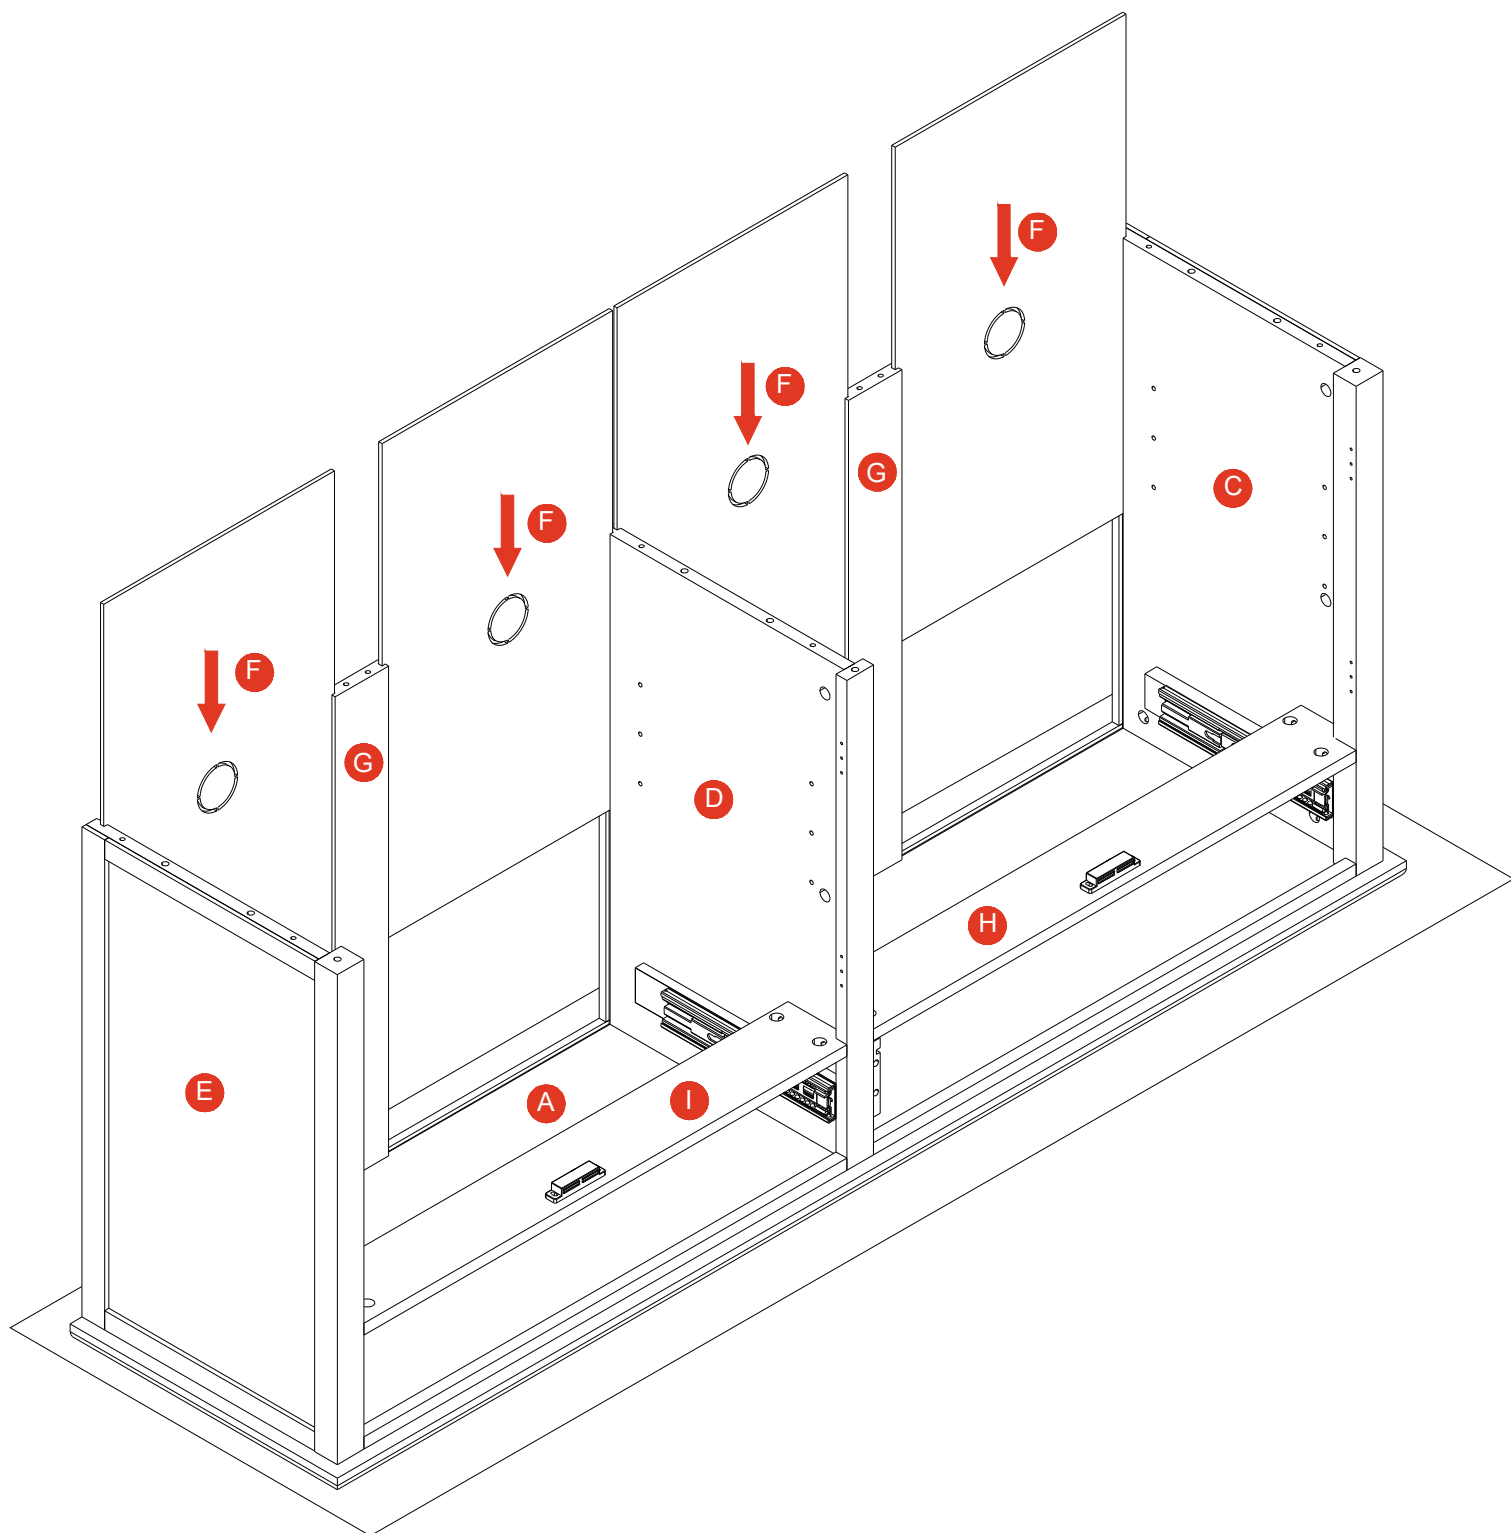

Step 10

- 1.Align the holes in (C,D,E), insert (3) by hand
- 2.Attach B to prepared cabinet with (4) by (19)


19	 x 1	Allen key
4	 x 10	Ø7*40 mm
3	 x 9	Ø8*30 mm

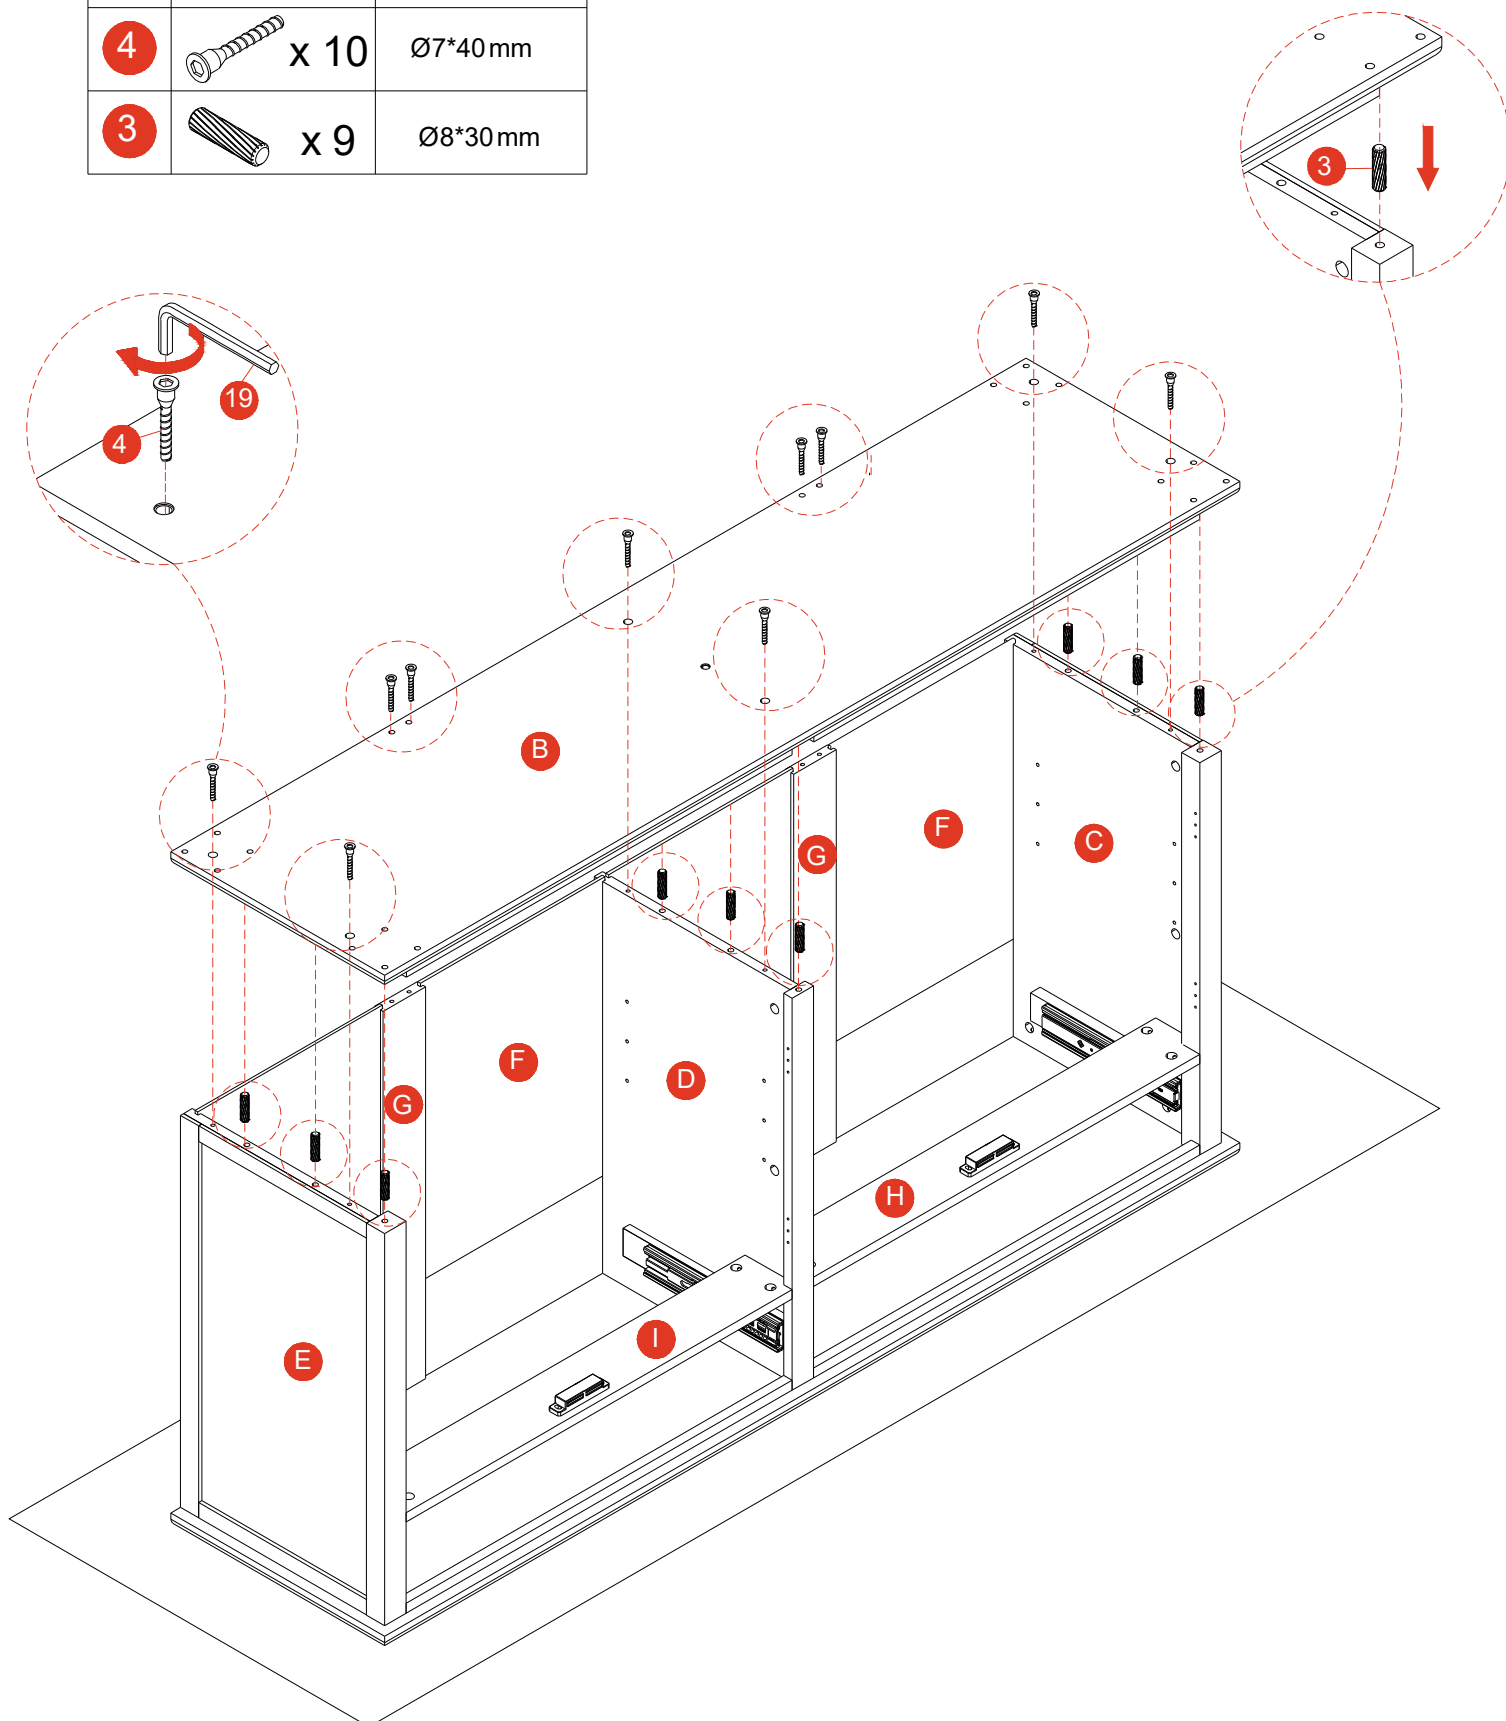

Step 11


- 1.Connect (U) with (B),tighten (16) with (19)
- 2.Screw (V) into (B) by hand as picture shown


19	 x 1	Allen key
13	 x 16	Ø6*12mm

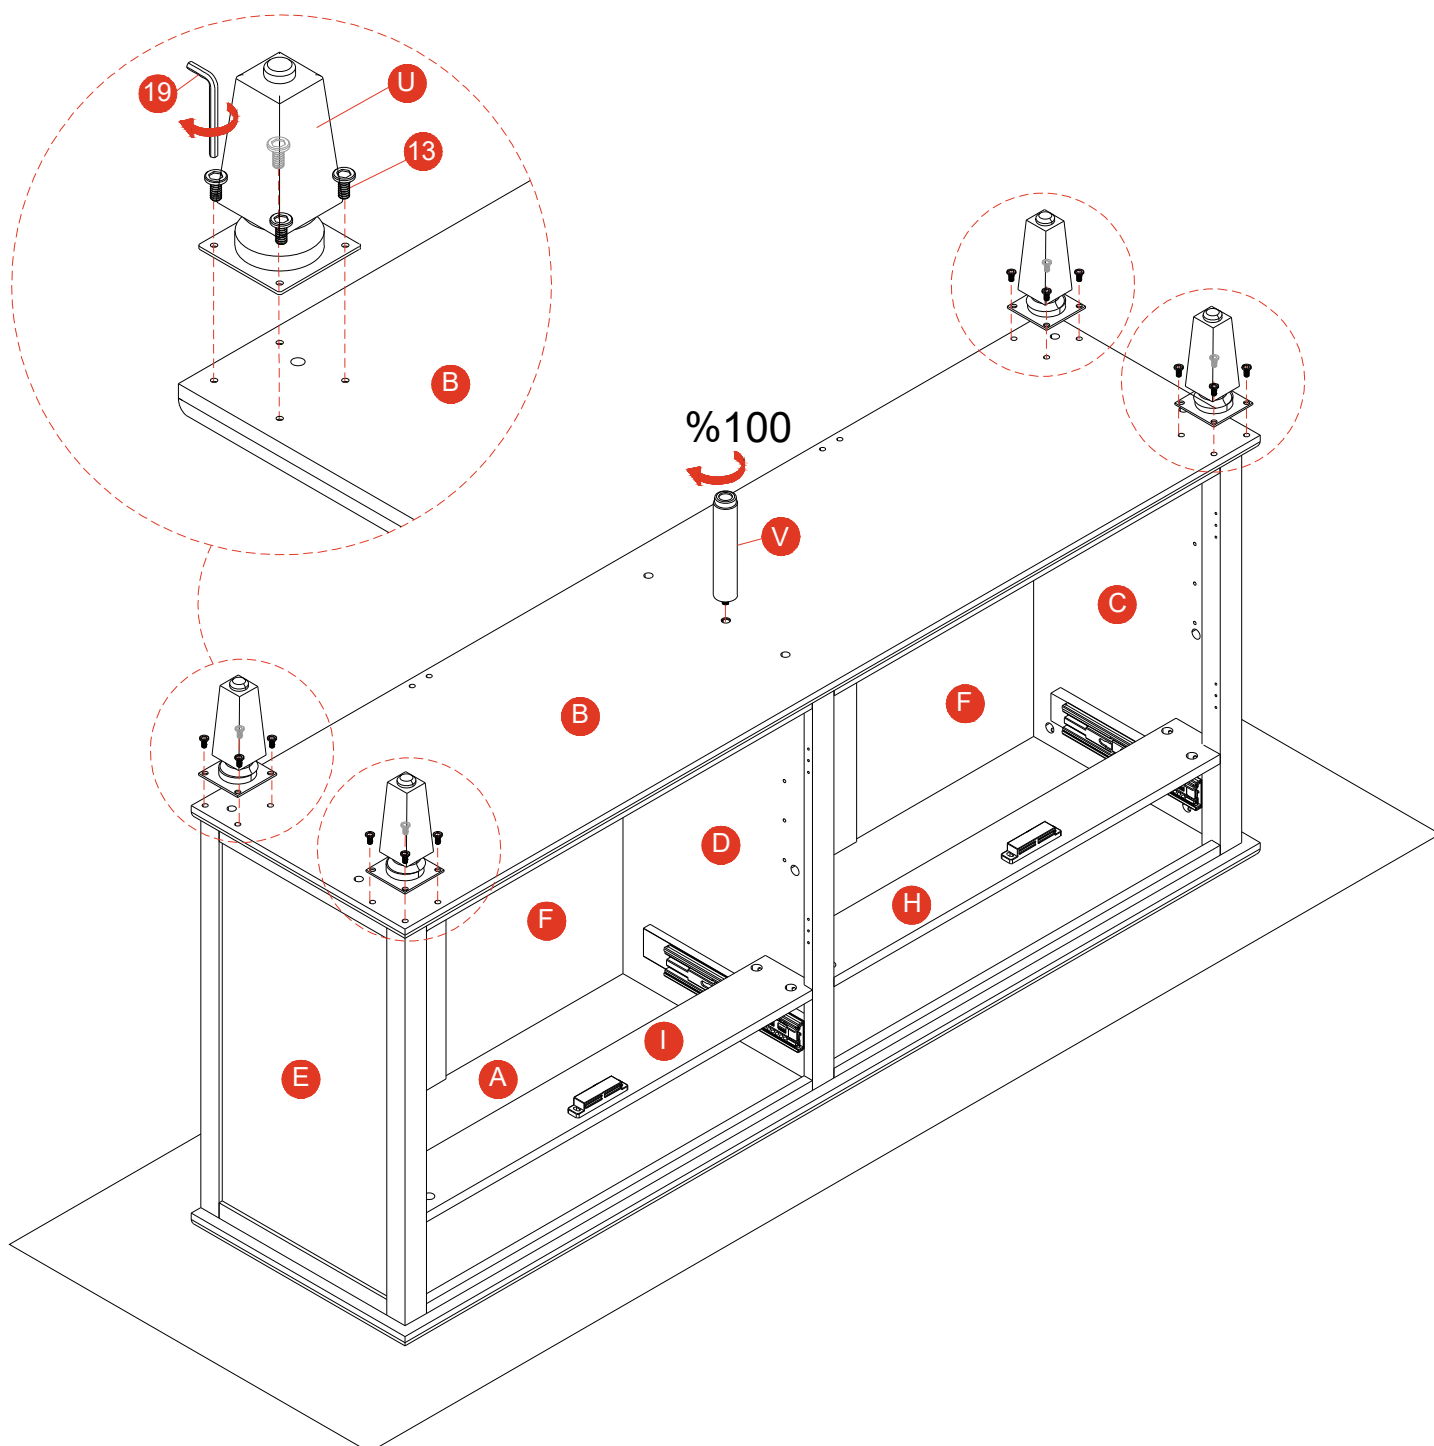

Step 12


Connet (P&R),(Q&R),(T&R) with (17),tighten (17) with (18)

18	 x 1	Screwdriver
17	 x 12	Ø4*30mm

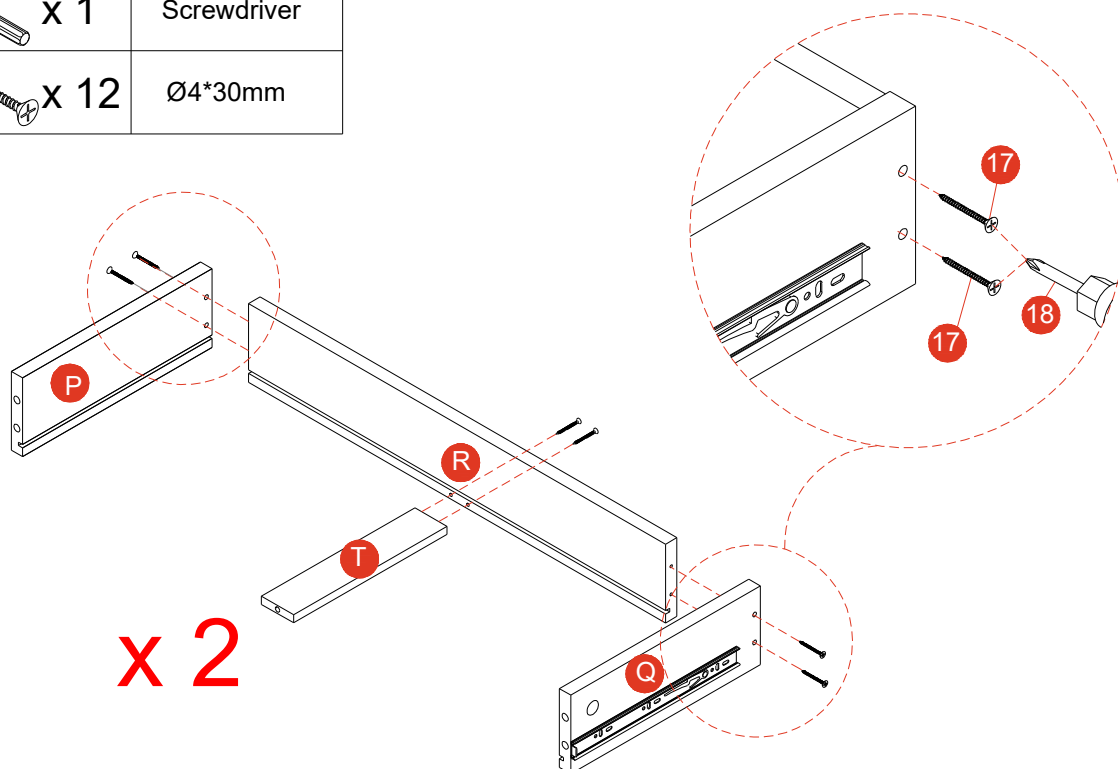


Step 13


Slide in (S) into the groove

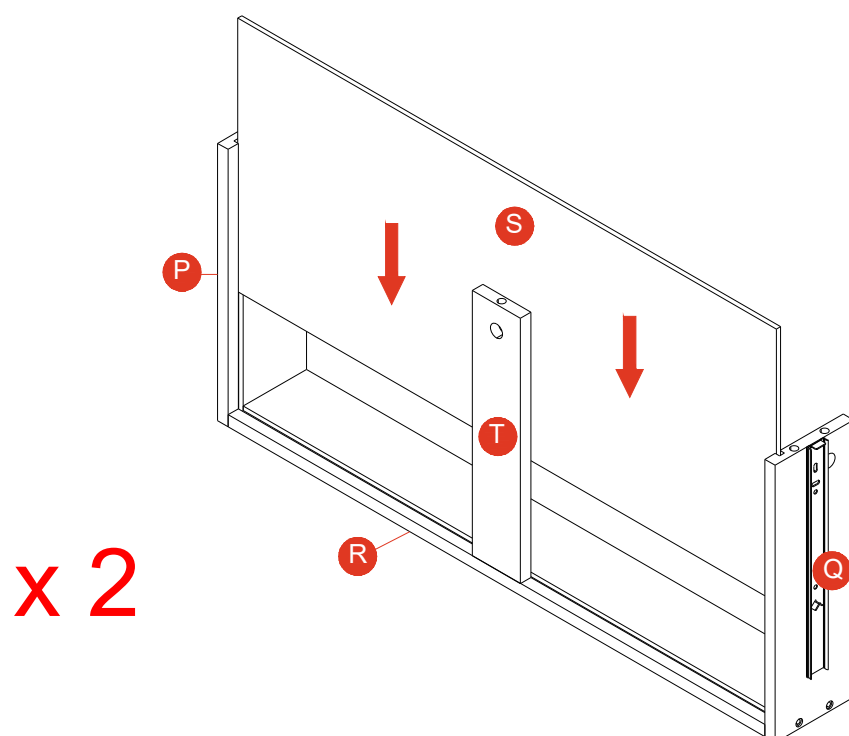

Step 14


Tighten (1) into the corresponding hole of (O)
Attach (14) with (7),tighten (1&7) with (18)


18	 x 1	Screwdriver
1	 x 6	M6*35mm
7	 x 4	Ø4*20mm
14	 x 4	Handle

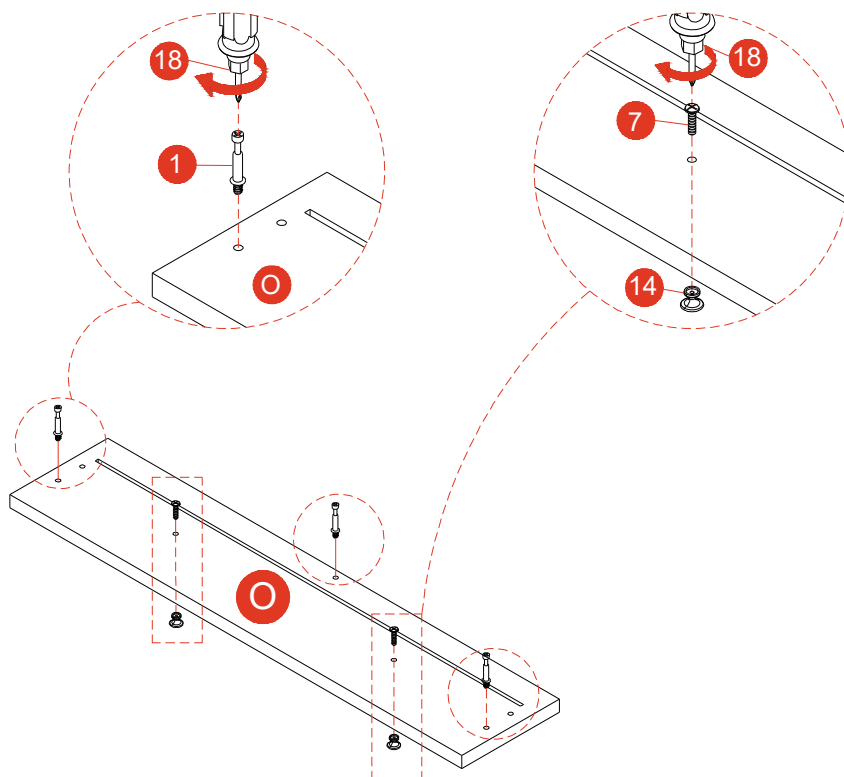

Step 15


Insert (3) into (P&Q) by hand
Connect (O) to the prepared drawer body.
Insert (2) into the corresponding hole of (P&Q&F).Then
tighten (2) with (18),cover (2) with (6)


18	 x 1	Screwdriver
2	 x 6	M15*12mm
3	 x 4	Ø8*30mm
6	 x 6	Sticker

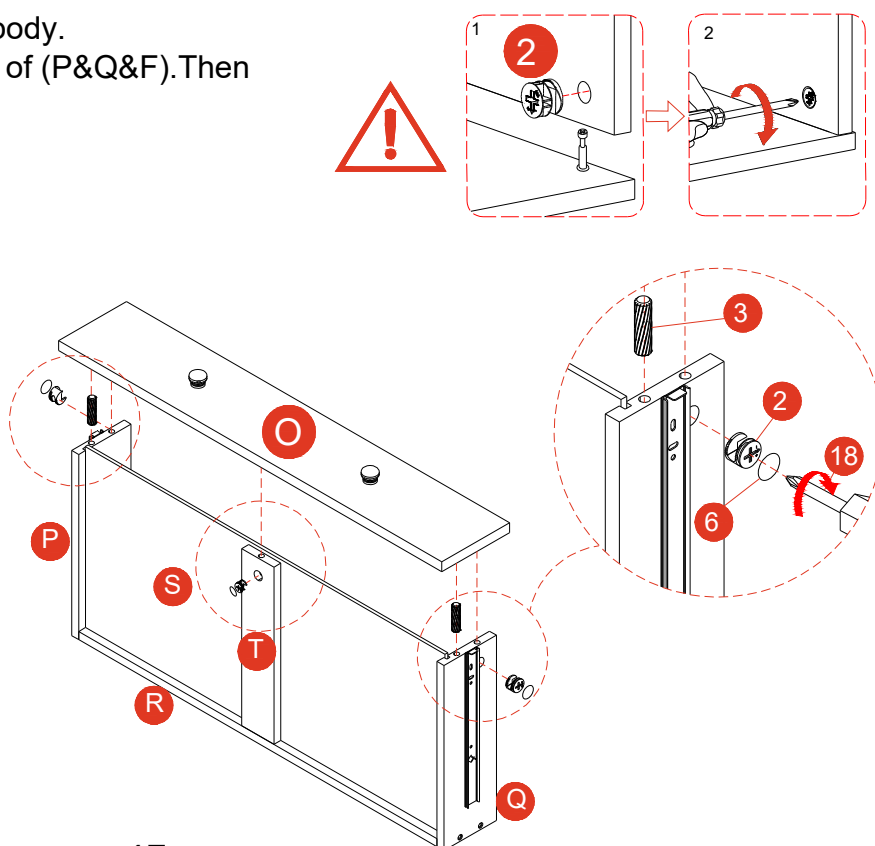

Step 16

Attach (9) with (15)
Attach (21) with (7)
Tighten (7&15) with (18)


18		x 1	Screwdriver
15		x 4	Ø3.5*14mm
9		x 2	Door catch
7		x 4	Ø8*20mm
21		x 2	Handle

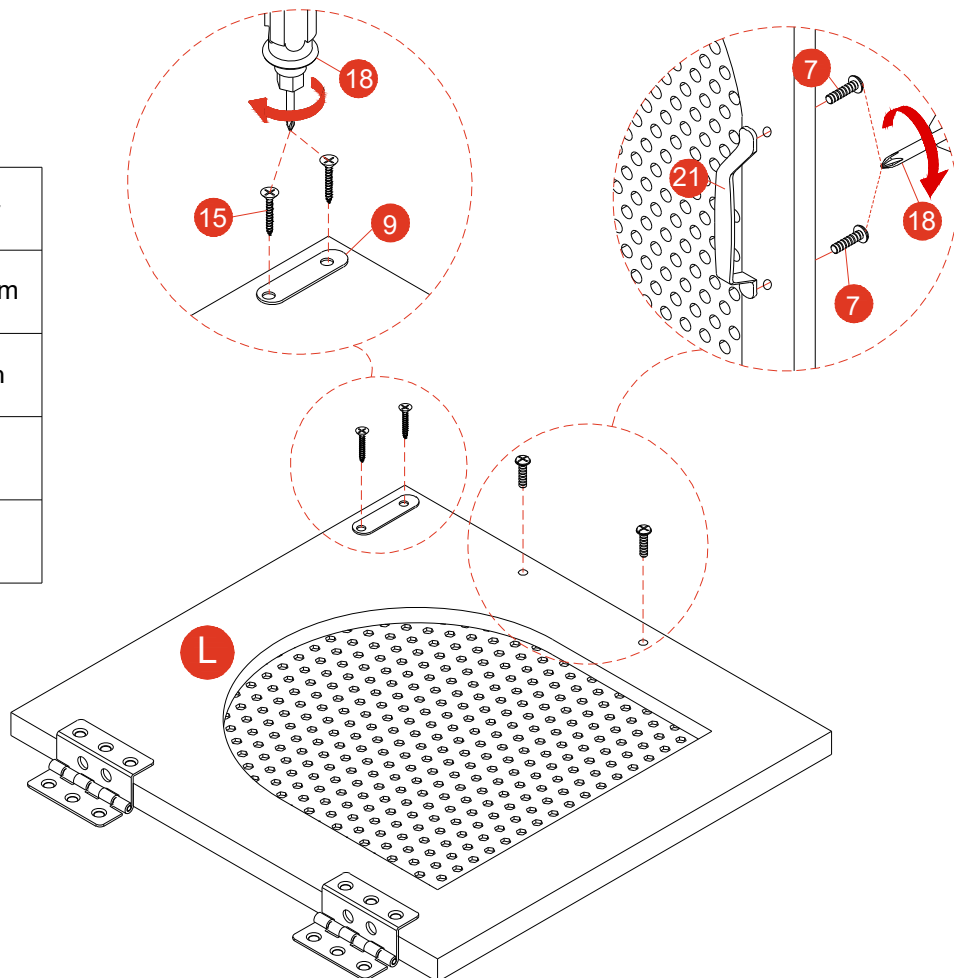


x 2

Step 17

Attach (9) with (15)
Attach (21) with (7)
Tighten (7&15) with (18)


18		x 1	Screwdriver
15		x 4	Ø3.5*14mm
9		x 2	Door catch
7		x 4	Ø8*30mm
21		x 2	Handle

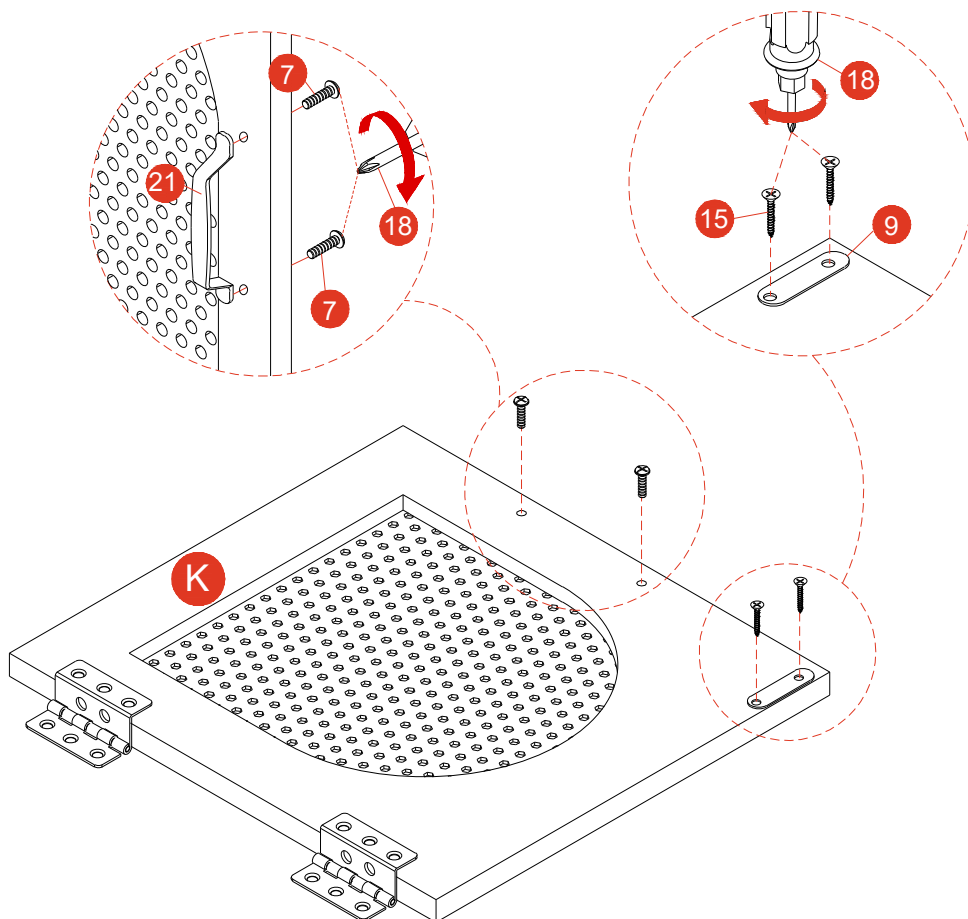


x 2

Step 18


Use (5) to attach (L) to (E) and left side of (D), tighten (5) with (18)

18		x 1	Screwdriver
5		x 12	Ø3*16mm

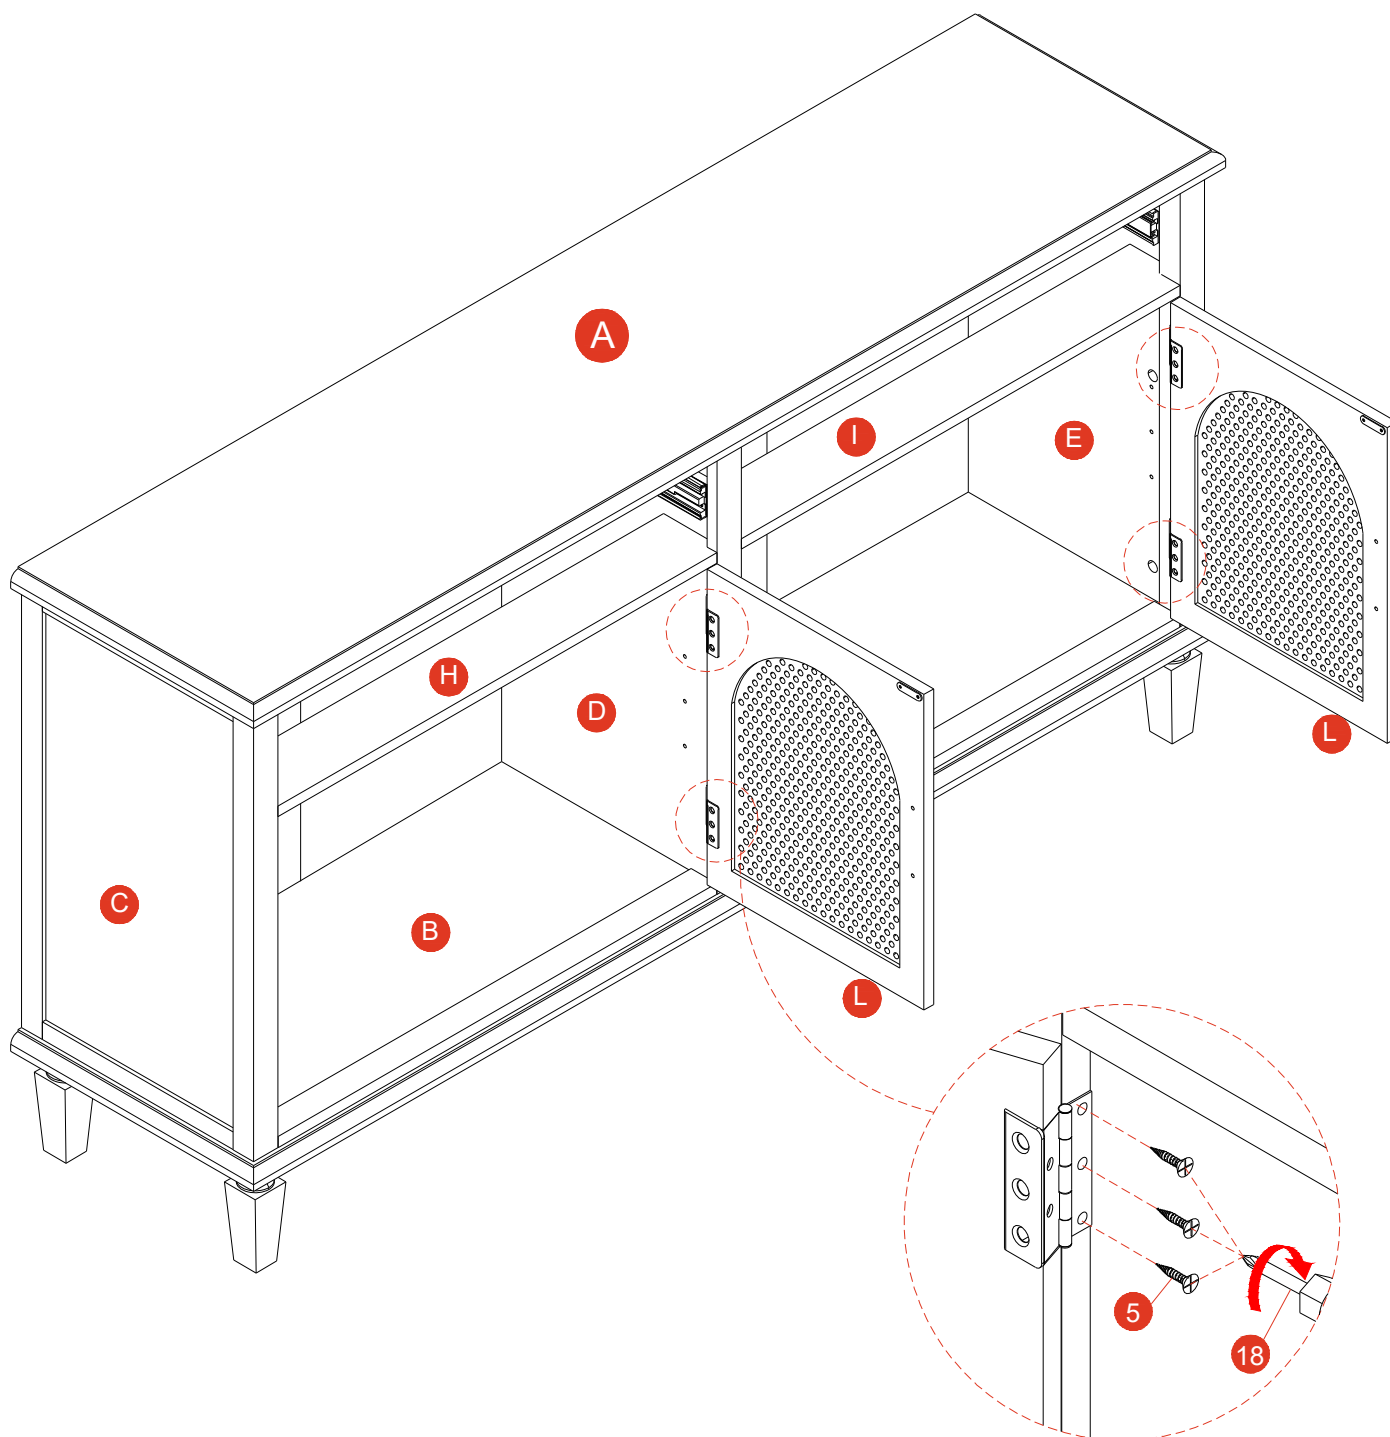


Step 19

Use (5) to attach (K) to (C) and right side of (D), tighten (5) with (18)

18		x 1	Screwdriver
5		x 12	Ø3*16mm




If you find the size of the drawer gap is not the same,
loosen the screw a little, up and
down adjustment

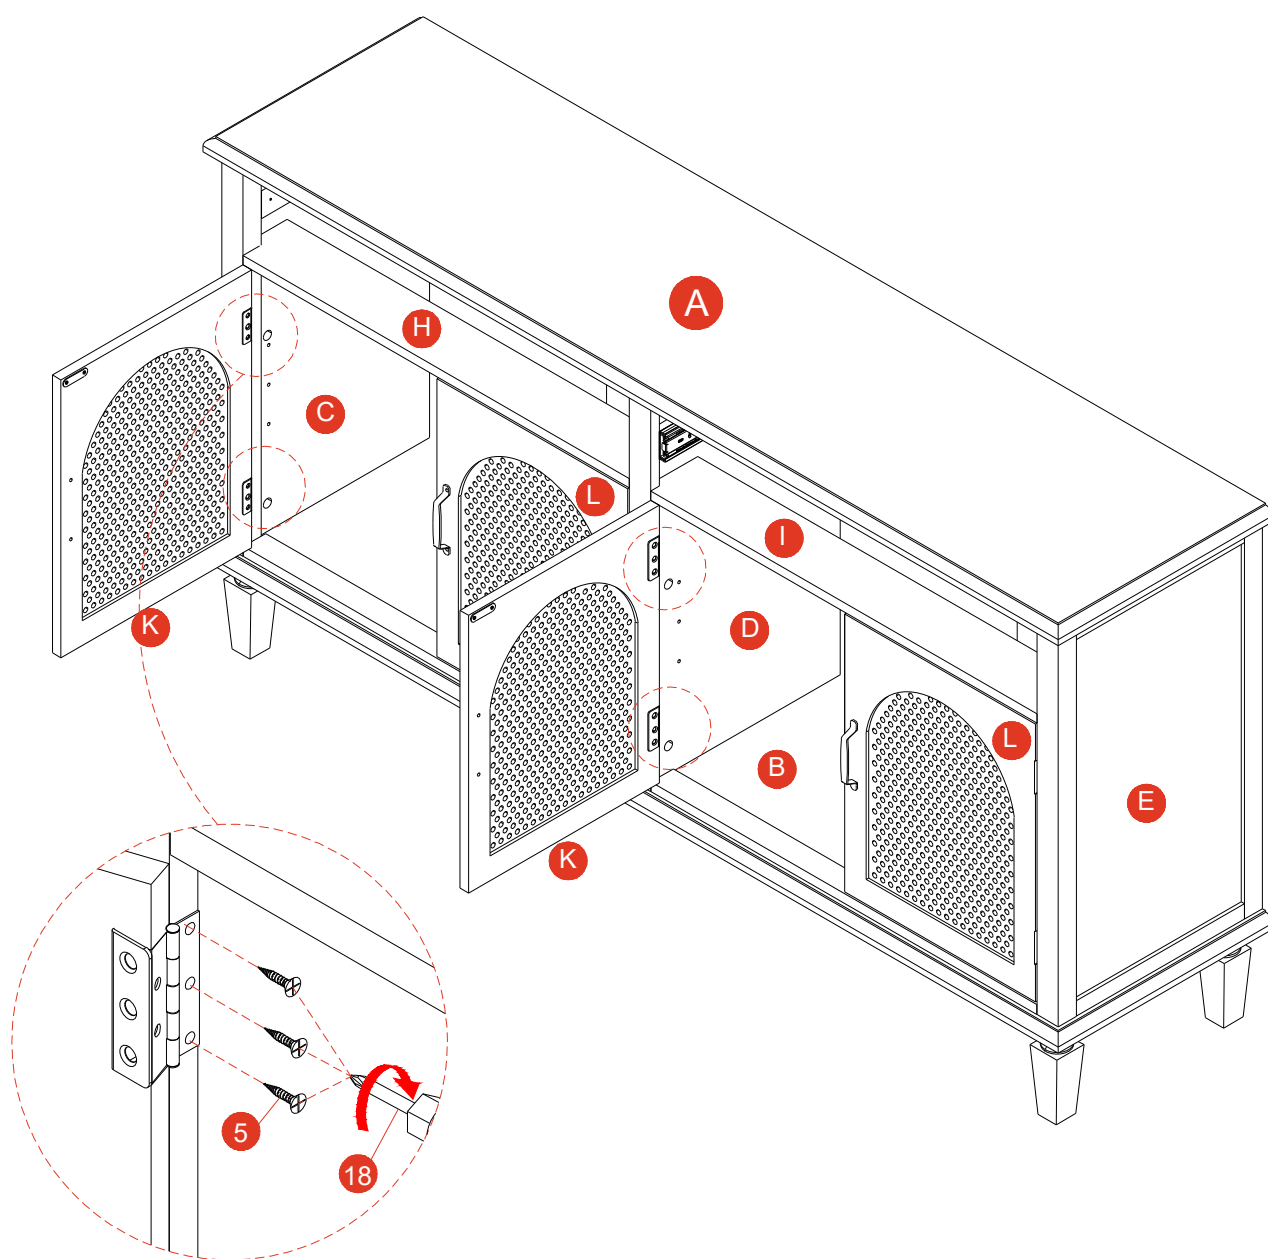





Step 20

Insert (8) into the corresponding holes, attach () to (8)

8	 x 8	Shelf support
---	---	---------------

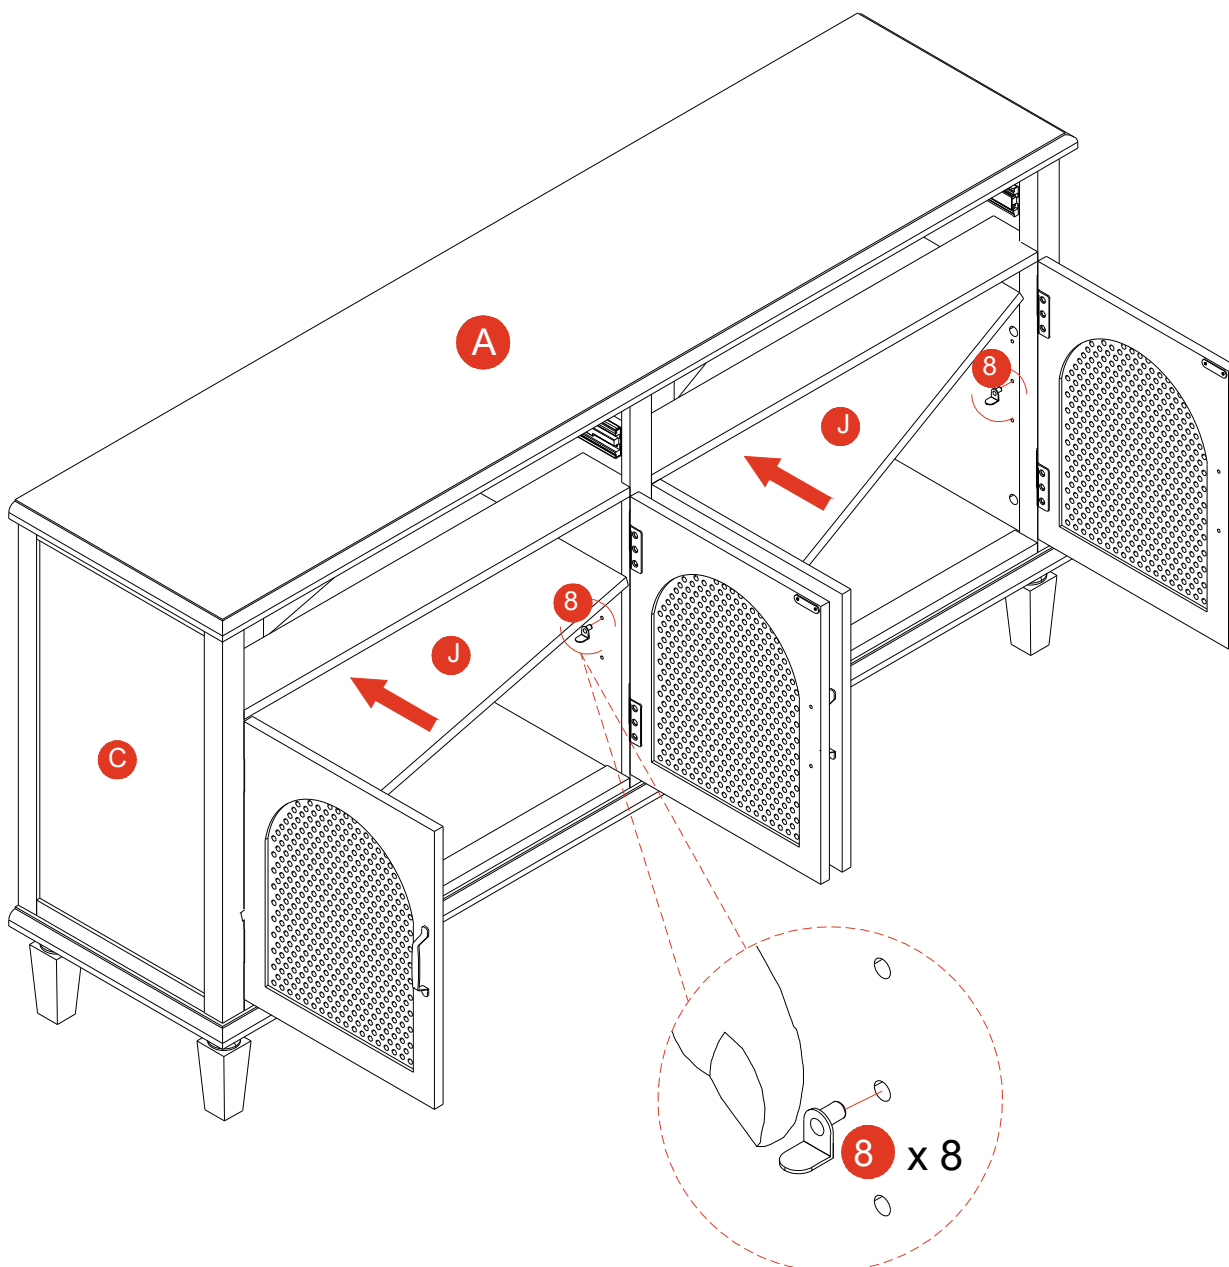

Step 21

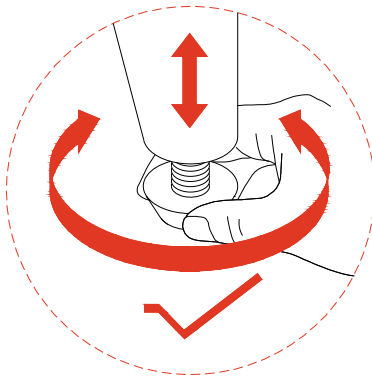
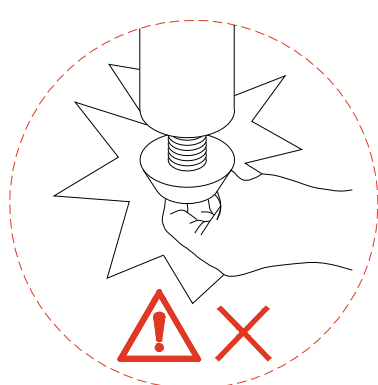
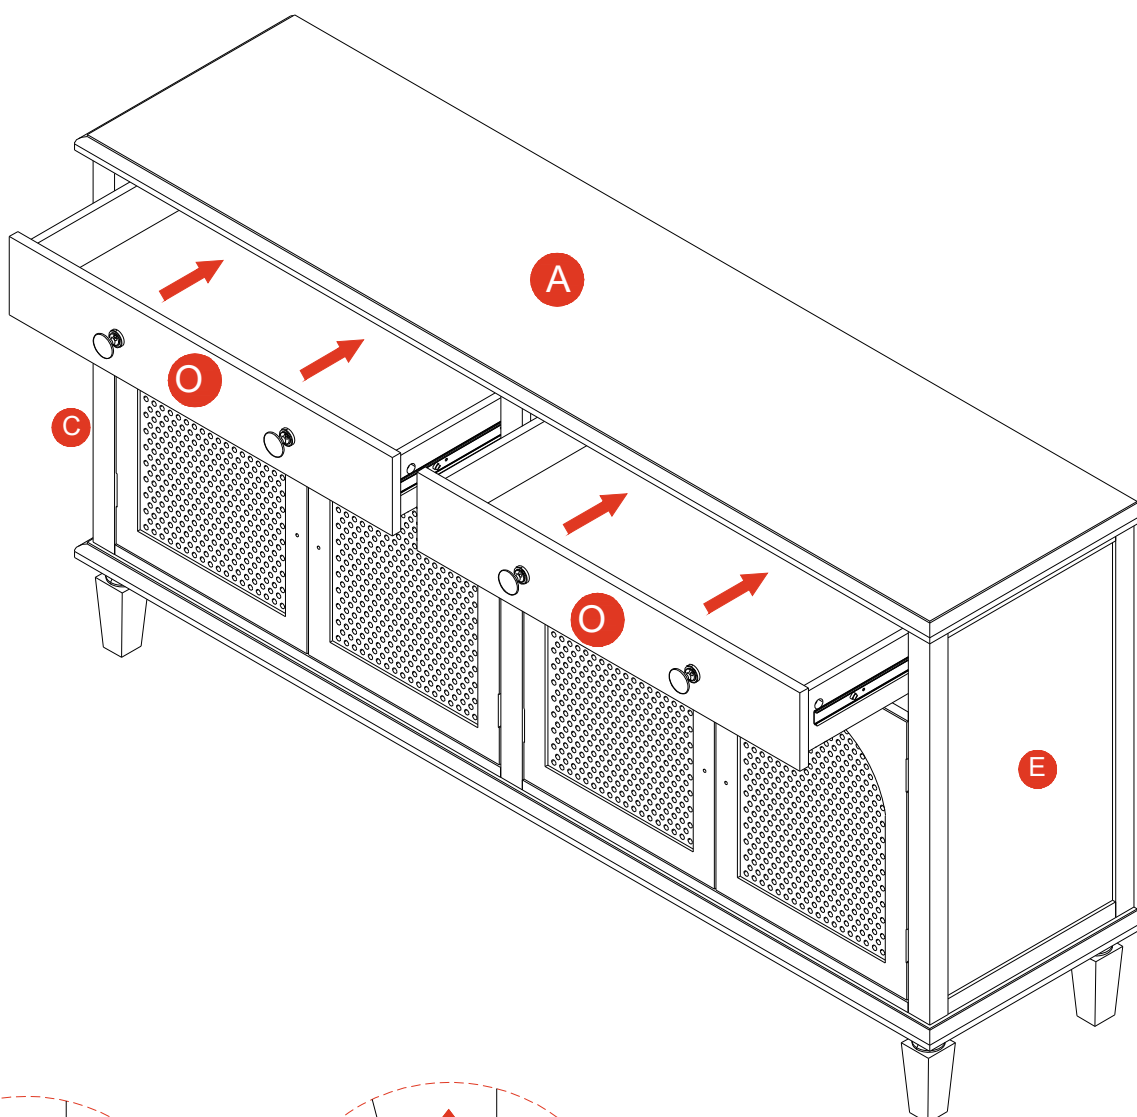
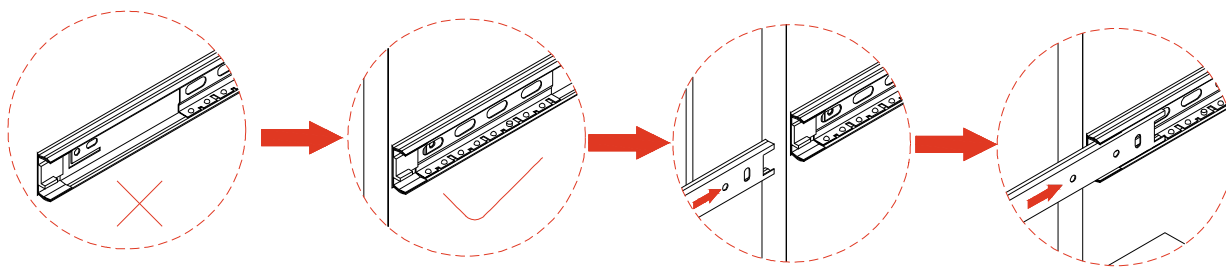


Attention:
Before the next step, adjust the feet of the locker to keep it level.

Step 22


Insert (22) into (F) as shown, screw in (15) using (18) and tighten fully.




15	 x 16	Ø3.5*14mm
22	 x 16	Retaining clip
18	 x 1	Screwdriver

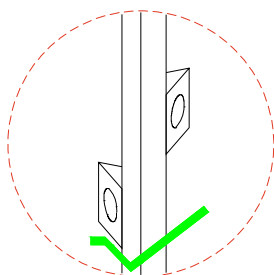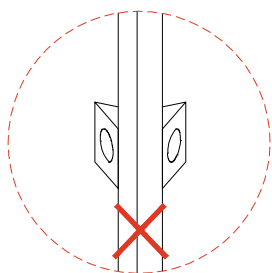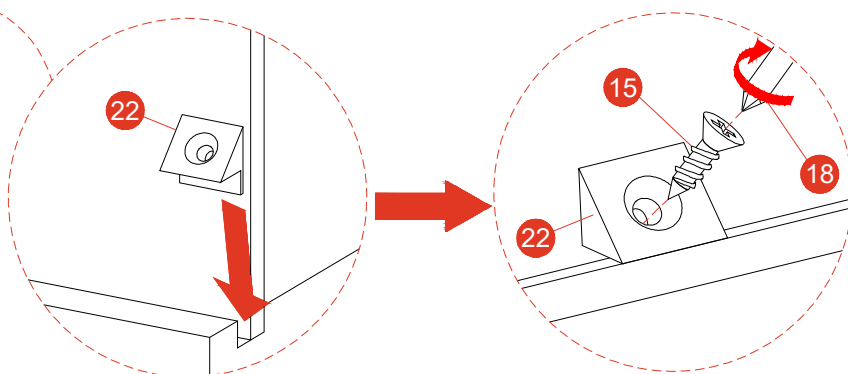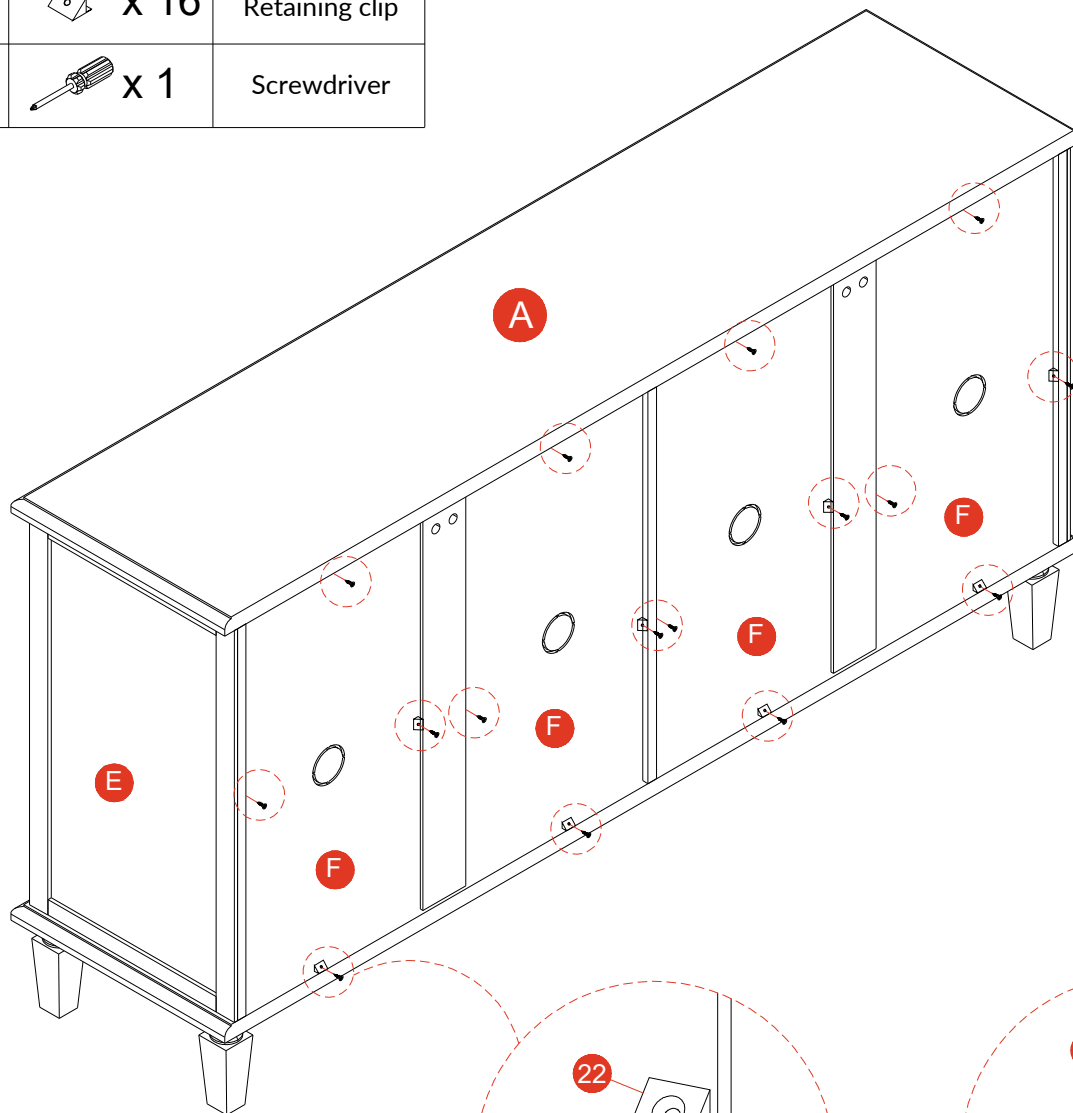

Step 23

Use screws (15) to attach part (11) with screwdriver (18) as picture shown.



18		x 1	Screwdriver
11		x 2	Plastic buckle
15		x 4	Ø3.5*14mm

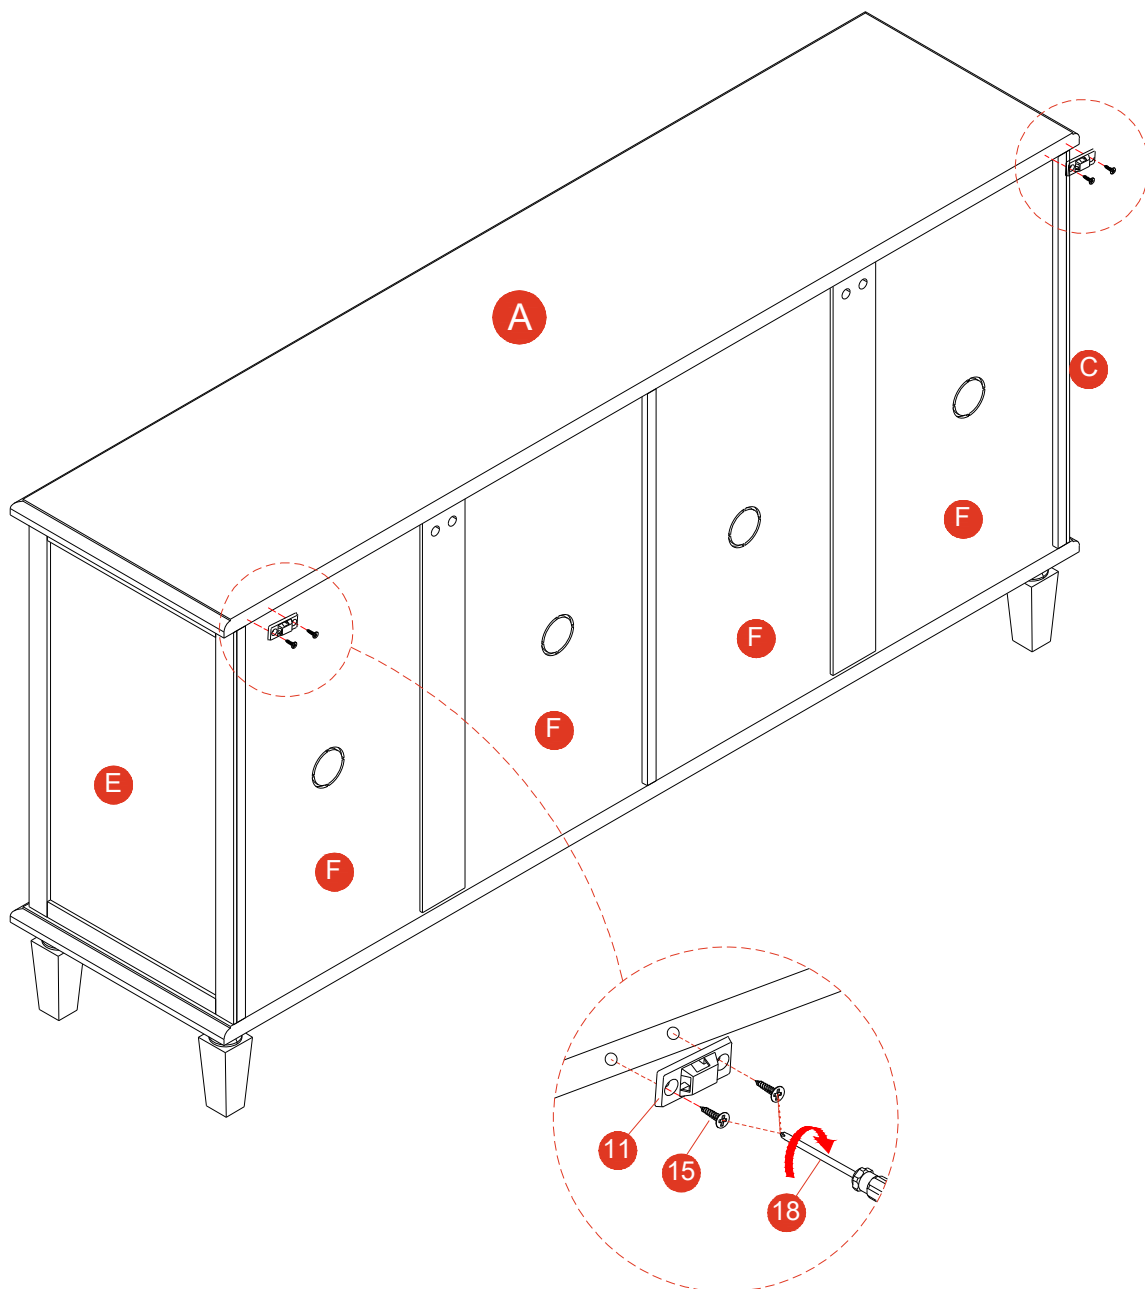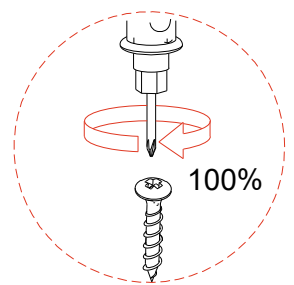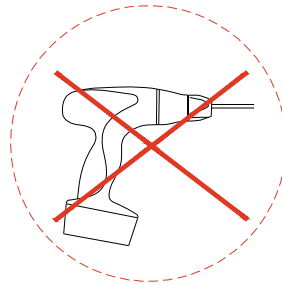


Step 24

Install Anti-tip device(11) to the wall in this step


18		x1	Screwdriver
11		x 2	Plastic buckle
17		x 4	Ø4*30mm
16		x 4	Expansion pipe

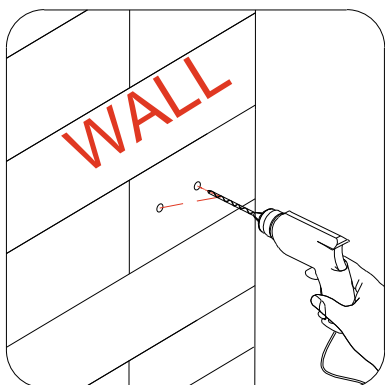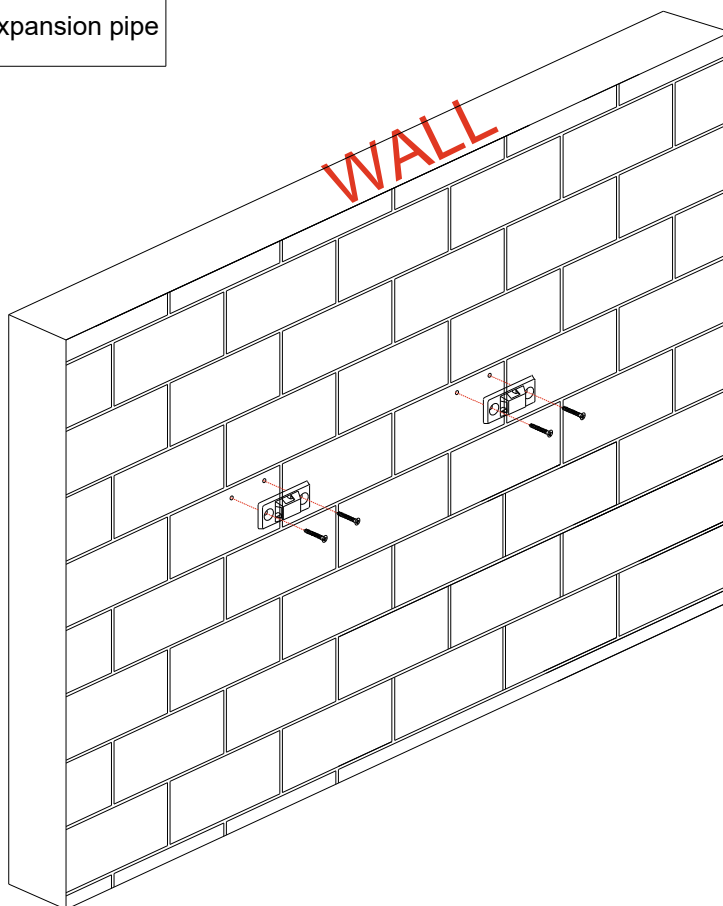

1. Drill a hole in the wall with an electric drill.

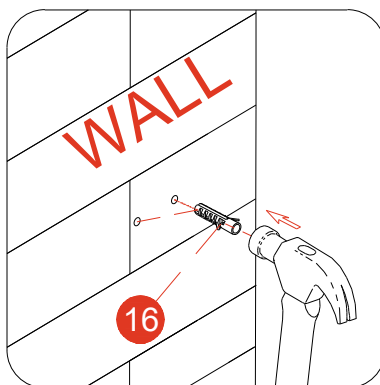

2. Tap the plastic wall anchor into the hole with a hammer.

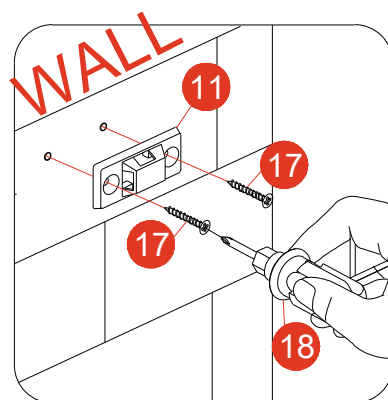

3. Secure the Anti-tip device (11) to the wall with screws (17)

Step 25

Let the part (12) pass through the both parts (11) and pull tightly.

12



x 2

Plastic belt

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



***This is a permanent label.
Do not remove!***

