





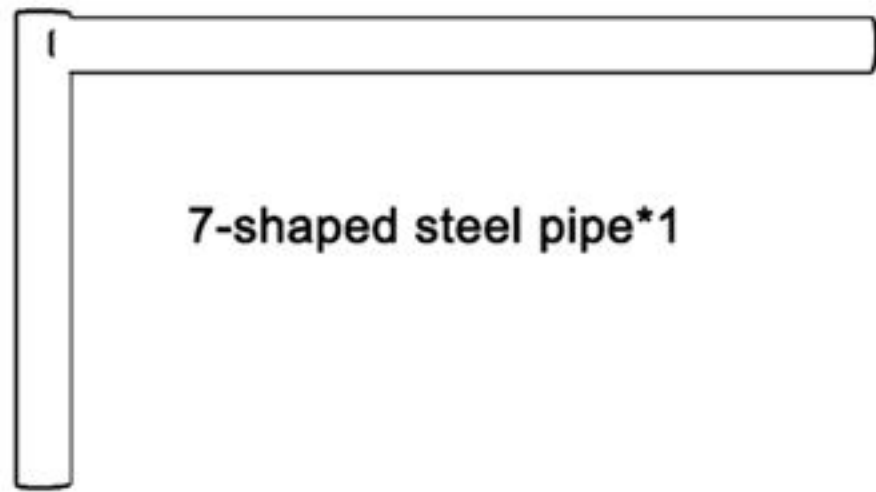
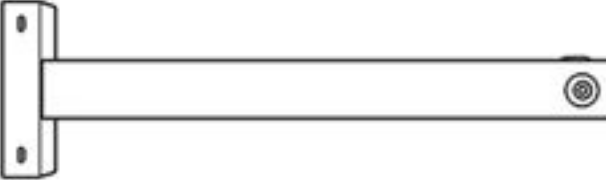
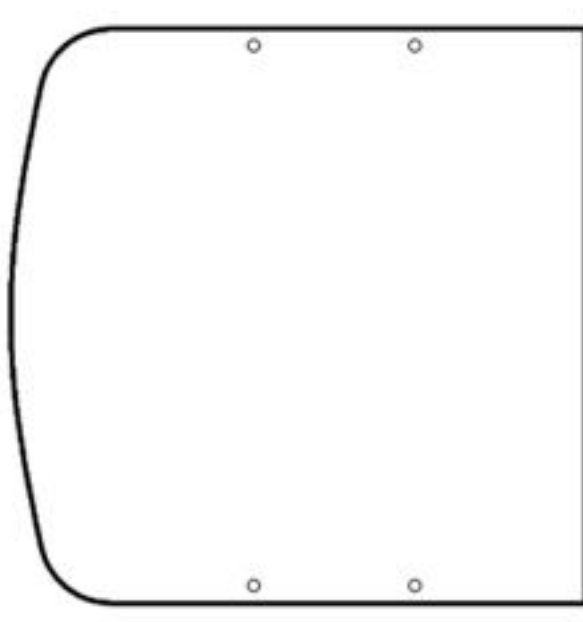
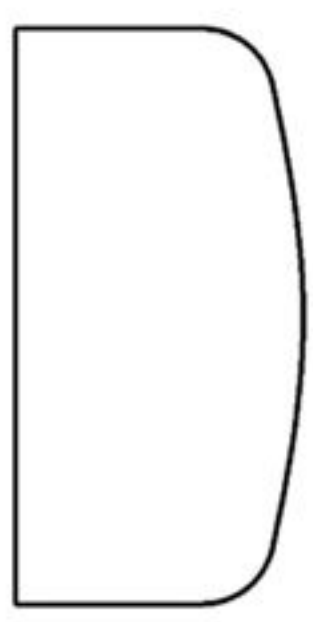


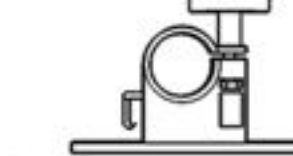

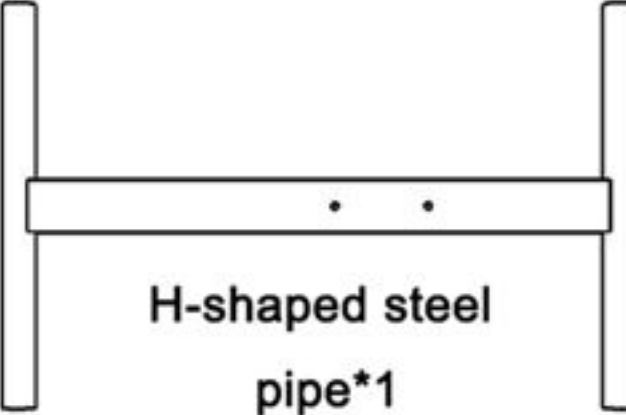
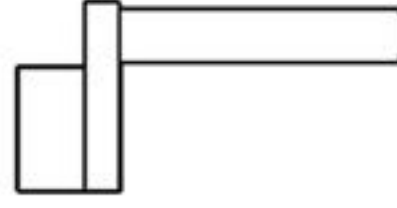
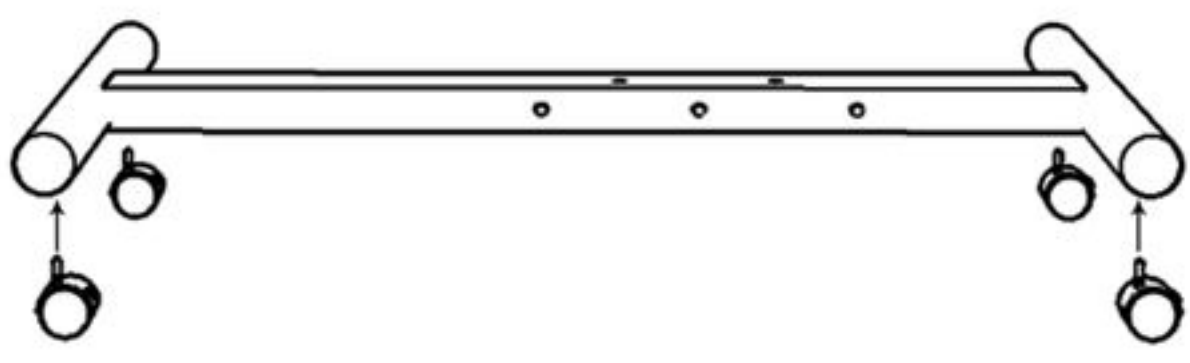
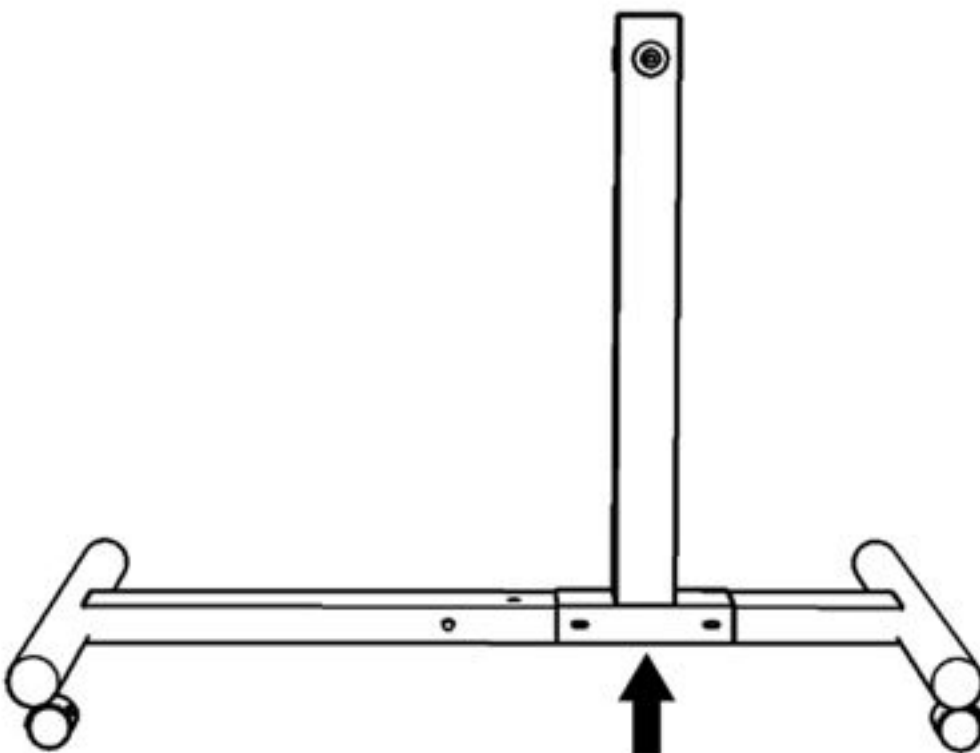
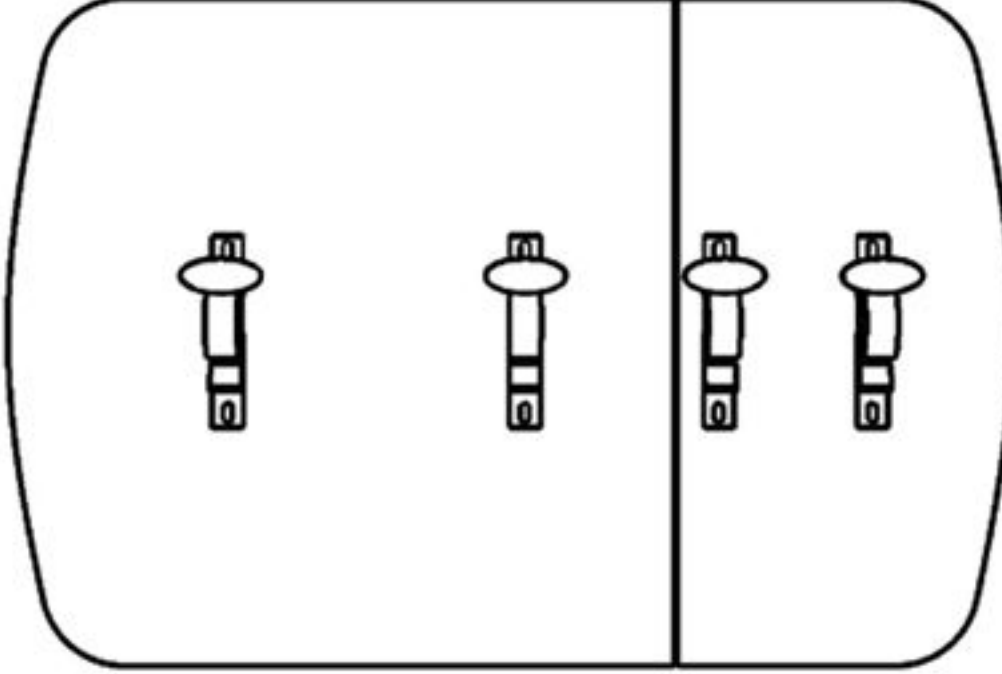
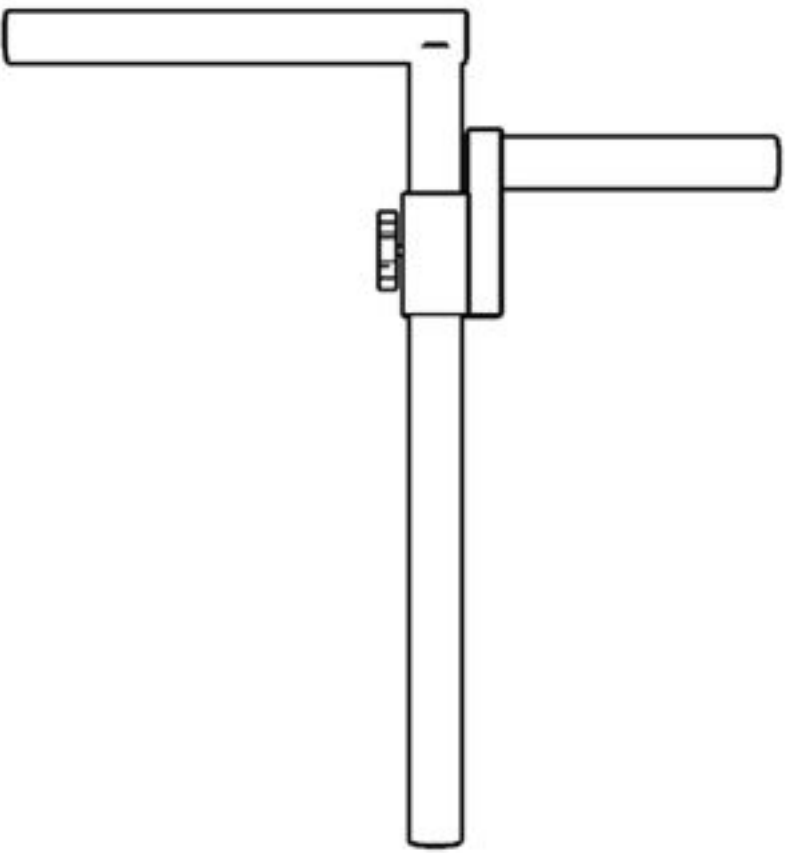
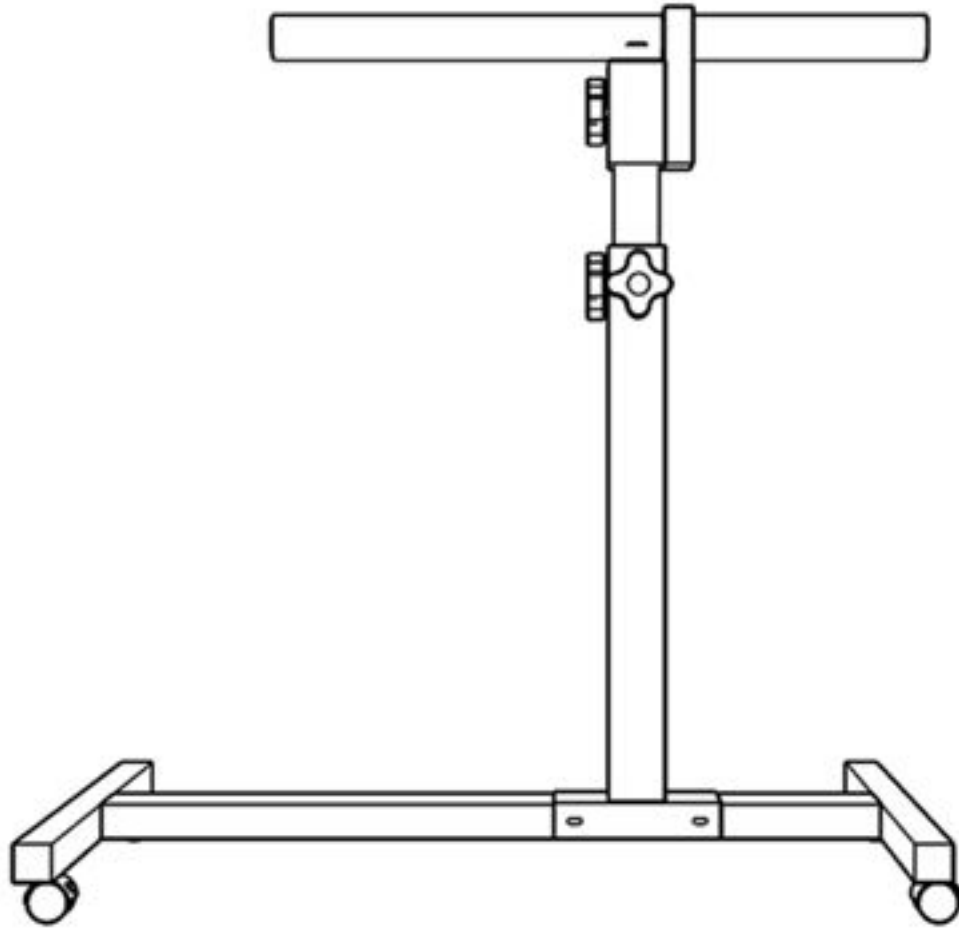
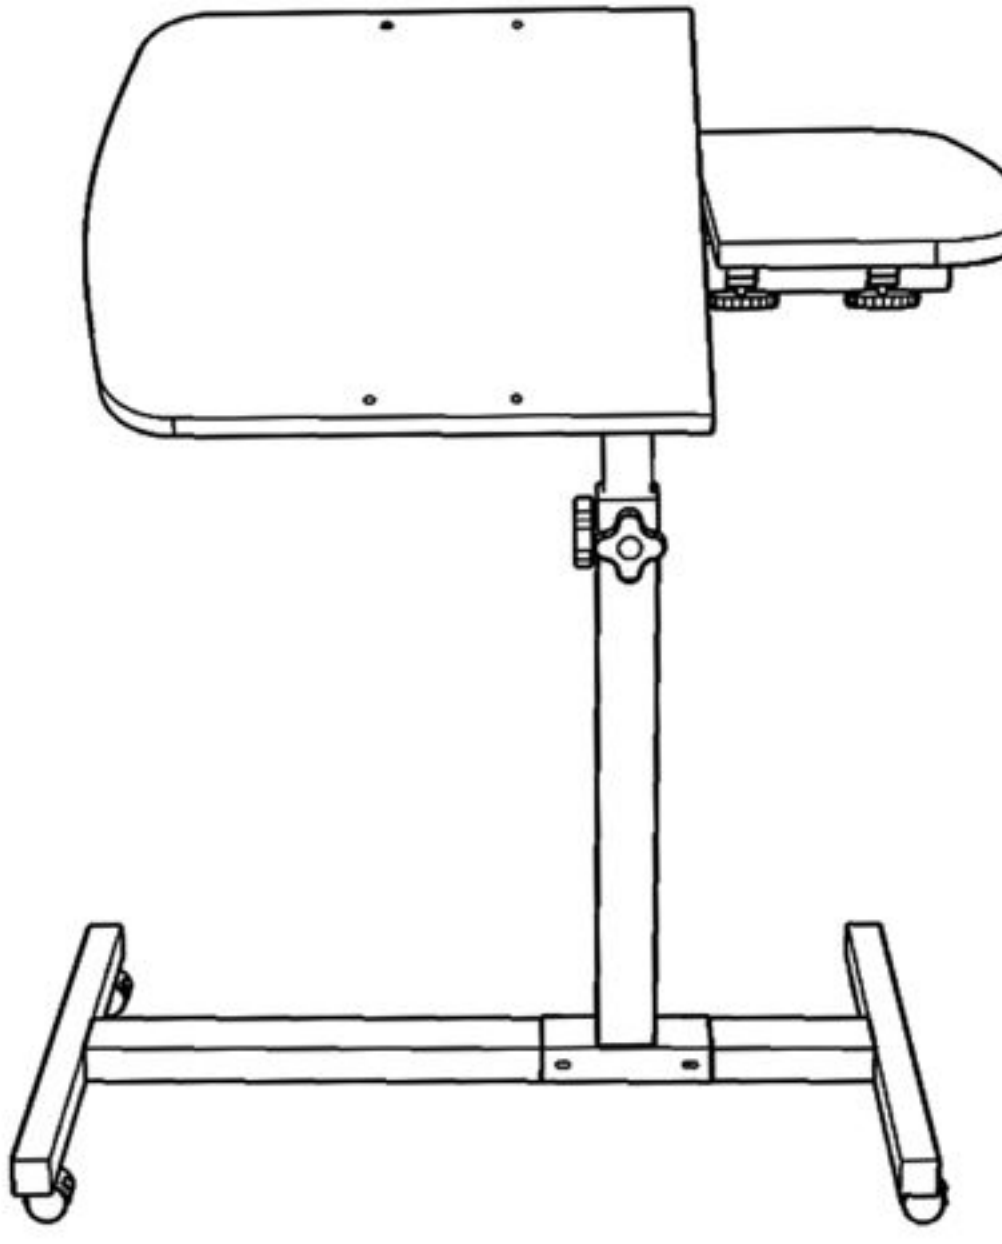
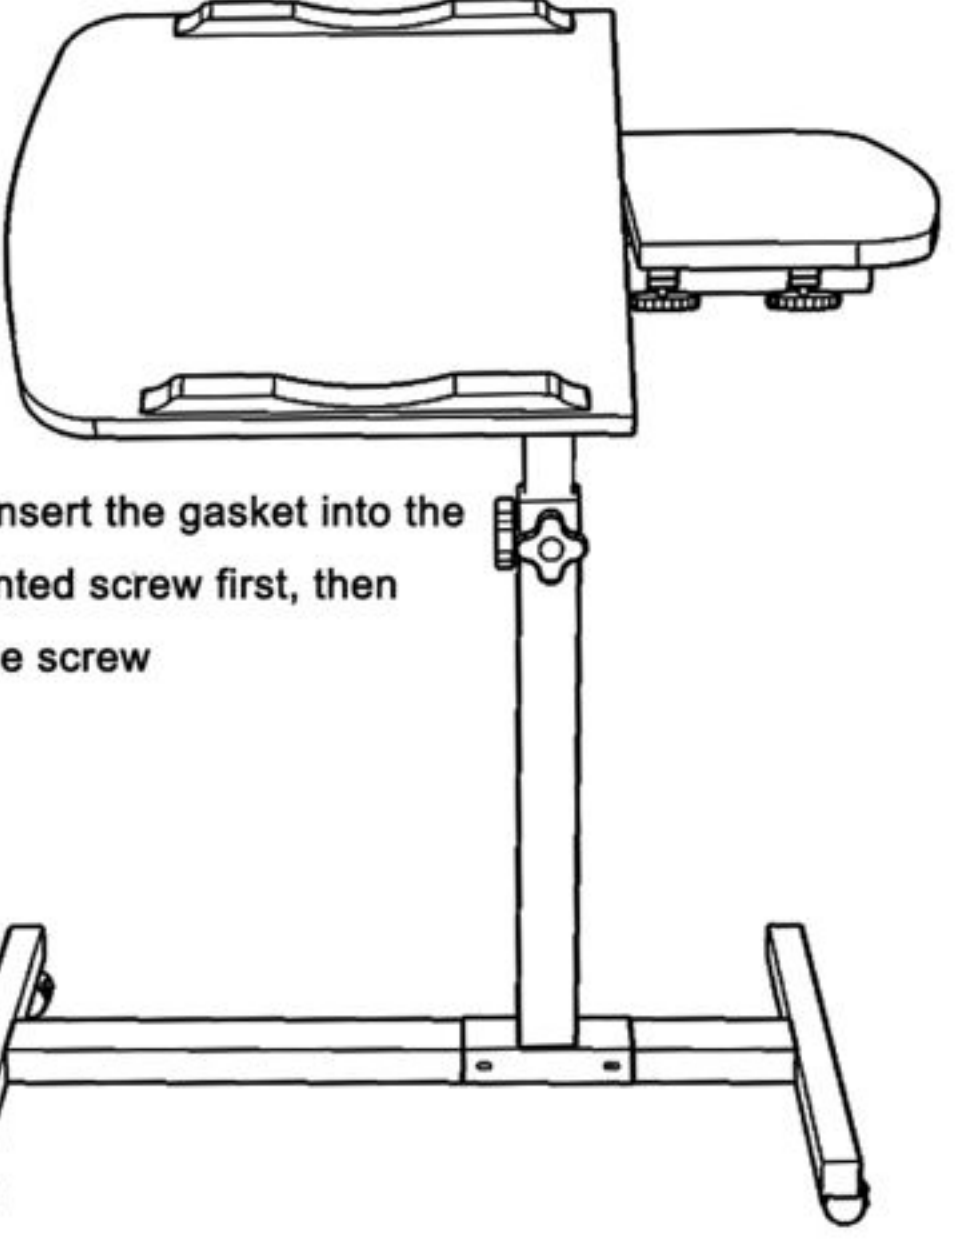


Assembly Instruction For QYD0020

Accessories List

 6*12 flat head screw*8  6*35 flat head screw*8  6*65 flat head screw*8  4*16 pointed screw*8  Screws nut*2  Gasket*4	 7-shaped steel pipe*1  Support rod*1	 Desktop board*1  Mouse pad*1
 Desktop baffle*2  Wheels*4  Q-shaped bracket*4  Adjustment button*3	 H-shaped steel pipe*1  Pipe-shaped bracket*1	

Installation Steps

1  Install the wheels: Install the wheel to the H-shaped round steel pipe with a wrench	2  Note: The connection between the H-shaped steel pipe and the support rod must be screwed into a 6*35 flat head screw from the bottom (pointed by the arrow). Install the support rod: fix it with 2pcs 6*65 flat head screws and nuts, and screw in a 6*35 flat head screw from the bottom	3  Install the Q-shaped bracket: fix it with 6*12 flat head screws (the shortest flat head screw)
4  1.Put the pipe-shaped bracket on the 7-shaped steel pipe and fix it with the adjustment button  2.Insert the shelf fixed in the previous step into the base assembled in the second step, and fix it with the adjustment button	5  Put the QQ bracket on the steel pipe	6  NOTE: Insert the gasket into the blue pointed screw first, then screw the screw Install the desktop baffle: Secure with blue pointed screws and spacers