


TARRY SPINDLE LEG WOOD NIGHTSTAND

DESIGN # SFV1331

Assembly Instructions

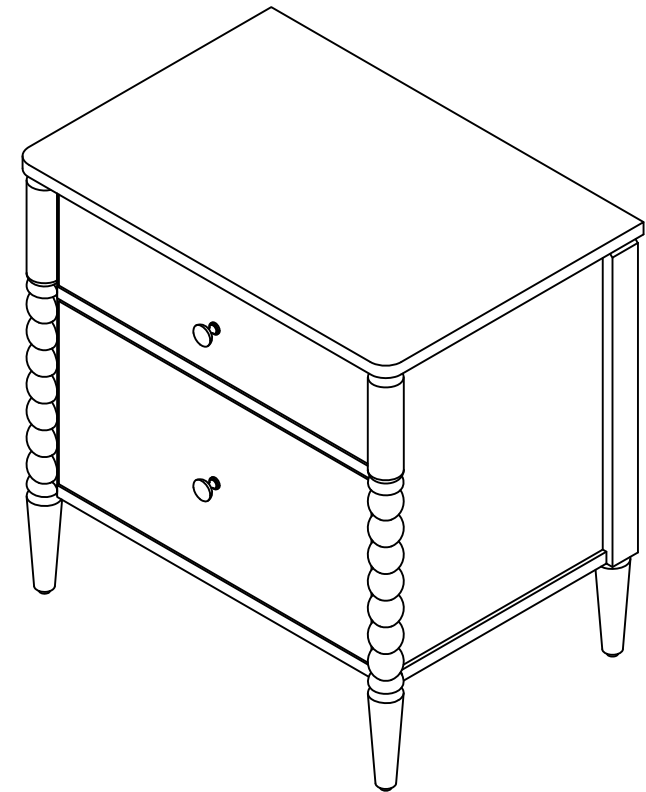

Need help?

Feel free to contact us via email or call
if you have any specific questions!

contact us:

cs@safavieh.com
866-422-9070

SAFAVIEH
C O U T U R E

Thanks for bringing Safavieh Couture into your home

Every thing we make is incredibly simple to set up, including your new nightstand. You won't need any additional tools.

Parts List

A x 1
TOP PANEL



B x 1
LEFT ASSEMBLY



C x 1
RIGHT ASSEMBLY



D x 3
FRONT RAIL




E x 2
BACK RAIL



F x 1
BACK PANEL




G x 2
SMALL DRAWER FRONT



H x 4
SMALL DRAWER LEFT




I x 6
SMALL DRAWER RIGHT




J x 6
SMALL DRAWER BACK




K x 6
DRAWER BASE




L x 6
LARGE DRAWER FRONT




M x 6
LARGE DRAWER LEFT



N x 6
LARGE DRAWER RIGHT



O x 6
LARGE DRAWER BACK




Hardware List

HW1 x 14
ROUND HEAD SCREW 3x1x13 mm



HW2 x 16
FLAT HEAD SCREW 3x1x32 mm



HW3 x 8
FLAT HEAD SCREW 3x1x19 mm



HW4 x 14
CAMBOLT



HW5 x 14
CAMLOCK




HW6 x 2
HANDLE BOLT



HW7 x 2
HANDLE




HW8 x 20
DOWEL

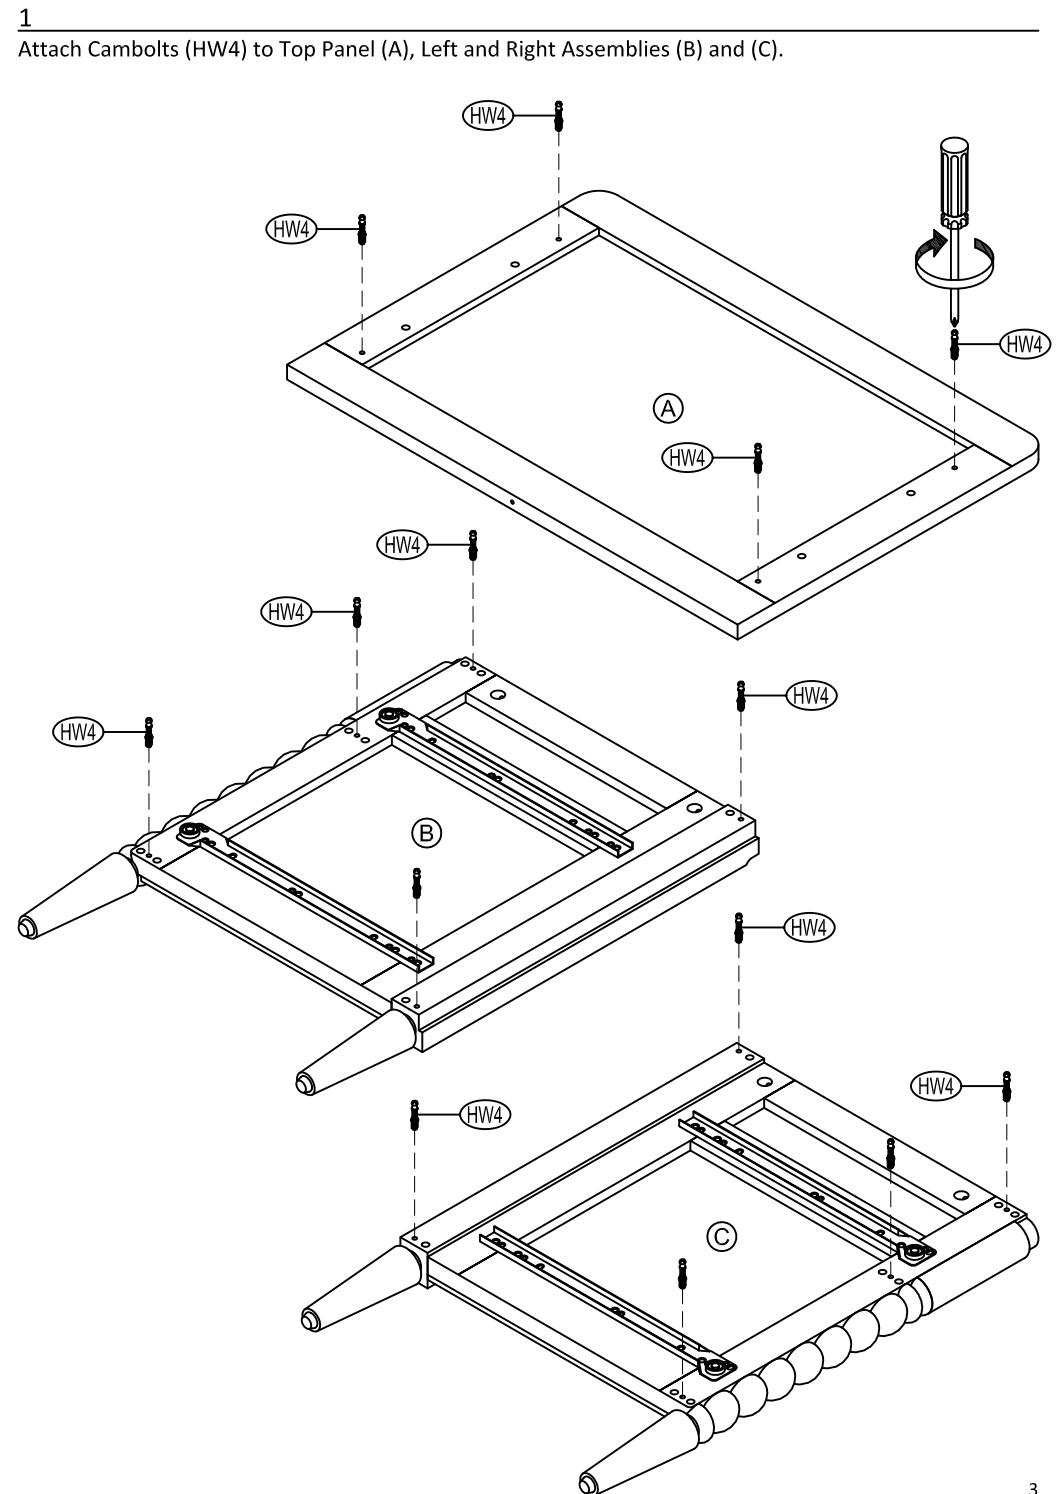


2

Attach Left and Right Assemblies (B) and (C) to Front and Back Rails (D) and (E) using Camlocks (HW5) and Dowels (HW8).

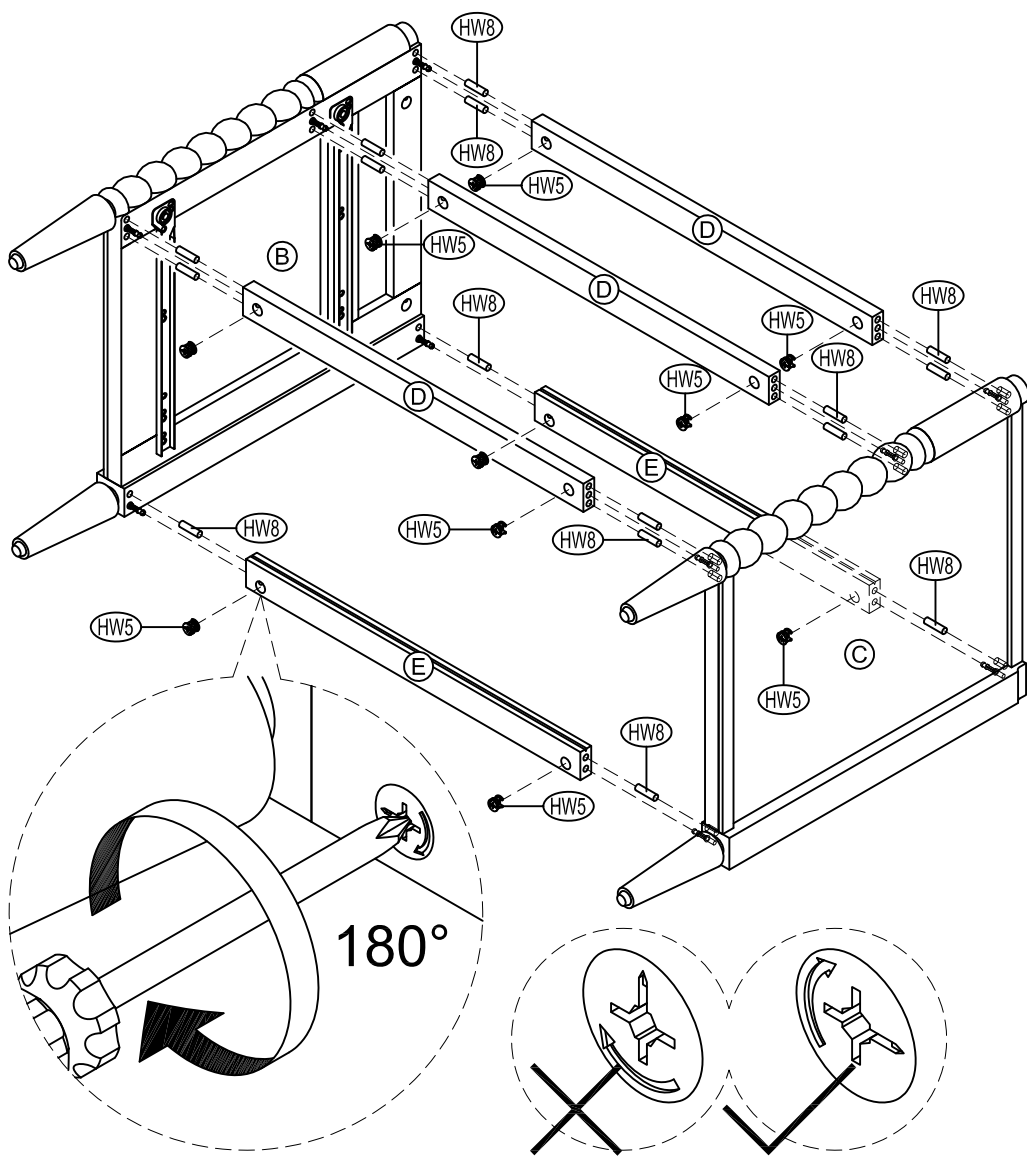


3


Attach Top Panel (A) to unit using Camlocks (HW5) and Dowels (HW8).

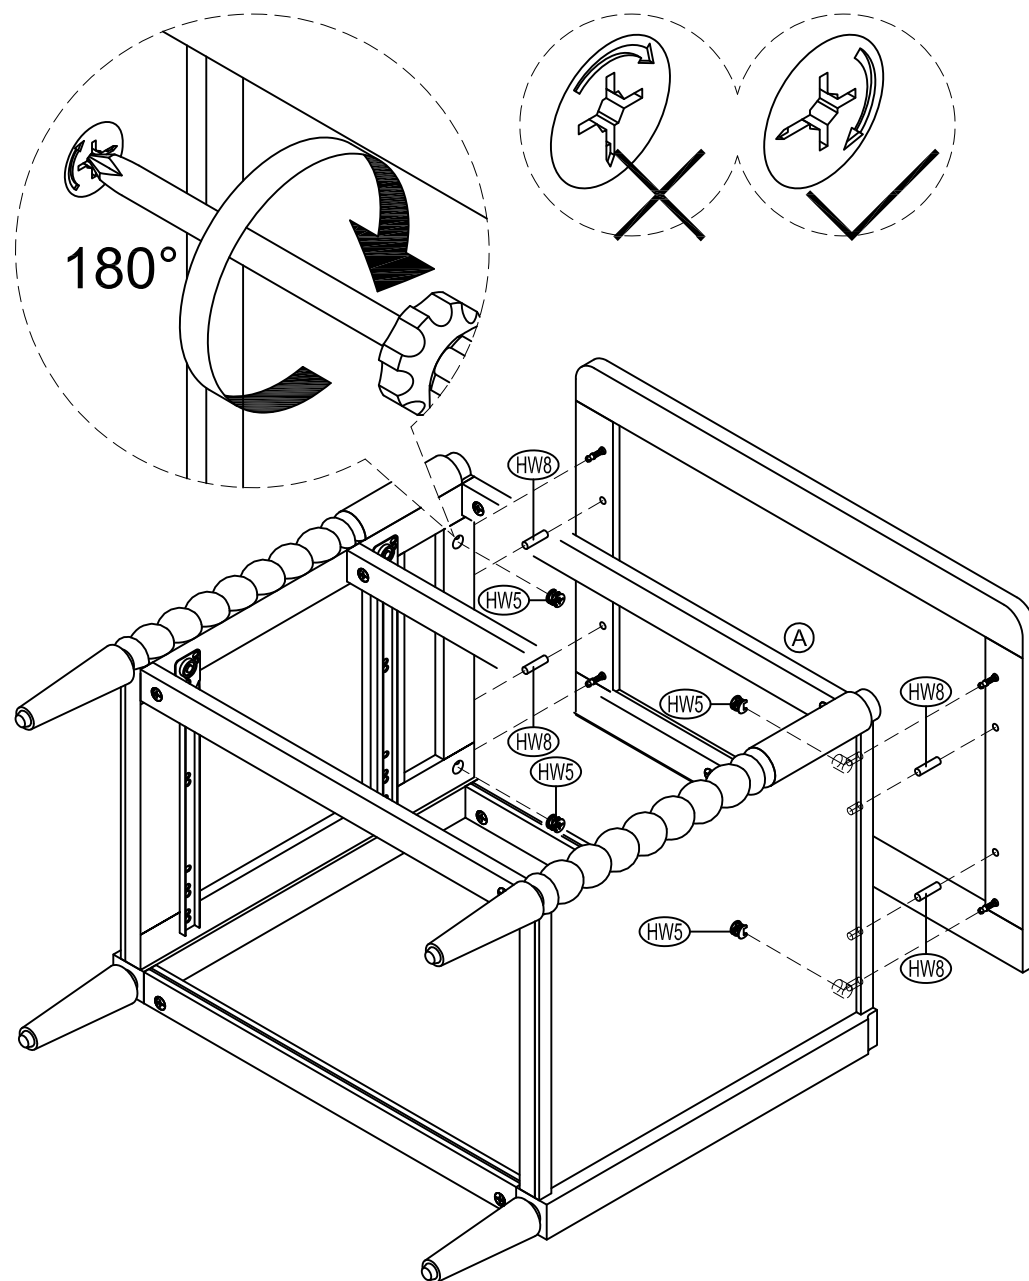


- 4
- Attach Back Panel (F) to unit using Round Head Screw 16 mm (HW1).
Adjust the levelers on the bottom of the legs as needed.

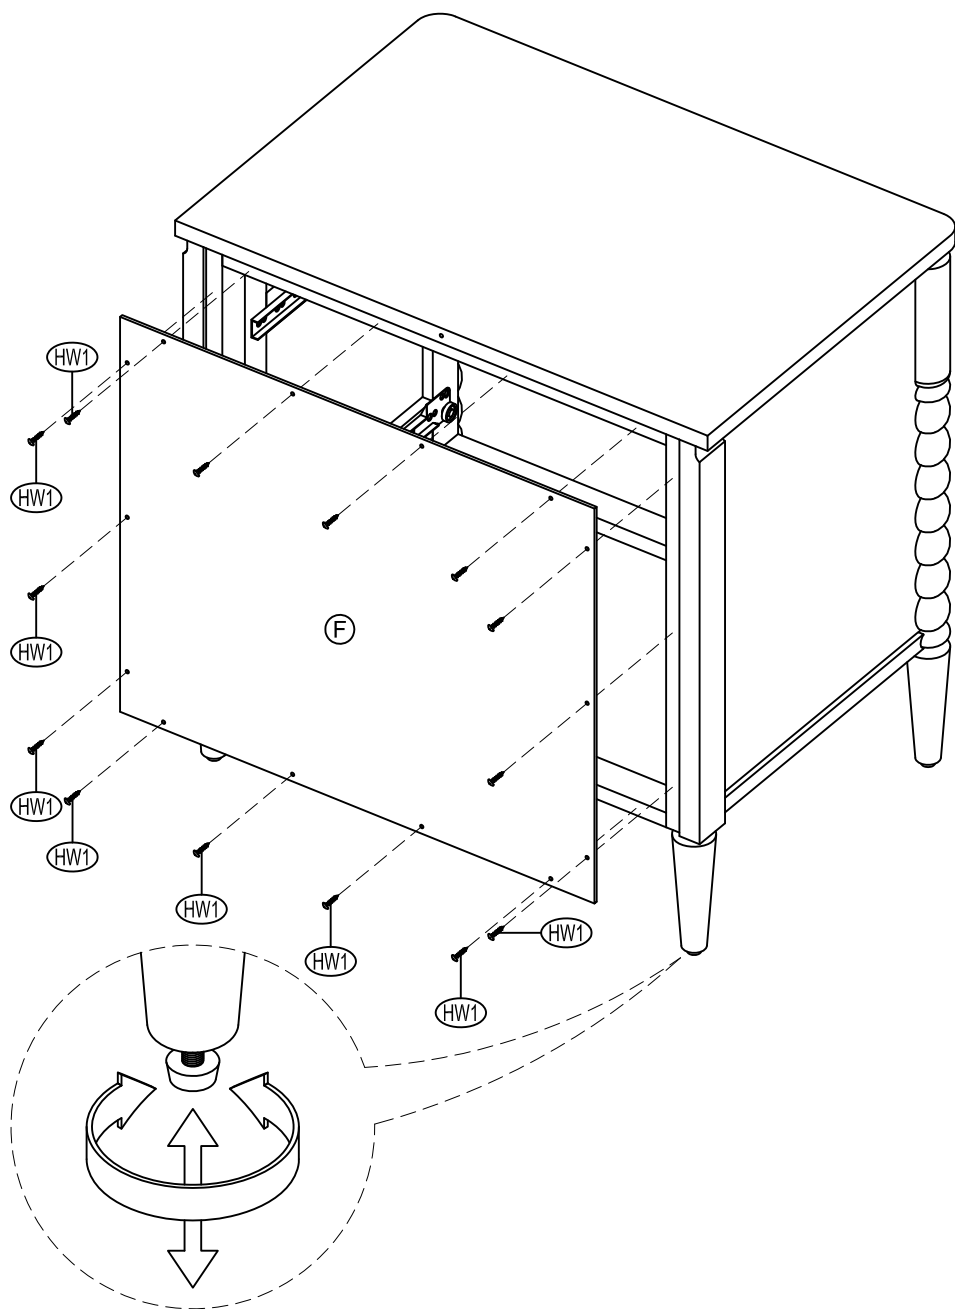


- 5
- Attach Handles (HW7) to Small Drawer Front (G) using Handle Bolts (HW6).
Attach Small Drawer Left and Right (H and I) to Small Drawer Back (J) using Flat Head Screws 32 mm (HW2).
Slide Drawer Base (K) into the groove.
Attach Small Drawer Front (G) to Small Drawer Left and Right (H and I) using Flat Head Screws 32 mm (HW2).

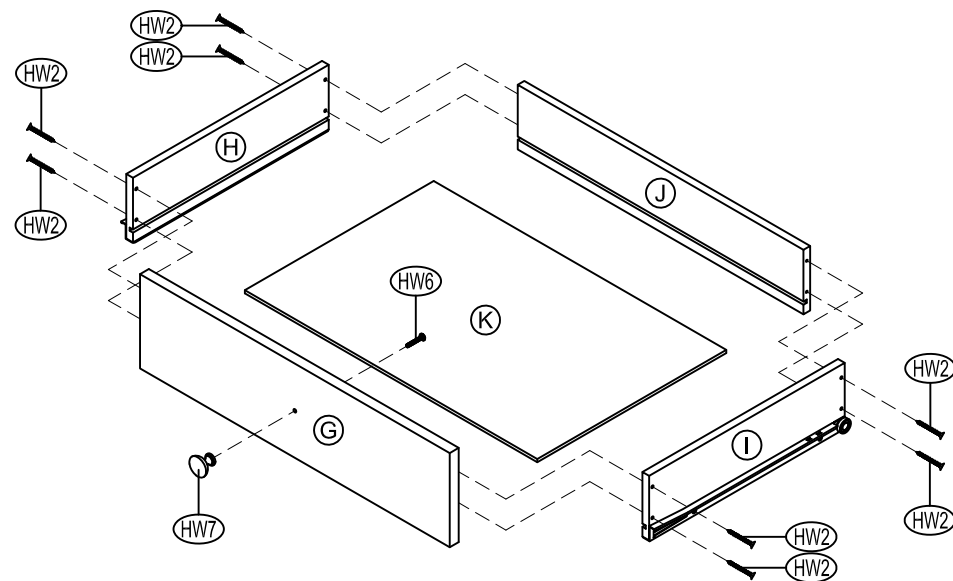


- 6
- Attach Handle (HW7) to Large Drawer Front (L) using Handle Bolt (HW6).
Attach Large Drawer Left and Right (M and N) to Large Drawer Back (O) using Flat Head Screws 32 mm (HW2).
Slide Drawer Base (K) into the groove.
Attach Large Drawer Front (L) to Large Drawer Left and Right (M and N) using Flat Head Screws 32 mm (HW2).

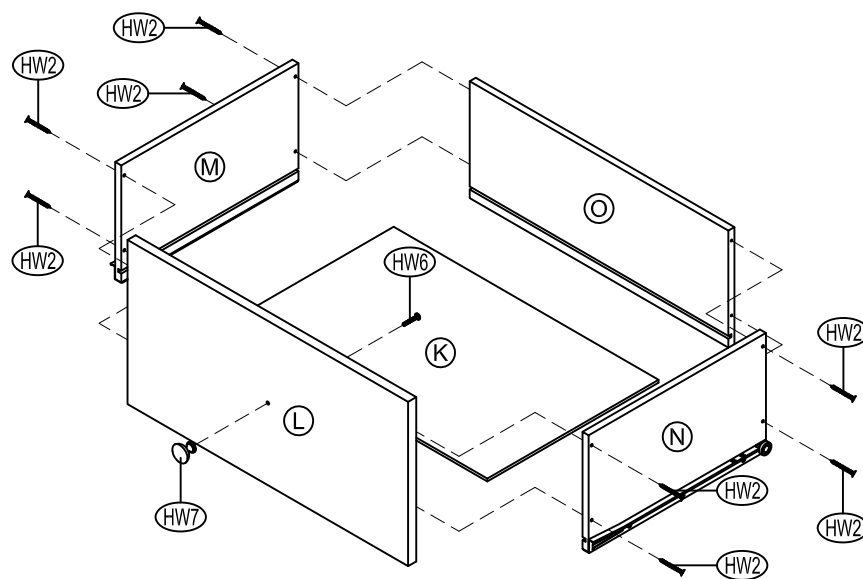


7
Loosen slightly the screws pre-installed on the back of the Drawer Fronts.

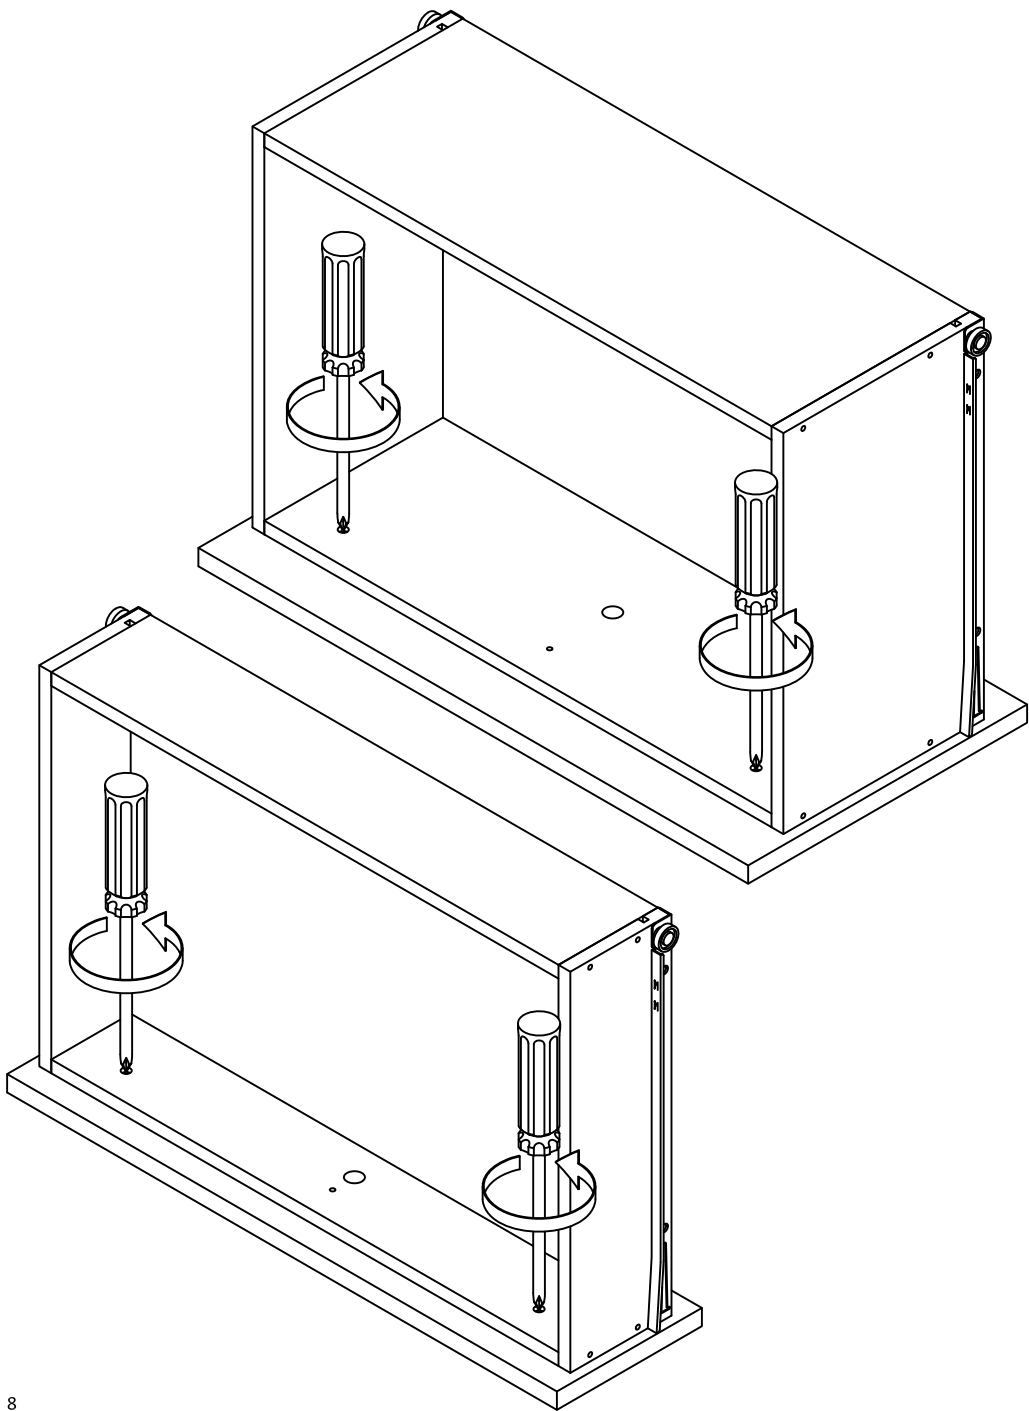

8
Insert the drawers into the unit

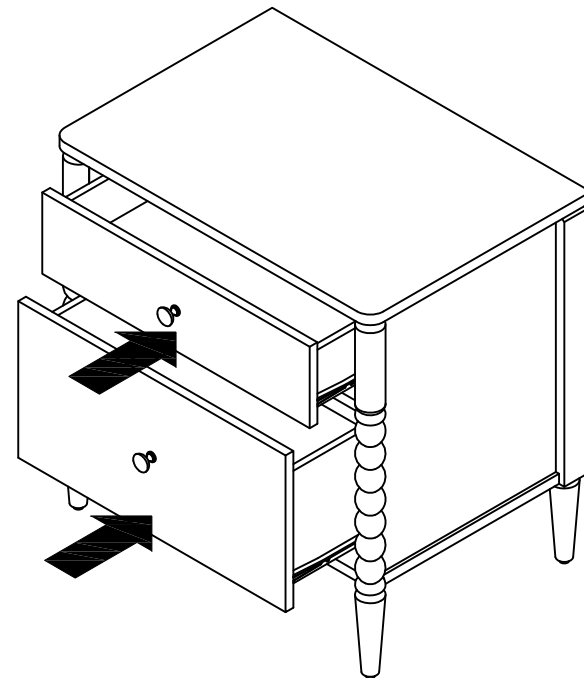


9
Adjust the drawer front panel left or right and up or down until the drawer gaps look proportional.

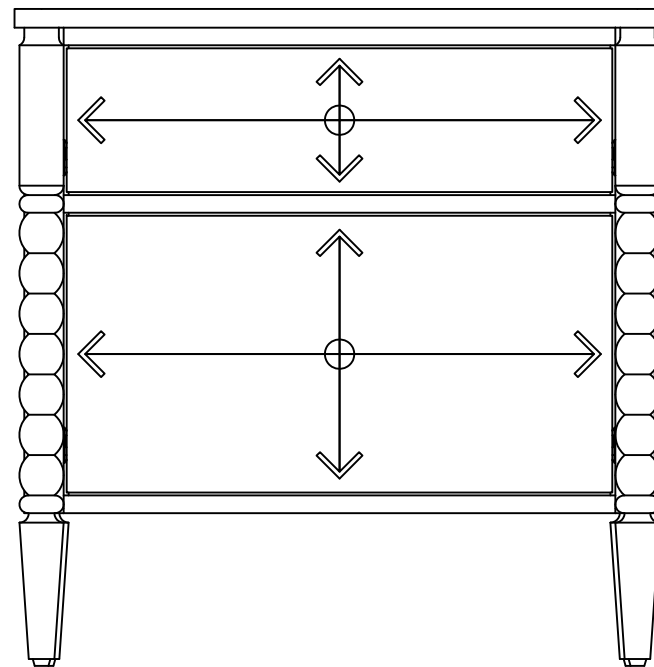

10

Pull the drawer open slowly and re-tighten the screws from step 7. Make sure the front panel does not move and lock the drawer front panel into position with Flat Head Screws 19 mm (HW3).

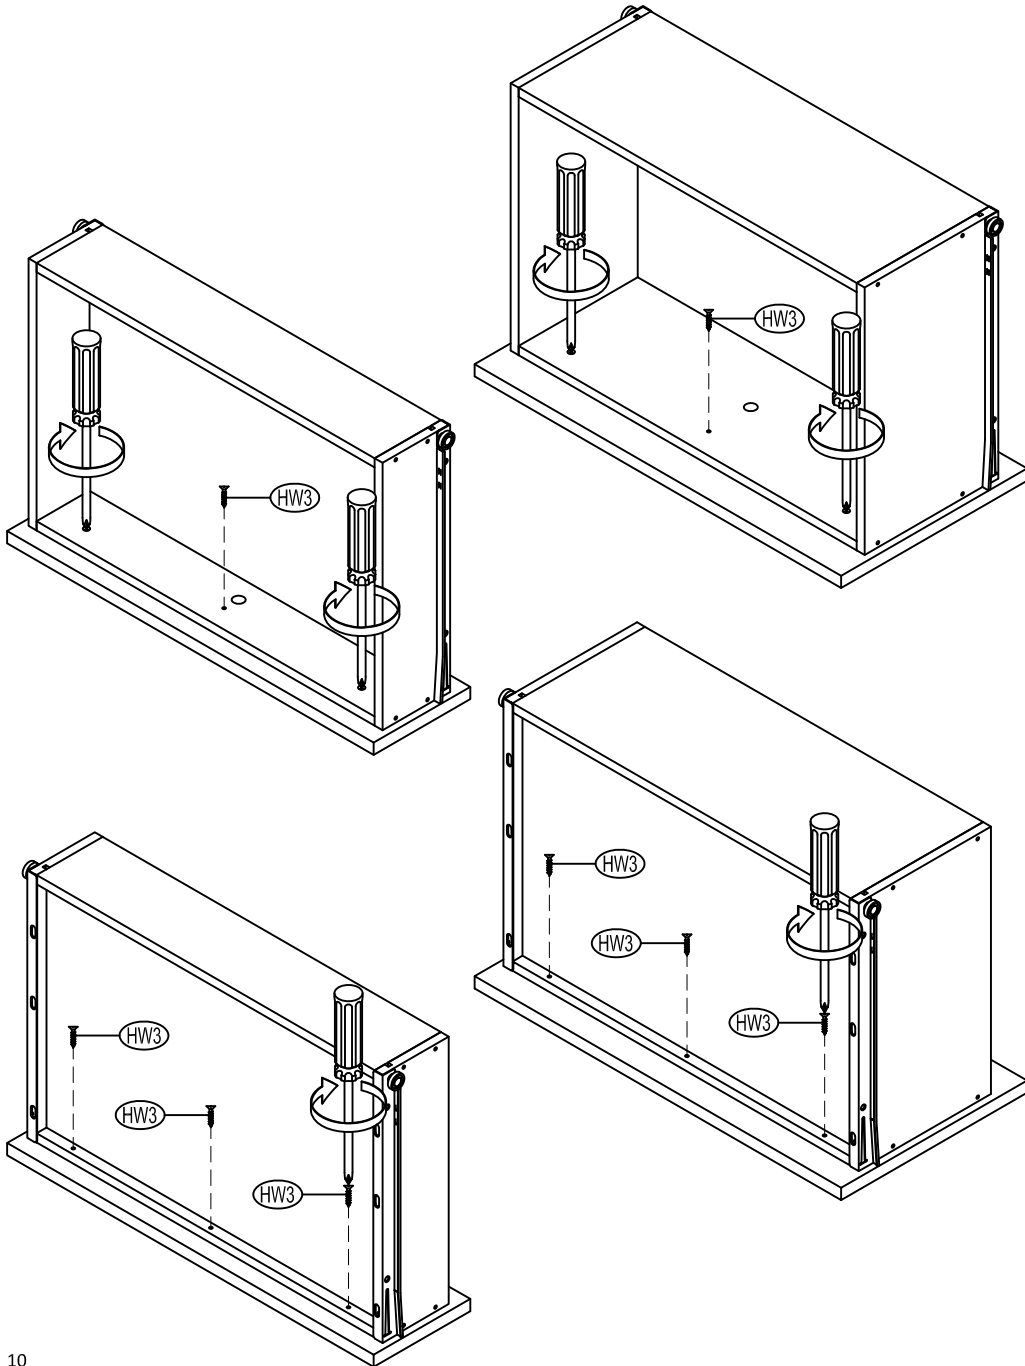

11

Insert the drawers in the nightstand. Place the nightstand in the place where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

