



“Charleston” Adirondack Rocking Chair

TOOLS REQUIRED: POWERED DRIVER or RATCHET
1/2" SOCKET
SQUARE HEAD BIT

MATERIALS



(1) SEAT



(1) SEAT BACK



(4) 2" SQUARE DRIVE SCREWS



(8) 3" CARRIAGE BOLTS




(1) CROSS SUPPORT



(2) REAR LEG SUPPORT



(6) 3" HEX LAG SCREWS



(6) FLAT WASHERS



(2) FRONT LEG SUPPORT



(2) ROCKER RUNNERS



(4) 4" CARRIAGE BOLTS



(14) HEX FLANGE NUTS



(1) RIGHT ARM REST



(1) LEFT ARM REST



(2) 3 1/2" CARRIAGE BOLTS

INSTRUCTIONS

-Check materials list to verify all items have been shipped. Extra hardware may be included.

-Do not tighten nuts until assembly is complete. DO NOT OVERTIGHTEN!



Picture 'A'

1. Attach seat back to seat using 3" hex lag screws and flat washers. See Picture 'A'.



Picture 'B'

2. Attach a front leg support to the seat frame using 3 1/2" carriage bolts & hex flange nuts. See Picture 'B'. Repeat for the other side.



Picture 'C'

3. Attach the arms to the seat back with 3" hex lag screws and flat washers. See Picture 'C'.



Picture 'D'

4. Attach the front leg support to each arm using the 3 1/2" carriage bolts & hex flange nuts. See Picture 'D'.




Picture 'E'

5. Attach a rocker runner to the front leg support using 3" carriage bolts & hex flange nuts. See Picture 'E'. Repeat for the other side.



Picture 'F'

6. Align the guide pin on the rear leg support with the hole on the underside of the seat arm. See Picture 'F'.

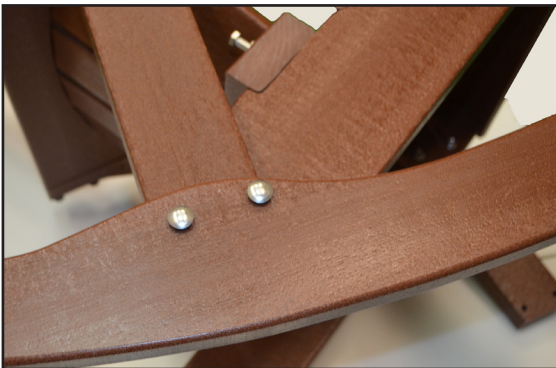

Picture 'G'

7. With the guide pin inside the seat arm, align the pre-drilled holes in the runner, leg support and seat frame, attach using 4" carriage bolts & hex flange nuts. See Picture 'G'. Repeat steps 6 & 7 for the other side.



Picture 'H'

8. Tighten all hardware before proceeding to the final step.

9. Place the cross support flat against the leg supports in the position shown in Picture 'H'. Attach using the square drive screws.