
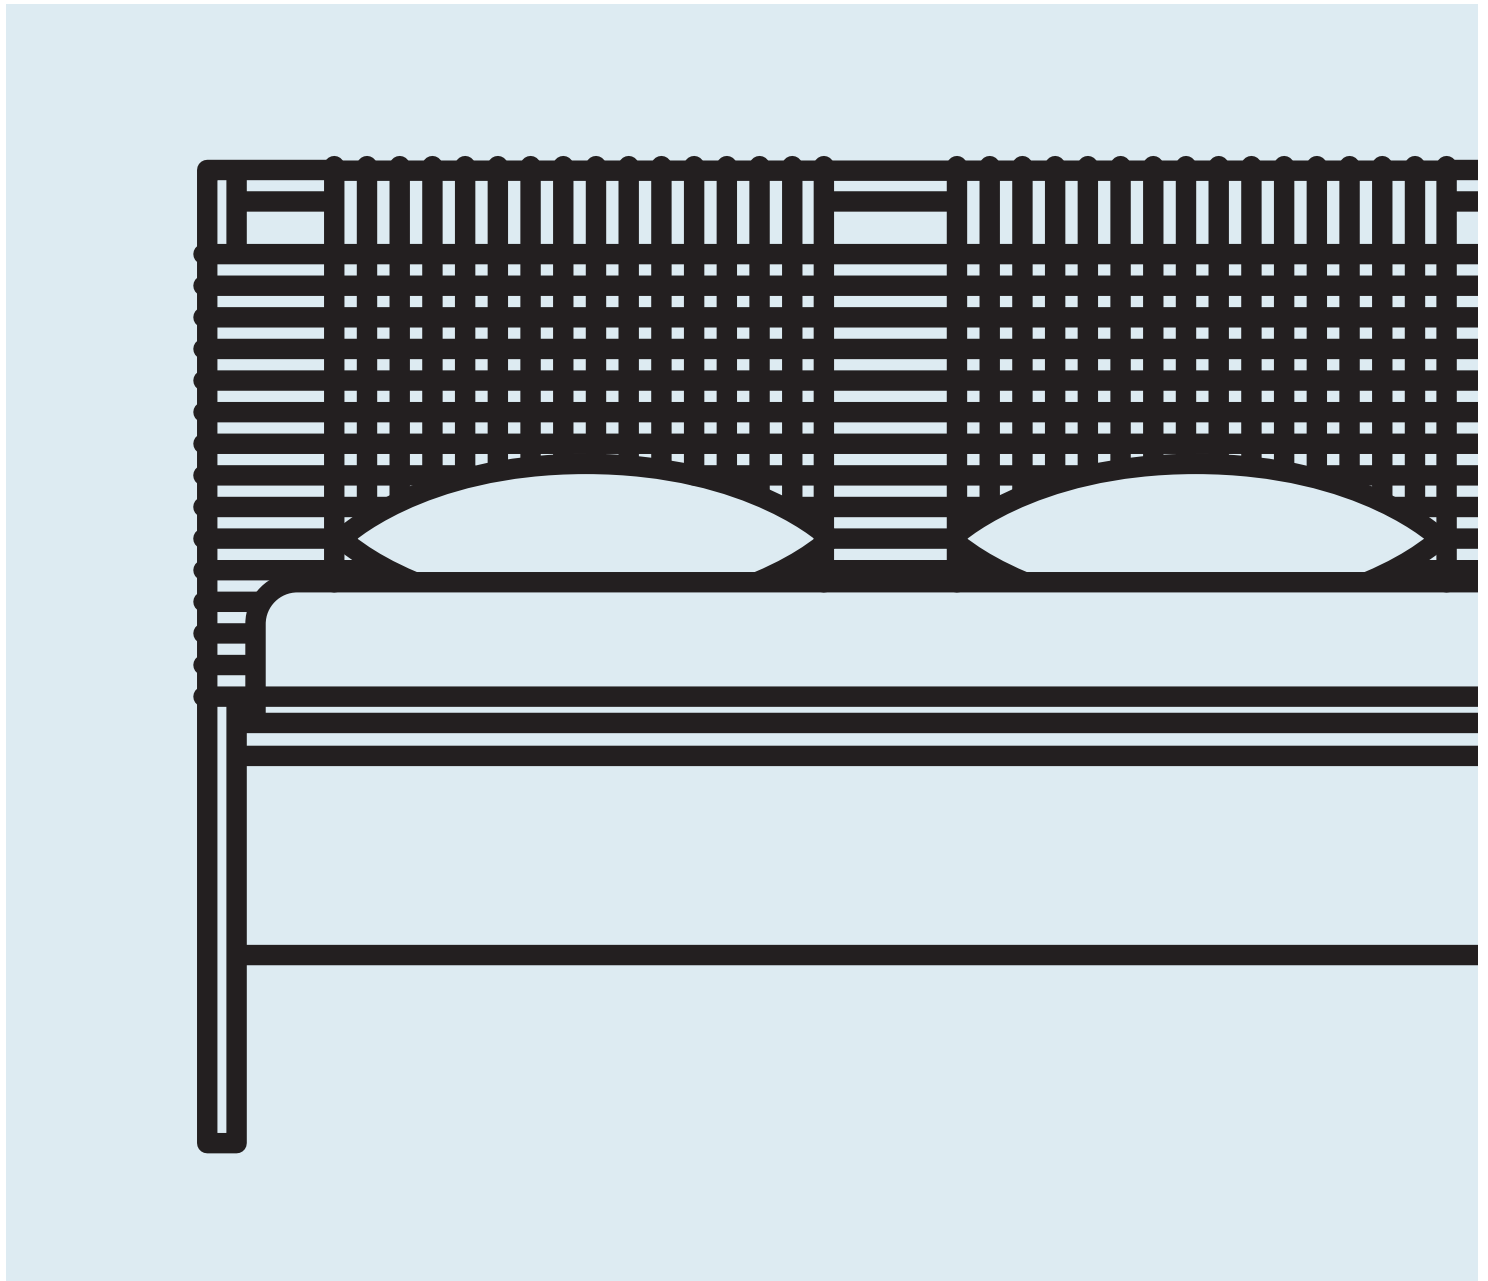


# Over-under King and Queen Bed

DESIGNED IN 2023

ASSEMBLY NOTES | REV 00

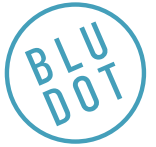


## NEED A HAND?

Contact us at [service@bludot.com](mailto:service@bludot.com) or  
**844.425.8368** for assistance.

## @BLUDOT


We design all our pieces in our Minneapolis studio. Follow  
along on Instagram for some sneak peeks into the process.

Parts & Hardware  
Hardware Pack (Box 1)



QTY 8

Pt. 2004

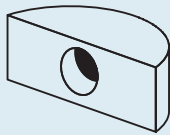

QTY 8

Pt. 9000




QTY 8

Pt. 1219




QTY 4

Pt. 5005

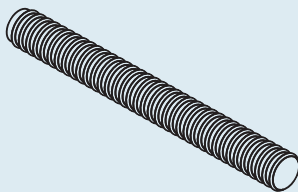

QTY 8


Pt. 8012

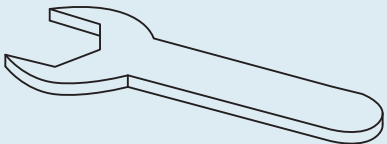

QTY 1


Pt. 9038

Parts (Box 1)

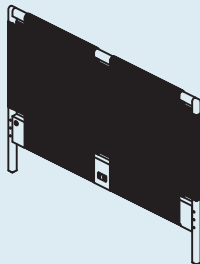

QTY 1


Headboard

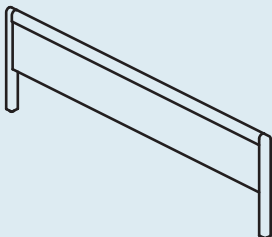

QTY 1


Footboard

Parts (Box 2)

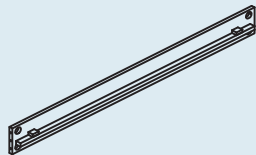

QTY 2

Side Rail

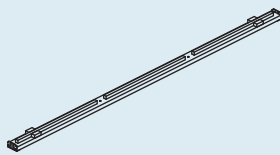


QTY 1

Center Rail



QTY 2

Center Leg

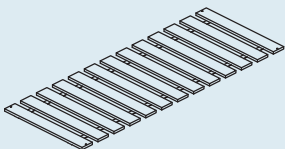

QTY 2


Slat Roll

Parts (Box 3)


# Step 01

## ASSEMBLE THE FRAME.


Loosely attach the headboard and footboard to the side rails using the hardware provided. Tighten the bolts at the end of this step.

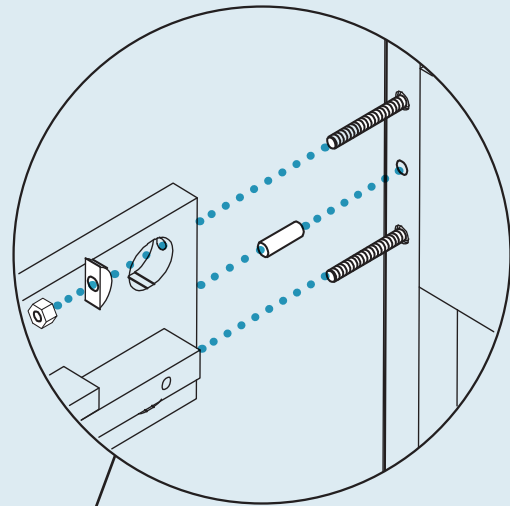

Each corner uses the same hardware

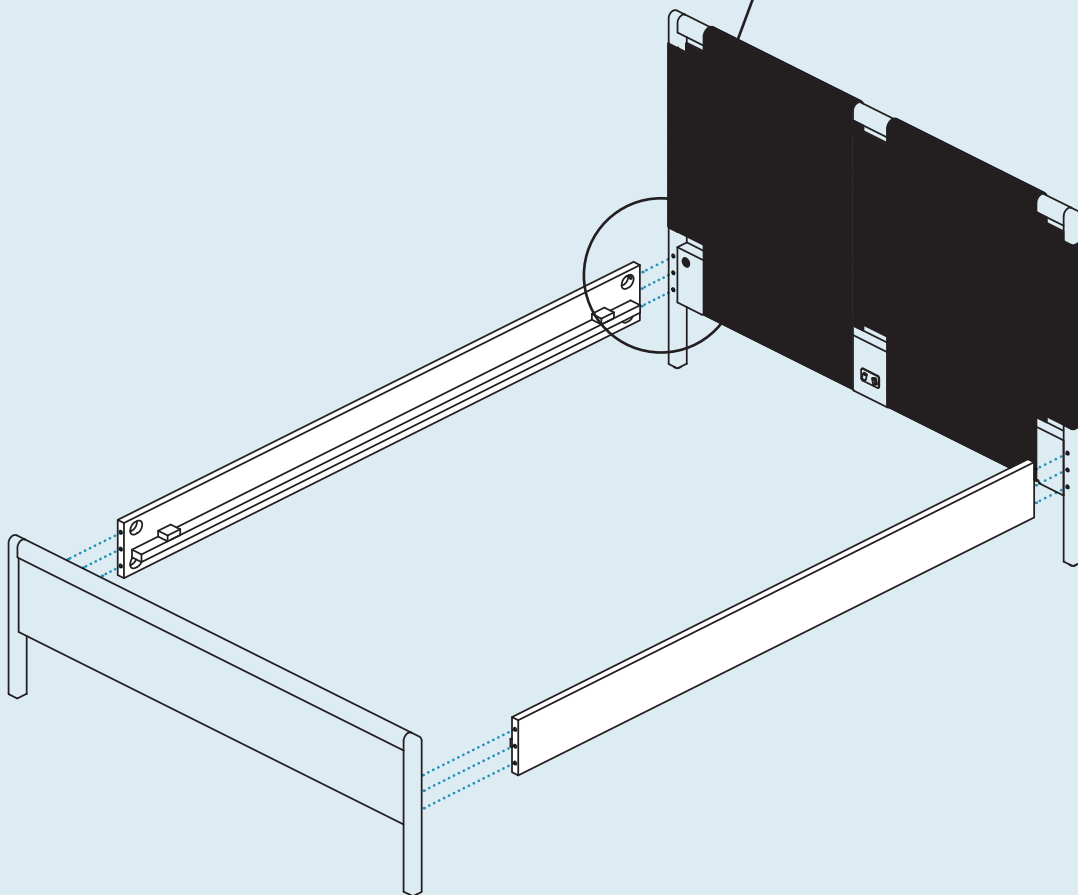

PT. 2004 X 8



PT. 9000 X 8



PT. 5005 X 4




PT. 8012 X 8

## Step 02

### CENTER RAIL ASSEMBLY.

Screw the center legs onto the center rail.  
Install the center rail by slotting it into the  
bracket on the footboard and headboard.

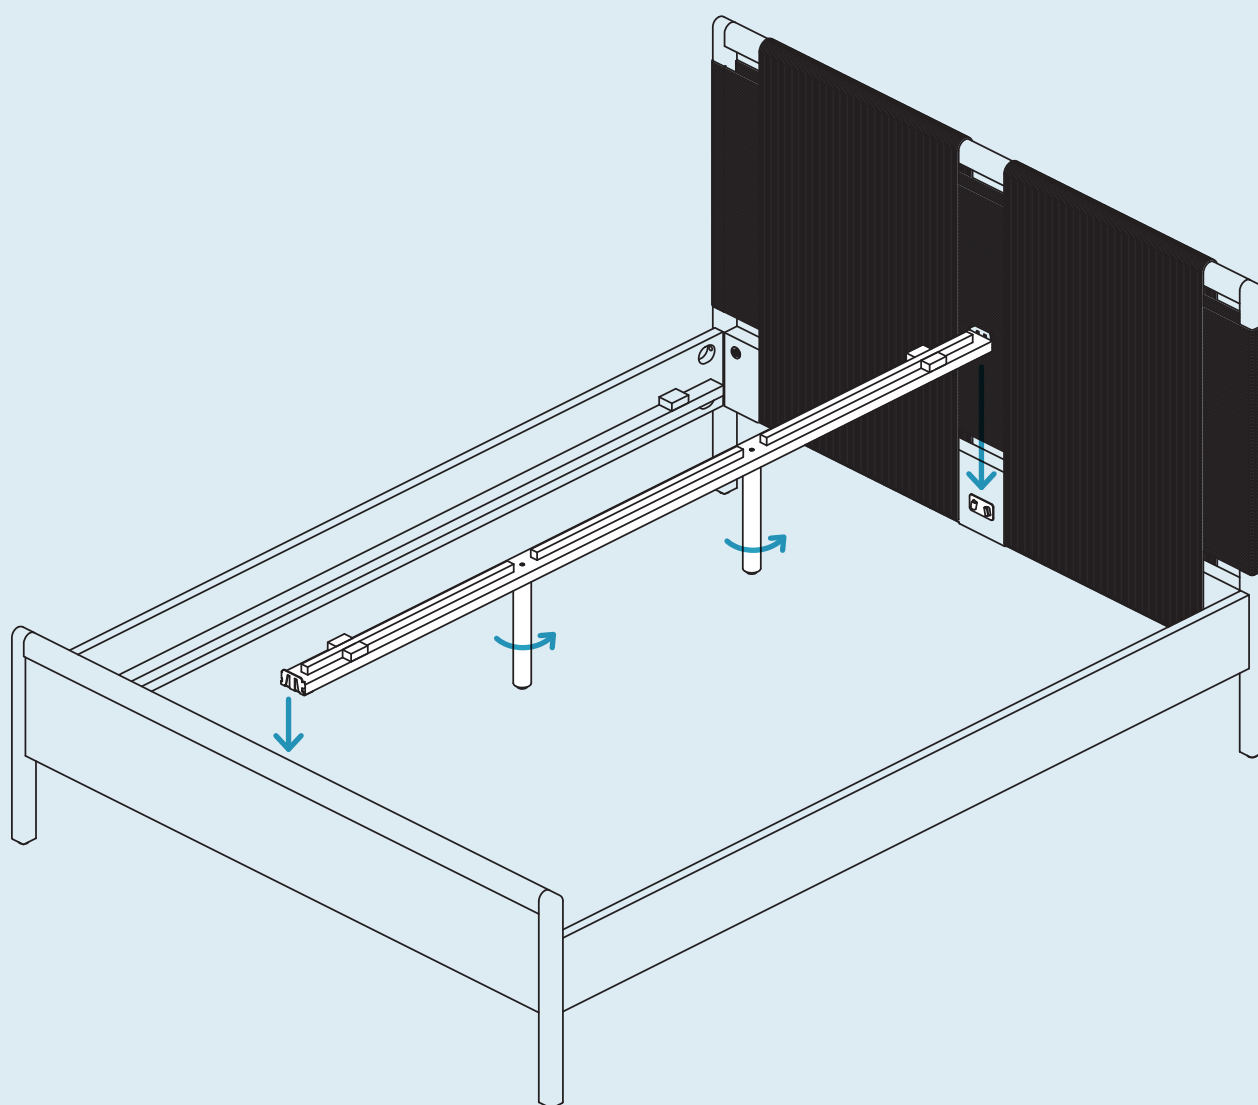

## Step 03


### INSTALL THE SLAT ROLLS.

Place the slat rolls onto the bed frame, being sure the last slat on each end is aligned with the mounting blocks on the frame.

Secure the slat roll to the frame with a screw on each corner of the roll.




PT. 9016 X 8

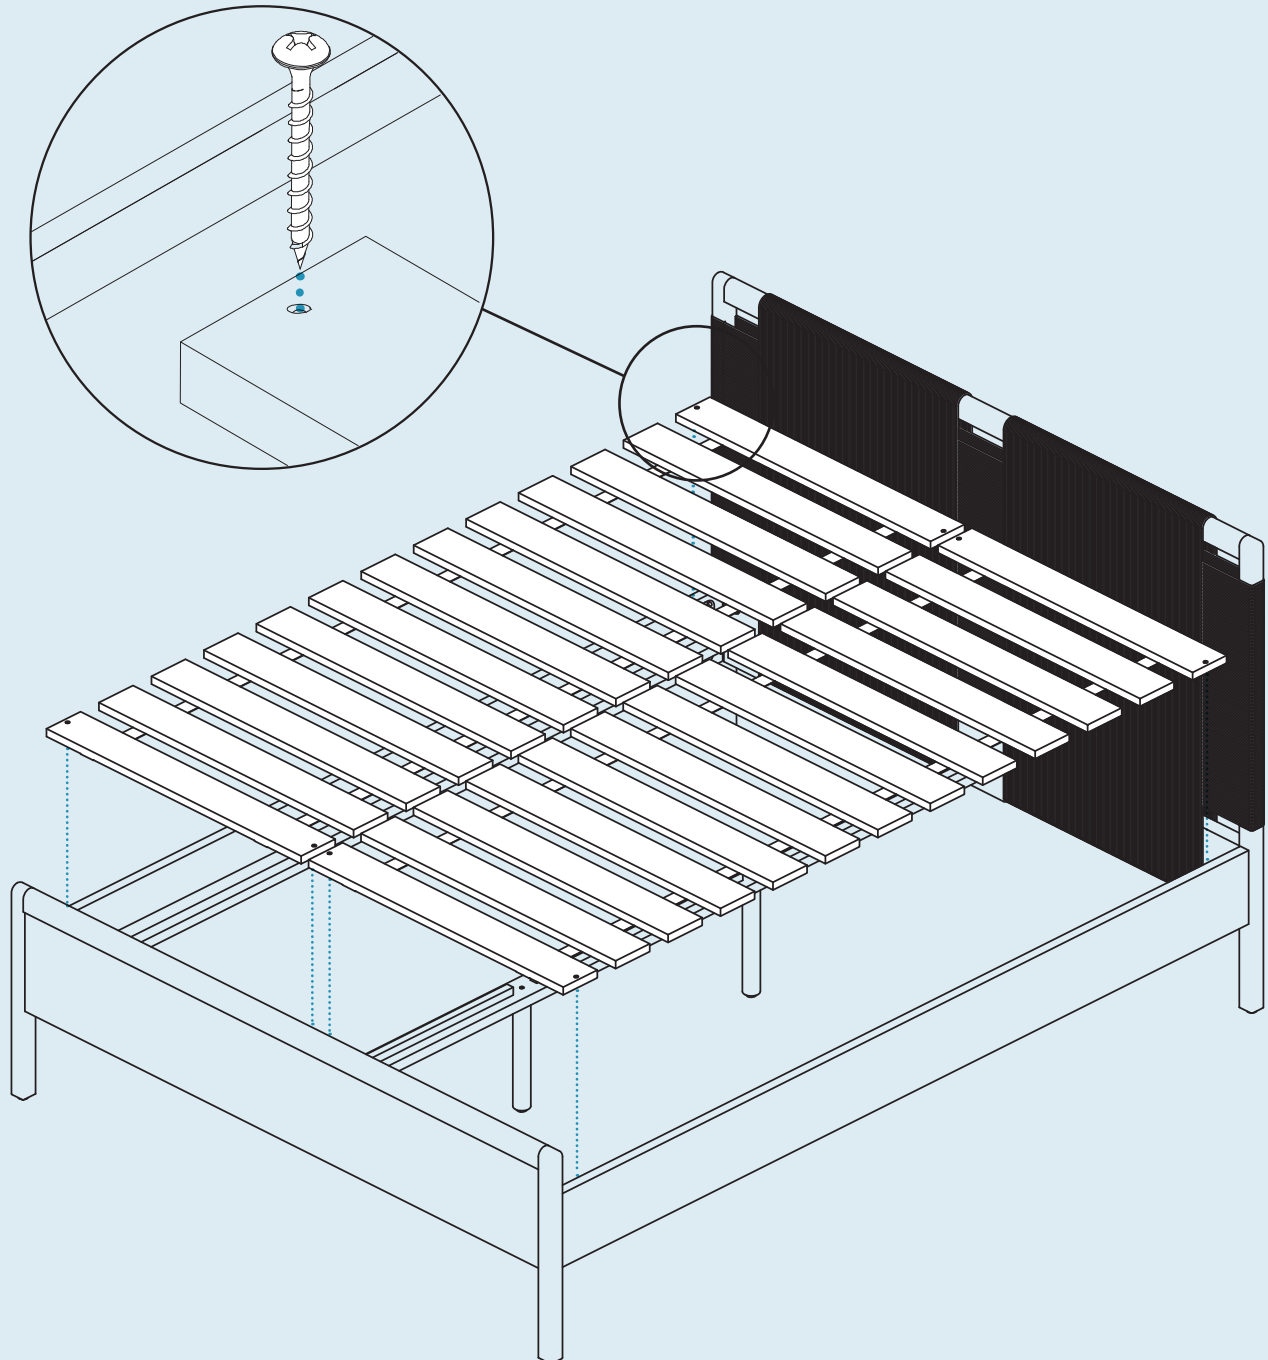


## Step 04

LEVEL THE BED.

If needed, rotate the adjustable glides under each leg to ensure the bed is level.

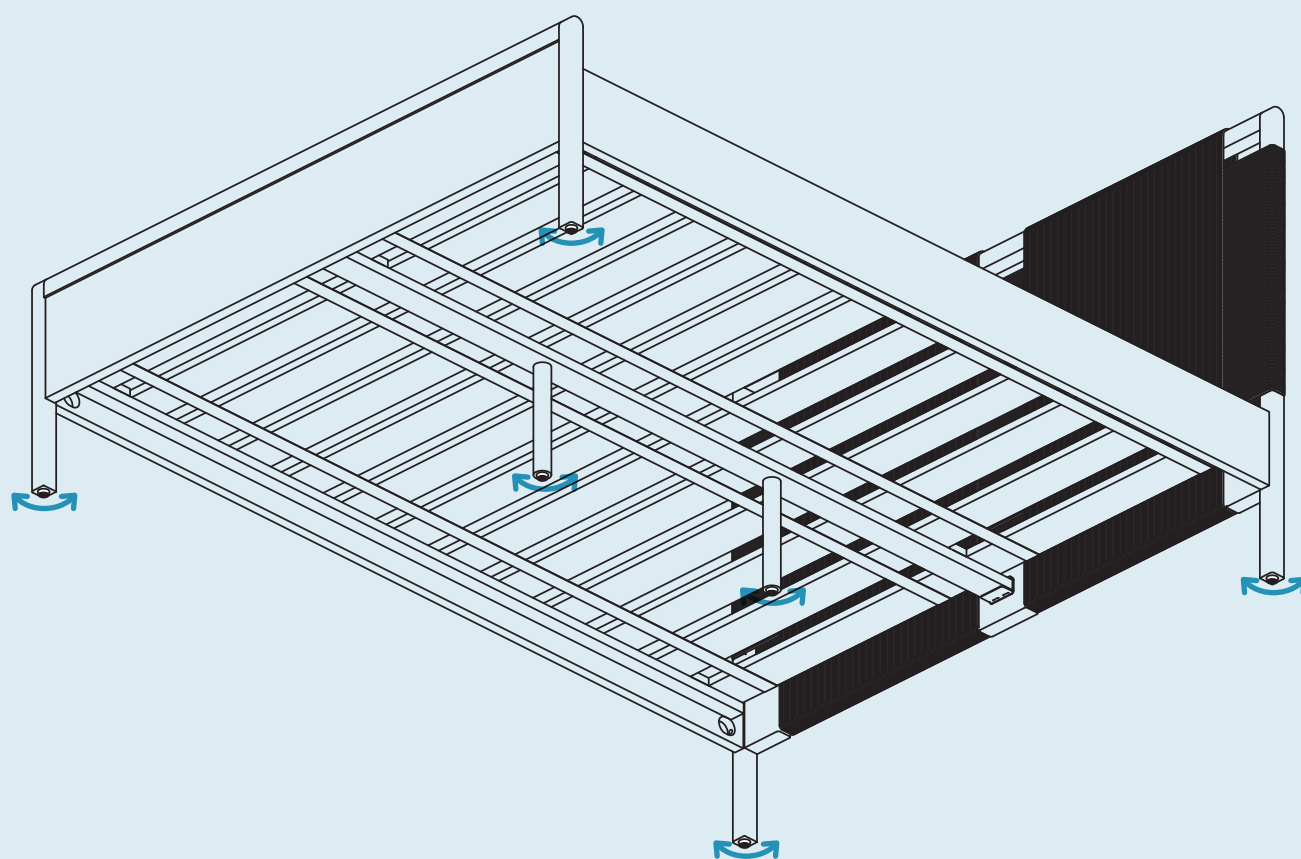



## Additional Information

### WOOD SURFACE CARE

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

### PAPER CORD CARE CARE

Paper cord is a natural material that will last for years and designed to patina over time.

Act quickly with spills. Remove as much of the fluid as possible with a soft cloth and soap solution (made from 1.5 tbsp soap flakes mixed with 5 liters lukewarm water), blot affected area. Do not rub surface.

Avoid water as much as possible, as it will increase the wear of the material and color transfer may occur. Limit daily cleaning to gentle use of a soft brush and vacuum only.

