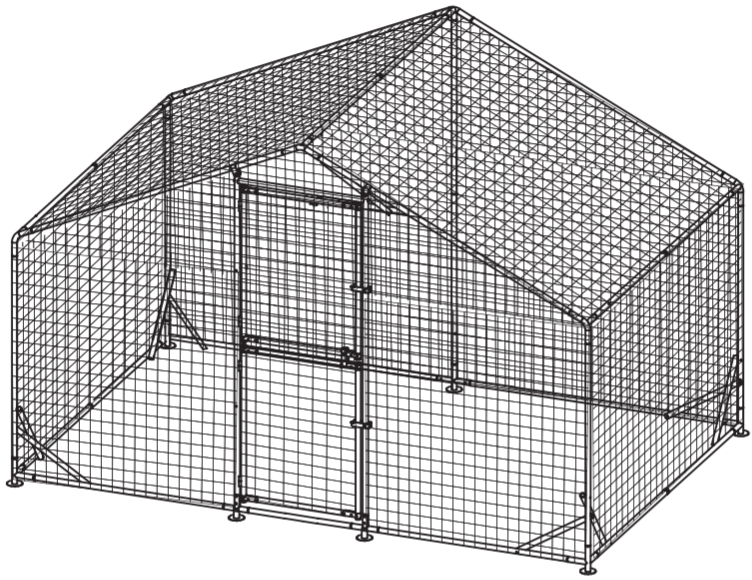



Chicken Coop 10X 6 FT

Dear customer,
Thank you for your support.If you have any questions or concemns,please don't hesitate to contact us. Our customer service team is always here to help and assist you in any way we can. Thank you again for choosing our chicken coop.

Profile Bar


NO.	PART	Qty.
1	1090mm	2
2	565mm	1
3	1420mm	2
4	1880mm	1
5	980mm	4
6	1880mm	5
7	1490mm	4
8	1700mm	1
9	1700mm	1
10	700 mm	1
11	790mm	2
12	790mm	2
13	630 mm	3
14	630 mm	1
15	500mm	8
16		3
18		4

NO.	PART	Qty.
19		5
20		1
21		16
22		2
23		3
24		31
25	 m6*35	15
26	 m6*25	16
27	 Elastic rope	20
28	 wire mesh	26
29	 Plastic zip ties	300
30	 Wrench	1
31	 Ground nail	12
32	 Textile	1
33	 glove	2

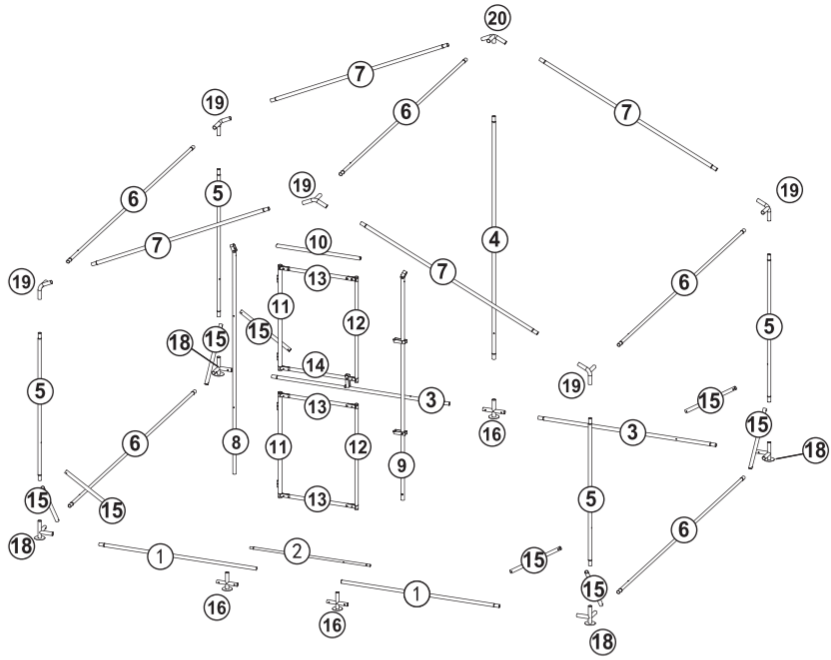


Step.1

Pay attention to the installation direction of the No.1/6A pipe hole position

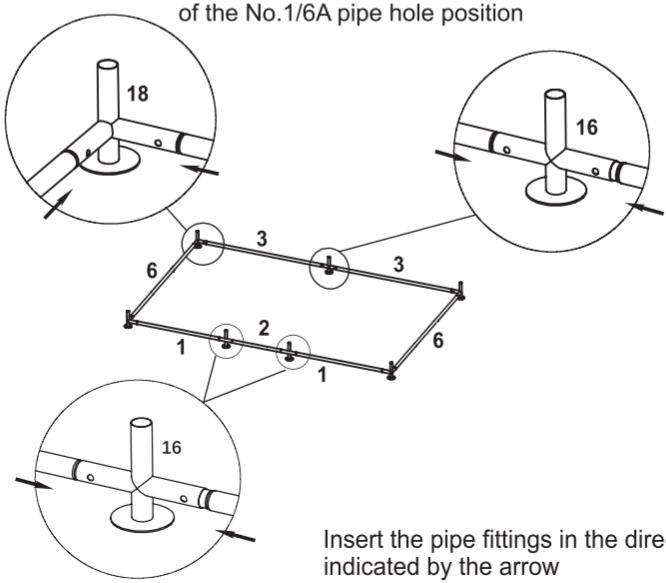


Insert the pipe fittings in the direction indicated by the arrow

Step.2

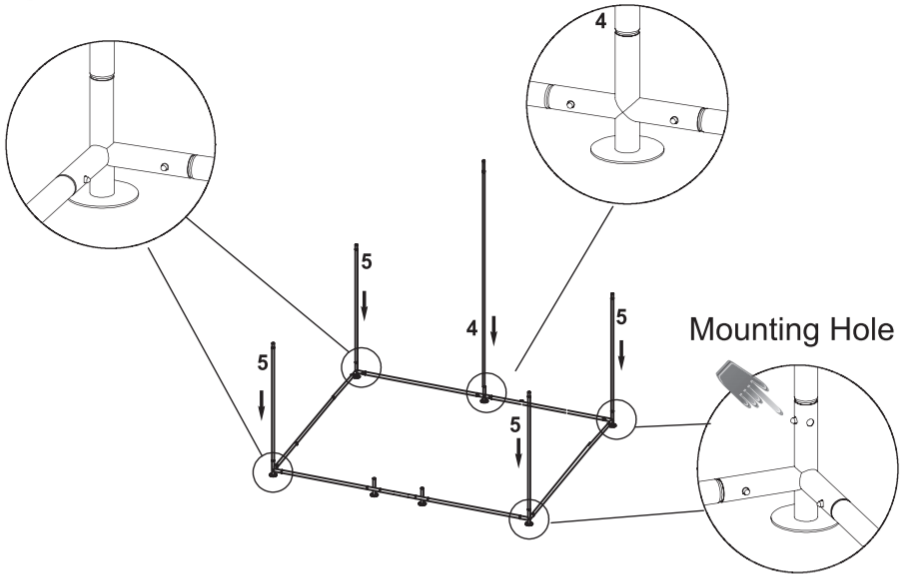


Insert the pipe fittings in the direction indicated by the arrow


Step.3

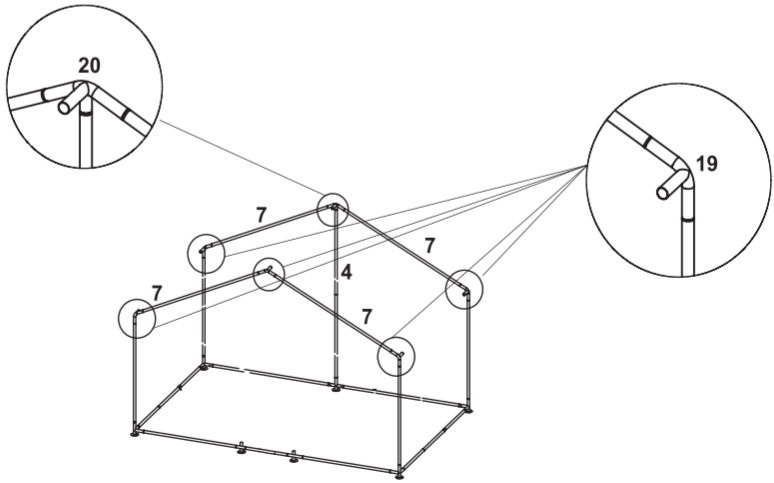


Step.4

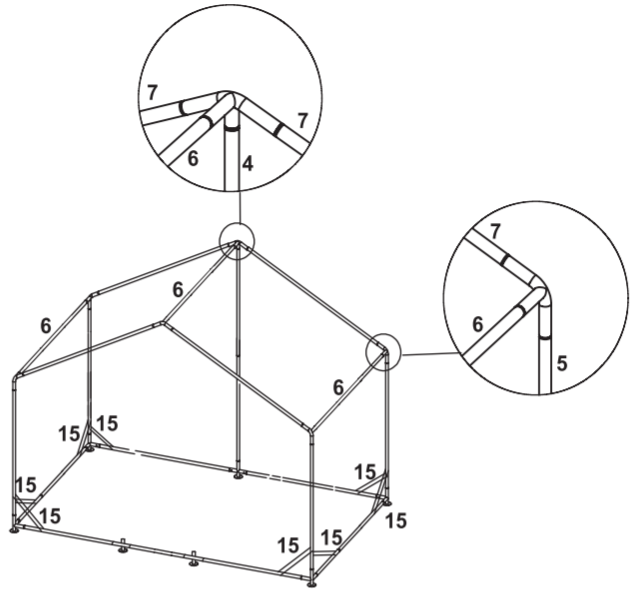
7
7
6
4
7
6
5
6
6
6
15
15
15
15
15
15
15
15

Step.5

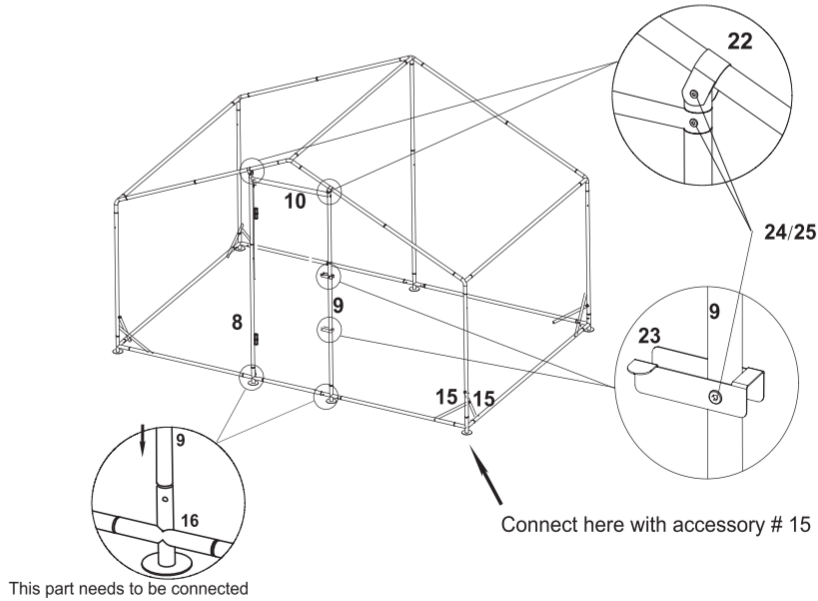

22
24/25
10
9
8
9
23
15
15
9
16
Connect here with accessory # 15
This part needs to be connected
with screws and nuts

Step.6

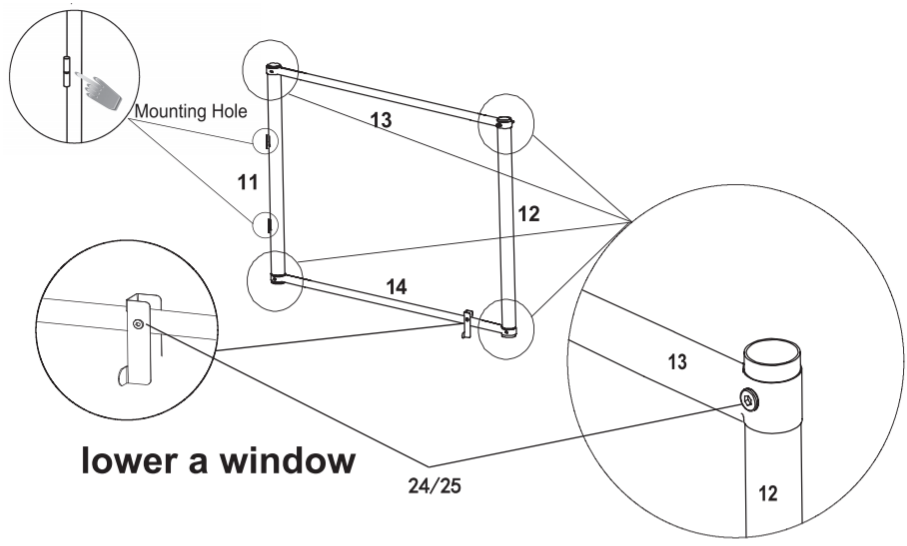

This part needs to be connected with screws and nuts


Step.7

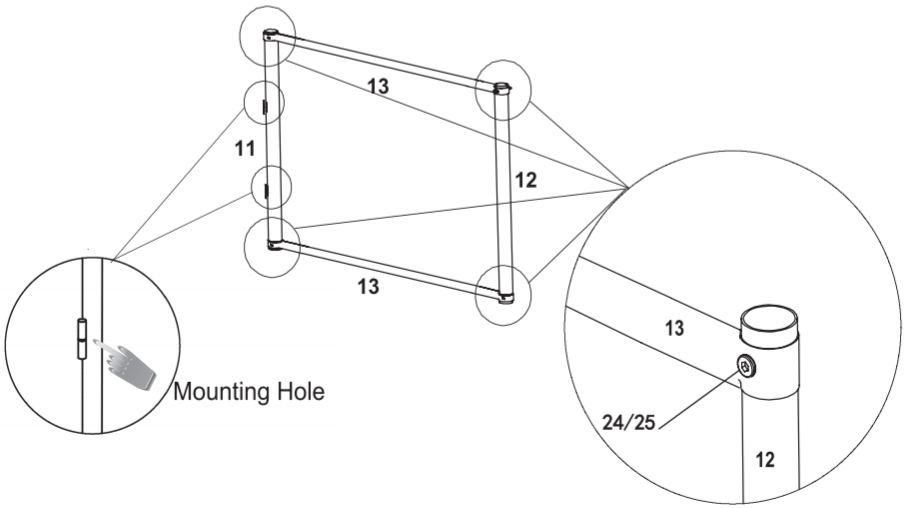


This part needs to be connected with screws and nuts

Step.8

Install into the upper and lower windows

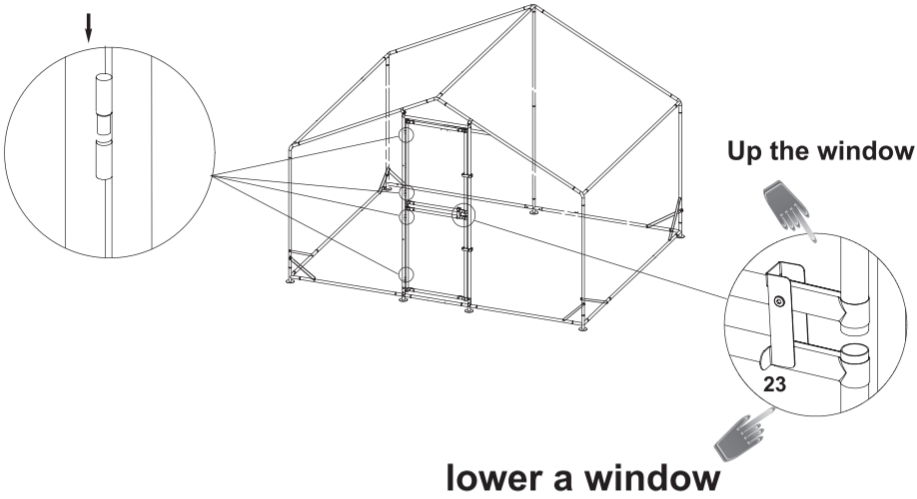



Step.9

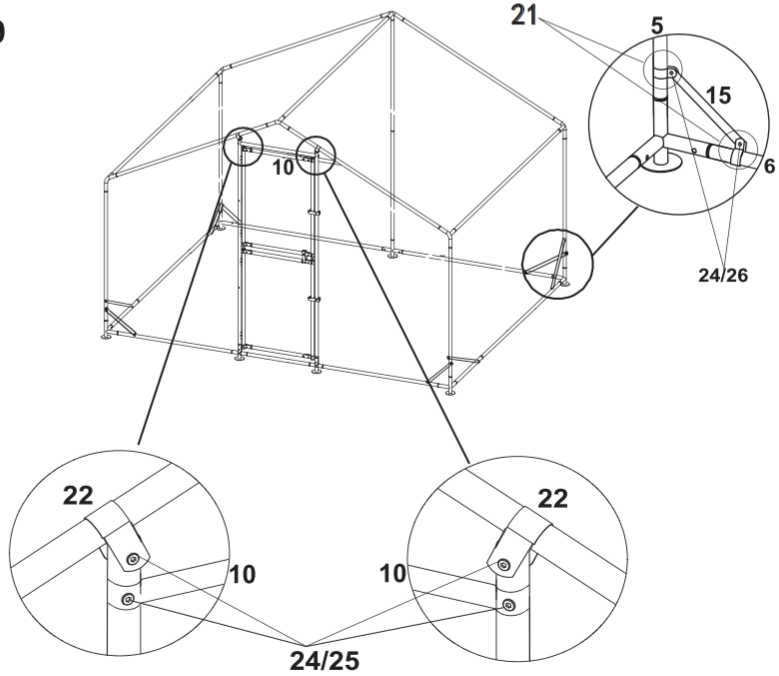

Step.10

Wire mesh schematic diagram (the following pictures are for reference only, please operate according to actual measurement, pleȧse be sure to calculate and measure the length of the wire mesh, the size we provide is 1968')L

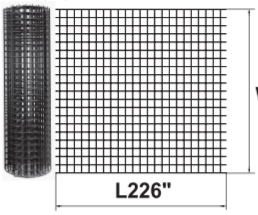


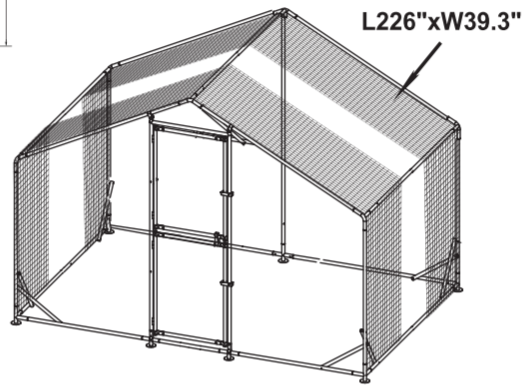


X 4

Step.11


Fold or cut off the excess part

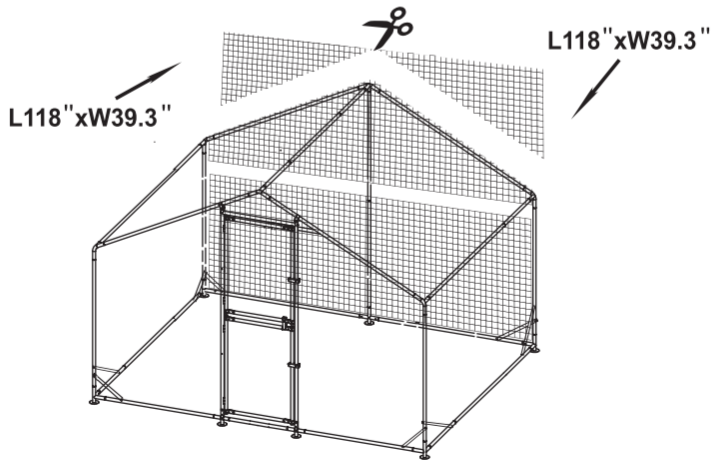

Step.11

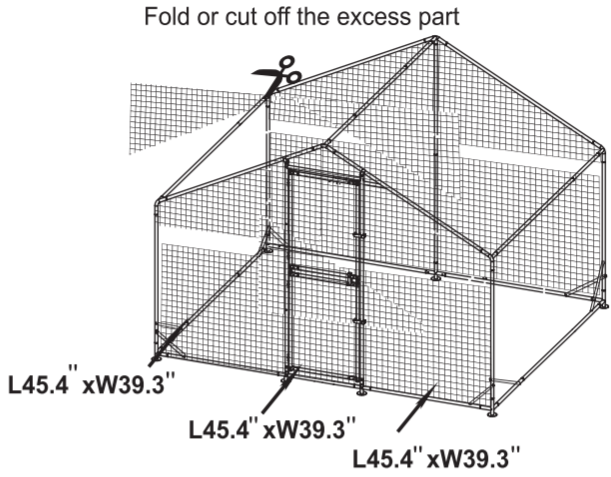

Step.12

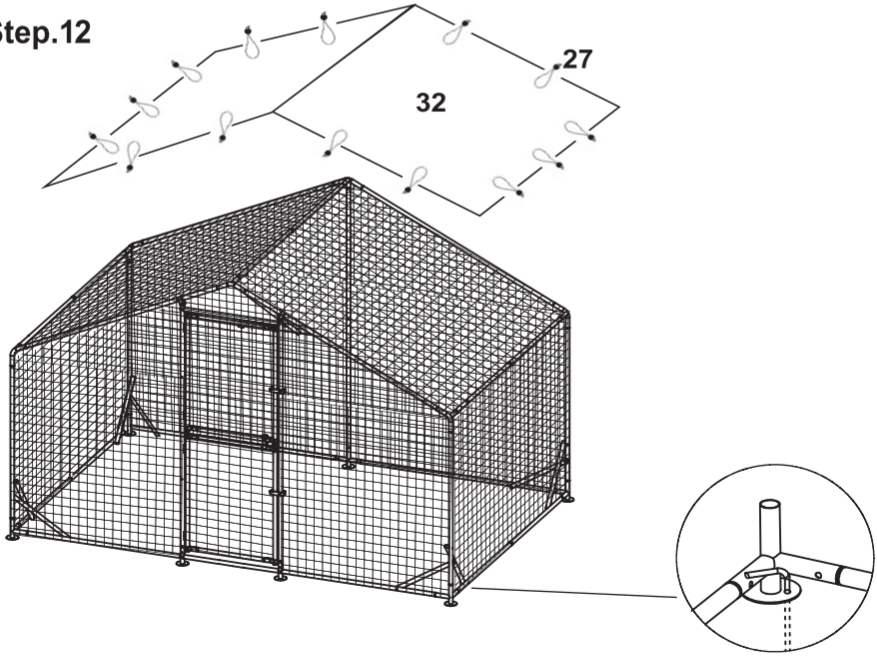

Fabric No. 32 is tied in the corresponding position with elastic rope No. 27