


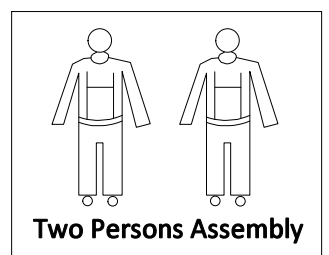
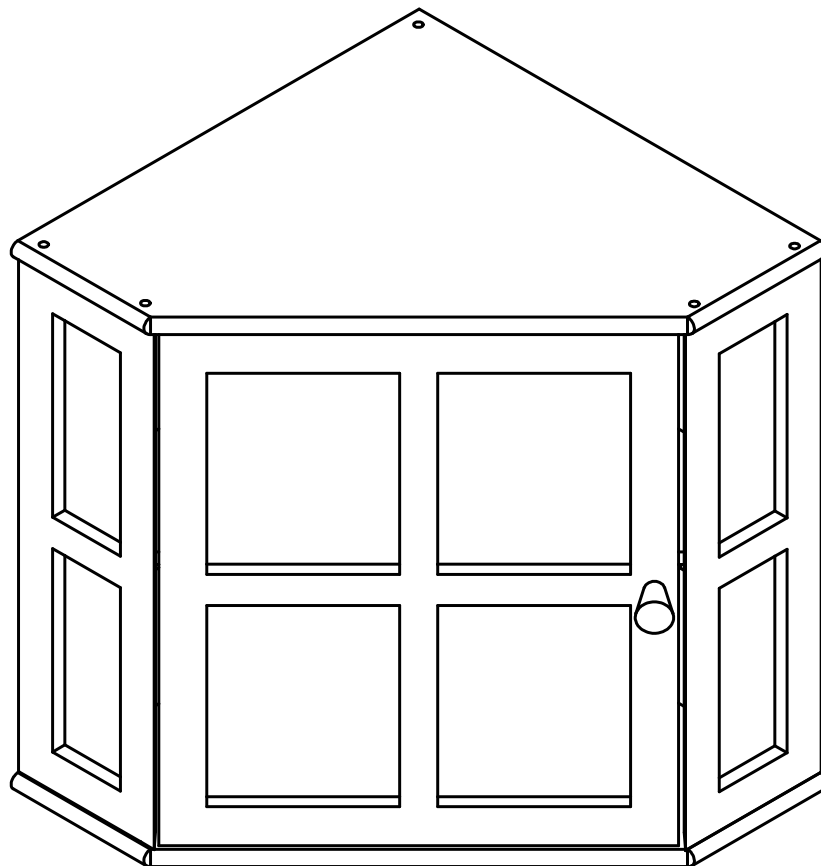
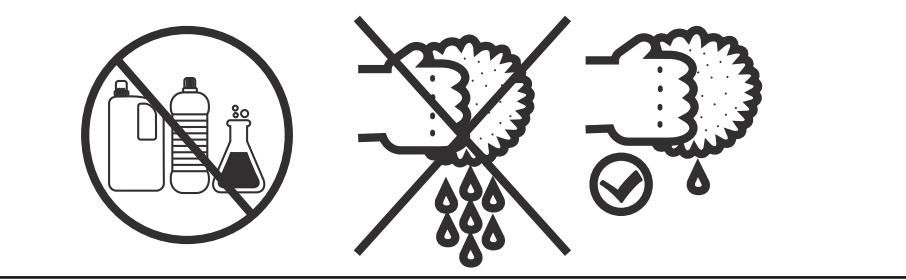
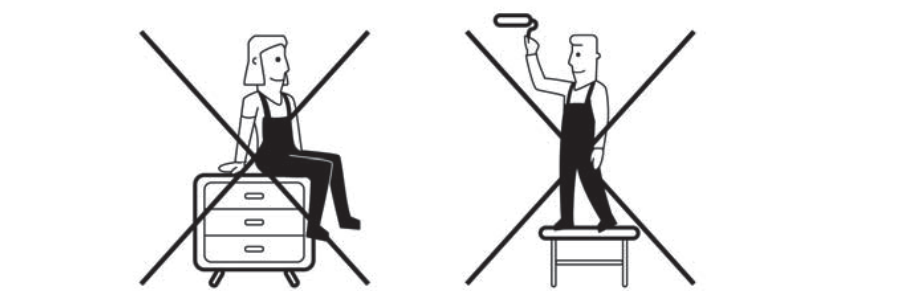


ASSEMBLY INSTRUCTIONS






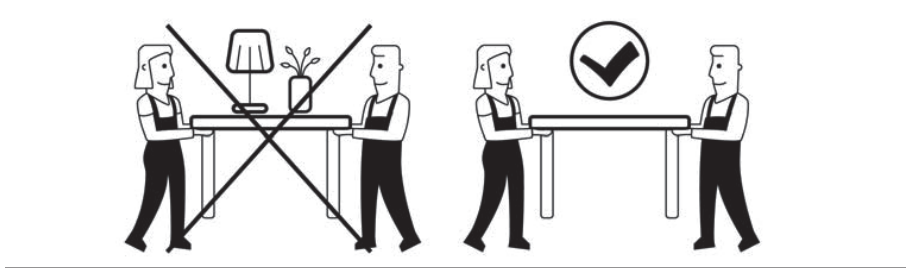


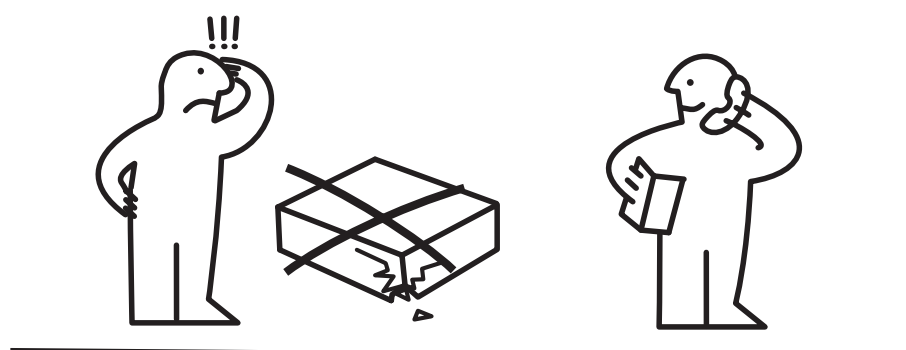

Laying out all the parts and hardware and identifying each part as shown below. It may help you when you assemble the item.






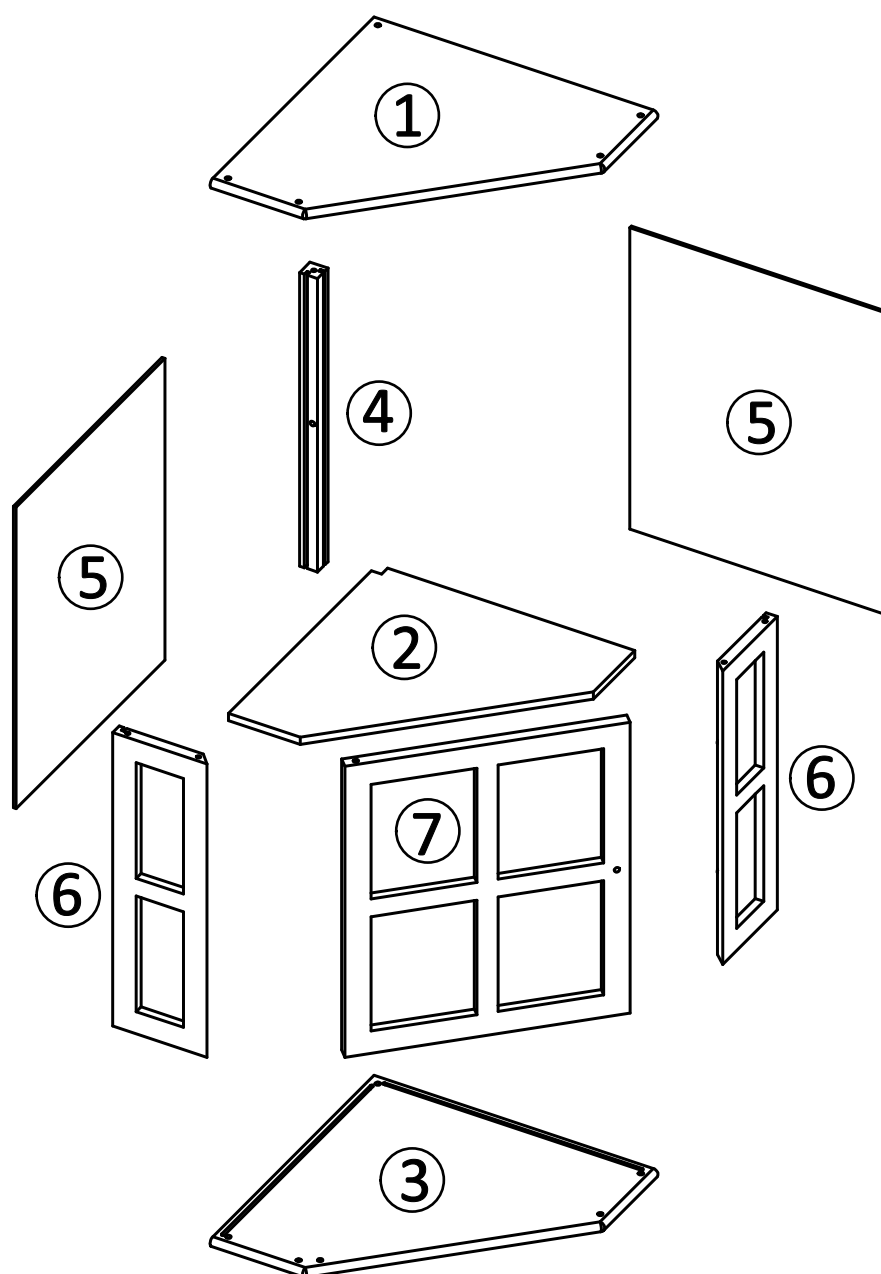


① × 1	② × 1	③ × 1	④ × 1	⑤ × 2	⑥ × 2
⑦ × 1					

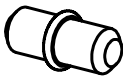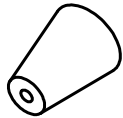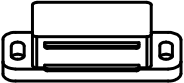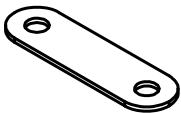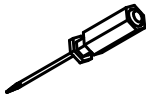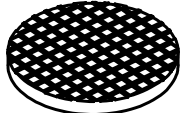
A	x1	B	x10+1(Spare)	C	x5	D	x1	E	x1
									
M3 Hex key		M5x20mm		ø5x13.5mm		M4x16mm		ø11xø19.5x23mm	
F	x1	G	x1	H	x4+1(Spare)	I	x1	J	x3
									
28x8x8mm		26x8x1mm		FA2.5x10mm		Phillips driver		Foot pad	

1




Turn the screws vertically from slow to fast.

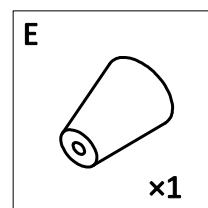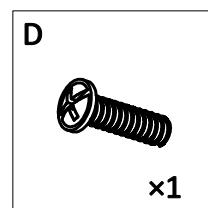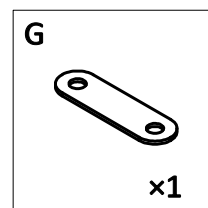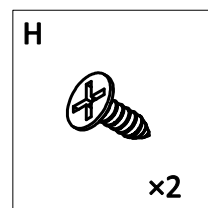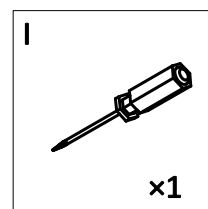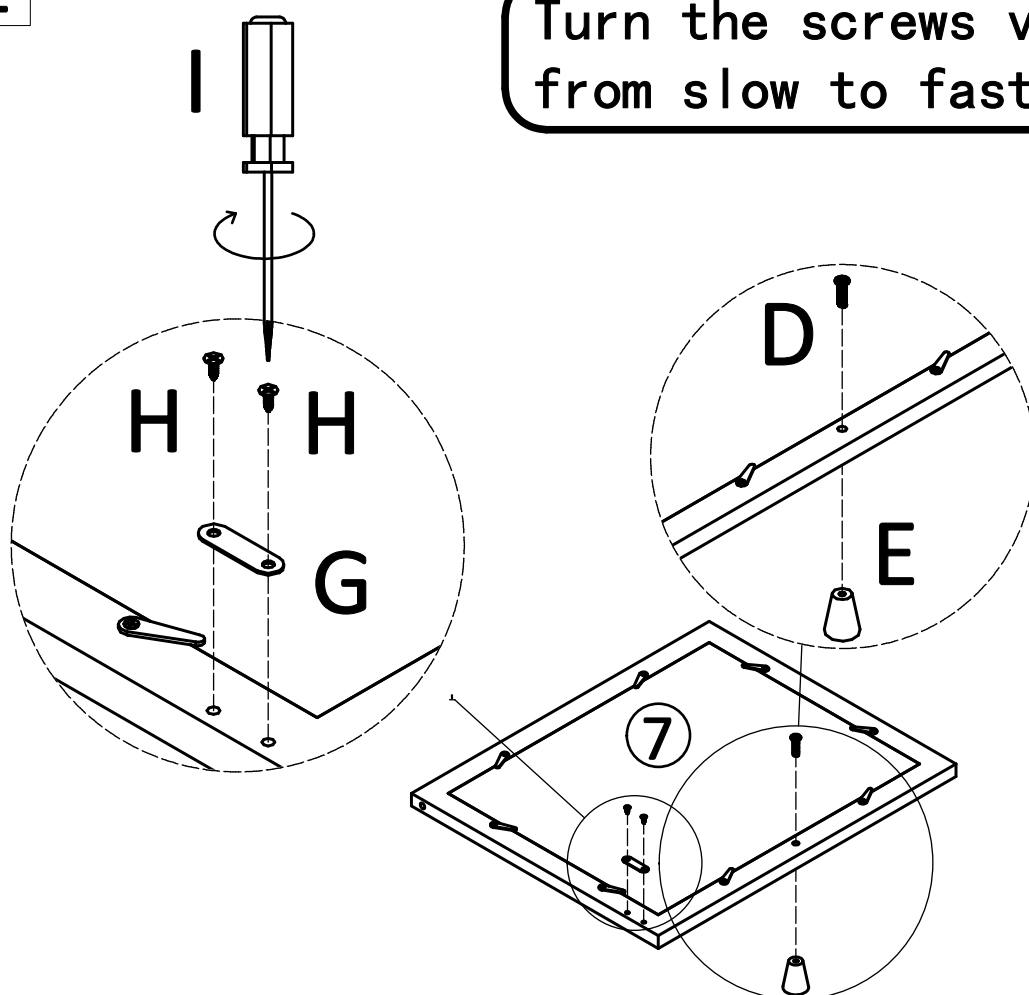


2

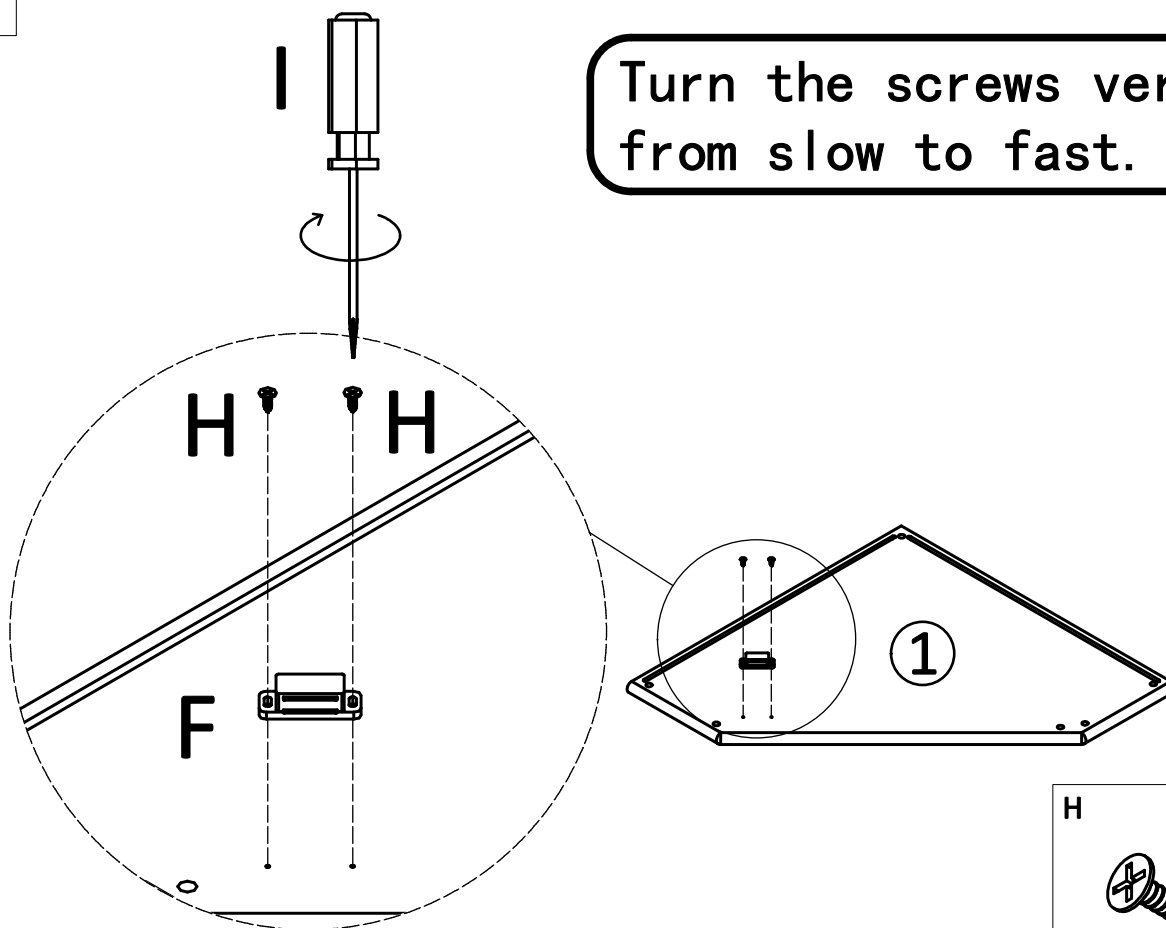




Turn the screws vertically from slow to fast.

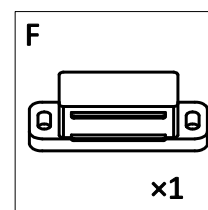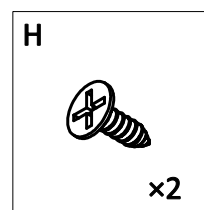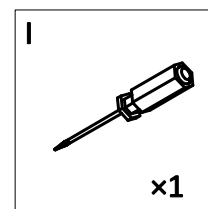


3

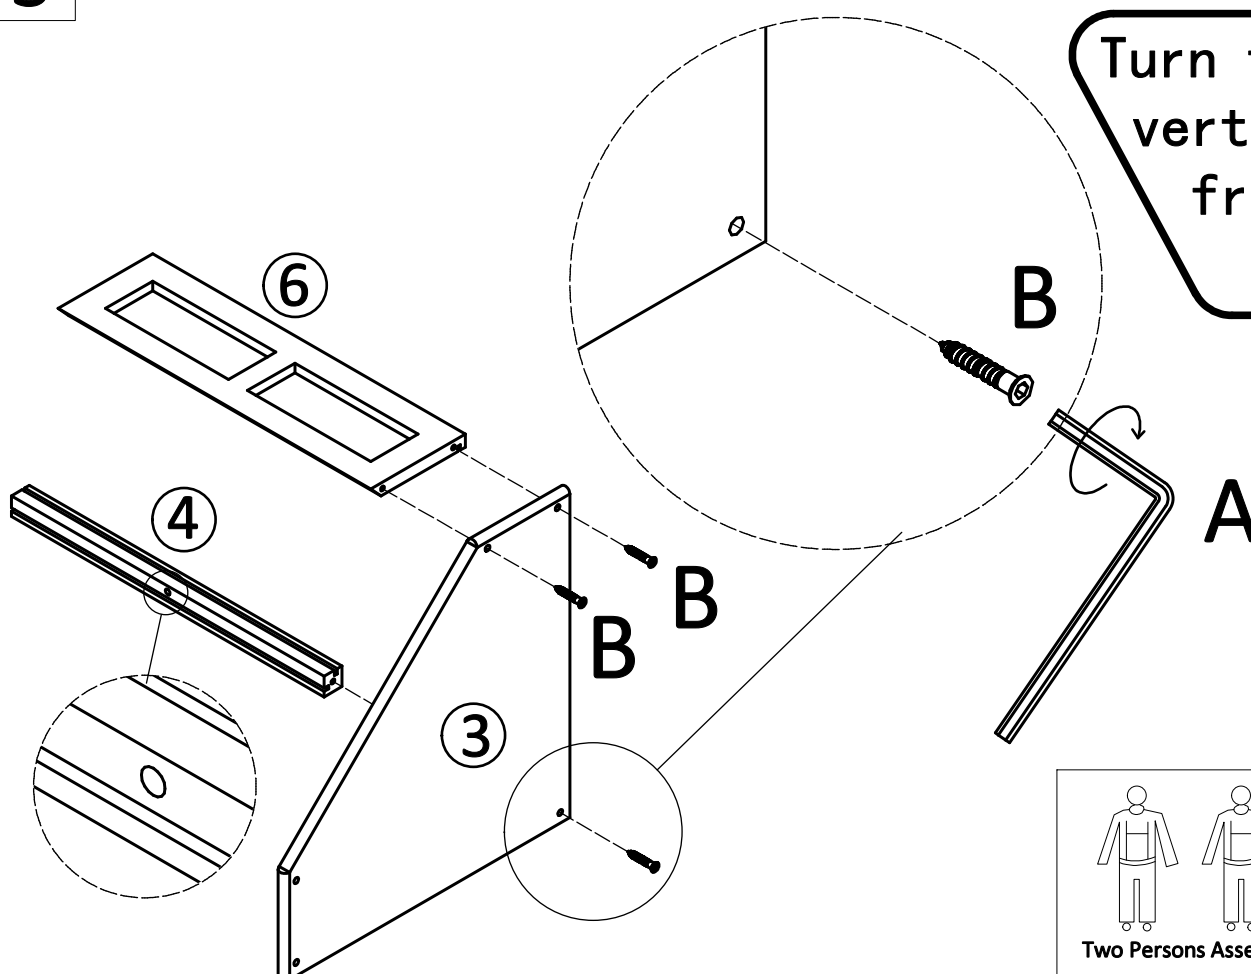




Turn the screws vertically from slow to fast.

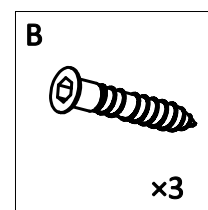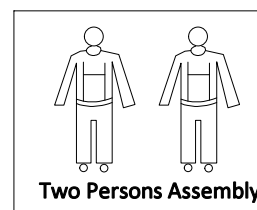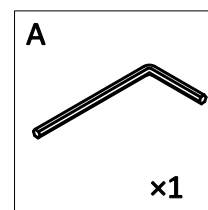

4


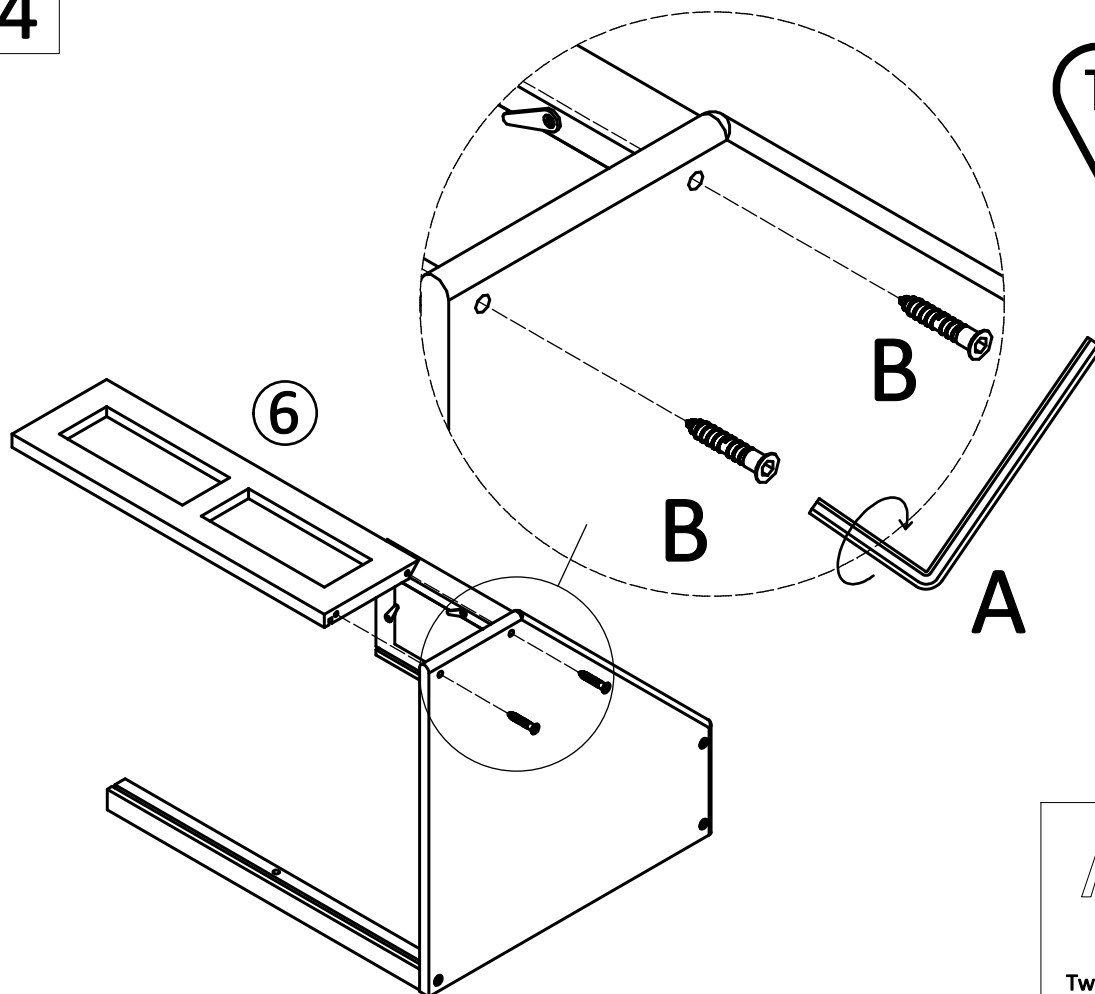


Turn the screws vertically from slow to fast.

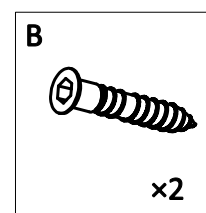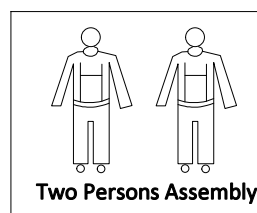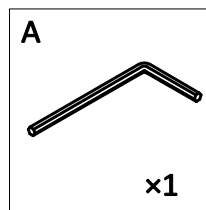


5

Peel the films from the three “J” parts as shown, then attach them to the non-grooved side of base plate 3 to cover the screws.

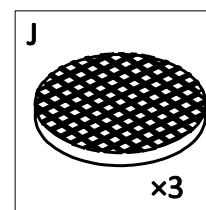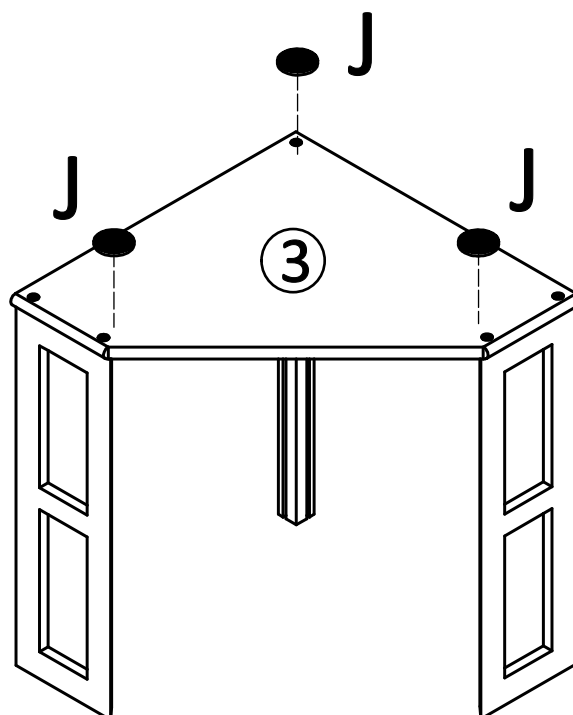



6

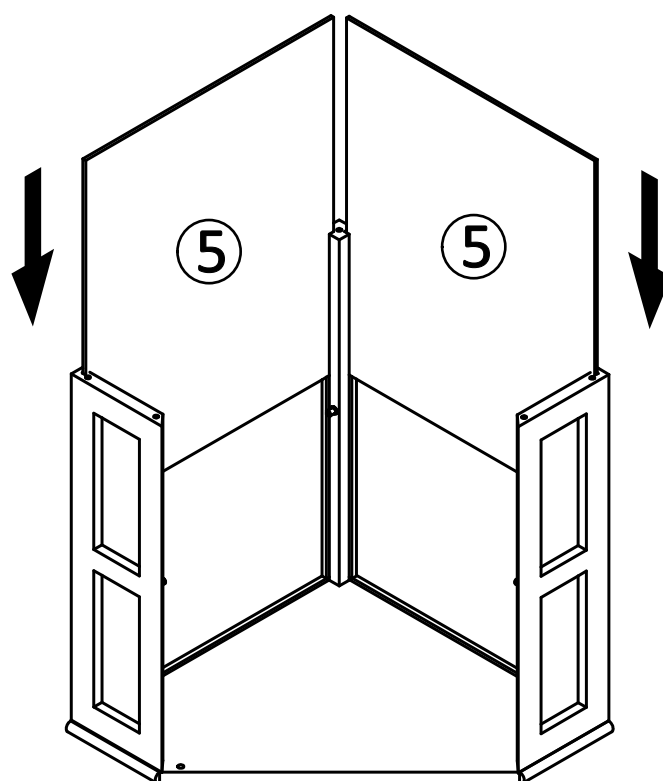


7

Insert the shelf pin C into the hole of the door 7 as shown in the diagram.

Insert the shelf pin C into the holes of the bottom plate 3 and the door 7 as shown in the diagram.

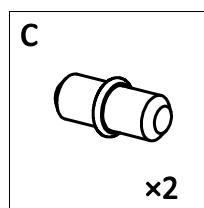
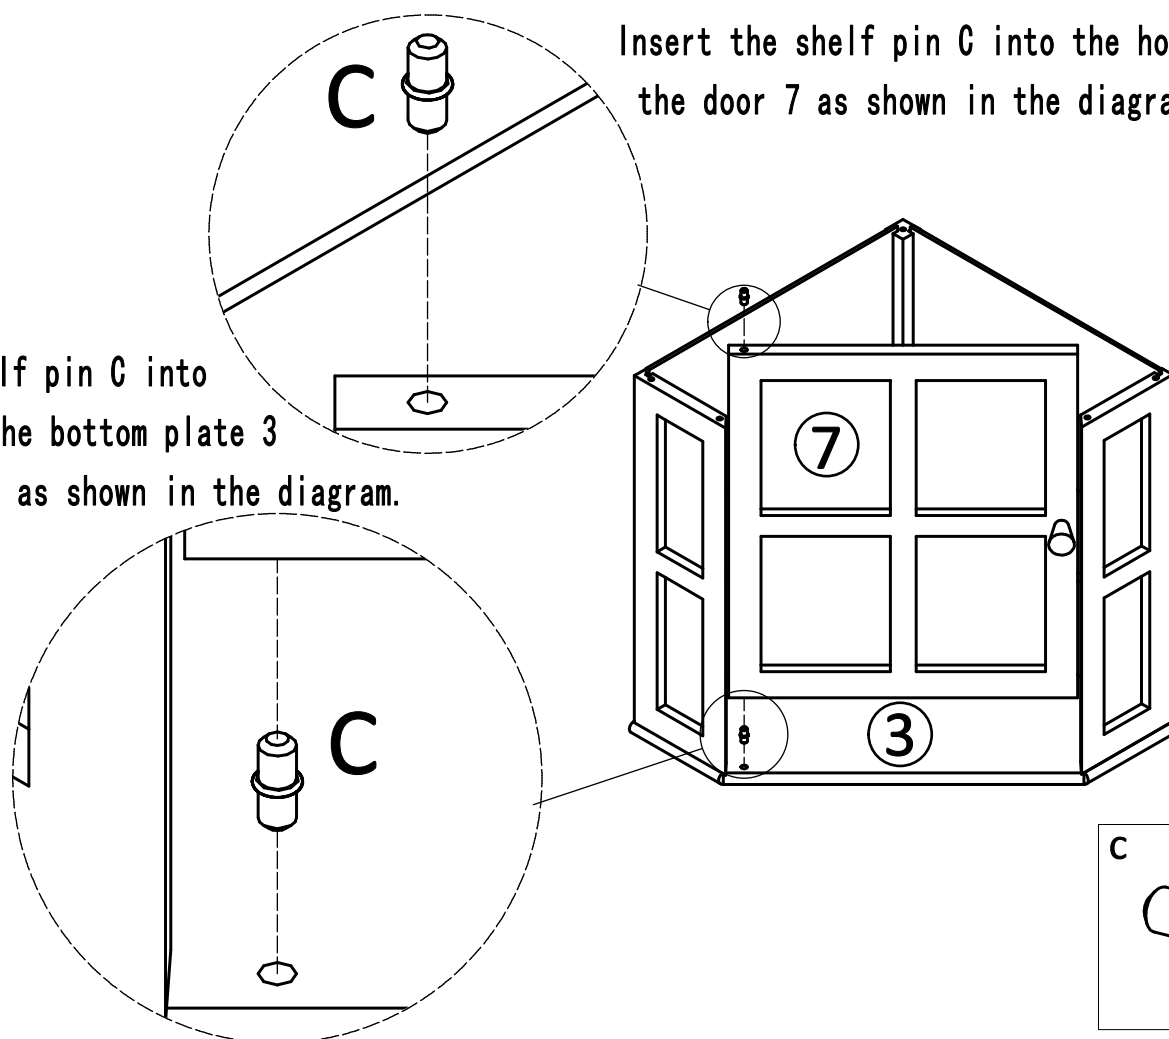


8

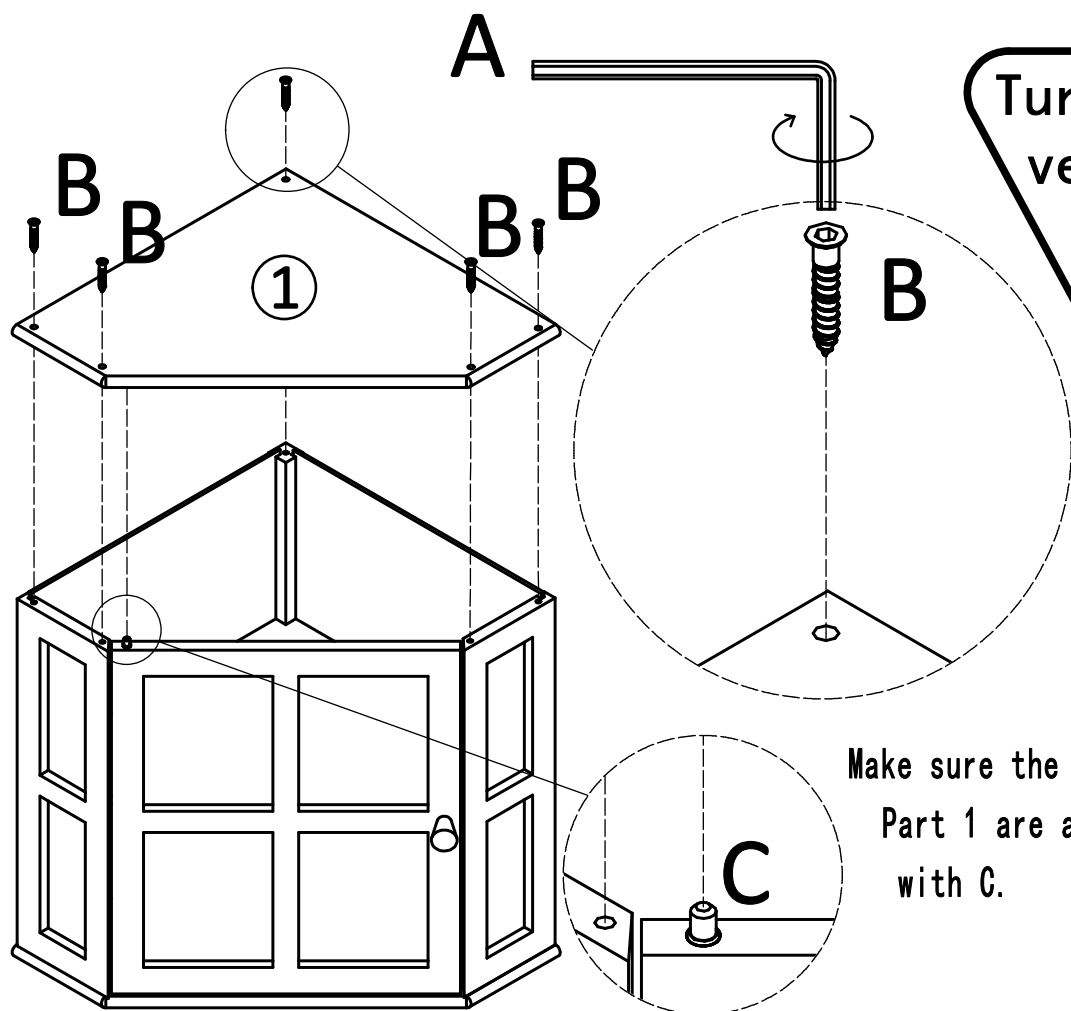


Turn the screws
vertically
from slow
to fast.

Make sure the holes of
Part 1 are aligned
with C.

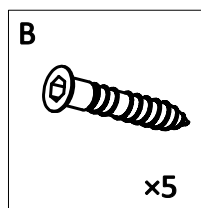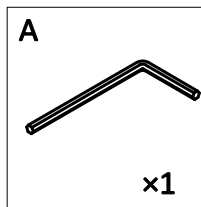

9

Insert three Type C shelf pins into
the same-height holes on parts 4 and 6 as shown.

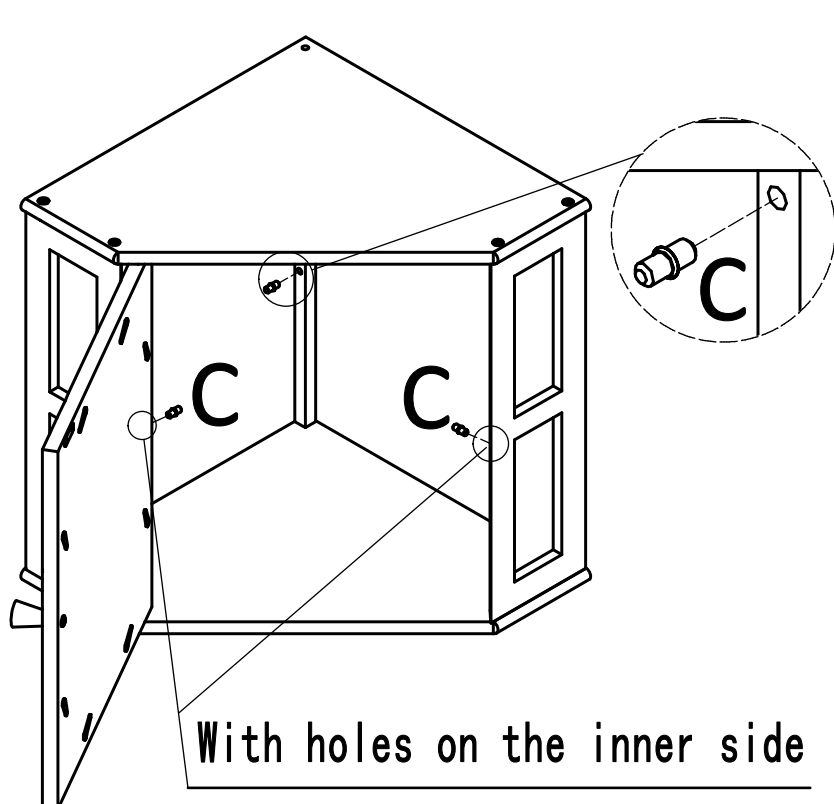

With holes on the inner side

