


Polybird




BALCONY CHAIR P-4


TOOLS

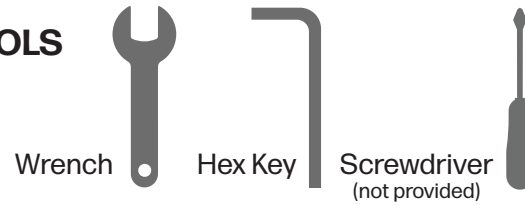

HARDWARE

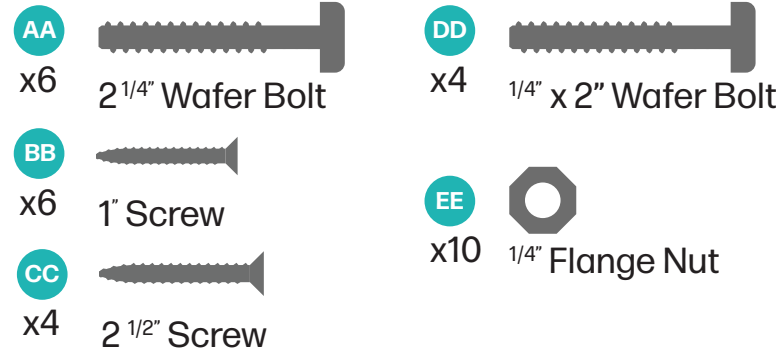


PARTS

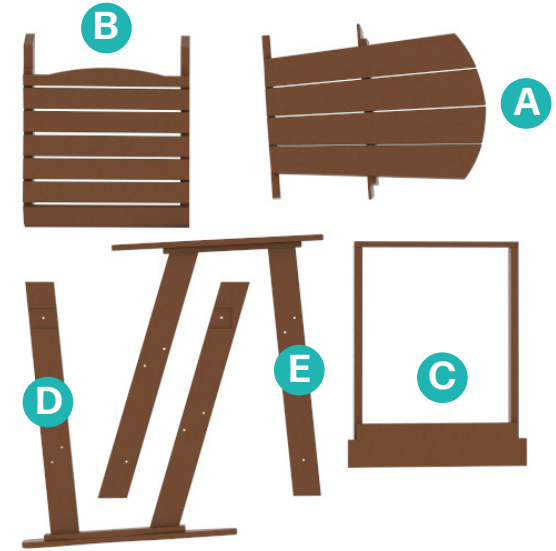


Note before starting: wait until the whole piece is assembled to tighten the bolts completely.

1

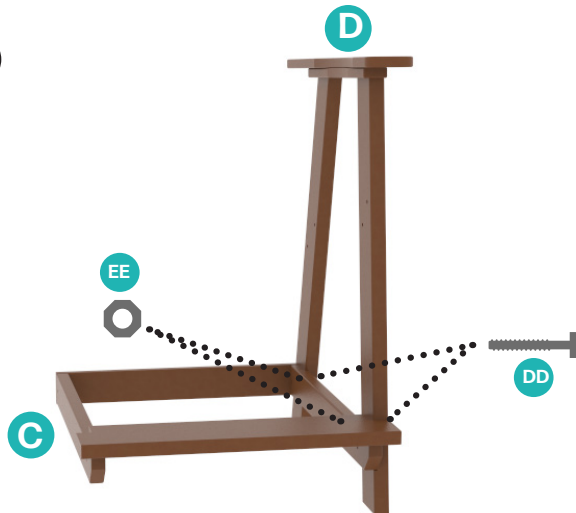


Attach legs (D & E) to foot rest (C). Starting with D from the outside, insert two $\frac{1}{4}$ " x 2" wafer bolts (DD). Fasten two $\frac{1}{4}$ " flange nuts (EE) to the end of the bolts on the inside. Repeat for leg E.

2

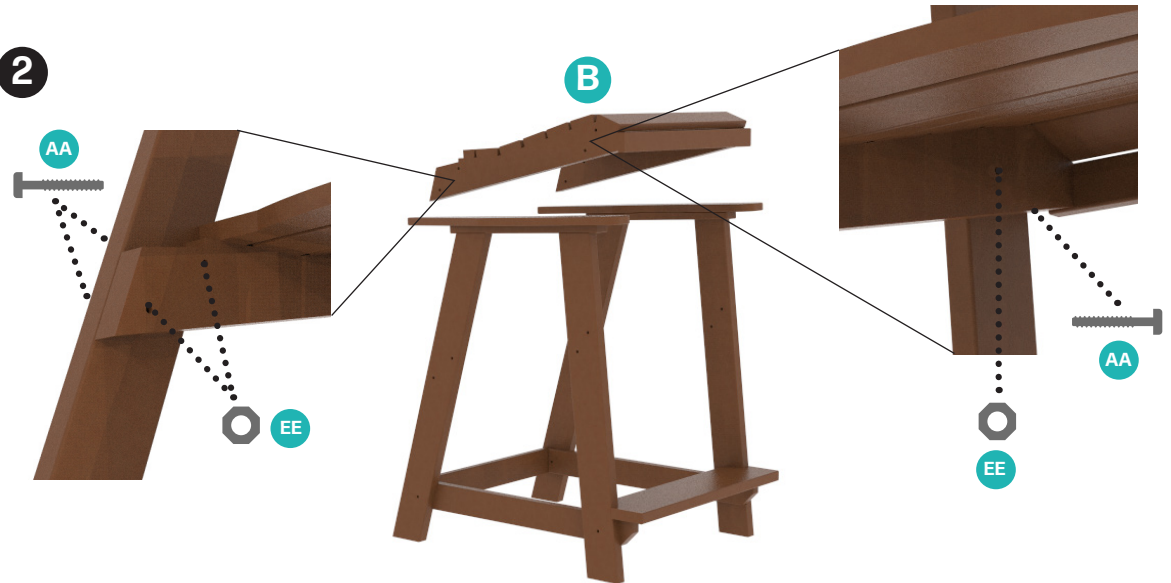

Attach seat (B) to assembly from step 1. Using six $2\frac{1}{4}$ " wafer bolts (AA) and working from the outside in, attach B with four bolts on the seat back and two on the seat front. Finish bolts with six $\frac{1}{4}$ " flange nuts (EE).

3

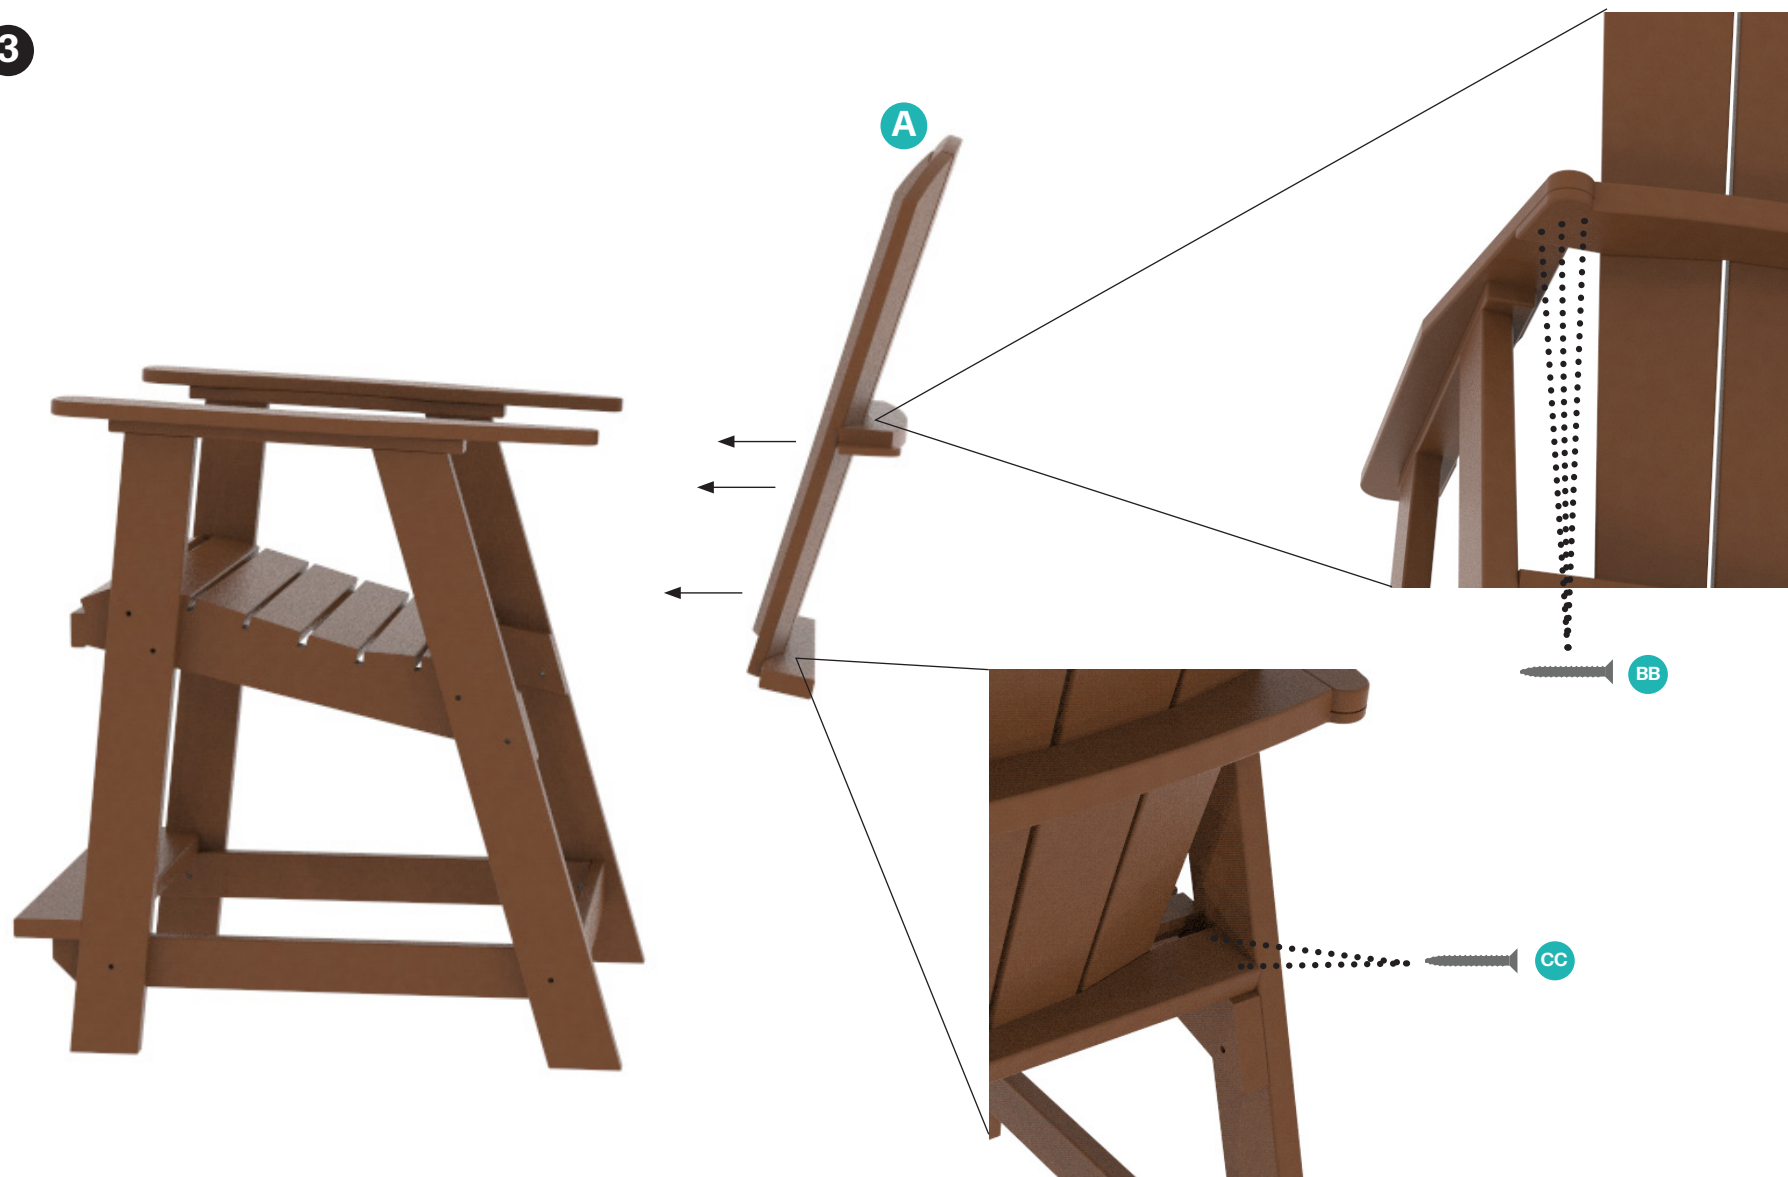

Align chair back (A) with chair assembly from step 2. Attach at the back of the seat using four 2 1/2" screws (CC). Attach under the arm rests using six 1" screws (BB).

We hope you enjoy your new piece of furniture for years to come!