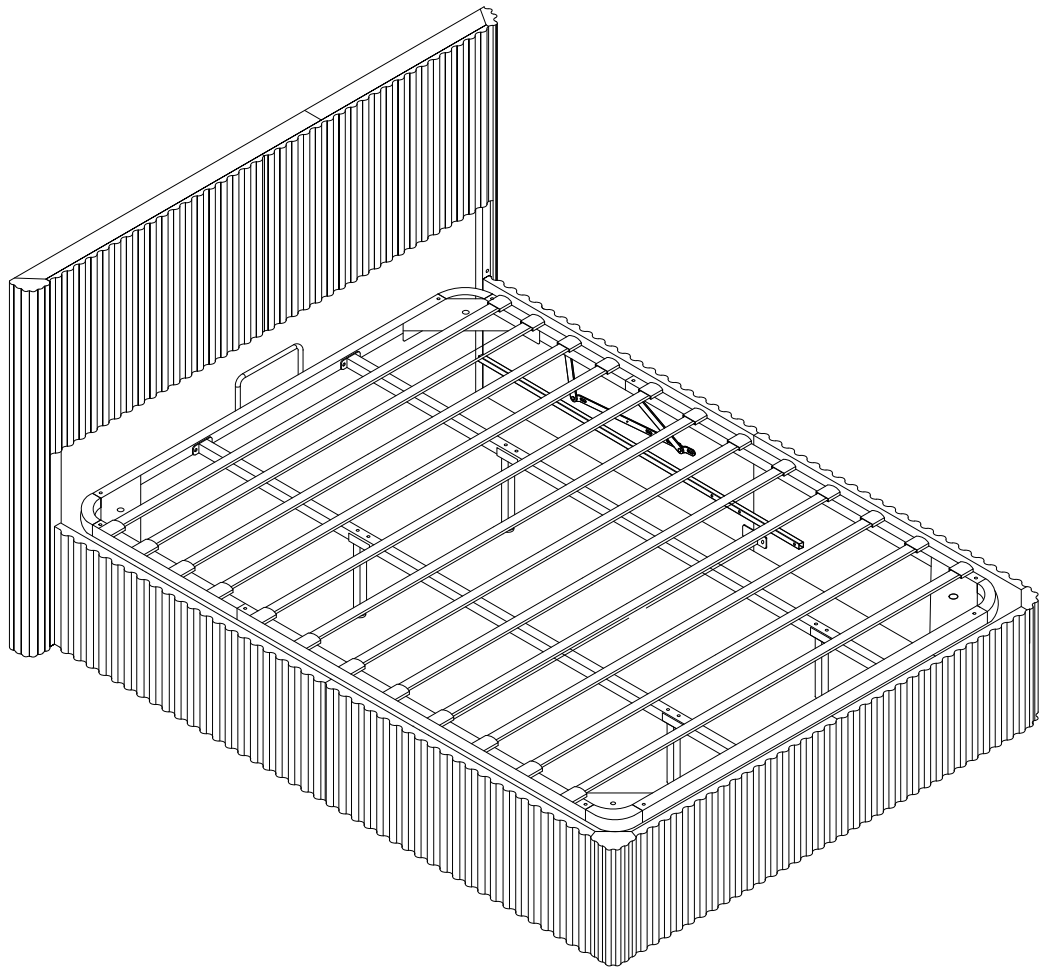


Assembly Instructions

————— BED137BK —————



General Guidelines

- Please read the following instruction carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps. Please contact us when further information and help are needed.

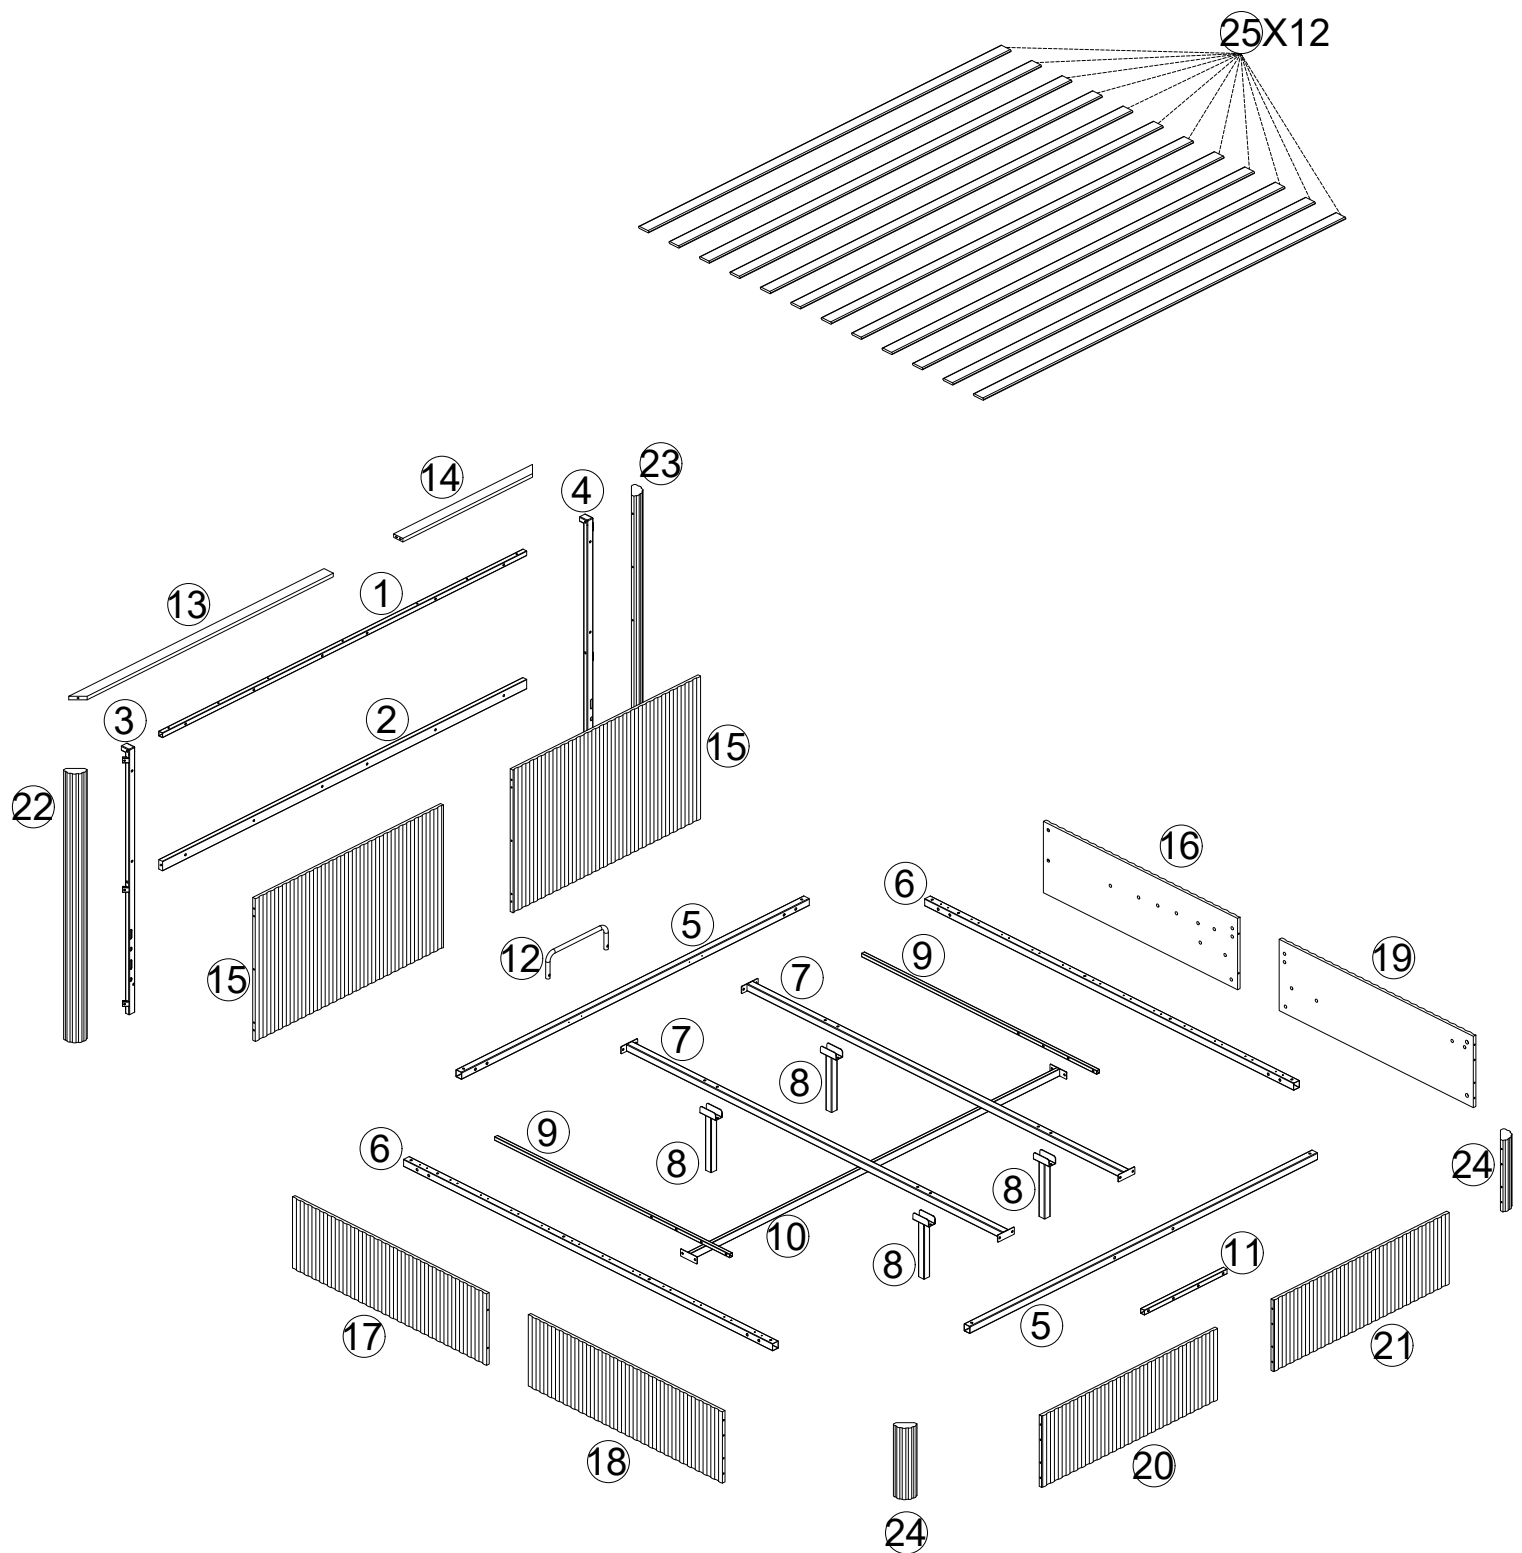
Notes

- The product is intended for indoor use only. The product must be assembled and used in accordance with the provisions of the manual. Personal injury and/or damage to product may occur if products are used outside of their intended purposes and/or if products have been changed/modified from their original design. The seller does not assume any responsibility or liability with respect to any injury/damage caused by incorrect assembly or improper use.
- Avoid long-term exposure to humid environments to prevent mildew.
- Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.
- Do not place any hot objects on the surface of the product.
- If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.
- Please assemble the item on a spacious surface and do not place the unwrapped product directly on the ground to avoid product damage.
- Please do not stand or sit on the wooden boards.
- Please wear gloves during the assembly and/or disassembly process to avoid scratches from any sharp edges.
- Please match the corresponding part and fitting based on the part number in the manual.
- If the part does not match with the fitting, please check the piece as specified in this manual.
- During assembly, first loosely align all screws with the corresponding pre-drilled holes and then tighten the screws one by one.
- Periodically inspect screw tightness while the product is in use. If necessary, retighten to ensure structural integrity.
- If you accidentally spill water or another liquid on the surface, immediately wipe clean with a dry towel.
- Please keep the product away from sharp, pointed objects and corrosive substances to prevent product damage.
- Please place this item on level, solid ground during use.






















Warnings

- During assembly, keep all small parts out of the reach of children. It may be fatal if swallowed or inhaled.
- Children should not climb or play on the product in order to avoid tipping over the furniture and causing serious injury.
- To avoid the potential dangers of suffocation, please keep all parts and packaging (film, plastic bags, foam, etc.) away from babies and children.
- Keep sharp objects and corrosive items away from the product to avoid any damage or injury.
- Do not shake or move violently during use to avoid tipping over the product.




















Parts List (EN)




Parts List (EN)

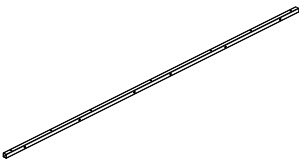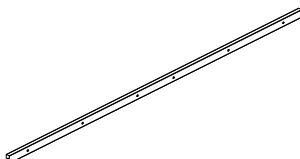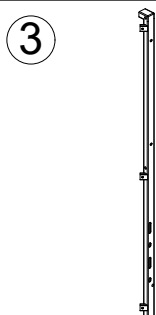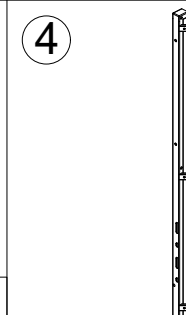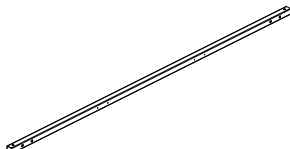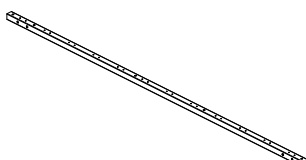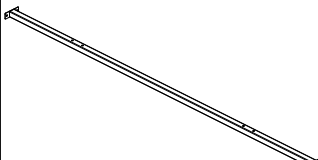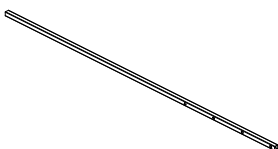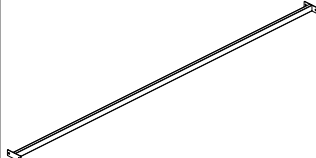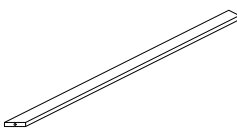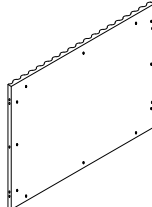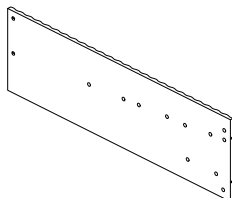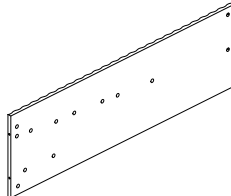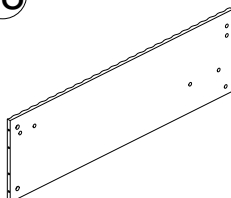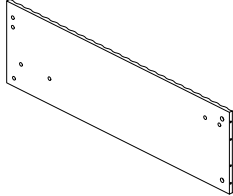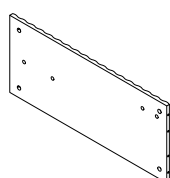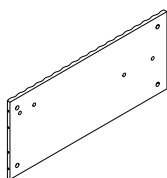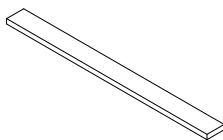①  1PC	②  1PC	③  1PC	④  1PC	
⑤  2PCS	⑥  2PCS	⑦  2PCS	⑧  4PCS	
⑨  2PCS	⑩  1PC	⑪  1PC	⑫  1PC	
⑬  1PC	⑭  1PC	⑮  2PCS	⑯  1PC	
⑰  1PC	⑱  1PC	⑲  1PC	⑳  1PC	
㉑  1PC	㉒  1PC	㉓  1PC	㉔  2PCS	㉕  12PCS

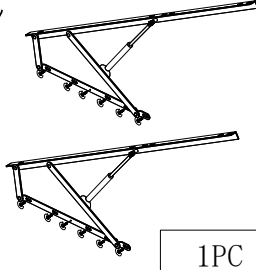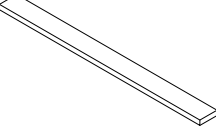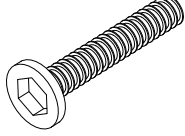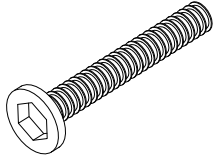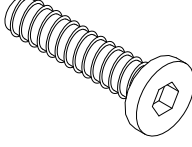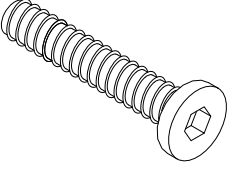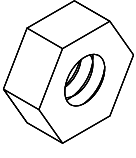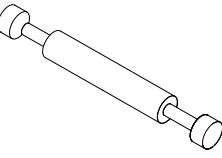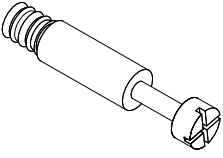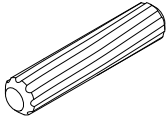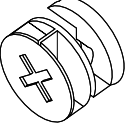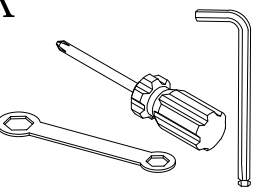Hardware list (EN)

A  6PCS	B  4PCS	C  1PC	D  24+2PCS
E  1PC	F  2PCS	G  10*70 12+2PCS	H  M8*40 6+1PC
I  M8*50 4+1PC	J  M6*12 64+4PCS	K  M6*28 20+2PCS	L  M6*45 12+1PC
M  ST5*30 9+1PC	N  M8 6+1PC	O  M6 8+1PC	P  3.5*14 6+1PC
Q  ∅6*80 5+1PC	R  ∅6*40 14+1PC	S  ∅6*30 22+2PCS	T  ∅15*9.5 24+2PCS
U  M8*12.5 4+1PC	V  10*19 28+2PCS	W  M8 4PCS	X  1PC

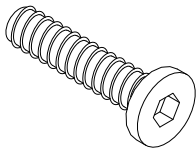Hardware list (EN)

Y  M6*25 12+1PC			
---	--	--	--

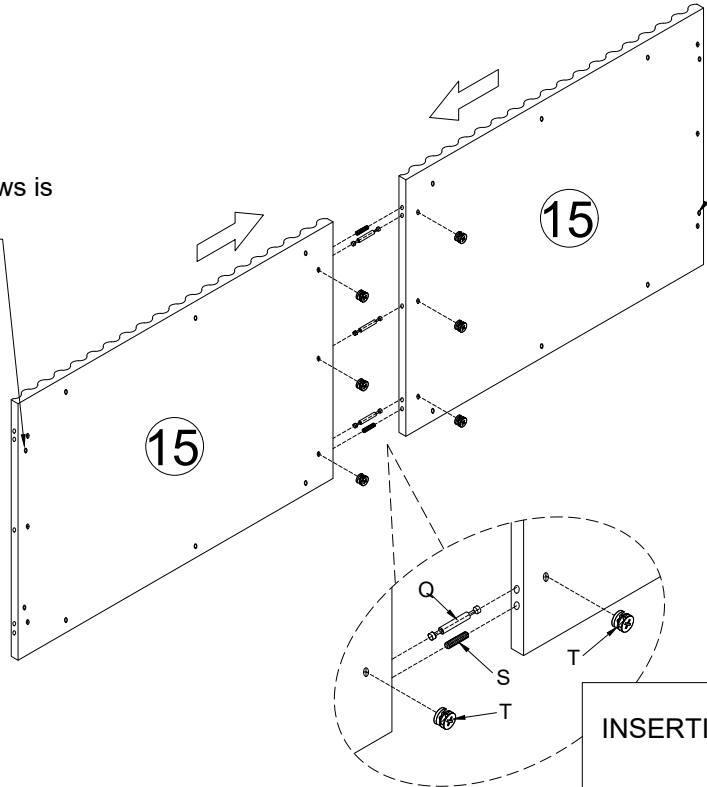
Installation suggestion: 1-2 people



Note: The nut of the air pressure rod is in a removed state. If the air pressure rod fails to press in place after being pressed down, please slightly lift the bed and press again to exhaust the air inside the rod. Only then can it be pressed in place normally

STEP 1

Note: The side with the screws is on the outside.



Note: The side with the screws is on the outside.

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

	Q×3PCS
	S×2PCS
	T×6PCS

WARNING!!! After locking Component T in place, Component Q may shift sideways. If such shifting occurs and the component cannot be locked, make adjustments accordingly.

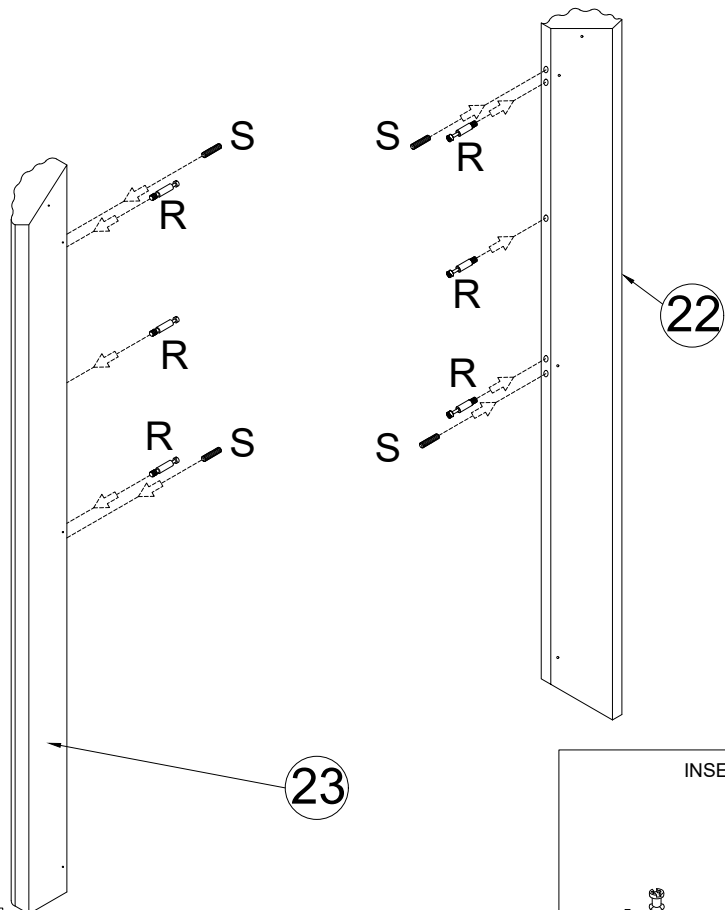
INSERTING AND TIGHTENING CAM-BOLT

Insert Cam-lock with arrow align to Cam-bolt head

CORRECT

WRONG

STEP 2



	R×6PCS
	S×4PCS

INSERTING AND TIGHTENING CAM-BOLT

Place Cam-bolt on pre-drilled hole and screw in vertically

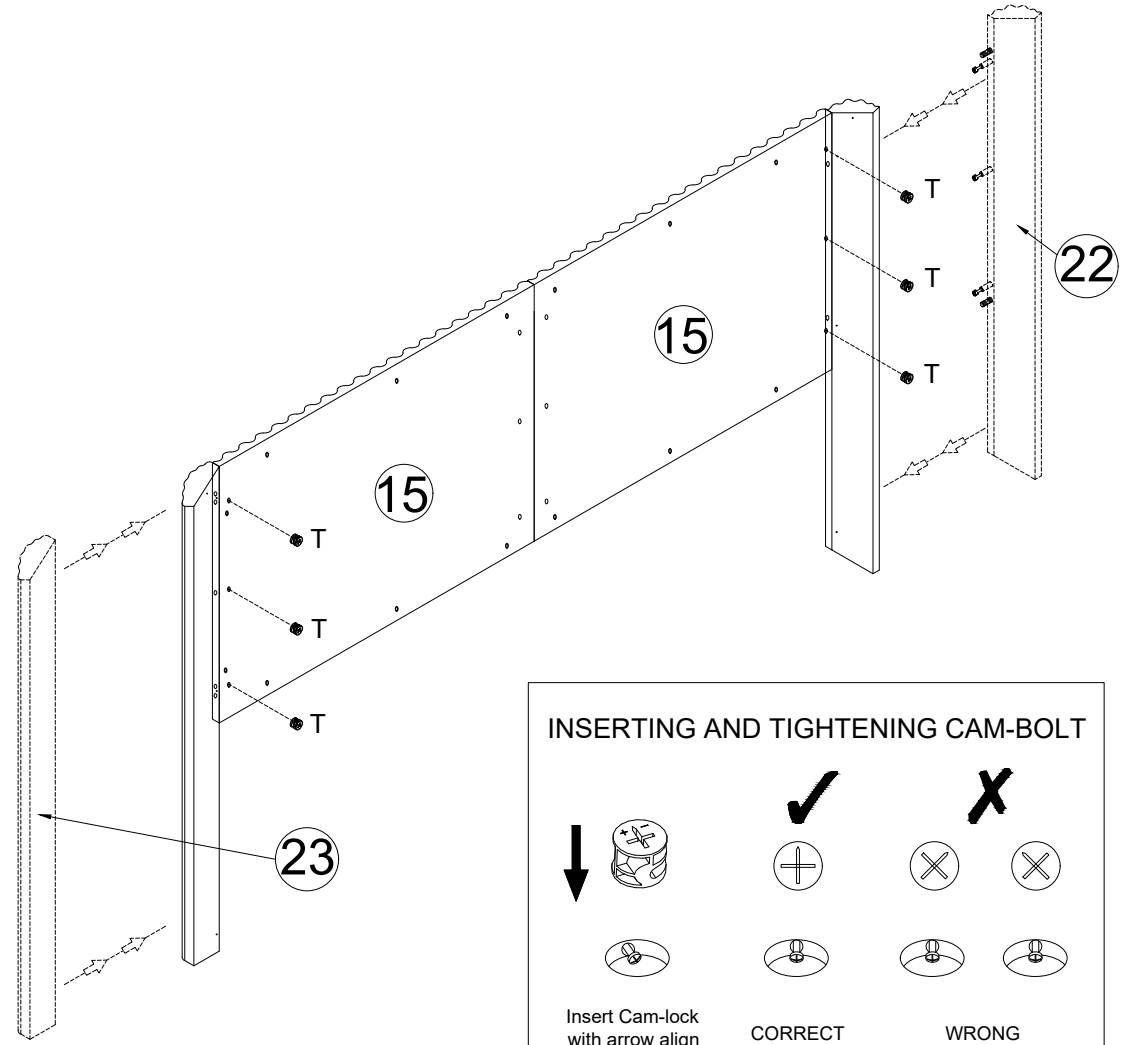
Shoulder is flushed (on the same level) with the panel.

Shoulder is above the panel.

STEP 3



Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.





T×6PCS

INSERTING AND TIGHTENING CAM-BOLT













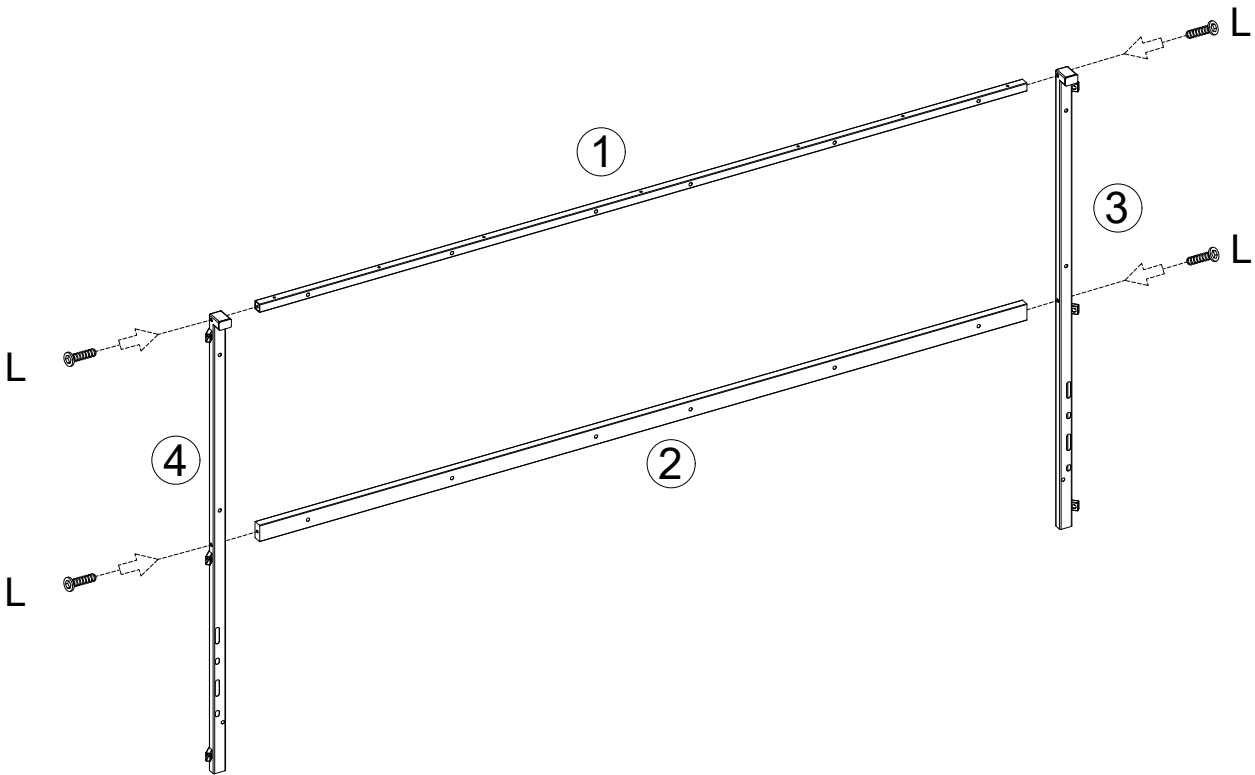


Insert Cam-lock with arrow align to Cam-bolt head

CORRECT

WRONG



STEP 4





L×4PCS

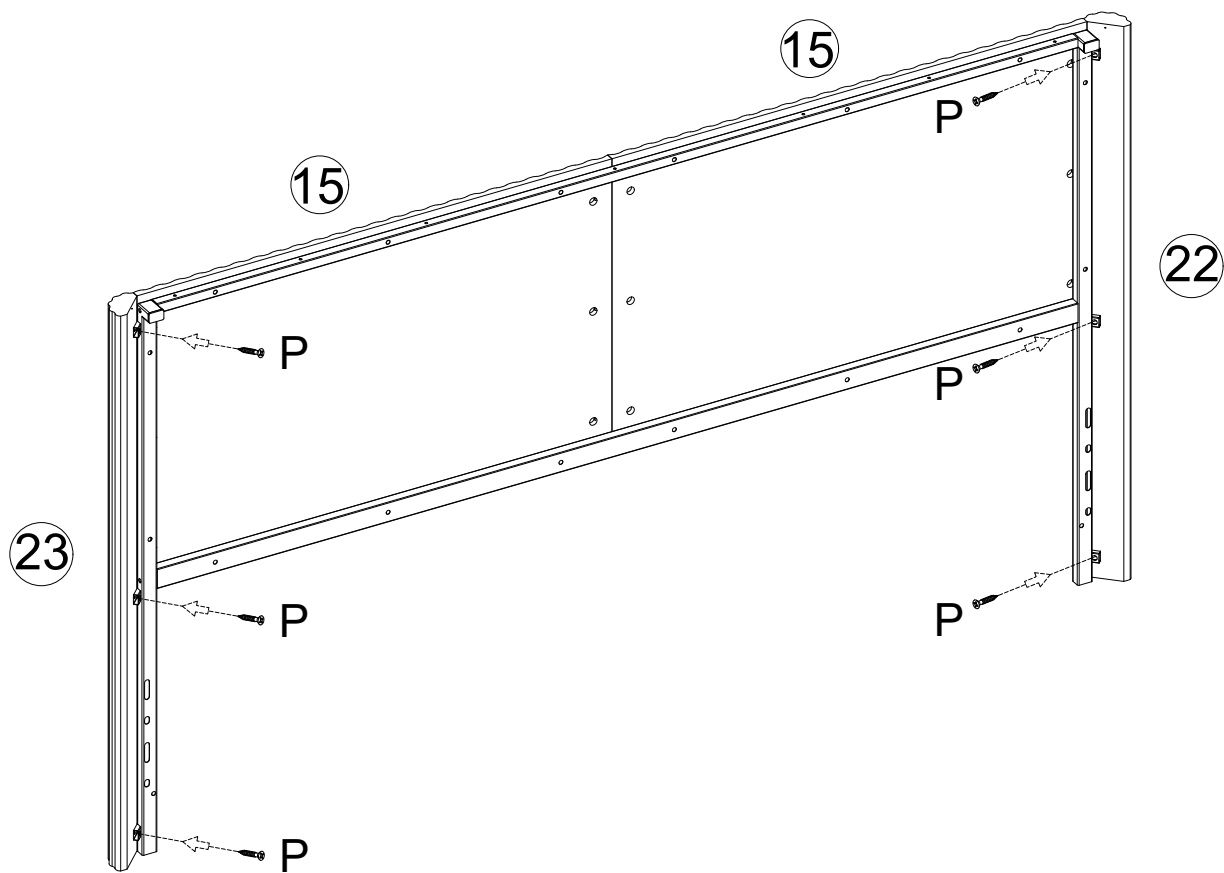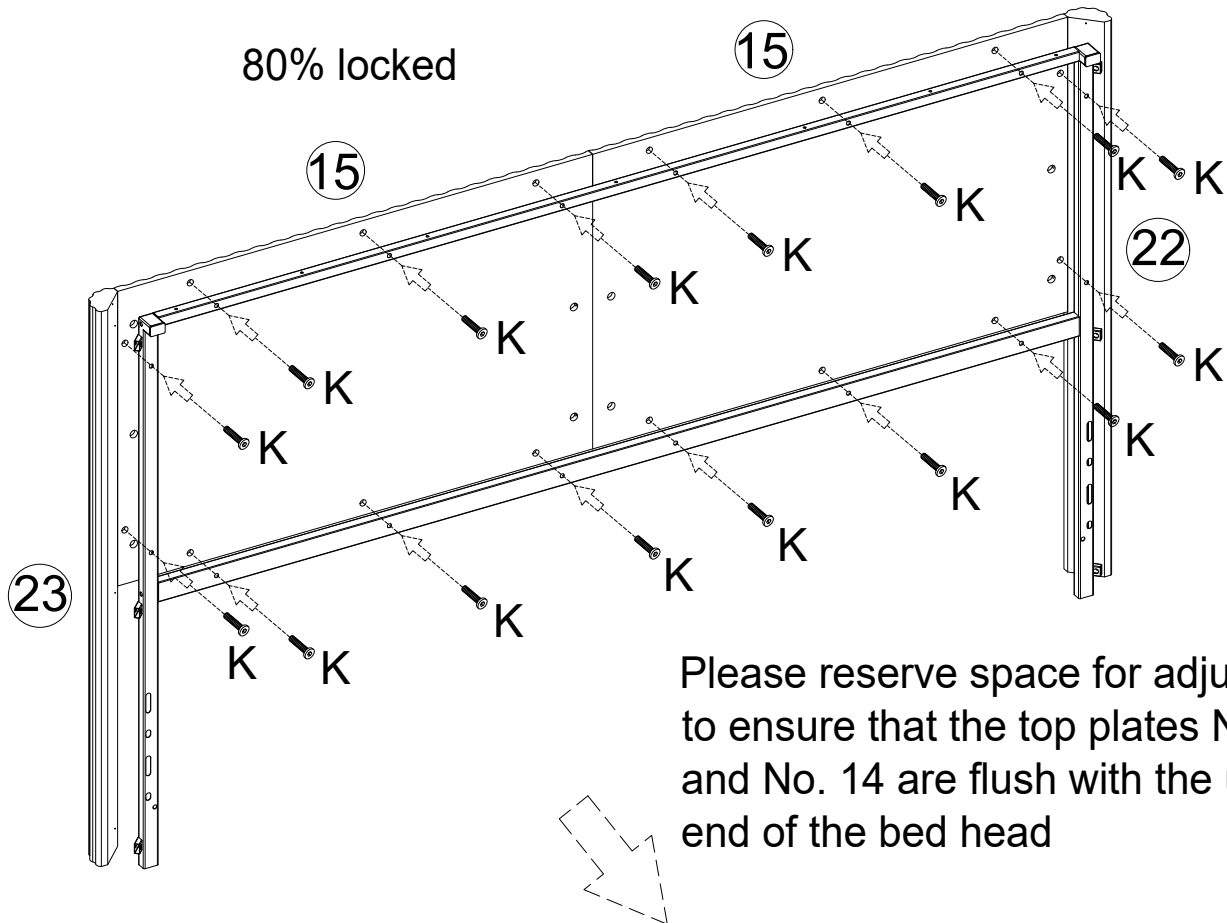
STEP 5





 M6X28	K×16PCS
 3.5*14	P×6PCS

STEP 6



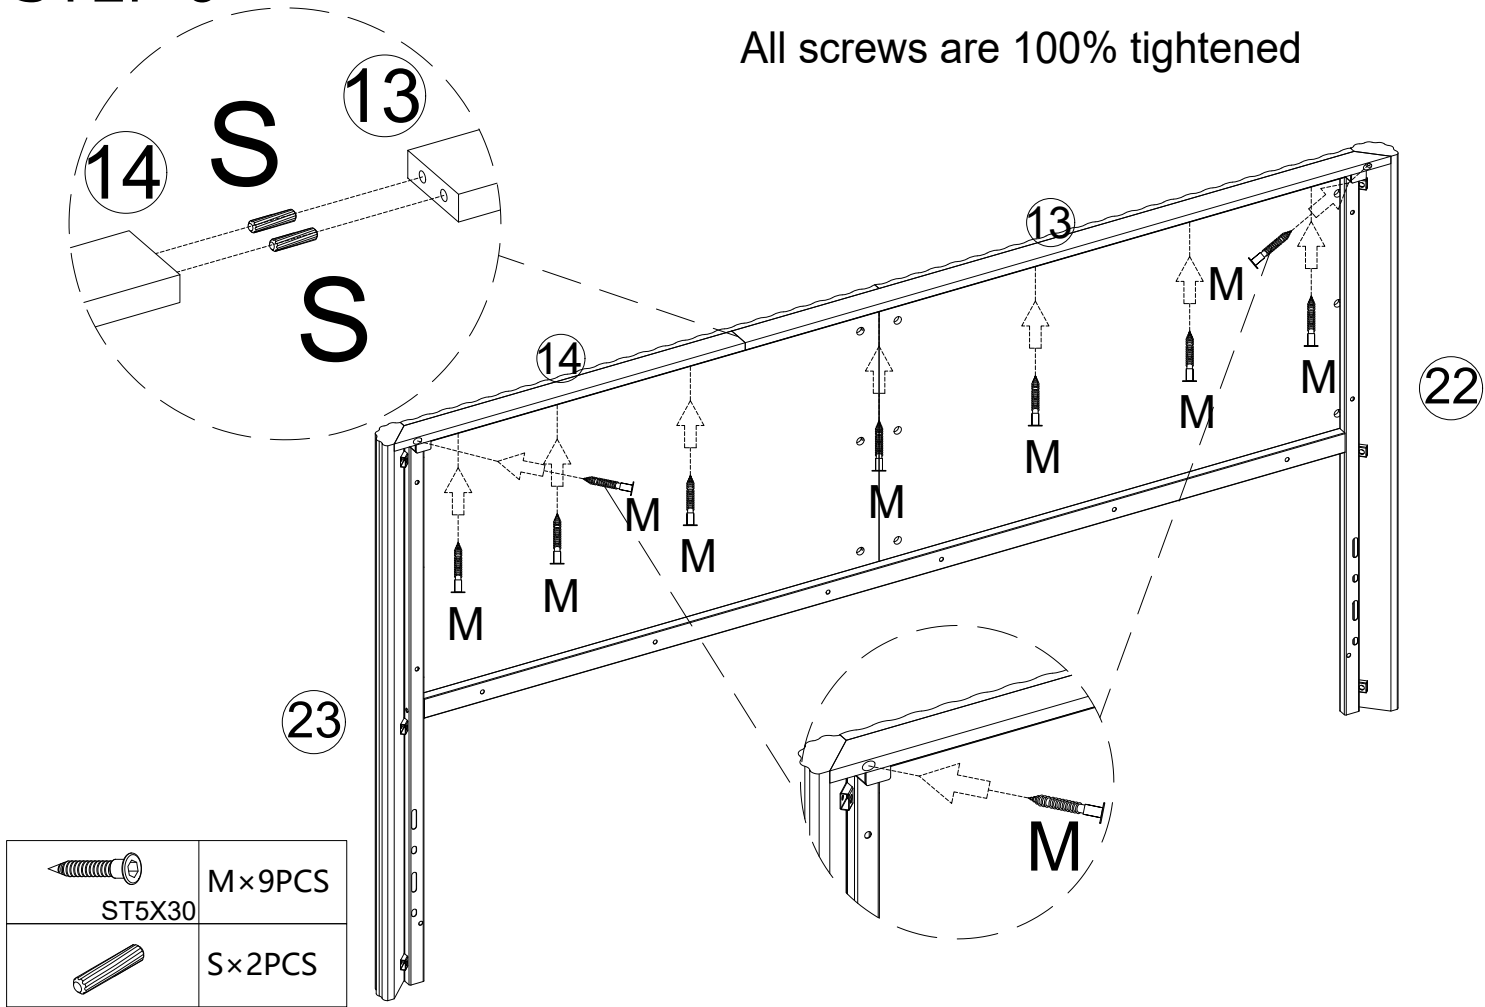
All screws are 100% tightened



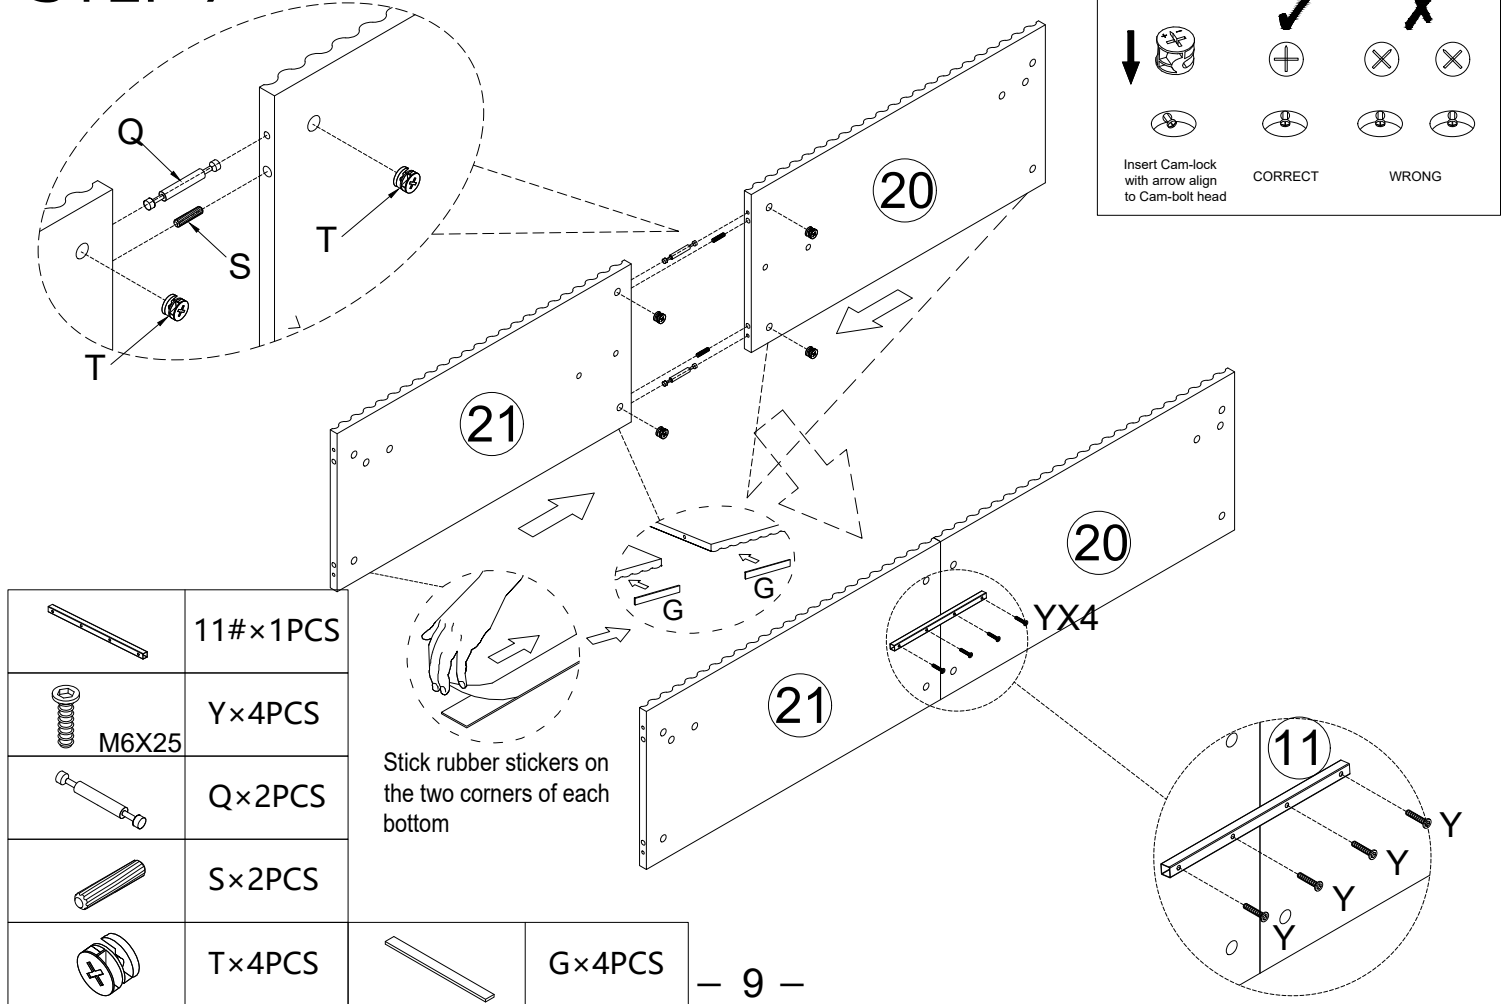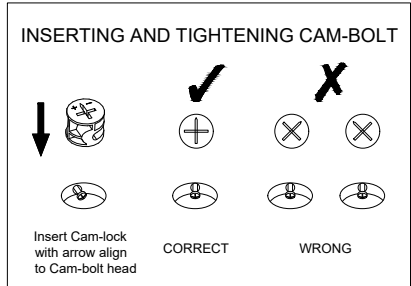STEP 7




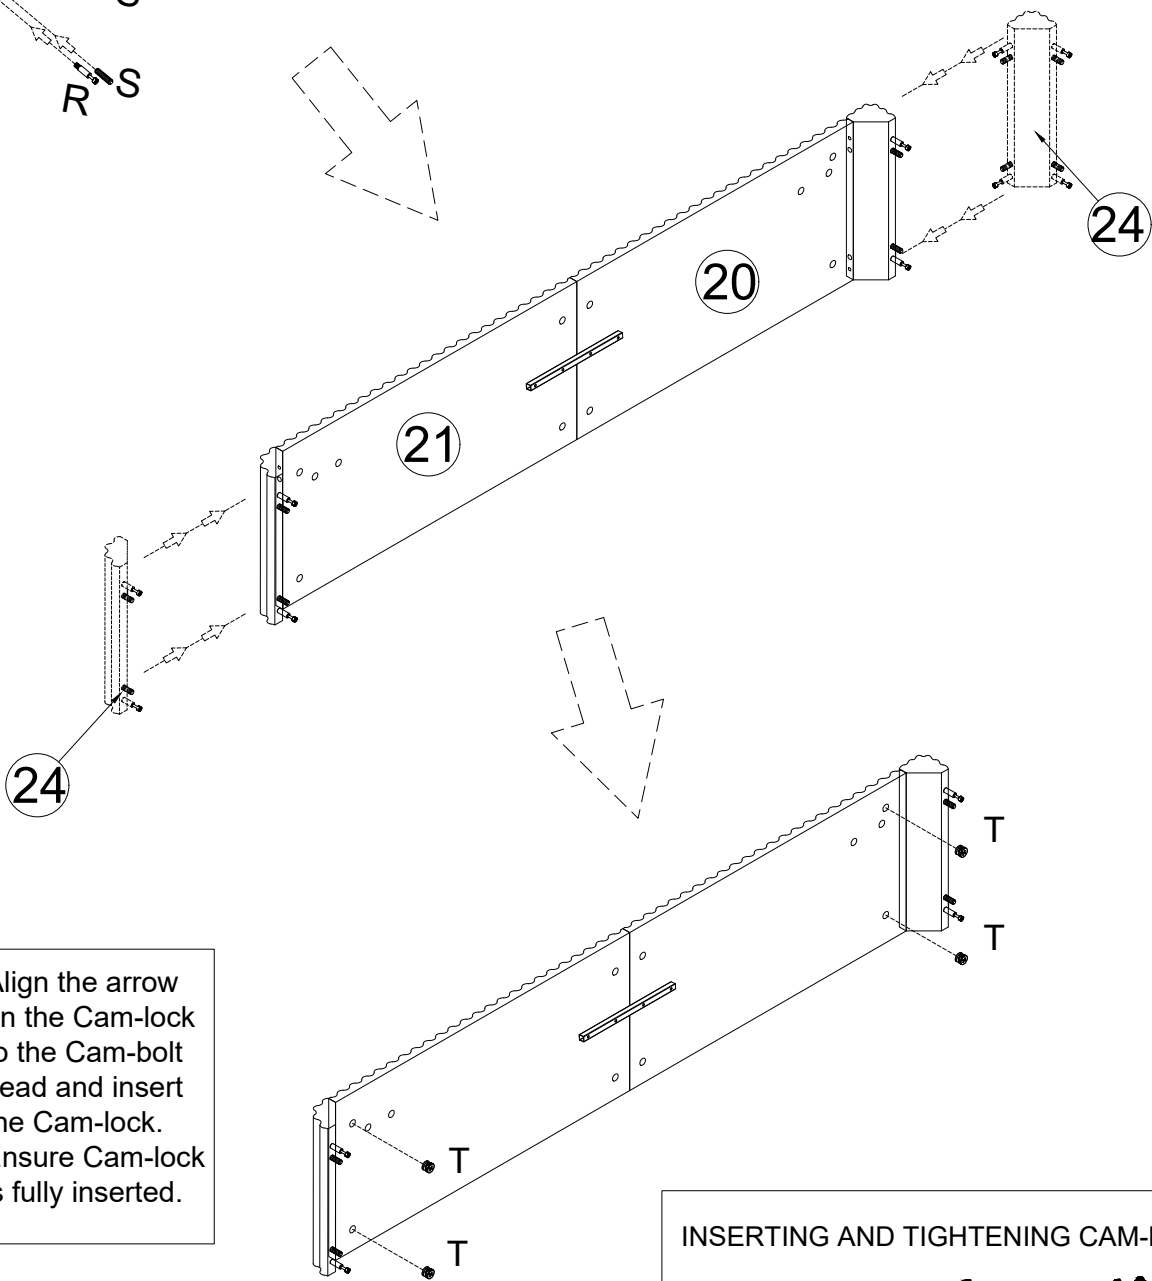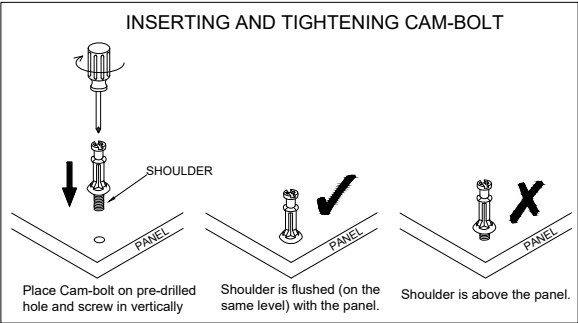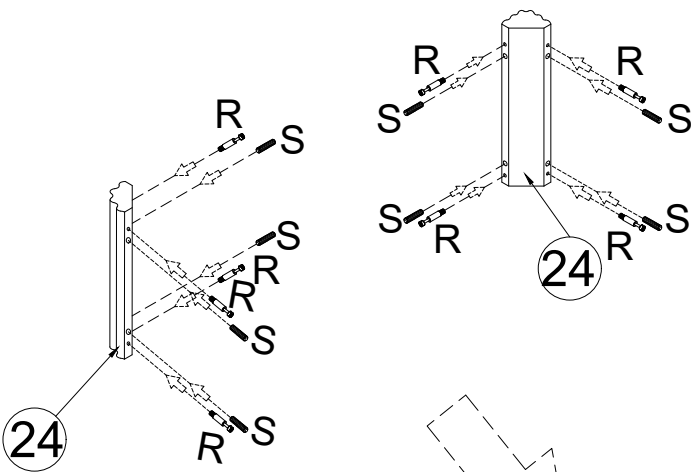STEP 8



 Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

	R×8PCS
	S×8PCS
	T×4PCS

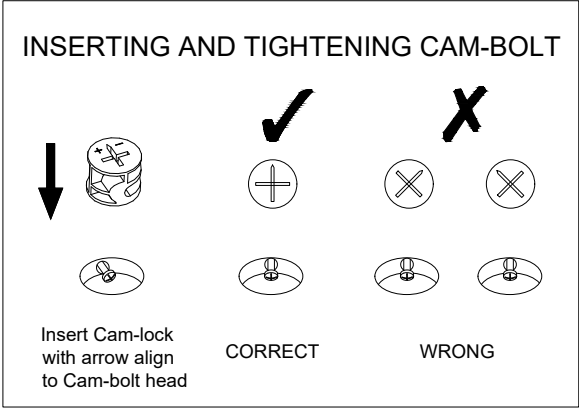


STEP 9

Note: Support the wooden plank during installation to prevent it from toppling over.



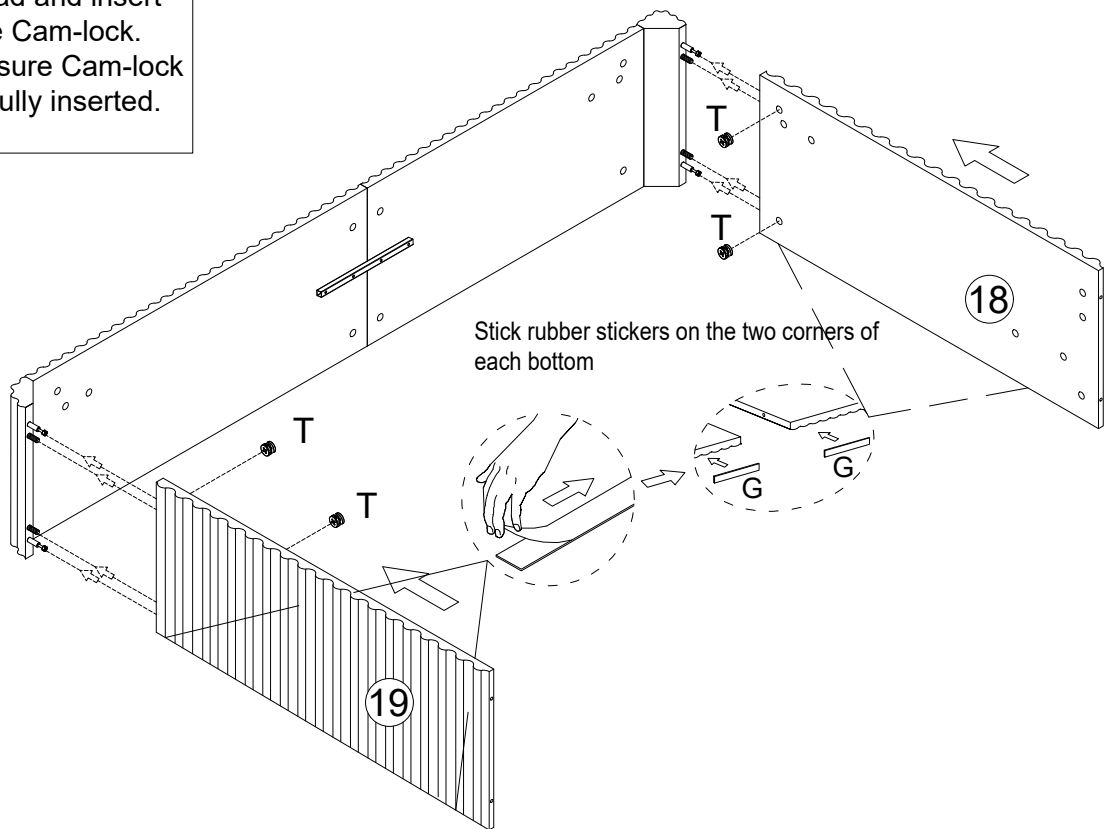Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.



INSERTING AND TIGHTENING CAM-BOLT









Insert Cam-lock with arrow align to Cam-bolt head

CORRECT

WRONG


	G×4PCS
	T×4PCS

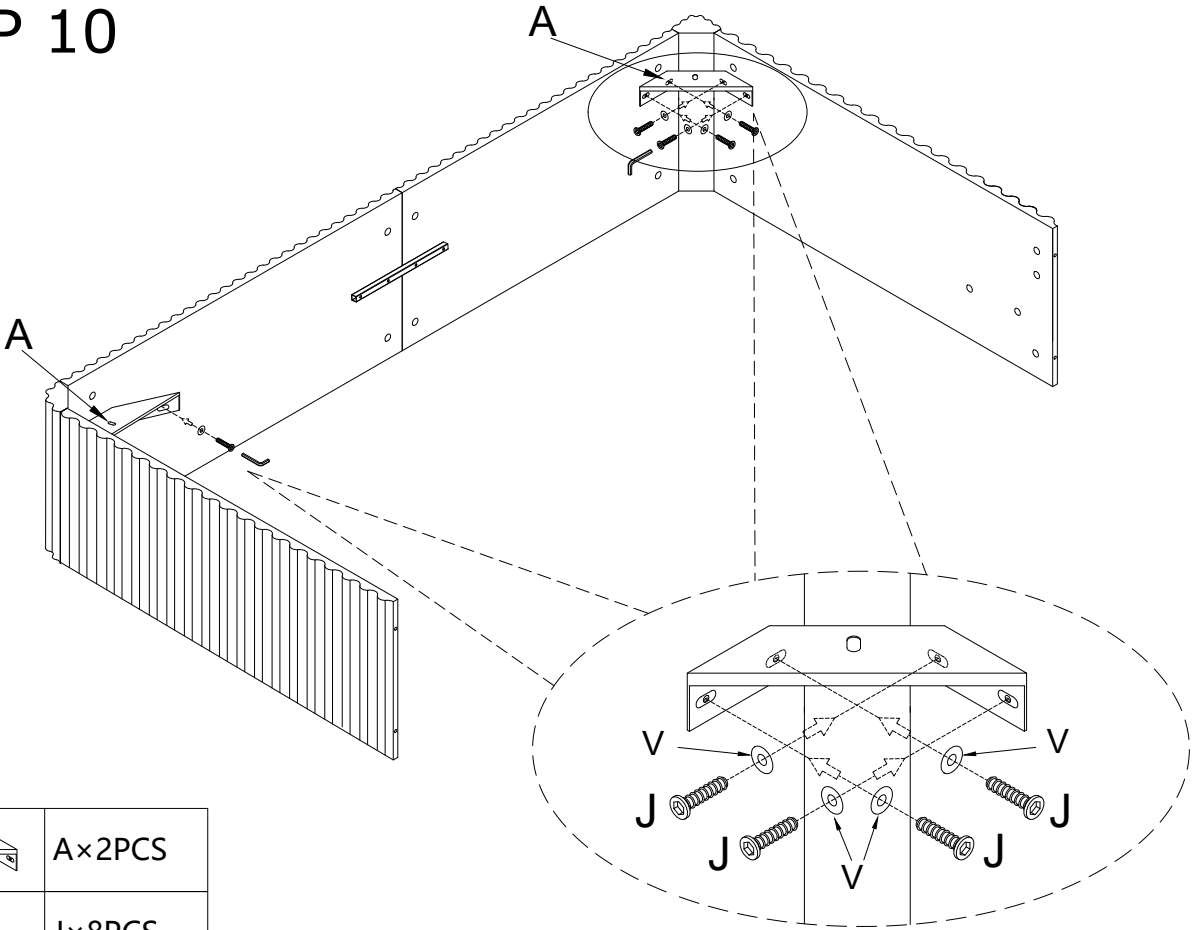STEP 10




	A×2PCS
 M6X12	J×8PCS
	V×8PCS

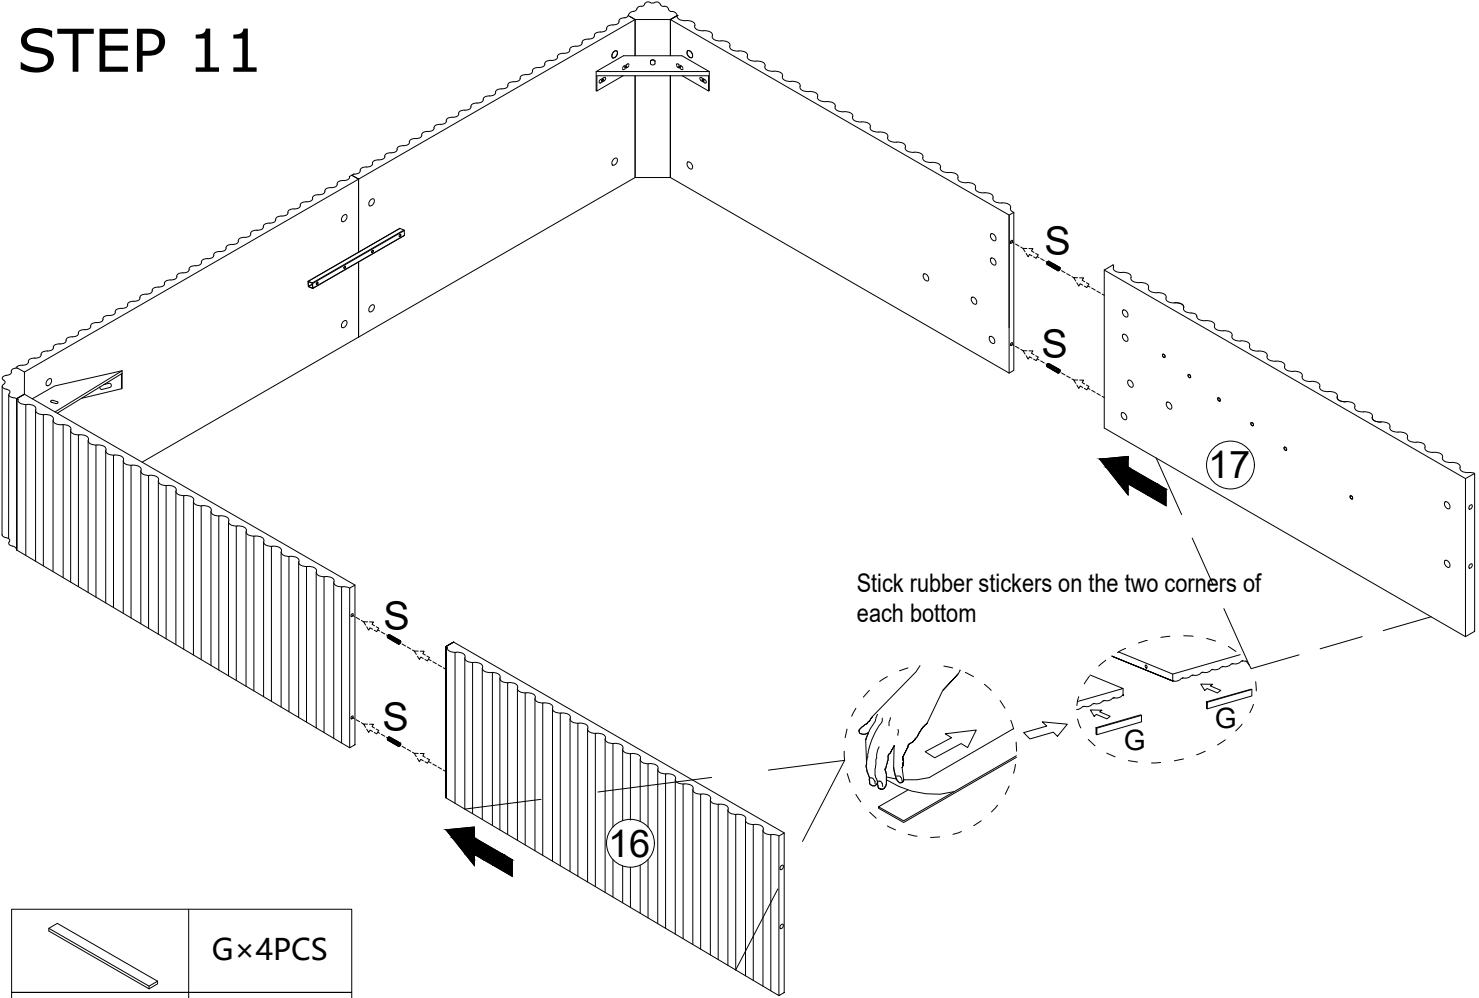STEP 11




	G×4PCS
	S×4PCS

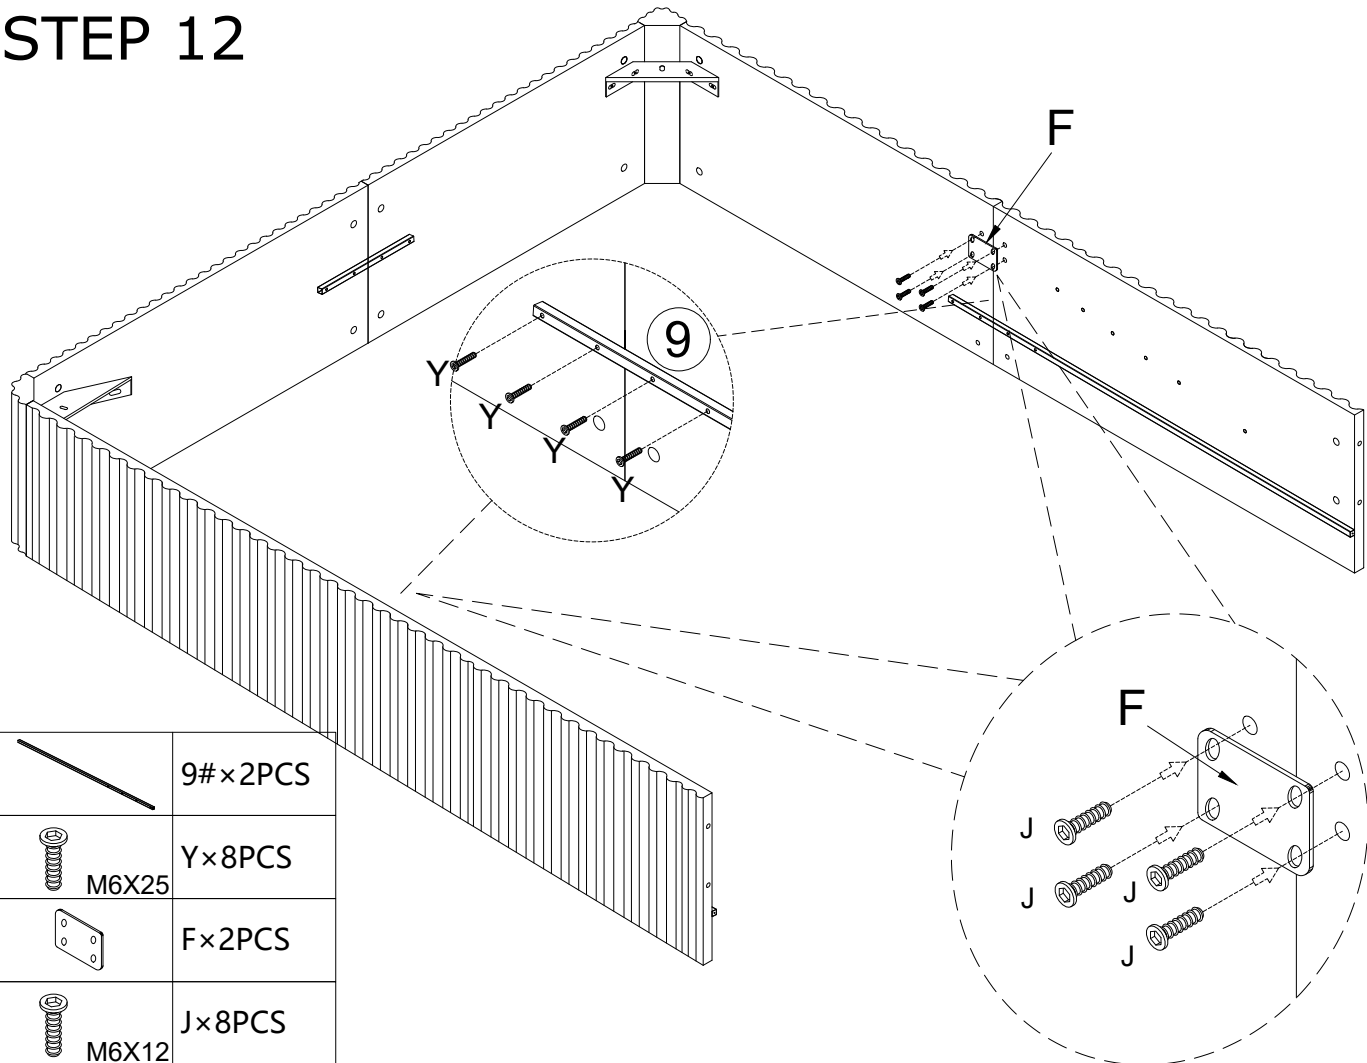
STEP 12



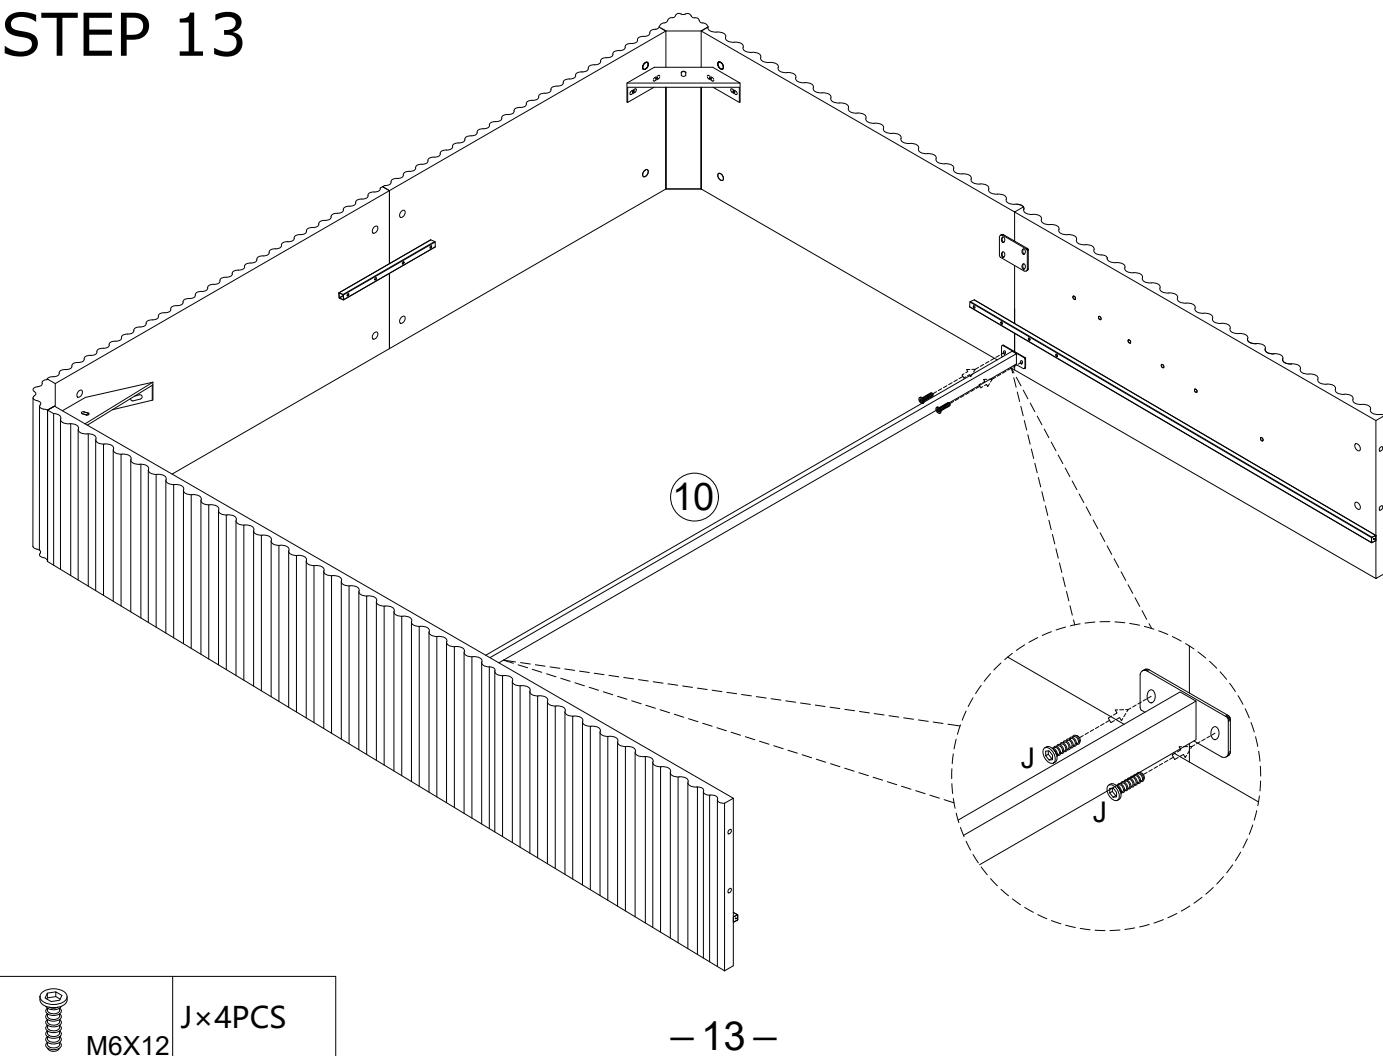STEP 13



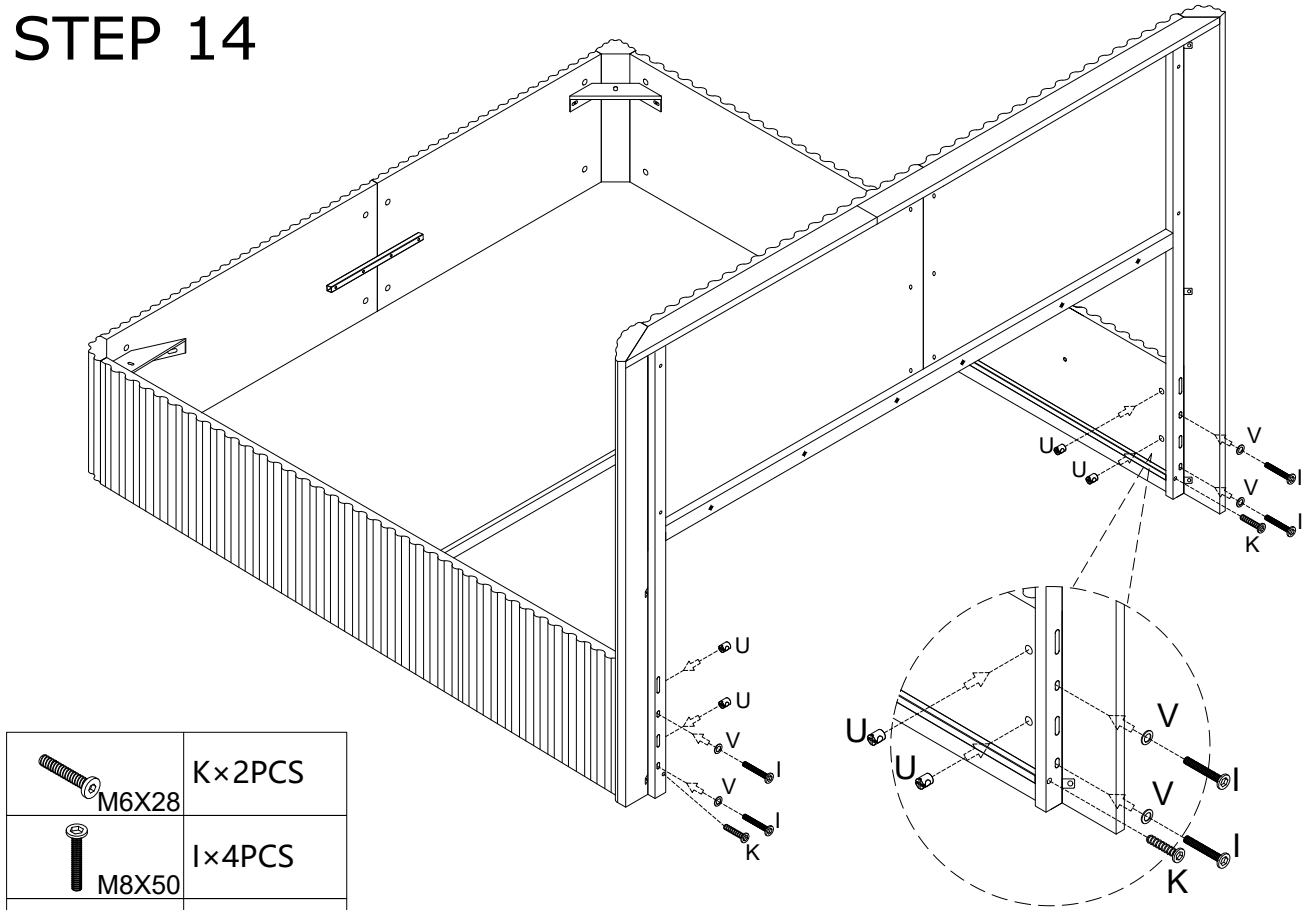
STEP 14



 M6X28	K×2PCS
 M8X50	I×4PCS
	U×4PCS
	V×4PCS


Note: When assembling, first insert the U accessory into the board, then tighten the screw. Note that the direction of the U parts should be aligned with hole position. If the screws cannot be locked, you can twist the U parts.

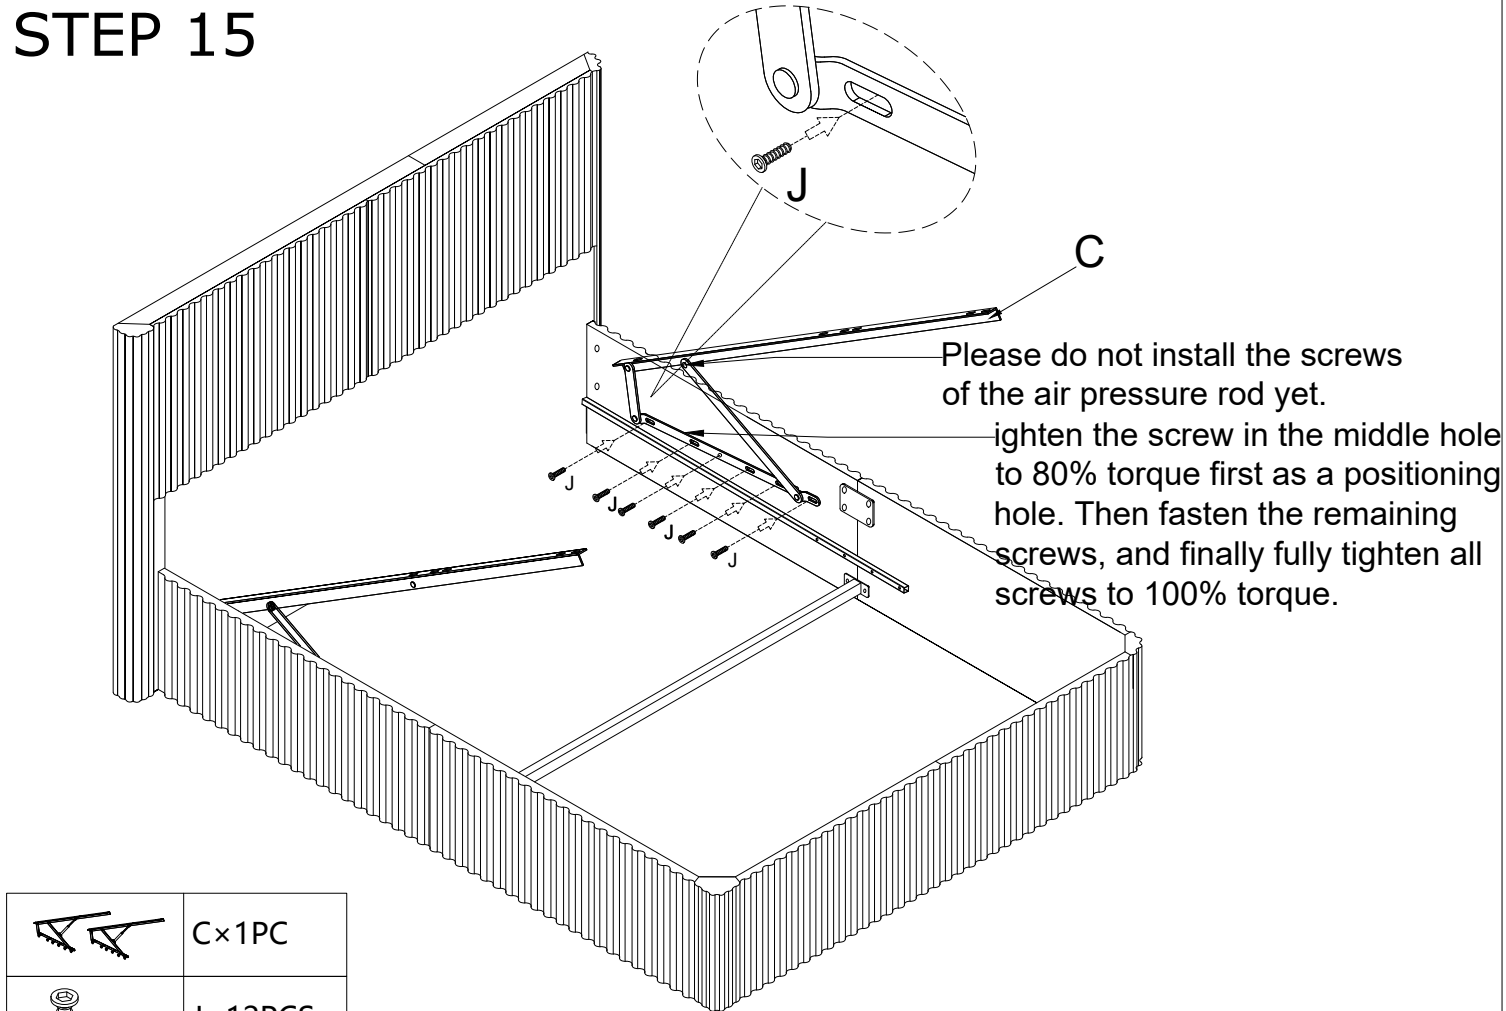STEP 15




	C×1PC
 M6X12	J×12PCS

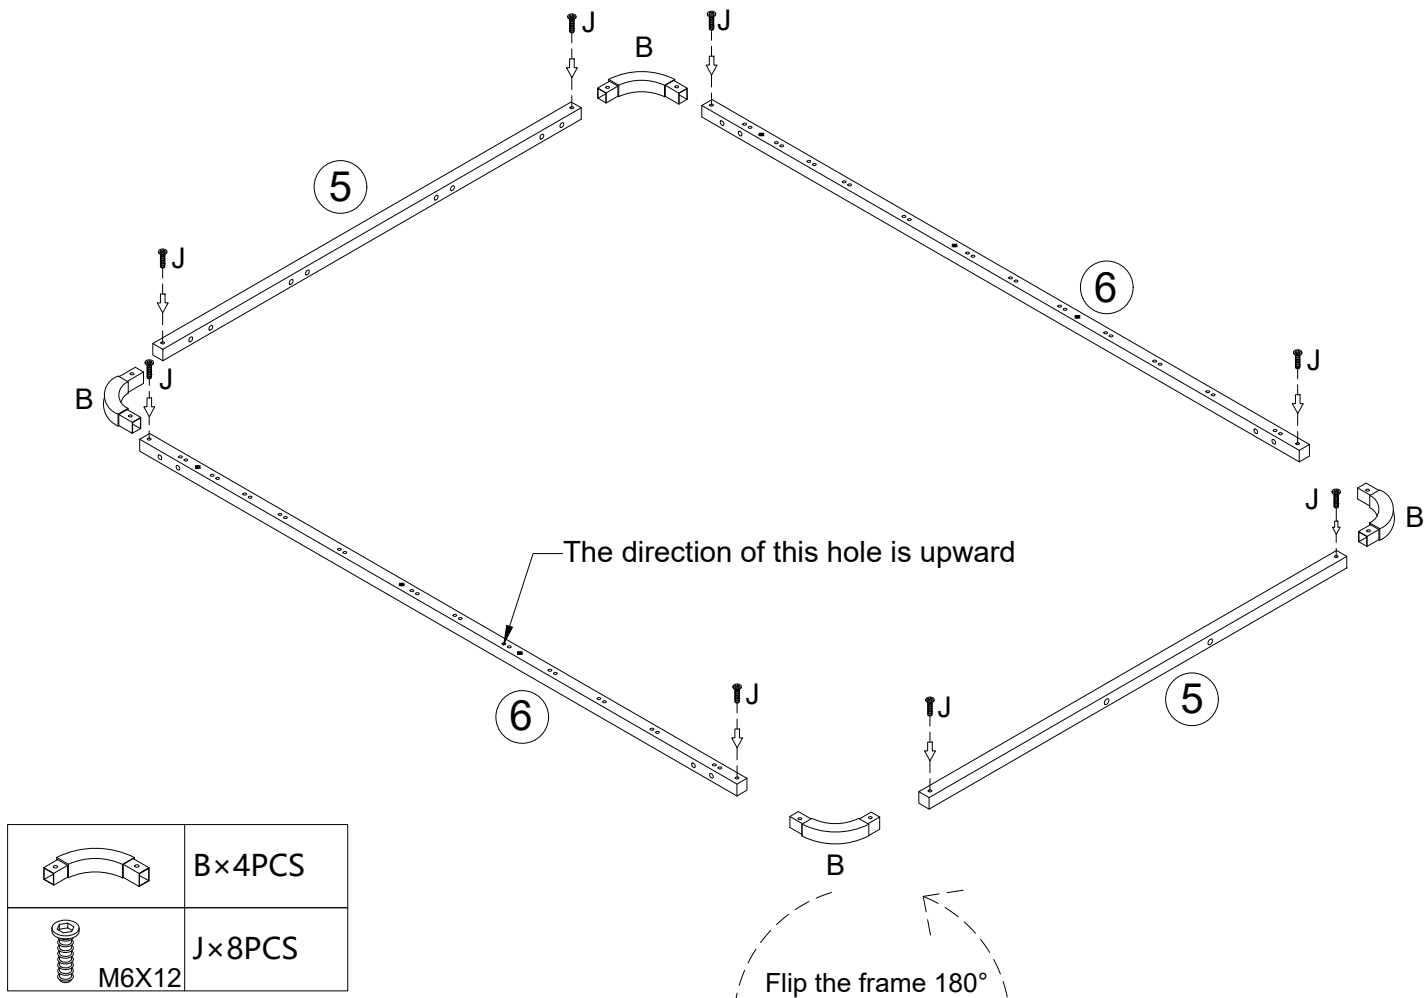STEP 16



STEP 17

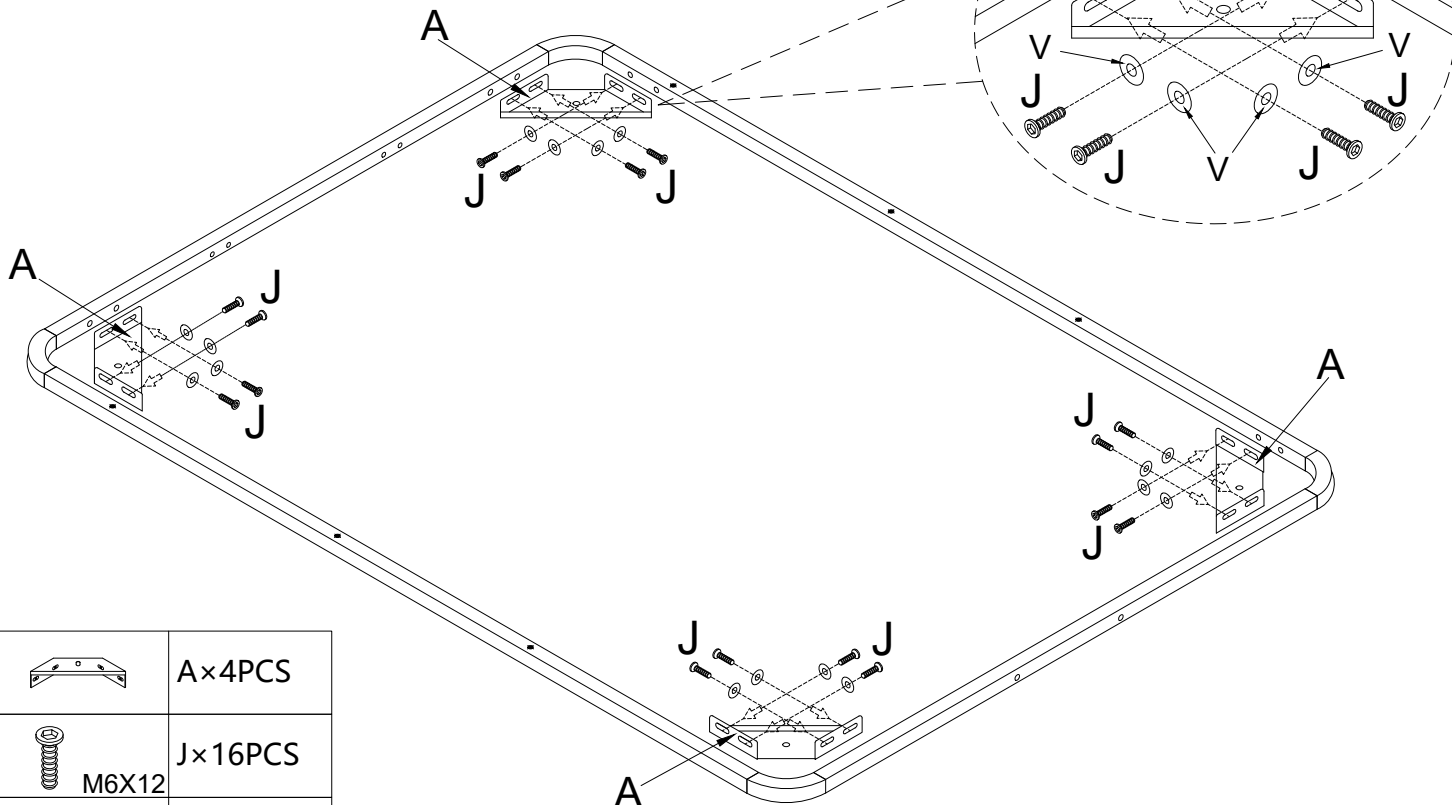
Flip the entire iron frame to install component A, pay attention to the direction of component A!!!



	A×4PCS
 M6X12	J×16PCS
	V×16PCS

STEP 18

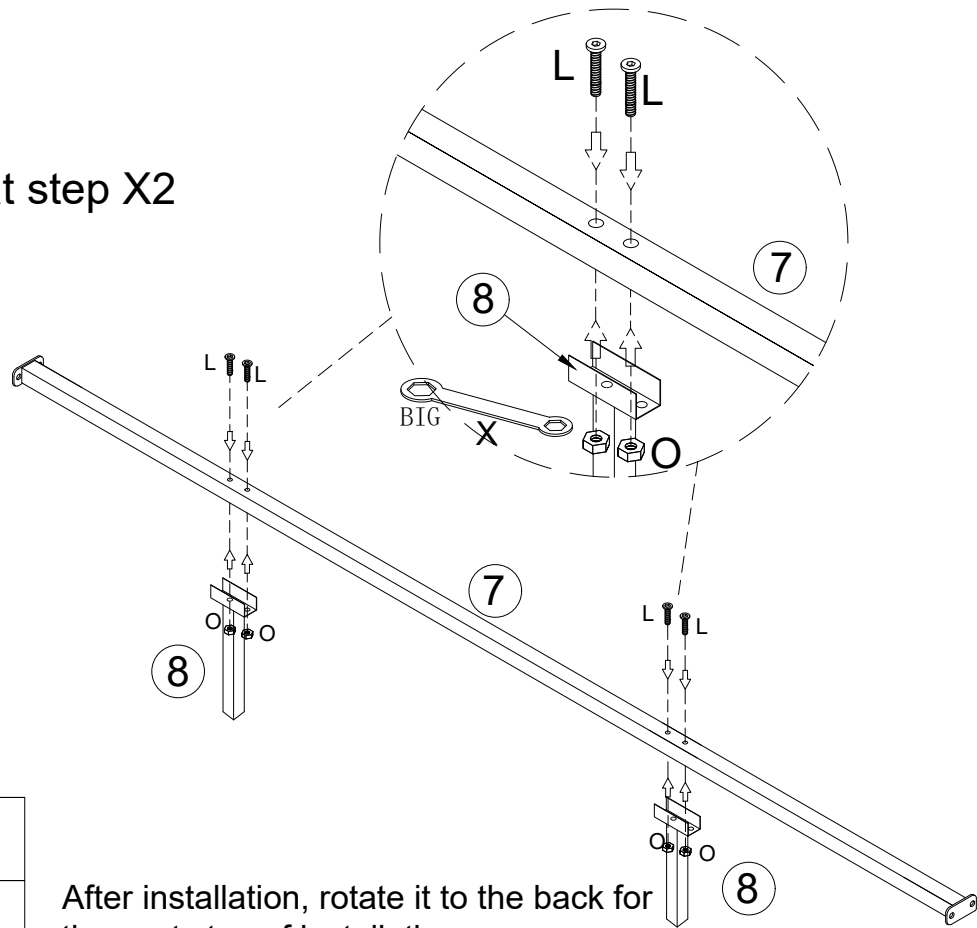
Repeat step X2



	8#×4PCS
	L×8PCS
	O×8PCS

After installation, rotate it to the back for the next step of installation

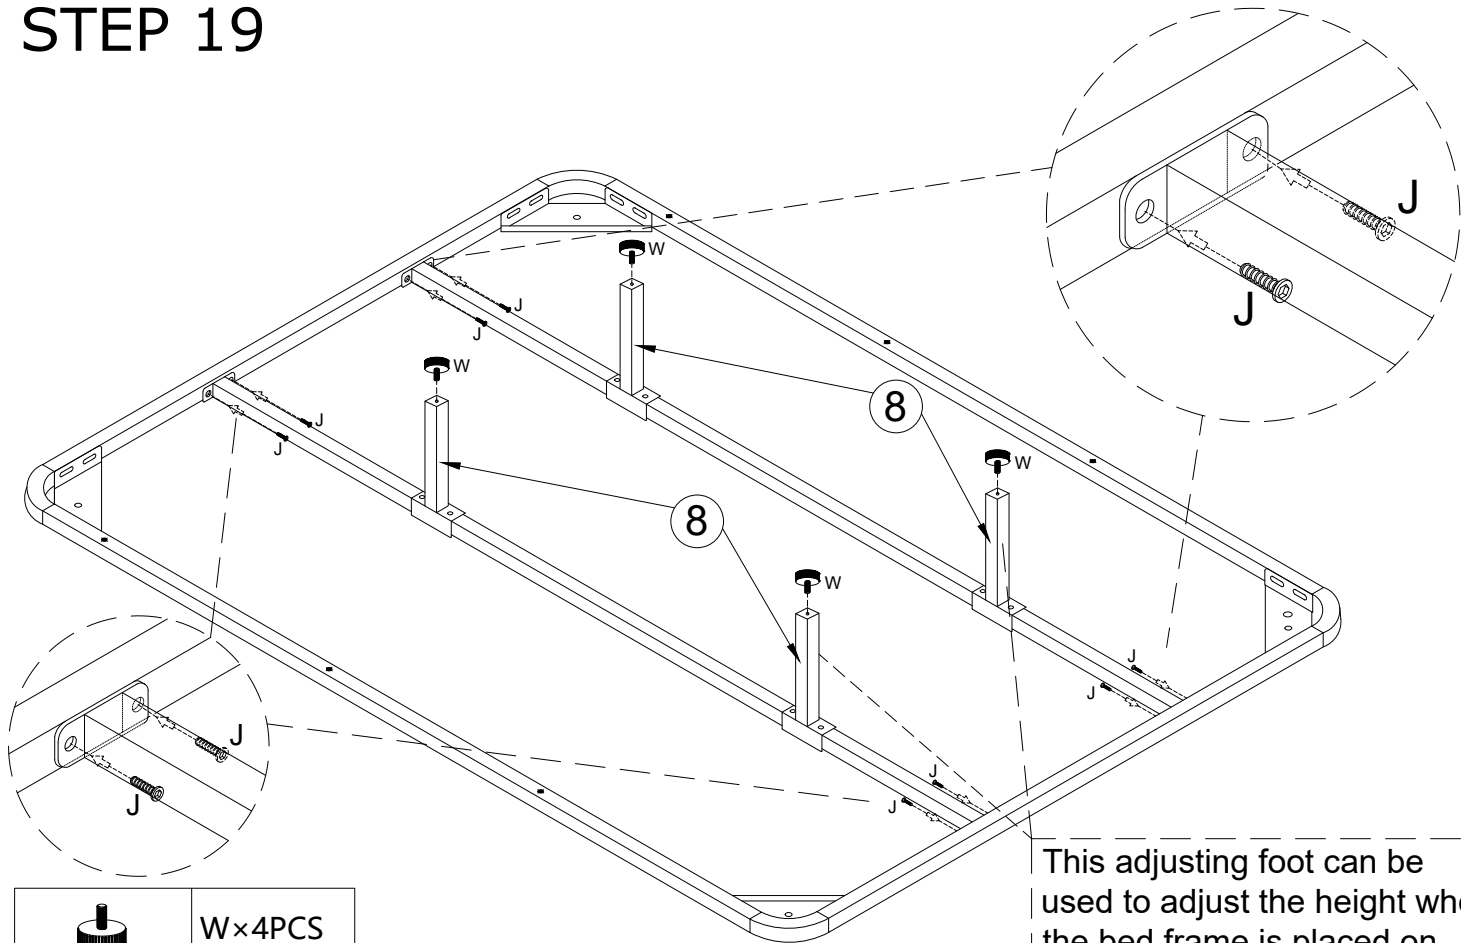
STEP 19




	W×4PCS
	J×8PCS

This adjusting foot can be used to adjust the height when the bed frame is placed on uneven ground

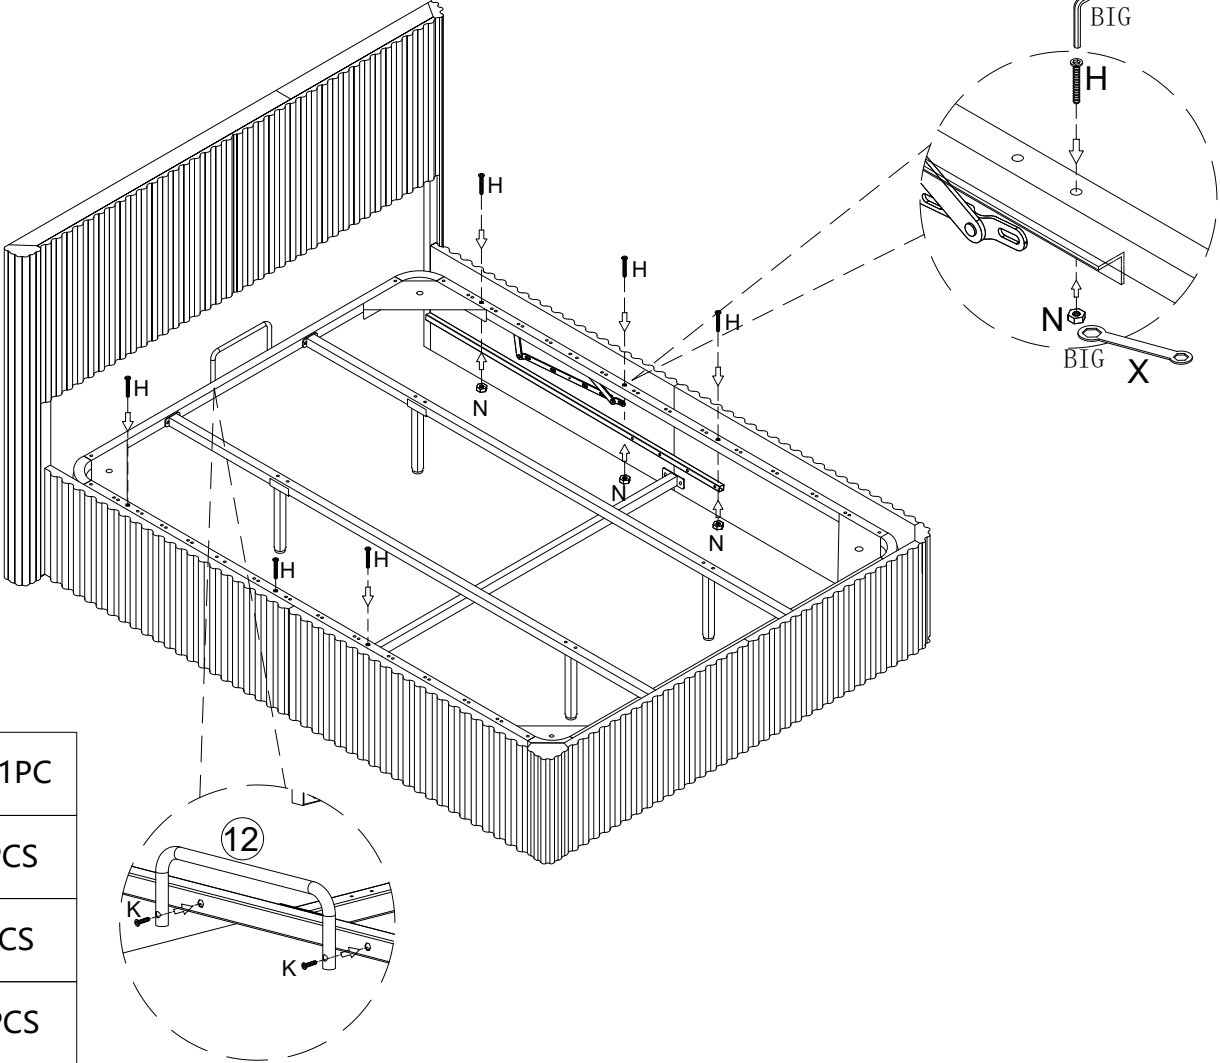
STEP 20



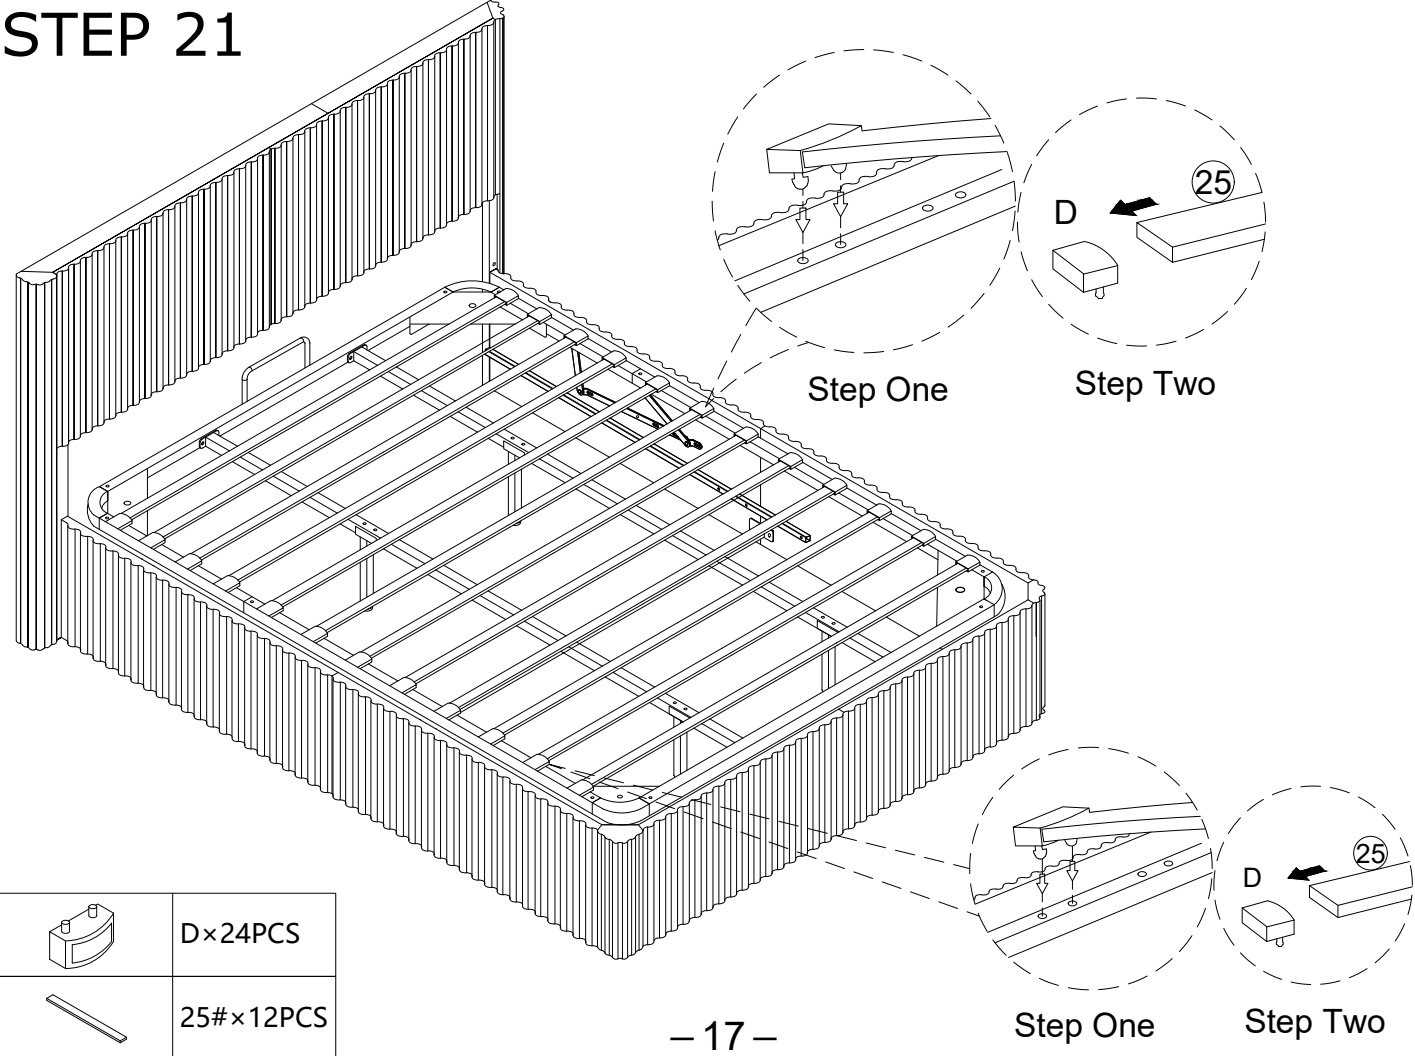
STEP 21



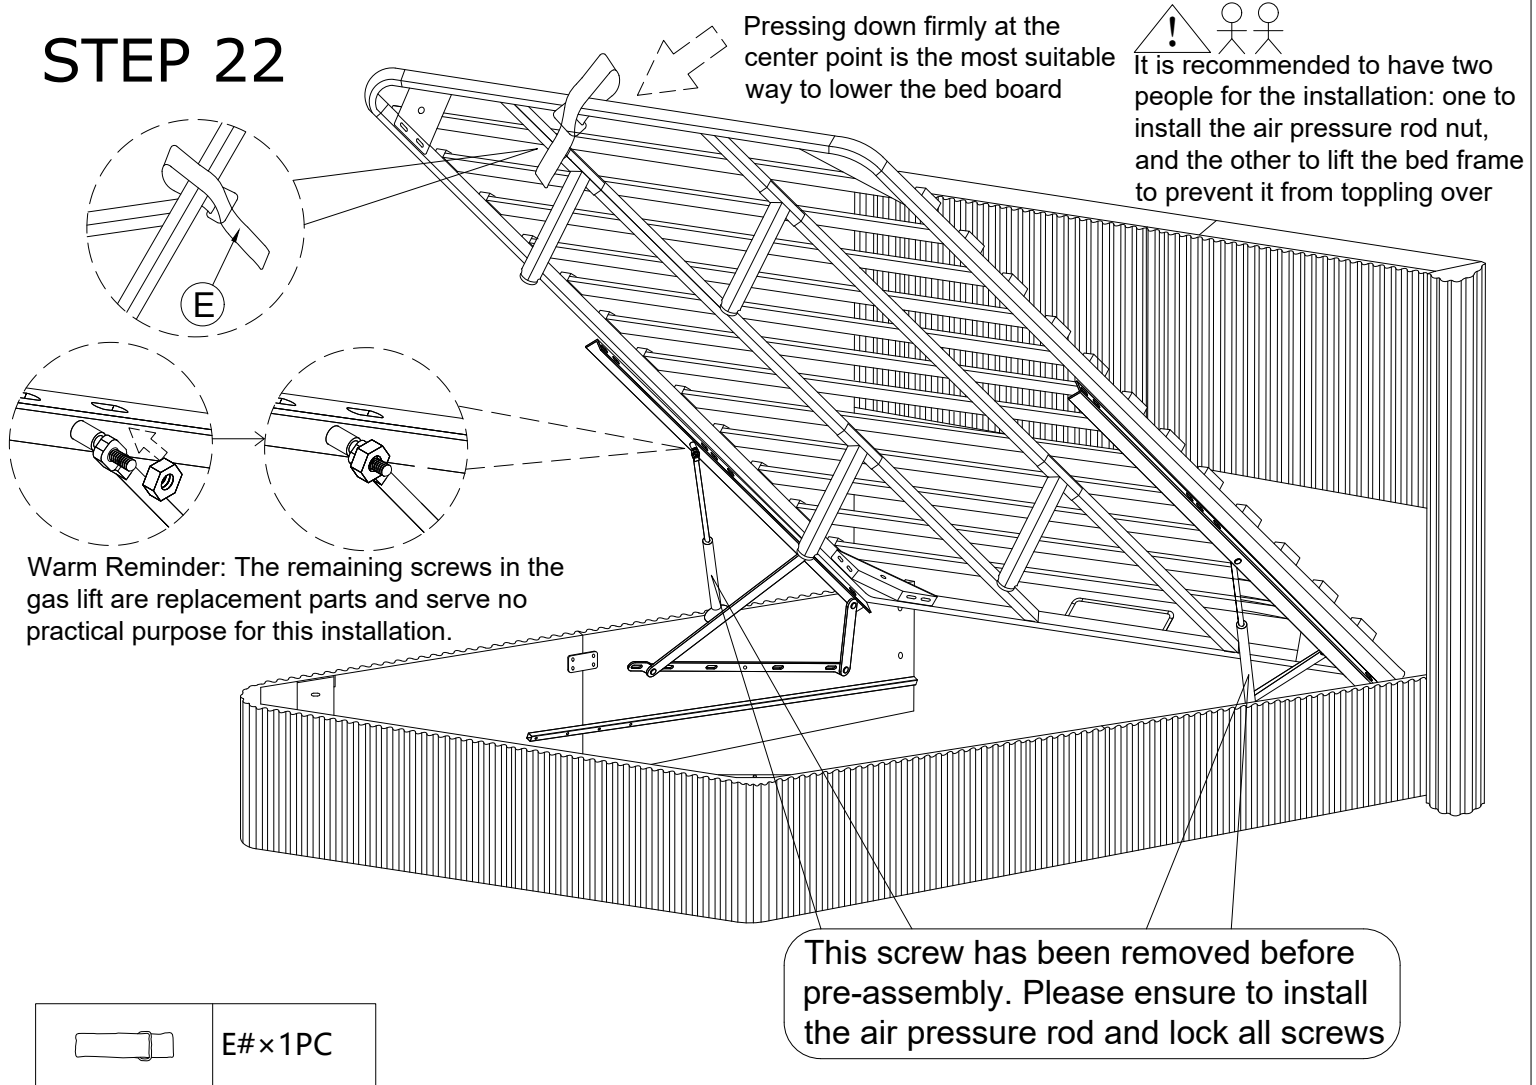STEP 22



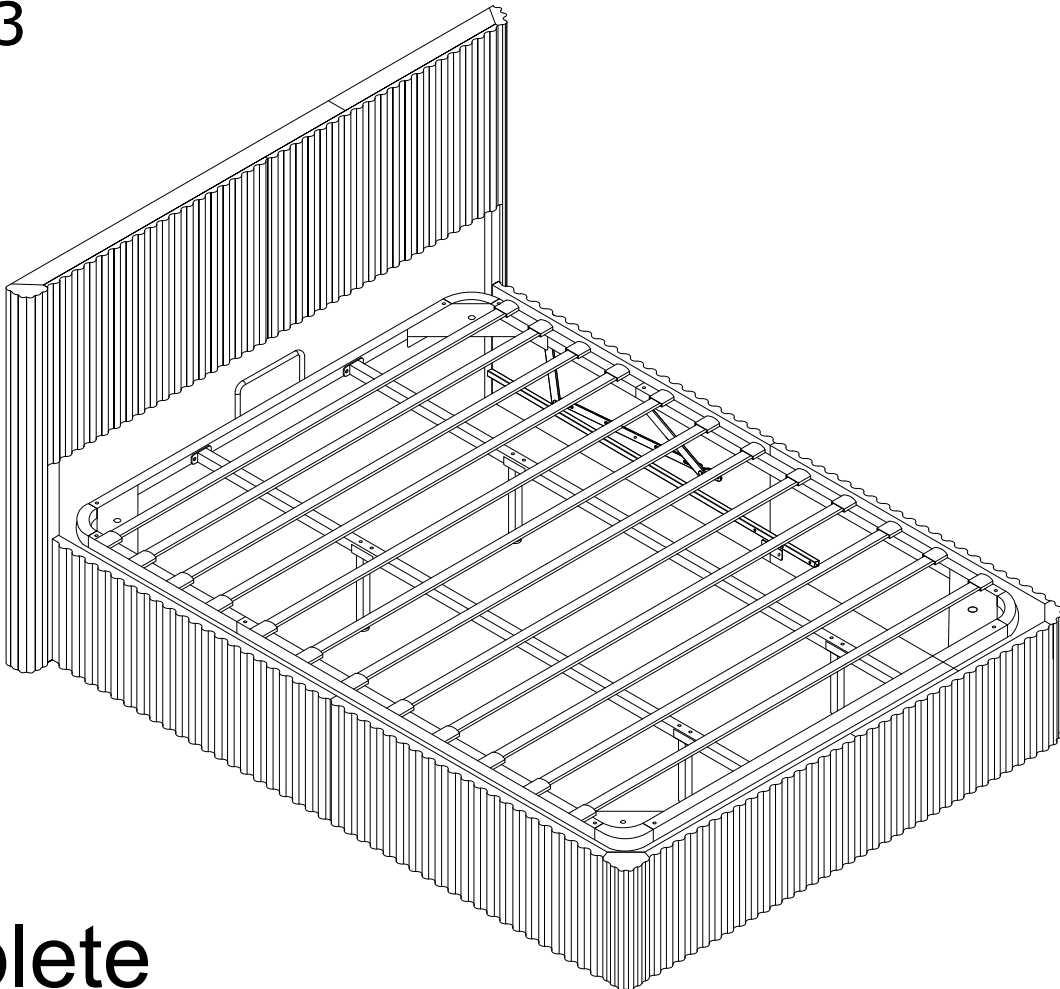STEP 23



Complete