



INSTRUCTION MANUAL



**470-926-8618
321-946-6293**

CATALOG



- 1 Product Image
- 2 Parts Listing
- 5 Installation Notes
- 6 Tools Required
- 7 Installation Steps
- 14 Safety Tips
- 15 Troubleshooting Guide
- 16 Customer Service


SS04S



PARTS LISTING

SS04s

NO.	Name	Picture	Qty		NO.	Name	Picture	Qty
①	1 Slide Glass 1 Fixed Glass		2		⑩	Fixed Glass Seal		1
②	Guide Rail		1		⑪	Anti-Splash Threshold		1
③	Roller		4		⑫	8mm Wall Plug		4
④	Glass Fastener		2		⑬	Screw ST5x40		4
⑤	Wall Bracket		2		⑭	Glass Bracket		1
⑥	Anti Collision Block		2		⑮	Punch Template		1
⑦	Guide Block		1		⑯	Allen Key		1
⑧	Handle		1					
⑨	Side Seal		2					

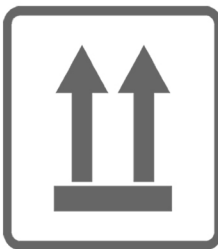

Please keep this manual and product code number for future reference and for ordering replacement parts if necessary.

PARTS LISTING




Aluminum punch template

(If missing or broken, please refer to page 8 for punch data.)



Wall Bracket

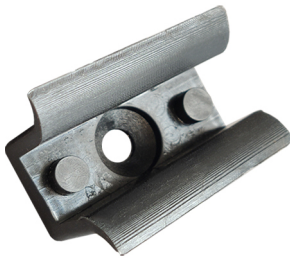


Anti Collision Block



Roller



Handle

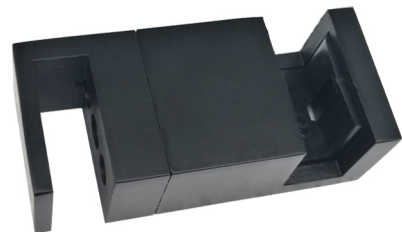

Guide Block



Glass Fastener




Glass Bracket

PARTS LISTING



Guide Rail

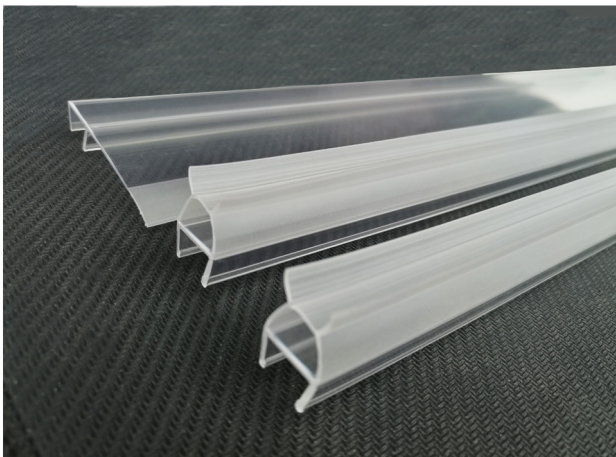

Door Seal



Glass



Anti-Splash Threshold



Screw & Allen key

NOTES BEFORE INSTALLATION

- 1 Prepare the tools. (Please refer to page 6)
- 2 All measurements and installation should do after the wall and shower base were completed.
- 3 Make sure shower base is horizontal and both wall are vertical, if shower base not horizontal or the wall not vertical, please contact our installation support.
- 4 Understand the names and uses of individual accessories of shower door. (Please refer to page 2~4)
- 5 Installation by licensed professional contractor is recommended.
- 6 Please watch installation video or call us for installation support. ([Link:https://youtu.be/hNeOuzxqyYw](https://youtu.be/hNeOuzxqyYw))
- 7 To stretch width or cut the guide rail, Please contact us first to get installation support.
- 8 Fixed glass protect corners can be removed during installation to avoid hard removing them after installation, but you need to handle them carefully to avoid breaking the glass.Sliding glass protect corners do not remove during installation.
- 9 Tile walls are best to replenish some glass glue at the tile seams to avoid leakage after the installation is completed.

TOOLS REQUIRED

(Please bring your own tools)



(we offer)
Aluminum punch template



Spirit level



Tape measure



Power drill



Screw driver



Drill Bits 5/16"



Pencil



Rubber hammer



Hacksaw



Silicone Gun
Modified Silane(Silyl) Polymer

INSTALLATION STEPS

Measuring



Punching



Wall bracket



Guide rail



Roller



Fixed Glass

Glass guide block



**Slide Glass
Roller**



**Handle
Door seal**





**Bottom anti-splash
threshold**





Gluing

***Customer Service**




**470-926-8618
321-946-6293**

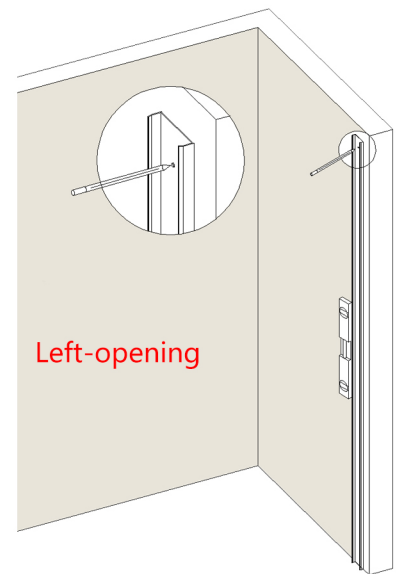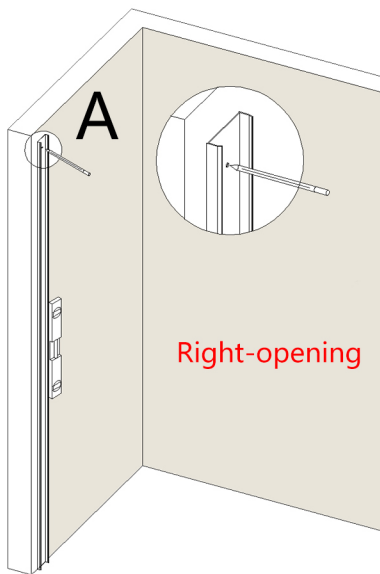


① Punch rules: the bottom fixed glass bracket perforation position needs to be 1" outside the vertical surface of wall bracket punch position, to ensure that the fixed glass is installed on the outside of guide rail. Please measure with horizontal ruler, draw the punching point position after ensuring the slope value.

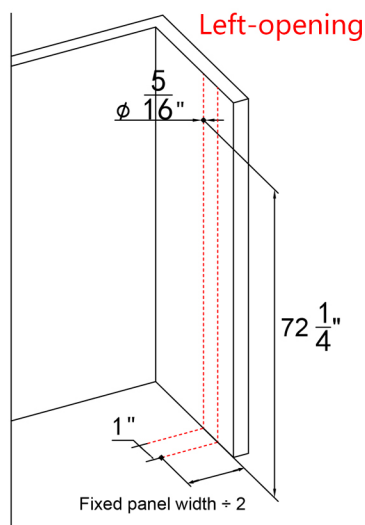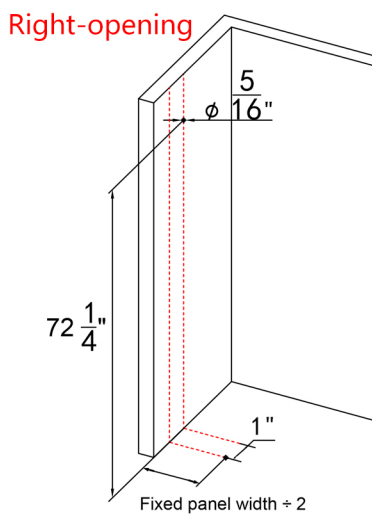


*Same wall bracket punching data for both walls

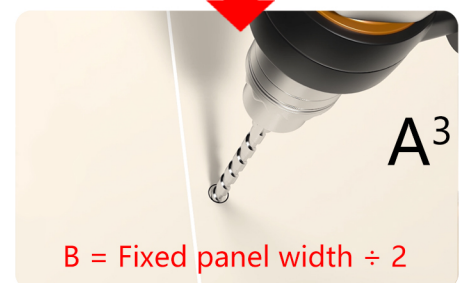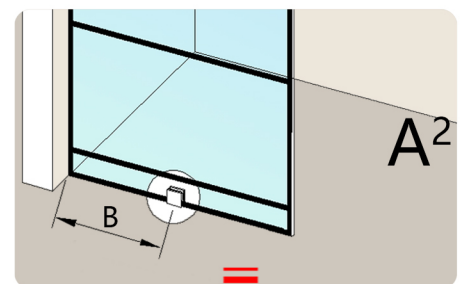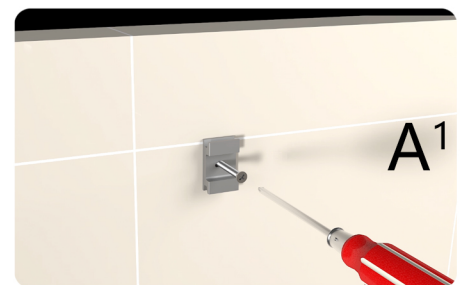




② Drill the holes according to the drawn holes, making sure that there is no offset of the holes. The wall bracket drilling positions of the left and right walls need to be in alignment and on the same horizontal and vertical plane. The vertical surface of wall bracket drilling position is 1 3/8" away from exterior vertical surface of your threshold.

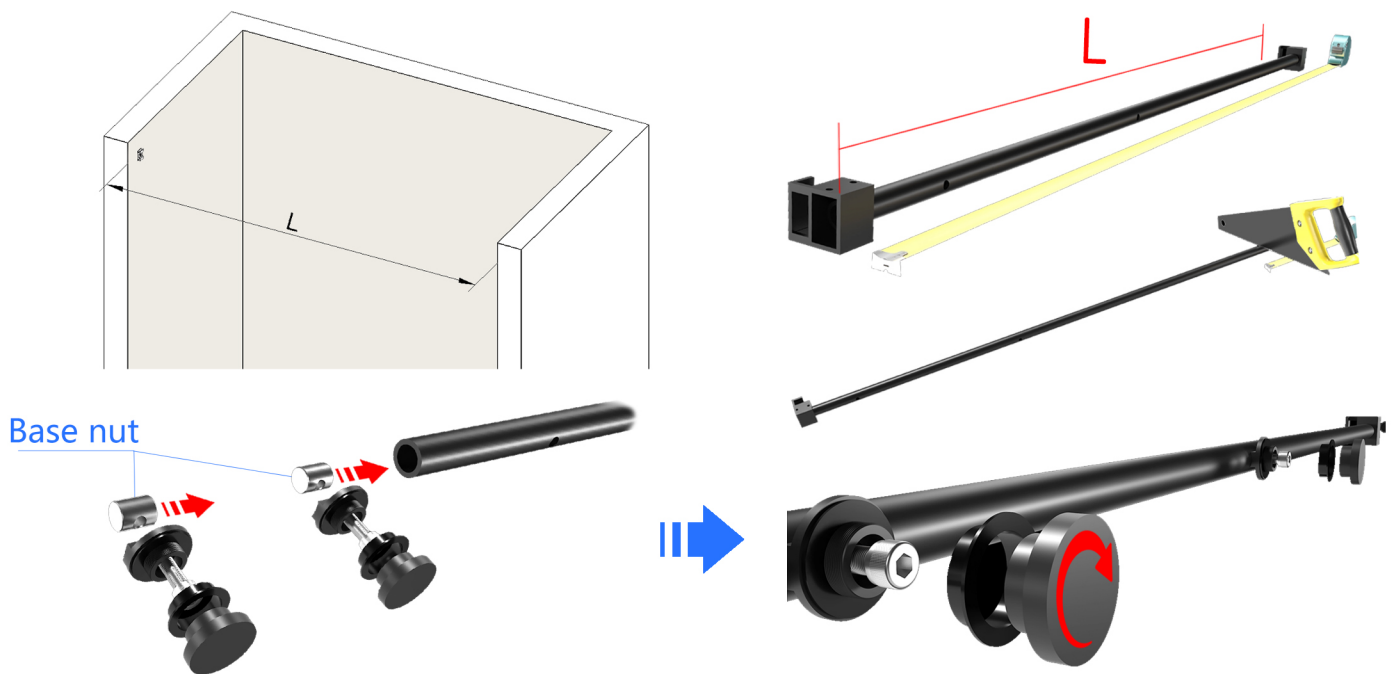


- ③ If the guide rail need to be cut to match your shower opening please do it based on actual measurements. If stretch the product installation width please adjusting the insertion depth of the wall bracket to the guide rail without cutting the guide rail. SS04 has maximum installation width stretch of 1/2" for each size. Use wire or thin wooden stick to push the base nut into the corresponding hole, then fix the position.




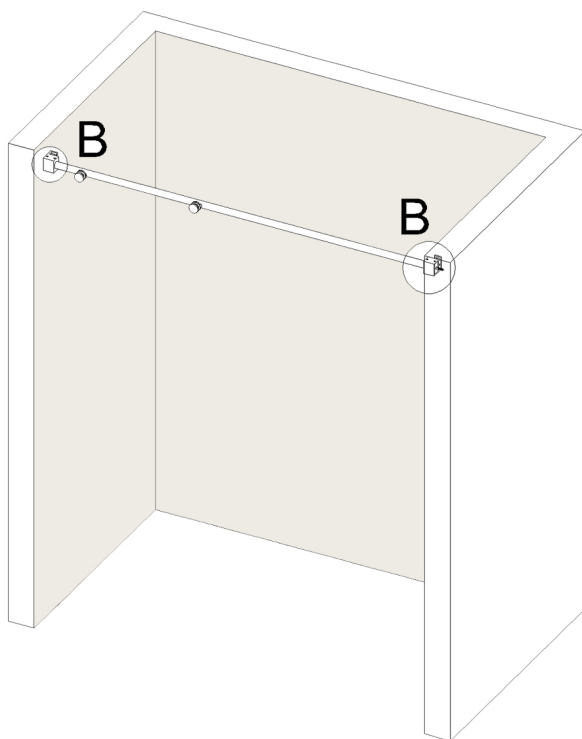


- ④ After the installation of the guide rail, please use the level ruler to measure whether the level. Then install Anti Collision Block on both sides.

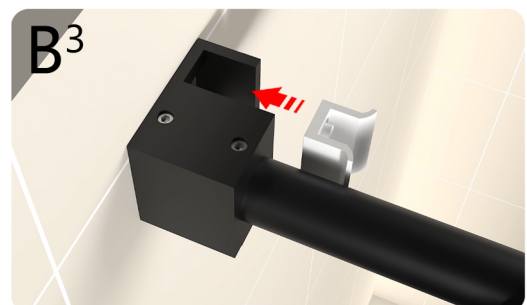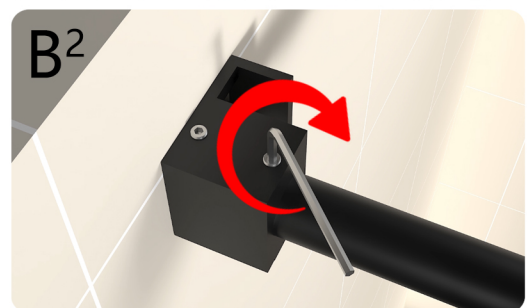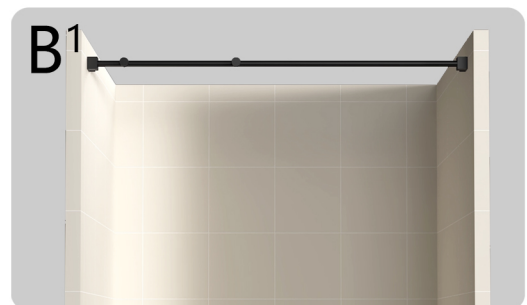


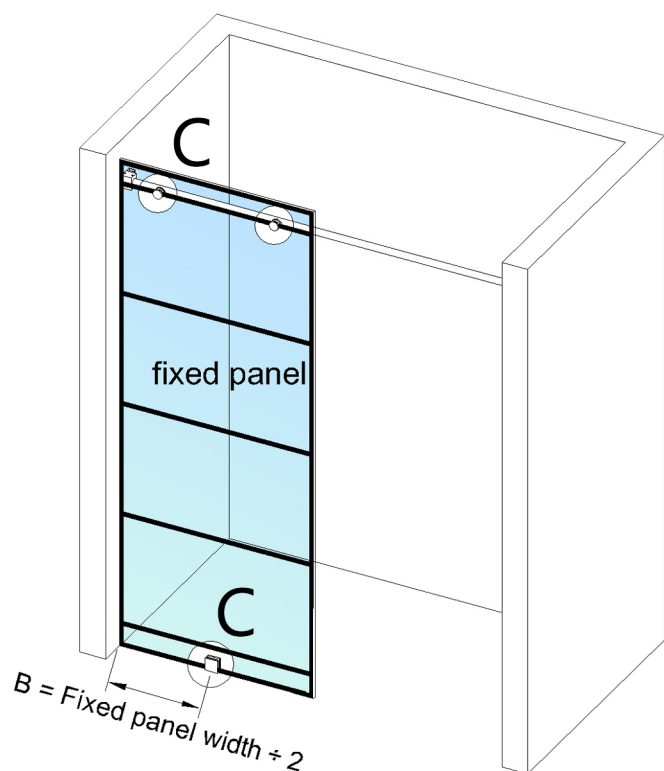







- ⑤ Install the glass fixing clips at the top of fixed glass according to the illustration.
Fasteners can be slightly adjusted to match glass mounting offsets

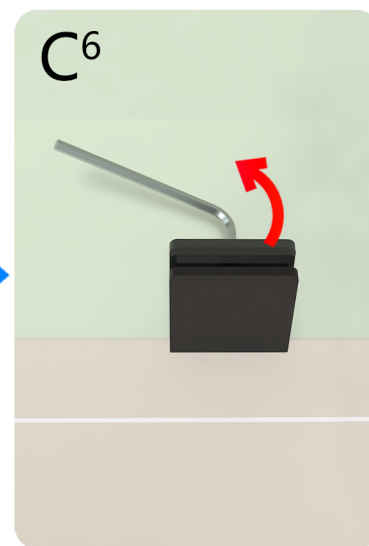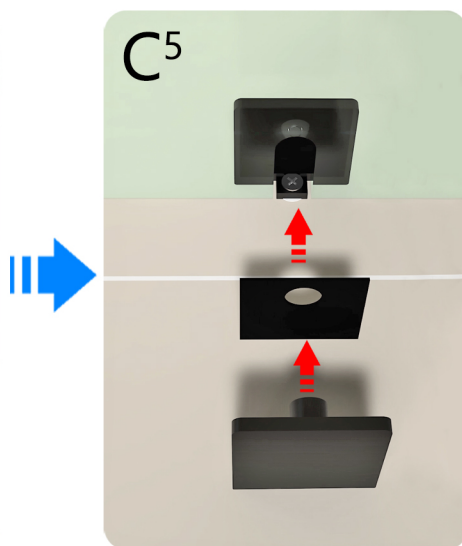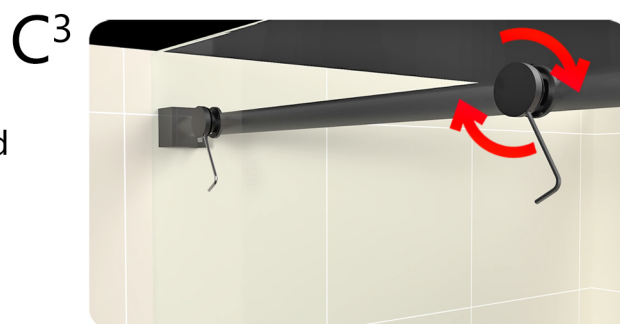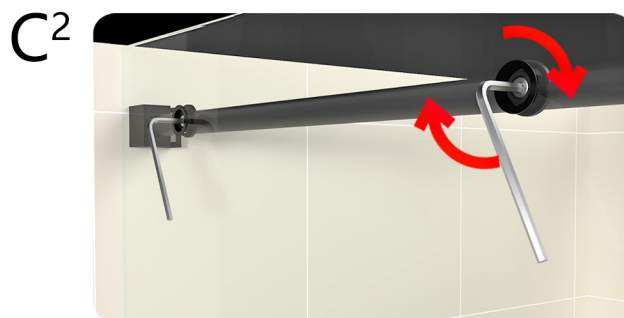


- ⑥ Install the glass bracket at the bottom of fixed glass according to the illustration.

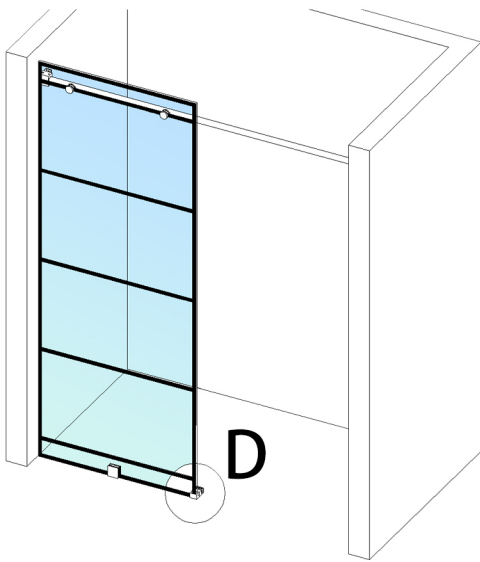


⑦ After the glass installation is completed, please measure the glass with level ruler to confirm the vertical and horizontal of the glass and then install the glass guide block. Ensure the vertical condition of the glass after the guide block is installed.
No need to drill hole on the threshold to install guide block

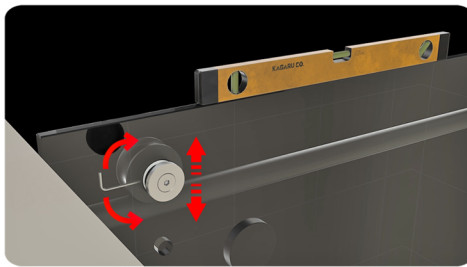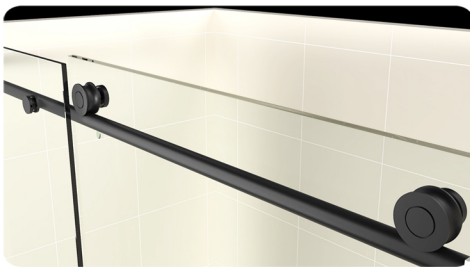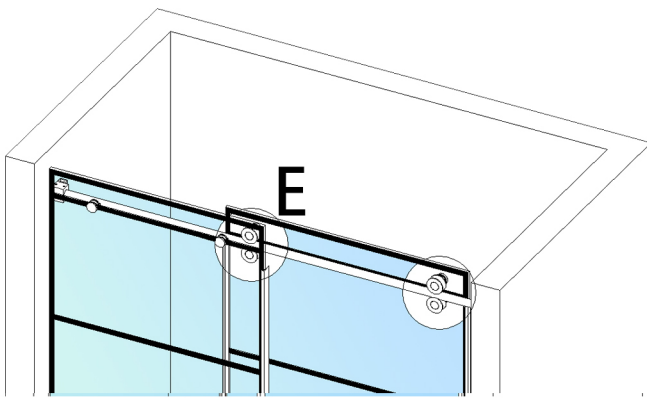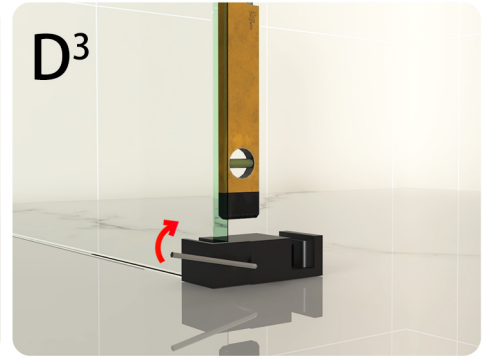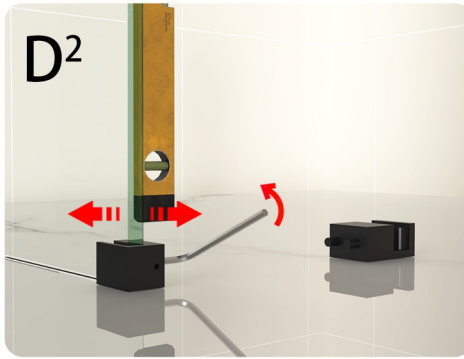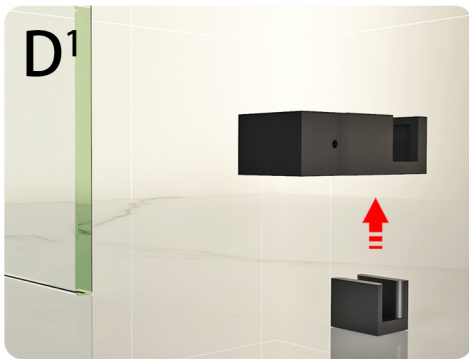

⑧ Installation of sliding glass: The height and level of the glass can be adjusted slightly by adjusting the rollers, through this adjustment can be adapted to the shower with a little wall offset, each wall offset preferably not more than 1/4".
After the glass installation is completed, please measure the glass with level ruler to confirm the vertical and horizontal of the glass and then install the glass guide block.

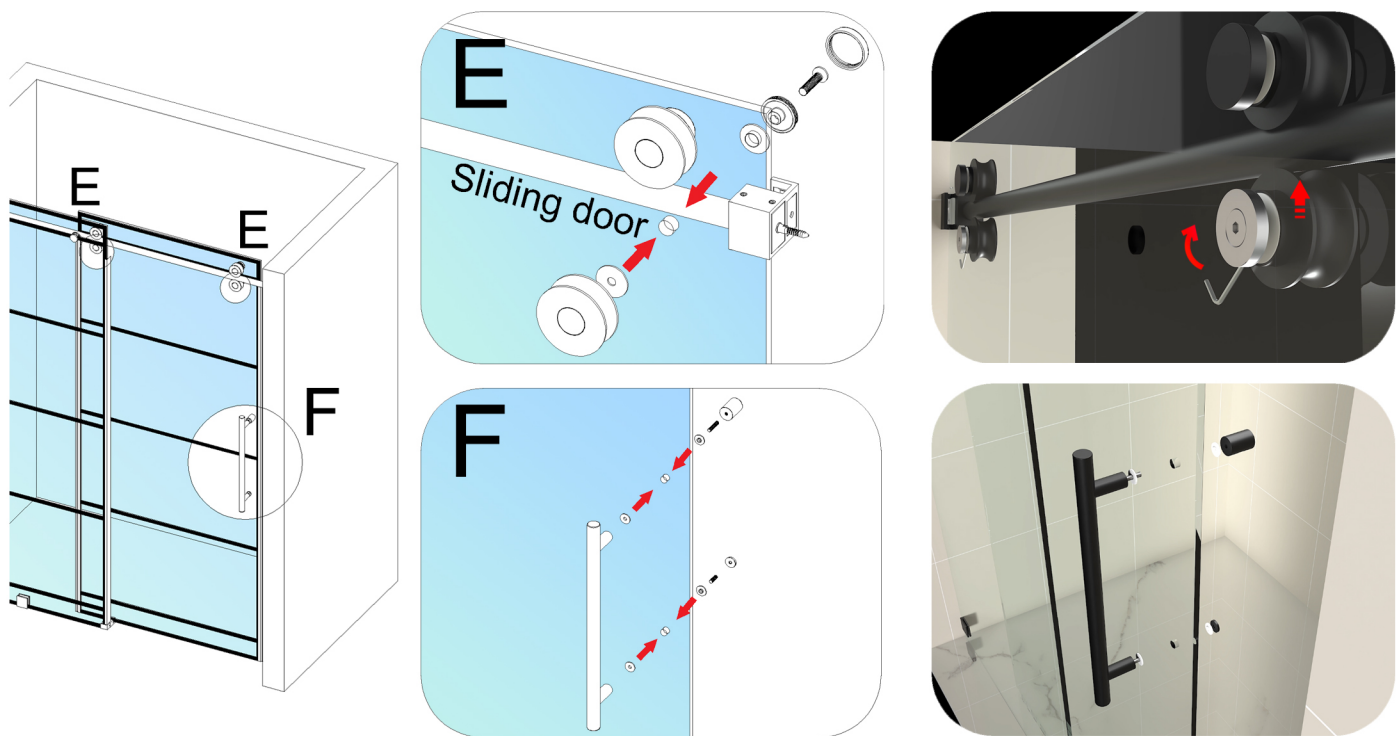


- ⑨ Please follow the guide to install the handle and the bottom rollers. Install the rollers under guide rail and adjust its height to fit the bottom of guide rail.

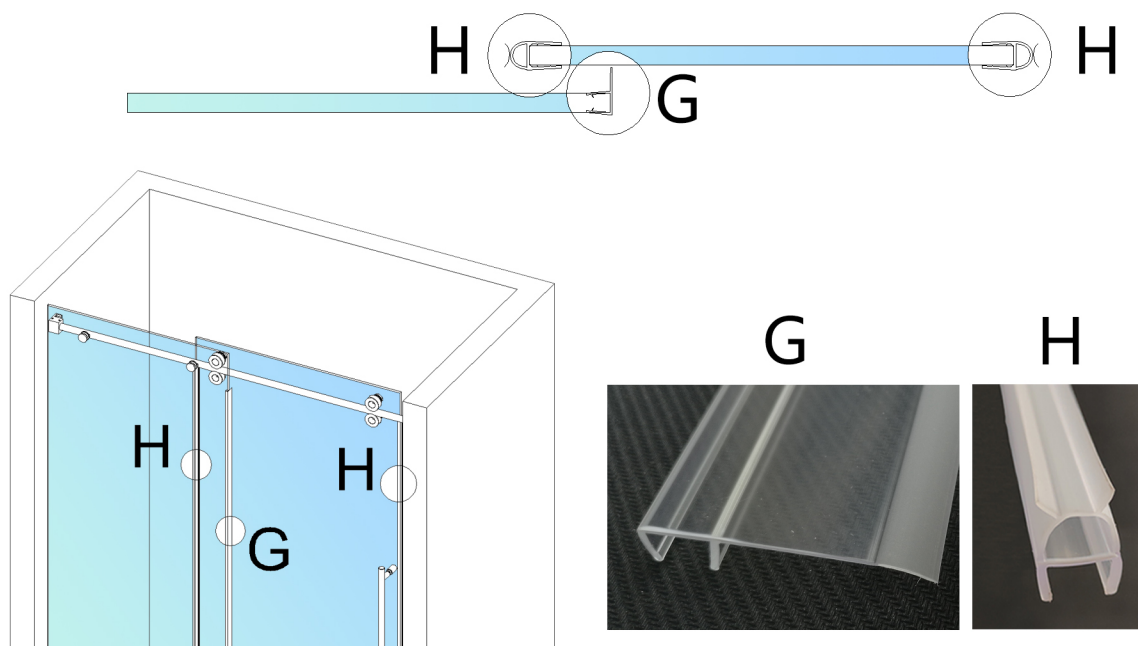

- ⑩ Install the door seal as illustrated, wide door seal should be installed on the fixed glass side. The top of wide door seal needs to be lower than the bottom rollers to avoid scraping. All door seals should be installed starting from the bottom and working upwards

- ⑪ Install the anti-splash threshold according to the guidelines, please cut to the right size according to the width of your shower opening. Clean up the garbage and dry the water and stains with a soft cloth after installation, then applying the glass glue.

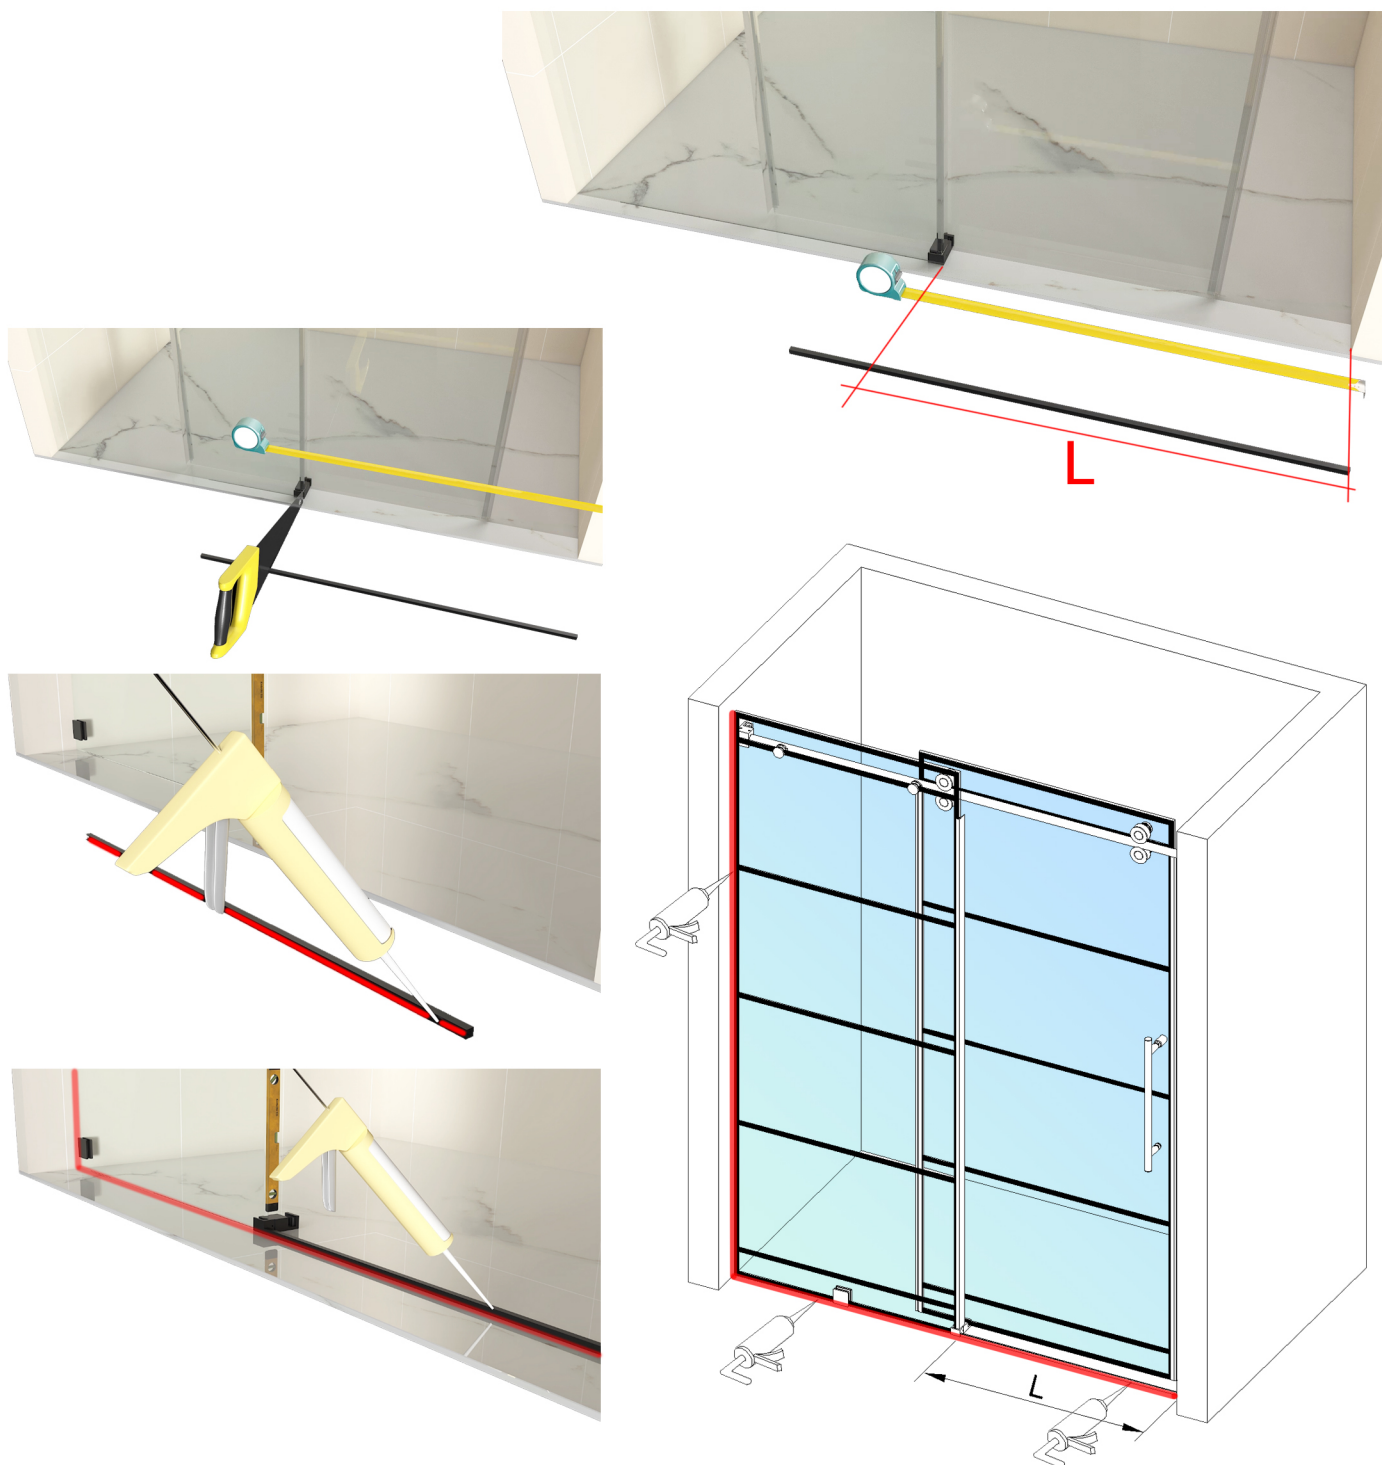

Note: Please dry for 24 hours after the glass glue is applied before use.

SAFETY TIPS:

- 1 Do not remove the slide glass protection corners during installation, remove them only after installation is complete.
- 2 Wear protective equipment when drilling, cutting guide rail and anti-splash threshold.
- 3 Careful installation of the glass is required during installation, please do not step on the glass to avoid bumping.
- 4 Wait 24 hours after installation before using the shower.

SHOWER DOOR MAINTENANCE AND CARE:

- 1 Shower door glass is double-sided easy-clean glass. For daily cleaning using moist soft cloth to wipe away surface water and stains, reduce the use of cleaning agents to extend the easy-clean performance. It's recommended to use soft cloth to clean the residual water stains on the glass and hardware after shower. Silicone squeegee is available.
- 2 Do not use any sharp cleaning tools or cleaning agents with abrasive ingredients to clean the glass.
- 3 Caustic cleaners should not be used, such as alcohol. Long-term use of corrosive cleaners will cause discoloration of the hardware. Reducing the use of cleaners will prolong the use of the hardware&glass appearance. You can use small amount of anhydrous ethanol or detergent to clean stubborn water stains or calculus on the hardware.
- 4 Do not let the shower water directly wash the bottom of slide door.

TROUBLESHOOTING GUIDE AND NOTE

Shower doors don't close tightly issues:

Q1: When I close the door, the door closes then backs out and never closes tight. How should I do?

A1: First please check that the anti collision block is installed on both sides, it will hold the glass in place when closing the door to keep it closed. Then use a level to check your guide rail and glass level status, if not installed level, you can adjust the top roller to adjust the sliding glass level and height. Even if your guide rail is a little tilted, the anti collision block will help to complete the closing action, if guide rail is tilted severely, you may need to re-drill.

Shower door leaking issues:

Q1: The bottom of the inner door leaks, how should I do?

A1: Please confirm product wall bracket punching data are correct and the anti-splash threshold glue seals well without leaking, then following adjustment steps need to be made.

1. Adjust the angle of the shower head, avoid the shower water directly wash the bottom of the slide door.
2. Please adjust the height of the top roller to reduce the height of the glass. Complete these 2 steps would solve it, if there still leak please contact customer service for support.

Please contact our customer service to confirm the return steps before returning or get order replacement.

Customer Service:

470-926-8618

321-946-6293

Installation Video:

<https://youtu.be/hNeOuzxqyYw>

www.mcocodsupport.com

Return Address:

**•4800 Little John St. Baldwin Park,
CA 91706**

**•309 Dodd Blvd SE,STE 1, Rome,
GA 30161**