


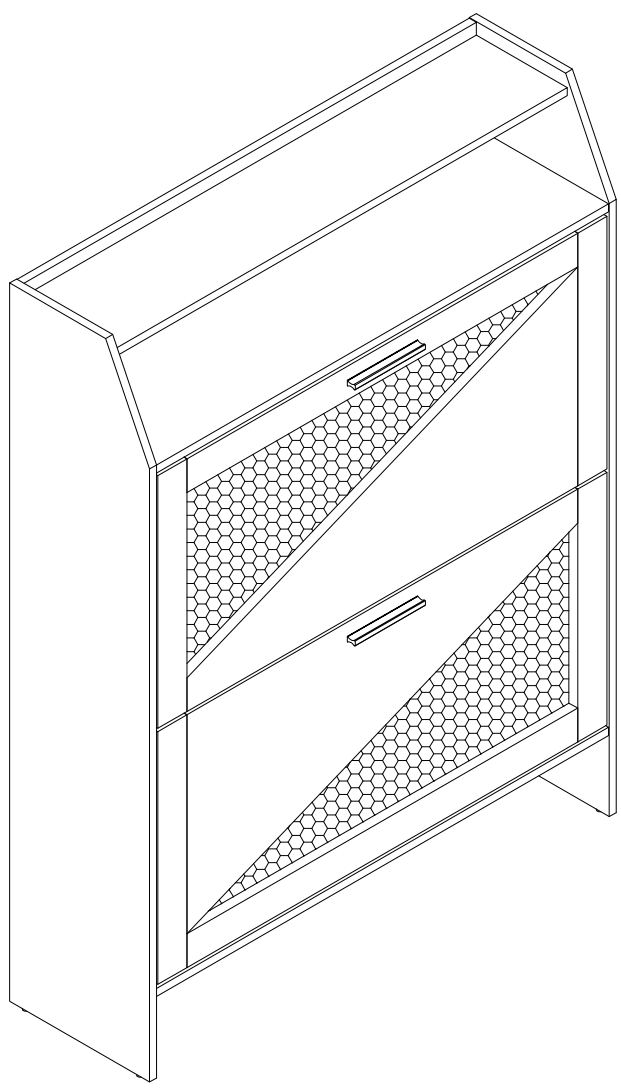

User's Manual

—SHOE CABINETS—

The picture is reference, the actual product shall prevail



<http://www.thevividwood.com/shoecabinetsets004>


WARM REMIND



If you encounter any problems in the installation process, you can scan the QR code to watch the teaching video or contact us by email, we will reply you in time. Email: support@thevividwood.com

SAFETY WARNING













1. **Cleaning:** Use a dry cloth to remove any dust or debris from the rack. If needed, a damp cloth can be used, but ensure the rack is dried thoroughly afterward.
2. **Stay Dry:** Although made of iron, the rack can still rust if exposed to moisture for extended periods. Do not allow water to pool around or on the rack.
3. **Inspecting Components:** Periodically inspect the rack for any signs of wear, loose screws, or damaged parts. Replace or repair any compromised elements to ensure stability and safety.

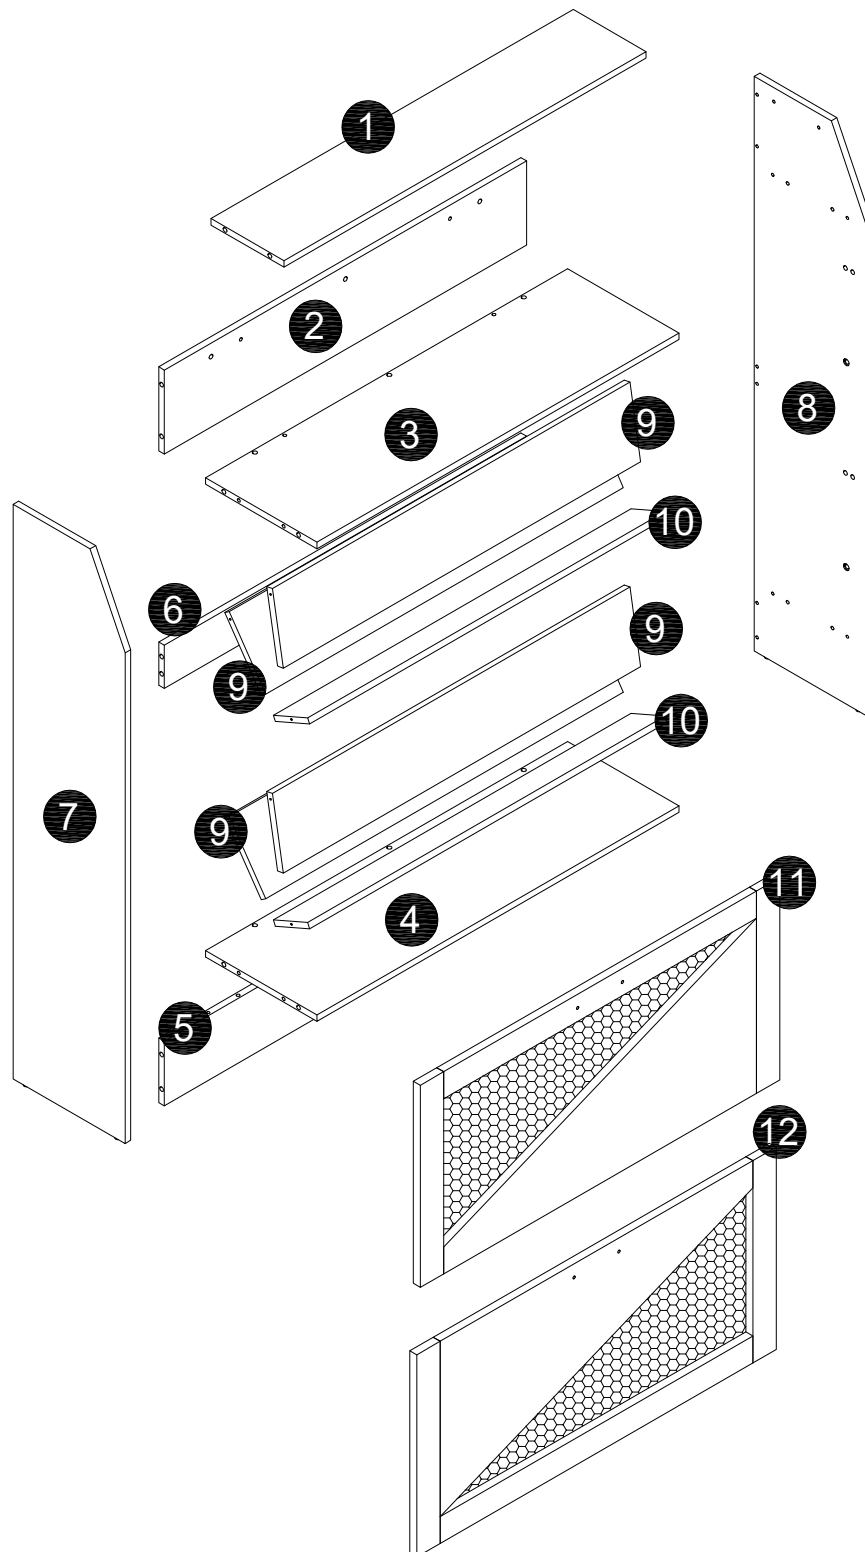












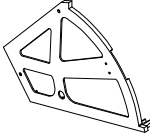
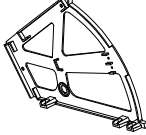

! WARNING:

1. Before beginning assembly, please ensure that you have all the required parts if anything is missing, please contact us for assistance instead of immediately initiating a return. We are here to help.
2. Please read each step carefully before starting the installation.
3. Please complete one step before proceeding to the next step to avoid difficulties.
4. Please put on gloves to avoid chafing.


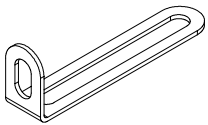


HARDWARE LIST
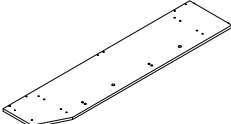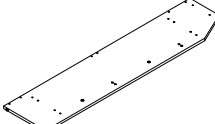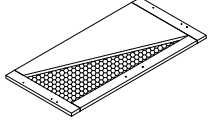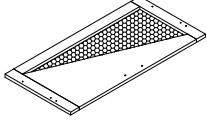
<p>1 1PC</p>  <p>776*151*12mm</p>	<p>2 1PC</p>  <p>776*156*12mm</p>	<p>3 1PC</p>  <p>776*239*12mm</p>	<p>4 1PC</p>  <p>776*239*12mm</p>	<p>5 1PC</p>  <p>776*120*12mm</p>
<p>6 1PC</p>  <p>776*80*12mm</p>	<p>7 1PC</p>  <p>1066*240*12mm</p>	<p>8 1PC</p>  <p>1066*240*12mm</p>	<p>9 4PCS</p>  <p>762*138*12mm</p>	<p>10 2PCS</p>  <p>762*80*12mm</p>
<p>11 1PC</p>  <p>771*374*15mm</p>	<p>12 1PC</p>  <p>771*374*15mm</p>			

HARDWARE LIST


A	24PCS	B	24PCS	C	14PCS	D	9PCS	E	24PCS
									
Ø6x35mm		Ø15*10mm		Ø6x30mm		Ø6x38mm		Ø3.5x14mm	
F	4PCS	G	2PCS	H	4PCS	I	1PC	J	4PCS
									
Ø4x18mm		103*15*7mm		26*16*9mm		M4		M6*18mm	
K	4PCS	L	4PCS	M	2PCS	N	2PCS	O	1PC
									
Ø19x1mm		Ø14x9mm		/		/		/	

ANTI-OVERTURN HARDWARE BAG

P	2PCS	Q	2PCS	R	2PCS	S	2PCS
							
Ø3.5x12mm		/		/		Ø4x40mm	

STEP1

Ax12






Ø6x35mm

Hx2



26*16*9mm

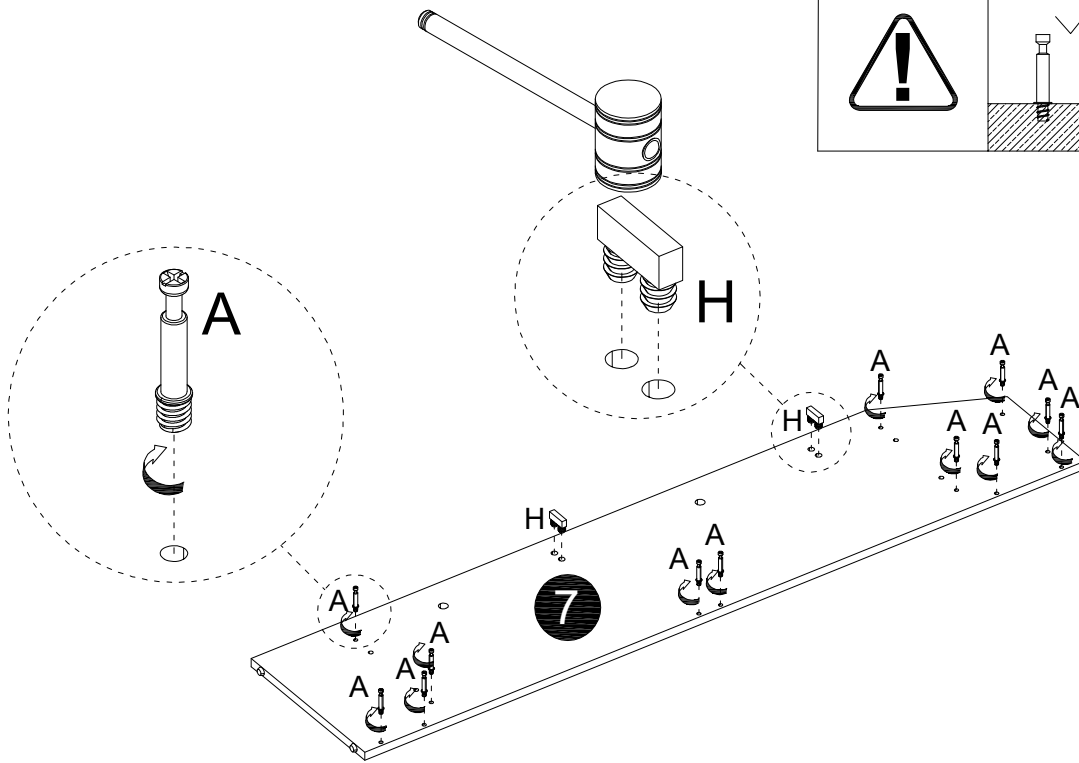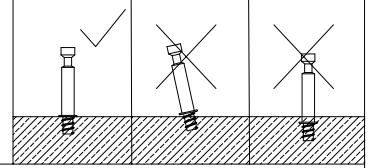




STEP2

Px2



Ø3.5x12mm

Qx2

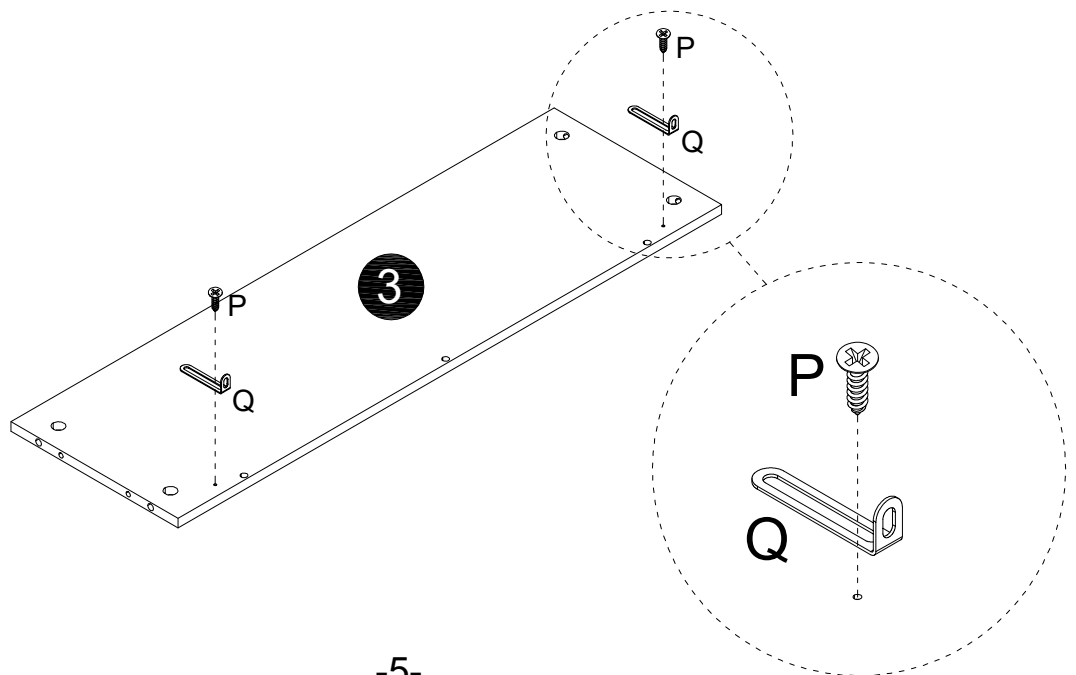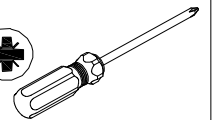


STEP3

Cx2





Ø6x30mm

Dx3



Ø6x38mm

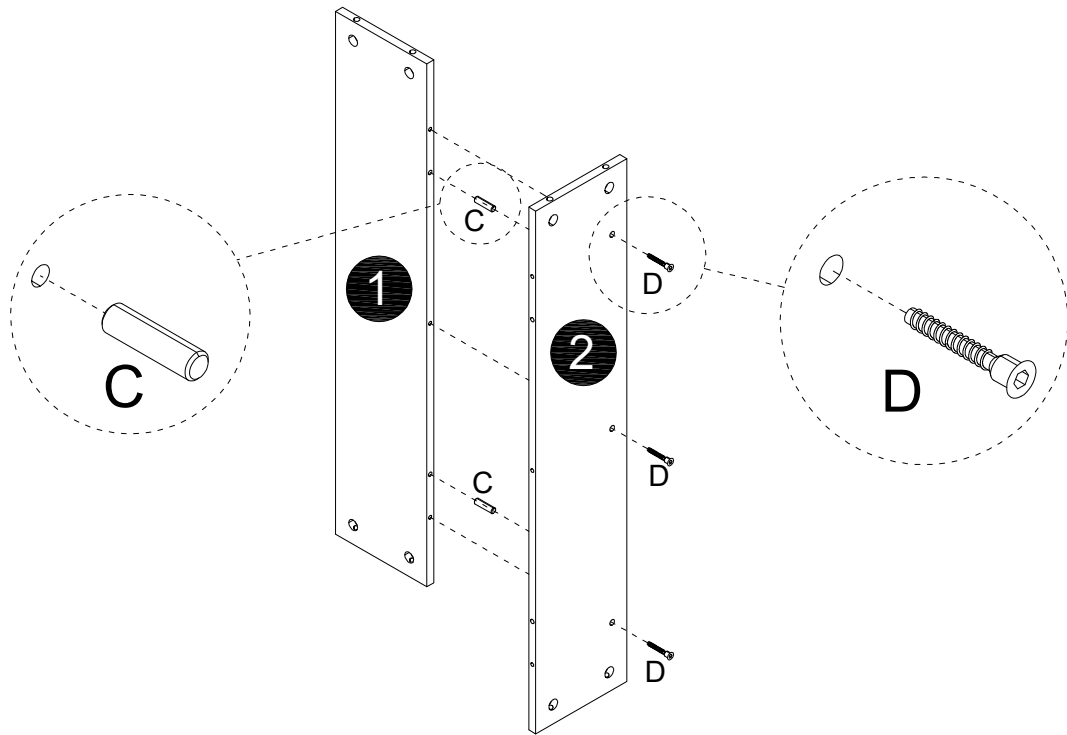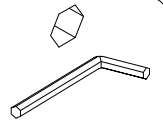

STEP4

Cx2





Ø6x30mm

Dx3



Ø6x38mm

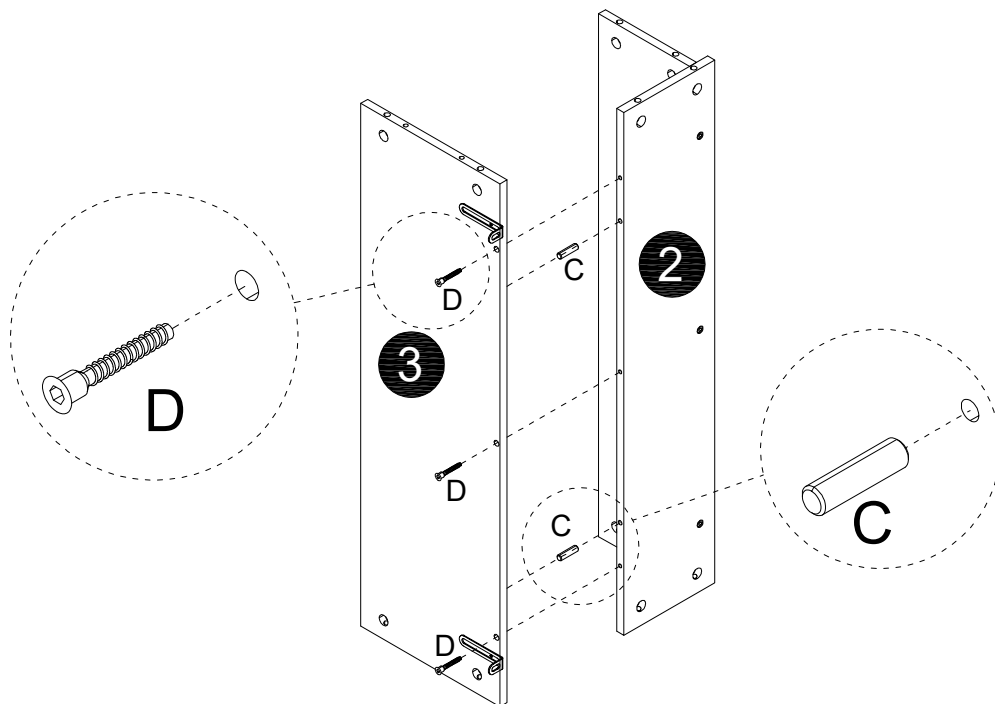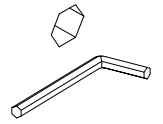

STEP5

Cx2





Ø6x30mm

Dx3



Ø6x38mm

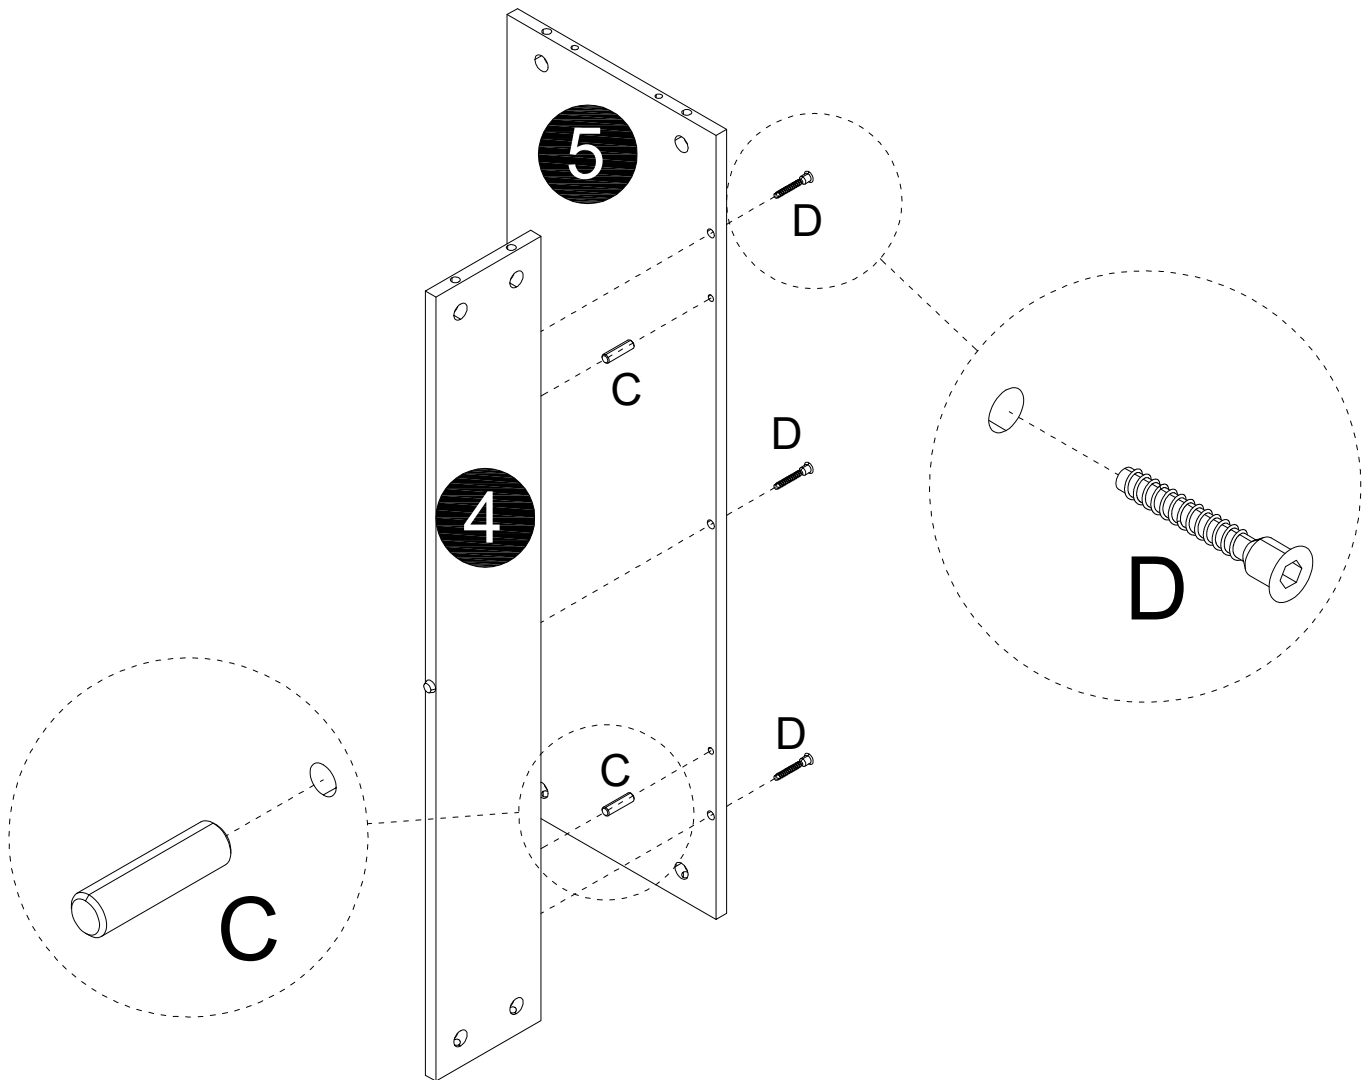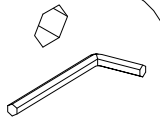

STEP 6

Bx12








Ø15x10mm

Cx4




Ø6x30mm

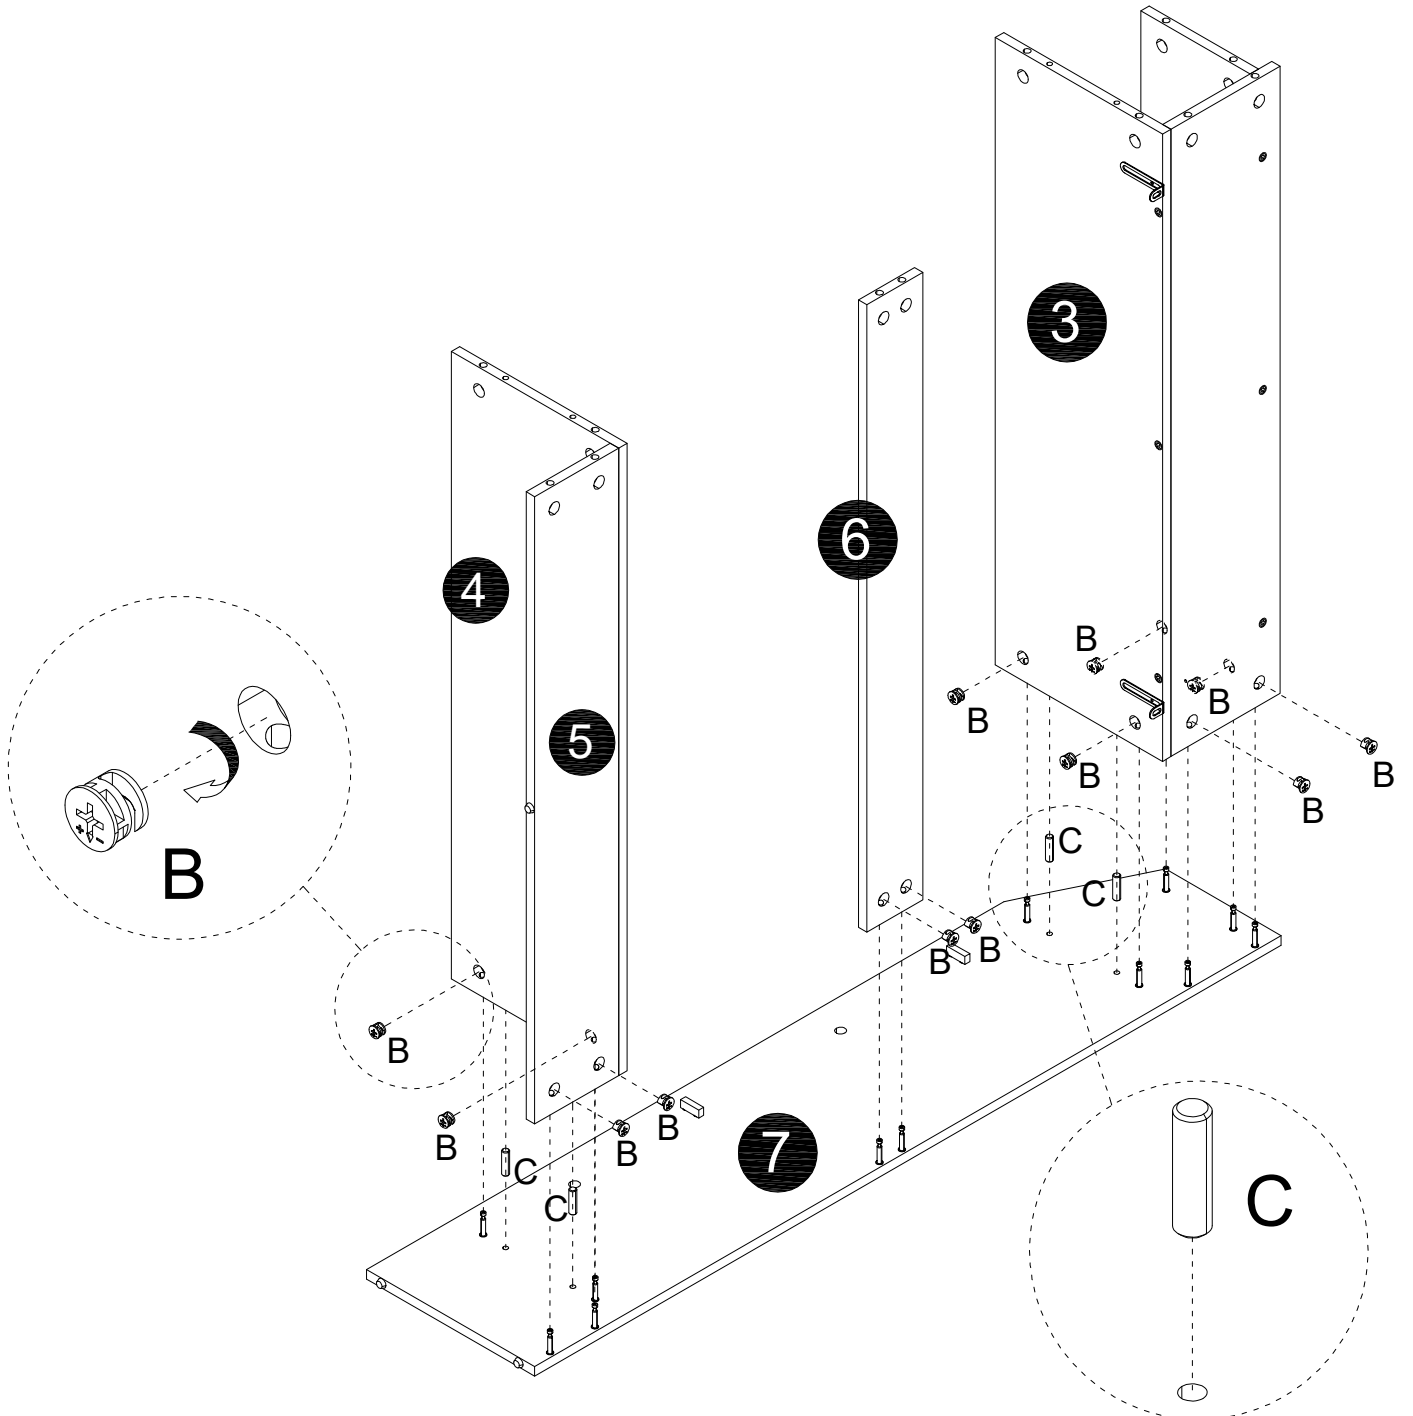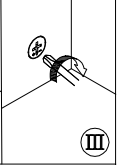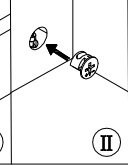

STEP 7

Ax12






Ø6x35mm

Hx2



26*16*9mm

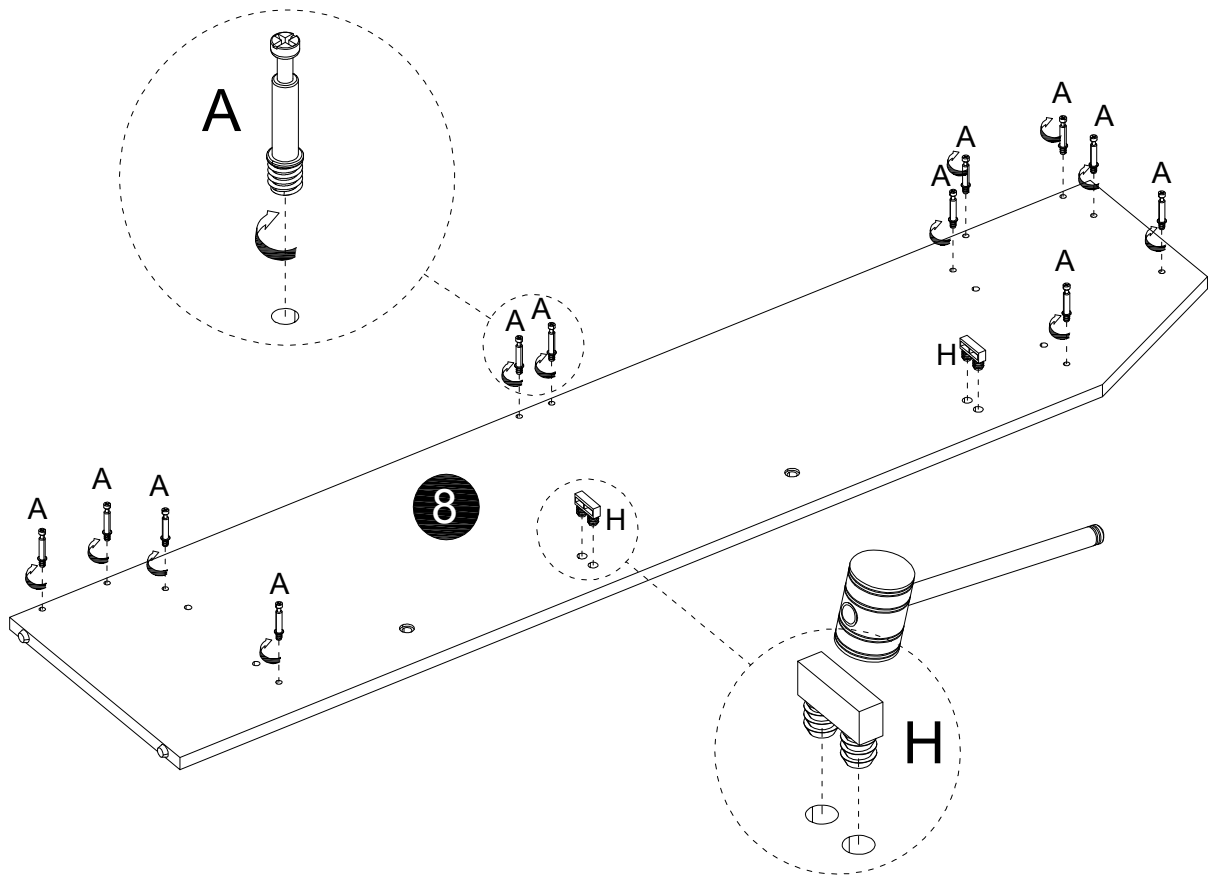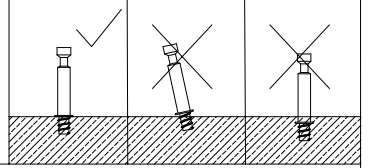

STEP 8

Bx12











Ø15x10mm

Cx4



Ø6x30mm

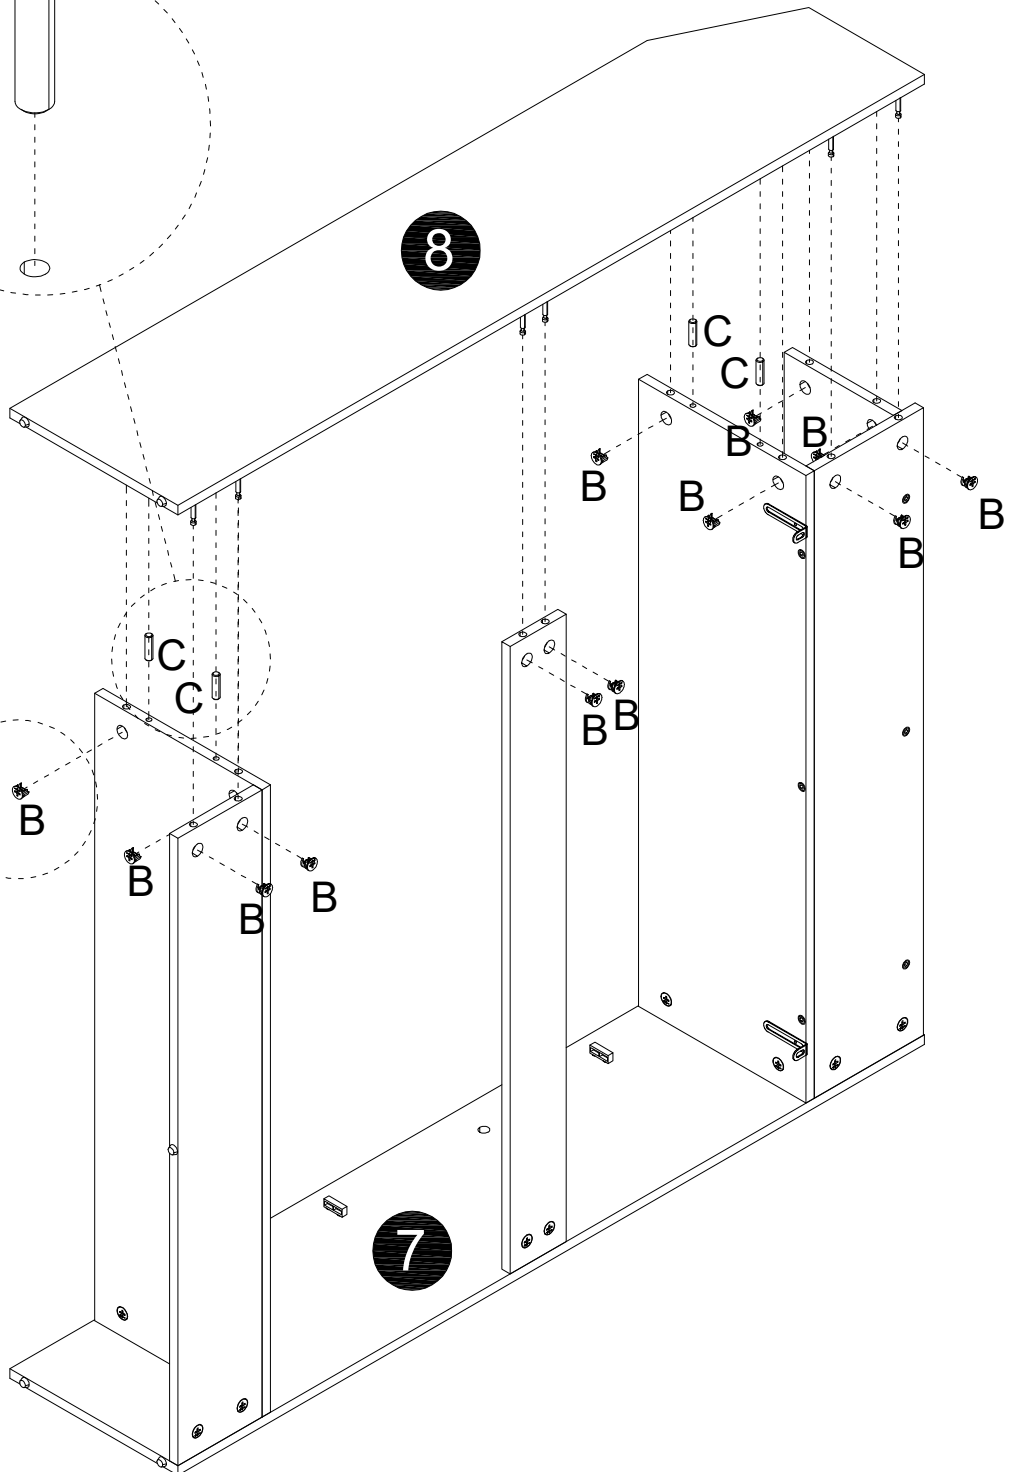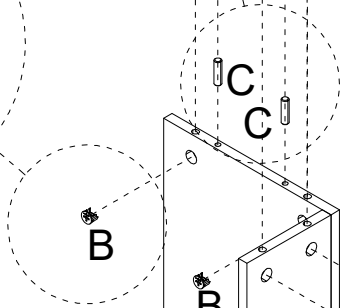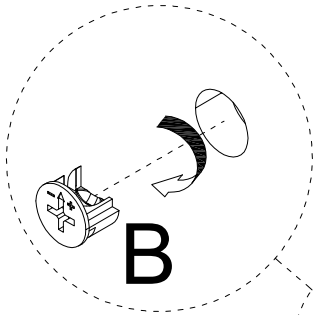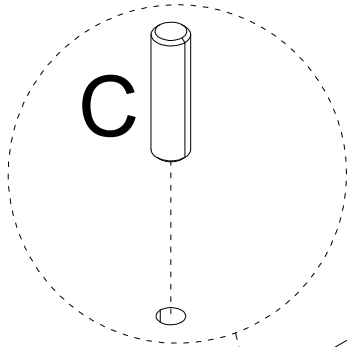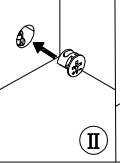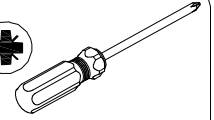


STEP9






Rx2



Sx2



Ø4x40mm

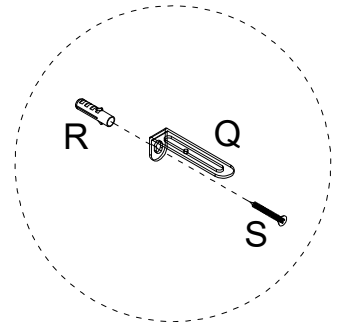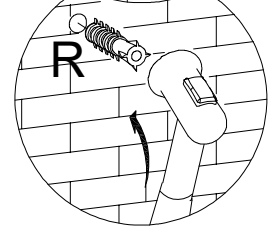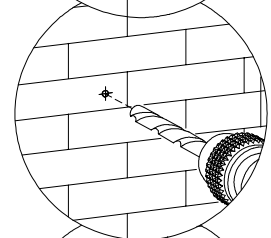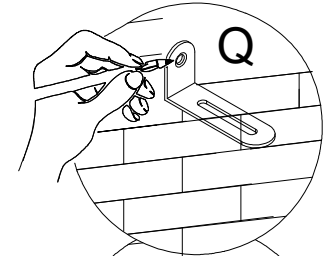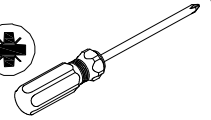

WALL

3

STEP10

Ex8






Ø3.5x14mm

Mx2



Nx2

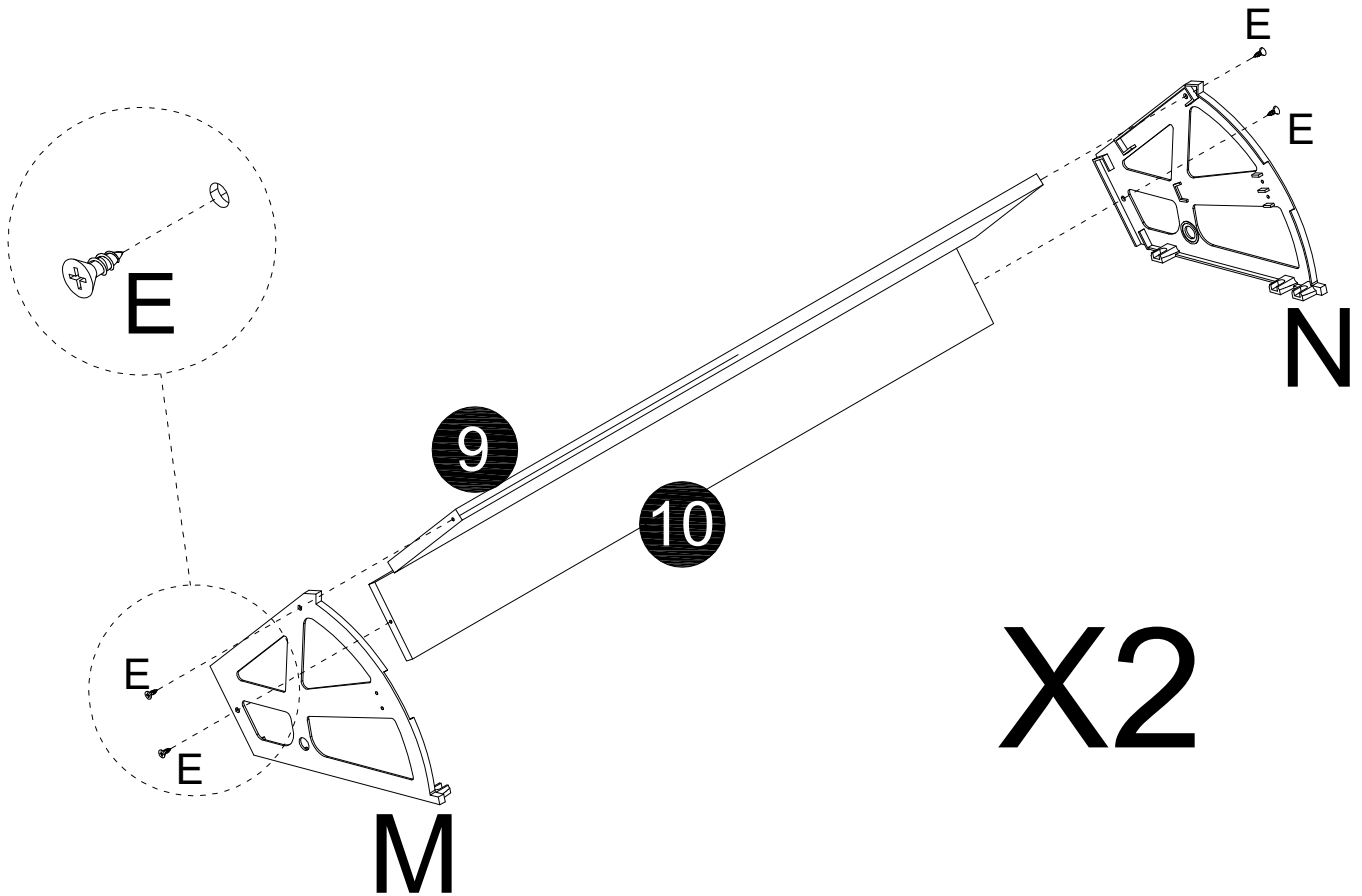

STEP11

Ex6



Ø3.5x14mm

Fx2





Ø4x18mm

Gx1



103*15*7mm

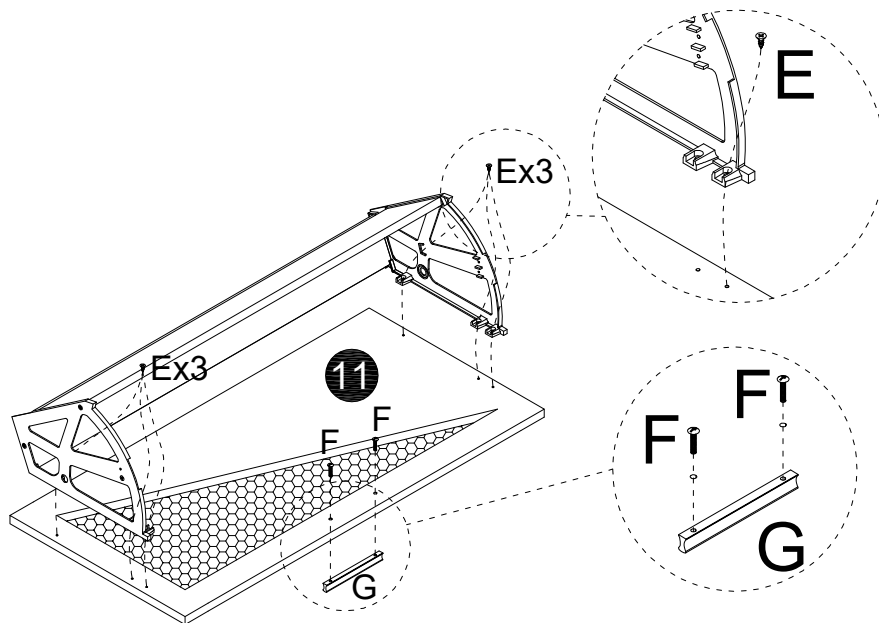

STEP12

Ex6



Ø3.5x14mm

Fx2





Ø4x18mm

Gx1



103*15*7mm

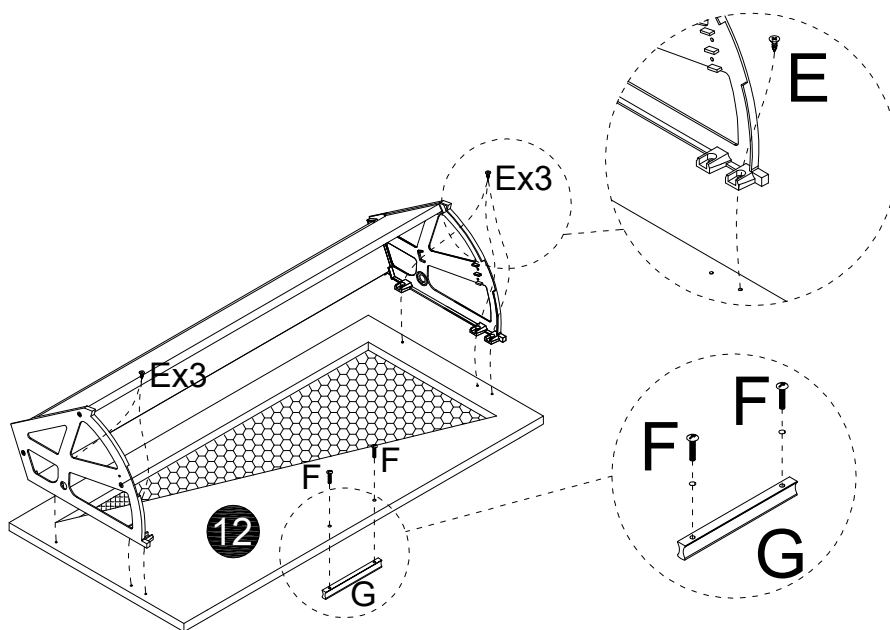

STEP13

Jx4



M6*18mm

Kx4






Ø19x1mm

Lx4



Ø14x9mm

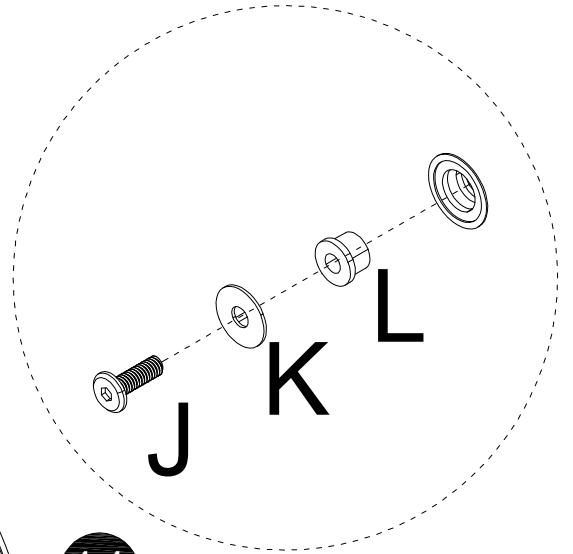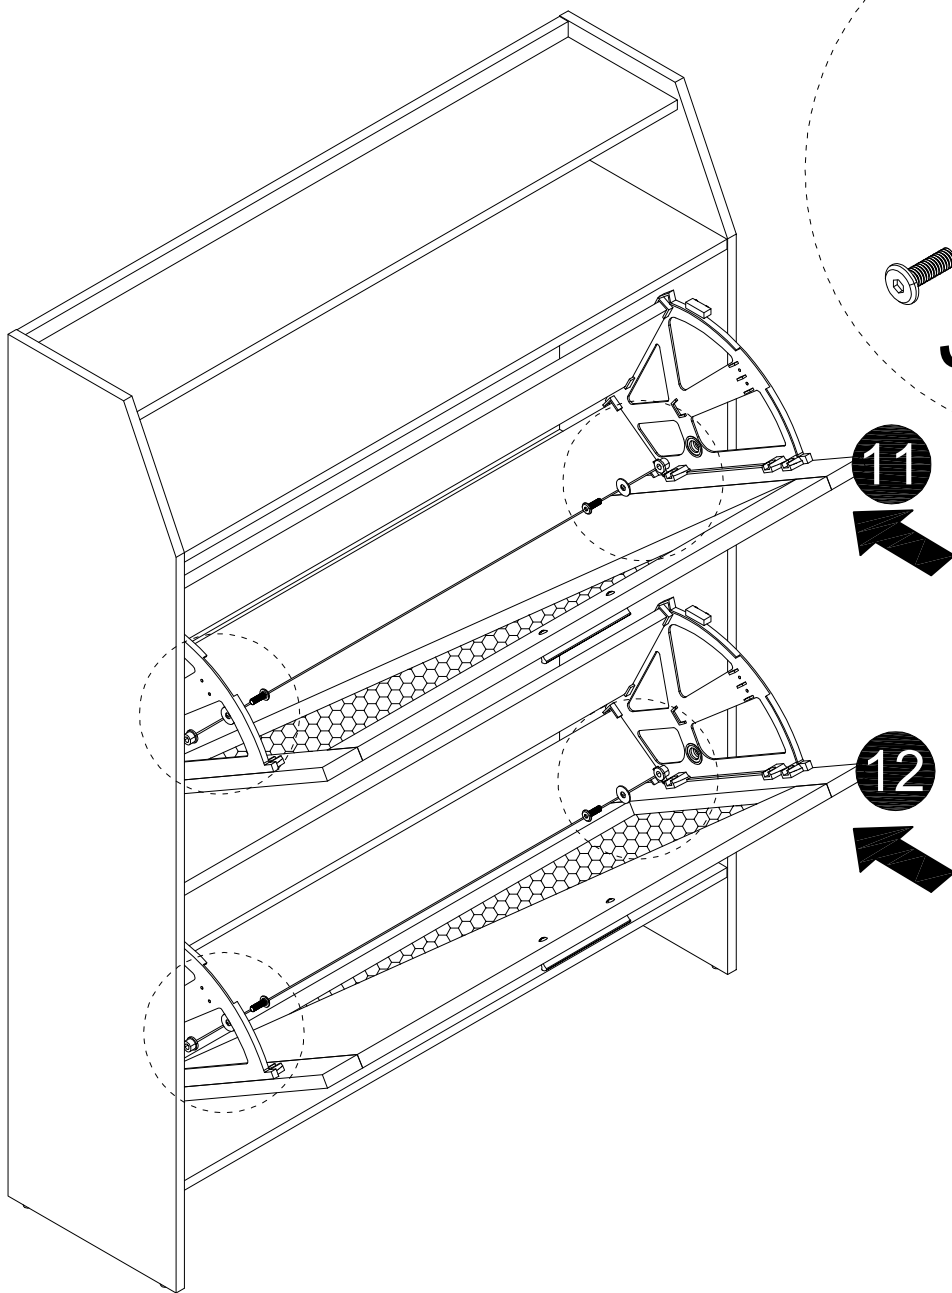
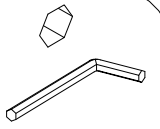


STEP14

Ex4



Ø3.5x14mm

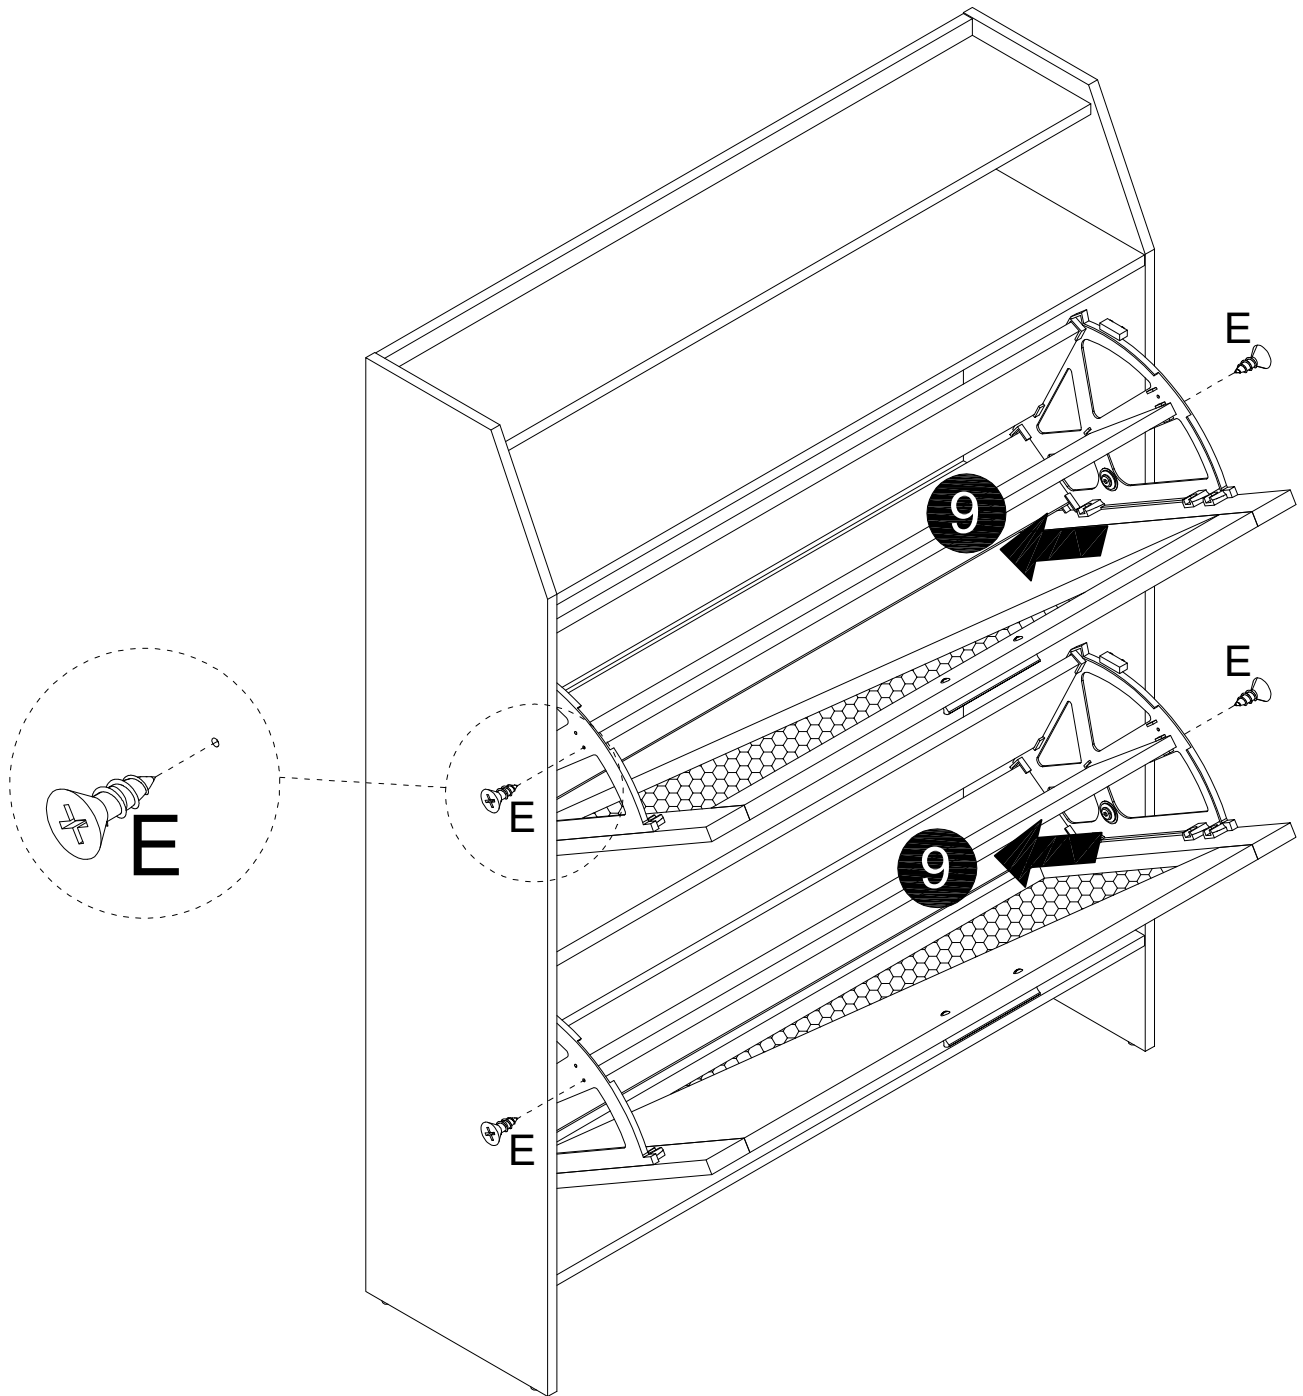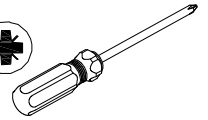

STEP15

Installation Completed

