

ASSEMBLY INSTRUCTIONS

MODEL : 3 SLAT CHAIR WITH CUSHION SEAT

Please read instructions carefully

- 1) Remove all wrapping materials, staples and packing straps from the carton.
- 2) Refer to Parts List and Hardware List and ensure they are complete before you start assembling.
- 3) Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from being scratched.
- 4) Do not fully tighten bolts and nuts until all parts have been assembled.


PARTS LIST (FOR 2 NOS. OF CHAIRS)

NO.	COMPONENT	QTY.
P1	BACK SLAT	6
P2	FRONT APRON	2
P3	BACK APRON	2
P4	RIGHT FRAME	2
P5	LEFT FRAME	2
P6	CUSHION SEAT	2


HARDWARE LIST (FOR 2 NOS. OF CHAIRS)

NO.	DESCRIPTION	QTY.
H1	ALLEN KEY	1
H2	M6 x 45 JCBC SCREW	8
H3	M6 x 50 JCBC SCREW	8
H4	BARREL NUT	16
H5	WOOD DOWEL	32
H6	WOOD SCREW	8


STEP 1

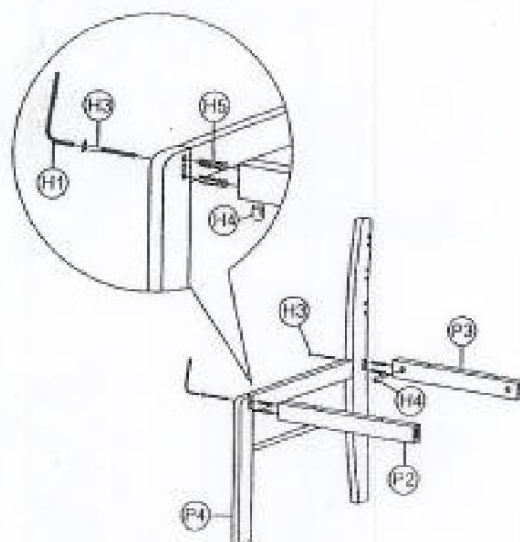

STEP 2

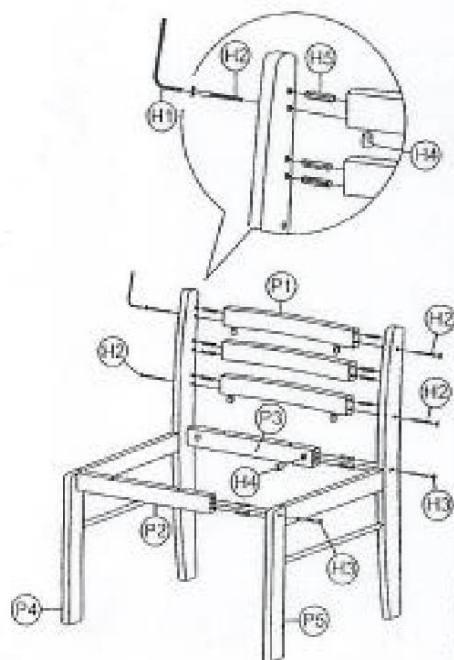

STEP 3

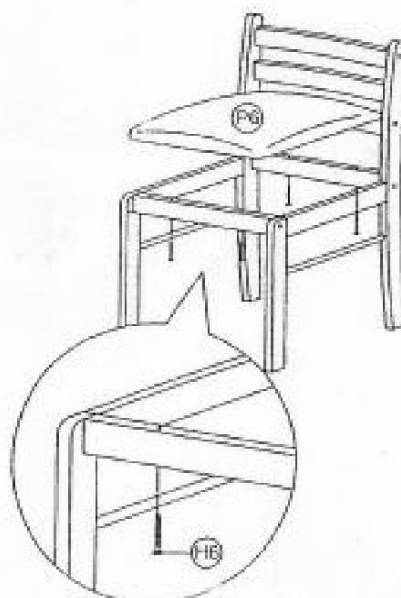

COMPLETE ASSEMBLY

CAUTION

- To avoid any risk of suffocation to children and animals, dispose off plastic bags immediately.
- Keep all hardware parts out of reach of children.