

MITCHELLBLACK™

Peel & Stick (Self-Adhesive) Wallpaper
Preparation & Installation Guide

MITCHELL BLACK™


Peel & Stick (Self-Adhesive) Wallpaper - Preparation Guide

Wall Preparation :




1. Inspecting the wall :

Prepare all surfaces, including drywall, old paint, residual wallpaper, and any imperfections, if necessary. Fill chips, holes, and cracks, then sand and prime blank or repaired areas.

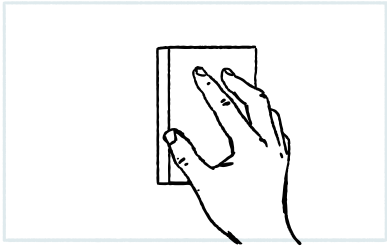


2. Cleaning the wall :

For Matte Surfaces: Scrape flaking areas, sand flat, wash with all-purpose cleaner. For Glossy Surfaces: Clean thoroughly and seal with an acrylic primer. In rooms prone to mildew: Clean the walls with a bleach & hot water mixture.

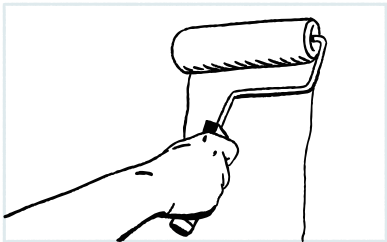

3. Priming the wall :

Apply an even coat of acrylic primer to seal the wall against moisture. This coat will assist with wallpaper positioning. Allow the primer to cure for at least 48 hr. (If using paint allow up to 30 days for the paint to set).

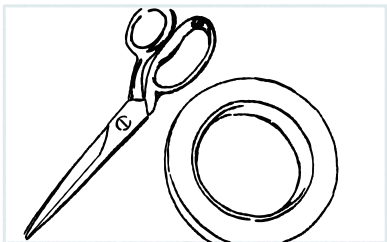




Additional Tips :

Use sharp tools and replace blades as needed. Smooth bubbles outward with gentle, even strokes to avoid creasing. Protect wallpaper edges from excess adhesive with painter's tape. For proper curing, avoid high humidity and maintain room temperature.

Tools :


Installation Tools :

Microfiber Cloth
Pencil
Seam Roller / Smoother
Sharp Scissors
Straight-Edge Level
Utility Knife (& Spare Blades)
Wallpaper Brush

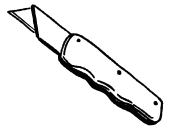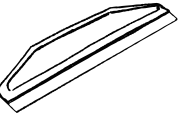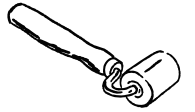


Wall Prep Tools :

All Purpose Cleaner
Bleach & Water (if needed)
Painter's Tape
Sandpaper
Spackle (if needed)

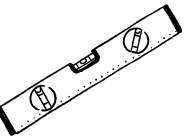


MITCHELL BLACK™

Peel & Stick (Self-Adhesive) Wallpaper - Installation Guide

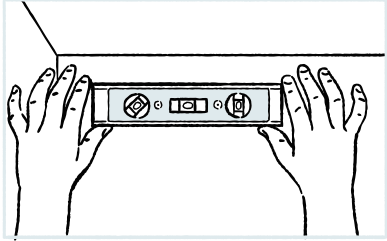


1. Make a Level Guideline :

Begin in the least conspicuous corner of the room. Use a level to draw a vertical guideline 25 inches away from the left-most edge of the wall. Prepare to leave 2-3 extra inches of wallpaper before sticking at ceiling line to account for slight ceiling slope.

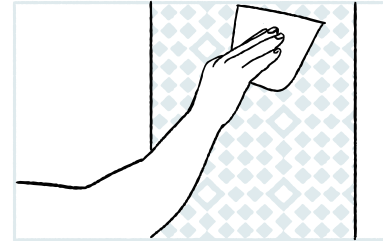


5. Smoothing the Paper :

Press the adhesive firmly to the top of the wall. Use a wallpaper brush or smoother to smooth from top to bottom and center outward, removing all bubbles.

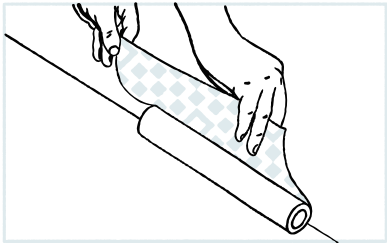


2. Begin Your Install :

Check pattern direction. Make sure when unrolled, top of pattern is at the top. Place roll against the wall with design facing away from the surface. Align wallpaper to the guideline to ensure a straight hang.

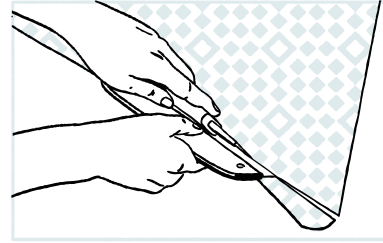


6. Trim Excess Length :

Continue until the wallpaper reaches the floor or baseboard. Then, use a straightedge and utility knife to trim any excess.

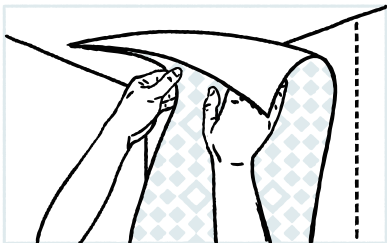


3. Hang the First Strip :

Peel the first 10 inches of backing from wall-covering roll. Leave a 2-3 inch flap of excess wallpaper at the ceiling level before sticking paper to the wall. This excess will be trimmed later.

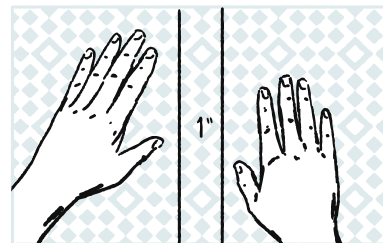


7. Apply Additional Strips :

Position each strip with a 1" overlap to align the pattern. If misaligned, gently peel back from the top or bottom just enough to match, and reposition carefully to avoid distorting.

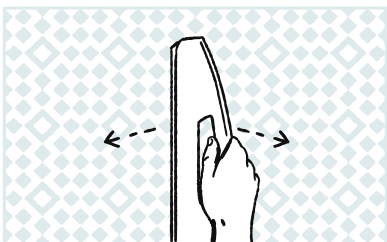

4. Adhering the Paper :

Pull the backing down evenly, about 2 ft. at a time. Press the wallpaper in a gentle concave motion, pushing air bubbles toward the edges.

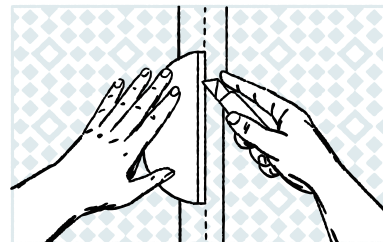

8. "Double-Cut" the Seam (Optional) :

Use a straightedge and knife to cut the overlap, leaving ½" of material on each side of the cut. Lift the seam to remove both ½" strips, then press the seam flat with a seam roller for a "butt-joint" look.