


SKU:

LX-SB428Q-HY-BL01/02

LX-SB428Q-HY-WHT01/02

BED ASSEMBLY INSTRUCTIONS

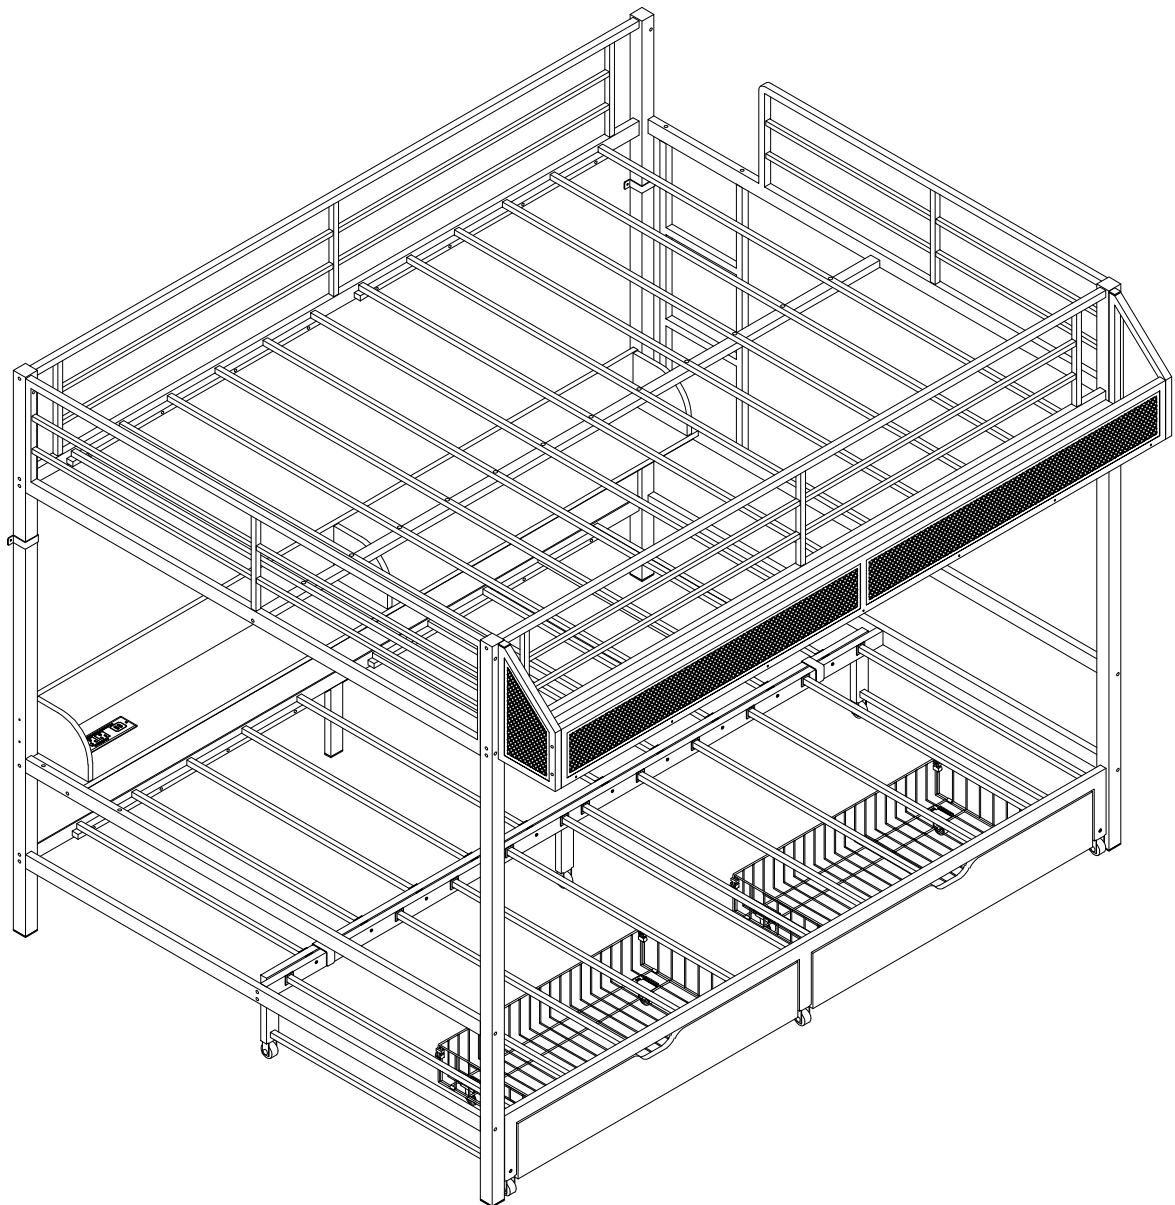

SAFETY WARNINGS AND GENERAL NOTES

1. Follow all warning information on the loft bed frame and shipping carton. Do not remove any warning labels from the bed.
2. Always use the recommended mattress size on the mattress support to help prevent entrapment or falls.
3. Do not allow children under 6 years of age to use the upper bunk.
4. Periodically check the guardrails, stair unit, and all other components to make sure they are in the correct position, free from damage, and that all fasteners are tight.
5. Do not allow horseplay on or under the bed.
6. Do not allow jumping or rough play on the bed.
7. Do not exceed weight capacity. (see product specifications)
8. Mattress must fit securely within the frame.
9. Always secure the bed to the wall using the anti-tip kit.
10. Do not allow more than one person on the upper bunk at a time.
11. Always use the stair unit when entering or leaving the upper bunk.
12. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts only.
13. Using a night light may provide additional safety for anyone using the upper bunk.
14. Always use guardrails on both long sides of the upper bunk.
15. If the loft bed is placed next to a wall, the full-length guardrail should be positioned against the wall to help prevent entrapment between the bed and the wall. The use of water mattresses or sleep flotation mattresses are prohibited.
16. **STRANGULATION HAZARD:** Never attach or hang items to any part of the loft bed that is not designed for use with the bed, including but not limited to hooks, belts, and jump ropes.
17. Keep these instructions for future reference.
18. We recommend assembling the loft bed on the shipping carton or on a protected surface to help protect your floor or carpet.
19. Make sure all staples are removed from the carton before beginning assembly.
20. Use only the mattress sizes specified below.

Upper Bunk Mattress

Bed Type: Queen Standard

Length: 79" - 80"

Width: 59" - 60"

Maximum Thickness: 6" max

Lower Bunk Mattress

Bed Type: Queen Standard

Length: 79" - 80"

Width: 59" - 60"

Maximum Thickness: 8" max

21. The top surface of the mattress must be at least 5" (127 mm) below the upper edge of the guardrails.
22. Replacement parts, including additional guardrails, may be obtained from the manufacturer or dealer.
23. This product must be secured to a wall using the included anti-tip hardware. Failure to do so may result in serious injury or death.


Before Assembly:

- Check all parts and hardware against the parts list
- Do not fully tighten bolts until instructed
- Assembly requires 2 adults
- Estimated assembly time: 1–2 hours

ELECTRICAL SAFETY NOTICE:

- This product may include a power cord and electrical accessories.
- Keep all electrical components away from water, moisture, and heat sources.
- Do not allow children to play with or handle electrical components.
- Adult supervision is recommended when children are using the upper bunk.
- Make sure the power cord is securely fastened to the metal frame as instructed.
- Do not use any electrical component if the cord or plug is damaged.
- Disconnect the power before moving, adjusting, or servicing the bed.
- For indoor use only.
- Do not exceed the rated capacity of the power strip.
- Keep the power cord away from the stair path and any area where it may be stepped on.
- Keep all cords away from walking paths to prevent tripping.










Bed Parts View

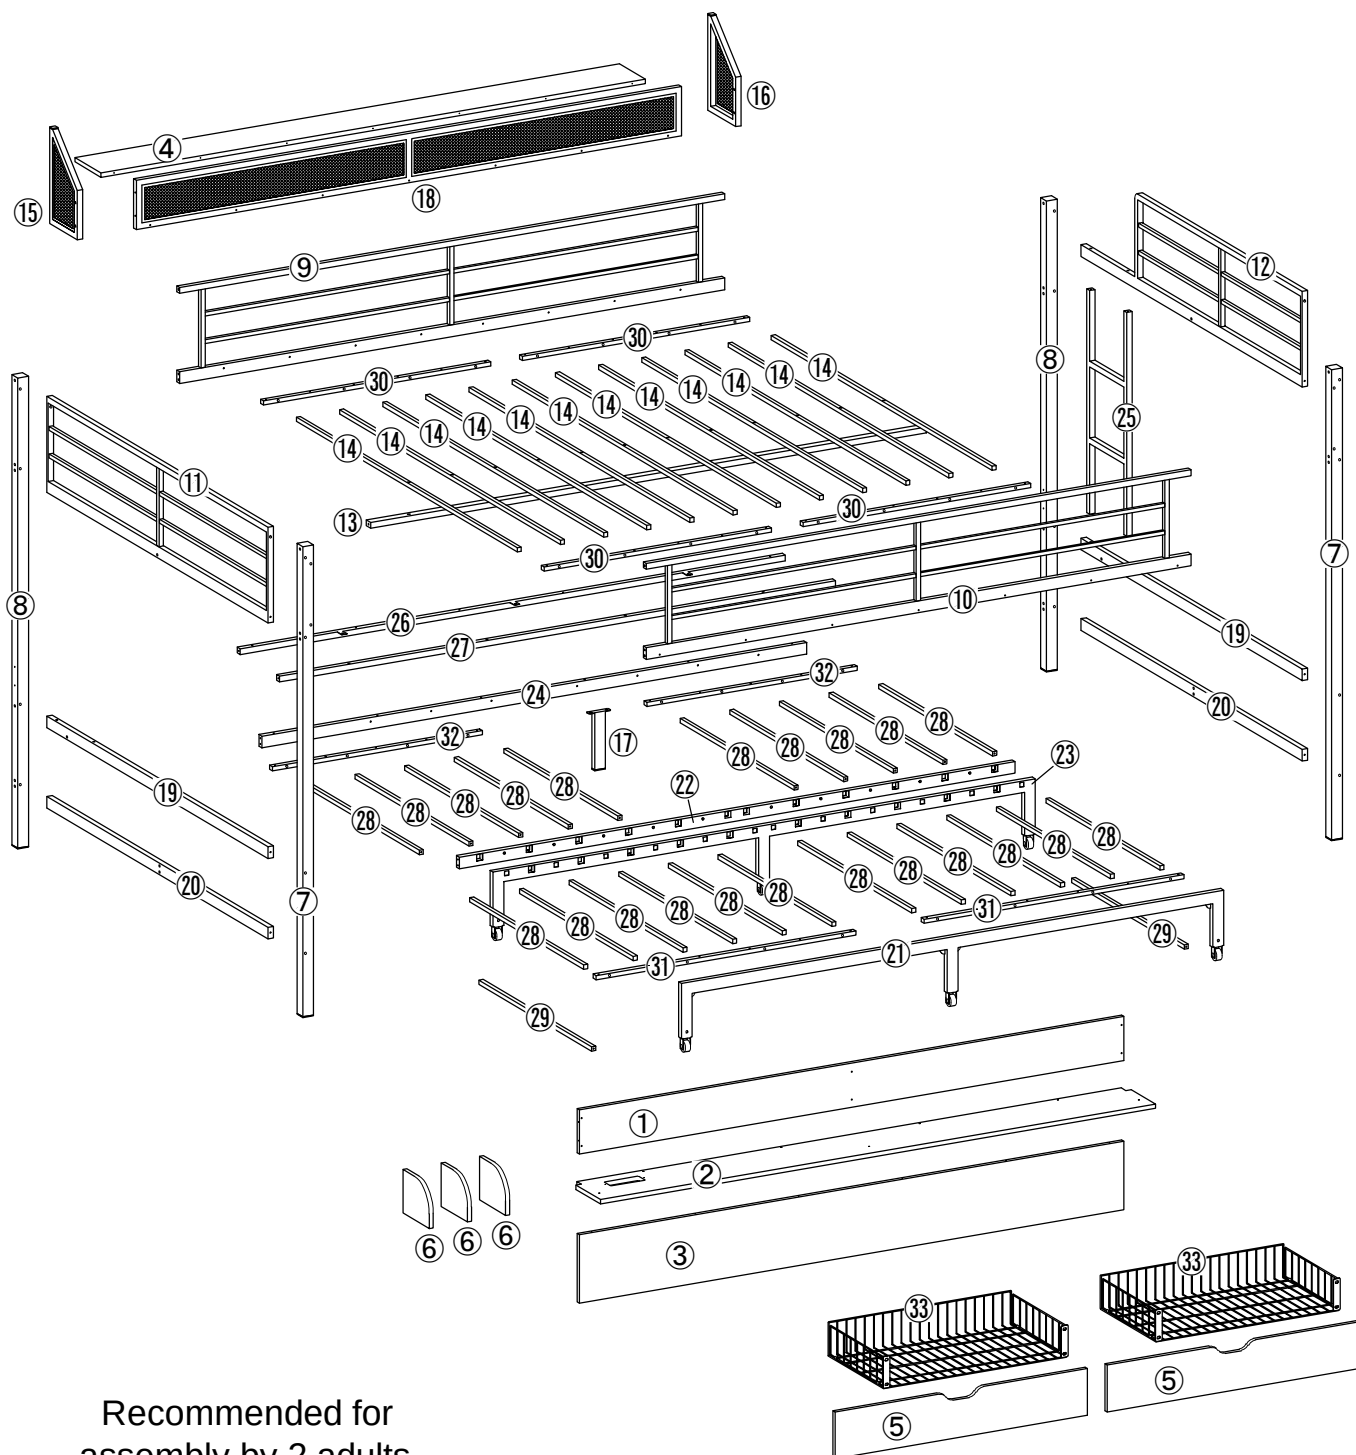





Recommended for
assembly by 2 adults.

A power drill with a hex bit
is recommended to speed
up assembly, but do not
over tighten the hardware.



Part List

				
① - 1pc	② - 1pc	③ - 1pc	④ - 1pc	⑤ - 2pcs
				
⑥ - 3pcs	⑦ - 2pcs	⑧ - 2pcs	⑨ - 1pc	⑩ - 1pc
				
⑪ - 1pc	⑫ - 1pc	⑬ - 1pc	⑭ - 12pcs	⑮ - 1pc
				
⑯ - 1pc	⑰ - 1pc	⑱ - 1pc	⑲ - 2pcs	⑳ - 2pcs
				
㉑ - 1pc	㉒ - 1pc	㉓ - 1pc	㉔ - 1pc	㉕ - 1pc
				
㉖ - 1pc	㉗ - 1pc	㉘ - 22pcs	㉙ - 2pcs	㉚ - 4pcs
				
㉛ - 2pcs	㉜ - 2pcs	㉝ - 2pcs		

Hardware List




 M8*60mm (A) - 34pcs	 M8*55mm (B) - 3pcs	 M8*30mm (C) - 24pcs	 M8*15mm (D) - 15pcs	 M5mm (E) - 2pcs
 M6*55mm (F) - 4pcs	 M6*30mm (G) - 40pcs	 M6*25mm (H) - 46pcs	 M6*12mm (I) - 37pcs	 M4mm (J) - 1pc
 (K) - 1pc	 (L) - 22pcs	 M5*60mm (M) - 43pcs	 M3mm (N) - 1pc	 M3.5*14mm (O) - 2pcs
 (P) - 2pcs	 (Q) - 4pcs	 (R) - 8pcs	 (S) - 2pcs	 (T) - 2pcs
 (U) - 4sets	 Light Strip (V) - 1pc	 Ø13mm (W) - 2pcs		

The remote control for light strip "V" not include battery. Please install battery before use.

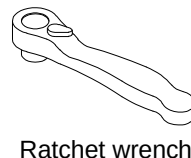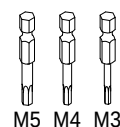


Attention: Please wear gloves during assembly


HOW TO USE RATCHET WRENCHES

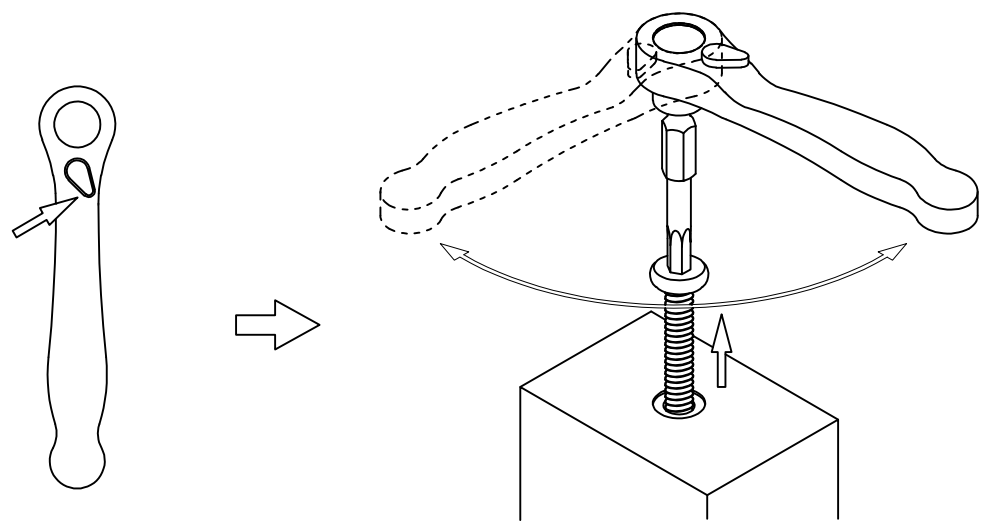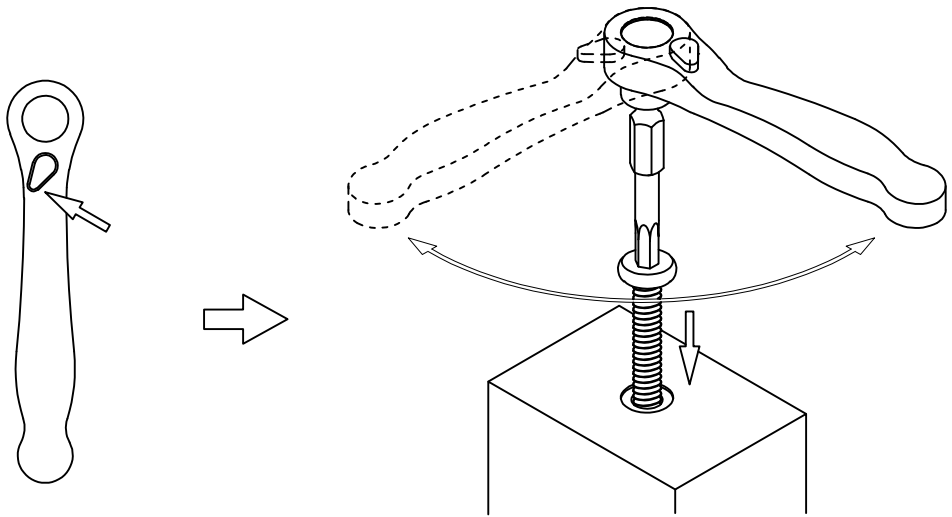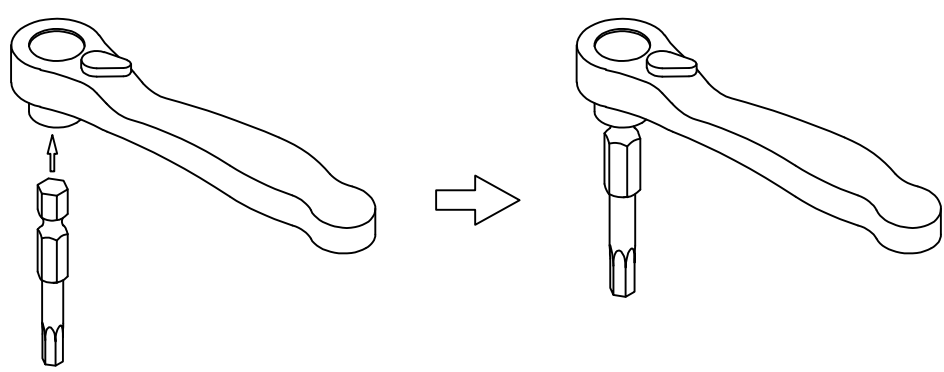



Step 1: Use hardware A, B, D and E to connect #7, #8, #11, #19 and #20 together.

Do not fully tighten screws initially (approx. 80%).
Tighten completely only after all parts are aligned.

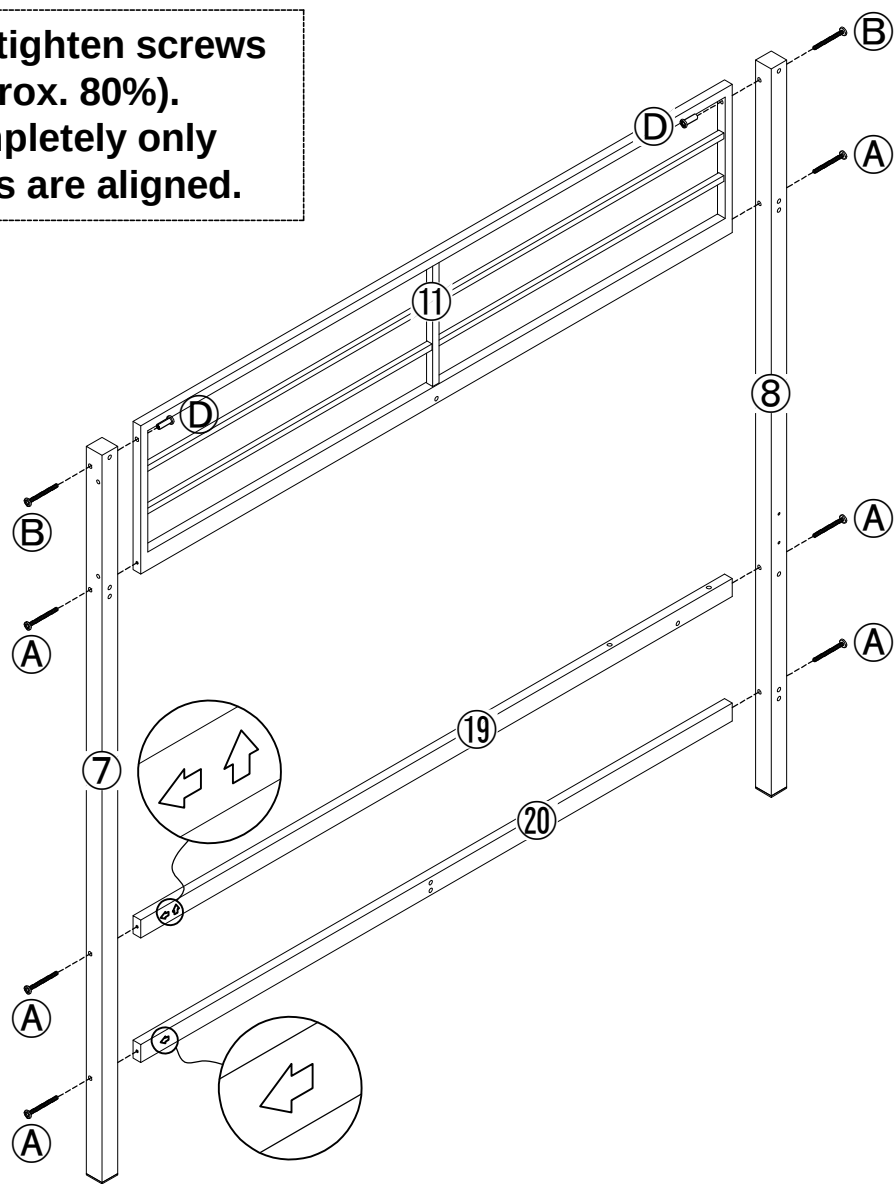

				
⑦ - 1pc	⑧ - 1pc	⑪ - 1pc	⑱ - 1pc	⑳ - 1pc
 M8*60mm Ⓐ - 6pcs	 M8*55mm Ⓑ - 2pcs	 M8*15mm Ⓓ - 2pcs	 M5mm Ⓔ - 2pcs	 M5 Ratchet wrench


Step 2: Use hardware A, B, D and E to connect #7, #8, #12, #19, #20 and #25 together.


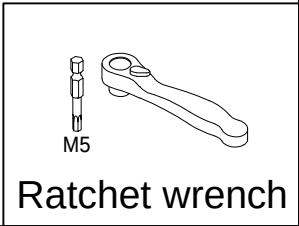
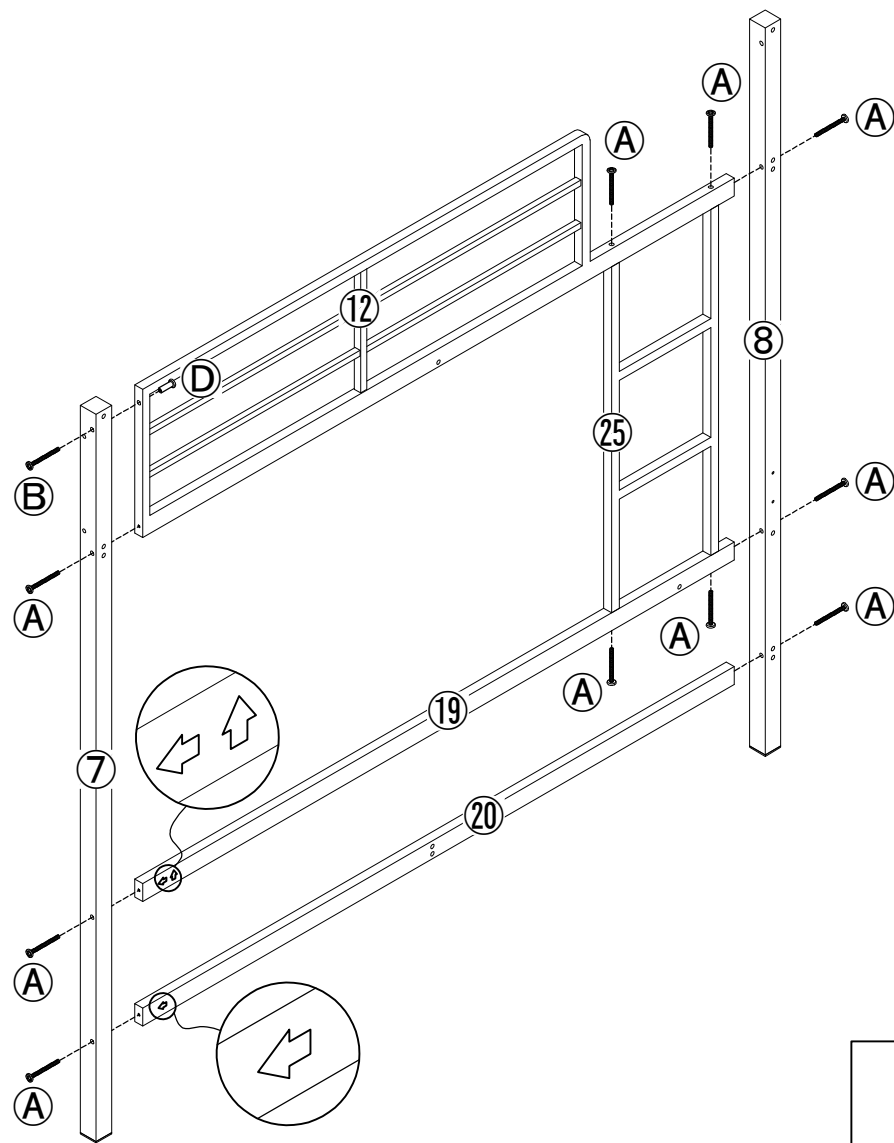


Ratchet wrench


				
⑦ - 1pc	⑧ - 1pc	⑫ - 1pc	⑲ - 1pc	⑳ - 1pc
	 M8*60mm Ⓐ - 10pcs	 M8*55mm Ⓑ - 1pc	 M8*15mm Ⓓ - 1pc	 M5mm Ⓔ - 2pcs
⑫ - 1pc	Ⓐ - 10pcs	Ⓑ - 1pc	Ⓓ - 1pc	Ⓔ - 2pcs

Step 3: Use hardware A, C and E to connect #9, #10, #13 and side frames together.


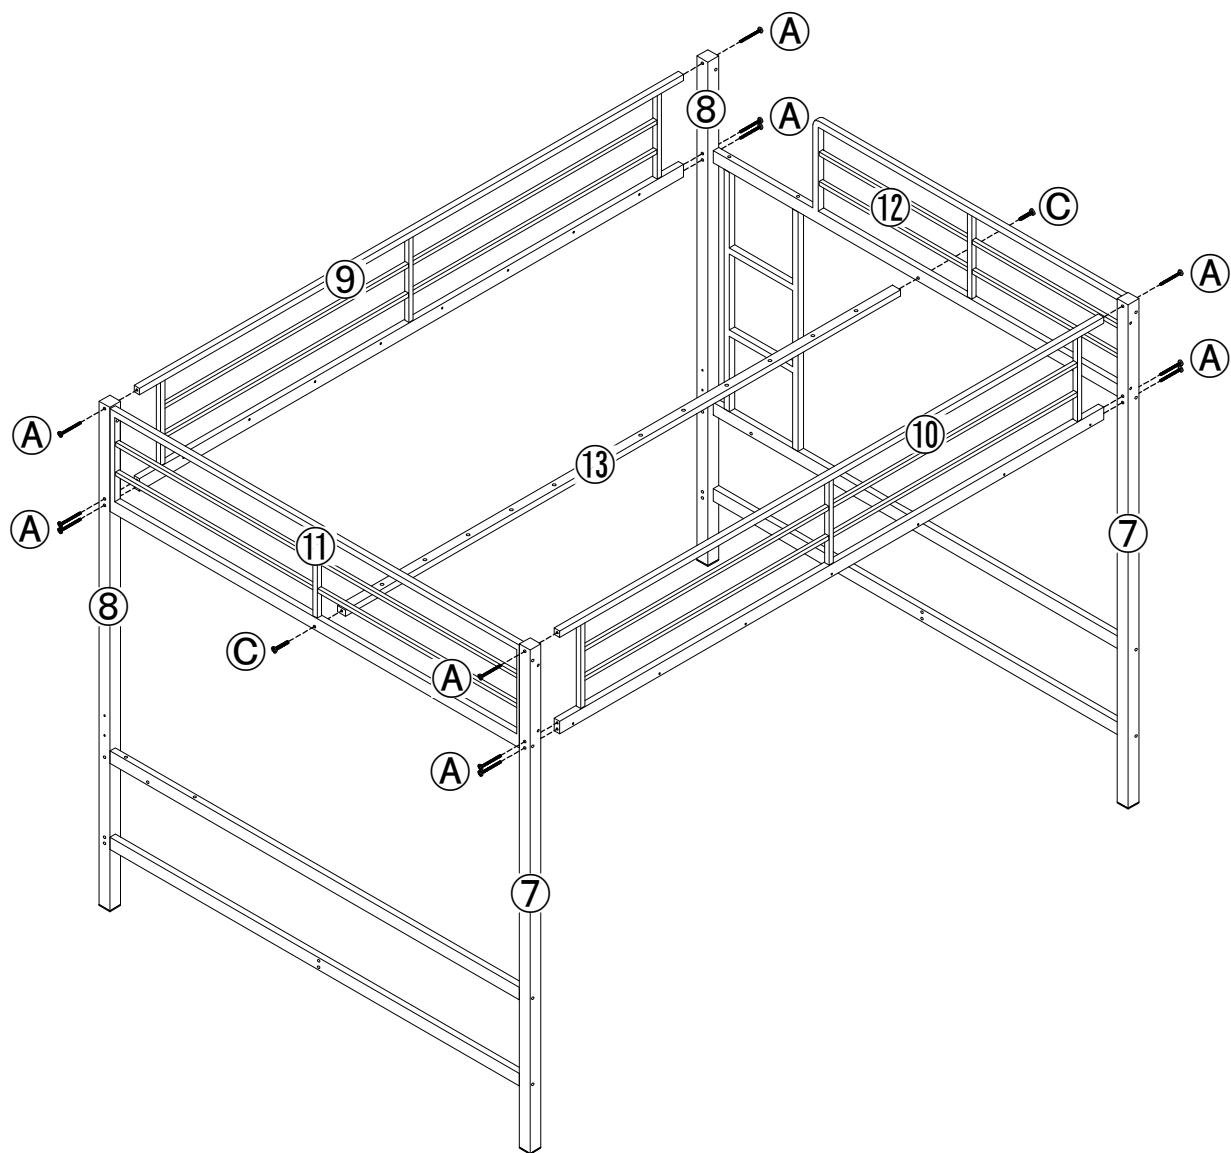


 ⑨ - 1pc	 ⑩ - 1pc	 ⑬ - 1pc	 M8*60mm Ⓐ - 12pcs	 M8*30mm Ⓒ - 2pcs
 M5mm Ⓔ - 1pc	 M5 Ratchet wrench			

Step 4: Use hardware A, C, E, I, J, M and N to connect #3, #17, #24, #26, #27 and bed frame together.

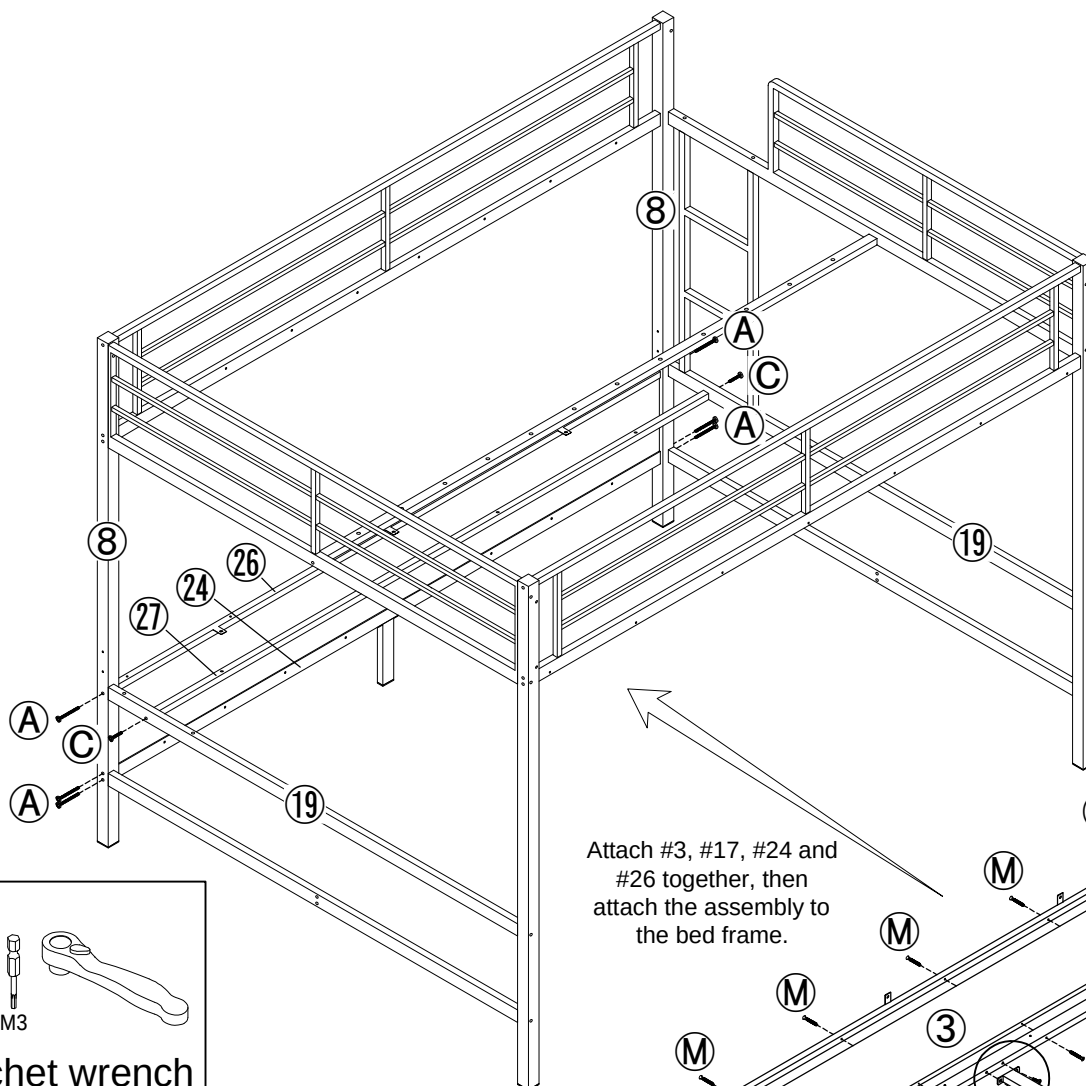

Attach #3, #17, #24 and #26 together, then attach the assembly to the bed frame.

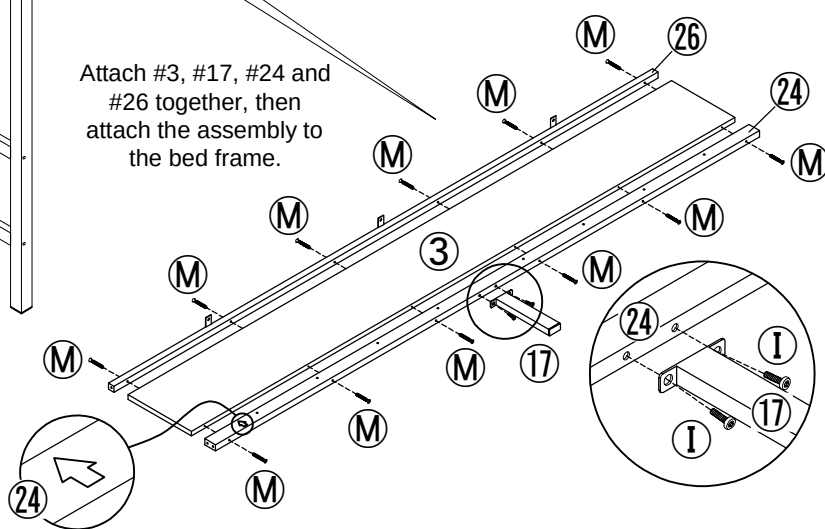

M5 M4 M3

Ratchet wrench



③ - 1pc



⑰ - 1pc



②④ - 1pc



②⑥ - 1pc



②⑦ - 1pc



M8*60mm

Ⓐ - 6pcs



M8*30mm

Ⓒ - 2pcs



M5mm

Ⓔ - 1pc




M6*12mm

Ⓘ - 2pcs




M4mm

Ⓙ - 1pc



M5*60mm



Ⓜ - 12pcs



M3mm


Ⓝ - 1pc

Step 5: Use hardware G, I, J, K, M, N and O to connect #1, #2, #6 and bed frame together.

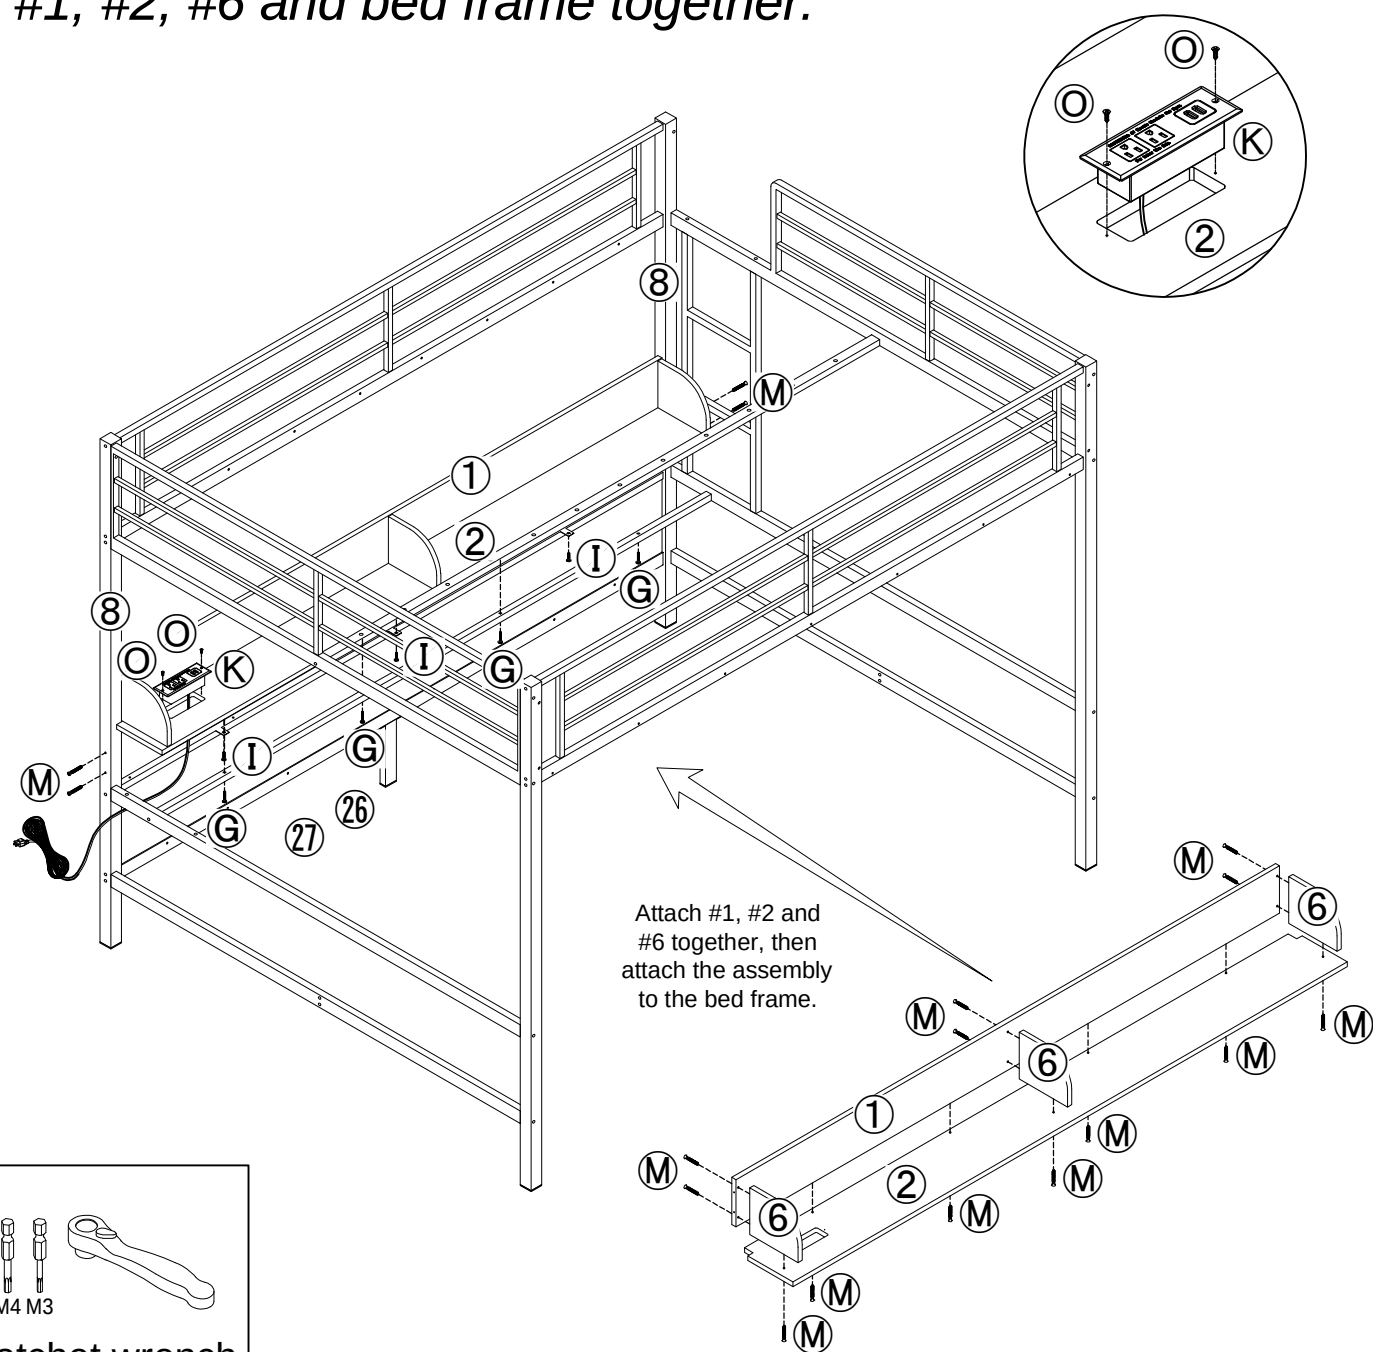

M4 M3

Ratchet wrench



① - 1pc



② - 1pc



⑥ - 3pcs



M6*30mm

Ⓒ - 4pcs



M6*12mm

Ⓘ - 3pcs



M4mm

Ⓙ - 1pc



Ⓚ - 1pc



M5*60mm

Ⓜ - 17pcs



M3mm


Ⓝ - 1pc



M3.5*14mm

Ⓞ - 2pcs

Step 6: Use hardware **F** and **J** to connect #15, #16 and bed frame together.

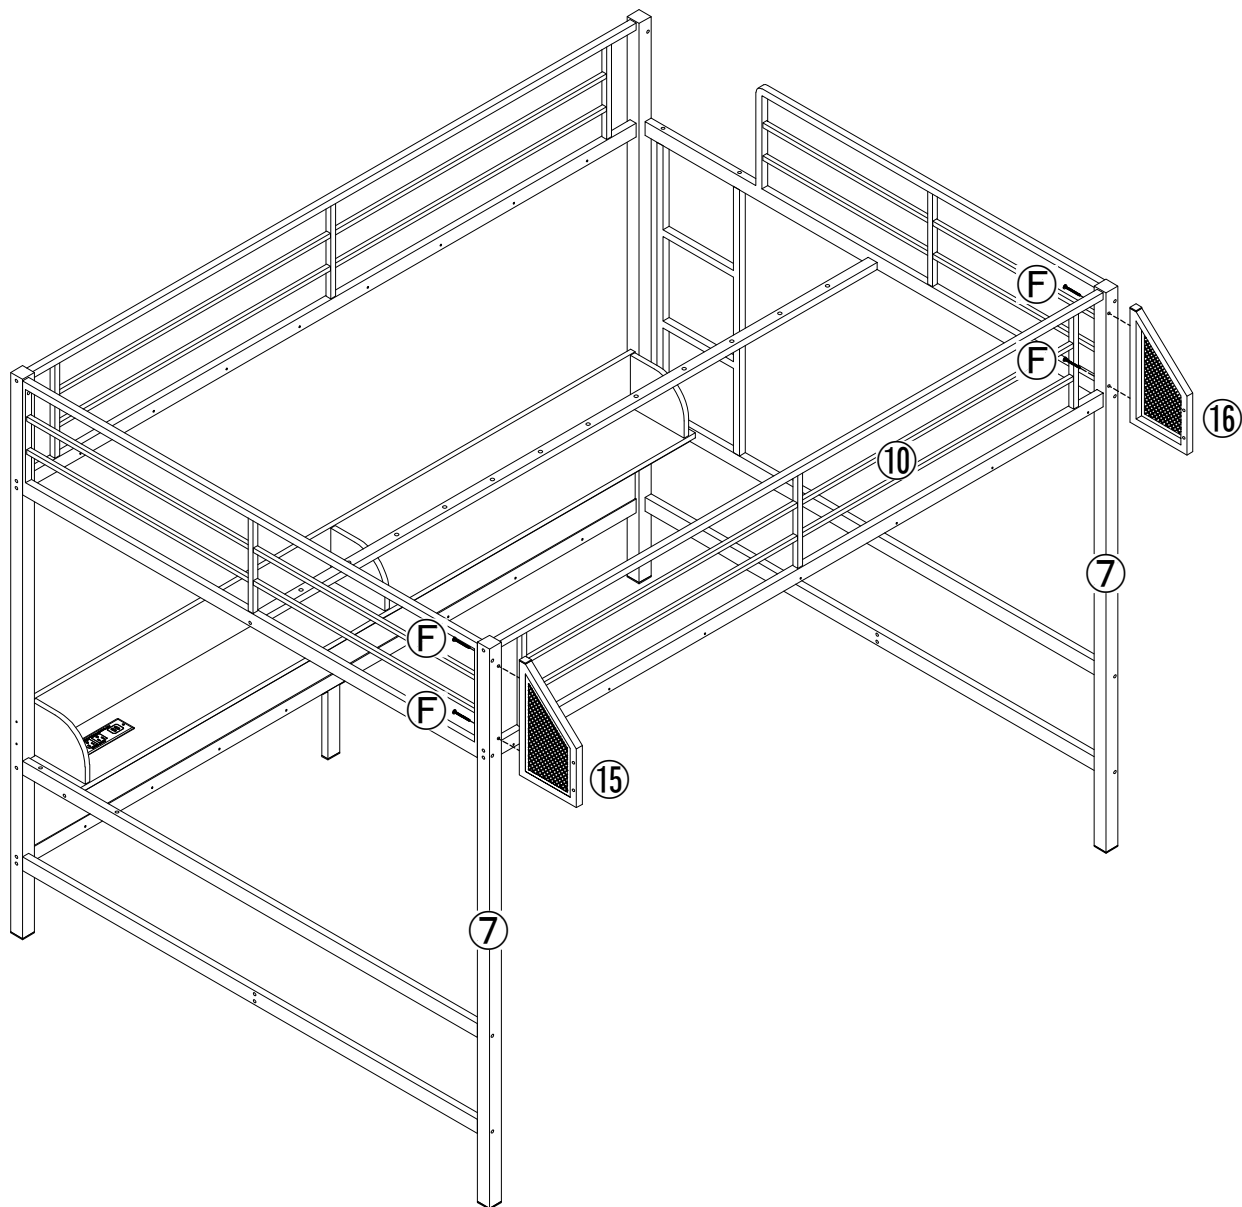

⑮ - 1pc



⑯ - 1pc




M6*55mm

ⓕ - 4pcs



M4mm


ⓙ - 1pc



M4

Ratchet wrench

Step 7: Use hardware G and J to connect #18 and bed frame together.

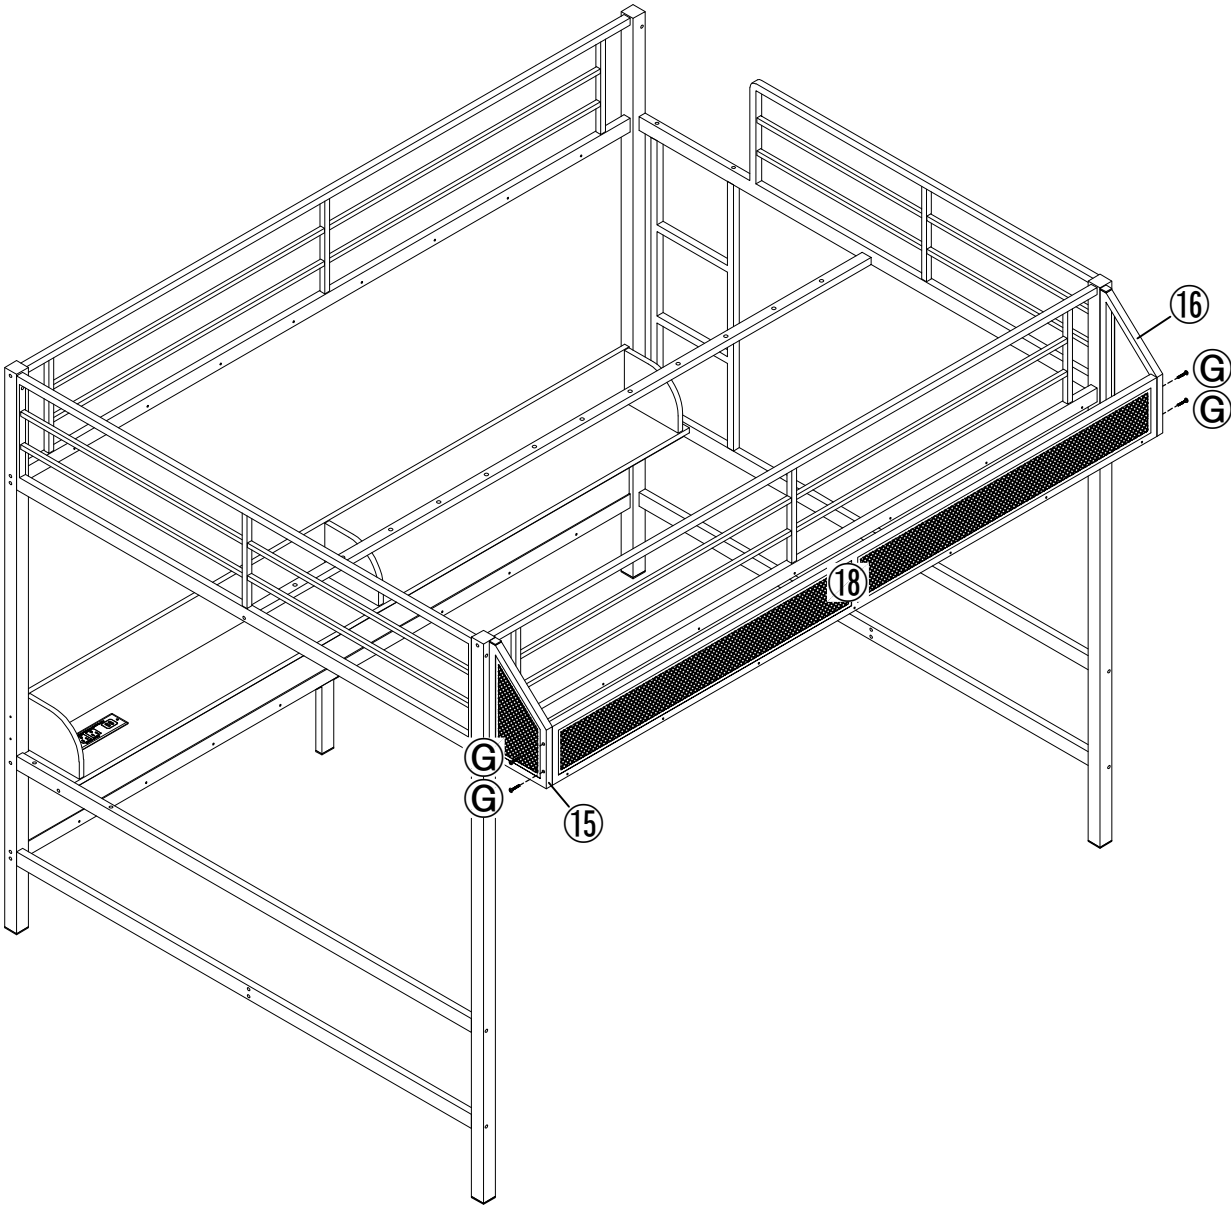

⑱ - 1pc




M6*30mm

ⓖ - 4pcs



M4mm


ⓙ - 1pc



M4

Ratchet wrench

Step 8: Use hardware M and N to connect #4 and bed frame together.

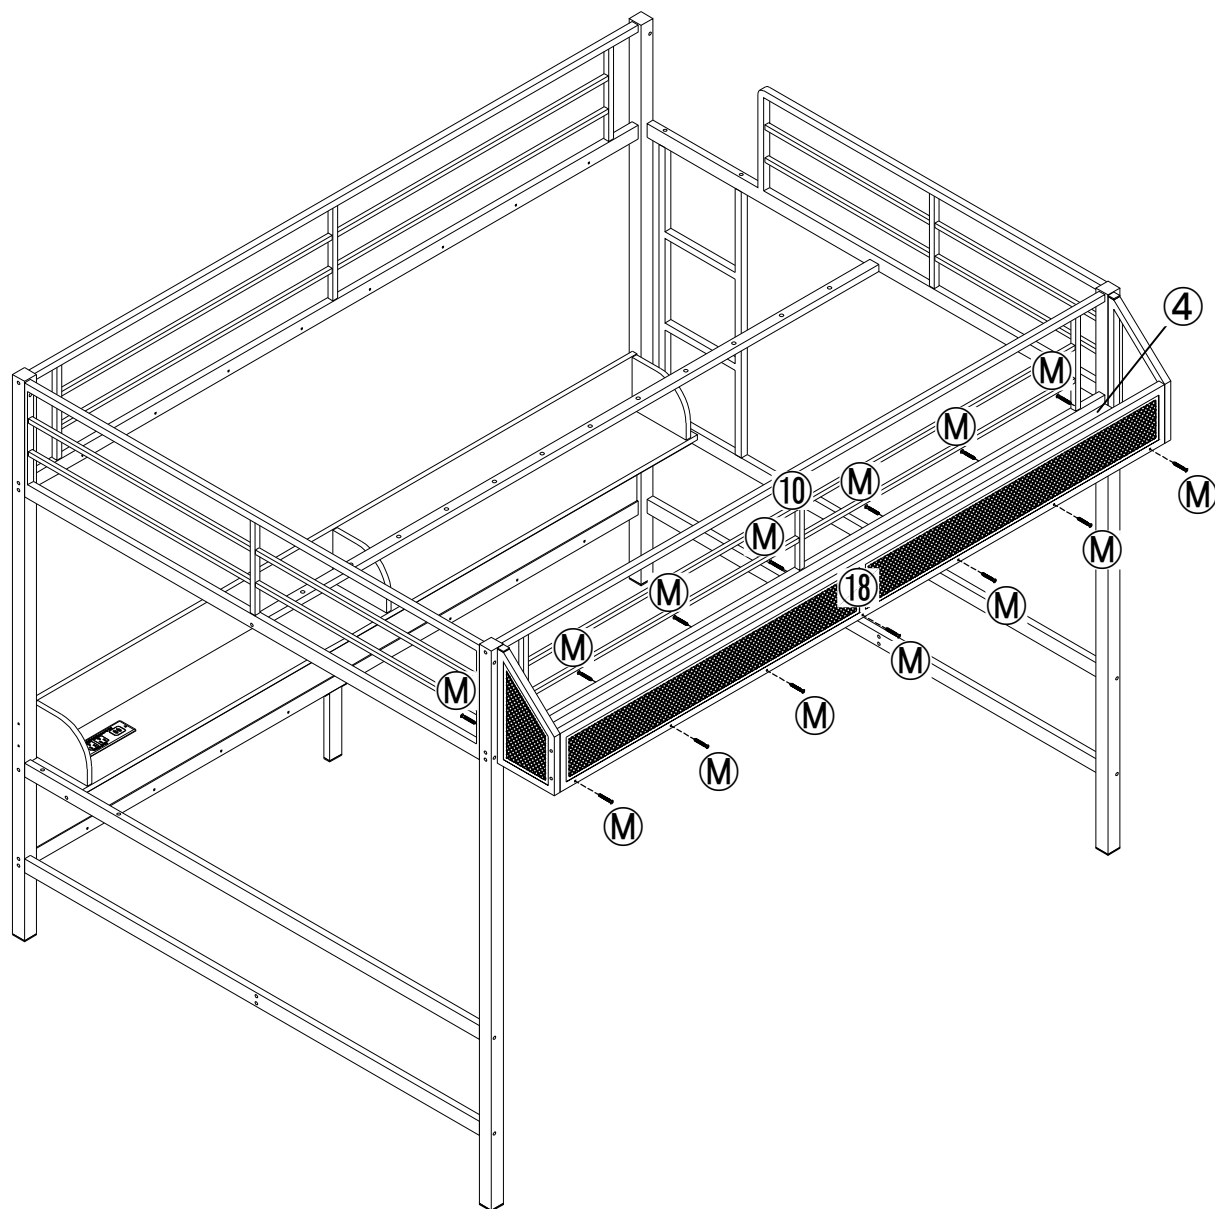

④ - 1pc




M5*60mm

Ⓜ - 14pcs



M3mm




Ⓝ - 1pc





M3

Ratchet wrench




Step 9: Use hardware H and J to connect #28, #31 and #32 together.

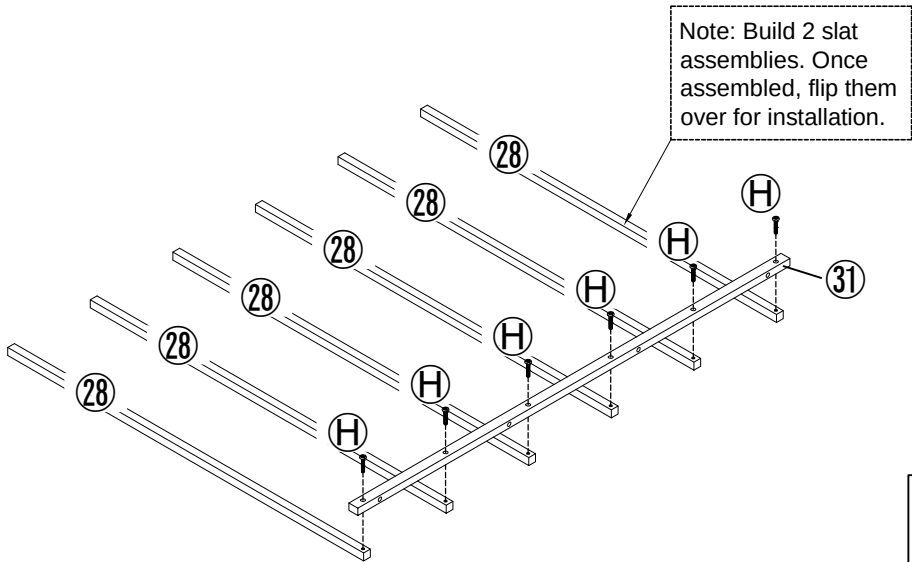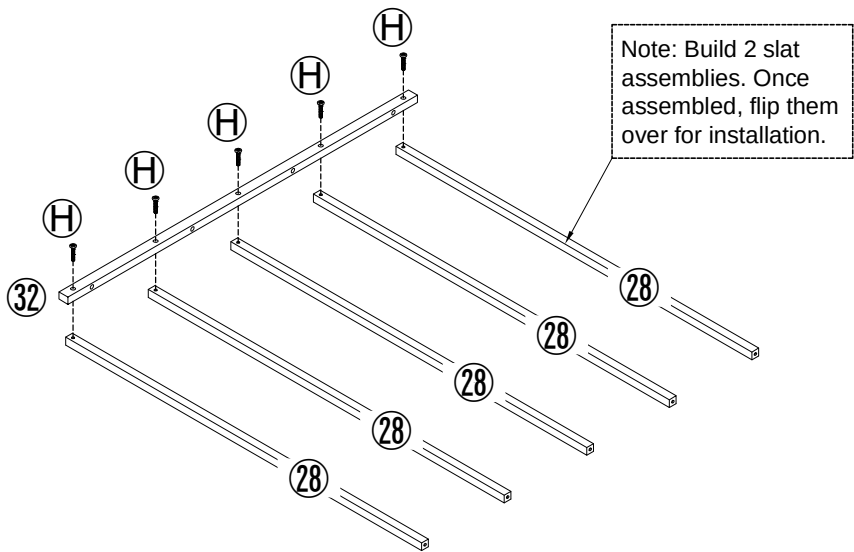


Ratchet wrench

 #28 - 22pcs	 #31 - 2pcs	 #32 - 2pcs	 M6*25mm H - 22pcs	 M4mm J - 1pc
--	---	---	--	---

Step 10: Insert hardware L to #23. Then connect #23, #28 and #32 together.

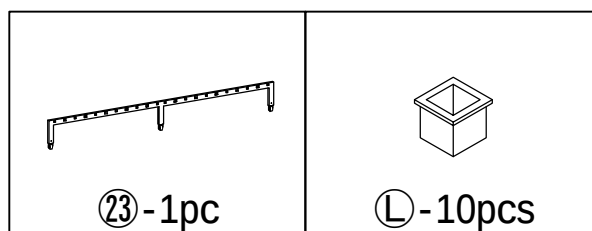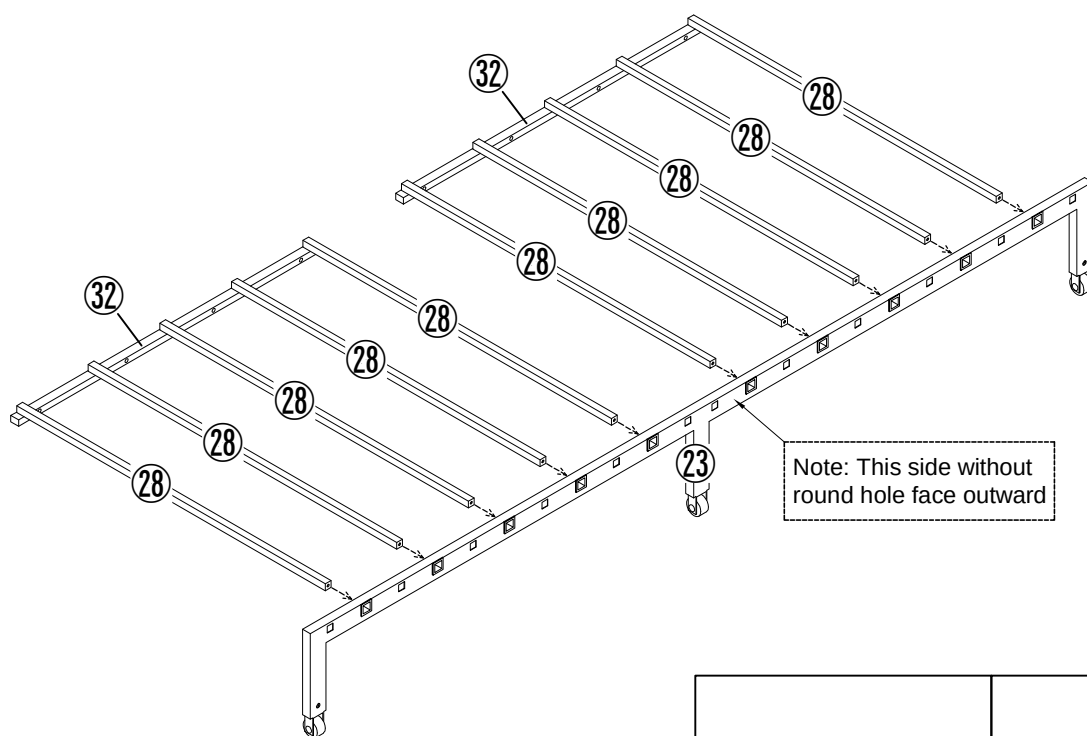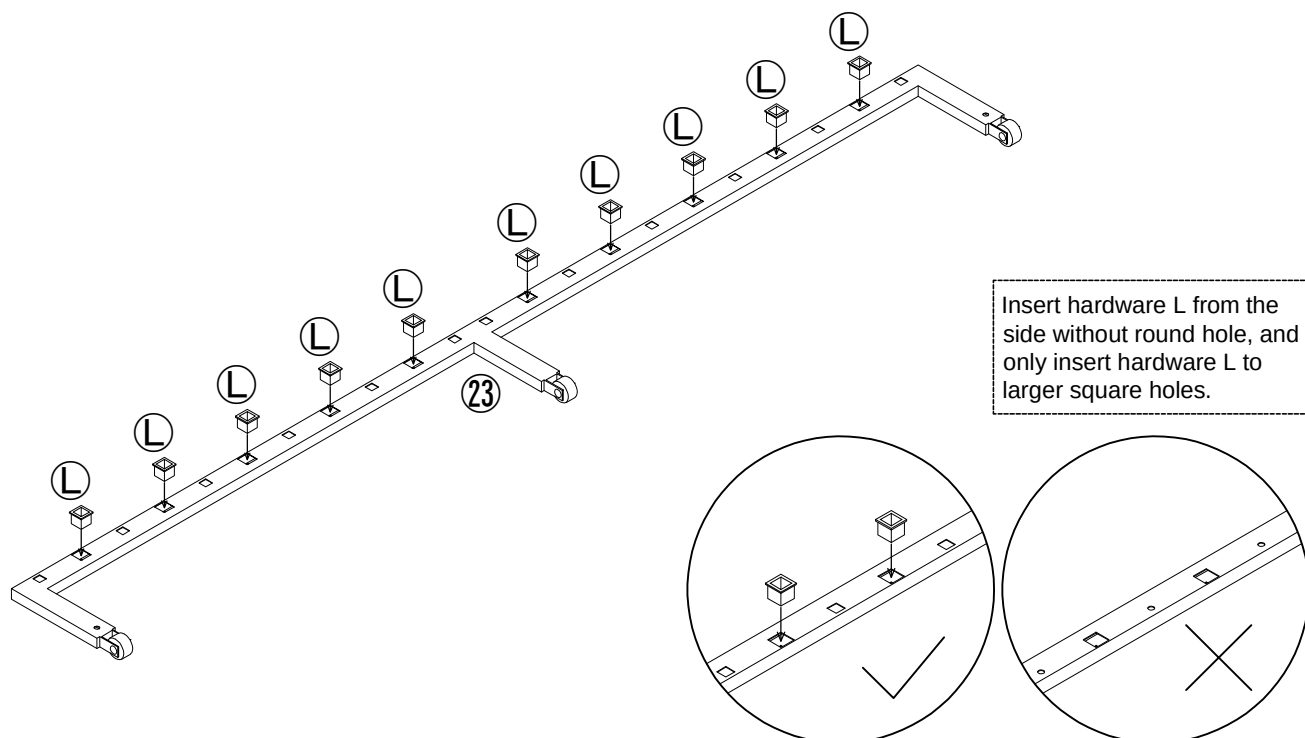

Step 11: Use hardware G and J to connect #23, #28, #32 and bed frame together.

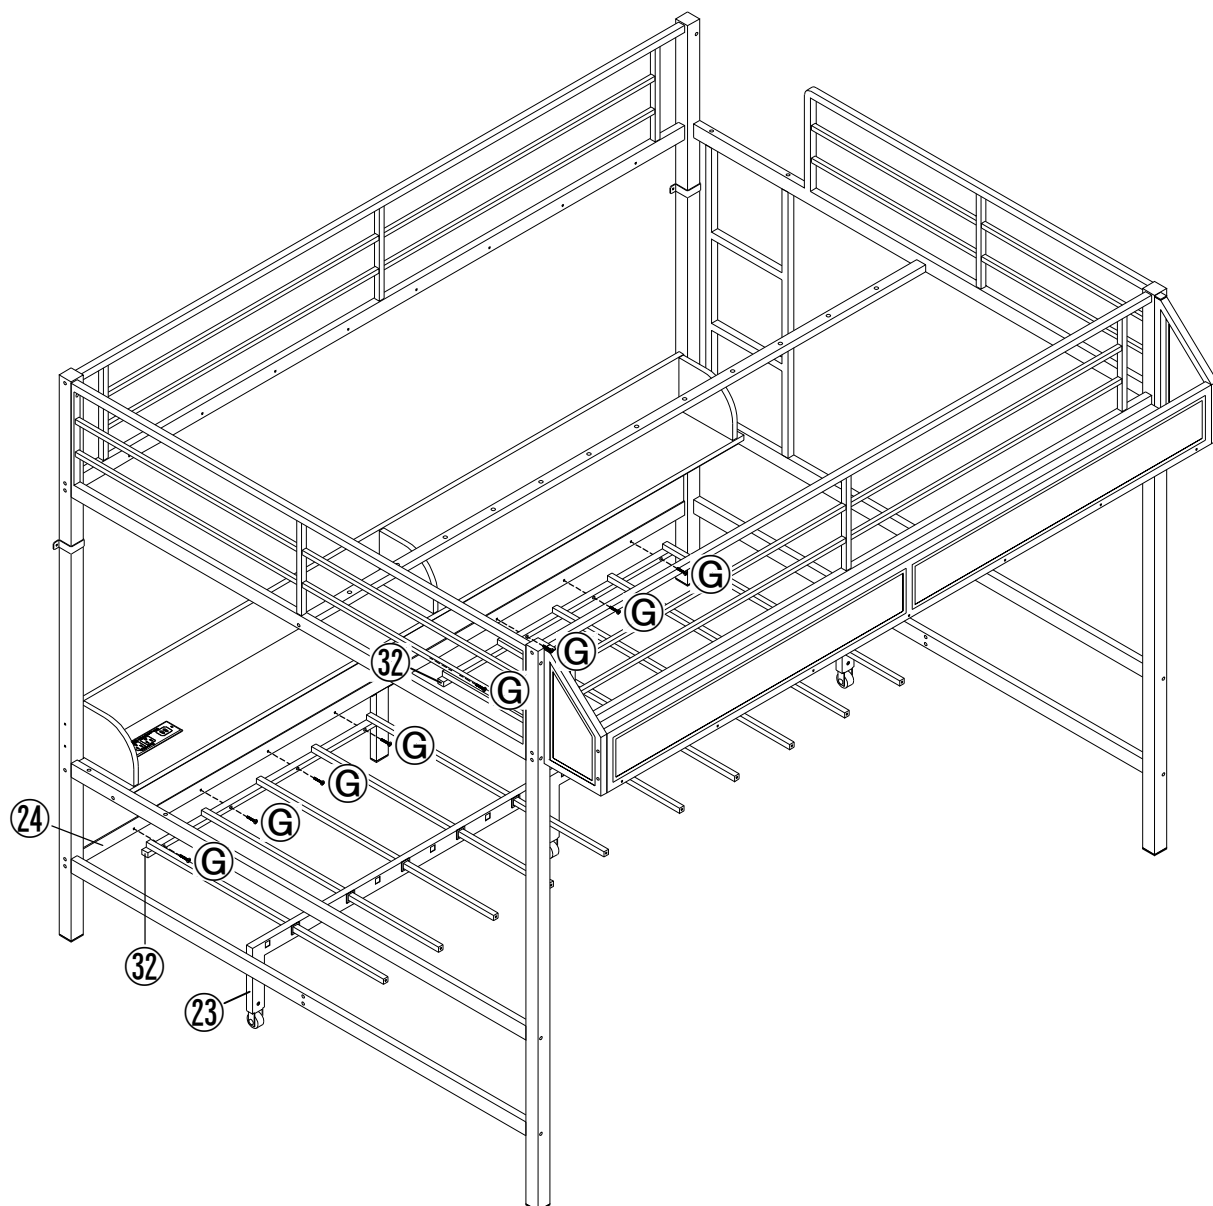


M6*30mm

Ⓔ - 8pcs



M4mm




Ⓙ - 1pc




M4


Ratchet wrench

Step 12: Insert hardware L to #22. Then use hardware I and J to connect #22 and #28 together.

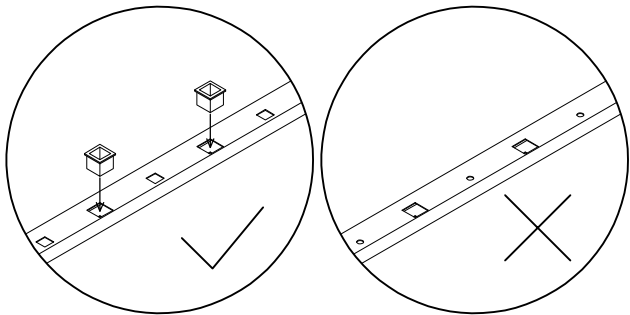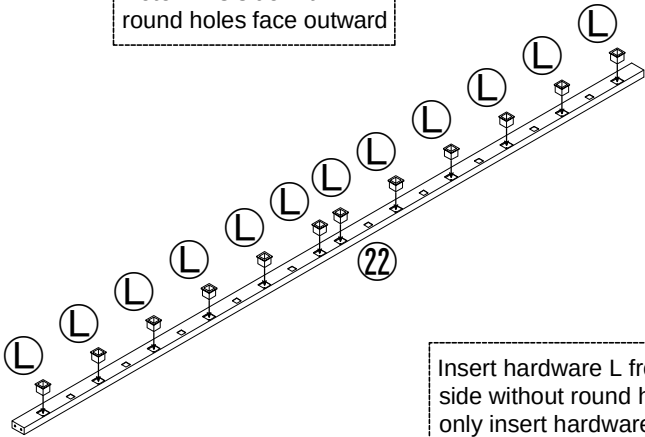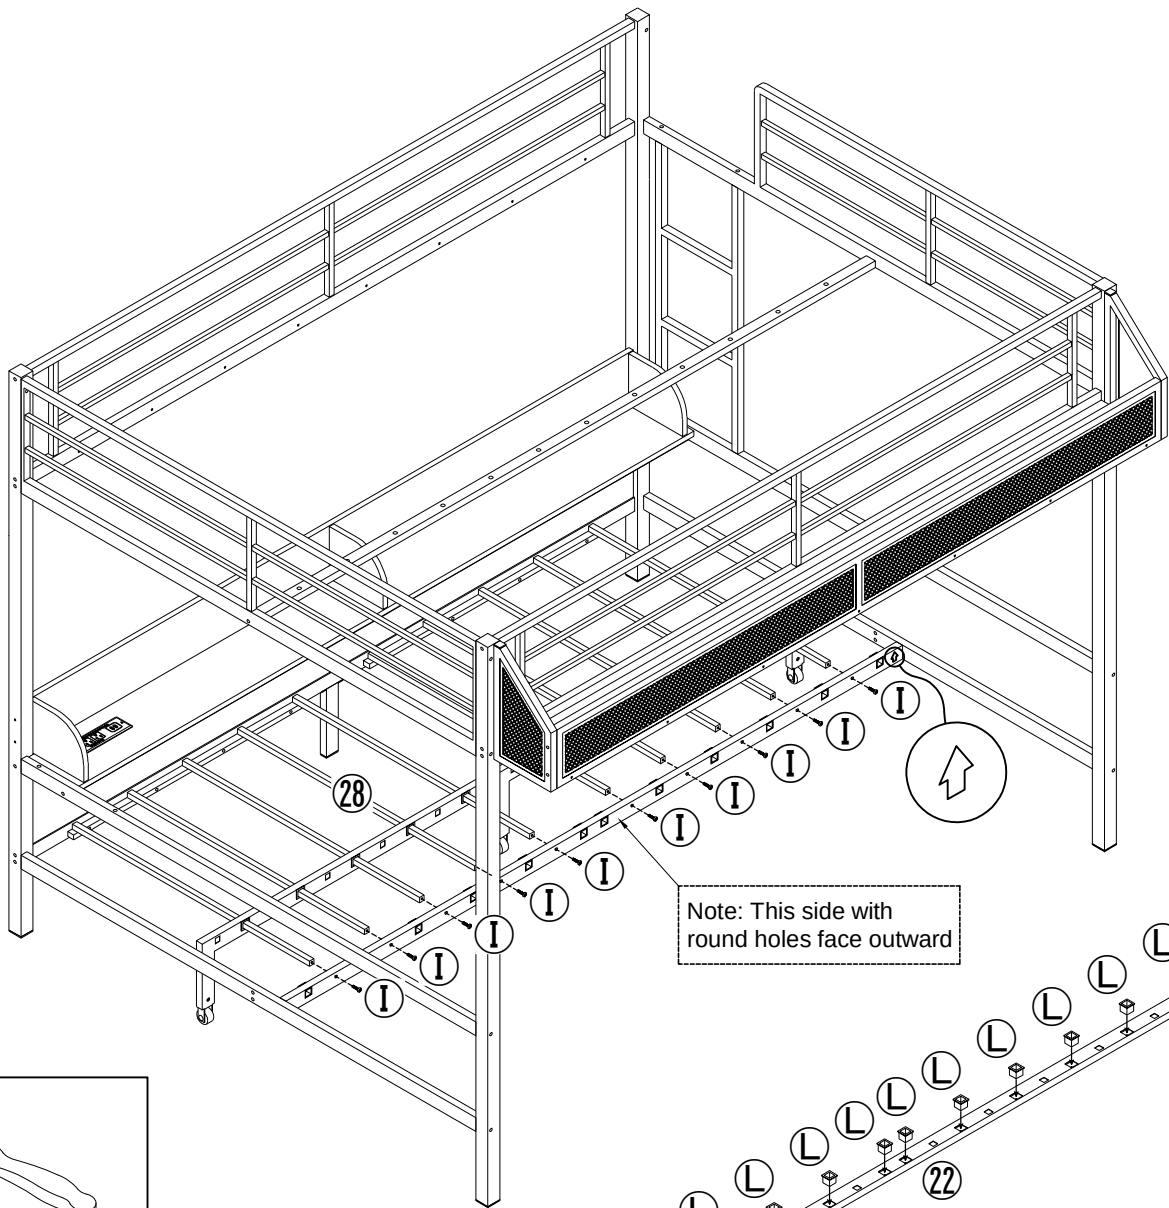

 M4 Ratchet wrench	
 ②② - 1pc	 M6*12mm ① - 10pcs
 M4mm ④ - 1pc	 ⑤ - 12pcs

Step 13: Use hardware C and E to connect #22 and bed frame together.

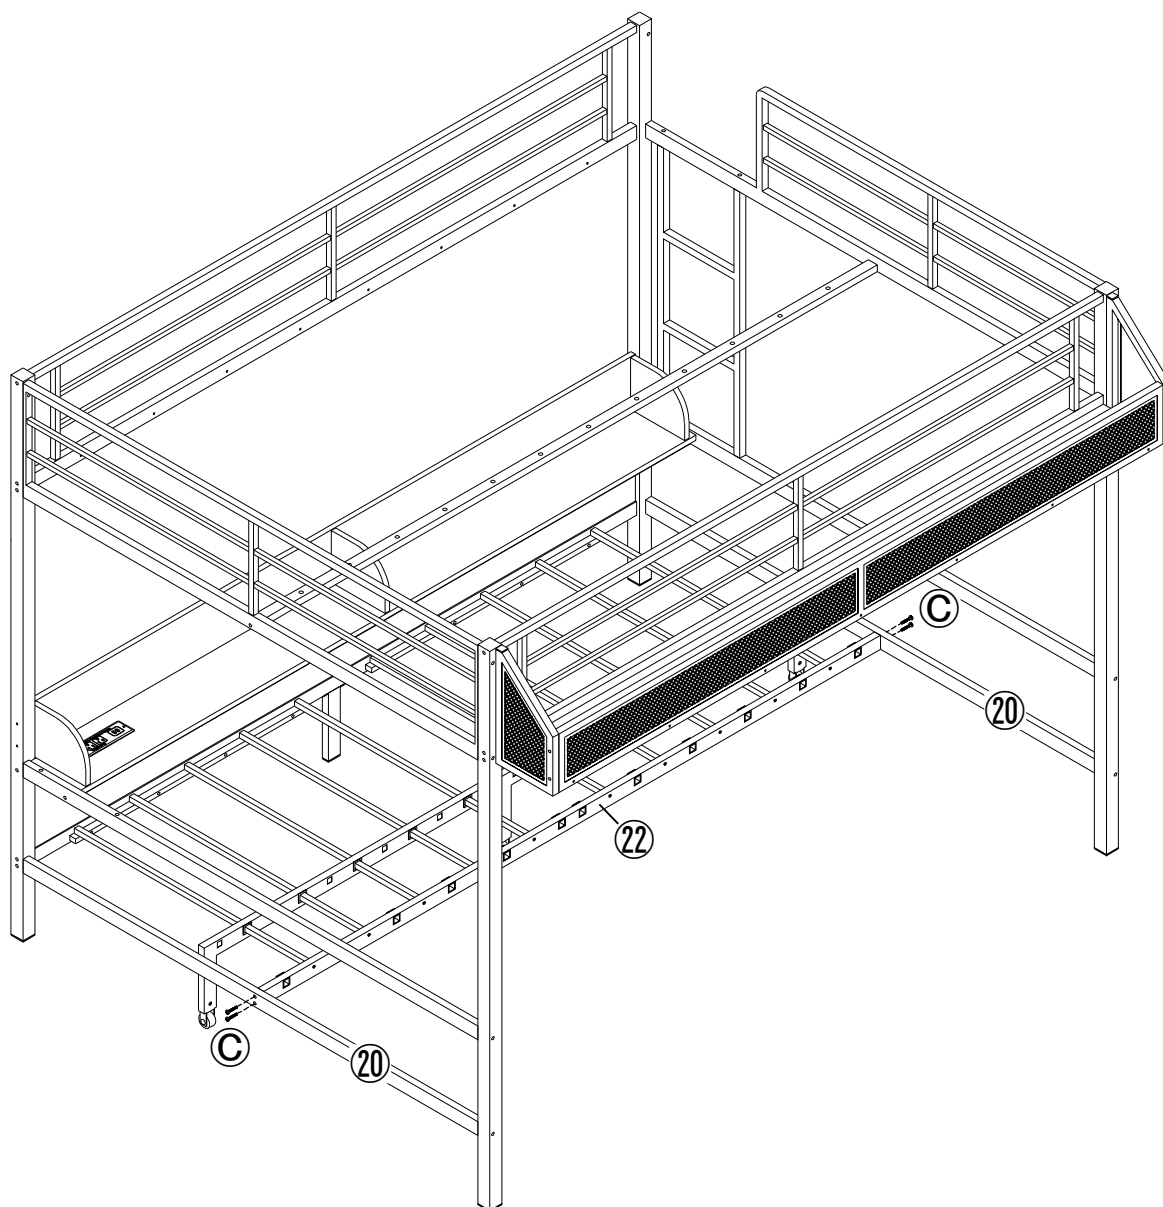


M8*30mm

© - 4pcs



M5mm


© - 1pc



M5

Ratchet wrench

Step 14: Use hardware I and J to connect #23, #28 and #31 together.

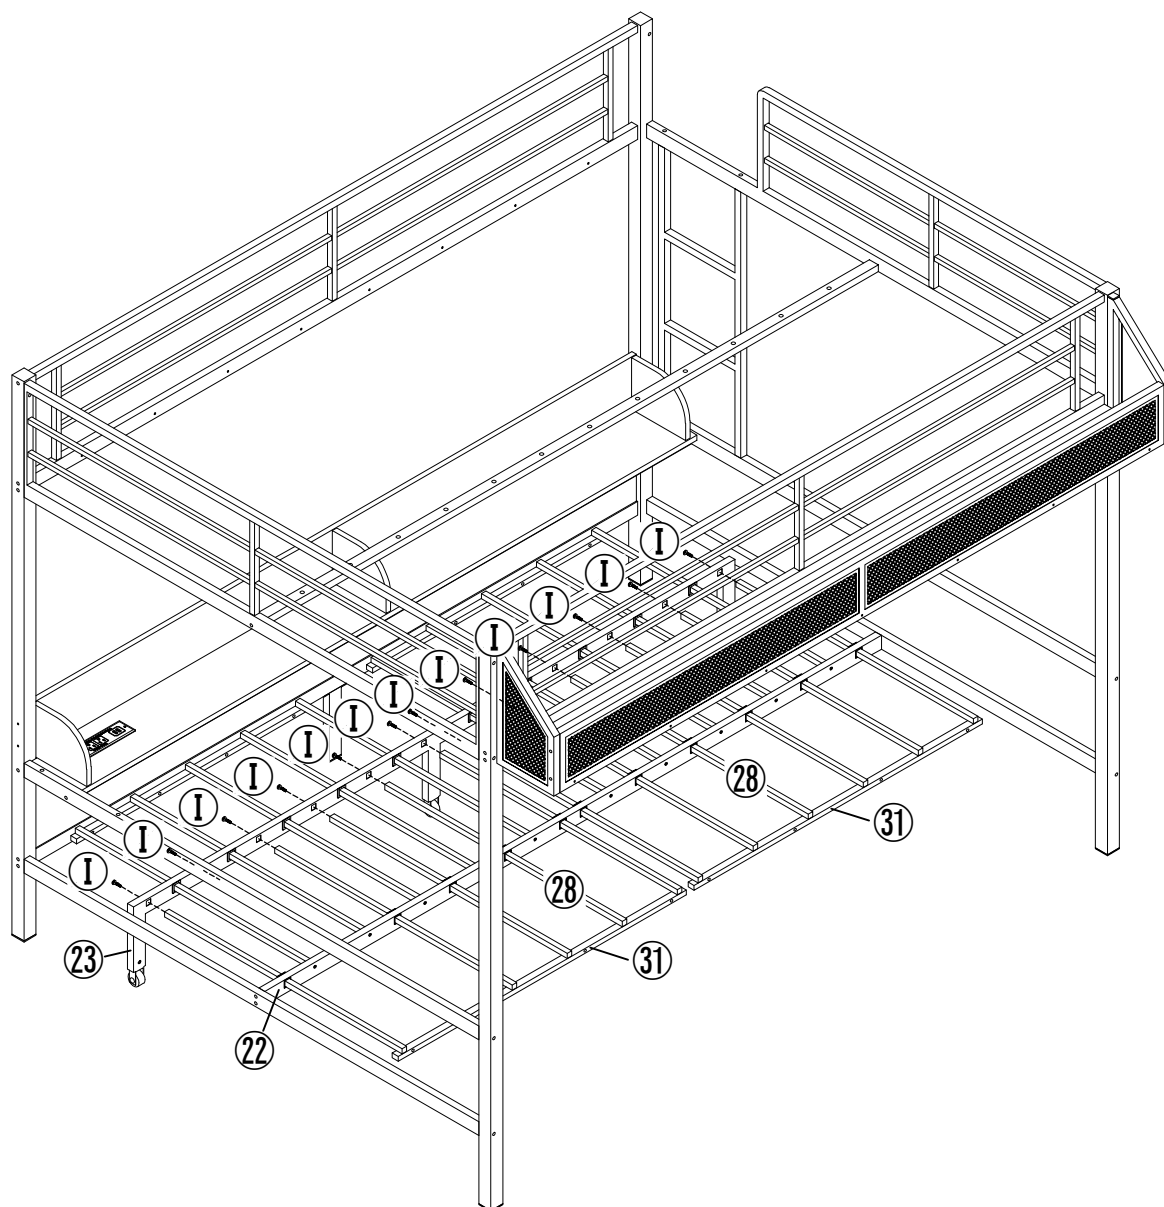


M6*12mm

I - 12pcs



M4mm


J - 1pc



M4


Ratchet wrench

Step 15: Use hardware G and J to connect #21 and bed frame together.

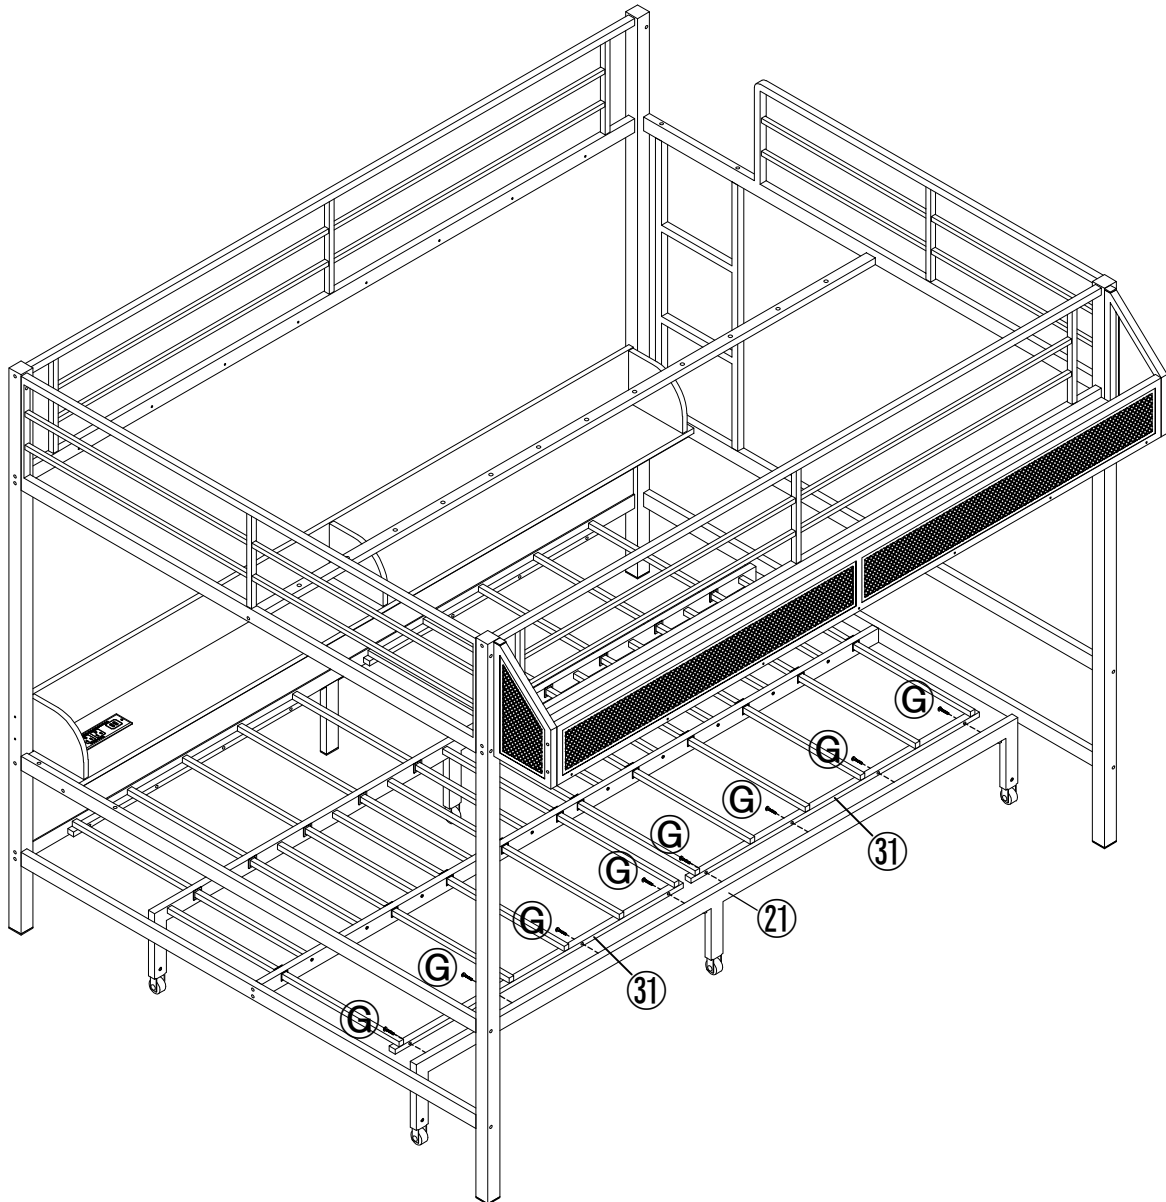


M6*30mm

Ⓔ - 8pcs



M4mm



Ⓙ - 1pc



M4

Ratchet wrench

Step 16: Use hardware C and E to connect #29 to the lower bed frame assembly.

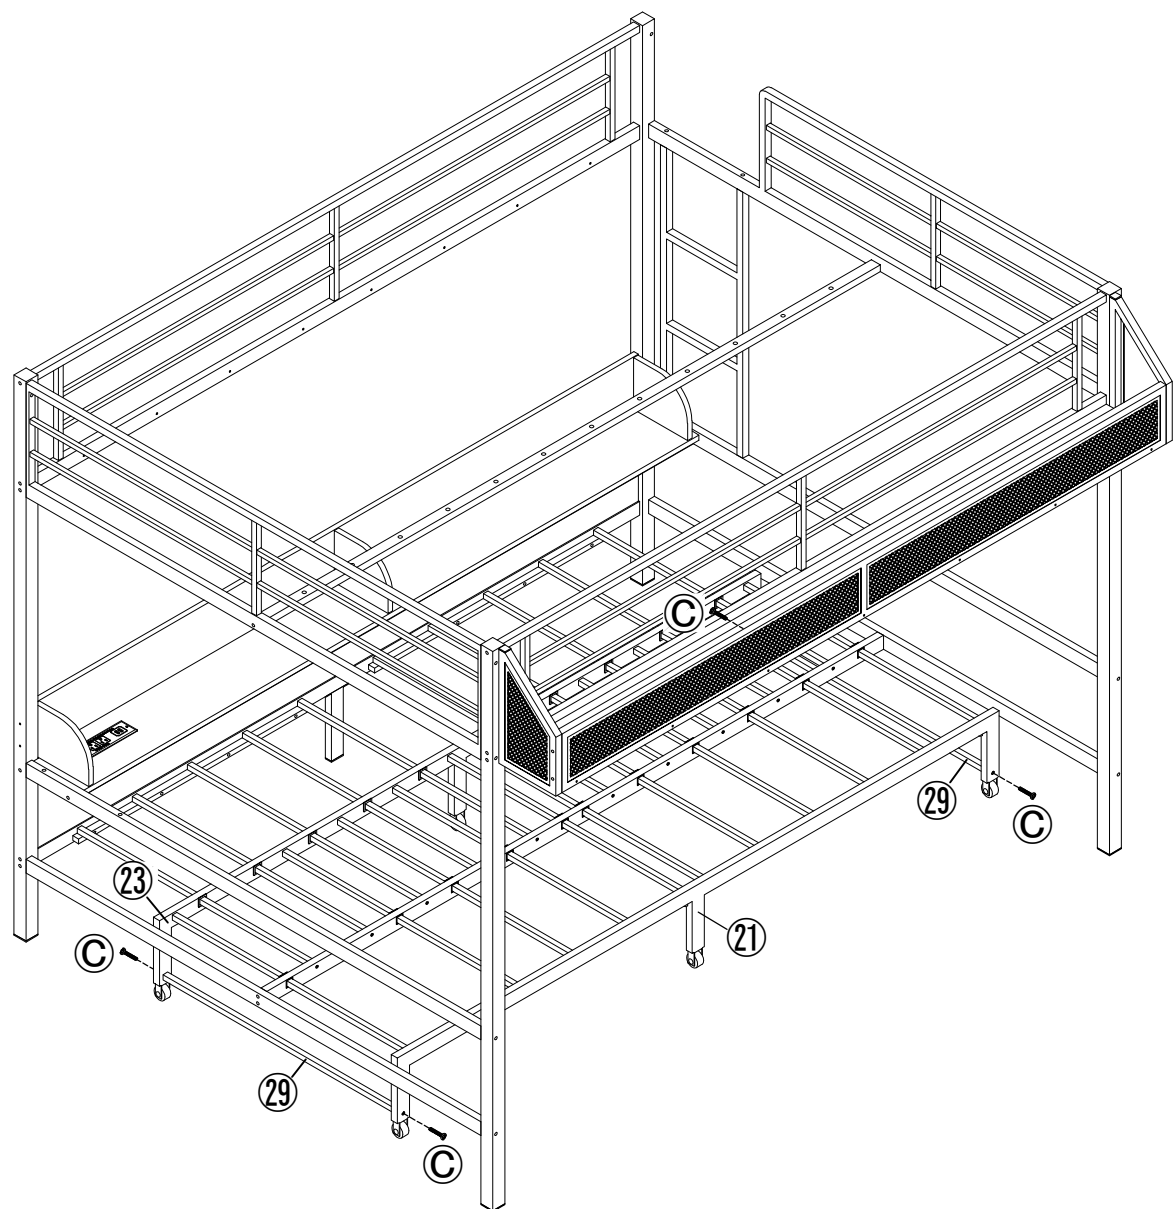

②9 - 2pcs




M8*30mm

Ⓒ - 4pcs



M5mm


Ⓔ - 1pc




M5


Ratchet wrench

Step 17: Use hardware H and J to connect #14 and #30 together.

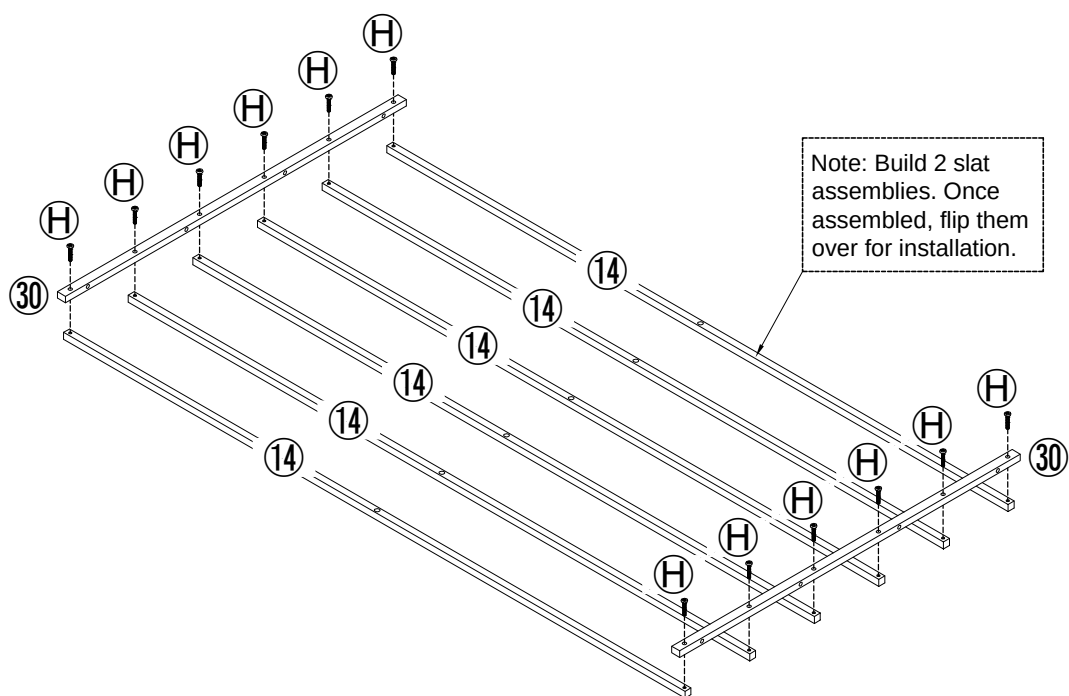

 ⑭ - 12pcs	 ③① - 4pcs	 M6*25mm ④ - 24pcs	 M4mm ① - 1pc	 M4 Ratchet wrench
--	--	---	--	---

Step 18: Use hardware C, D, E, G and J to connect #14, #30 and bed frame together.

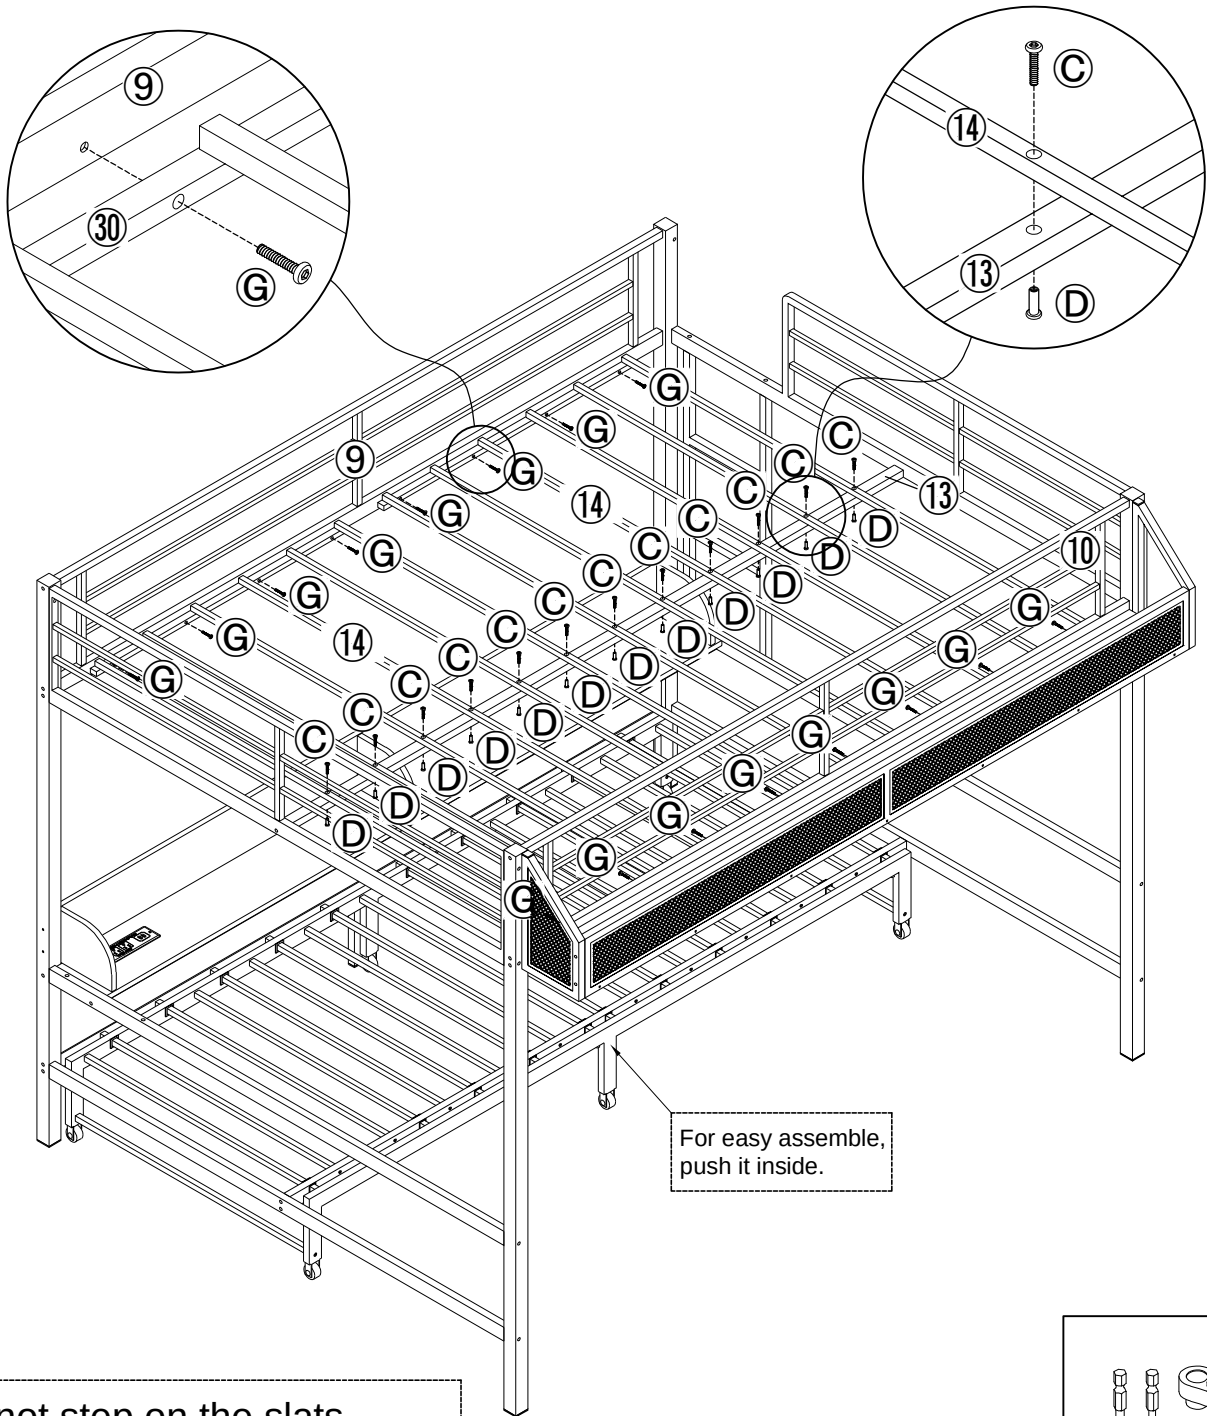

For easy assemble,
push it inside.

Do not step on the slats
without the mattress in place.






M5 M4

Ratchet wrench

 M8*30mm © - 12pcs	 M8*15mm © - 12pcs	 M5mm © - 2pcs	 M6*30mm © - 16pcs	 M4mm © - 1pc
--	--	--	--	---

Step 19: Attach hardware S, V and W as shown.

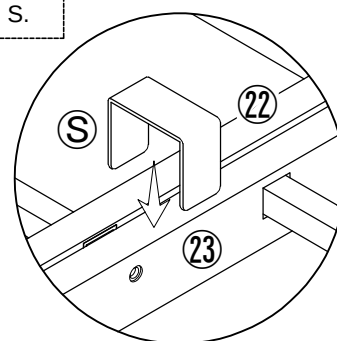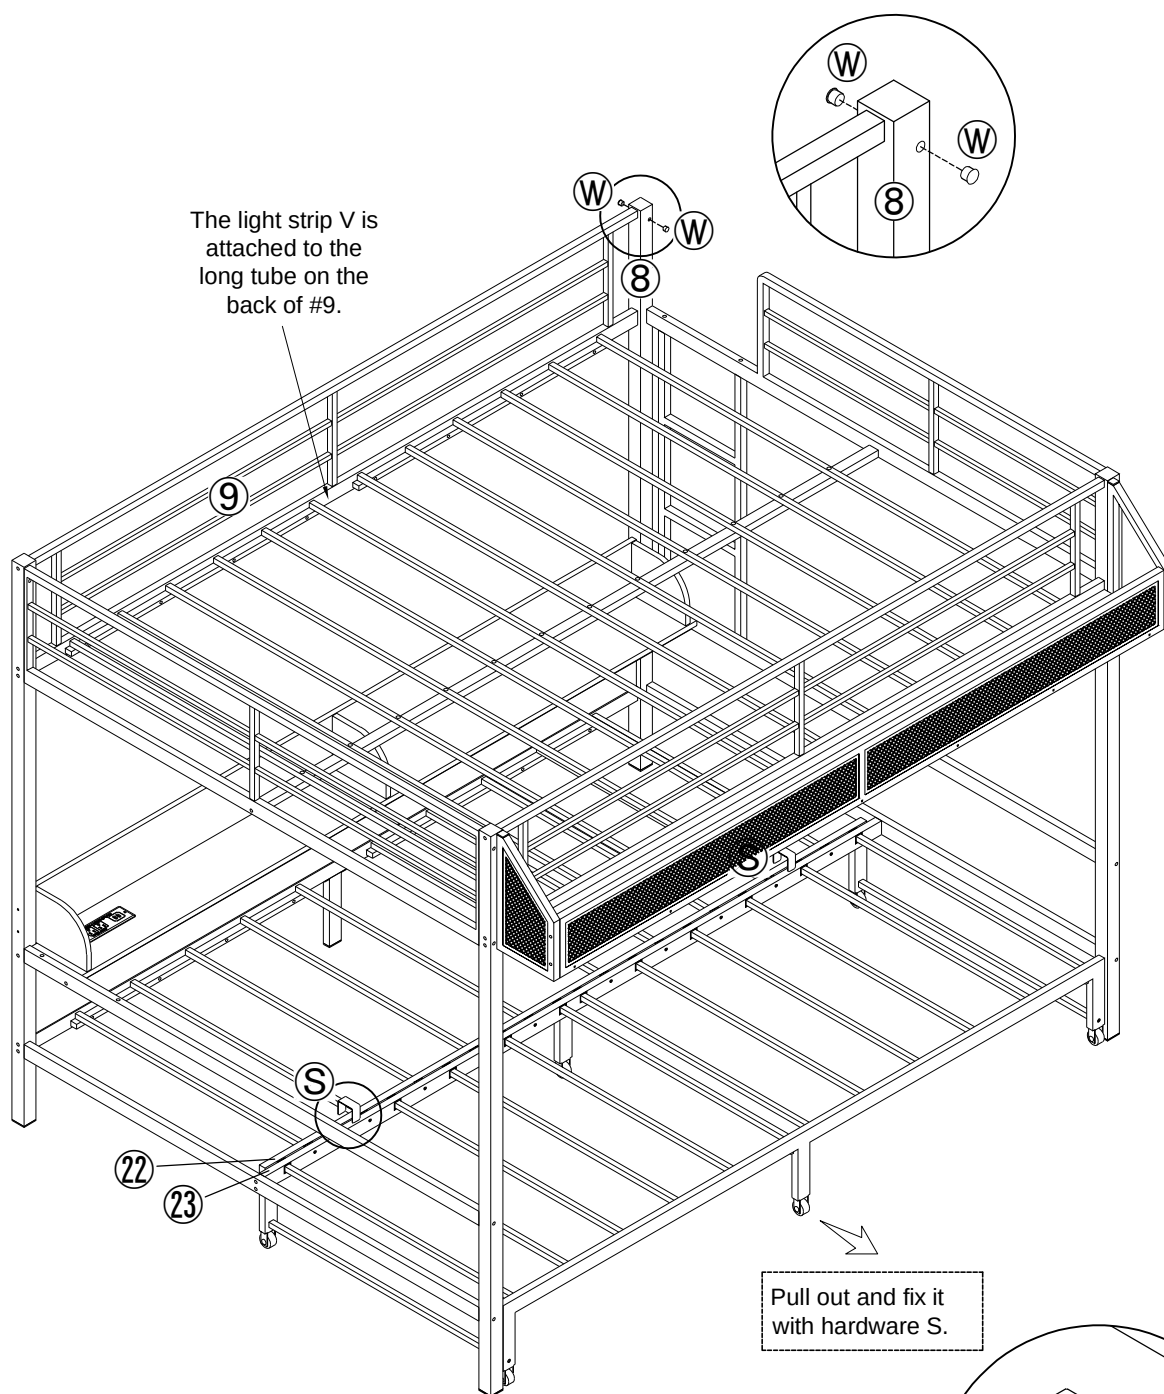

Ⓢ - 2pcs



Light Strip


Ⓥ - 1pc





Ø13mm

Ⓦ - 2pcs






Step 20: Use hardware I, J, P, Q and R to connect #5 and #33 together.




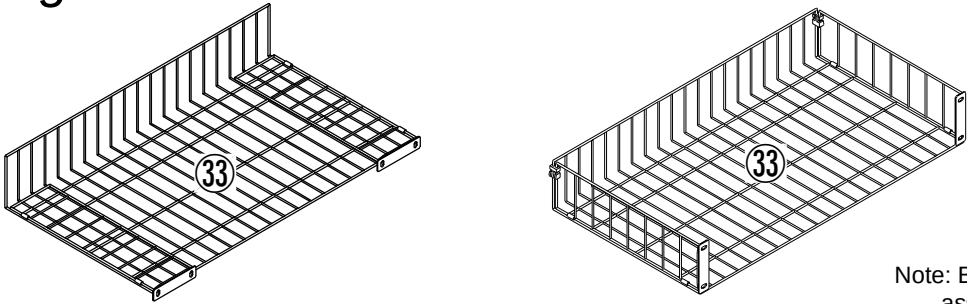


Note: Build 2 drawer assemblies.

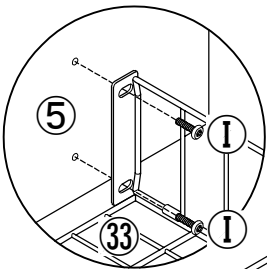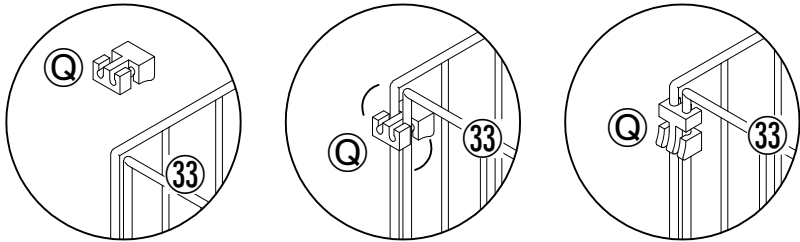


Note: Build 2 drawer assemblies.

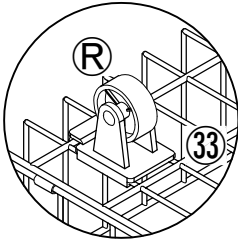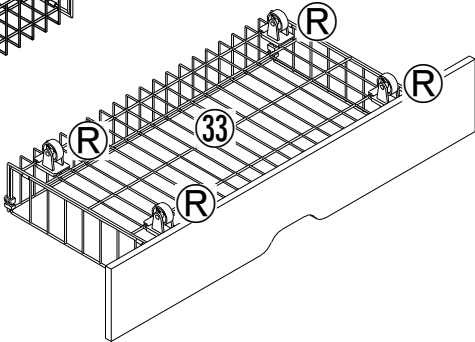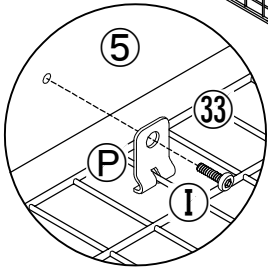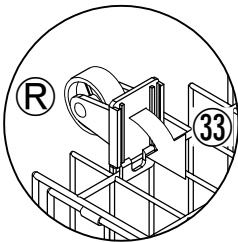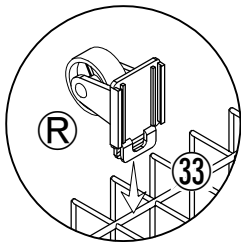

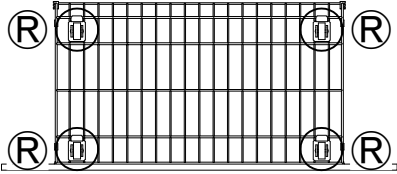 ⑤ - 2pcs	 ③③ - 2pcs	 M4 Ratchet wrench	 Please install the casters at the location as shown.	
 M6*12mm ① - 10pcs	 M4mm ④ - 1pc	 ⑤ - 2pcs	 ⑥ - 4pcs	 ⑦ - 8pcs



Step 21: *Attach drawers as shown.*

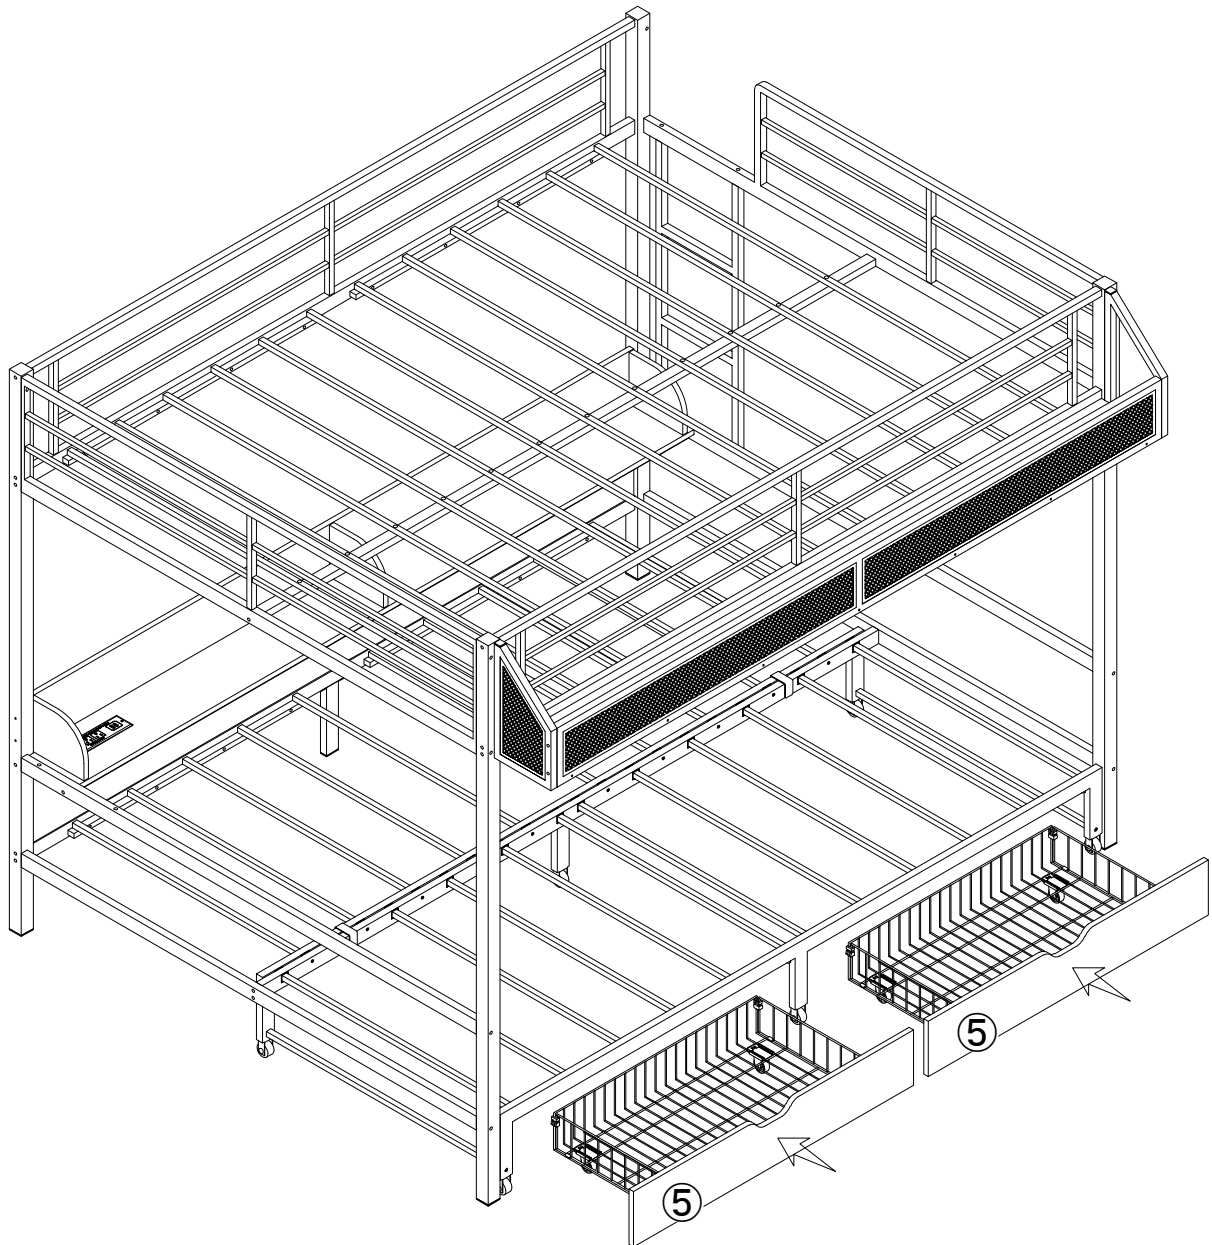


Step 22: Install reinforcement hardware T and U as shown to complete the final stability setup.

Final Check:


- Before use, make sure all bolts and screws are fully tightened.
- Make sure the stair unit is securely attached.
- Make sure all electrical cords are secured away from the stair path.
- Do not step on the slats without the mattress in place.

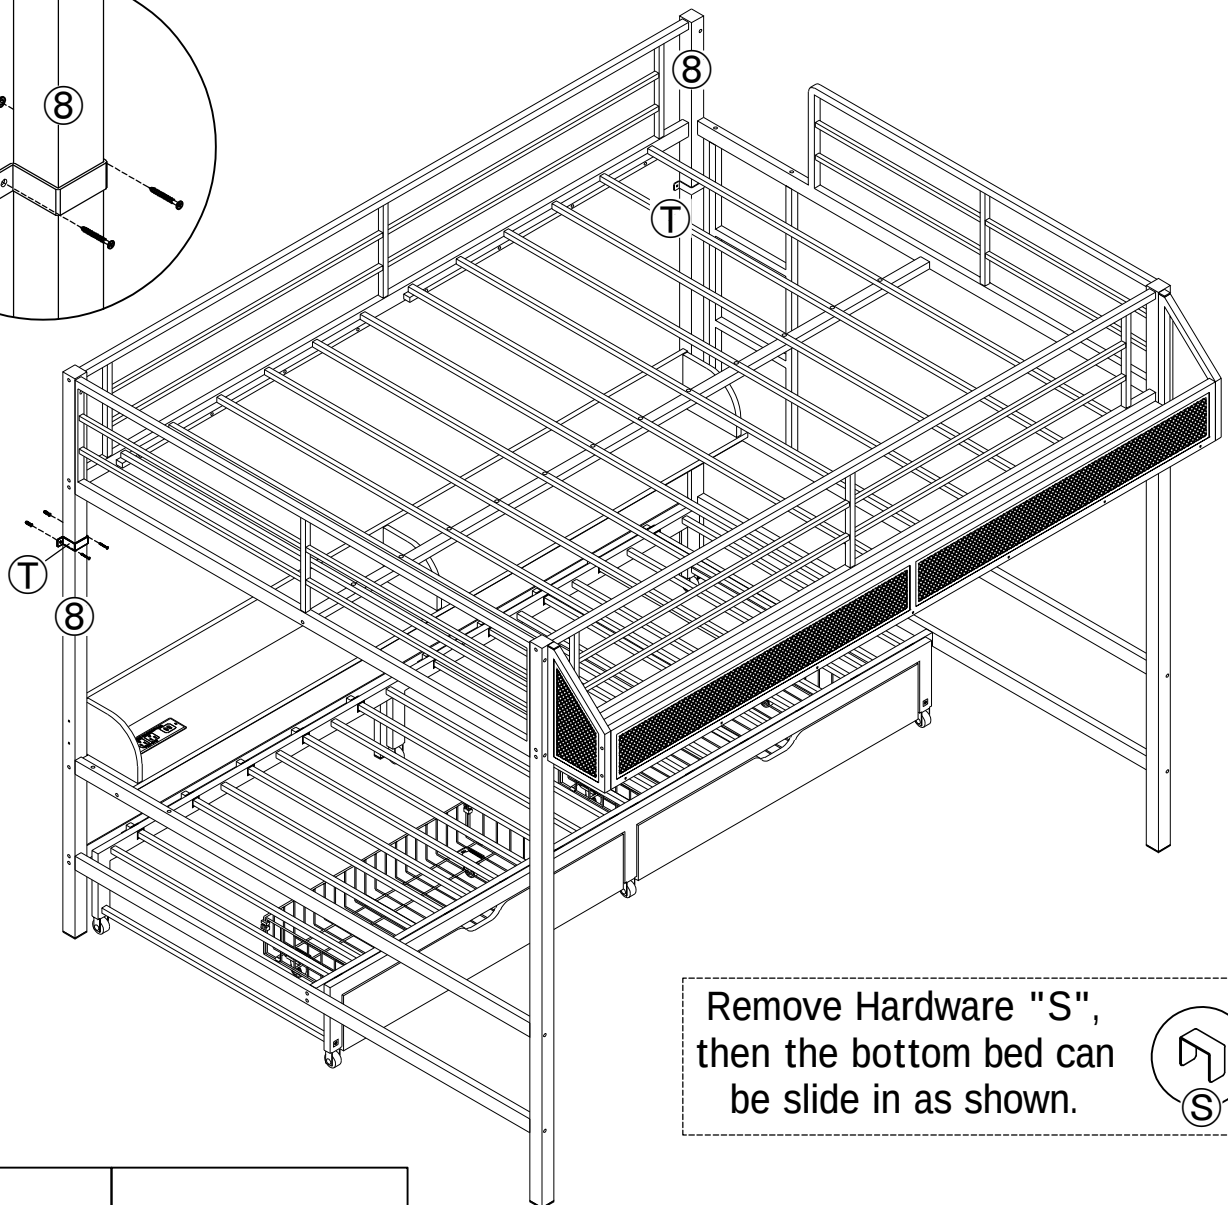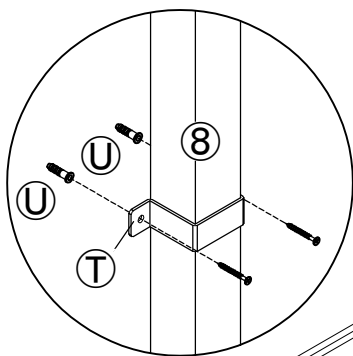

Remove Hardware "S",
then the bottom bed can
be slide in as shown.



T - 2pcs



U - 4sets