
domi
outdoor living

12'×20' Metal Patio Wood Gazebo

ASSEMBLY MANUAL

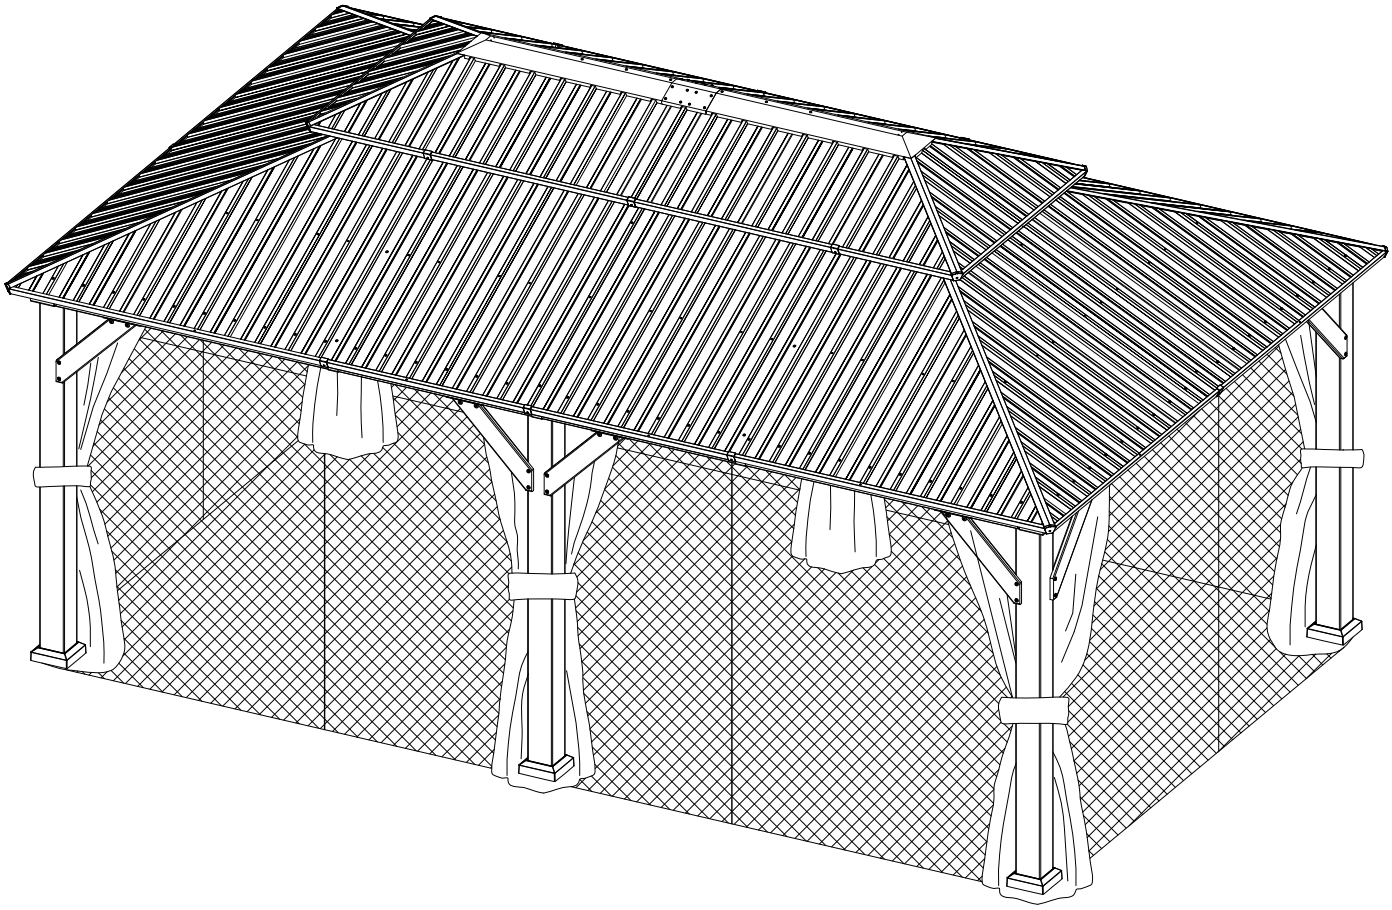

MODEL#:LGMF1599A

Missing part? Damaged? Contact us via email at

service@domioutdoorliving.com

© Copyright 2023–2025 domioutdoorliving LLC. All Rights Reserved.

Pre-assembly



1.Two or more people are required for assembly.



2.You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4.You may need a safety hat.



5.Please use a Phillips screw driver.



6.For ease of construction, you may need a drill.



7.You may need a safety goggle.



8.Do not fully tighten screws prior to complete assembly.

Warning & Attention


-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;


-It would be much easier to assemble the product with three or more people;


-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.


⚠ Use bolts to secure the frame to the ground to against the strong wind.

IMPORTANT: A gaze may entail to purchase a municipal permit or be subject to specific building codes. It is the consumer's responsibility to inform themselves of any restrictions.

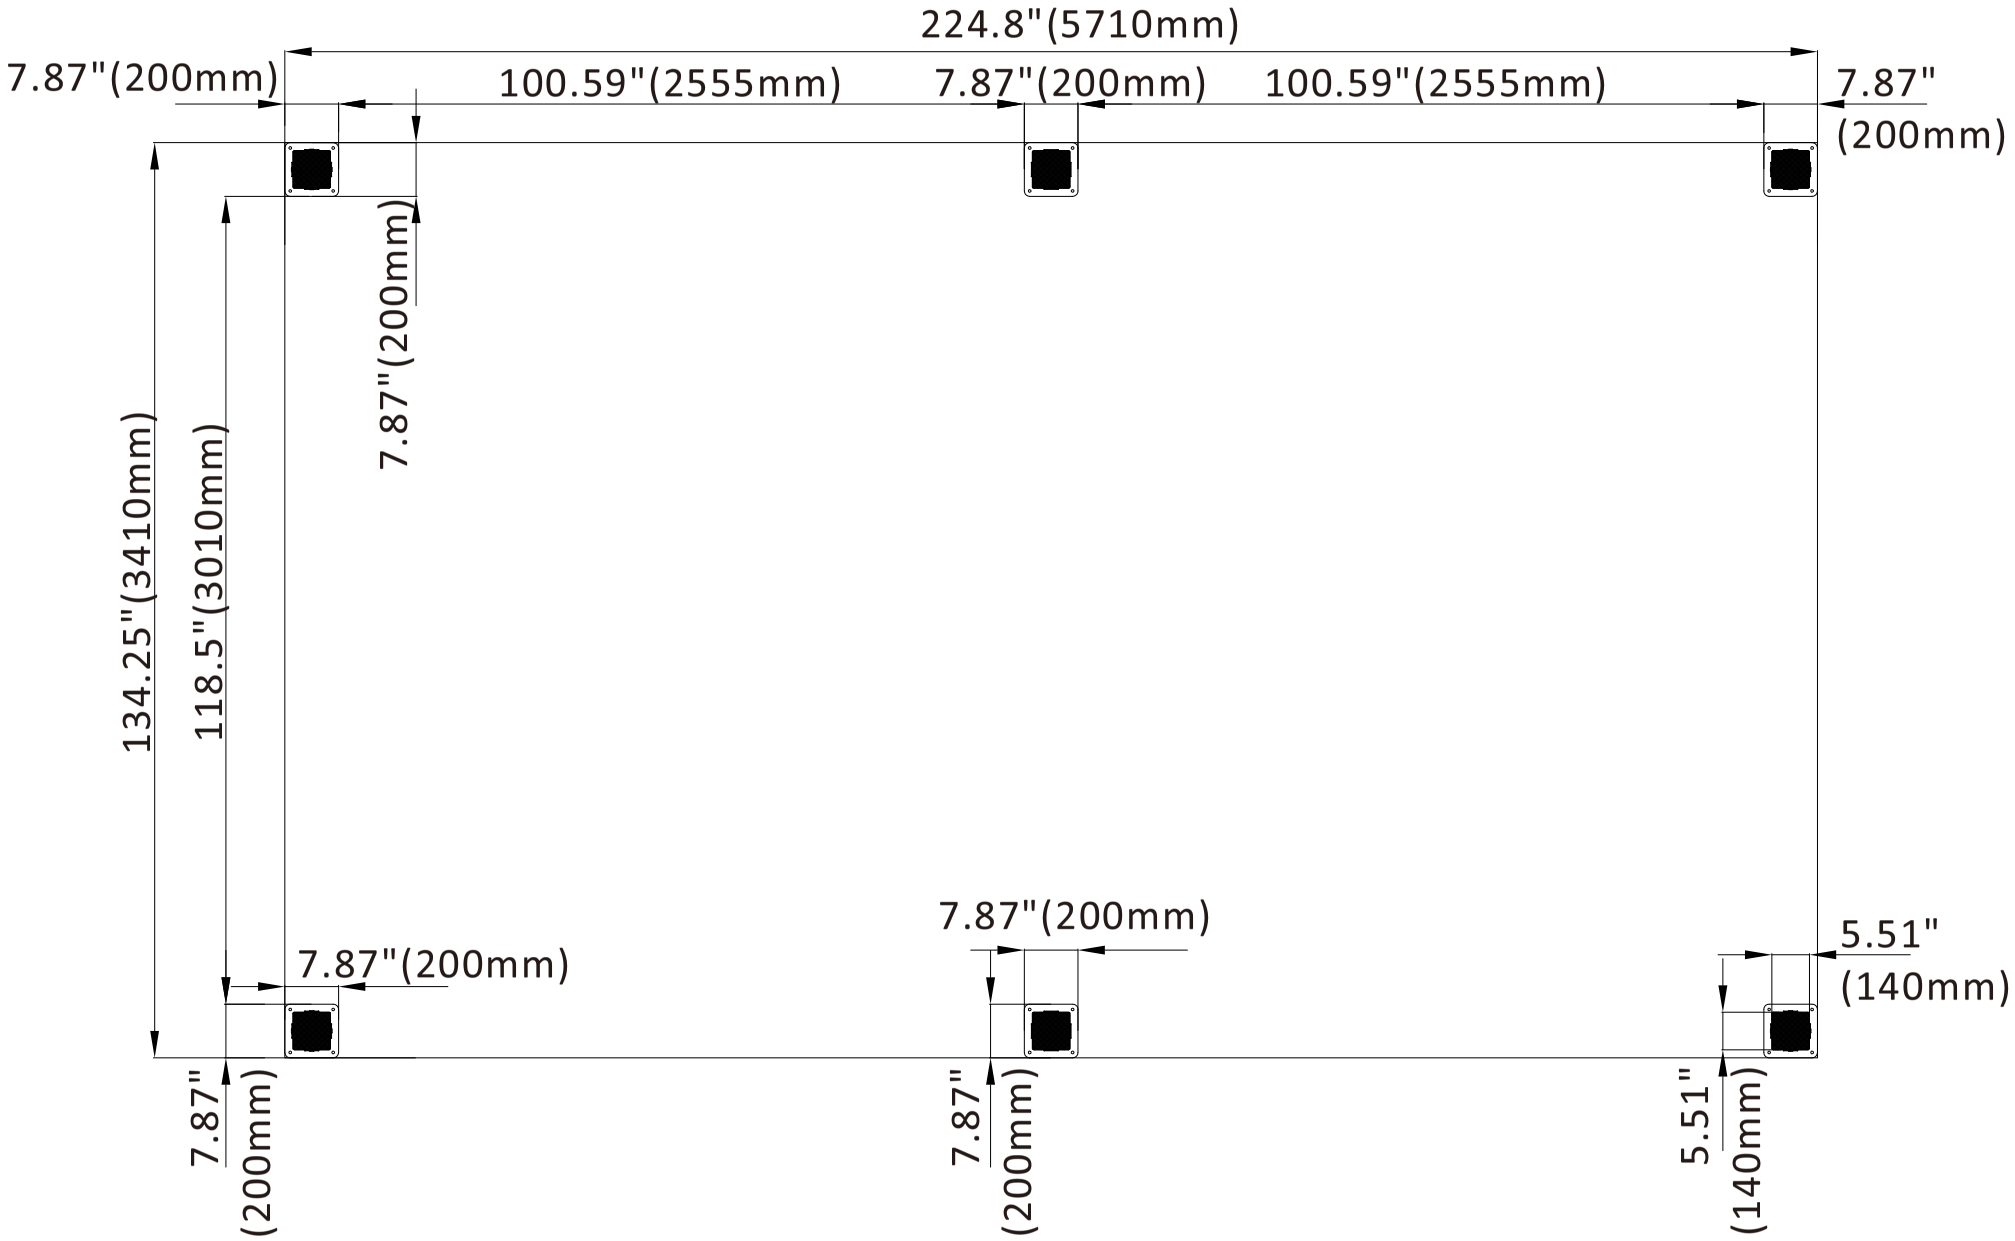

224.8"(5710mm)
7.87"(200mm)
100.59"(2555mm)
7.87"(200mm)
100.59"(2555mm)
7.87"
(200mm)
7.87"(200mm)
134.25"(3410mm)
118.5"(3010mm)
7.87"(200mm)
7.87"(200mm)
5.51"
(140mm)
7.87"
(200mm)
7.87"
(200mm)
5.51"
(140mm)

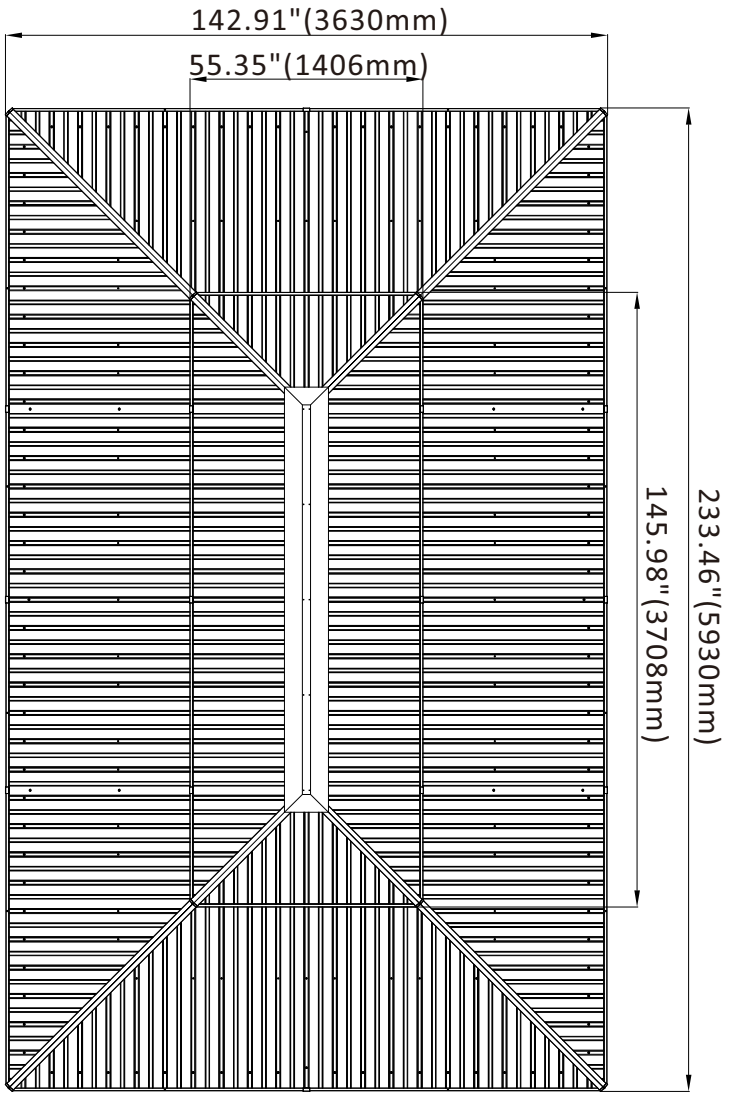

142.91"(3630mm)
55.35"(1406mm)
145.98"(3708mm)
233.46"(5930mm)

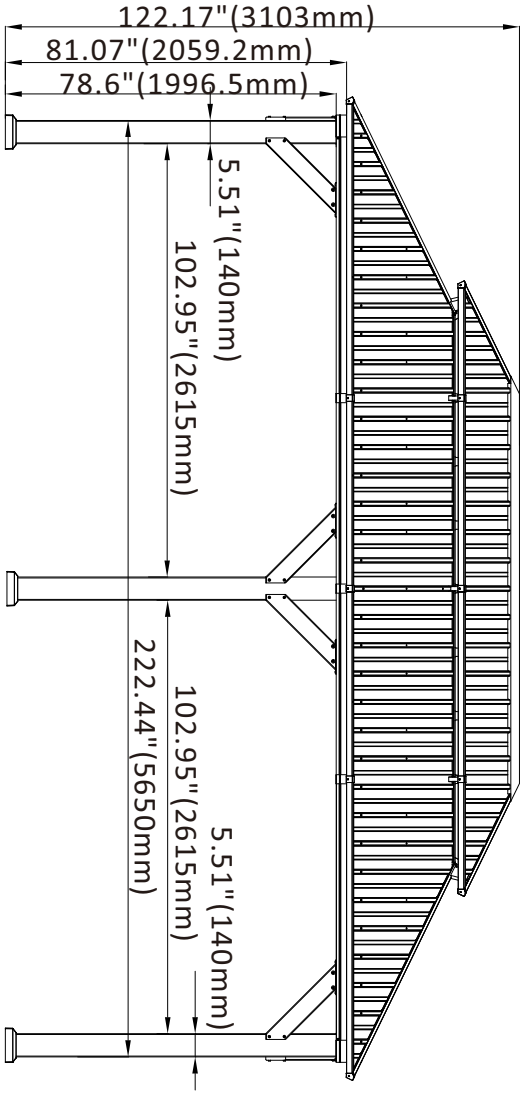
122.17"(3103mm)
81.07"(2059.2mm)
78.6"(1996.5mm)
5.51"(140mm)
102.95"(2615mm)
222.44"(5650mm)
102.95"(2615mm)
5.51"(140mm)

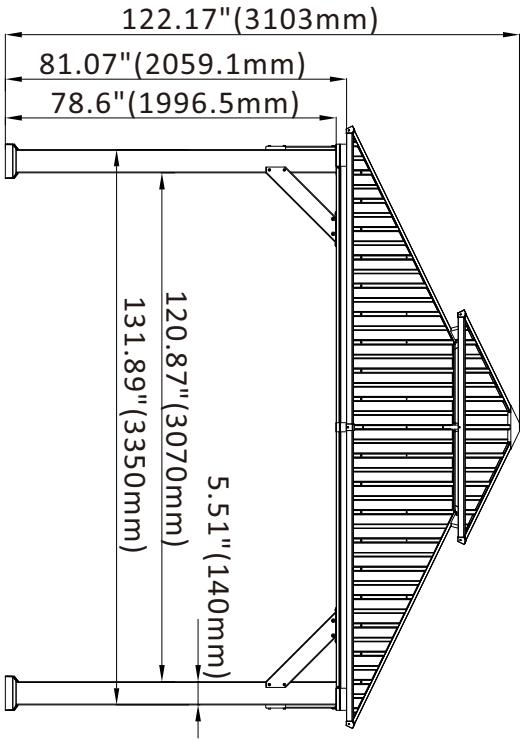
122.17"(3103mm)
81.07"(2059.1mm)
78.6"(1996.5mm)
131.89"(3350mm)
120.87"(3070mm)
5.51"(140mm)


1

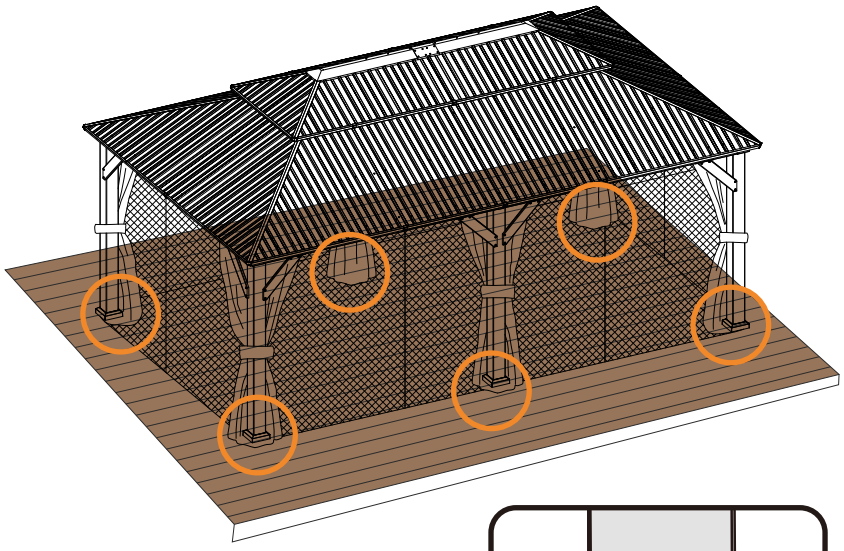





x24


If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in. ×4 in. Structural Wood Screw** to mount the gazebo.

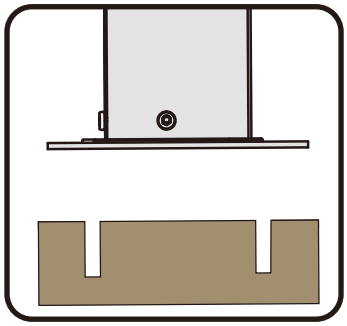

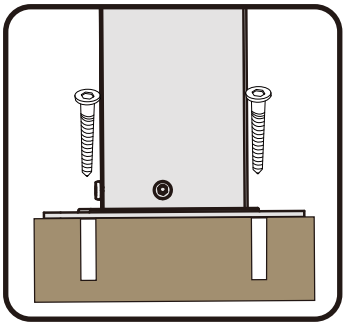

2

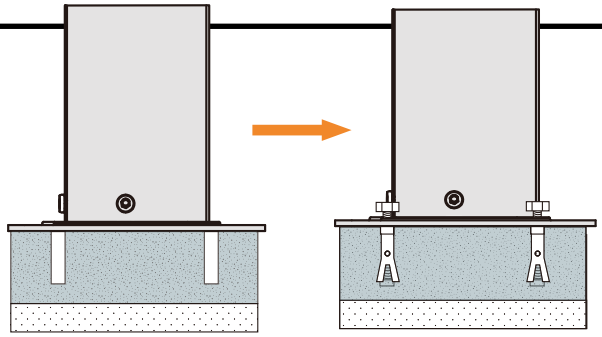


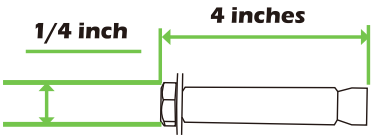

x24

If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the gazebo


3




Or you can make a concrete footing for gazebo, **15×15×15 inches** is recommended,use expansion bolts to mount the gazebo like (2) shows.




IMPORTANT:
Anchor is not recommended

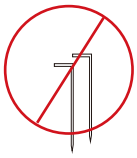





A **4x** Wood Pole



A1 **2x** Wood Pole




C **2x** Beam



C1 **2x** Beam



D **2x** Beam



D1 **2x** Beam




D2 **2x** Beam




E **4x** Corner Roof Bar



E1 4xCorner Roof Bar Connector



E2 **8x** Roof Bar



F **4x** Solidfying Bar




G **4x** Solidfying Bar




G1 **4x** Solidfying Bar

H **2x** Finishing Bar



H1 **2x** Finishing Bar

H2 **2x** Finishing Bar




H3 4x Finishing Bar




J 2x Finishing Bar



J1 2x Finishing Bar



J2 2x Finishing Bar



J3 4x Finishing Bar

K 2x Finishing Bar


K1 2x Finishing Bar

K2 2x Finishing Bar


K3 2x Finishing Bar

K4 2x Finishing Bar


K5 2x Finishing Bar



L1 2x Roof Panel

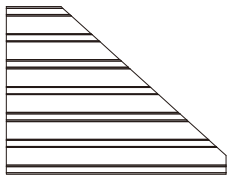


L2 2x Roof Panel

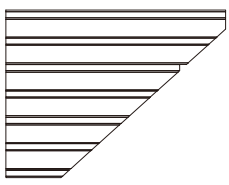


L3 2x Roof Panel




L4 2x Roof Panel

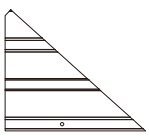

M1 2x Roof Panel

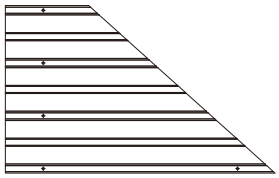

M2 2x Roof Panel

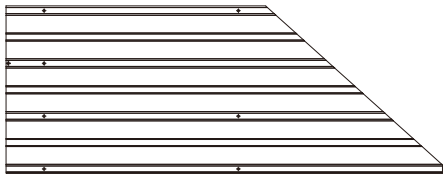


M3 2x Roof Panel




M4 2x Roof Panel




M5 2x Roof Panel

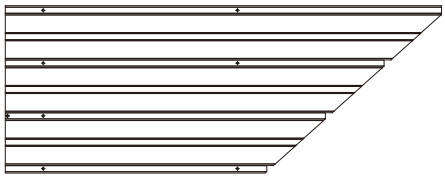


M6 2x Roof Panel

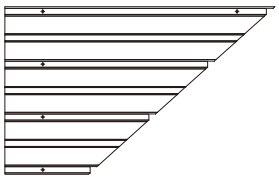


M7 2x Roof Panel



M8 2x Roof Panel




N1 2x Roof Panel

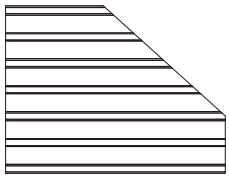


N2 2x Roof Panel




N3 8x Roof Panel

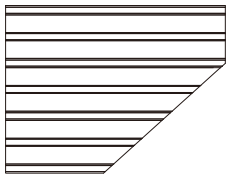


N4 2x Roof Panel




N5 2x Roof Panel

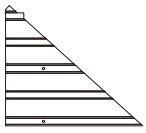

P1 2x Roof Panel

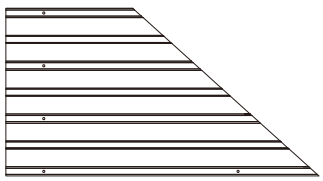

P2 2x Roof Panel

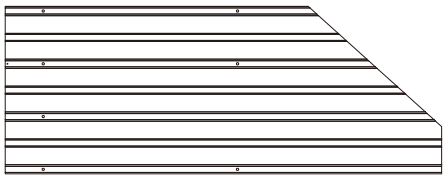


P3 2x Roof Panel




P4 2x Roof Panel



P5 2x Roof Panel

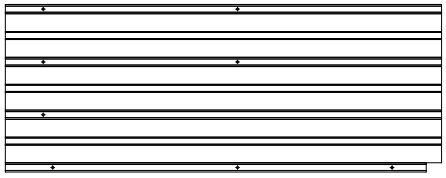

P6 2x Roof Panel

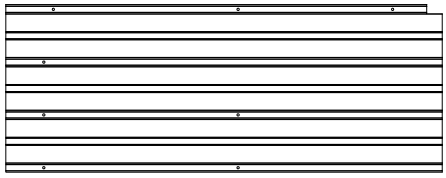

P7 2x Roof Panel




P8 2x Roof Panel




P9 2x Roof Panel




P10 2x Roof Panel

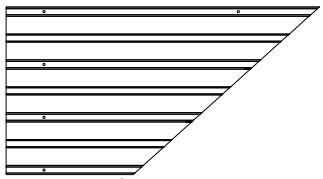


P11 2x Roof Panel

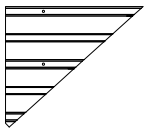


P12 2x Roof Panel



Q 2x Plastic Bar



Q1 4x Plastic Bar



Q2 4x Plastic Bar



T 4x Track




T1 4x Track




T2 2x Track




T3 2x Track

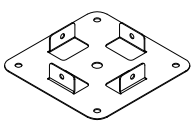


B 6x Base

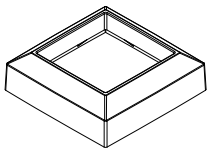


B1 6x Base Cover




B2 6x Bracket




B3 6x Bracket

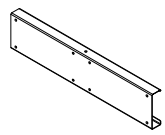


C2 6x Union Bar

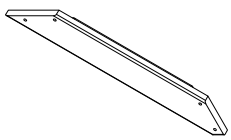


R 6x Corner Solidifying Bar

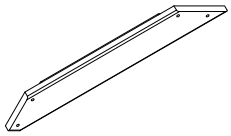

R1 6x Corner Solidifying Bar



S1 2x Inside Roof Cover

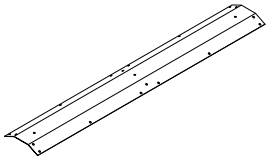


S2 1x Inside Roof Cover




Inside Roof CoverConnector

S3 2x

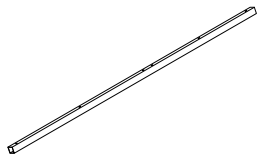

S4 4x Solidifying Bar

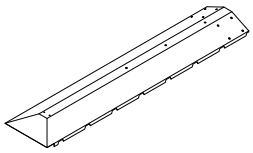


S5 2x Outside Roof Cover



Outside Roof CoverConnector


S6 1x

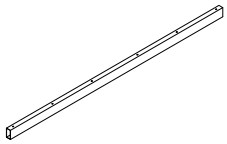


S7 1x Solidifying Bar



S8 5x J-Hook




U 4x Bracket




U1 6x Bracket



U2 4x Bracket




U3 8x Joint Cover



U4 2x Bracket



V 152x Hook




Rubber Spacer

W 160x



X 6x Joint Cover




X1 4x Corner Cover




X2 14x Finishing End




X3 12x Finishing End




Y 4x Solid Sidewall

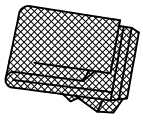


Y1 4x Mosquito Sidewall




Y2 2x Mosquito Sidewal



Y3 2x Solid Sidewall

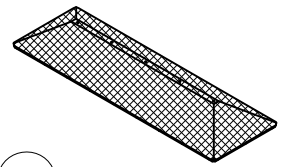

Y4 1x Small Mesh



Z 76x Plastic Clips



Z1 4x Plastic Clips




Z2 4x Plastic Clips



Z3 2x Plastic Clips



Z4 2x Plastic Clips

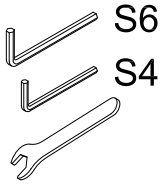

1 1x Wrench




ST6.3x15

2 36x



ST5x16

3 28x



ST5x30

4 24x



M6

5 216x



M6x38

6 24x



M6x10

7 46x



M6x16

8 232x




M6x25

9 8x




M6x28

10 100x



M6x45

11 4x




M6x50

12 48x



ST6.3X35

13 48x



ST8X30

14 16x




D6.6*2

15 24x


M3x65

16 1x Drill



M8X160

17 20x




M8

18 20x




Plastic Cap

19 4x

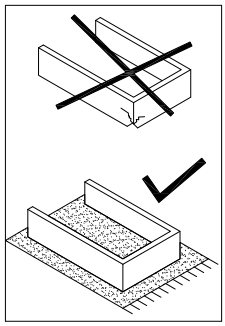




A 4x



B 4x



B1 4x




ST6. 3X35


13 16x

M3x65


16 1x

X4

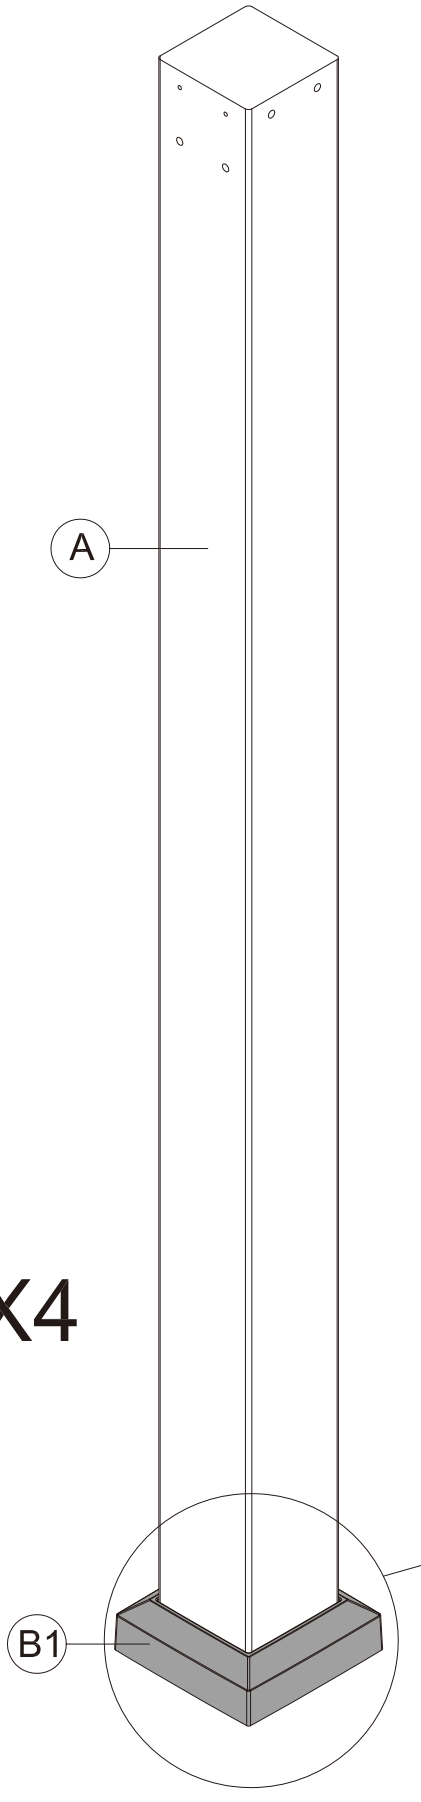


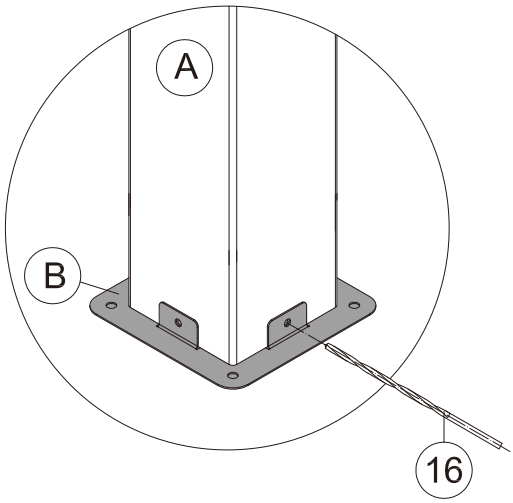

(1) Put Part #B on the bottom of Part #A, after adjusting the position, use Drill #16 to drill holes at the holes in Part #B.

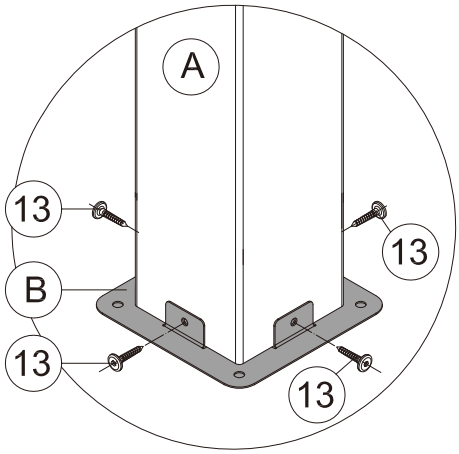

(2) Secure Part #B and Part #A with 4 Bolts #13.

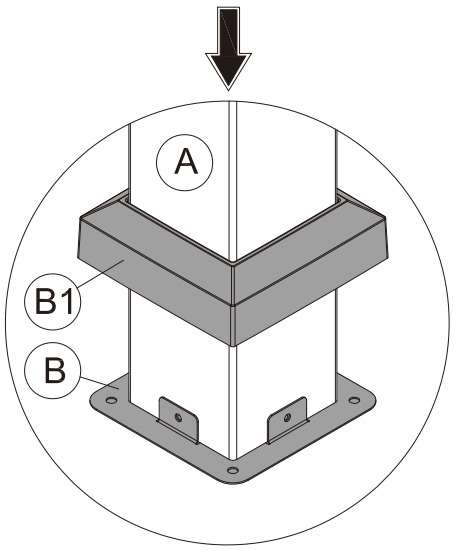


(3) Cover Part #B1 on Part #B.


(4) Repeat the above procedures to assemble the other 3 Part #A.



A1 2x



B 2x



B1 2x




ST6.3X35


13 8x

M3x65


16 1x

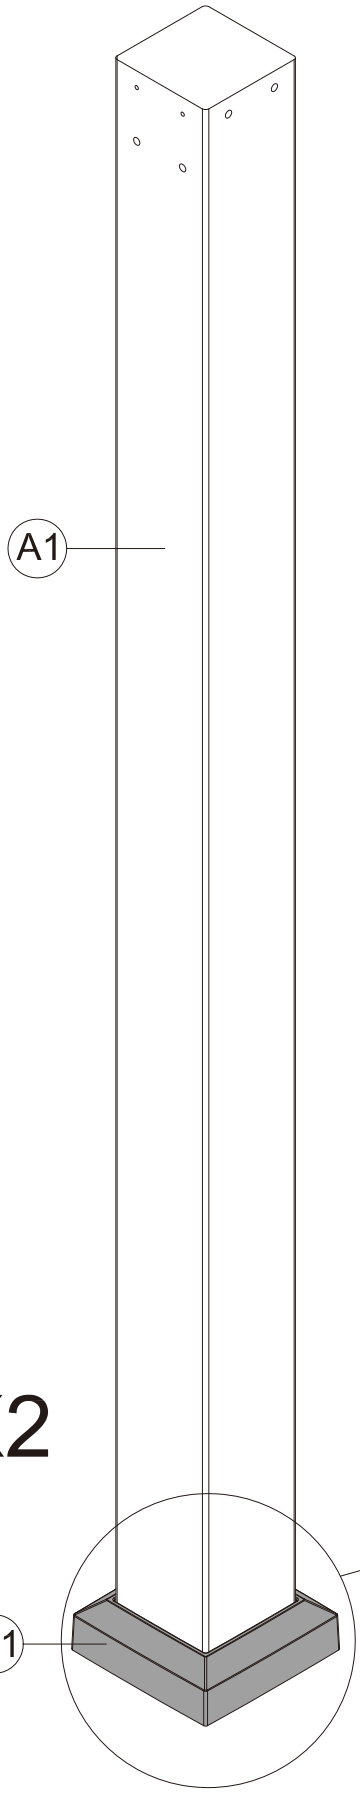


X2

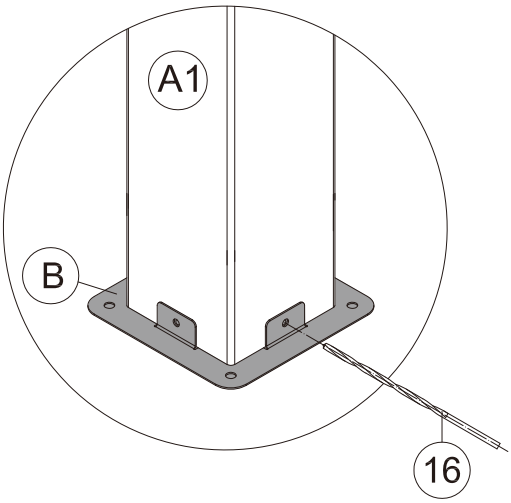

(1) Put Part #B on the bottom of Part #A1, after adjusting the position, use Drill #16 to drill holes at the holes in Part #B.

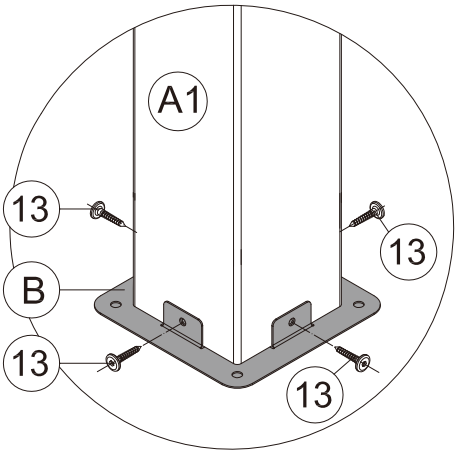


(2) Secure Part #B and Part #A1 with 4 Bolts #13.

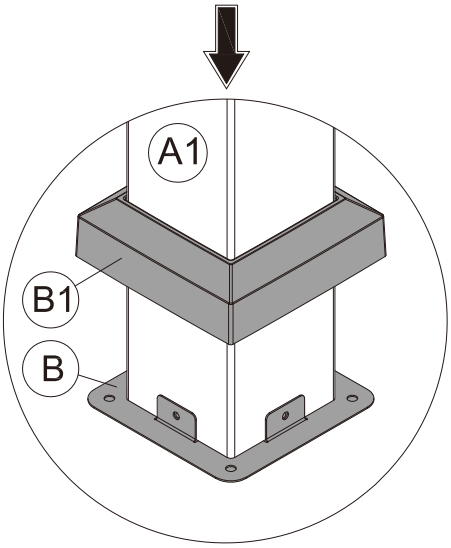


(3) Cover Part #B1 on Part #B.


(4) Repeat the above procedures to assemble the other Part #A1.

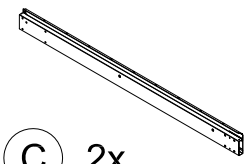

C 2x

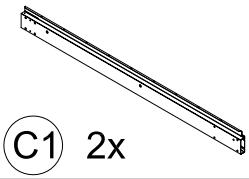

C1 2x



C2 2x



X 2x



S4


1 1x




M6x16

8 20x


9

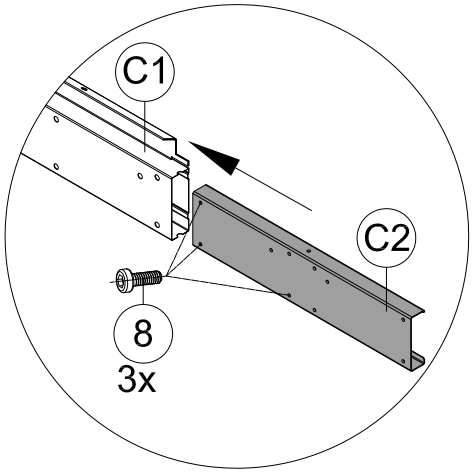


(1) Insert Part #C2 into Part #C1 and secure with 3 Bolts #8.

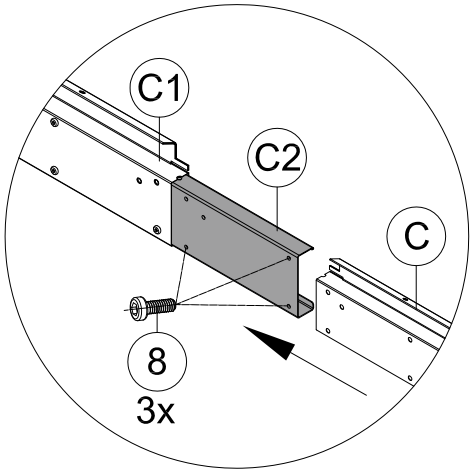

(2) Insert the other side of Part #C2 into Part #C and secure with 3 Bolts #8.

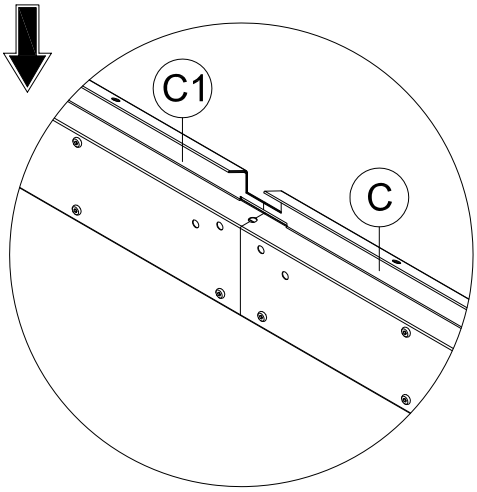


(3) Connect Part #C1 and Part #C through Part #C2.

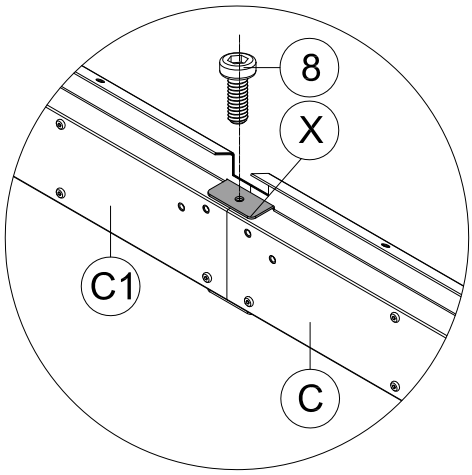


(4) Insert Part #X into the beam and secure with 1 Bolt #8.


(5) Secure the bottom of Part #X and Part #C/C1 with 3 Bolts #8.

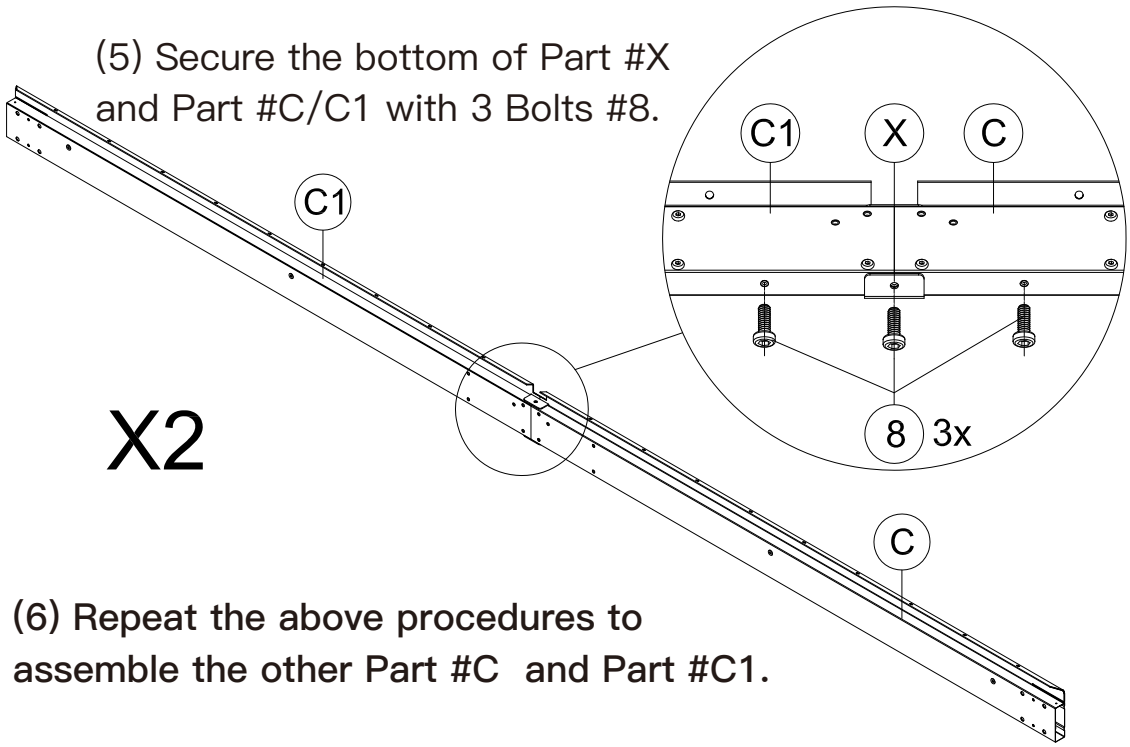

(6) Repeat the above procedures to assemble the other Part #C and Part #C1.




C2 4x

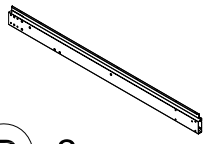

D 2x



D1 2x

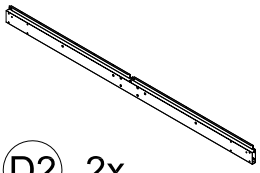

D2 2x



X 4x



S4


1 1x




M6x16

8 40x


10

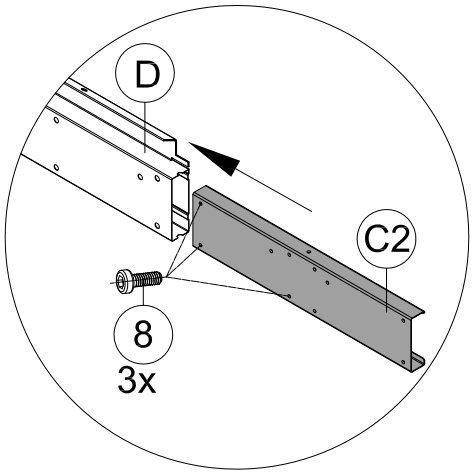


(1) Insert Part #C2 into Part # D.
and secure with 3 Bolts #8.

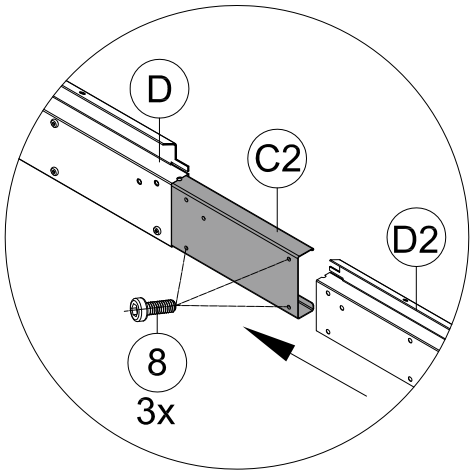


(2) Insert the other side of
Part #C2 into Part #D2
and secure with 3 Bolts #8.

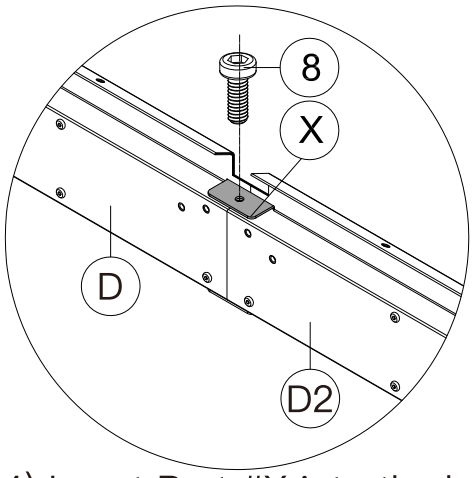

(4) Insert Part #X into the beam
and secure with 1 Bolt #8.

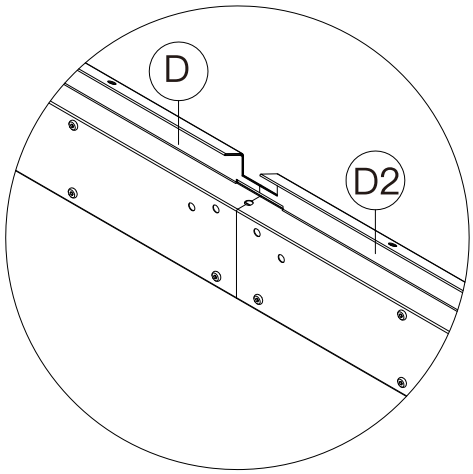

(3) Connect Part #D2 and
Part #D through Part #C2.

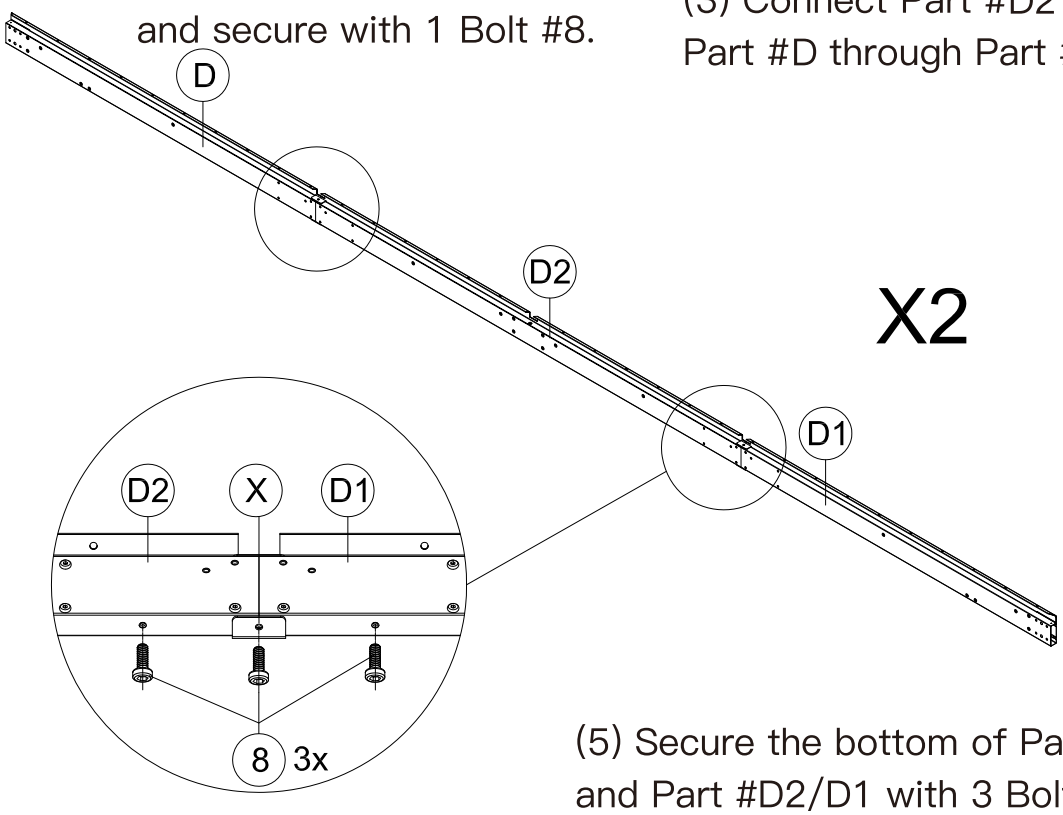

(5) Secure the bottom of Part #X
and Part #D2/D1 with 3 Bolts #8.

(6) Repeat the above procedures to assemble the another beam.



T 4x




T1 4x




V 112x

TRACK ASSEMBLY:


(1) Slide the plastic hooks to the double-rail track #T & T1 (each slot should slide 7 plastic hooks).

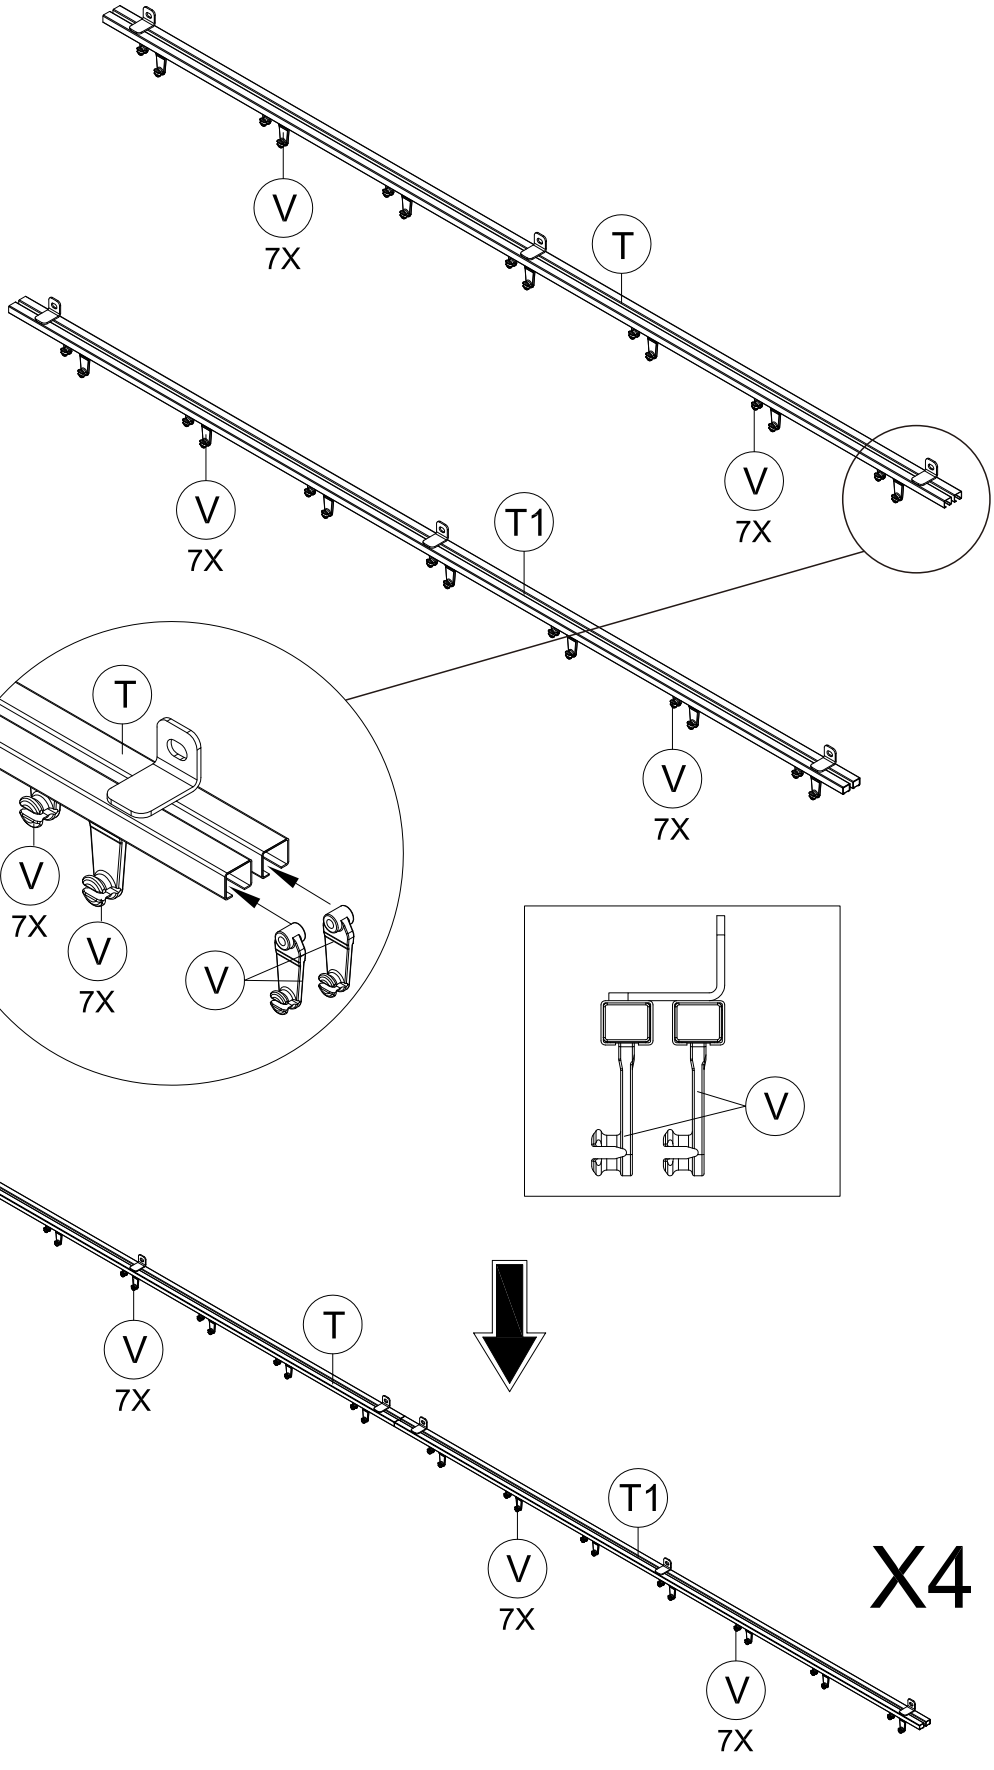

(2) Repeat the above procedures for the other 3 track #T & T1.

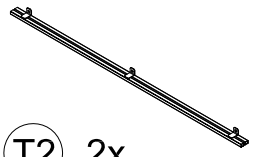

T2 2x

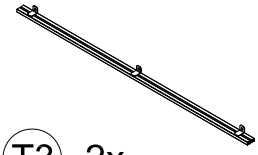


T3 2x



V 40x

(1) Slide the plastic hooks to the double-rail track #T2 & T3.
(each slot should slide 5 plastic hooks).

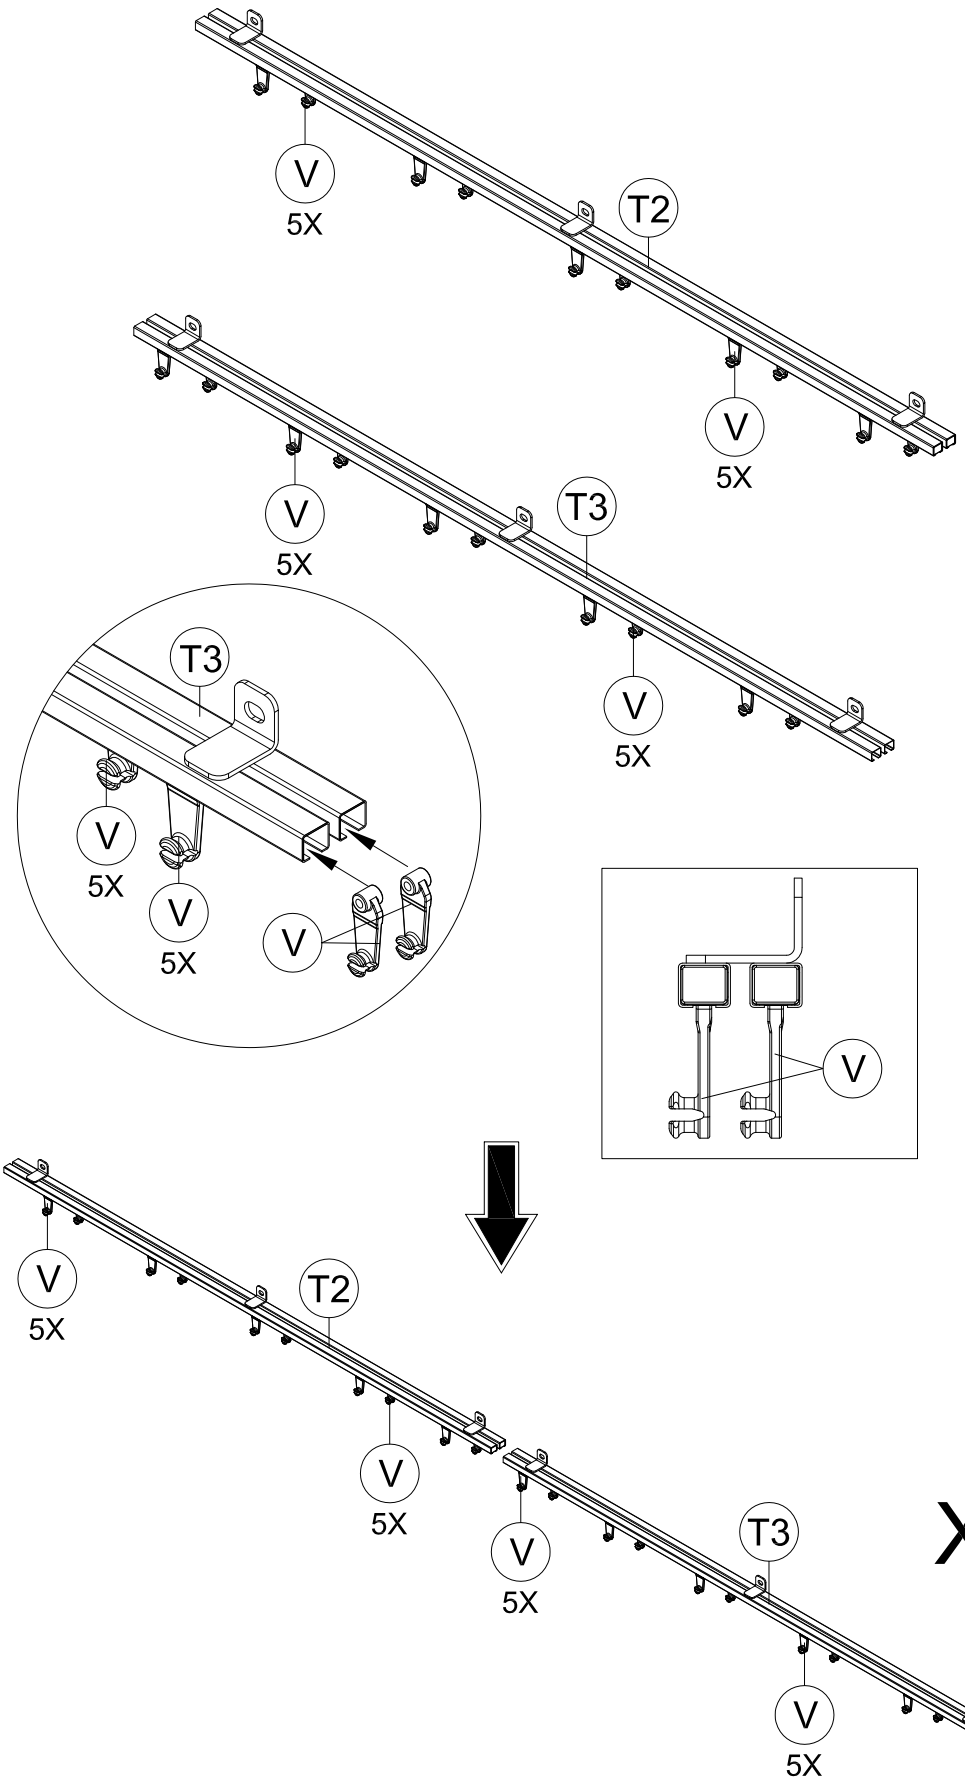

(2) Repeat the above procedures for the other track #T2 & T3.


S4

1 1x

M6x16

8 12x

(1) Use 6 Bolts #8 to fix the track T & T1 to the beam C & C1.

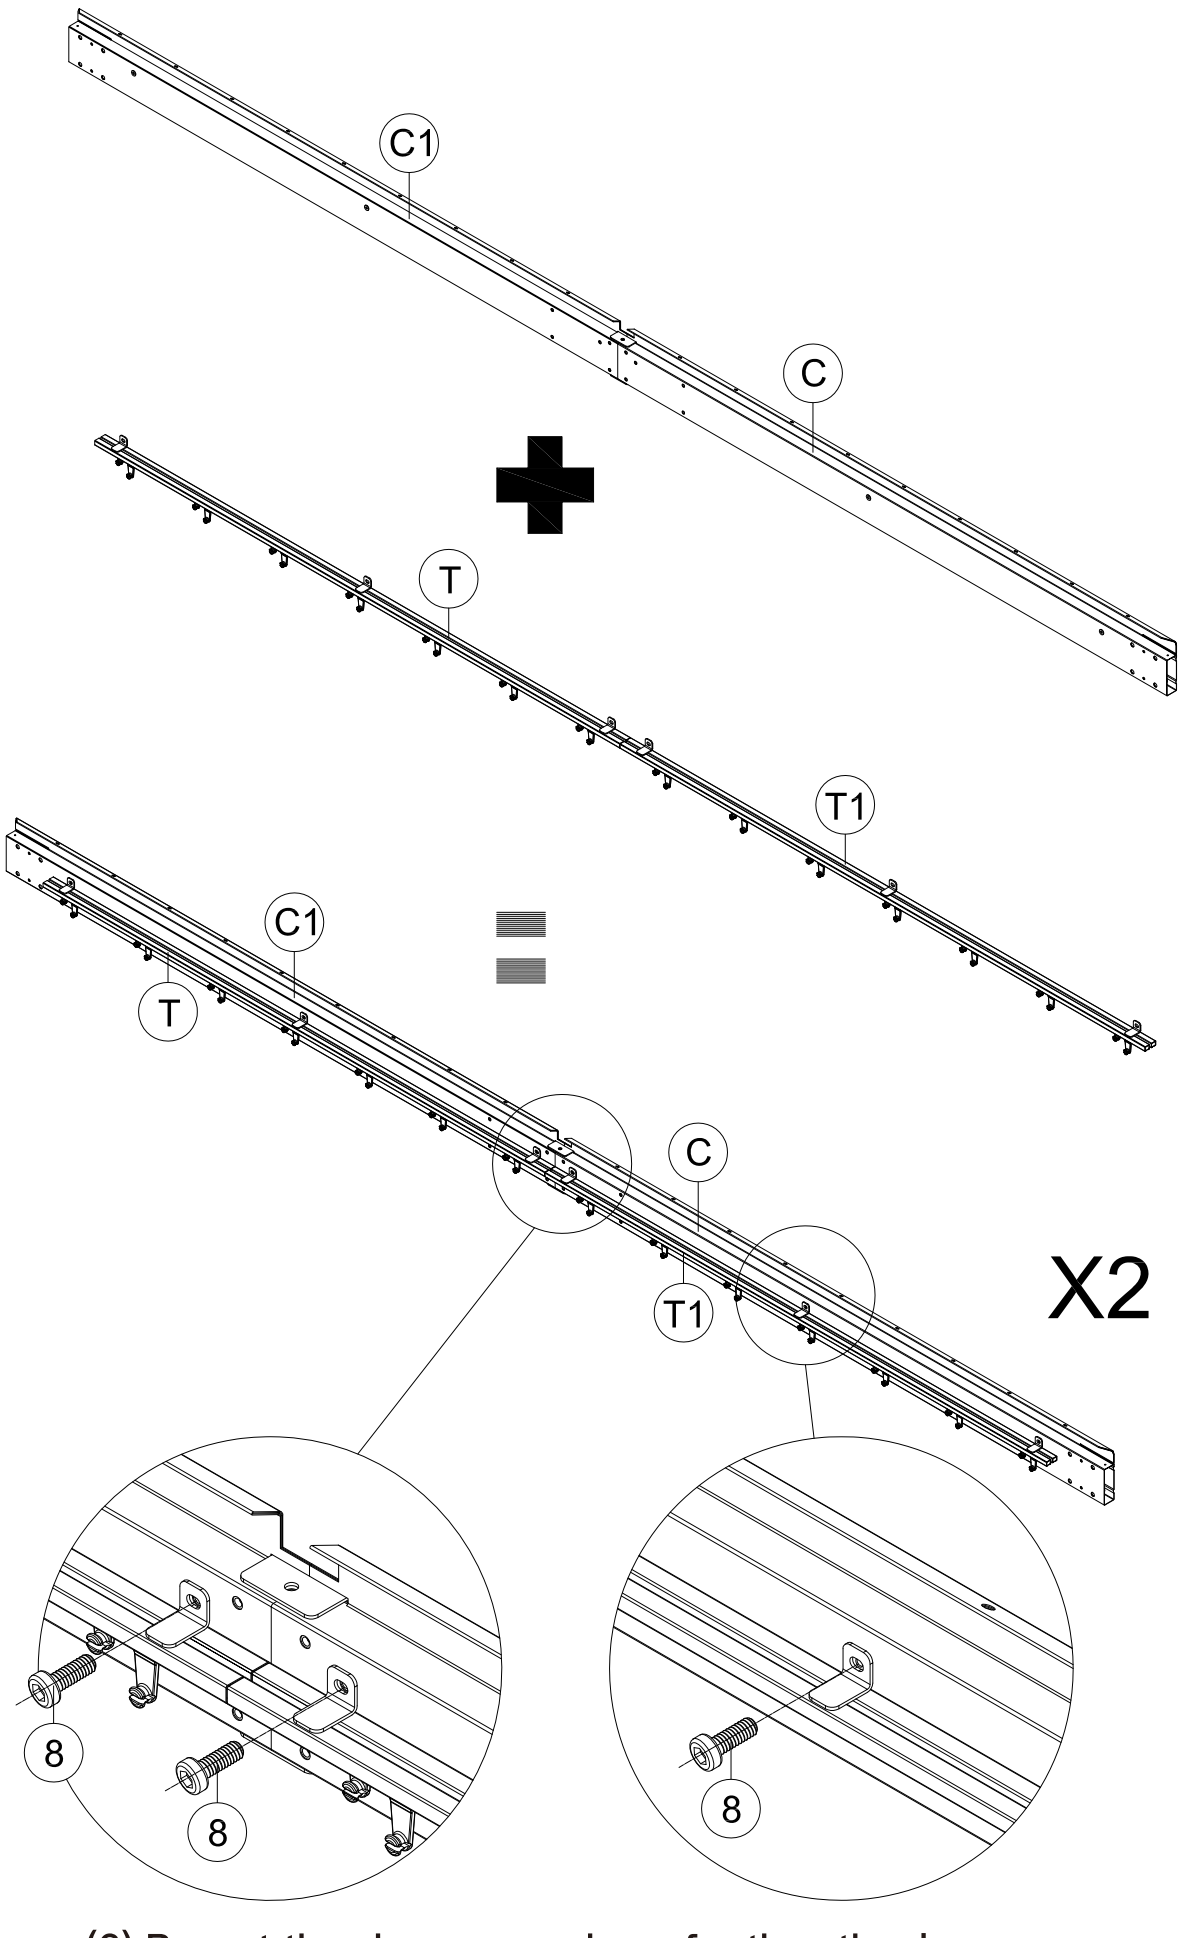

(2) Repeat the above procedures for the other beam.


S4

1 1x


M6x16

8 24x


(1) Use 12 Bolts #8 to fix the track T,T2 ,T3 &T1to the beam D, D2 & D1.

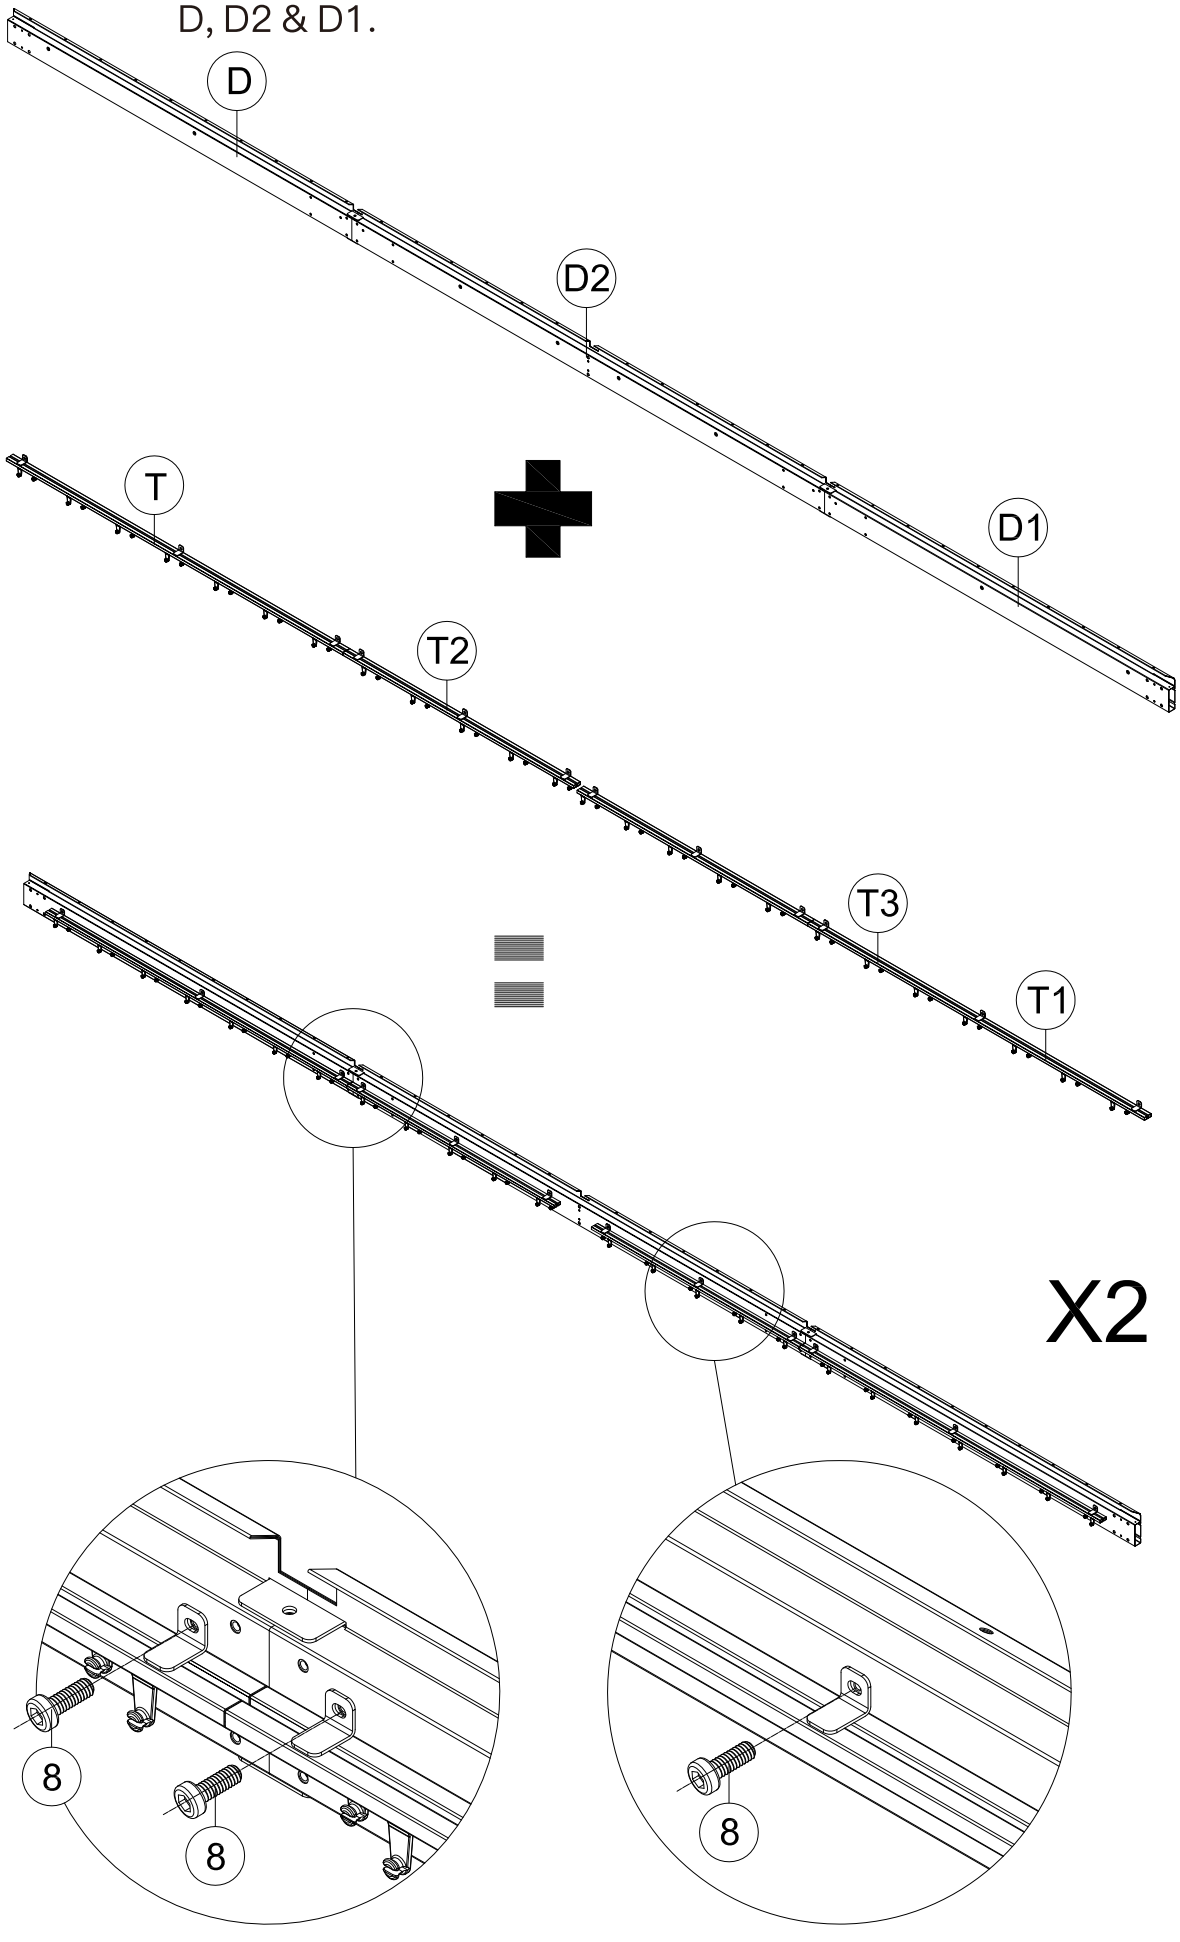

(2) Repeat the above procedures for the other beam.

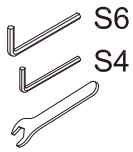

1 1x




ST8X30

14 16x




M8X160

17 16x




M8


18 16x

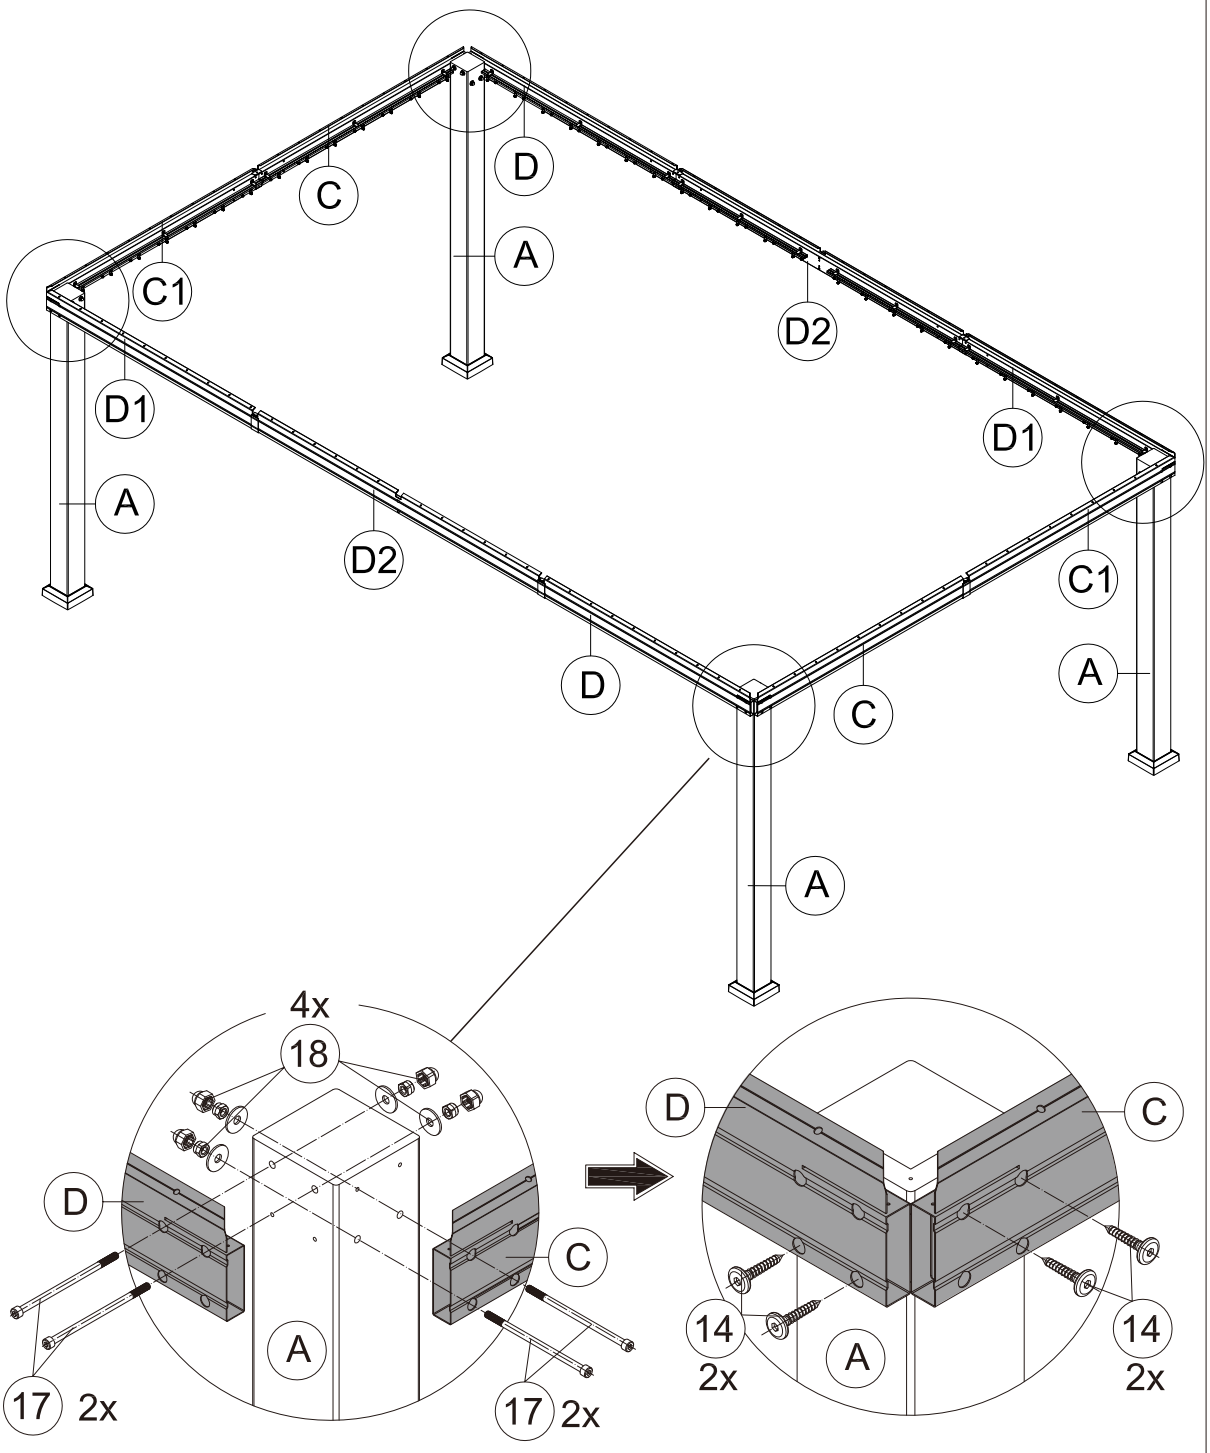

(1) Connect Part #D/#C1 to Part #A with 2 Bolts #17, and fix from the other side with 2 Bolts #18.(The first row of screw holes)
(2) Connect Part #C/#D1 to Part #A with 2 Bolts #17, and fix from the other side with 2 Bolts #18.(The second row of screw holes)
(3) Secure Part #D&#C / #C1&D1 with 4 Screws #14.
(4) Repeat the above procedures to assemble the other corners.

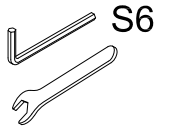


1 1x



M8X160

17 4x





M8

18 4x




19 4x

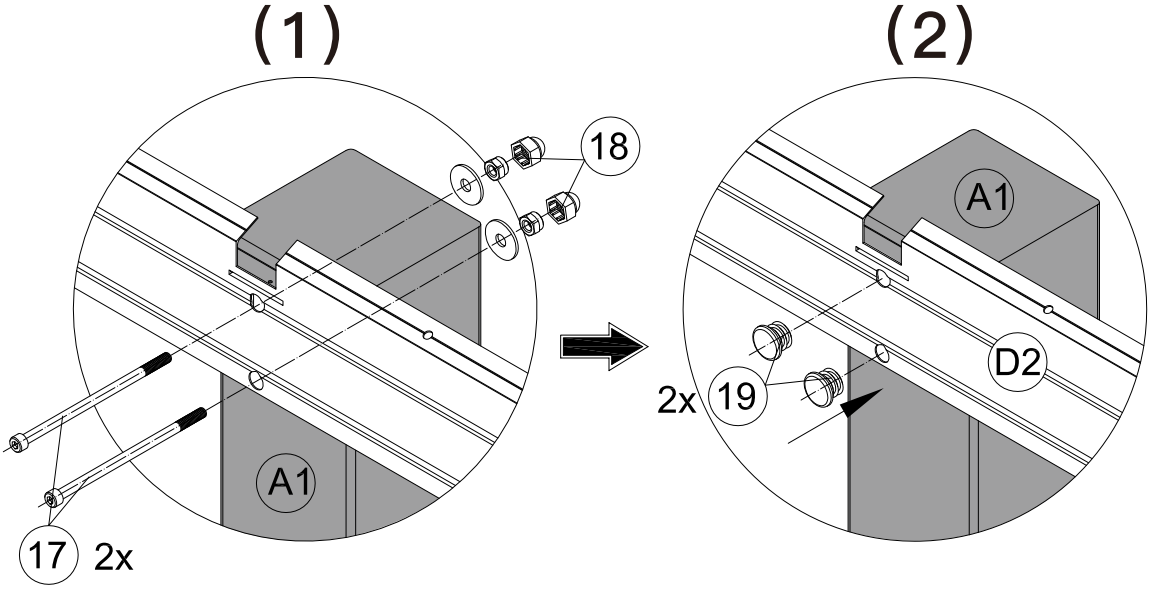

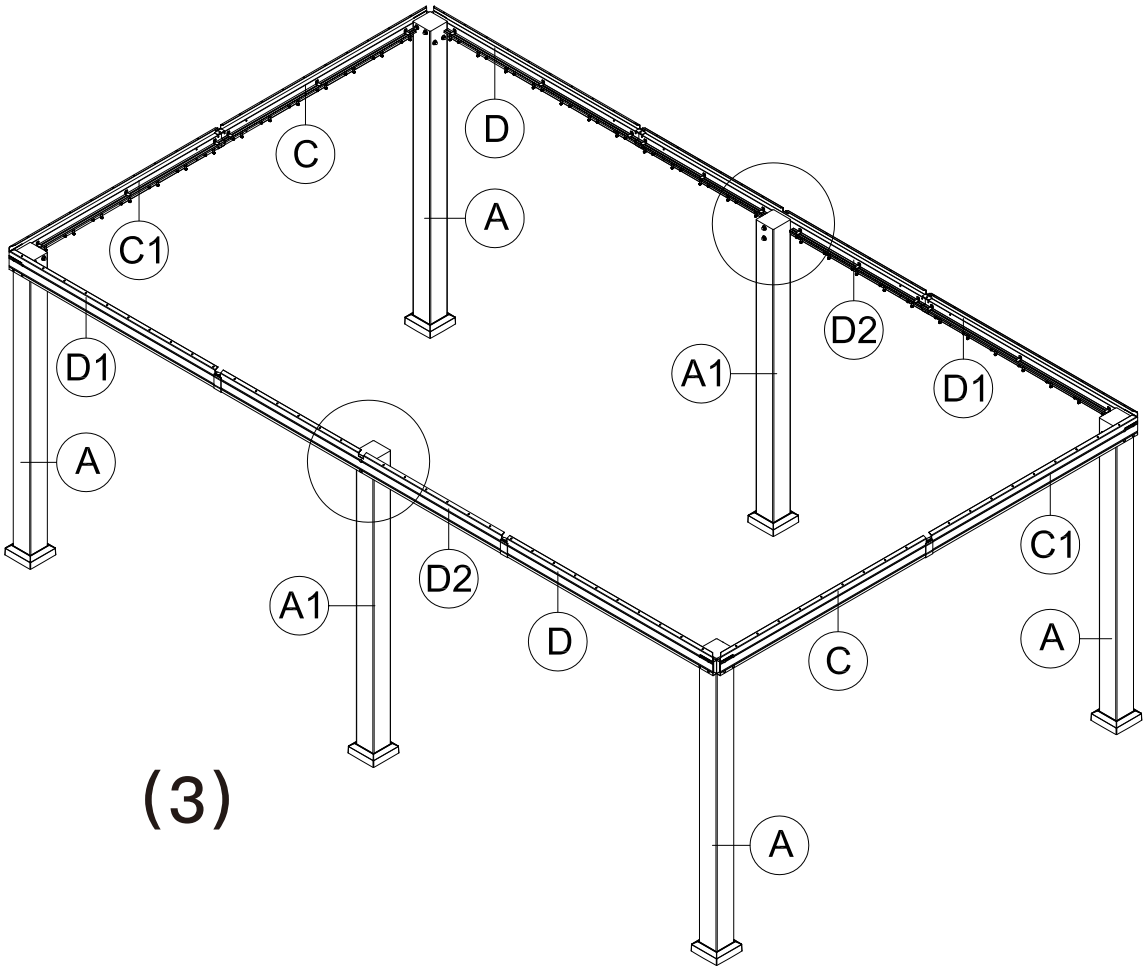


(3)

(1) Connect Part #D2 to Part #A1 with 2 Bolts #17, and fix from the other side with 2 Bolts #18.
(2) Insert 2 plastic caps #19 into the beam #D2.
(3)Repeat the above procedures to assemble the opposite side.



B2 6x



B3 6x




S4


1 1x




M6x16

8 24x

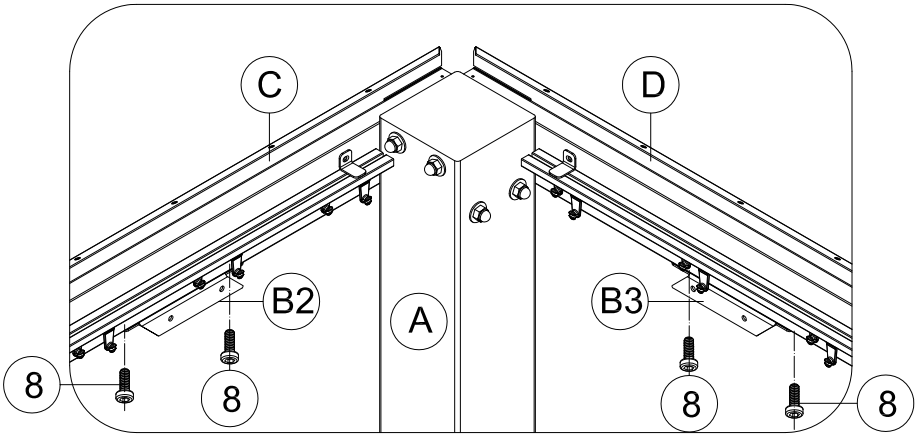

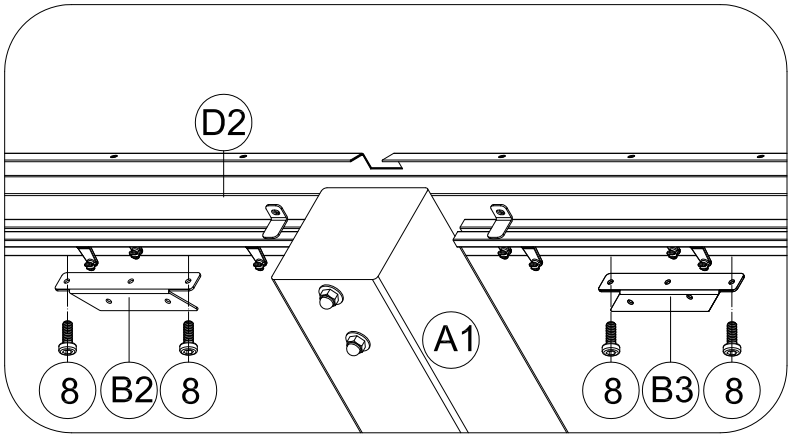


(1) Affix Part #B2 / Part #B3 to the Beam with 2 Bolts #8.

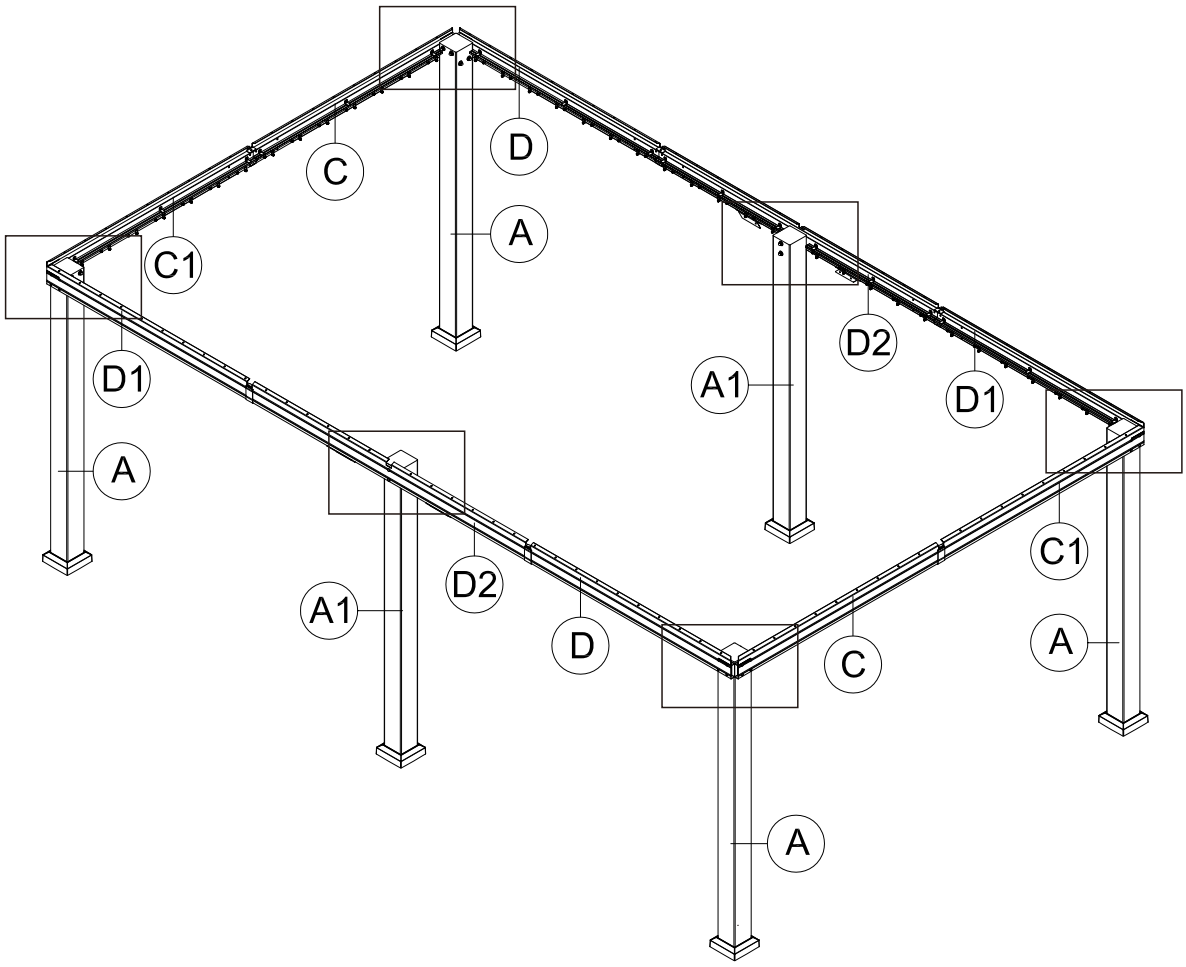


(2) Repeat the above procedures to assemble other Part #B2/#B3.

⚠ Please don't tighten all bolts.

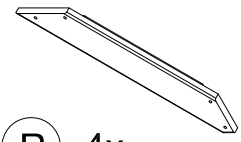

R 4x

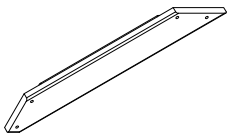

R1 4x

S4

1 1x



M6

5 16x



M6x38

6 16x



ST6.3X35

13 16x




D6.6*2

15 16x


M3x65

16 1x

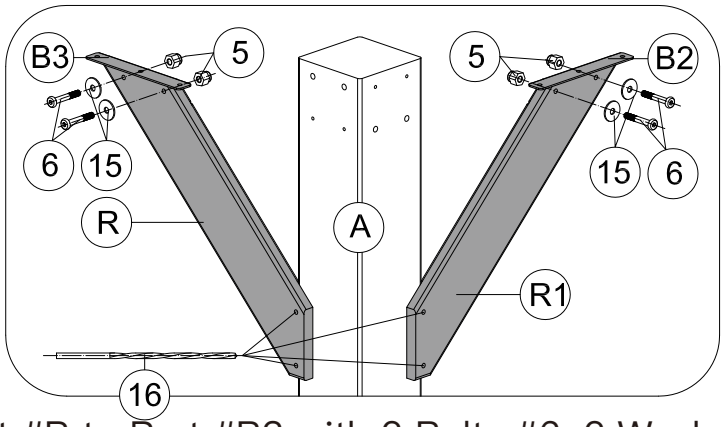


(1) Affix Part #R to Part #B3 with 2 Bolts #6, 2 Washers #15 and 2 Nuts #5.

(2) Affix Part #R1 to Part #B2 with 2 Bolts #6, 2 Washers #15 and 2 Nuts #5.

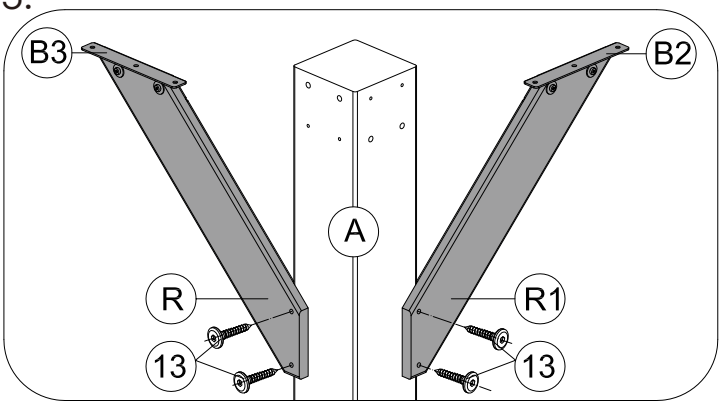


(3) Use Drill #16 to drill holes in the holes reserved for Part #R/#R1.

(4) Affix Part #R and Part #R1 to the posts with 4 Screws #13.

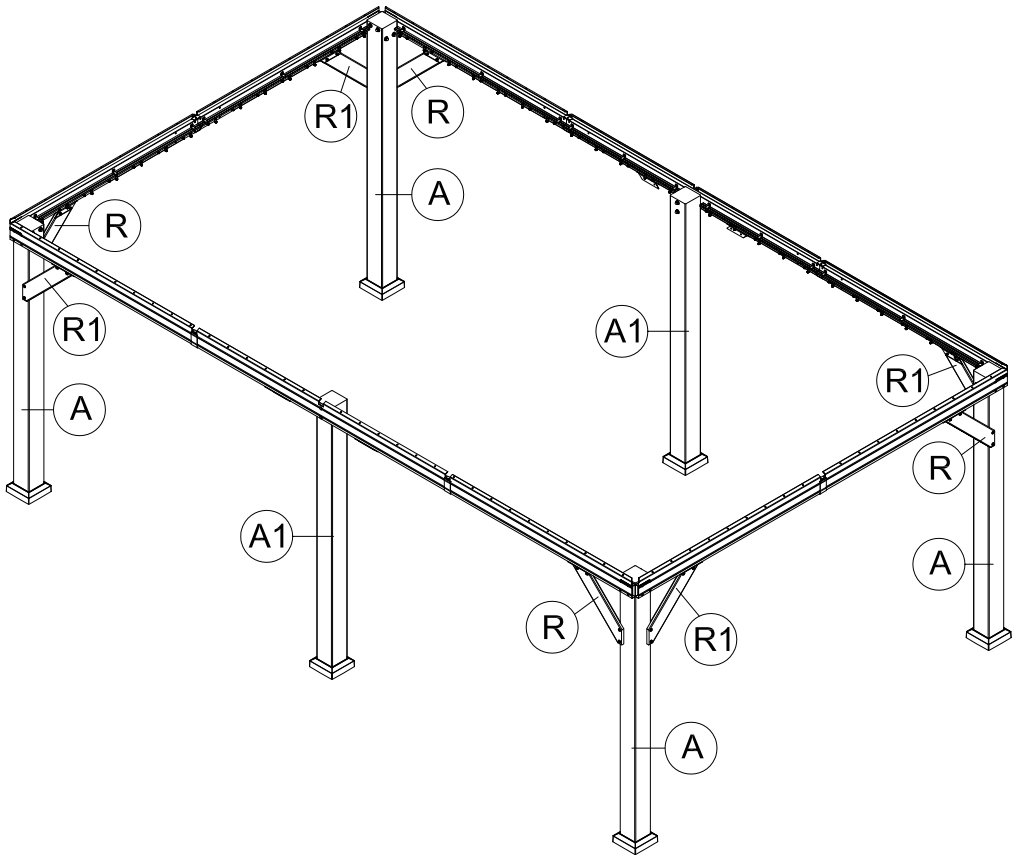


(5) Repeat the above procedures to assemble the other 3 corners.

⚠ Please don't tighten all bolts.

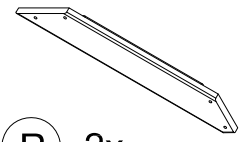

R 2x

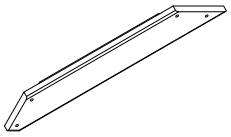

R1 2x



S4

1 1x



M6

5 8x



M6x38

6 8x



ST6.3X35

13 8x




D6.6*2

15 8x


M3x65

16 1x

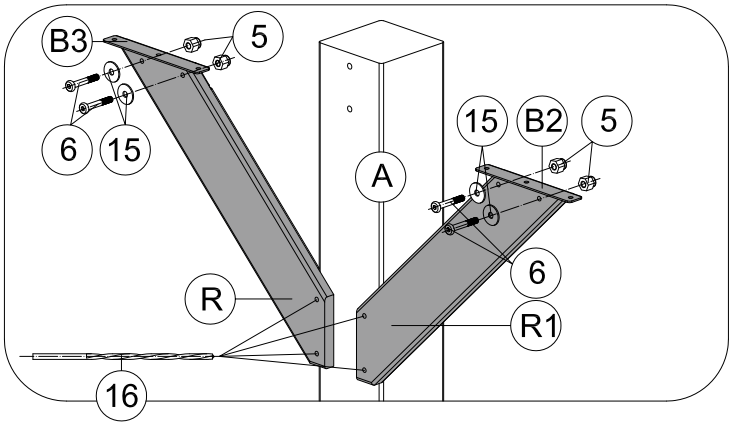


(1) Affix Part #R to Part #B3 with 2 Bolts #6, 2 Washers #15 and 2 Nuts #5.

(2) Affix Part #R1 to Part #B2 with 2 Bolts #6, 2 Washers #15 and 2 Nuts #5.

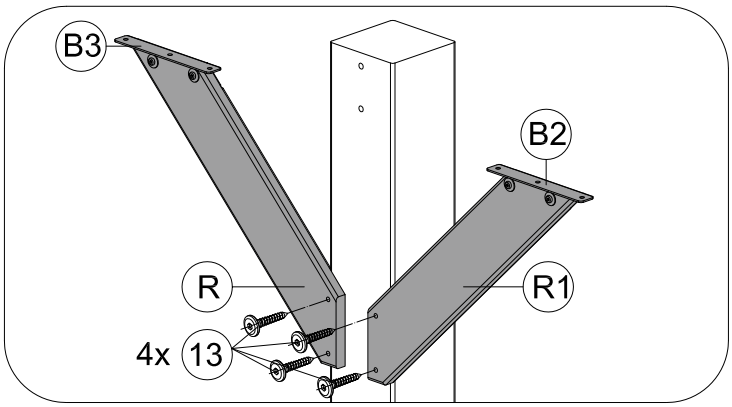


(3) Use Drill #16 to drill holes in the holes reserved for Part #R/#R1.

(4) Affix Part #R and Part #R1 to the posts with 4 Screws #13.

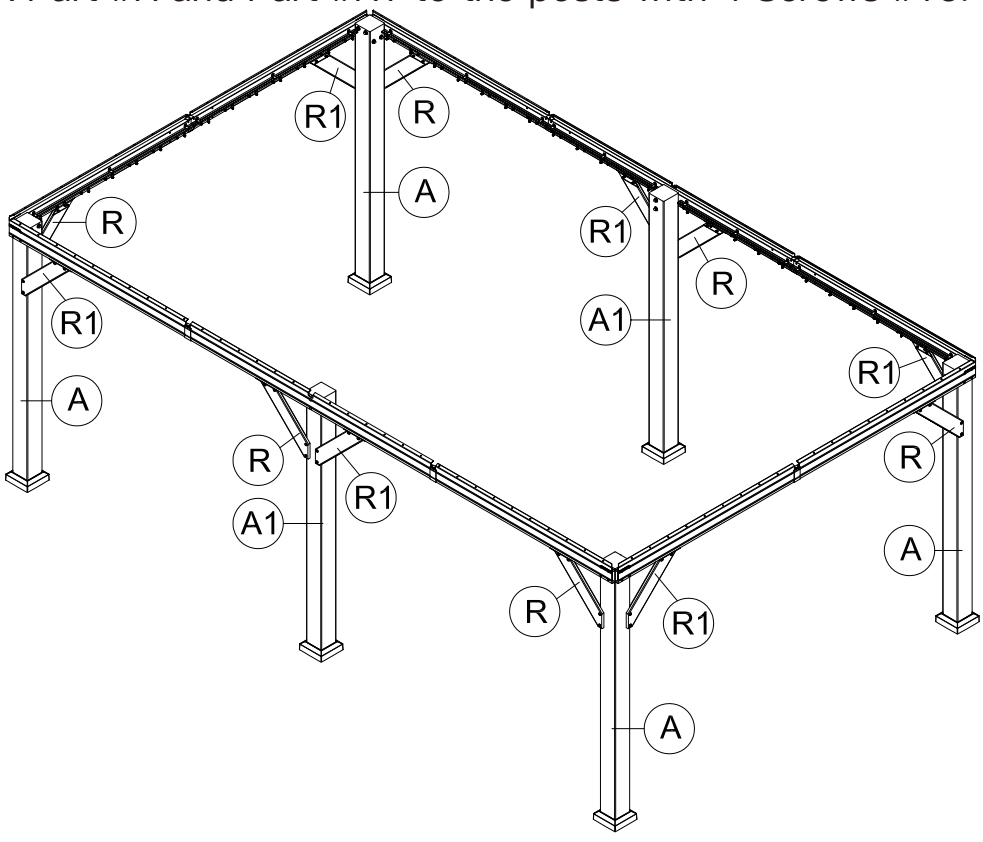

(5) Repeat the above procedures to assemble the the opposite side.

⚠ Please don't tighten all bolts.




X1 4x




ST5x16


3 16x

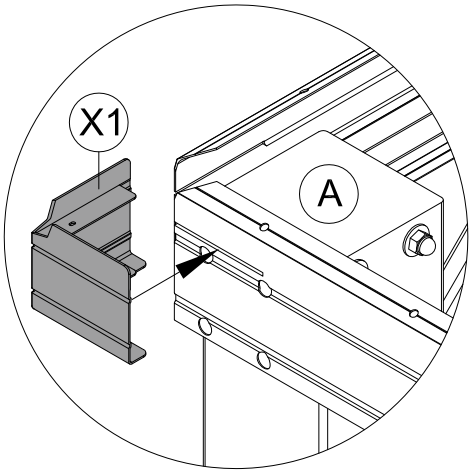


(1) Cover the corner with Part #X1.

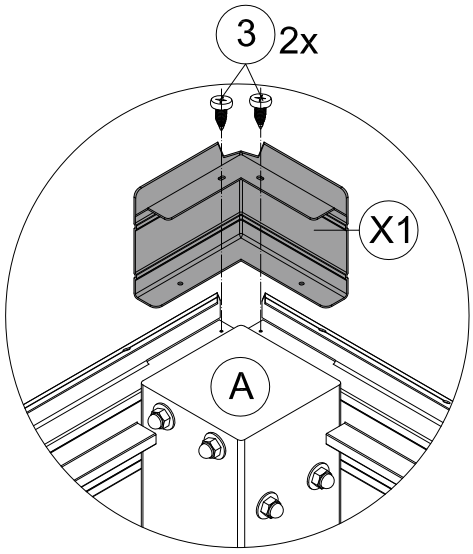

(2) Secure with 2 Self-tapping Screws #3. (from top to bottom)

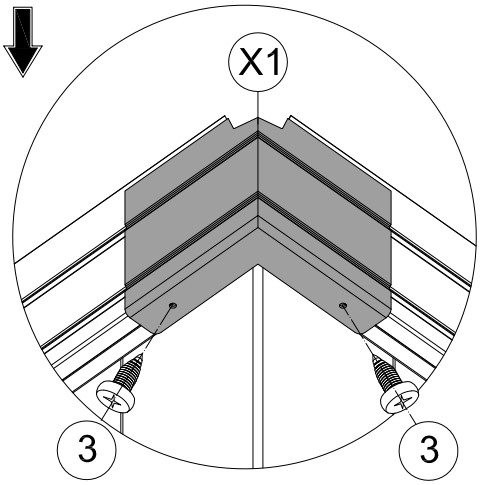


(3) Secure with 2 Self-tapping Screws #3. (from bottom to top)

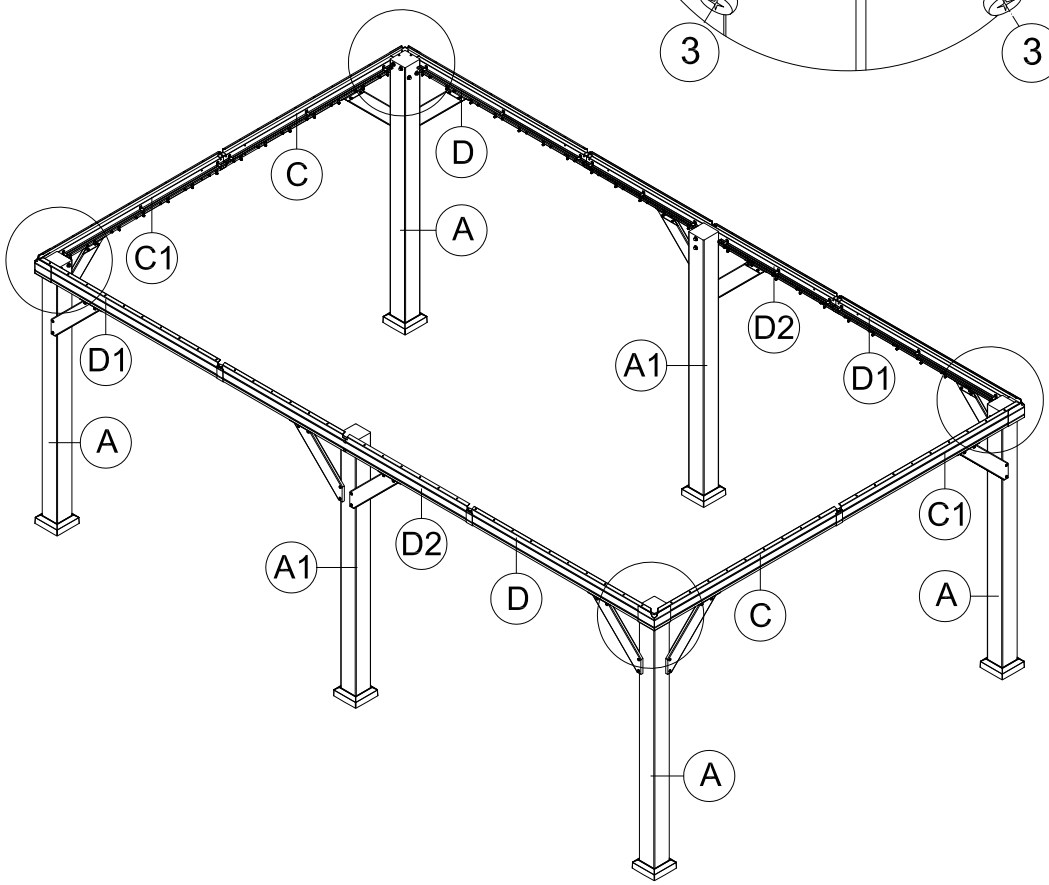


Repeat the above procedures to assemble the other 3 corners.

⚠ Tighten all bolts.




U 4x





ST5x30

4 16x

(1) Connect Part #U to Part #A with 4 Bolts #4.

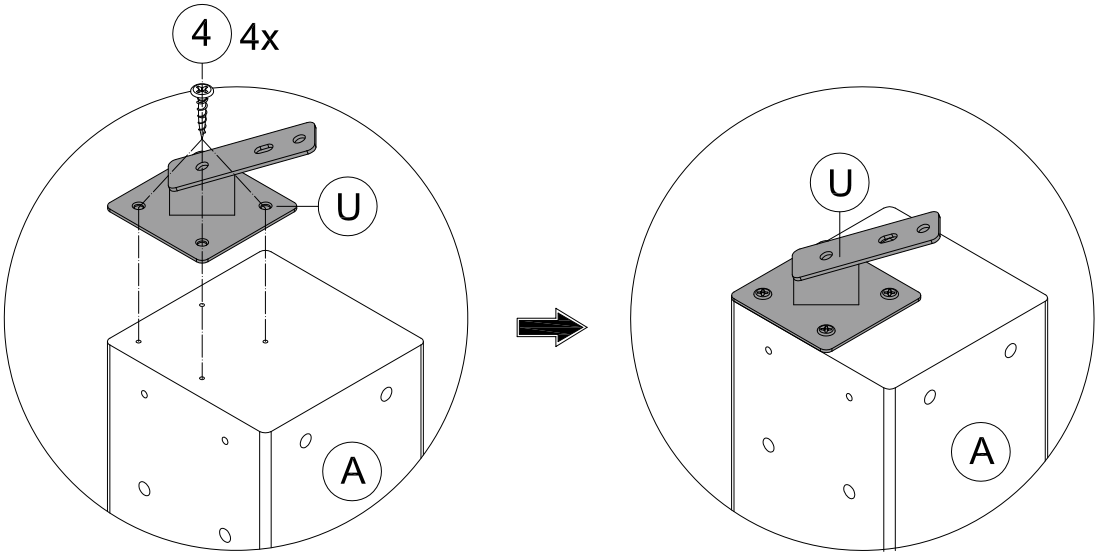


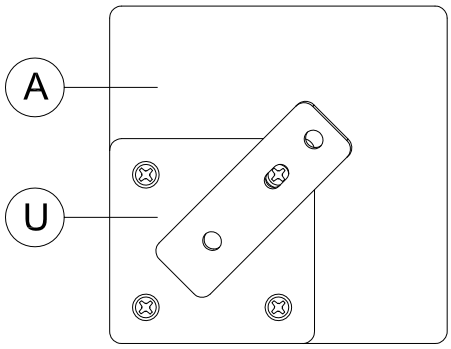

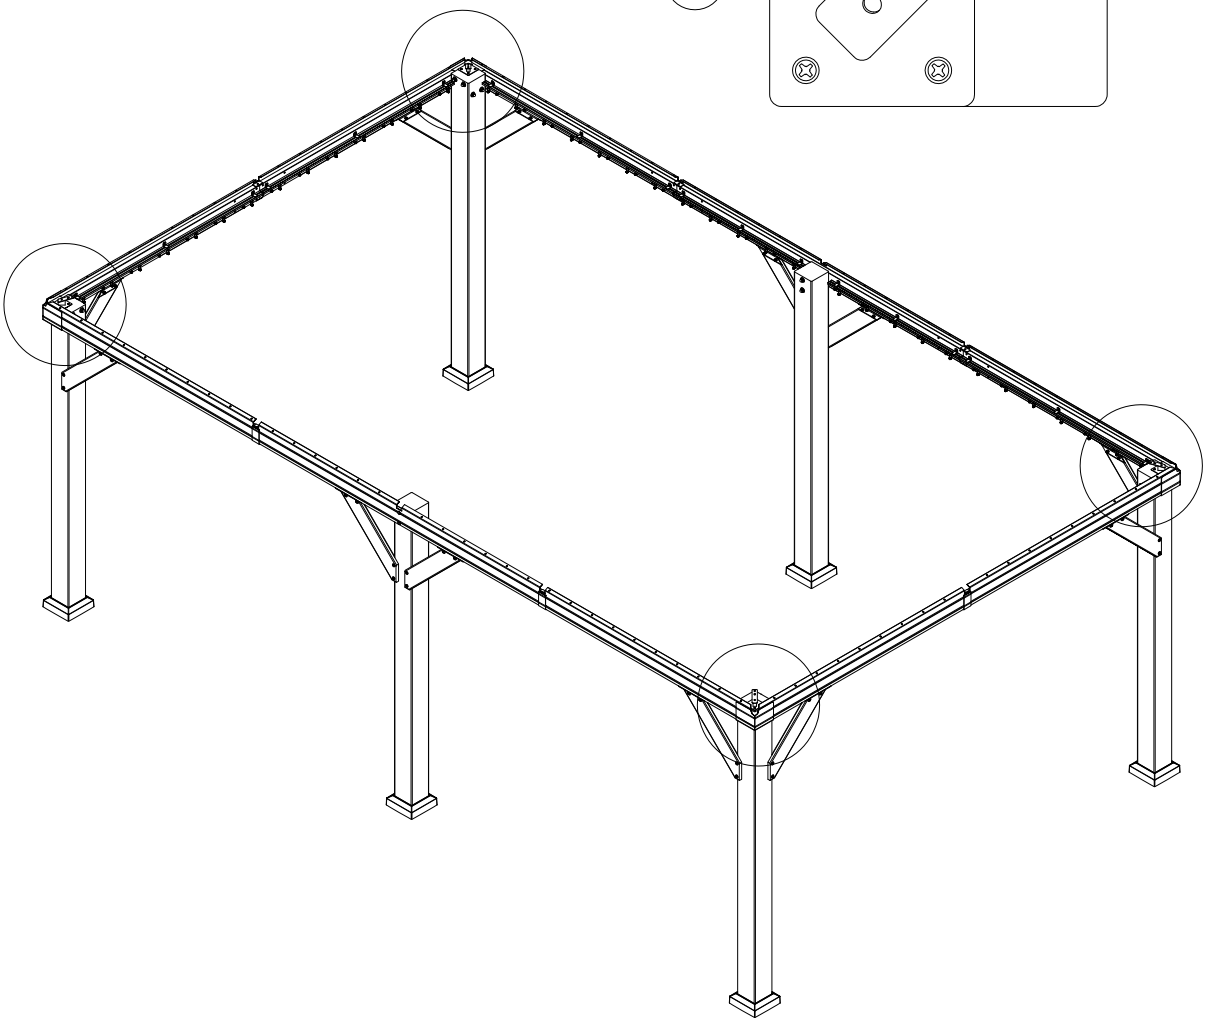

(2) Repeat the above procedures to assemble the other 3 corners.

⚠ Tighten all bolts.

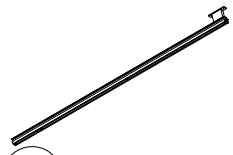

E 4x



E1 4x



S4


1 1x




M6x16

8 8x


Assemble the 4 Corner Roof Bars:

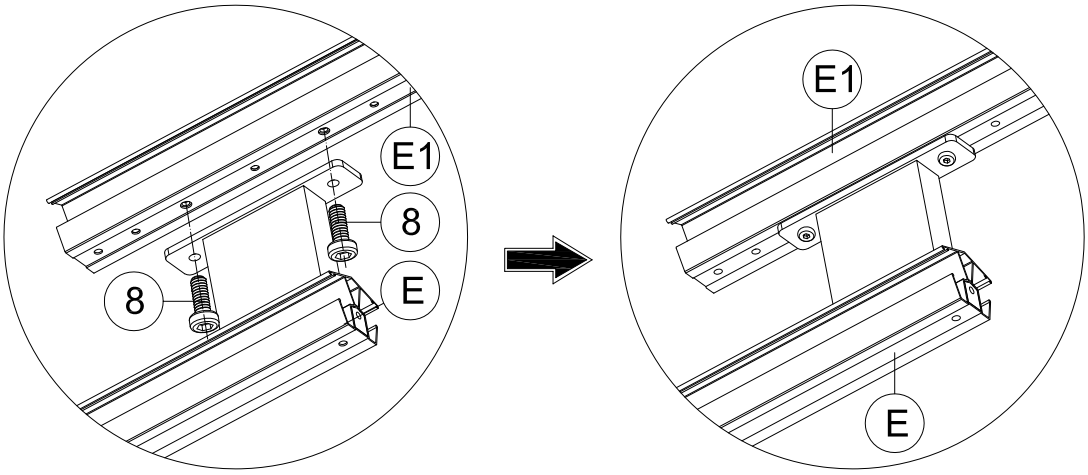


(1) Connect Part #E1 and Part #E with 2 Bolts #8 .

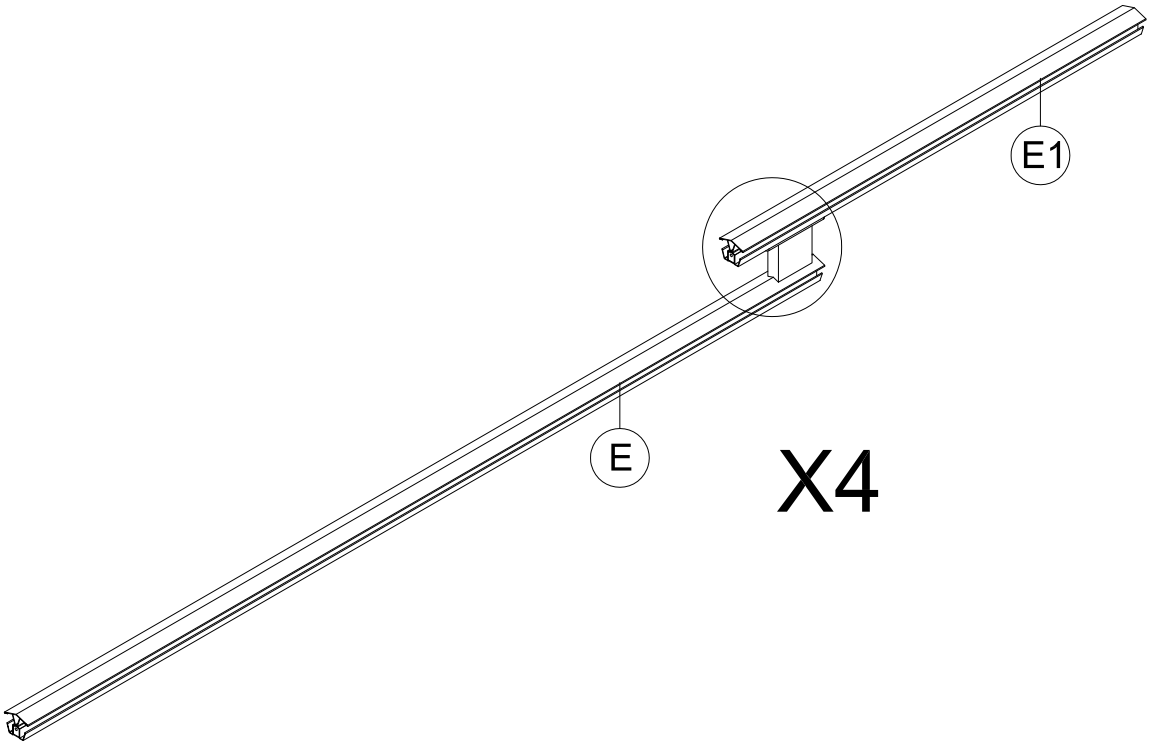

(2) Repeat the above procedures to assemble the other 3 corner roof bars.




S1 2x

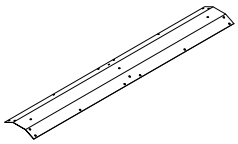

S2 1x



S3 2x

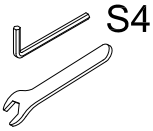

S4

1 1x



M6

5 8x




M6x16


8 8x

23-1


Inside Roof Cover Assembly:

The 2 Parts #S1 and Part #S2 are connected by 2 Parts #S3, then secure with 8 Bolts #8 and nuts #5.

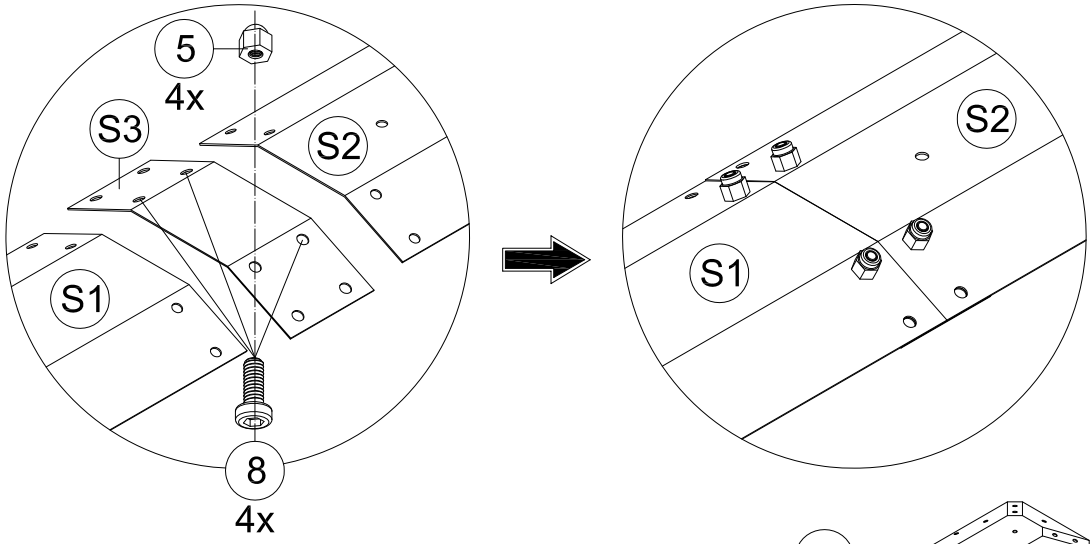


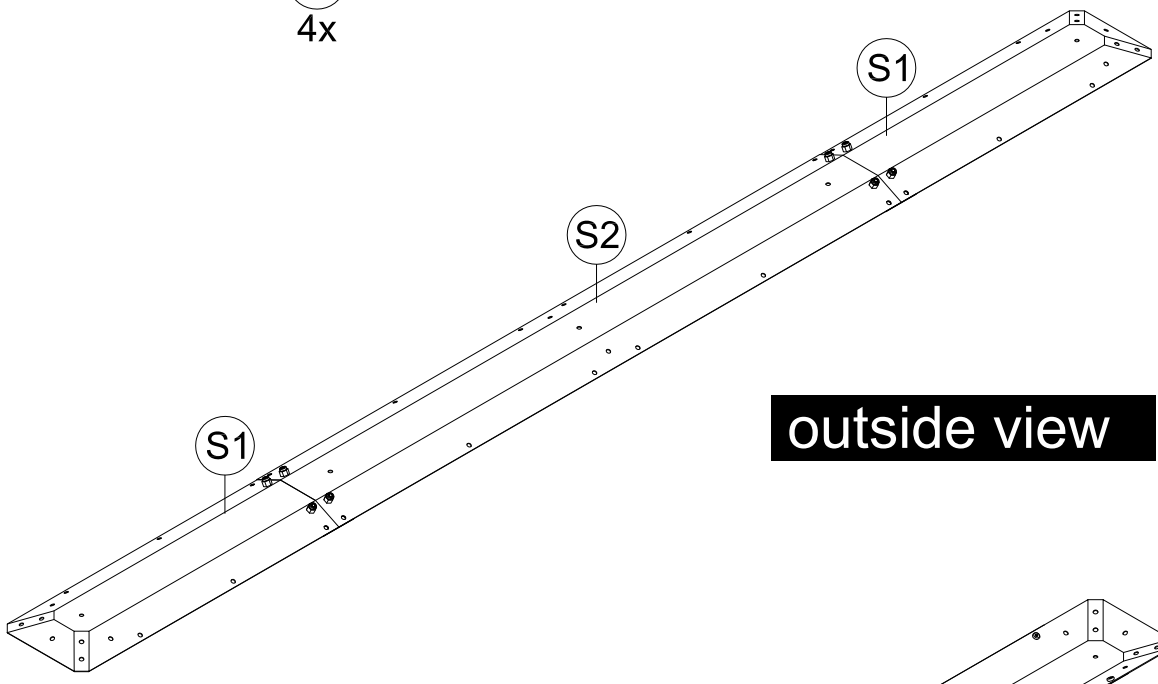

outside view

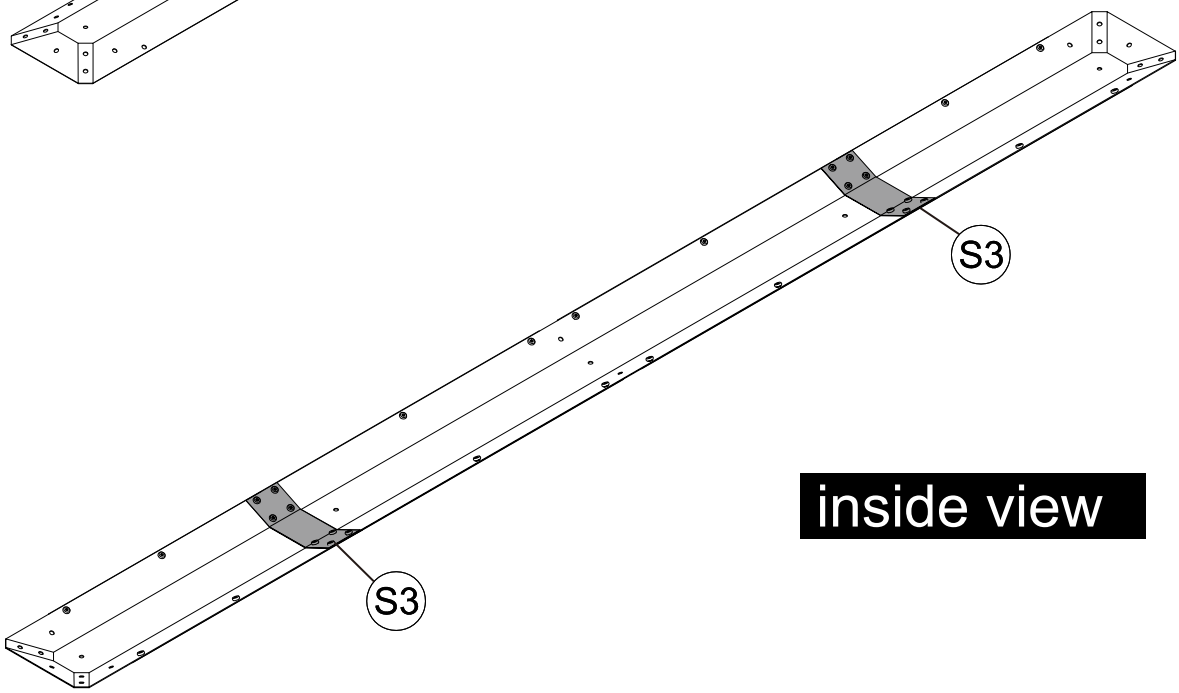

inside view

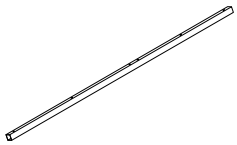


S4 4x





M6x10

7 24x

Use 24 Bolts #7 to secure 4 Part #S4 to the assembled inside roof cover.

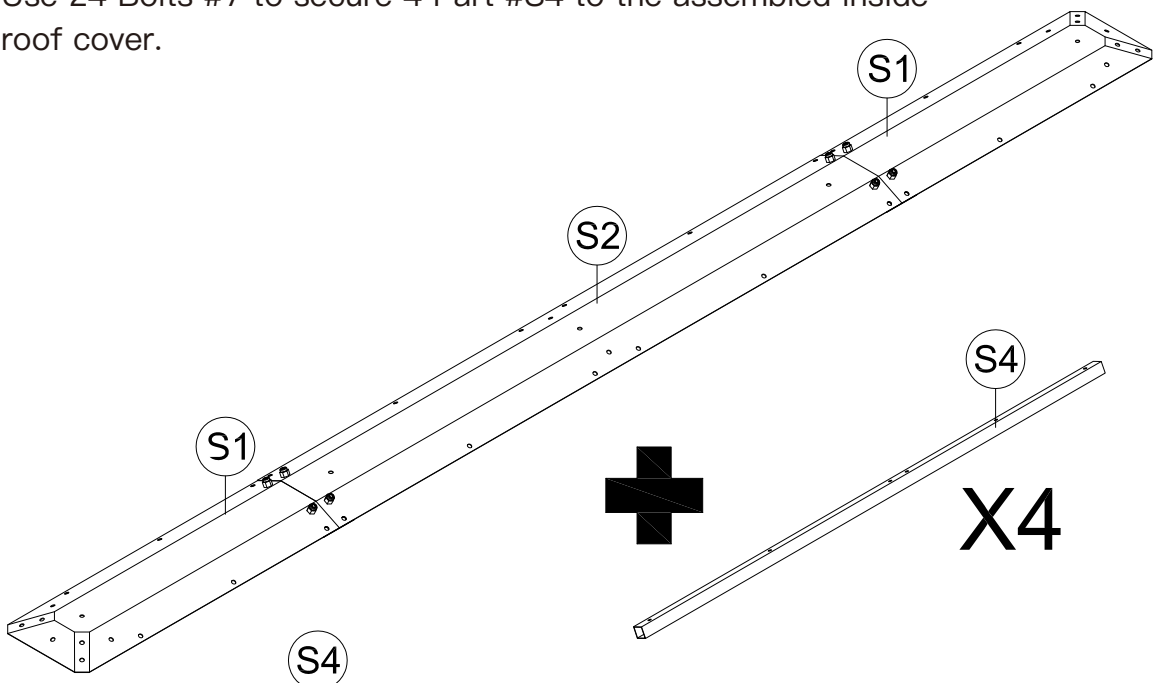

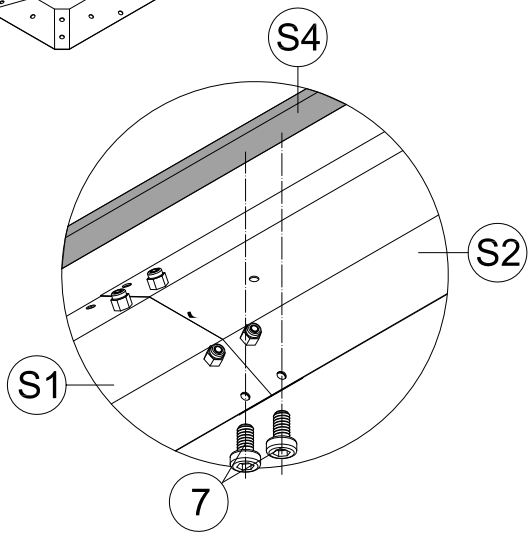

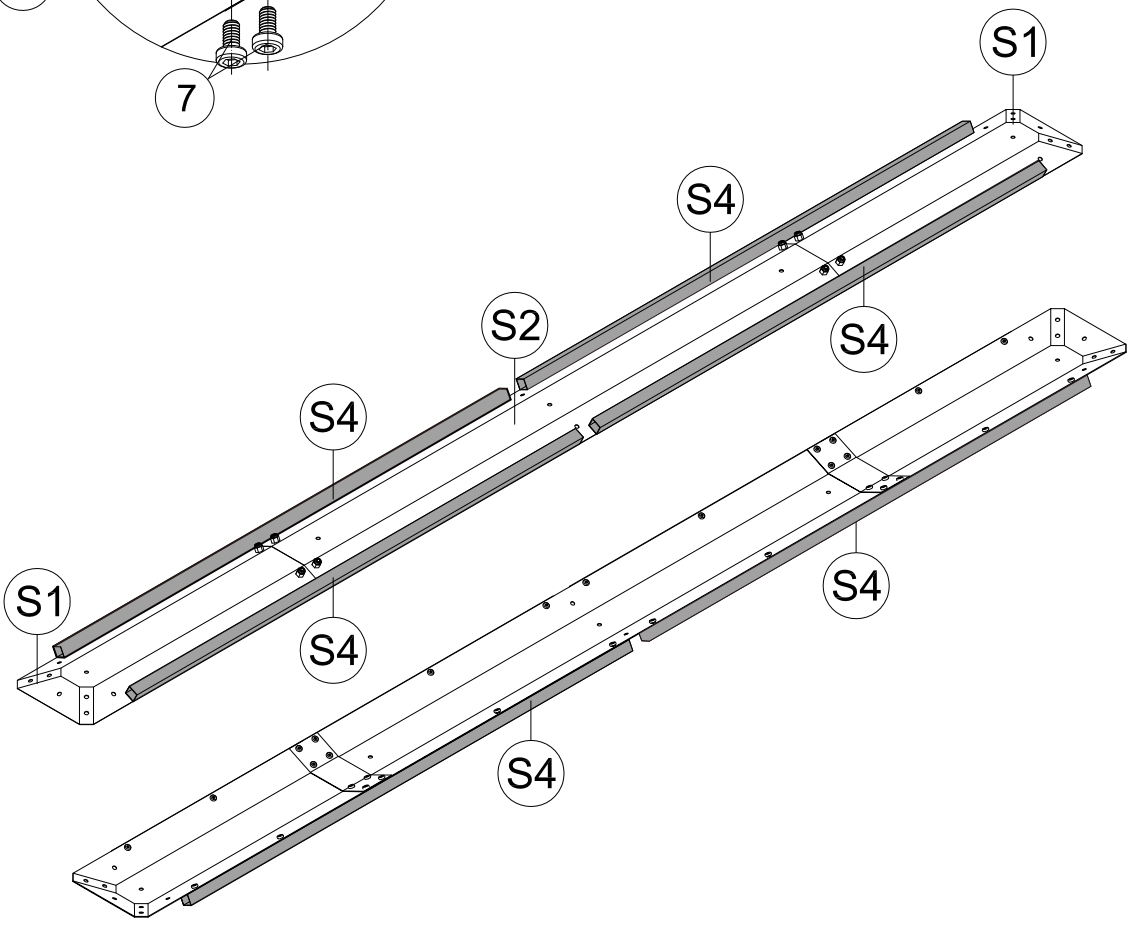

S4


1 1x

M6x16


8 16x

Please have a freestanding ladder ready at the center of the gazebo.


(1) Place 4 Part #E1 on the 4 corners of inside roof cover. Secure with 8 Bolts #8. (from bottom to top)

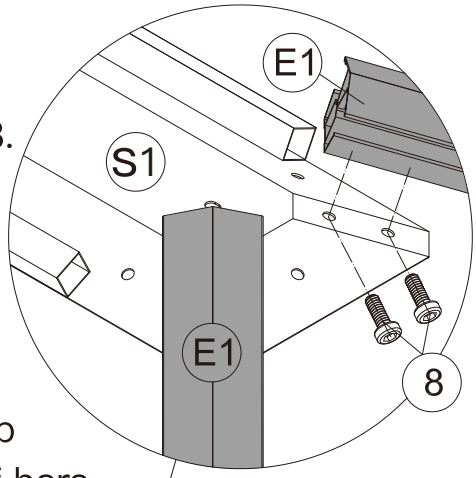

ATTENTION: You can also finish this step on the ground and then lift 4 corner roof bars and inside roof cover to the top together. (Need 2 people and 2 ladders)

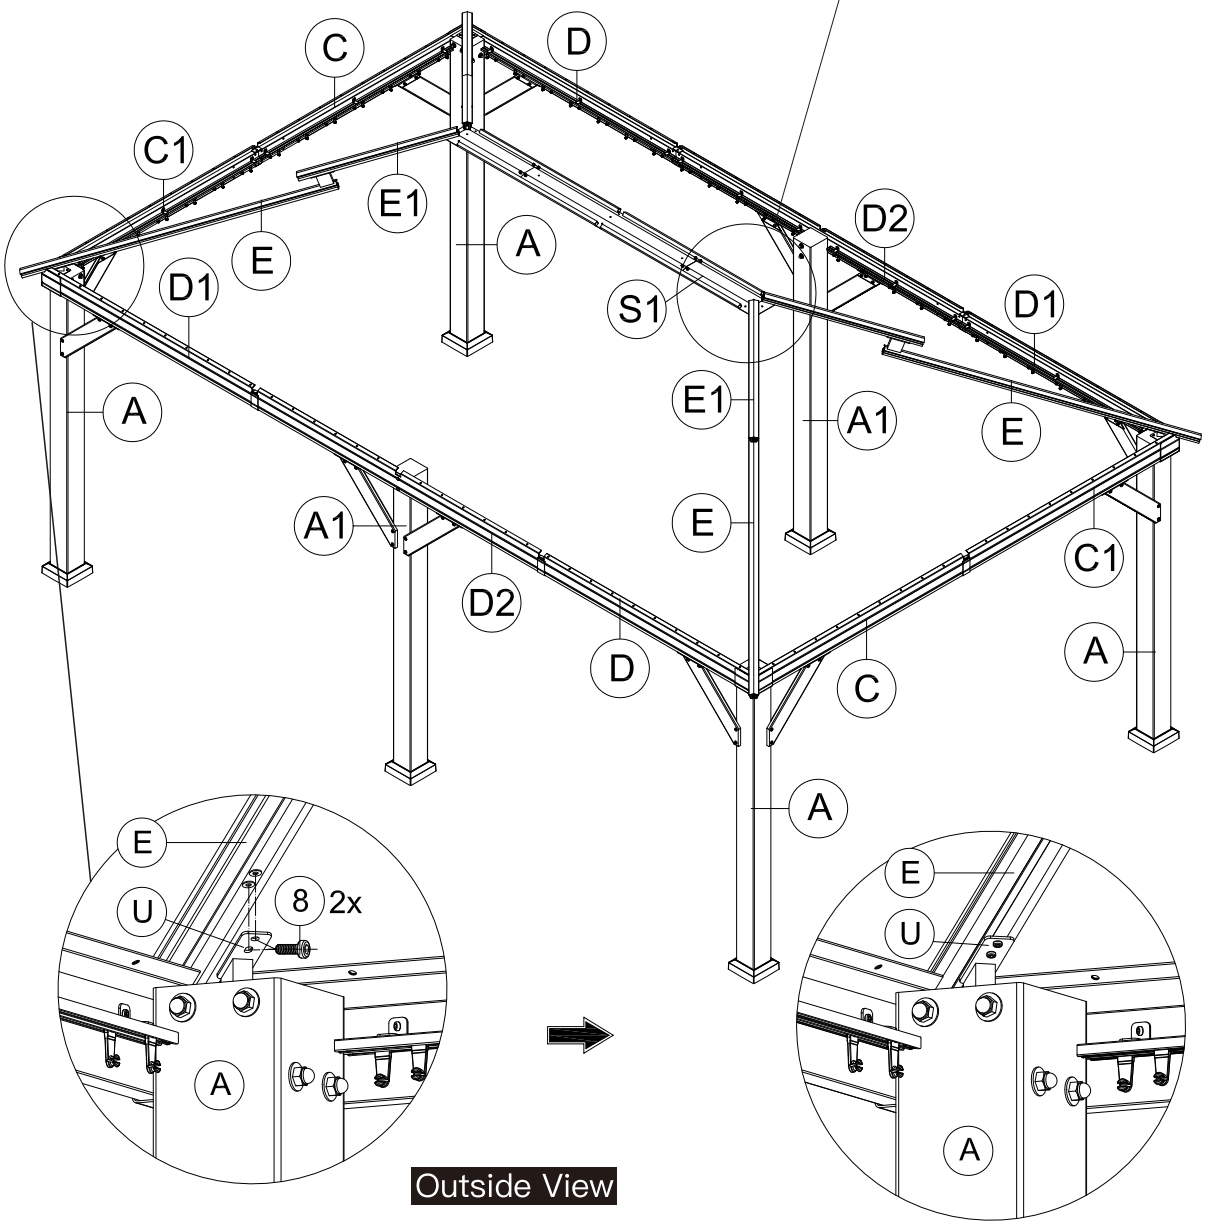

(2)Place 4 Part #E on 4 Part #A; secure with 4 Part U and 8 Bolts #8.

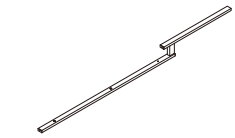

E2 6x



U1 6x




S4


1 1x




M6x10

7 6x

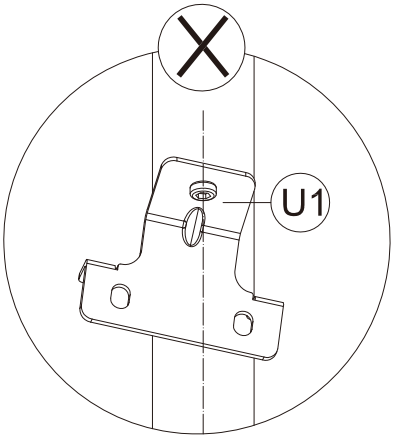

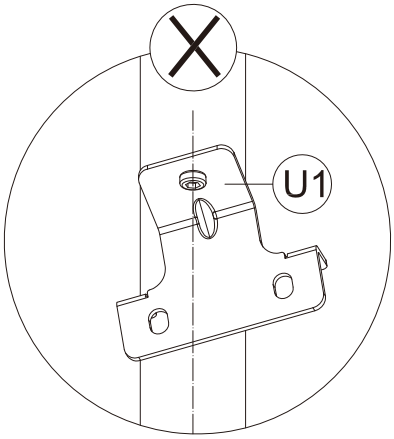


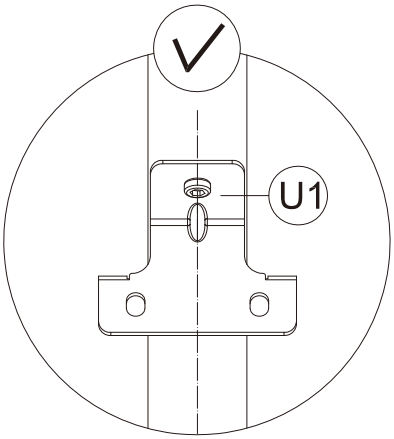


X6

(1) Attach Part #U1 to Part #E2 with Bolt #7 .

(2) Repeat the above procedures to assemble the other 5 roof bars.

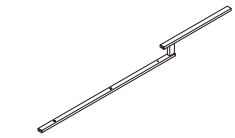

E2 2x



U4 2x




S4


1 1x




M6x10


7 2x

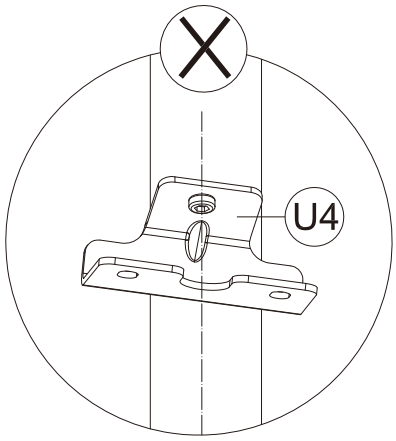

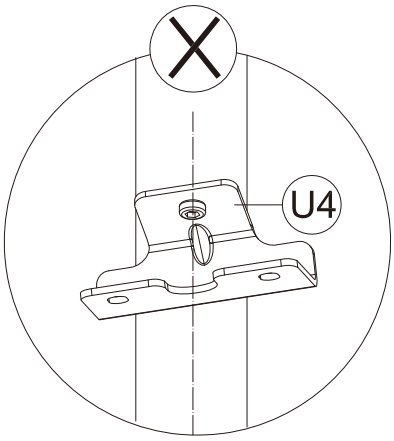

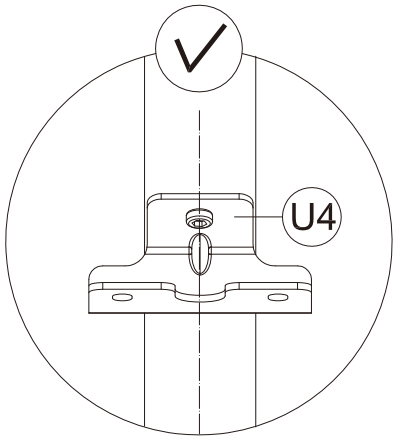

X2

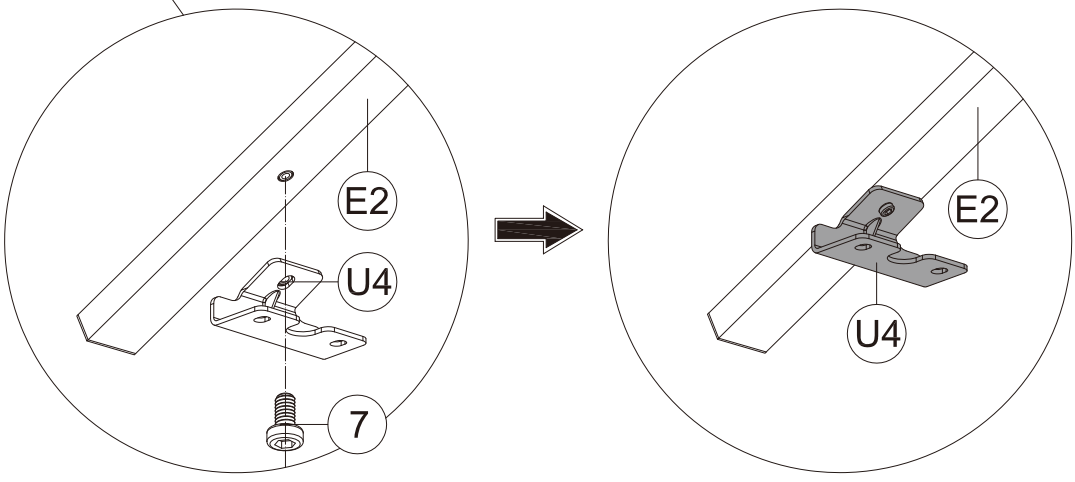

(1) Attach Part #U4 to Part #E2 with Bolt #7 .

(2) Repeat the above procedures to assemble another roof bar.

S4

1 1x


ST5x30


4 8x


M6x16

8 2x

(1) Place Part #E2 on inside roof cover.Secure with Bolt #8 (from bottom to top).

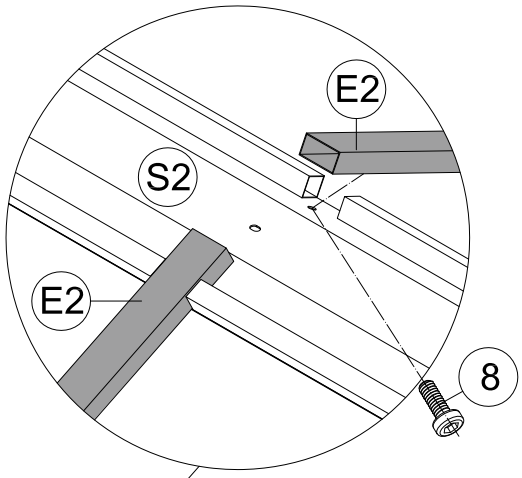

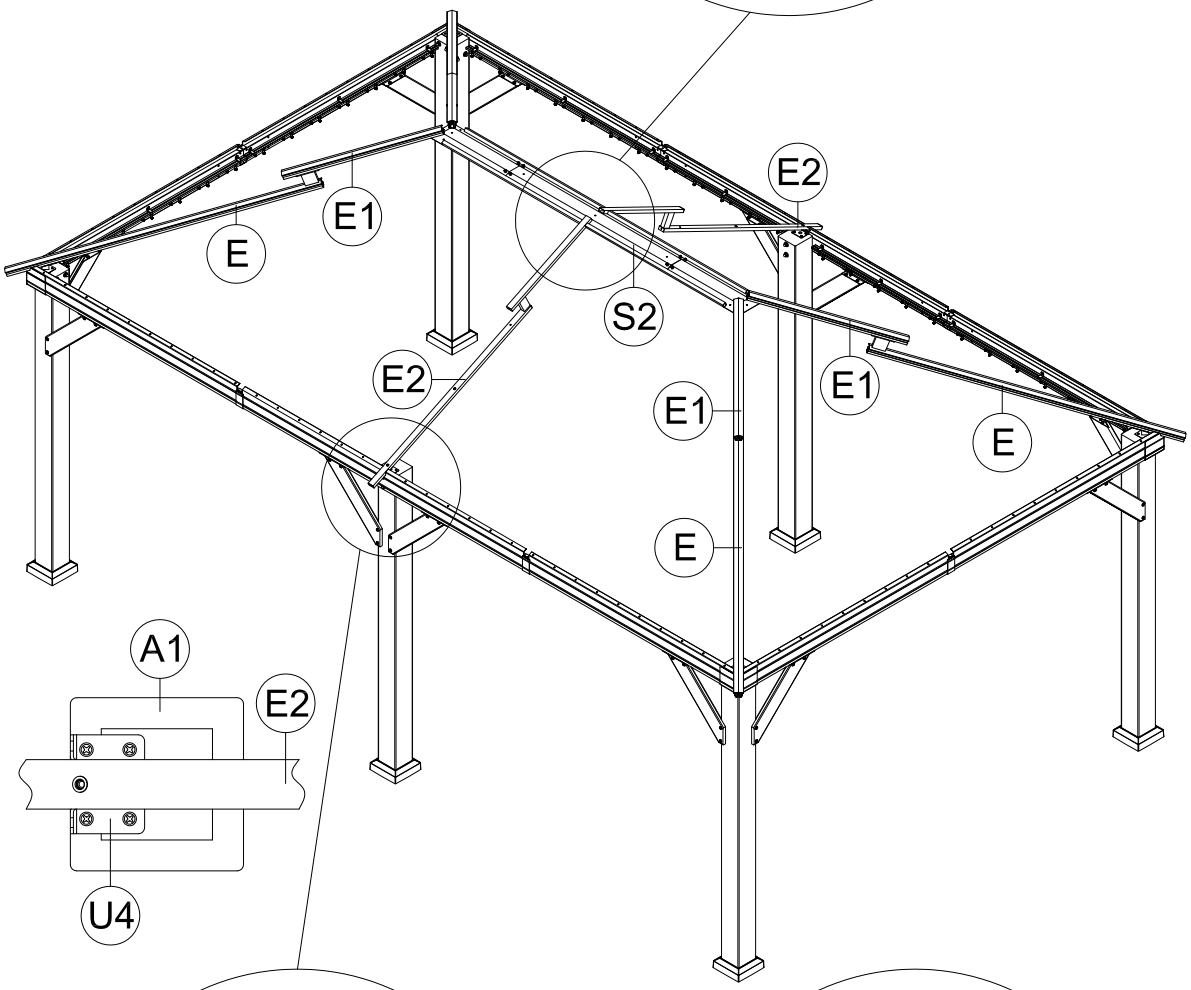

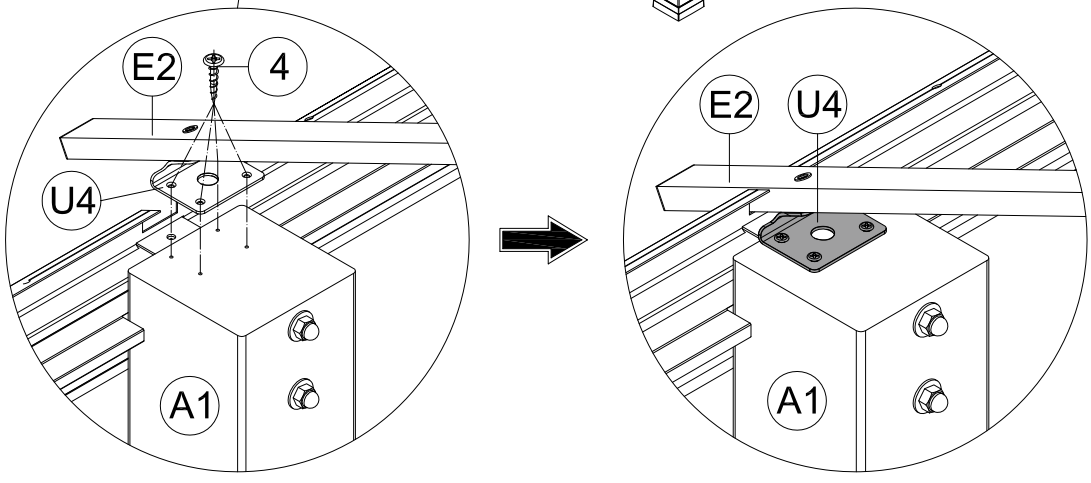


(2) Connect Part #E2 and Part A1with part #U4, Secure with 4 Screws #4.

(3) Repeat the above procedures to assemble the opposite side.

S4


1 1x




M6x16

8 6x

(1) Place Part #E2 on inside roof cover.
Secure with Bolt #8 (from bottom to top).

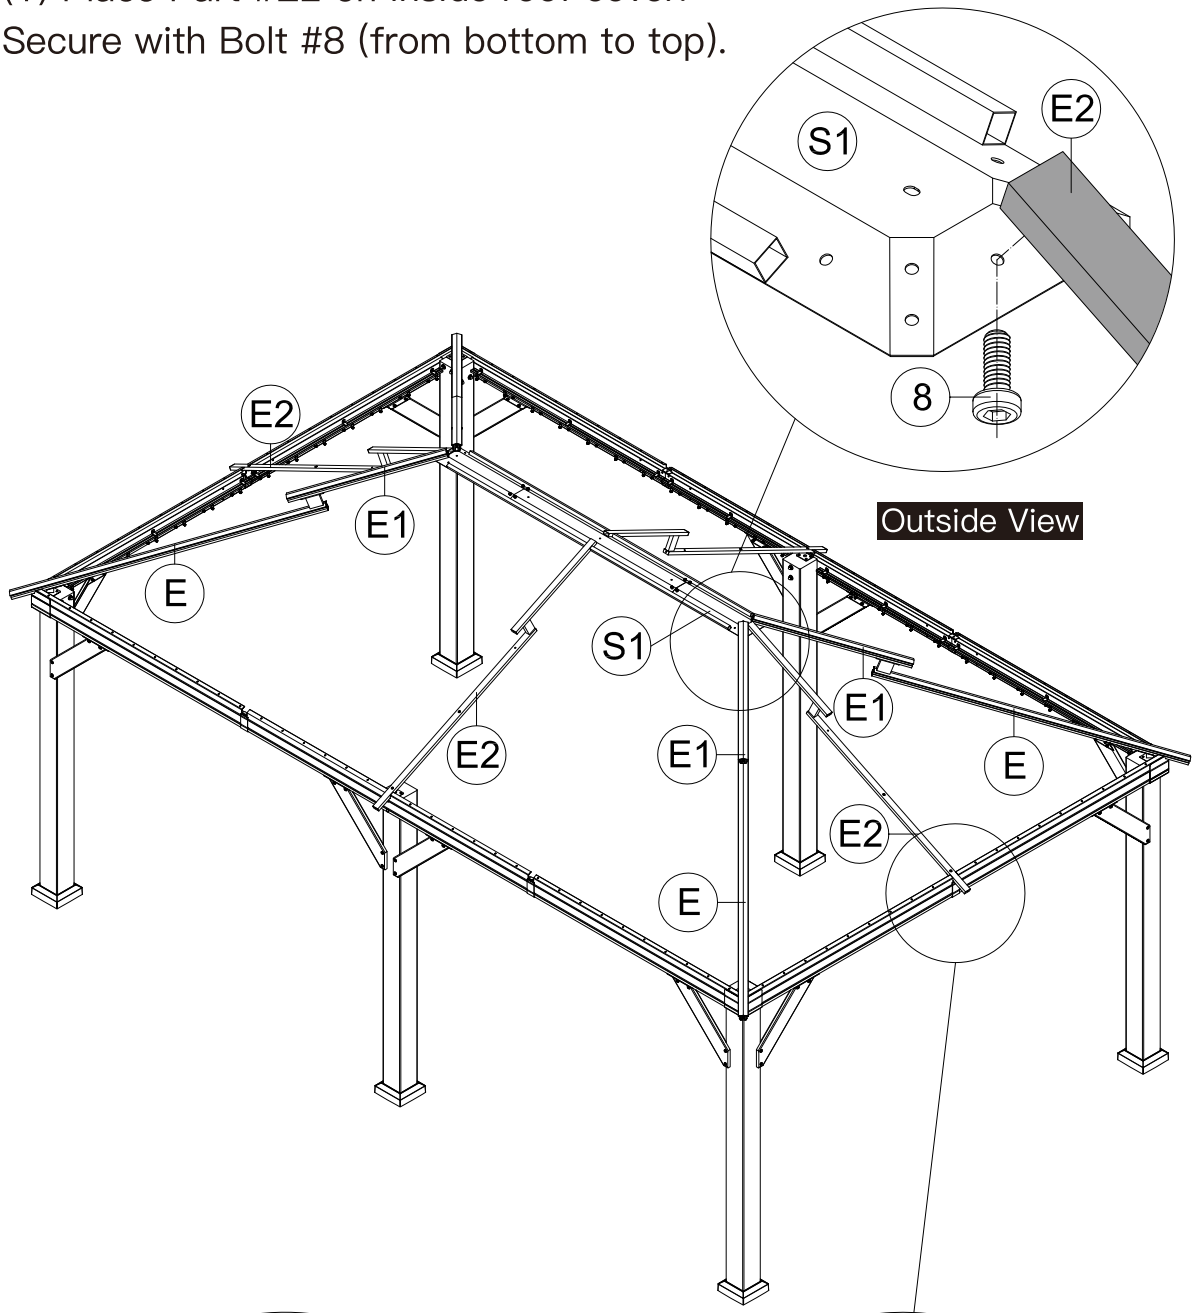

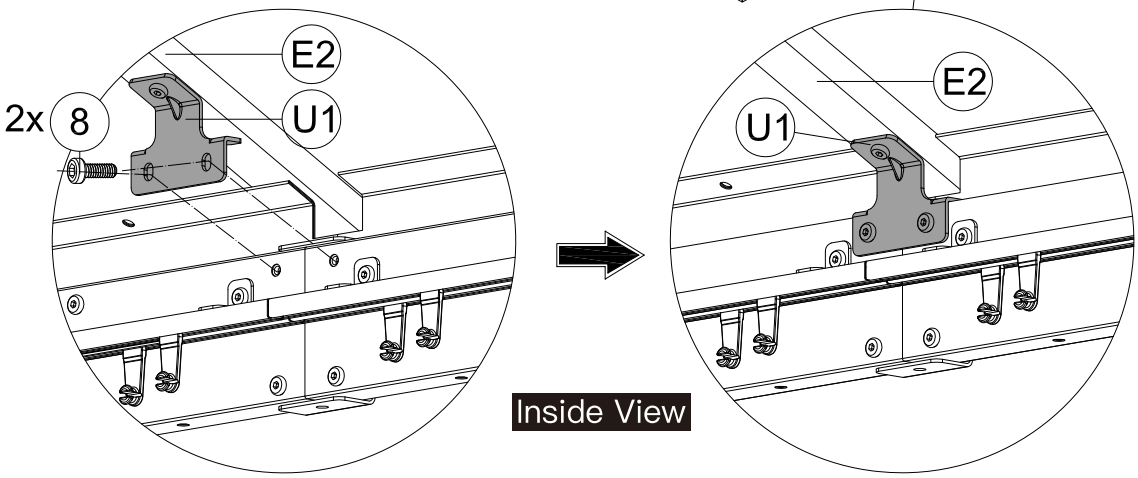

(2) Connect Part #E2 and the Assembled Beam (C&C1) with part #U1. Secure with 2 Bolts #8.

(3) Repeat the above procedures to assemble the opposite side.


S4

1 1x

M6x16


8 12x

(1) Place Part #E2 on Part #S1.
Secure with Bolts #8 (from bottom to top).

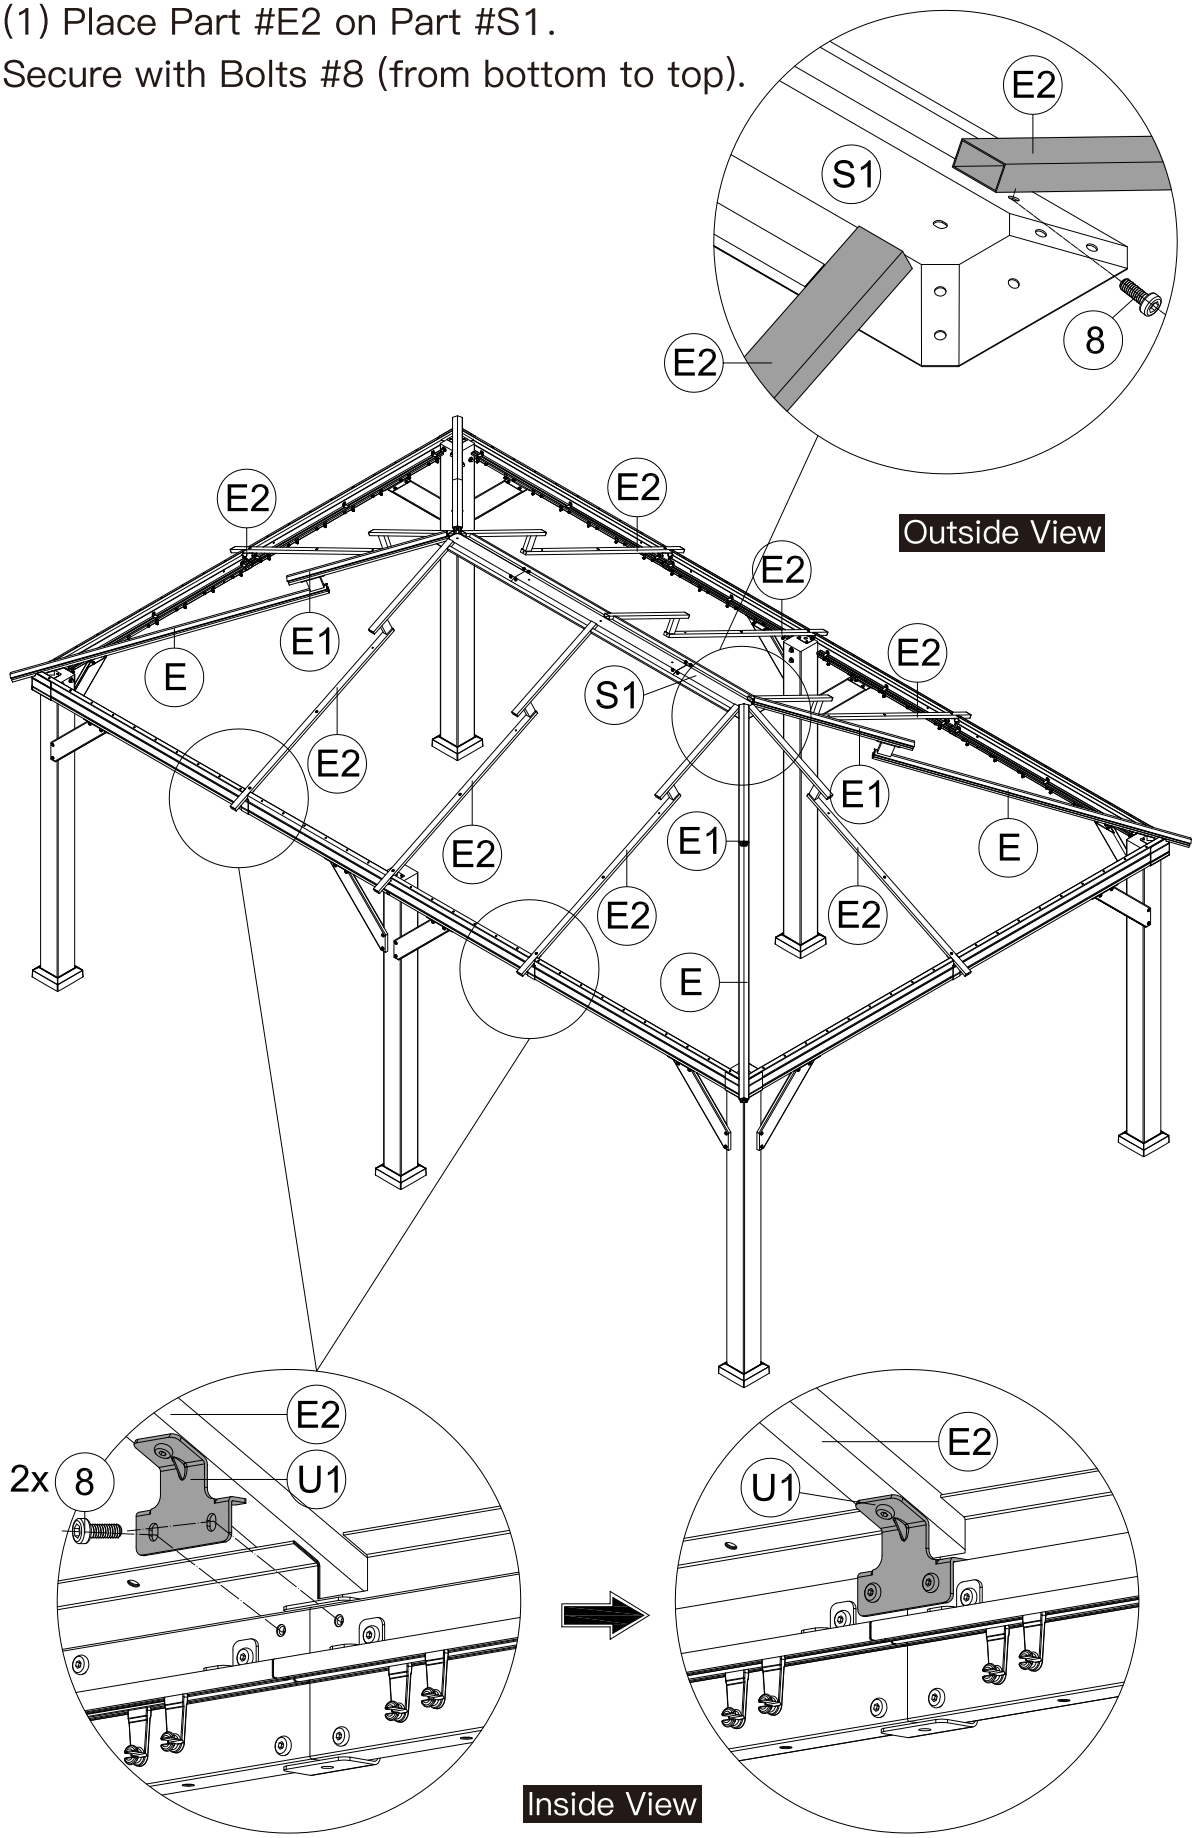


(2) Connect Part #E2 and the Assembled Beam (D1&D2&D) with part #U1. Secure with 2 Bolts #8.

(3) Repeat the above procedures to assemble the opposite side.

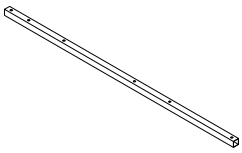

G1 4x



U3 6x

S4

1 1x




M6x10

7 6x




M6x16

8 8x

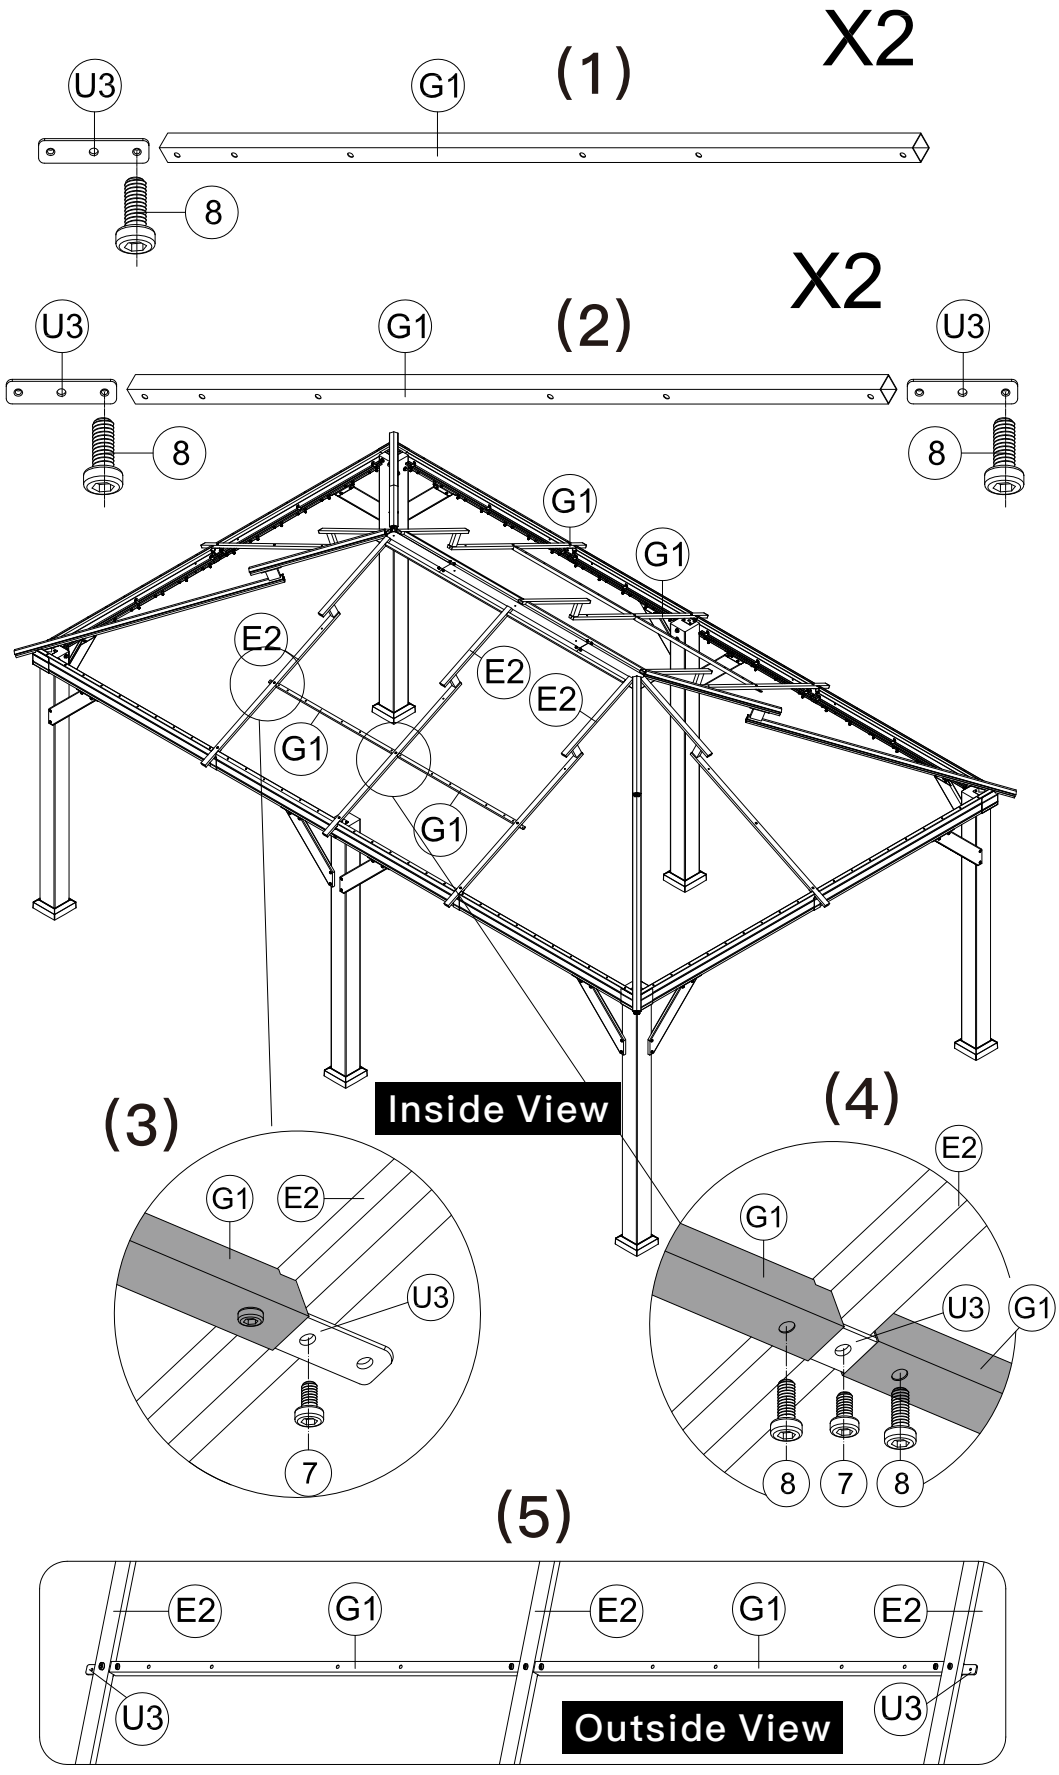

(1)Insert Part #U3 into Part #G1 and secure with Bolt #8.
(2)Insert 2 Part #U3 into Part #G1 and secure with 2 Bolts #8.
(3)Attach Part #G1 and Part #U3 to Part #E2 with Bolt #7.
(4)Attach Part #G1 and Part #U3 to Part #E2 with Bolt #7 and 2 Bolts #8.
(5)Repeat the above procedures to assemble the opposite side.

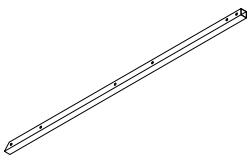

G 4x




S4


1 1x




M6x16


8 4x

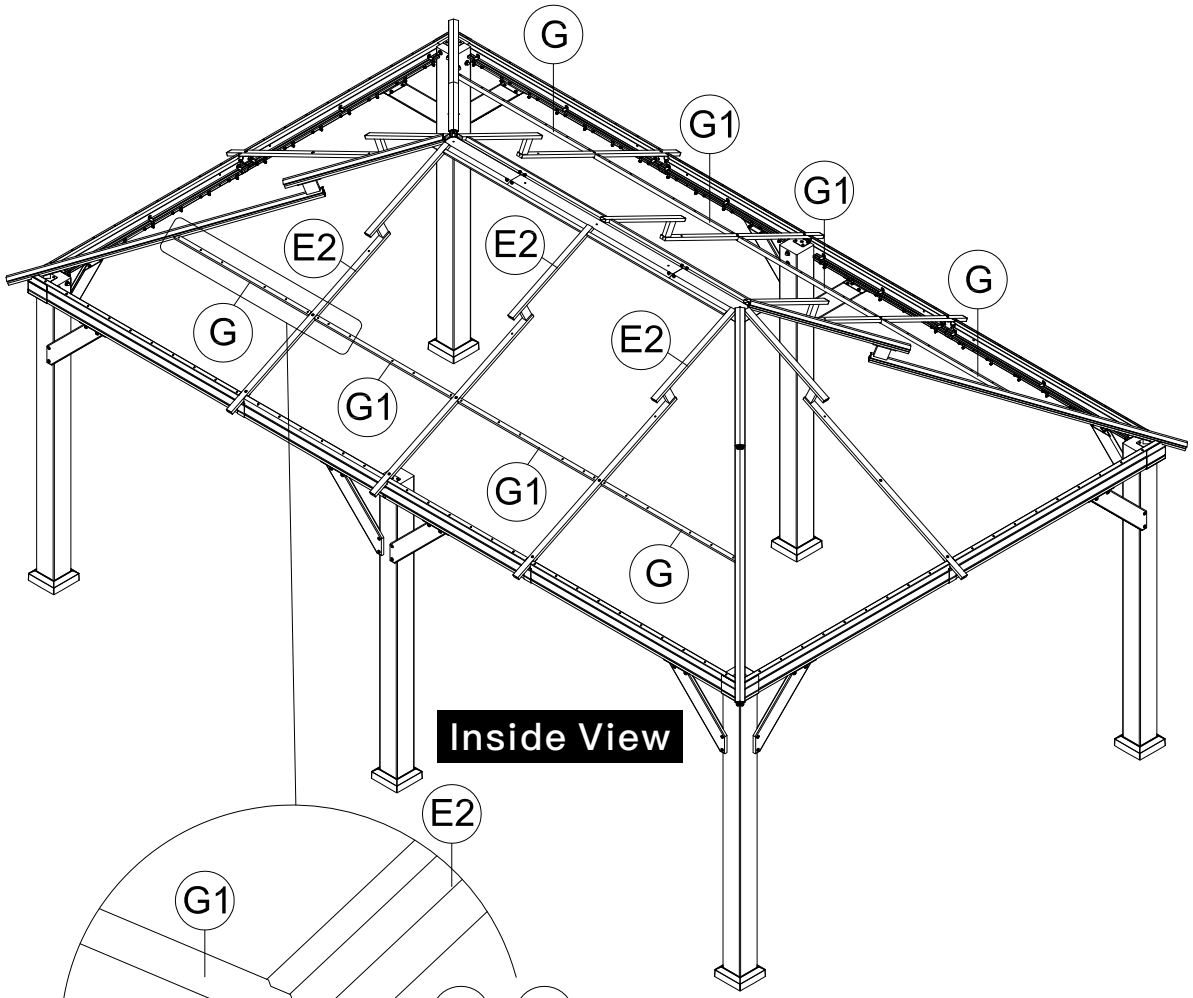

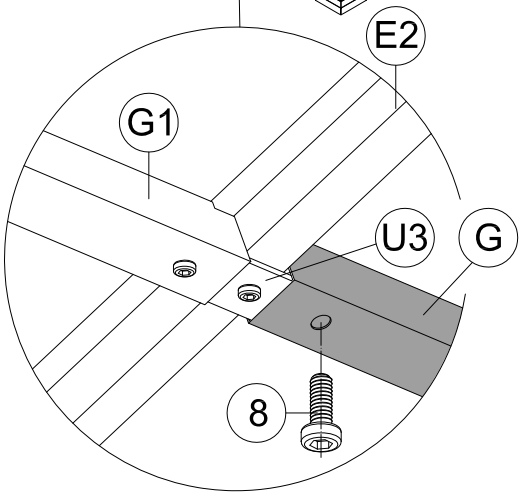


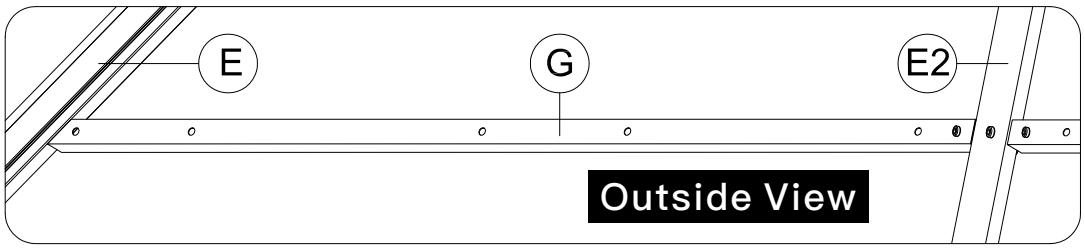

Attach Part #G and Part #U3 to Part #E2 with Bolt #8.
Repeat the above procedures to assemble the opposite side.

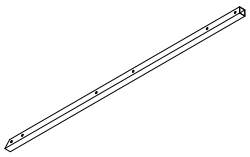

F 4x



U3 2x



S4

1 1x




M6x10


7 2x



M6x16

8 4x

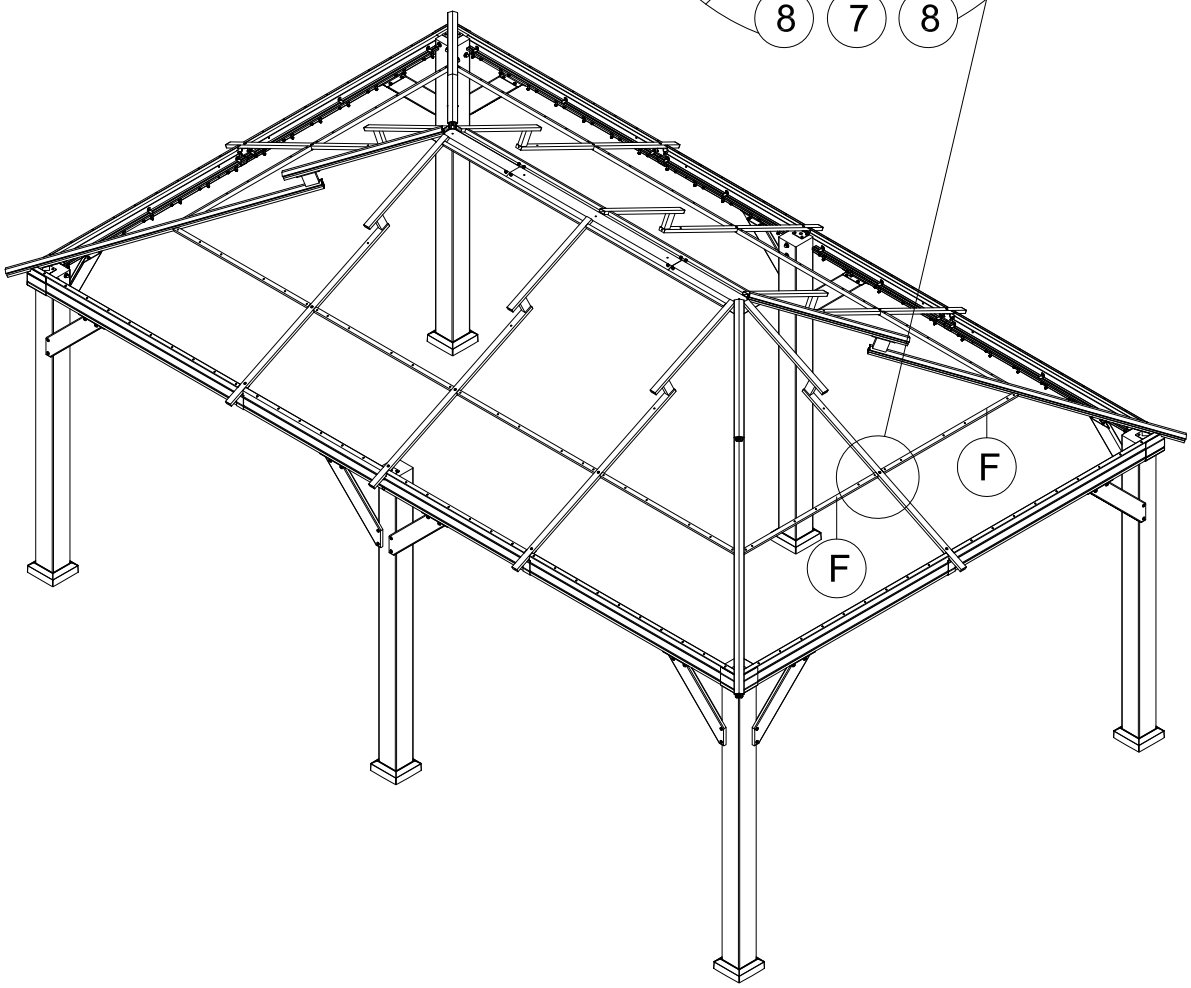

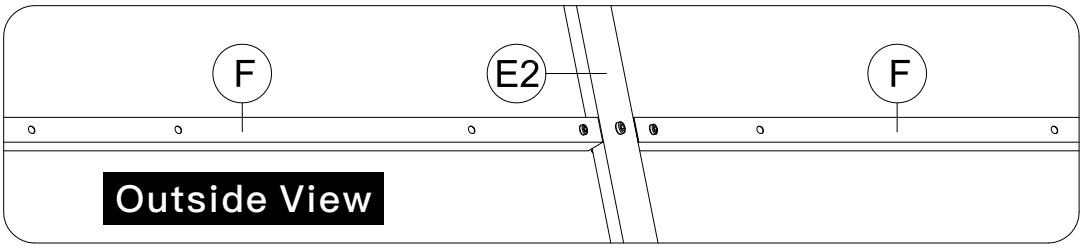

Attach 2 Part #F and Part #U3 to Part #E2 with Bolt #7 and 2 Bolts #8.

Repeat the above procedures to assemble the opposite side.



U2 4x




S4


1 1x



M6x16

8 12x

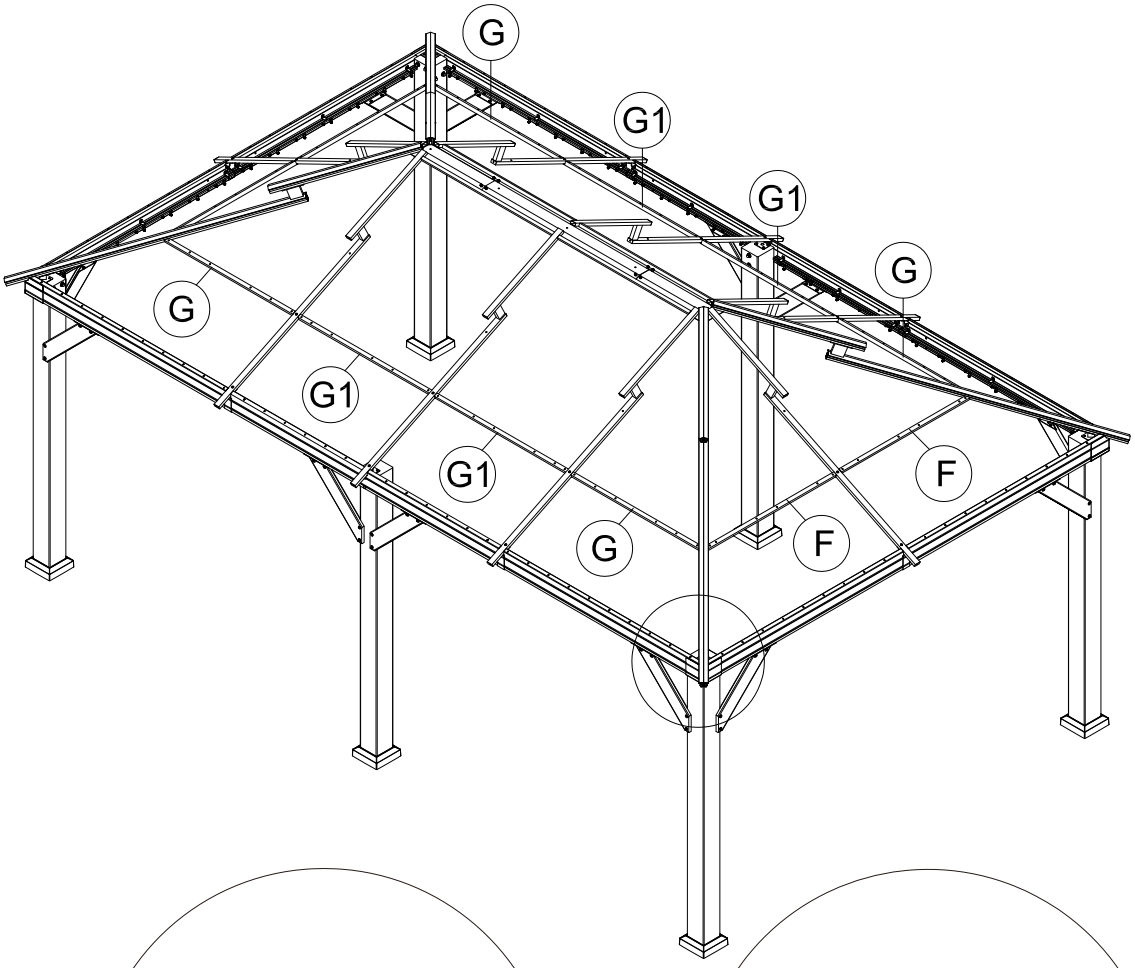

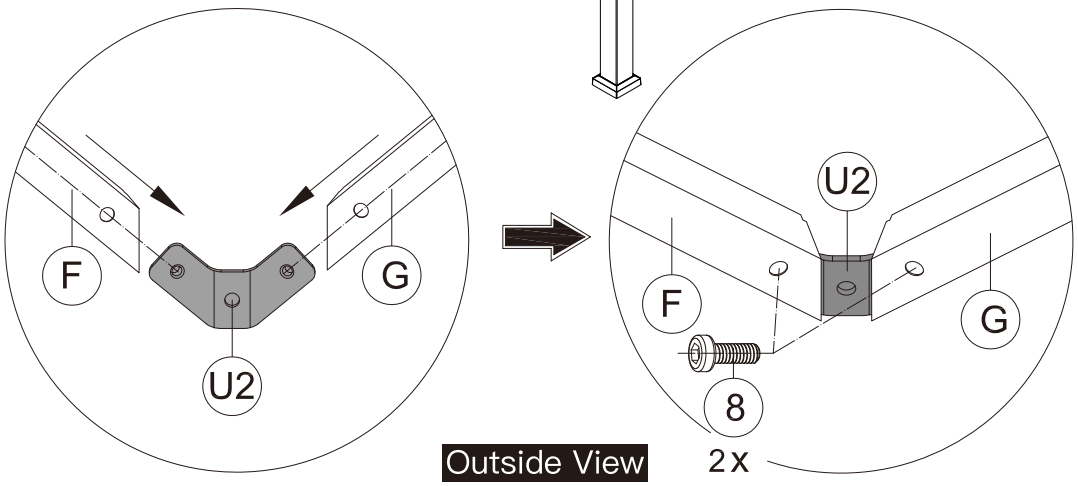


Outside View 2x


(1) Insert Part #U2 into Part #F and Part #G.

(2) Secure with 2 Bolts #8.

(3) Secure them to Part #E with Bolt #8.

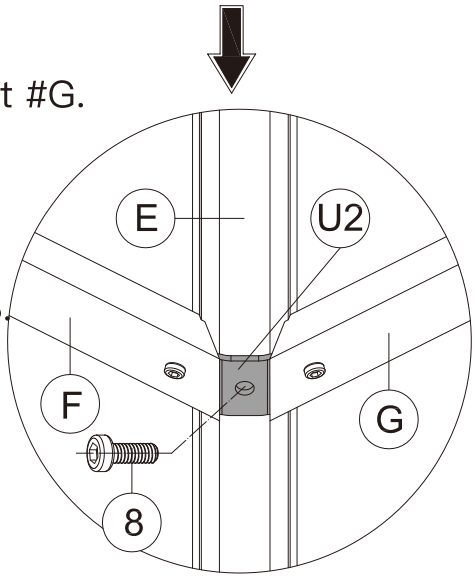


(4) Repeat the above procedures to assemble the other 3 sides.

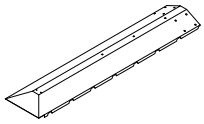

S5 2x



S6 1x

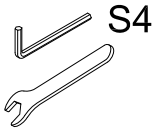

1 1x



M6

5 16x




M6x16


8 16x


Outside Roof Cover Assembly:

Cover Part #S6 on the two Parts #S5,

align the holes and secure with 16 Bolts #8 and nuts #5.

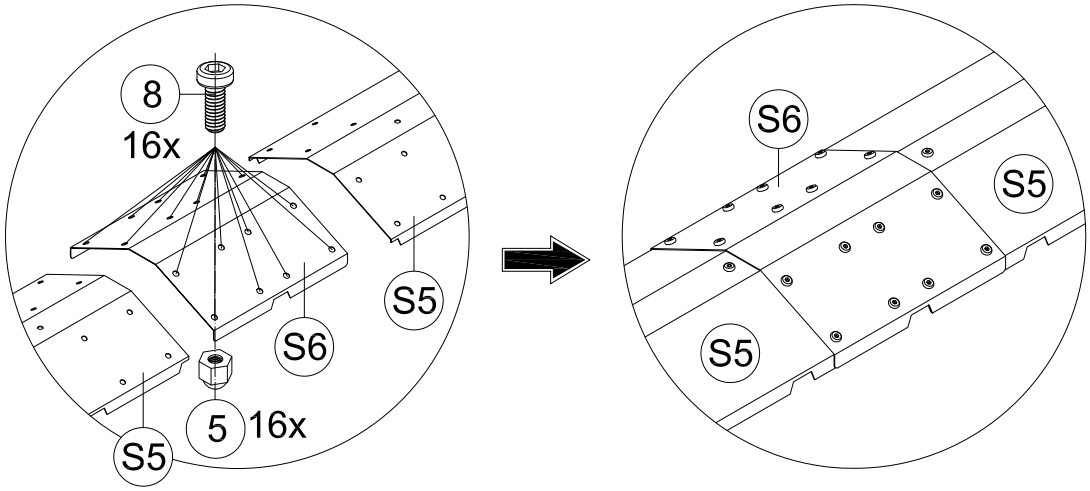

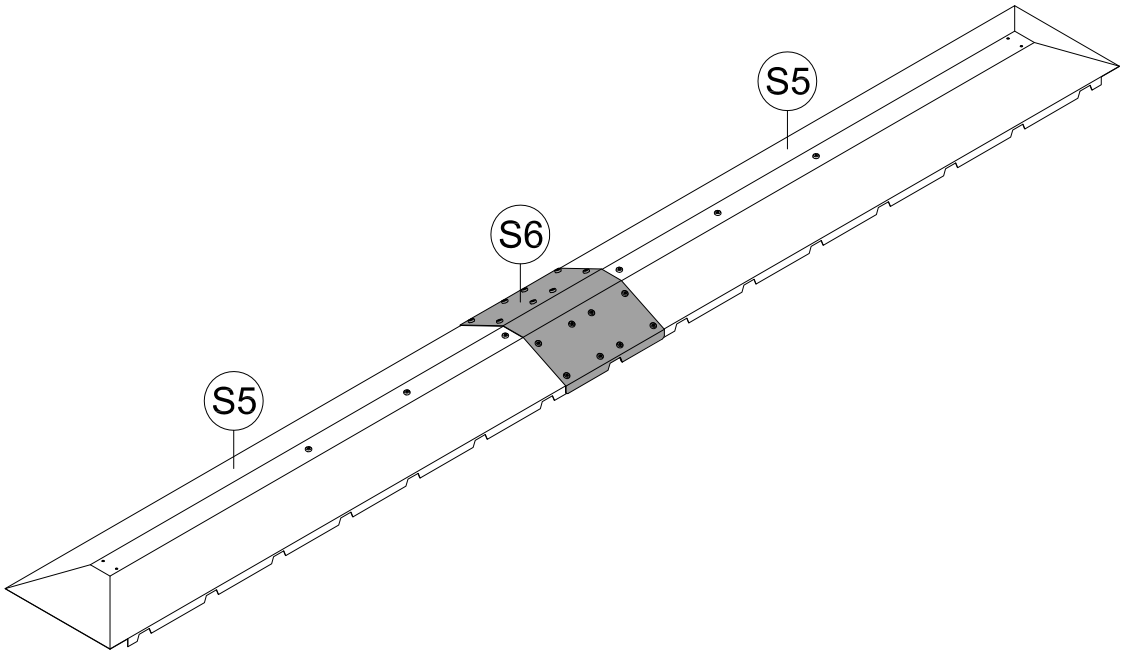

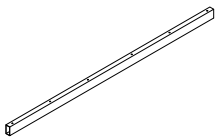


S7 1x




M6x10


7 6x

Place Part #S7 on the bottom of the outside roof cover, and secure with 6 Bolts #7(from outside).

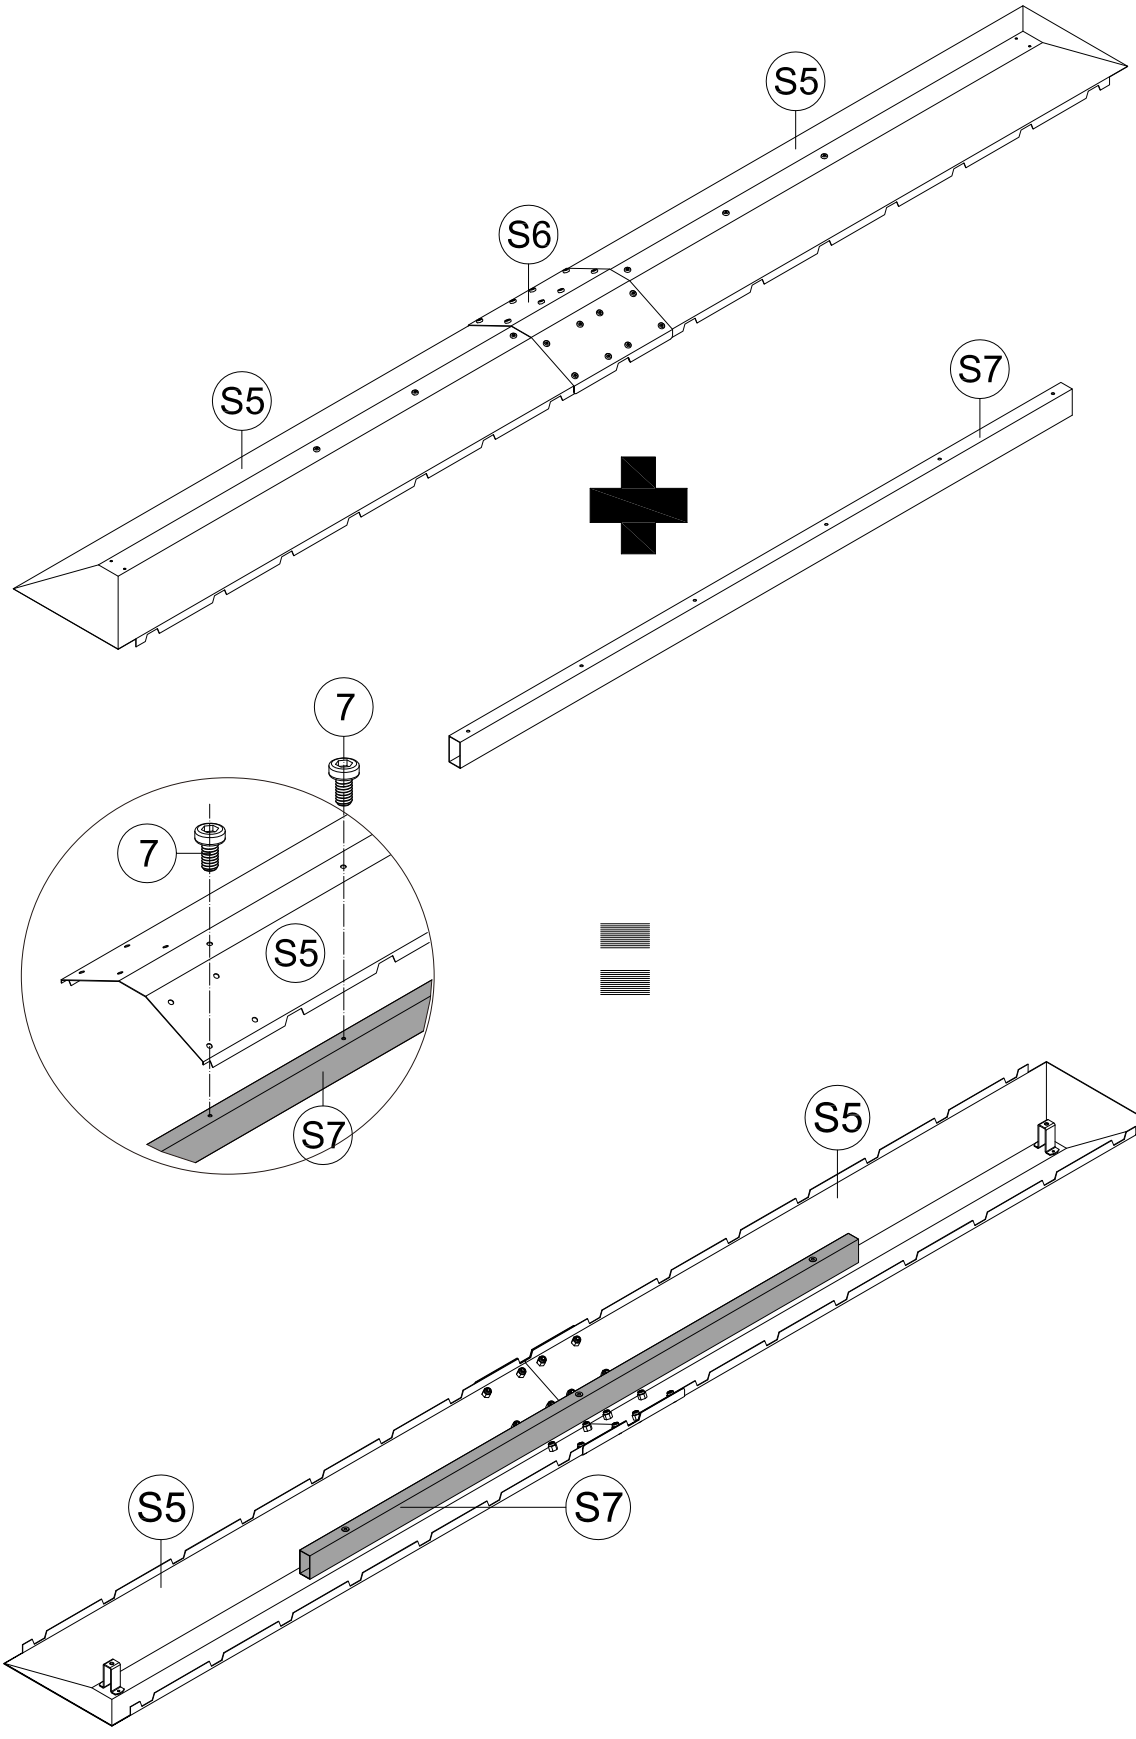


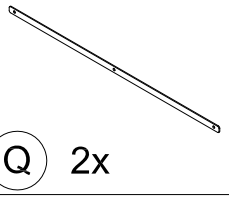


Q 2x

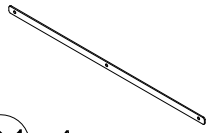

Q1 4x

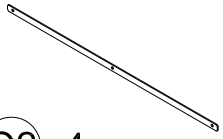



Q2 4x

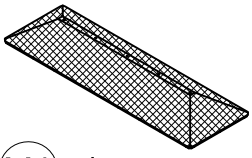


Y4 1x


Insert the Plastic Bar into the Small Mesh.

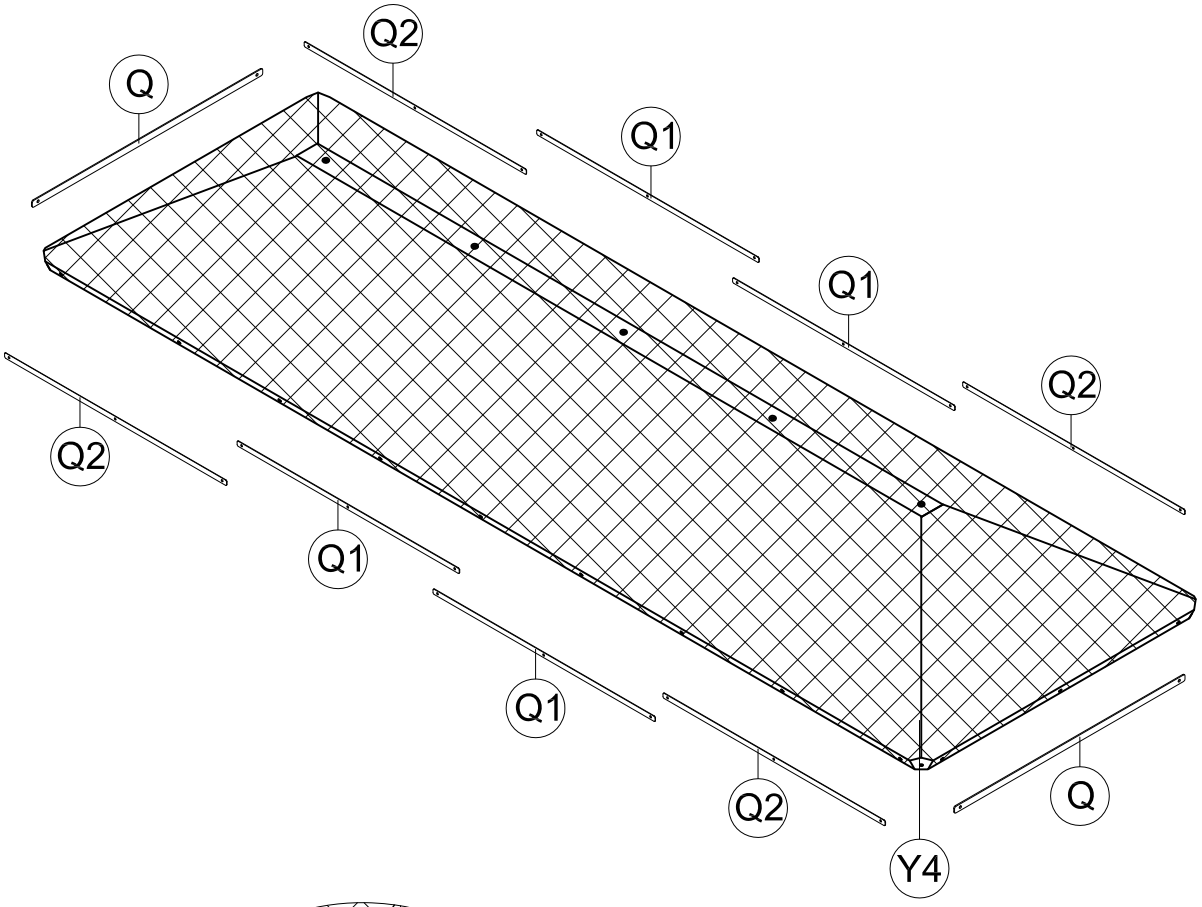


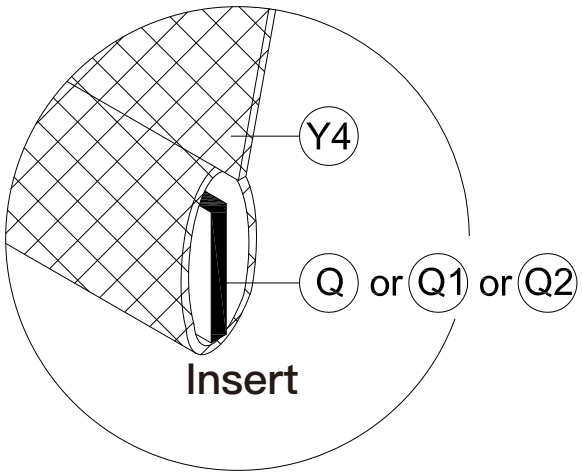




S8 5x

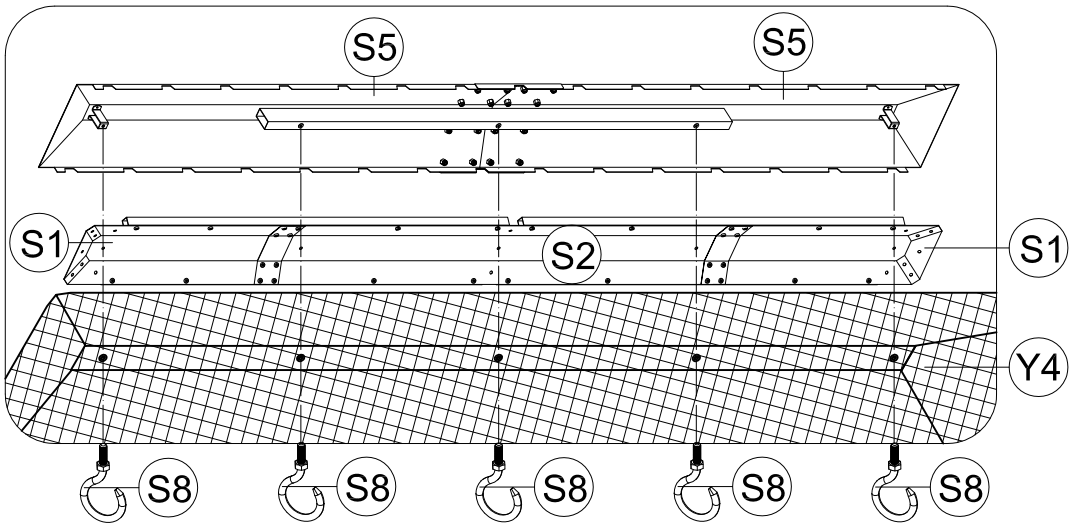

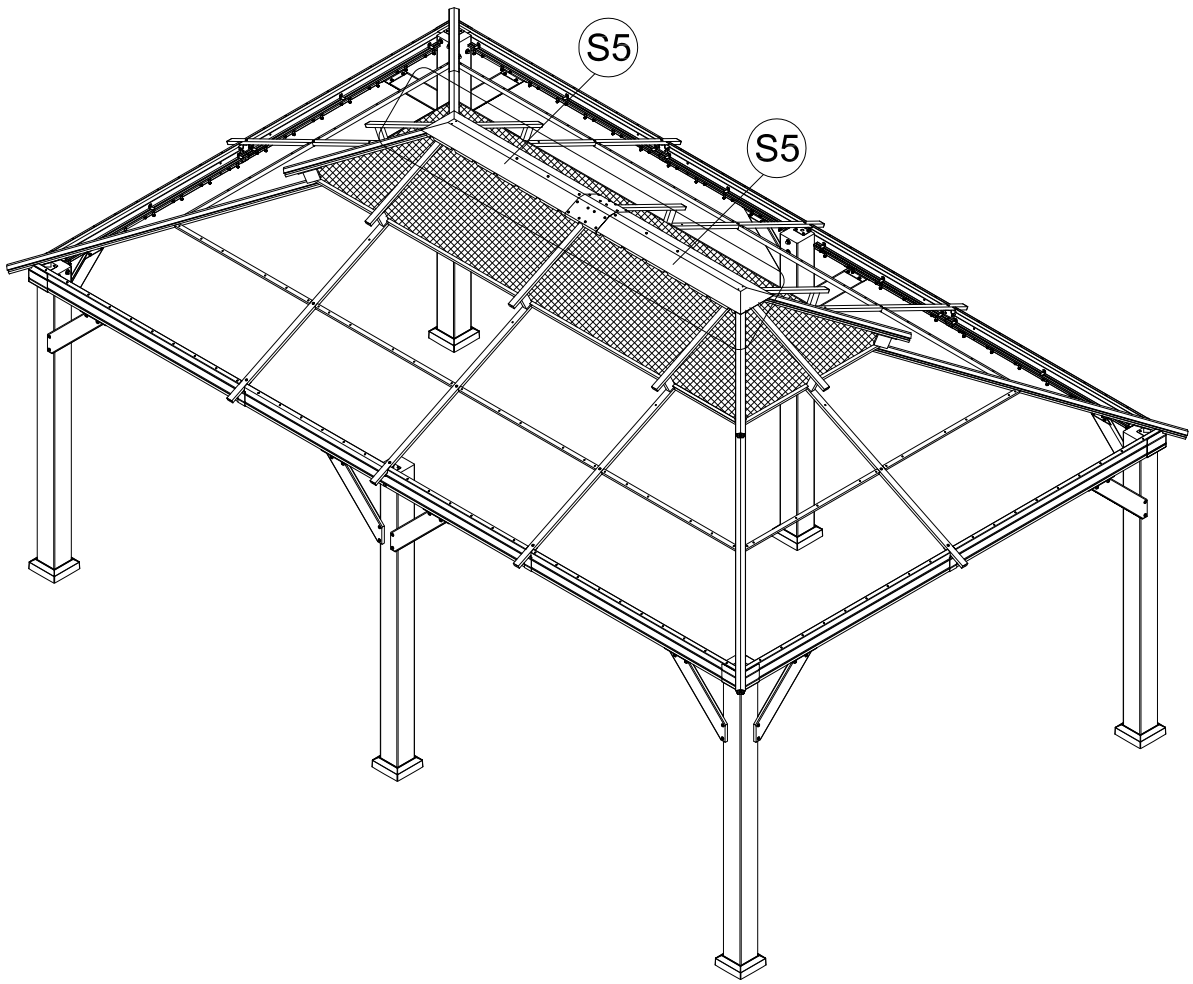

Place the Outside Roof Cover on the inside Roof Cover, align the holes and use 5 Hooks #S8 to secure the Small Mesh #Y4 to the inside Roof Cover (From Bottom to Top).

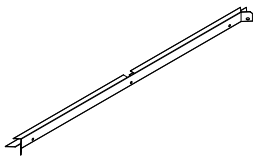

J 2x



S4

1 1x



ST6.3x15

2 2x



M6


5 4x




M6x16

8 4x


Use screw #2 to assemble the plastic bar #Q (in the small mesh #Y4) and finishing bar #J to the middle roof tube #E2.

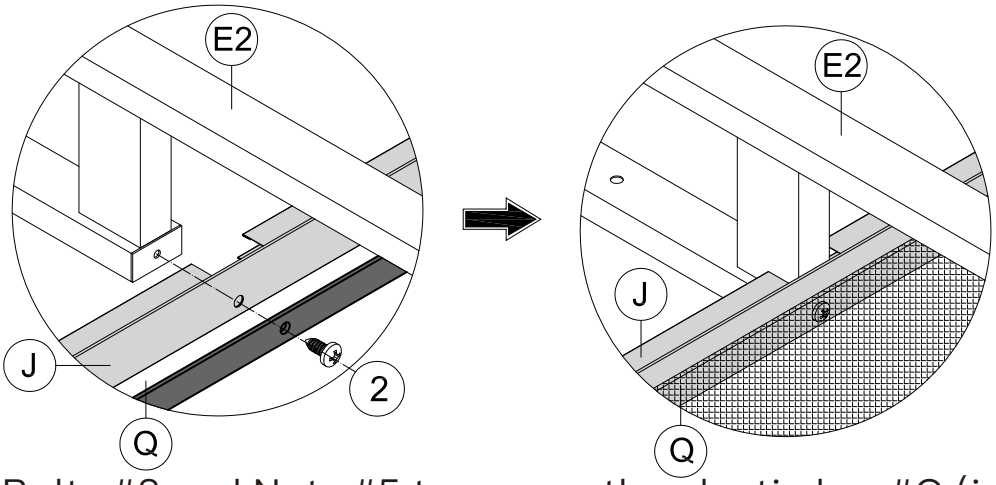


Use Bolts #8 and Nuts #5 to secure the plastic bar #Q (in the small mesh #Y4) with finishing bar #J.

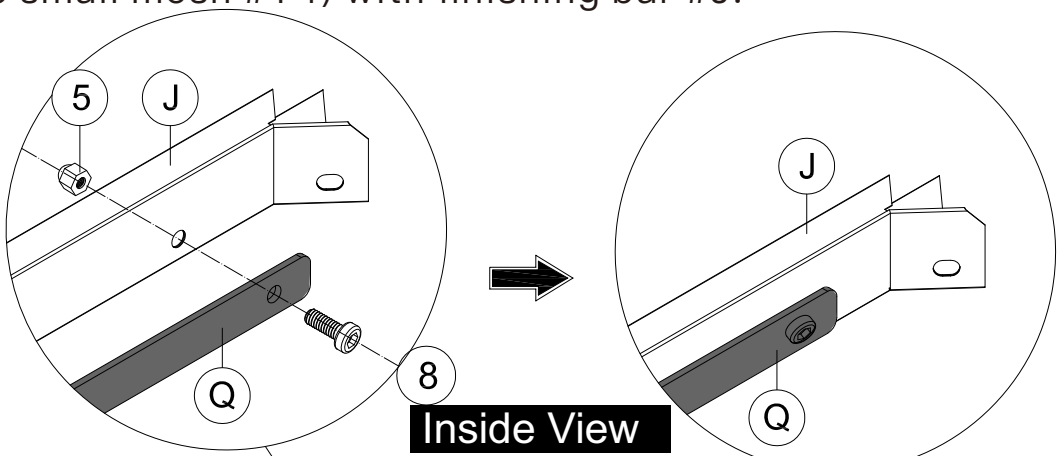

Inside View

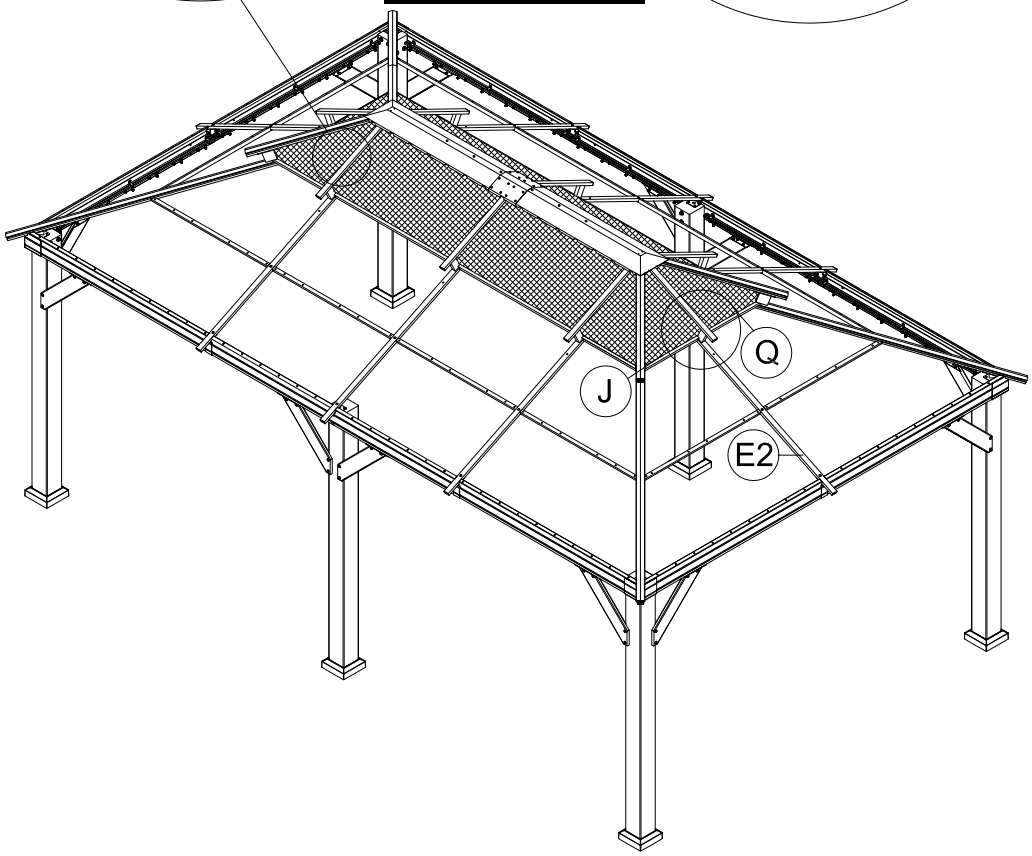


⚠ Please do not pull plastic bar out when installing it with #J on the middle roof tube #E2.



J1 2x



J2 2x

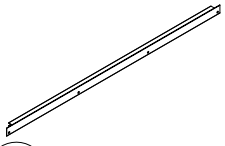

J3 4x



1 1x



ST6.3x15

2 6x



M6


5 12x




M6x16


8 12x


38

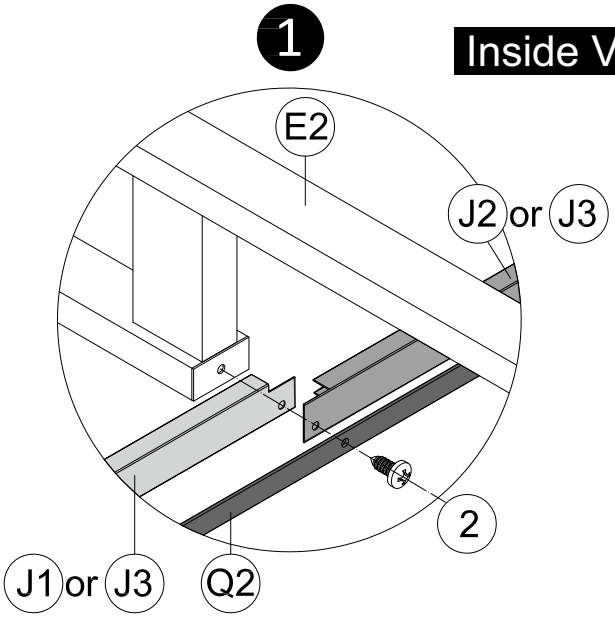


Inside View

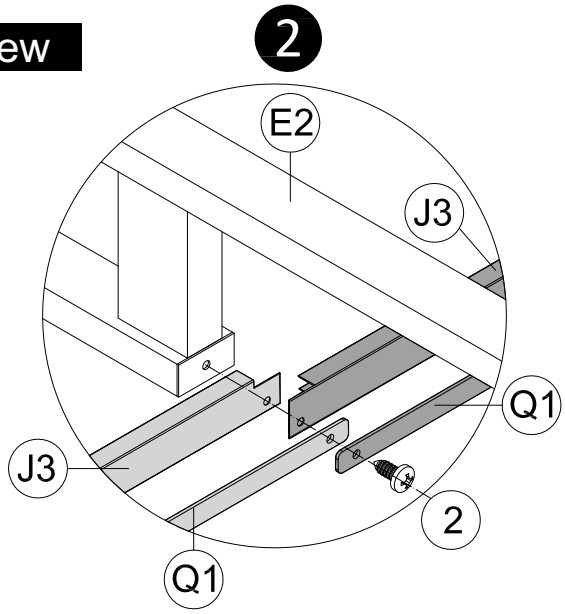

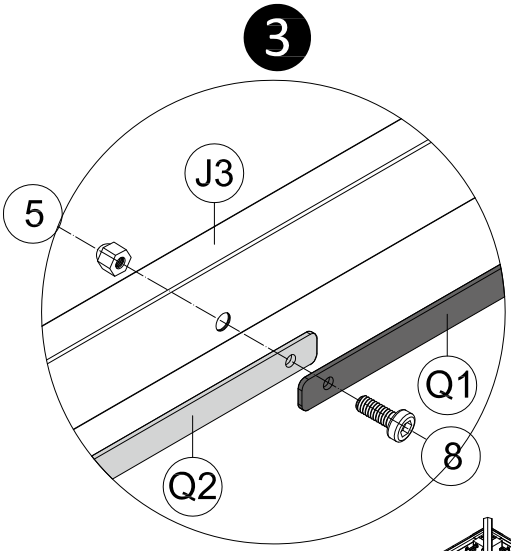

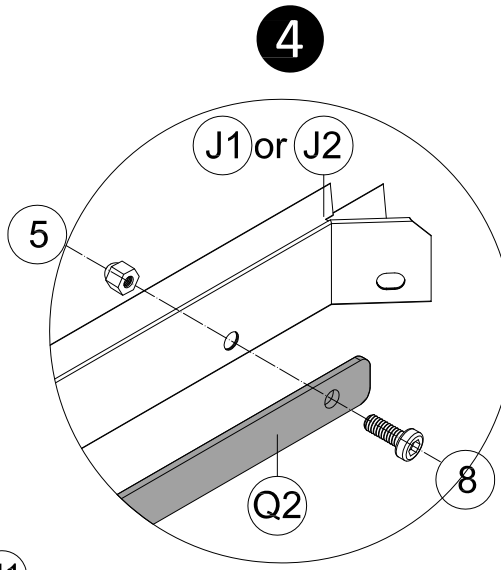

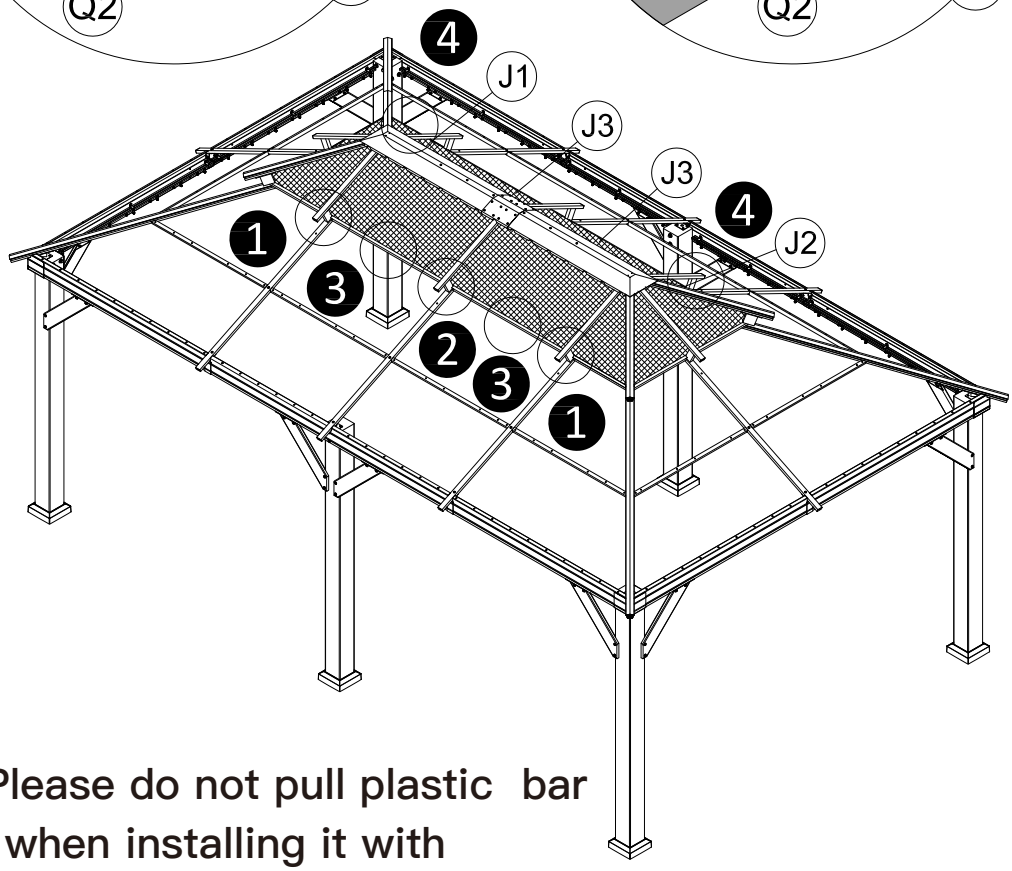

⚠ Please do not pull plastic bar out when installing it with finishing bar.




X3 4x




ST6.3x15

2 4x

Use 4 Screws #2 to secure the small mesh, finishing end #X3 and finishing bar to the corner roof tube #E.

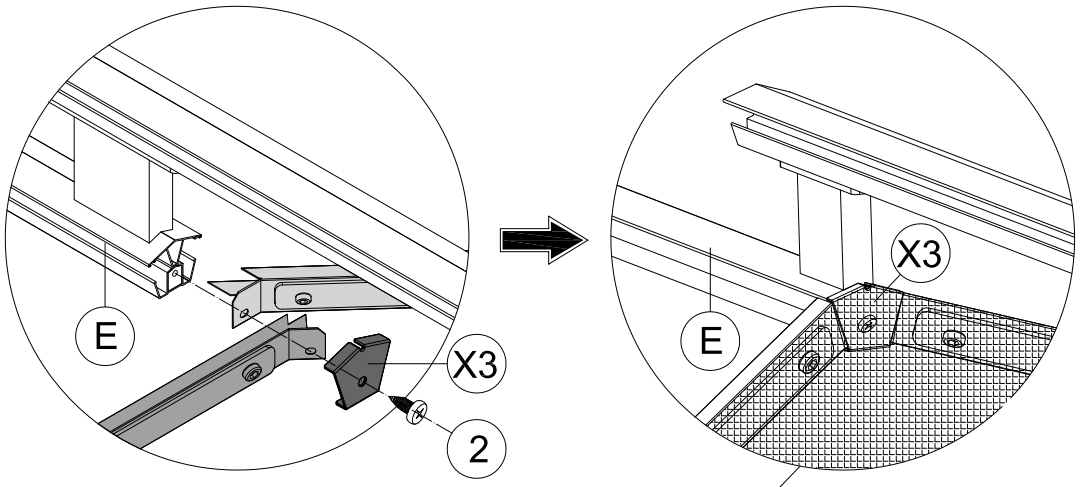


Inside View

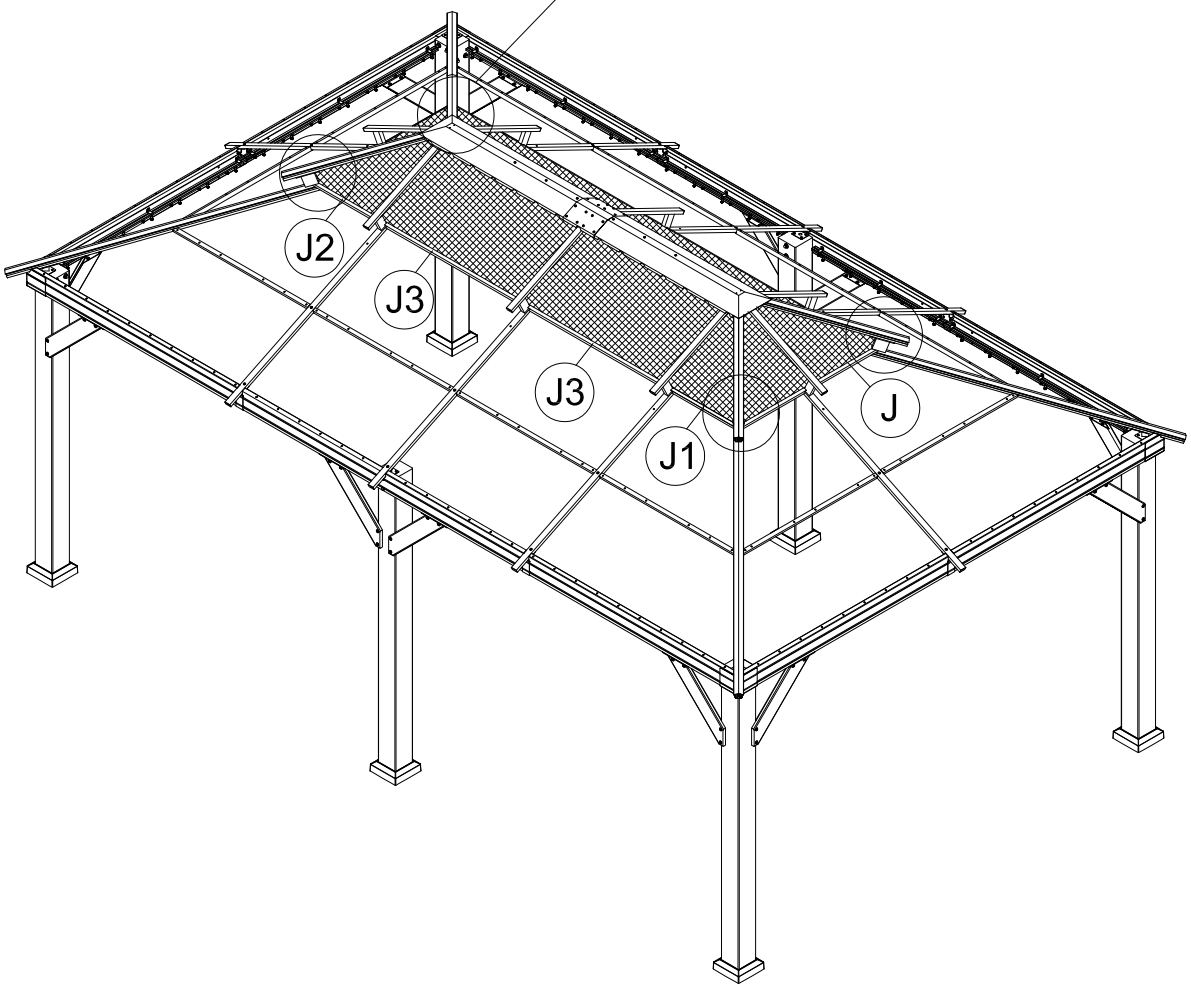


Cover Part #Z, #Z1 & #Z2 to Roof Panels.



L1 2x

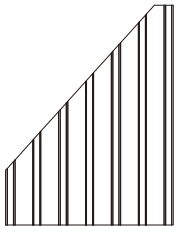

L2 2x

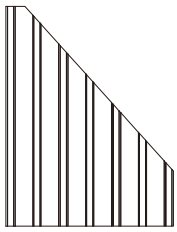

L3 2x



L4 2x




Z 8x





Z1 4x




Z2 4x

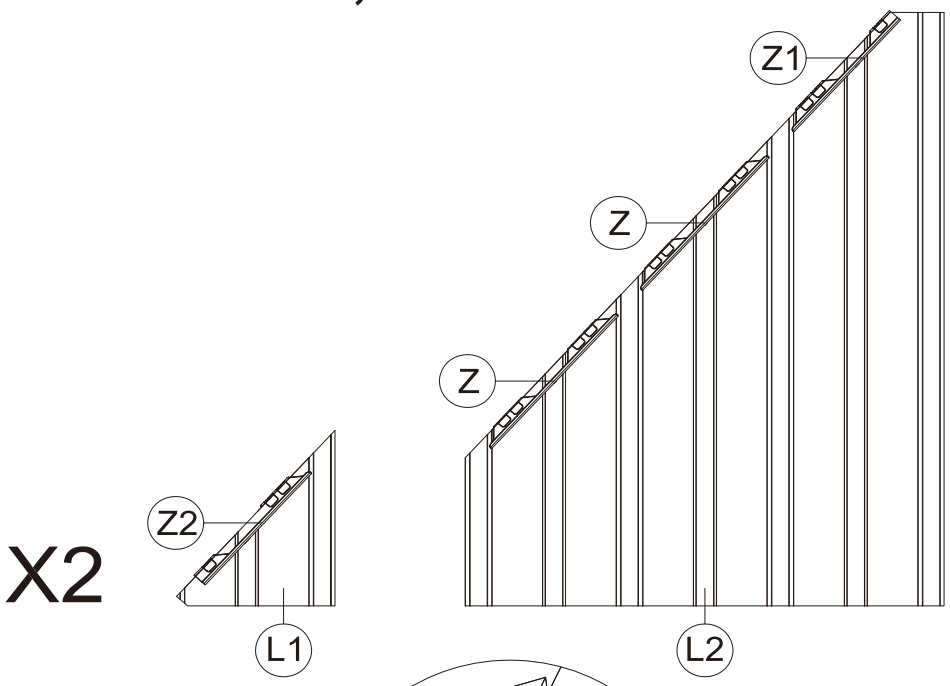

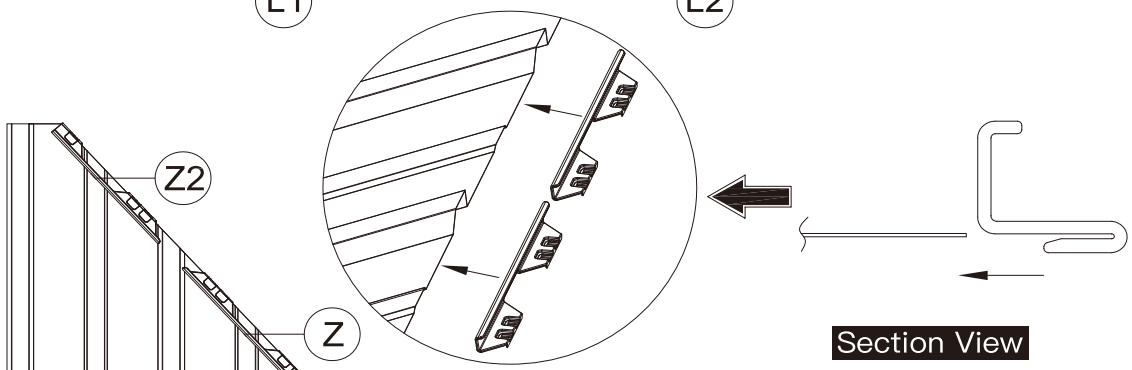

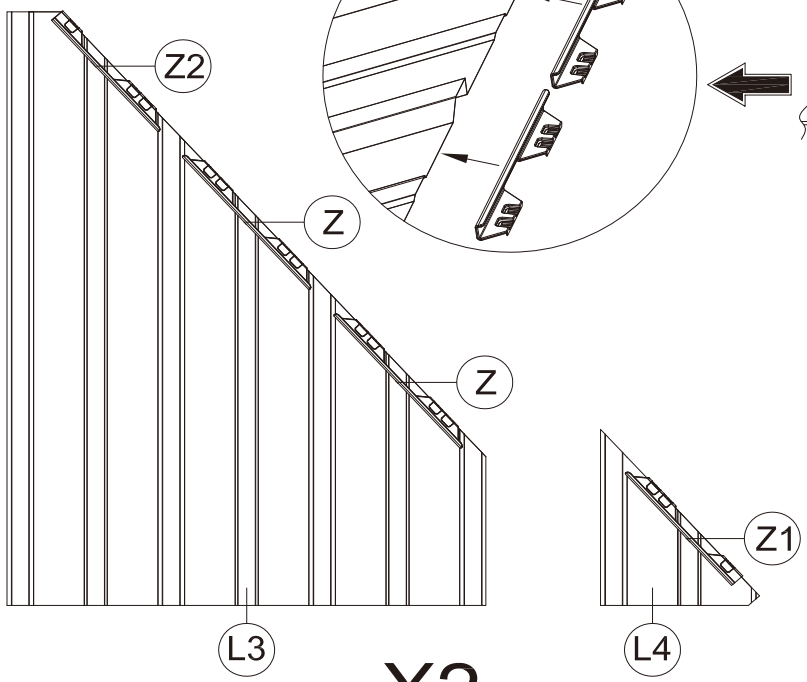

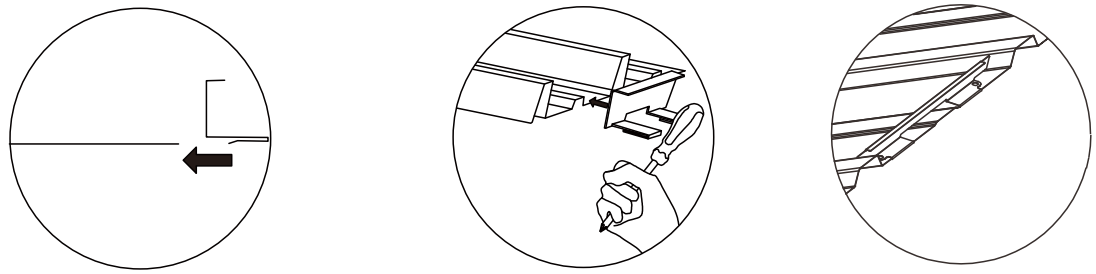


Attach Z/Z1/Z2/Z3/Z4 by lightly tapping with a screwdriver.

⚠ Please install Plastic Clips in strict accordance with the instructions.


Cover Part #Z, #Z3 & #Z4 to Roof Panels.




N1 2x



N2 2x



N3 8x



N4 2x



N5 2x



Z 12x





Z3 2x




Z4 2x


X2

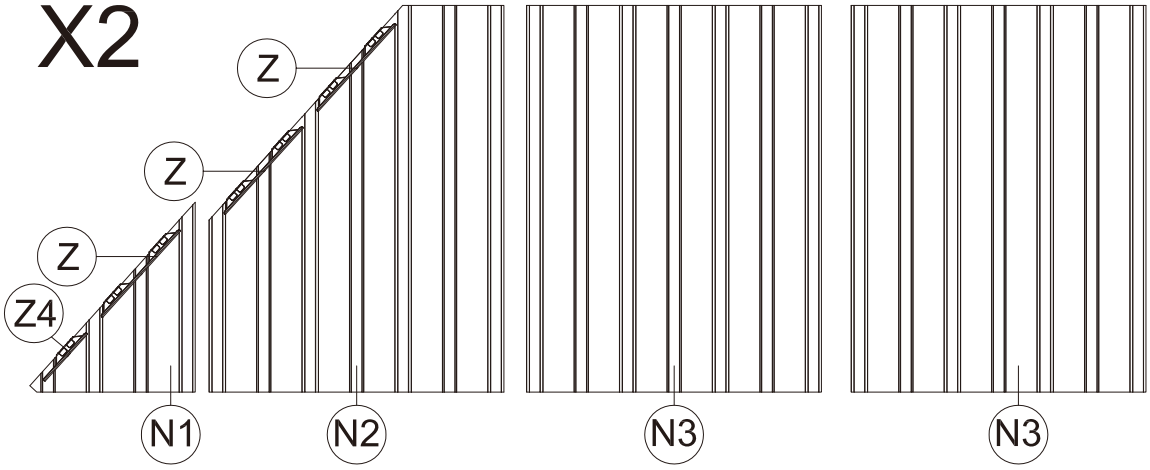

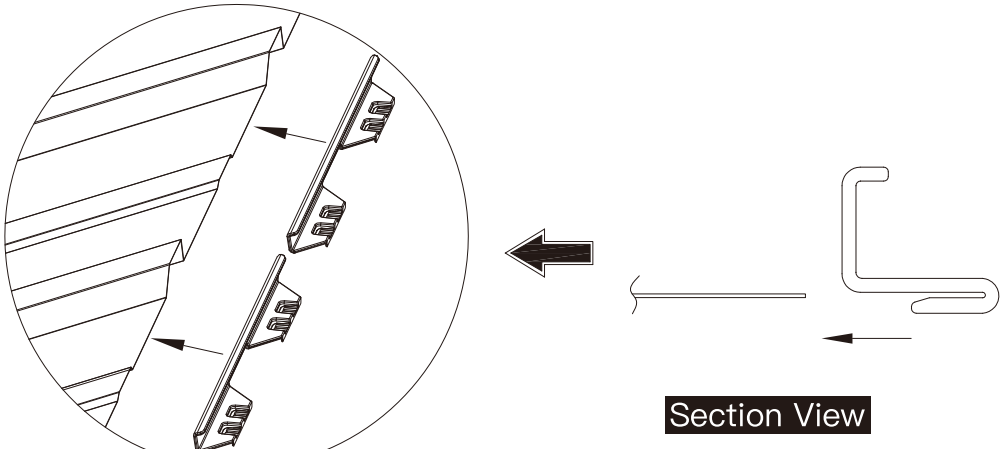


Section View

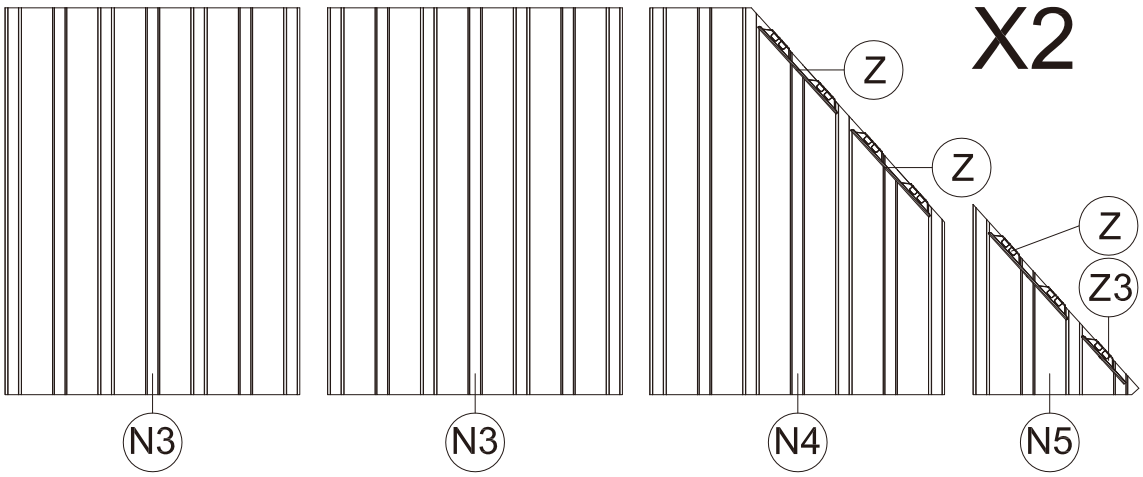




H1 2x




H2 2x


ATTENTION: The bigger roof panel need to cover the smaller one.

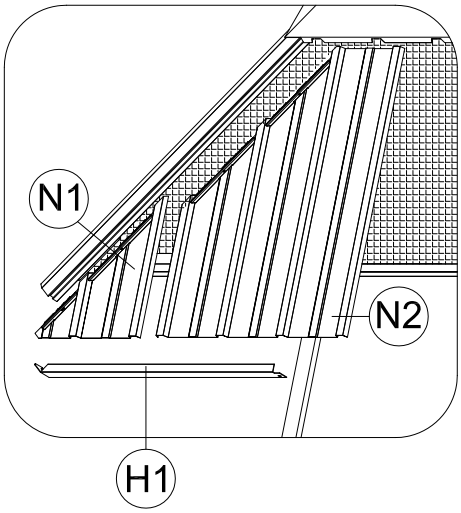


(1) Insert Part #N1 and Part #N2 into the frame; attach Part #H1 to Part #E2, securing with Screw #2.

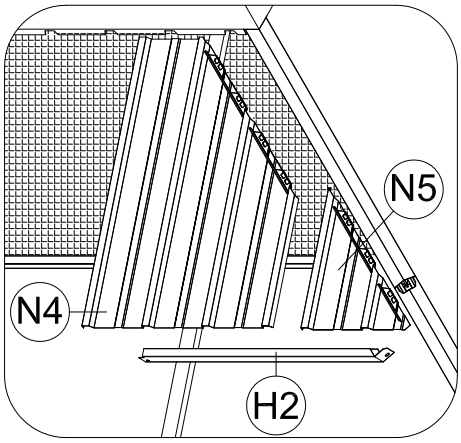


(2) Insert Part #N5 and Part #N4 into the frame; attach Part #H2 to Part #E, securing with Screw #2.

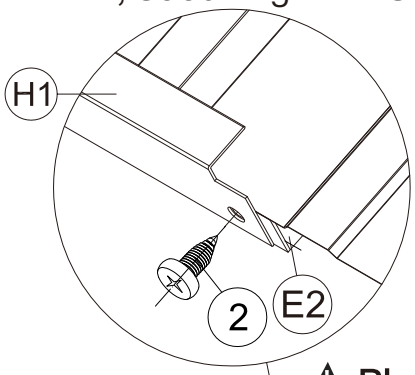


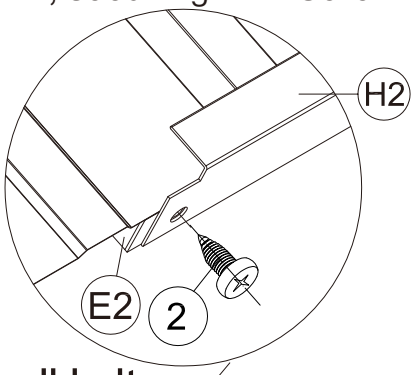

⚠ **Please don't tighten all bolts.**

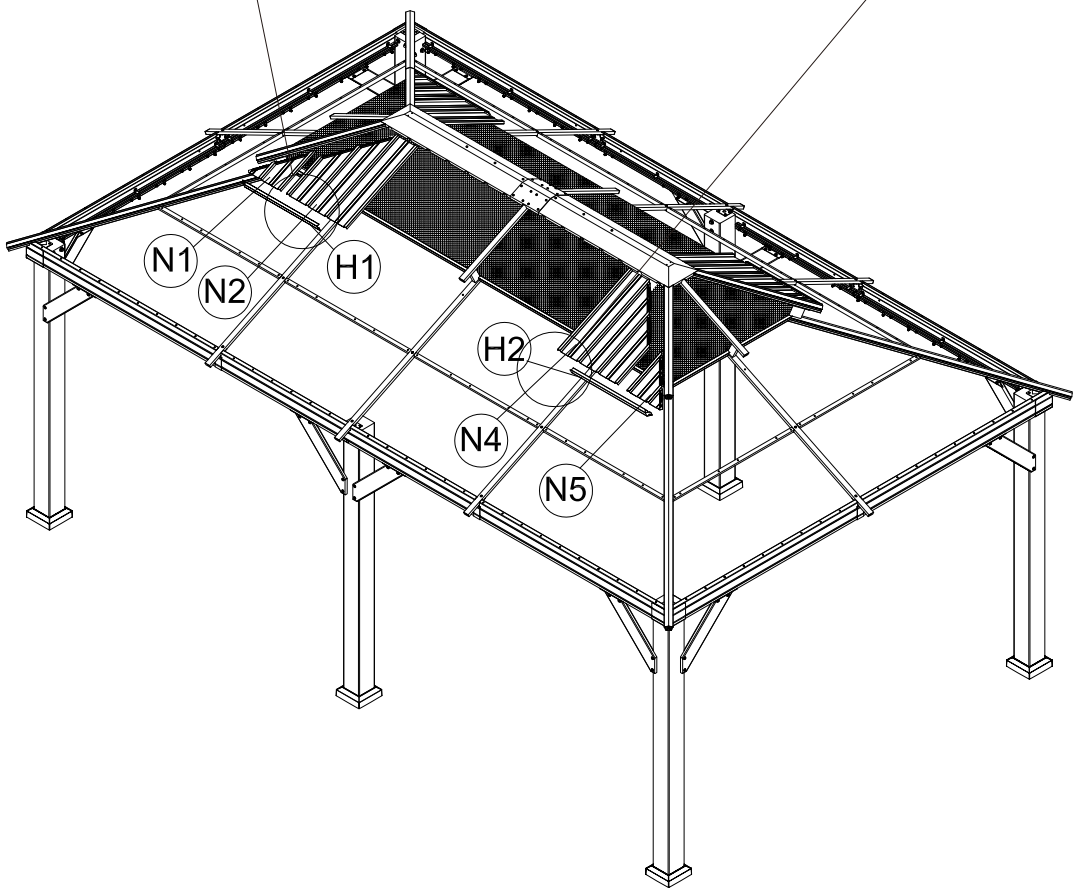

(3) Repeat the above procedures to assemble the opposite side.

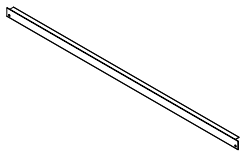

H3 4x




X2 6x




ST6.3x15

2 6x


(1) Insert 4 Part #N3 into the frame.

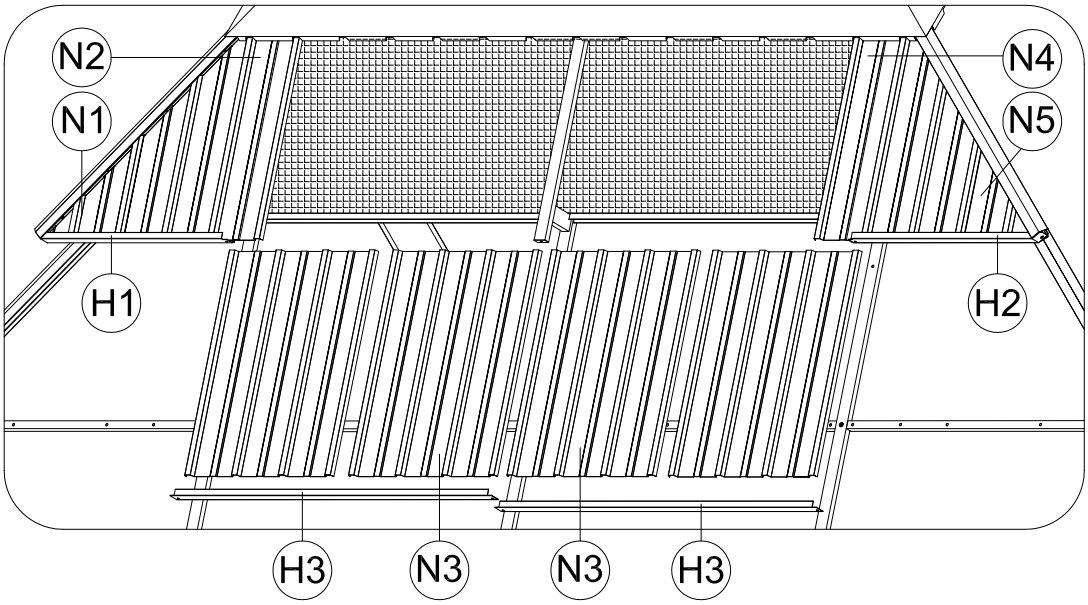

⚠ When installing Part #H1/H2 & Part #H3, you should unscrew the screw #2 that have not been tightened.

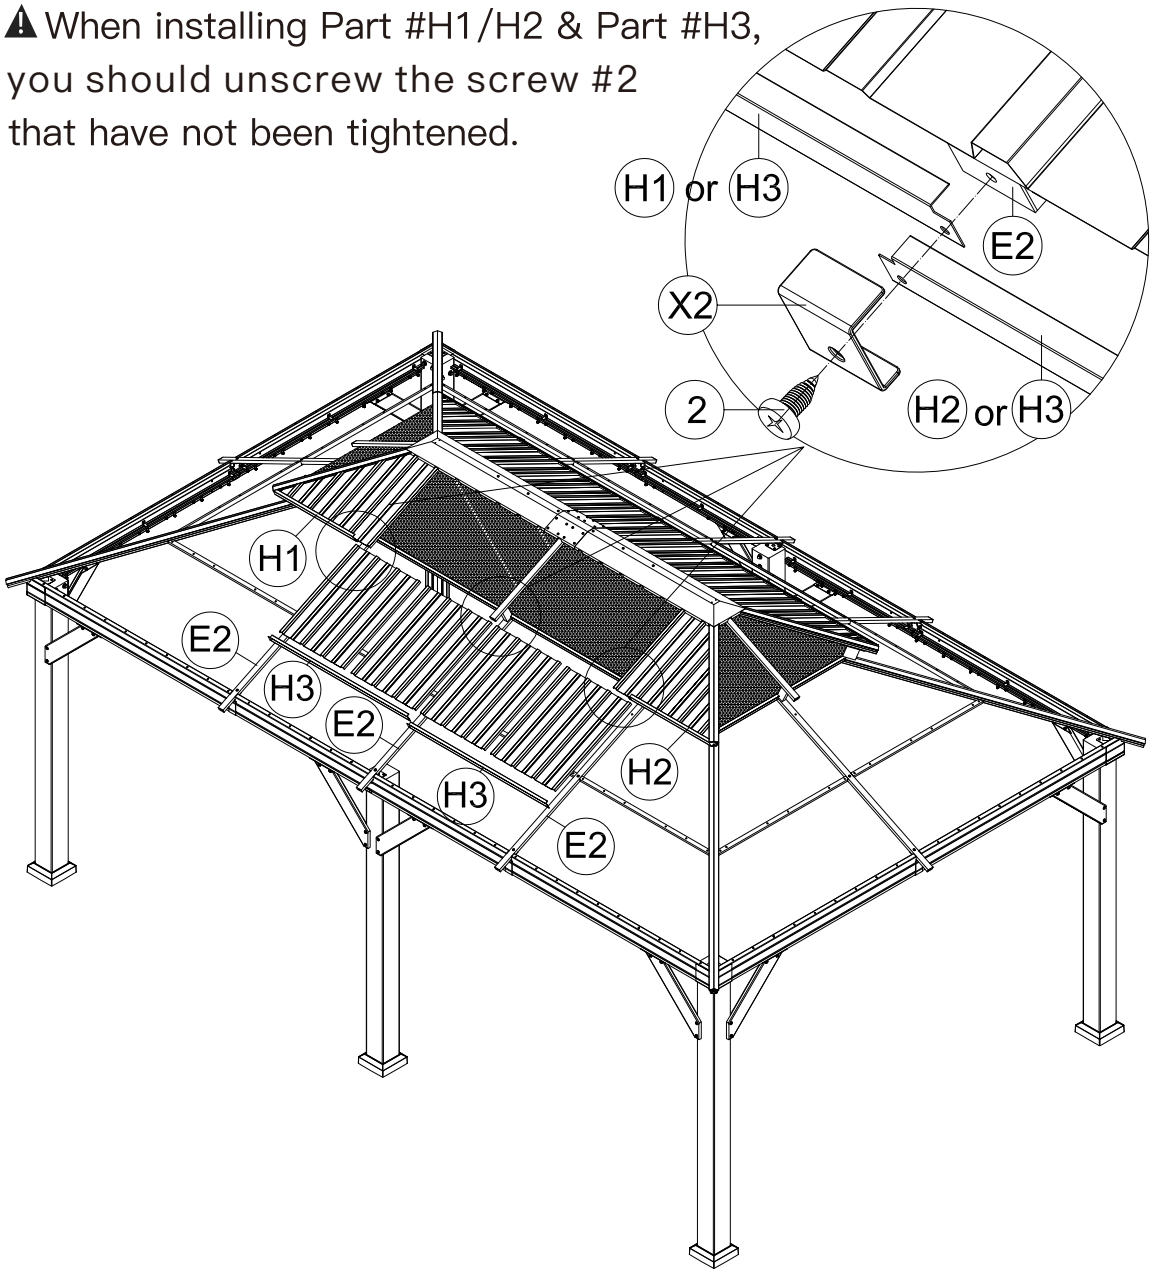

Repeat the above procedures to assemble the opposite side.

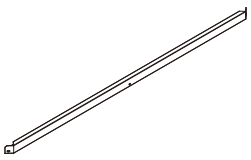


H 2x




ST6.3x15

2 2x

ATTENTION: The bigger roof panel need to cover the smaller one.

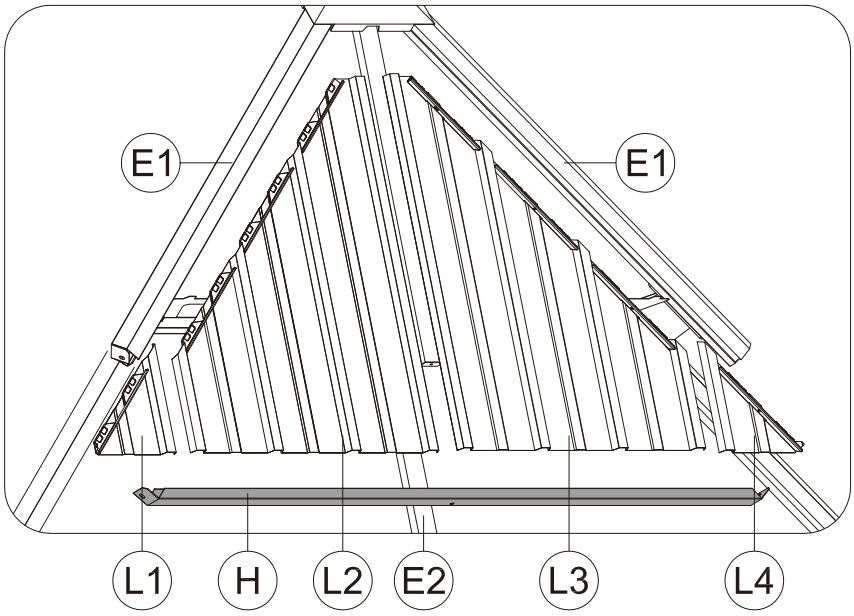



(1) Insert Part #L1 and Part #L2 into the frame.



(2) Insert Part #L4 and Part #L3 into the frame.



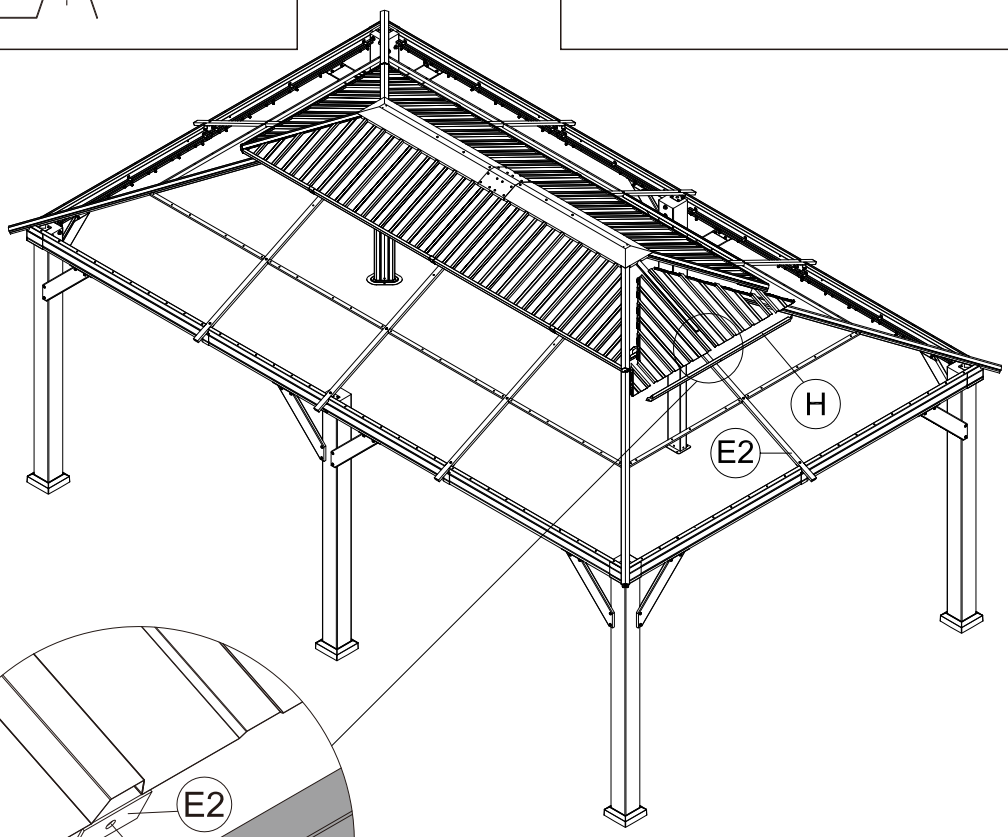

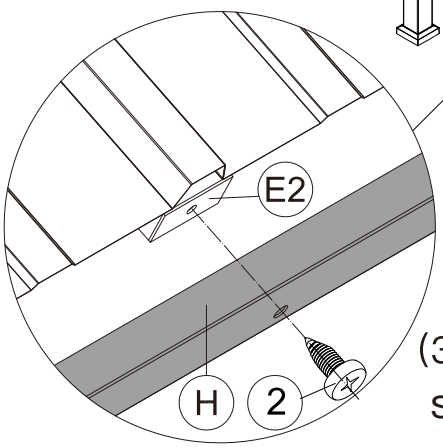

(3) Attach Part #H to Part #E2, securing with Screw #2.

(4) Repeat the above procedures to assemble the opposite side.




X3 4x



ST6.3x15

2 4x

(1) Place Part #H and Part #H2 on Part #E1;
put on Part #X3 and secure with Screw #2.

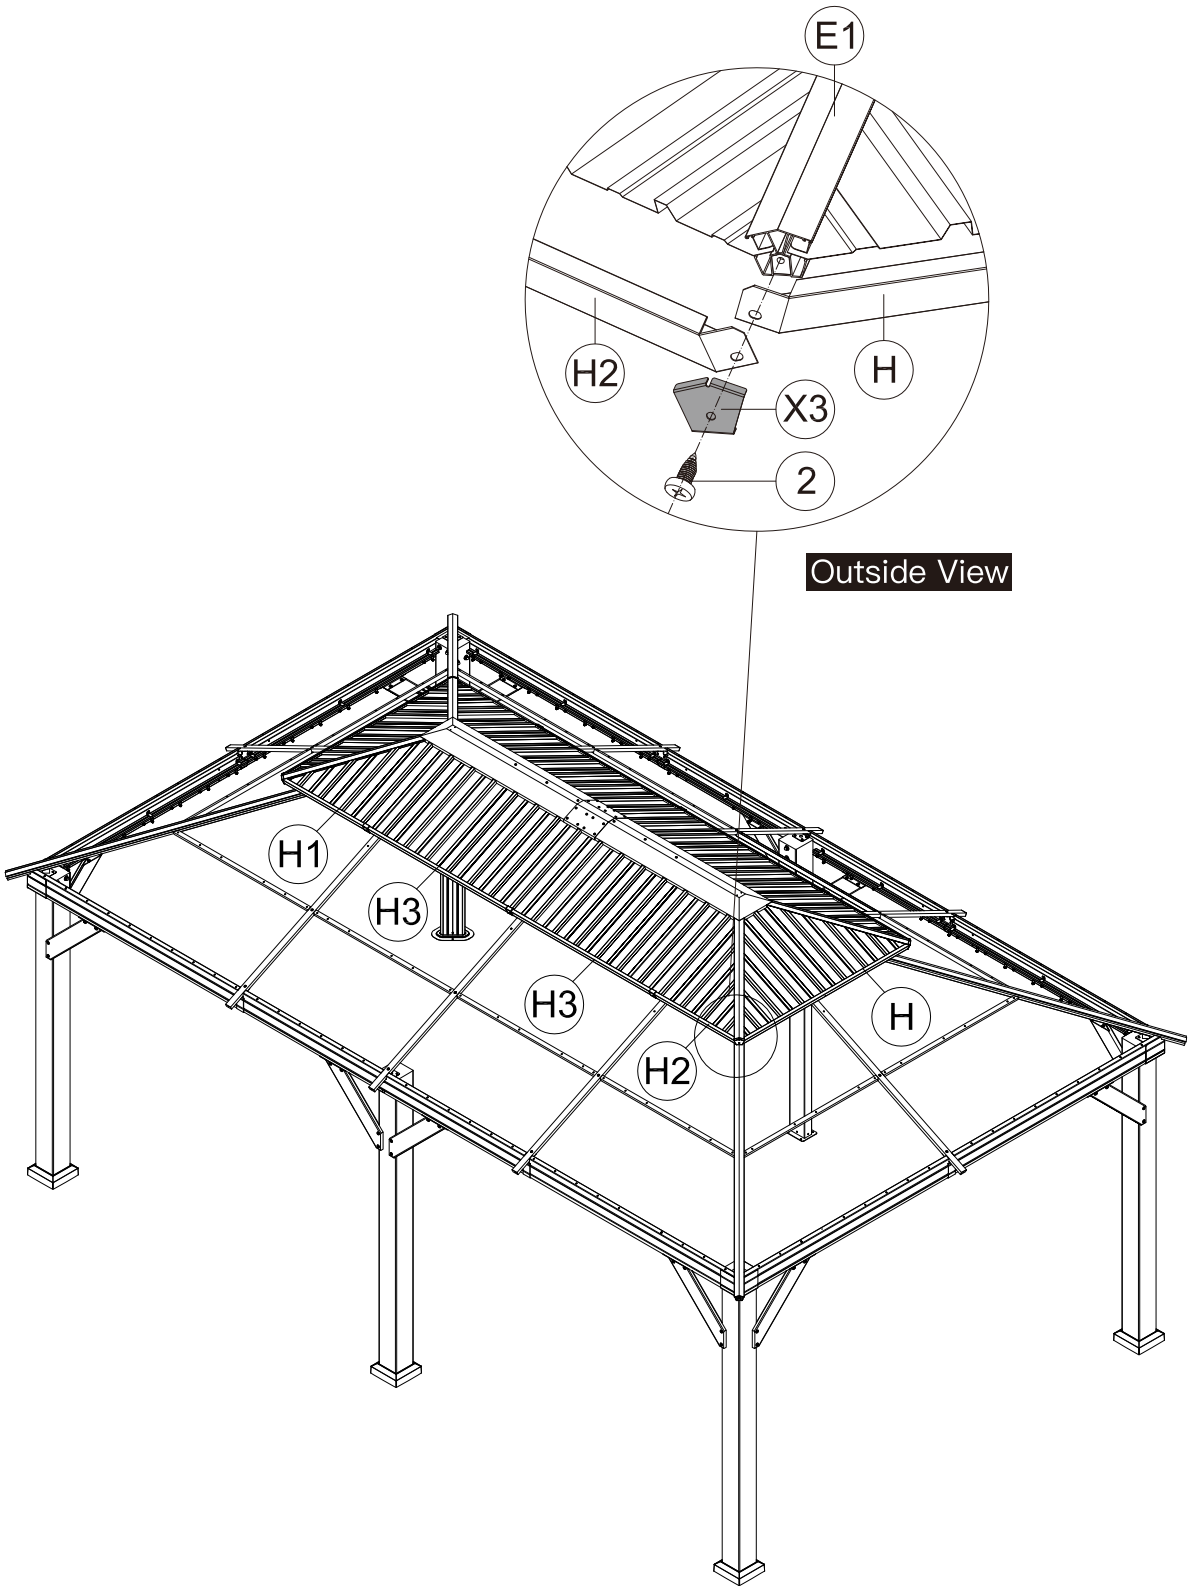


(2) Repeat the above procedures to assemble the other 3 corners.

Cover Part #Z to Roof Panels



M1 2x



M2 2x



M3 2x




M4 2x



M5 2x



M6 2x



M7 2x





M8 2x




Z 28x

X2

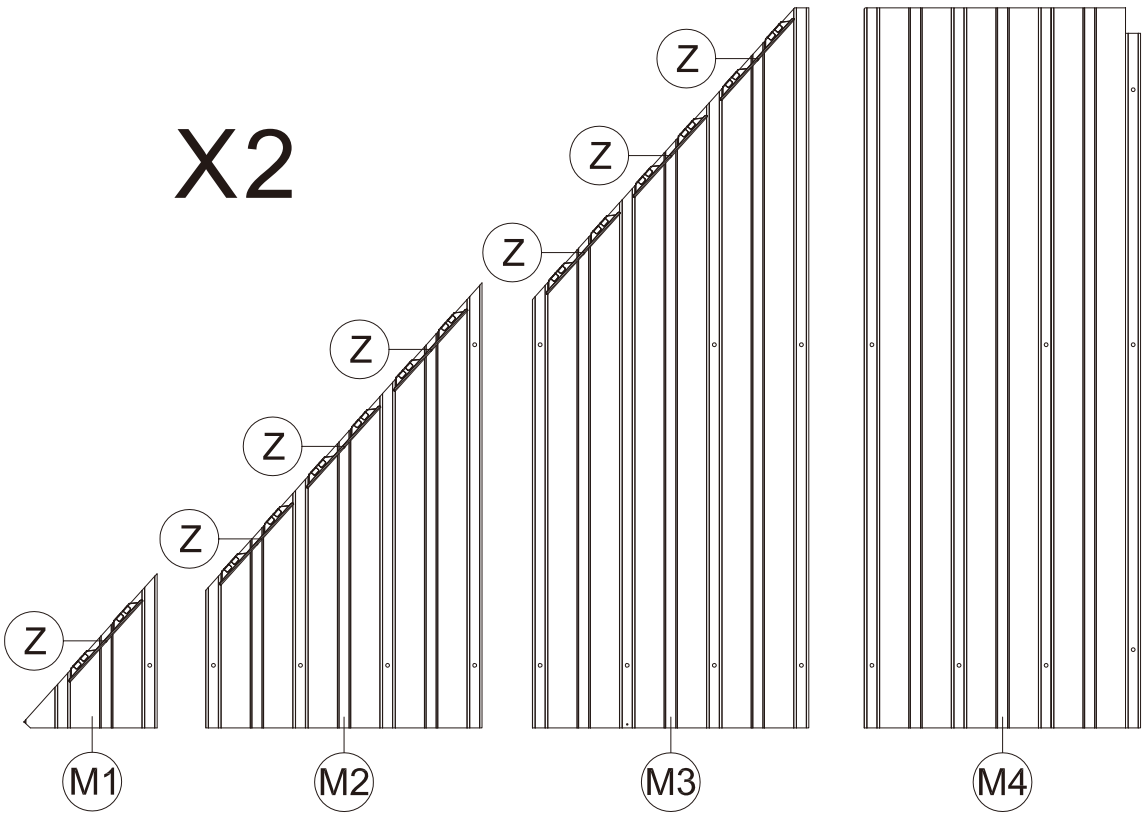


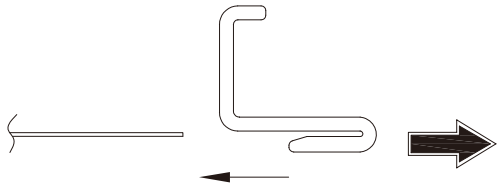

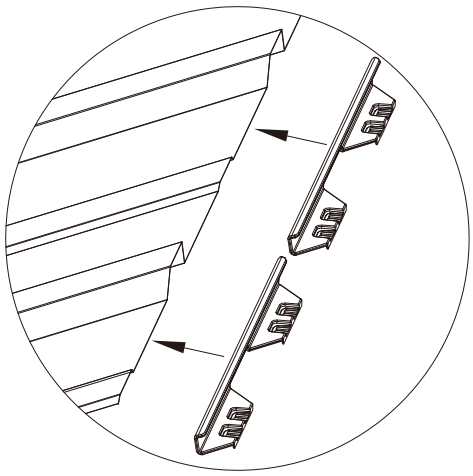

Section View


X2

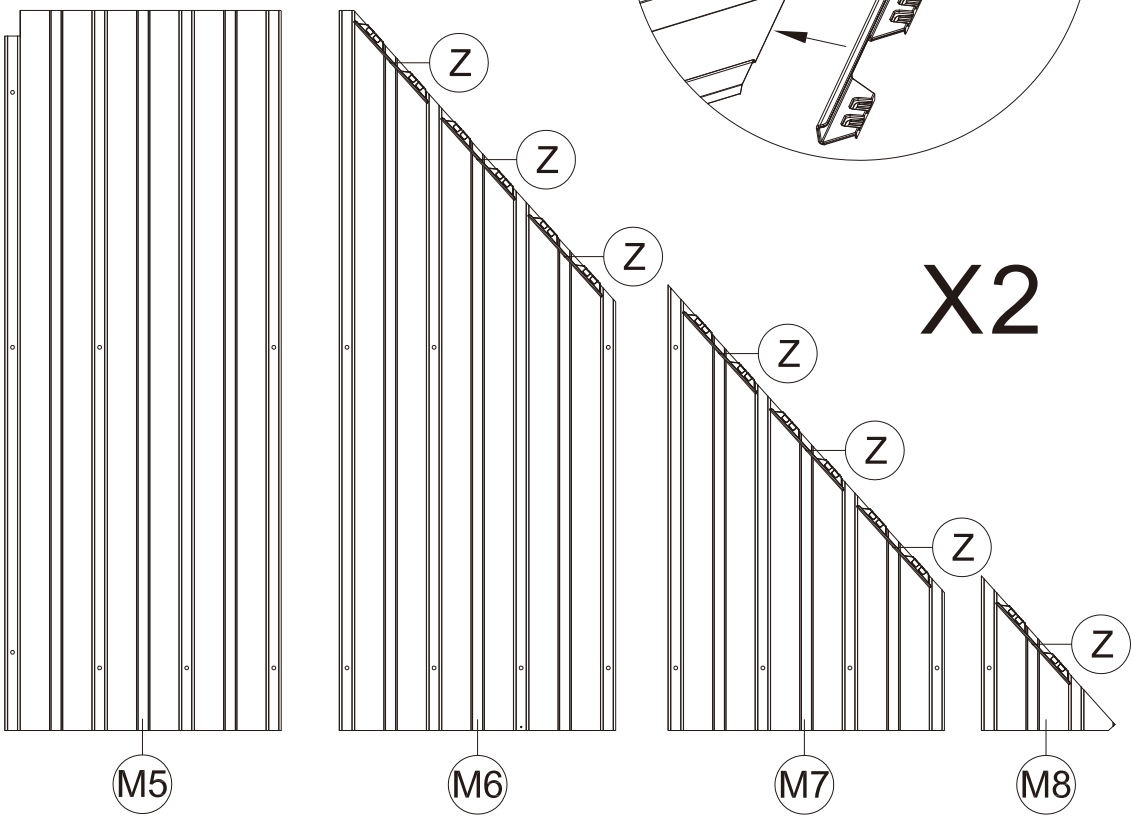

Cover Part #Z to Roof Panels




P1 2x



P2 2x



P3 2x



P4 2x



P5 2x




P6 2x




Z 14x

47

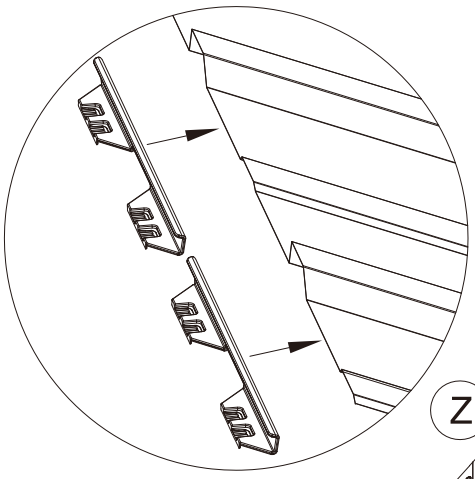

X2

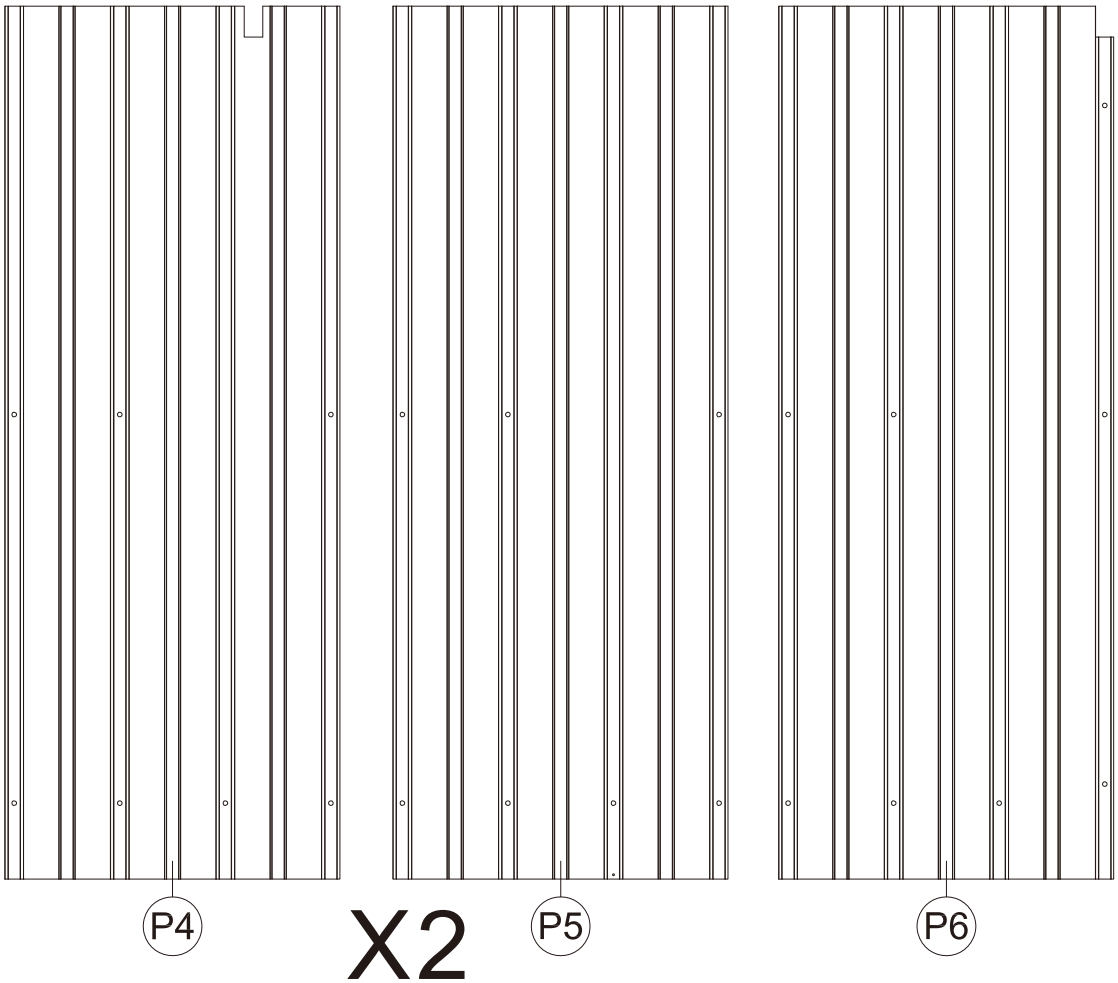

X2

Cover Part #Z to Roof Panels

P7 2x



P8 2x




P9 2x



P10 2x



P11 2x




P12 2x




Z 14x



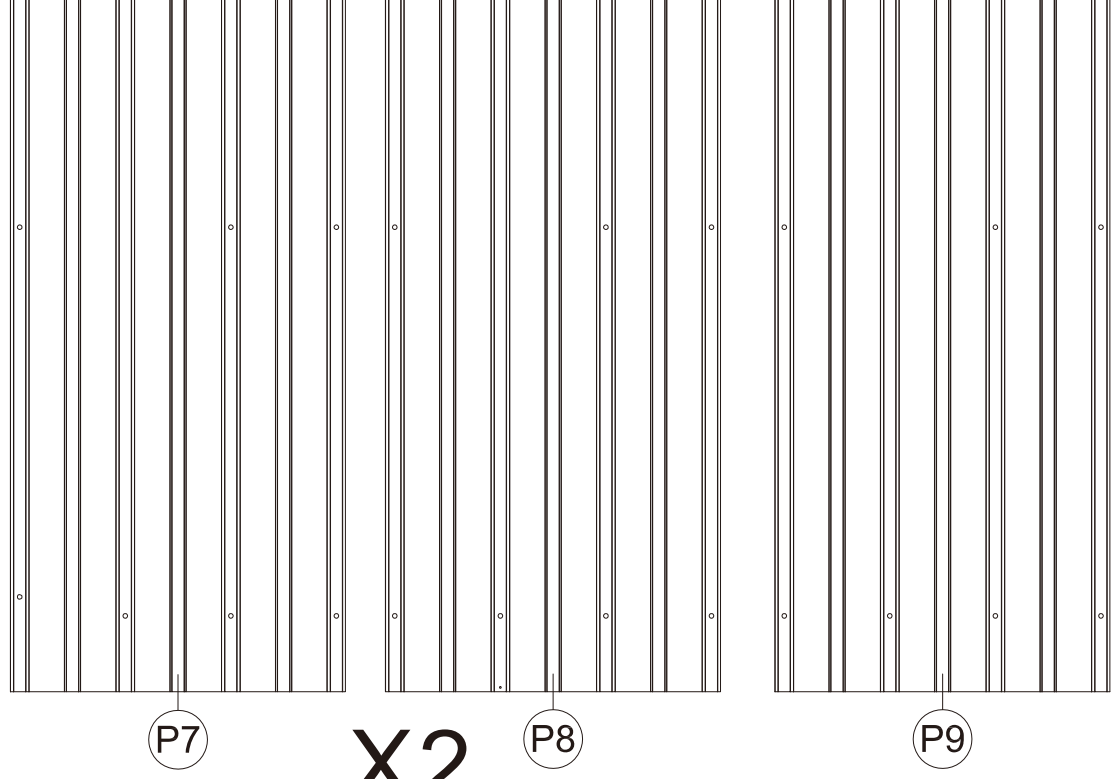



X2

X2

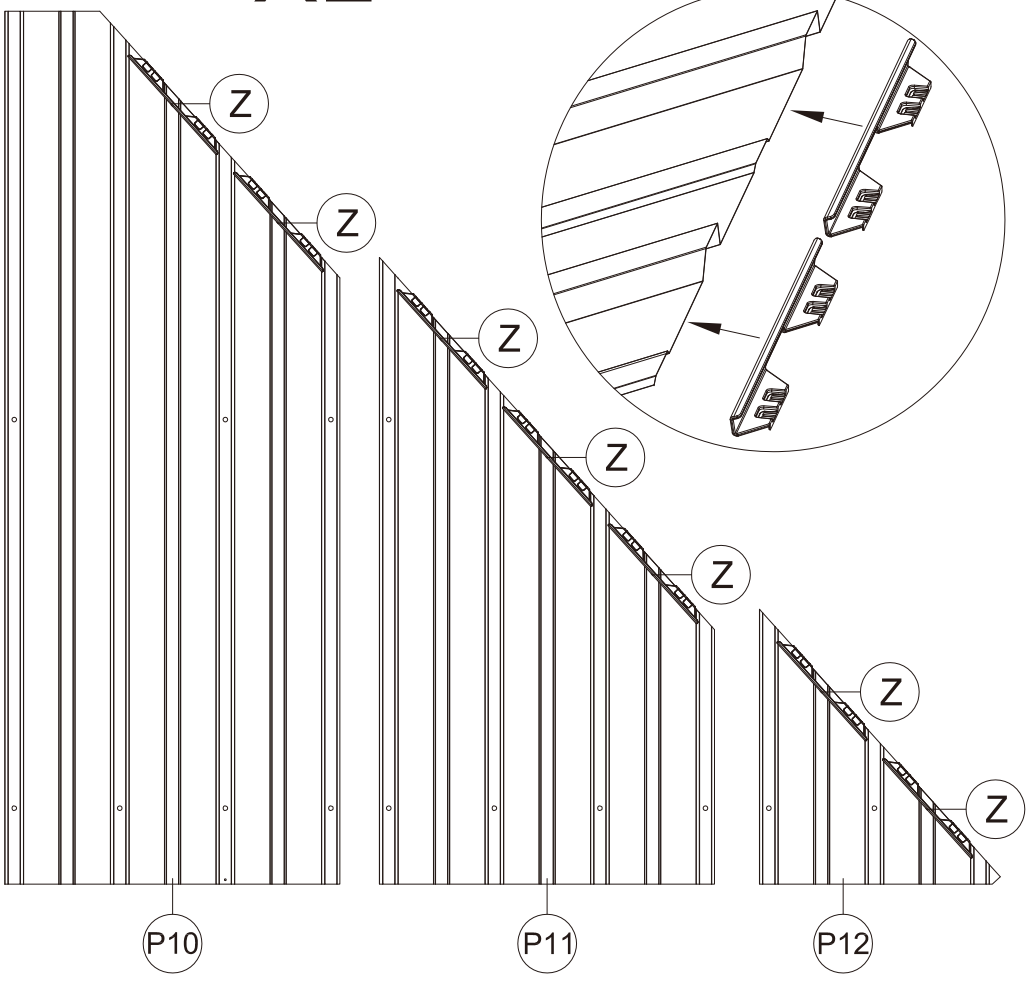



Roof Panels Assembly

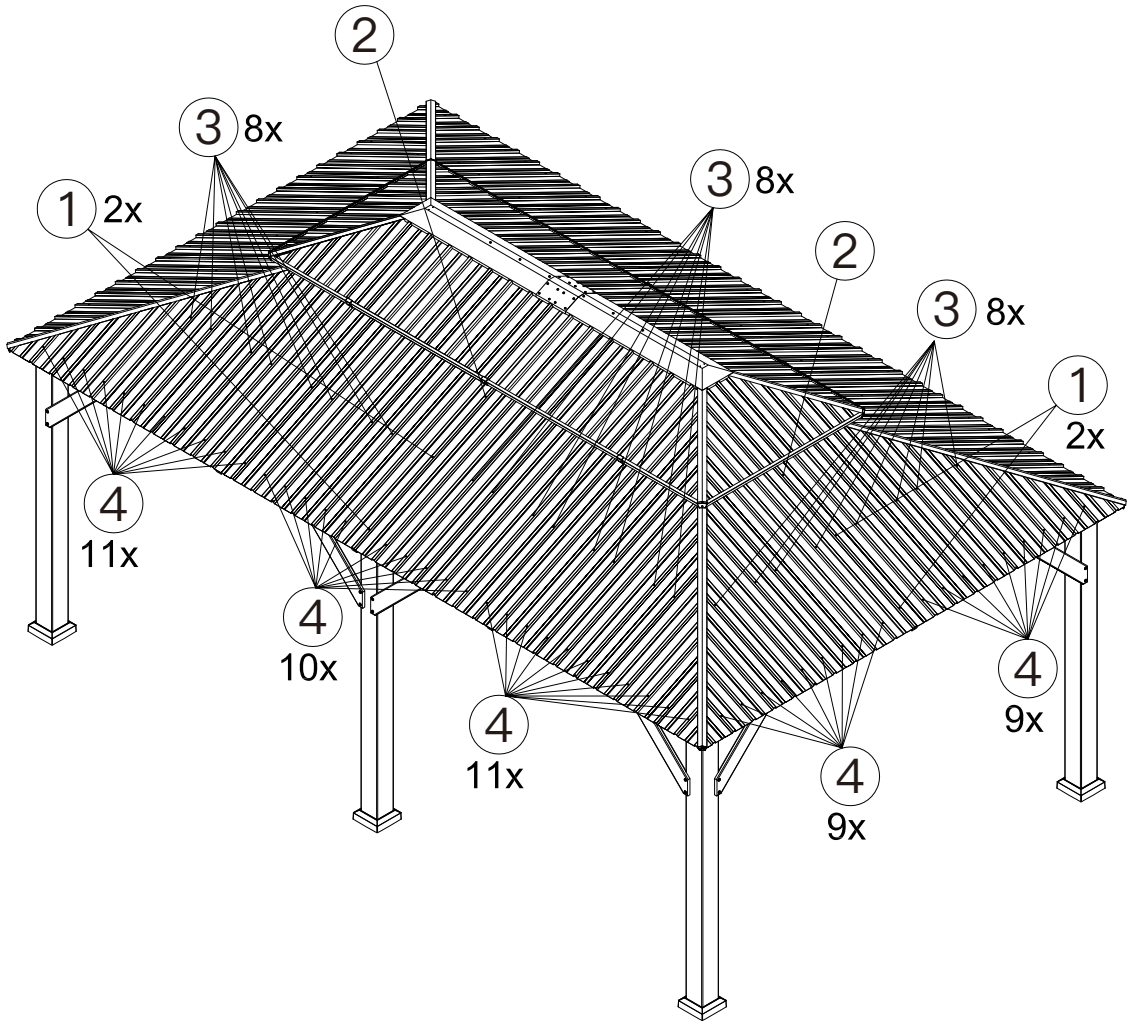


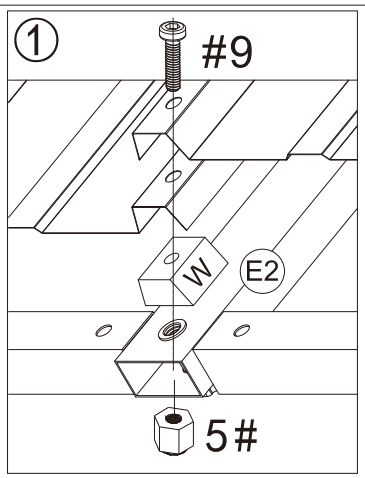



⚠ Part #W should be inserted between roof panels and solidifying bar or beams, then secure with bolts and nuts.

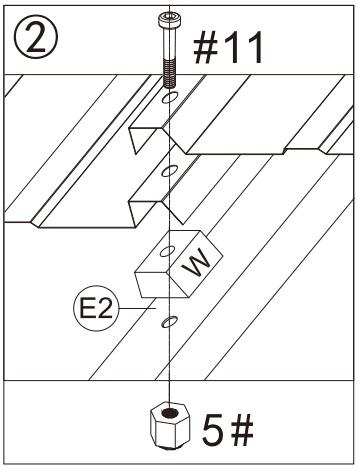

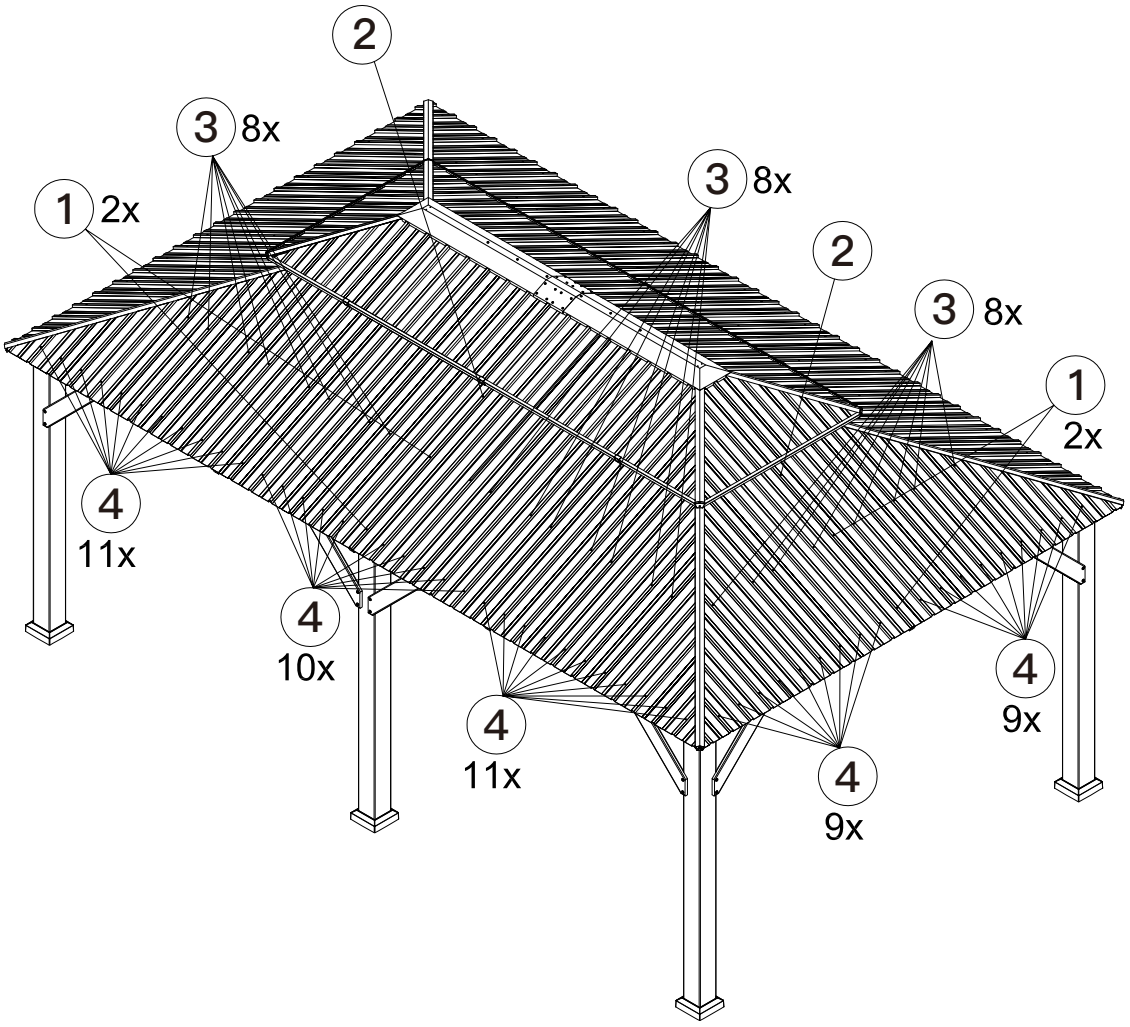


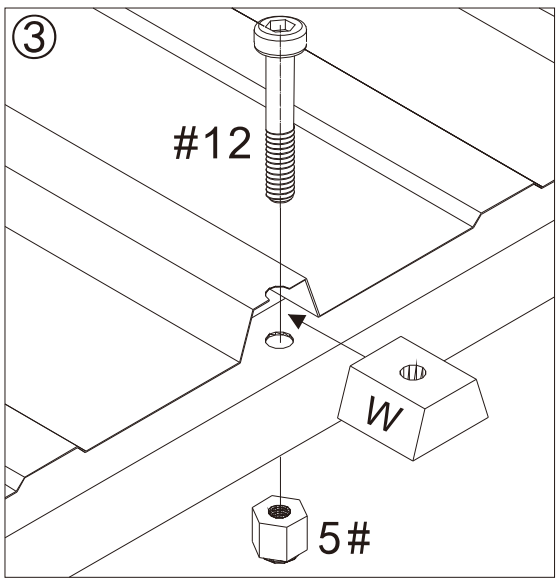

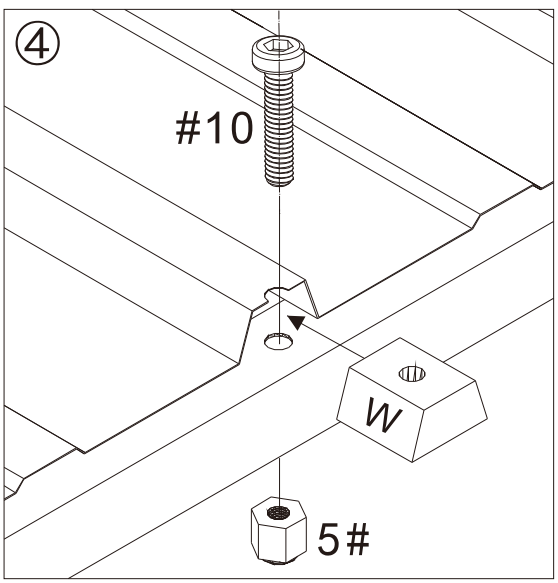



W 36x

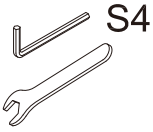

S4

1 1x



M6

5 36x



M6x28


10 28x




M6x50

12 8x


ATTENTION: The bigger roof panel need to cover the smaller one.

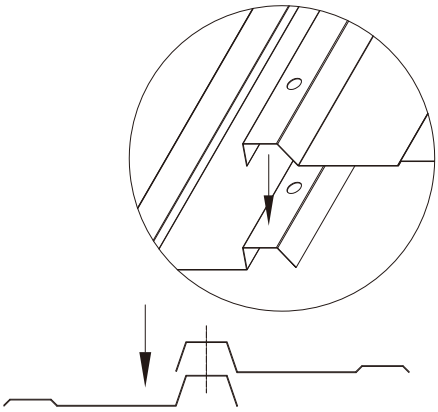


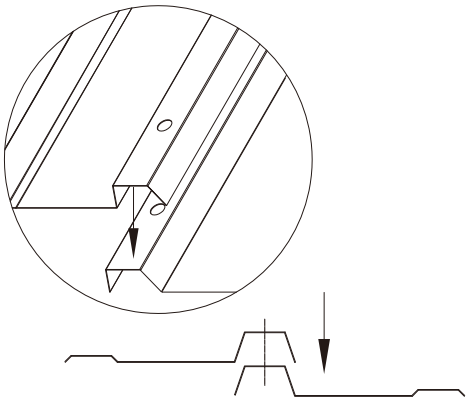

(1) Insert Part #P1, Part #P2 and Part #P3 into the frame.


(2) Insert Part #P12, Part #P11 and Part #P10 into the frame.

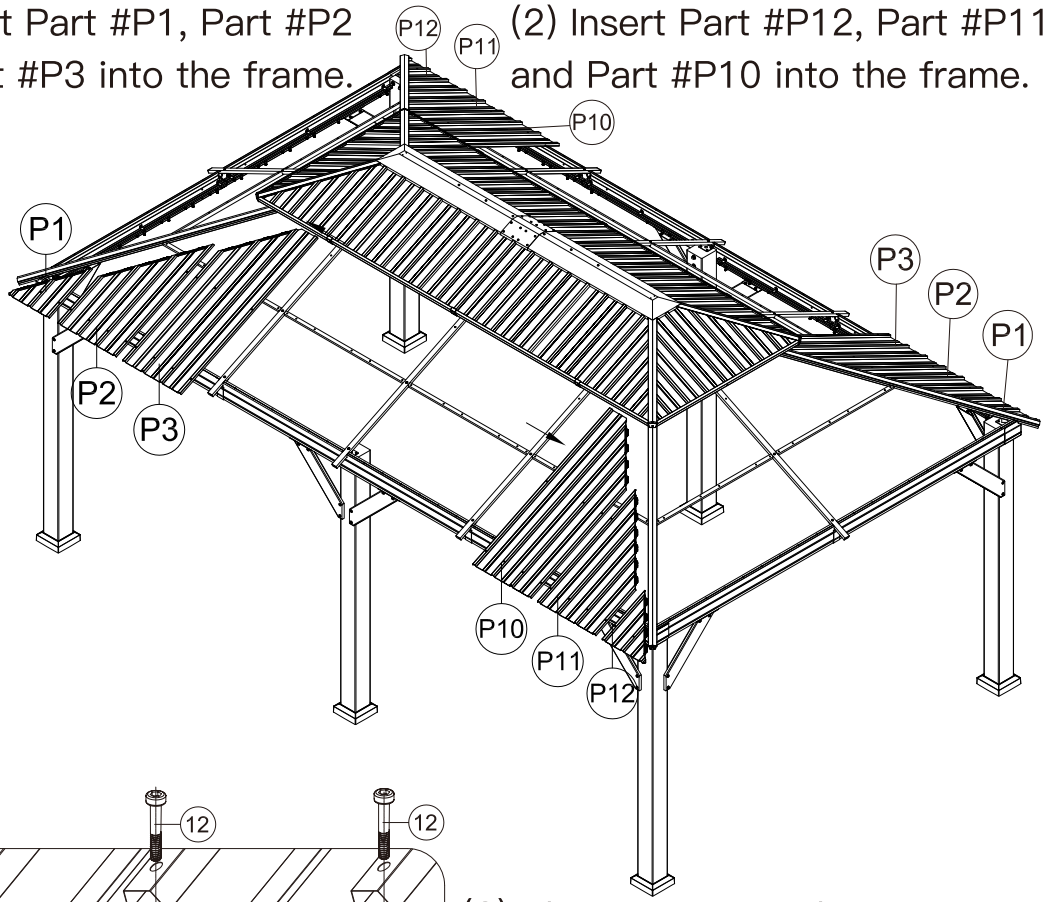

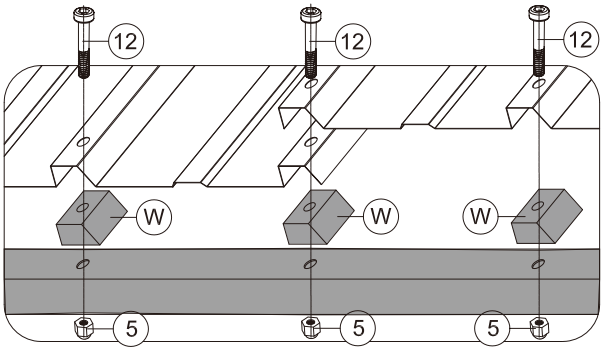

(3) Place 4 Part #W between roof panels and solidifying bars. Then secure with 4 Bolts #12 and 4 Nuts #5.


Solidifying Bar

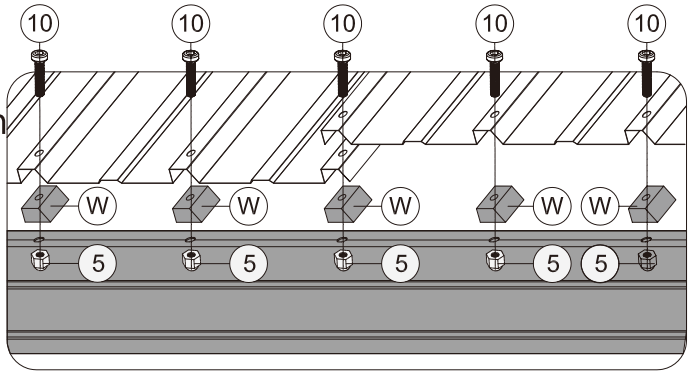


(4) Place 14 Part #W between roof panels and beams. Then secure with 14 Bolts #10 and 14 Nuts #5.

Beam

(5) Repeat the above procedures to assemble the opposite side.



W 40x

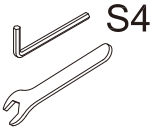

1 1x


M6

5 40x



M6x28

10 24x



M6x50

12 16x


ATTENTION: The bigger roof panel need to cover the smaller one.

(1) Insert Part #P4 and Part #P5 into the frame.




(2) Insert Part #P9 and Part #P8 into the frame.




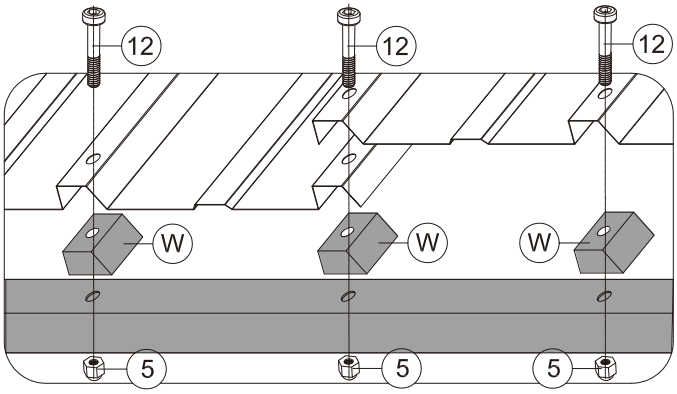


(3)Place 8 Part #W between roof panels and solidifying bars. Then secure with 8 Bolts #12 and 8 Nuts #5.

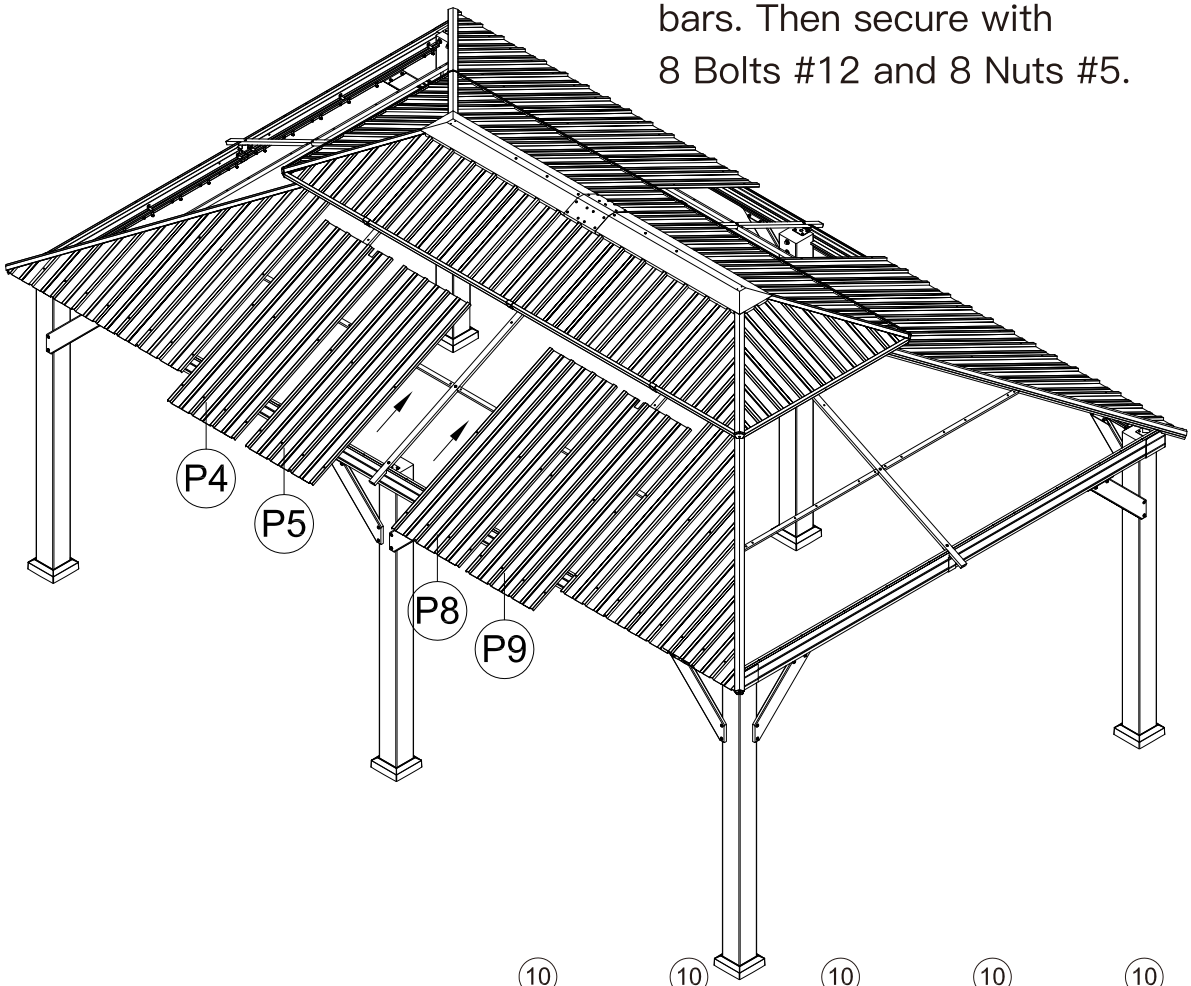


(4) Place 12 Part #W between roof panels and beams. Then secure with 12 Bolts #10 and 12 Nuts #5.

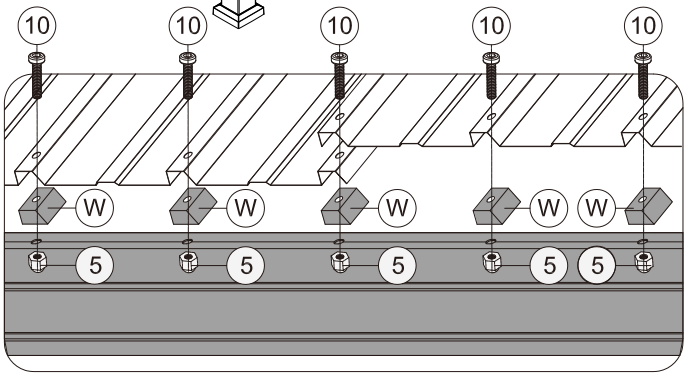

(5) Repeat the above procedures to assemble the opposite side.



W 24x

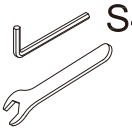


S4

1 1x




M6

5 20x




M6x25

9 4x



M6x28

10 12x





M6x50

12 8x


ATTENTION: The bigger roof panel need to cover the smaller one.

(1) Insert Part #P6 into the frame.




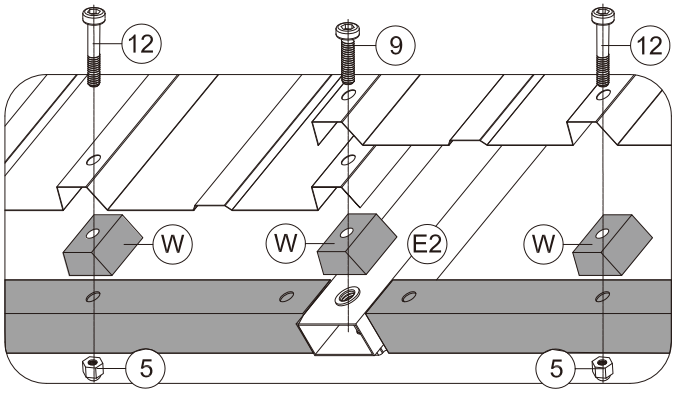


(3) Place 4 Part #W between roof panels and solidifying bars. Then secure with 4 Bolts #12 and 4 Nuts #5; Place 1 Part #W between roof panels and Part #E2. Then secure with 1 Bolt #9.

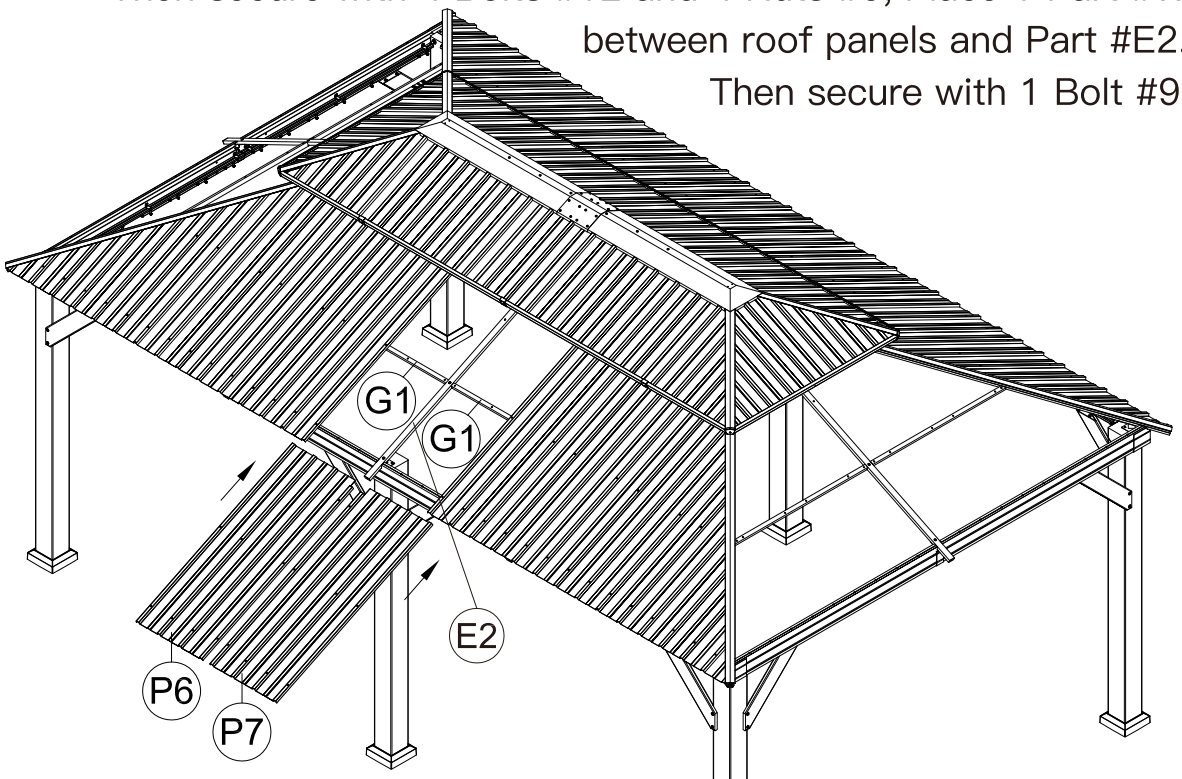


(2) Insert Part #P7 into the frame.



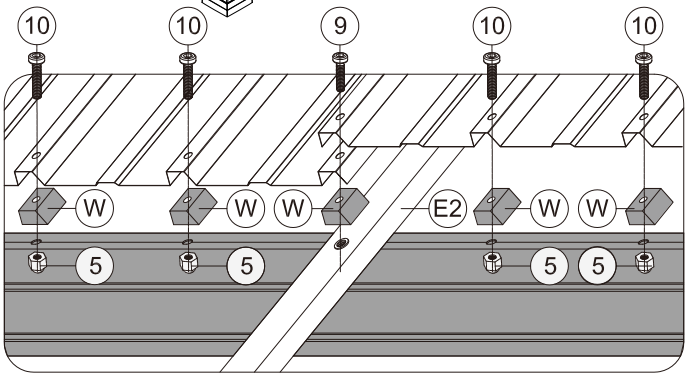


(4) .Place 6 Part #W between roof panels and beams. Then secure with 6 Bolts #10 and 6 Nuts #5; Place 1 Part #W between roof panels and Part #E2. Then secure with 1 Bolt #9.

(5) Repeat the above procedures to assemble the opposite side.



W 12x

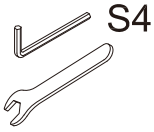

1 1x



M6


5 12x




M6x28

10 12x


ATTENTION: The bigger roof panel need to cover the smaller one.

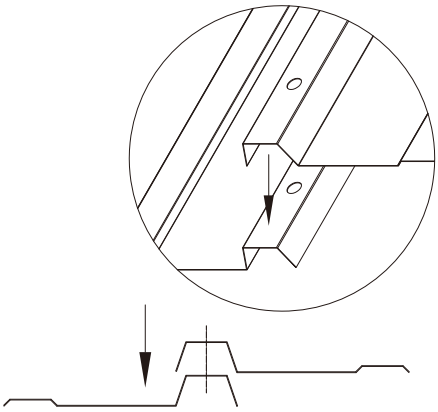


(1) Insert Part #M1 and Part #M2 into the frame.

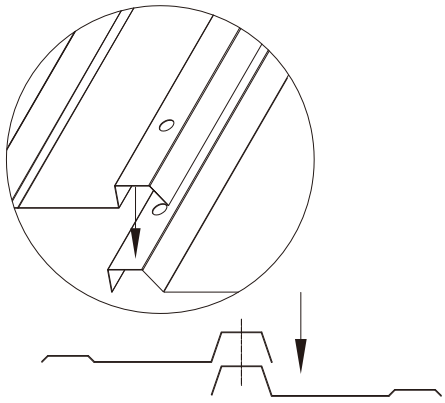


(2) Insert Part #M8 and Part #M7 into the frame.

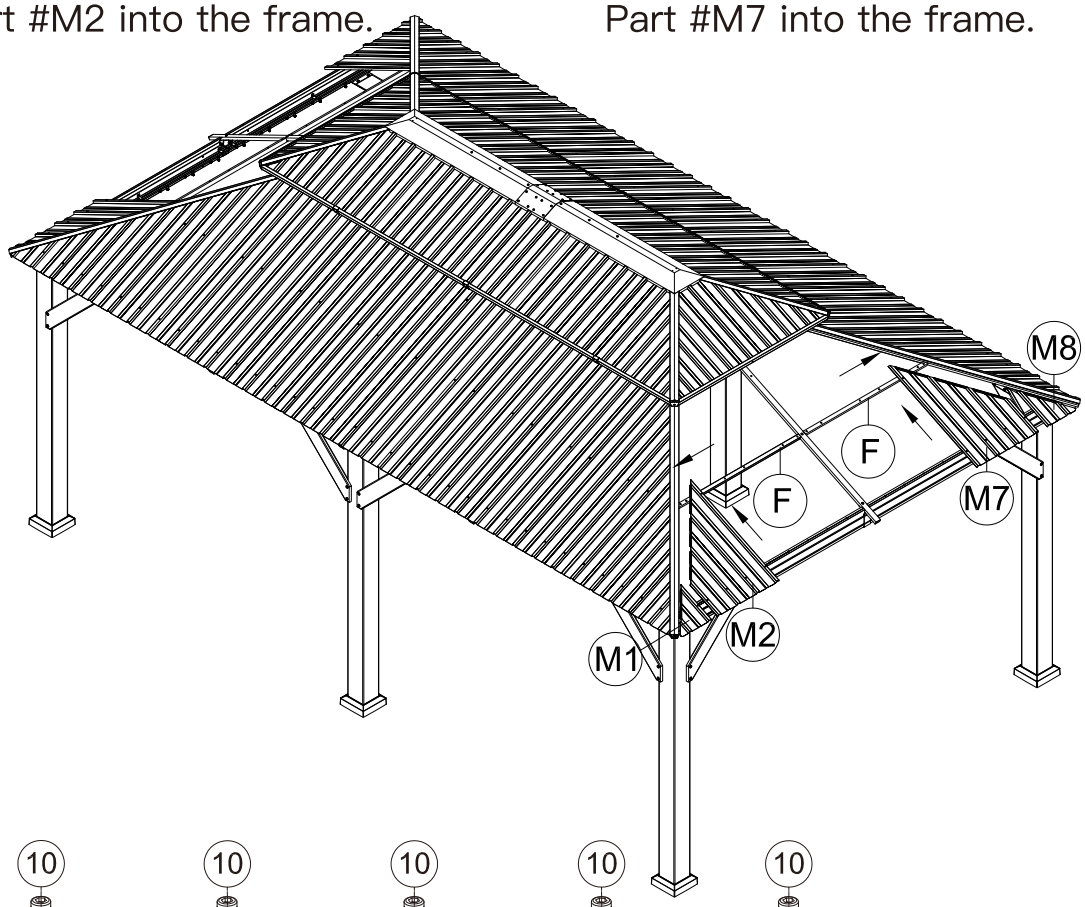

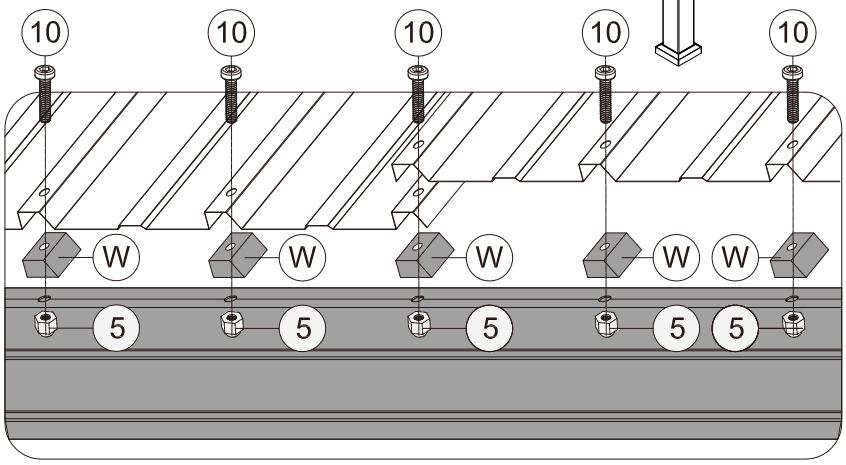


(3) Place 6 Part #W between roof panels and beams. Then secure with 6 Bolts #10 and 6 Nuts #5.

(4) Repeat the above procedures to assemble the opposite side.



W 20x

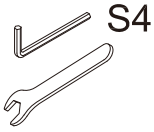

1 1x




M6

5 20x



M6x28

10 12x




M6x50

12 8x


ATTENTION: The bigger roof panel need to cover the smaller one.

(1) Insert Part #M3 into the frame.




(2) Insert Part #M6 into the frame.




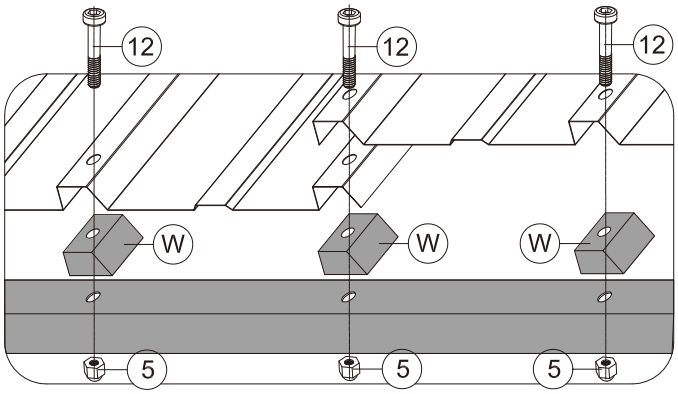


(3) Place 4 Part #W between roof panels and solidifying bars. Then secure with 4 Bolts #12 and 4 Nuts #5.

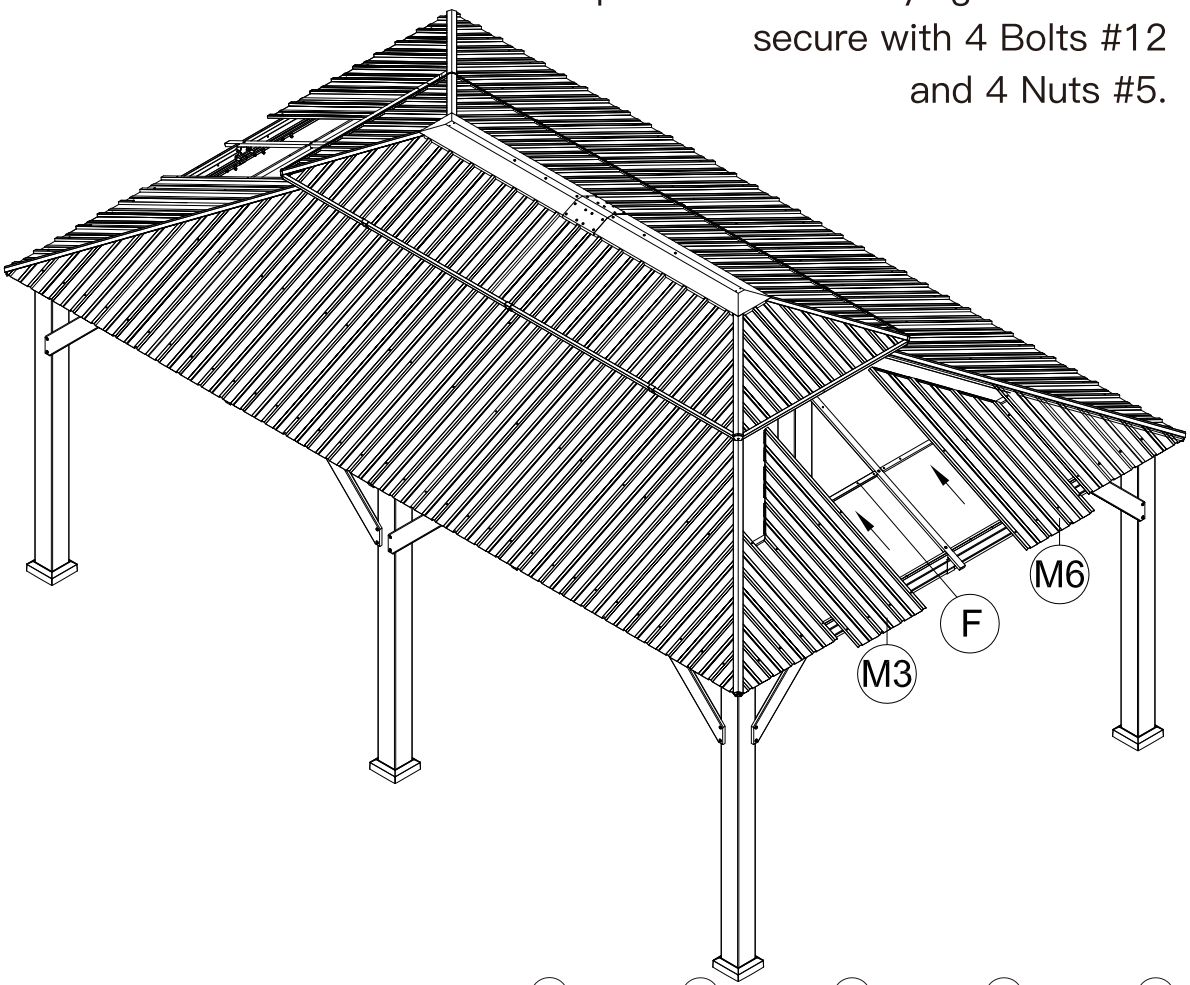


(4) Place 6 Part #W between roof panels and beams. Then secure with 6 Bolts #10 and 6 Nuts #5.

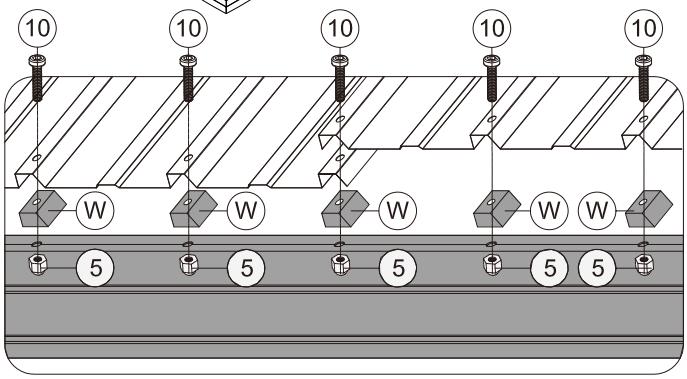

(5) Repeat the above procedures to assemble the opposite side.



W 24x

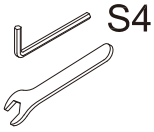


1 1x



M6

5 20x




M6x25

9 4x



M6x28

10 12x




M6x50


12 8x

ATTENTION: The bigger roof panel need to cover the smaller one.


(1) Insert Part #M4 and Part #M5 into the frame.

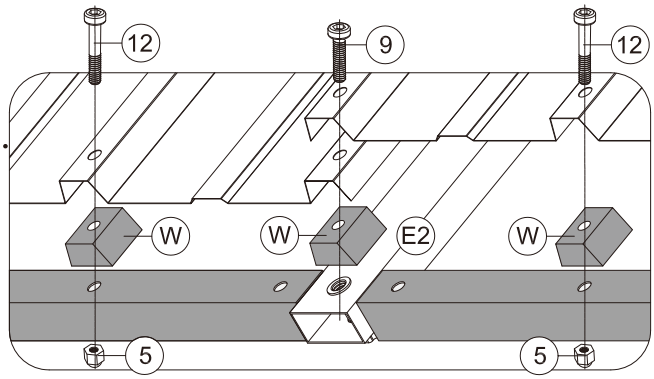


(2) Place 4 Part #W between roof panels and solidifying bars. Then secure with 4 Bolts #12 and 4 Nuts #5;
Place 1 Part #W between roof panels and Part #E2. Then secure with 1 Bolt #9.

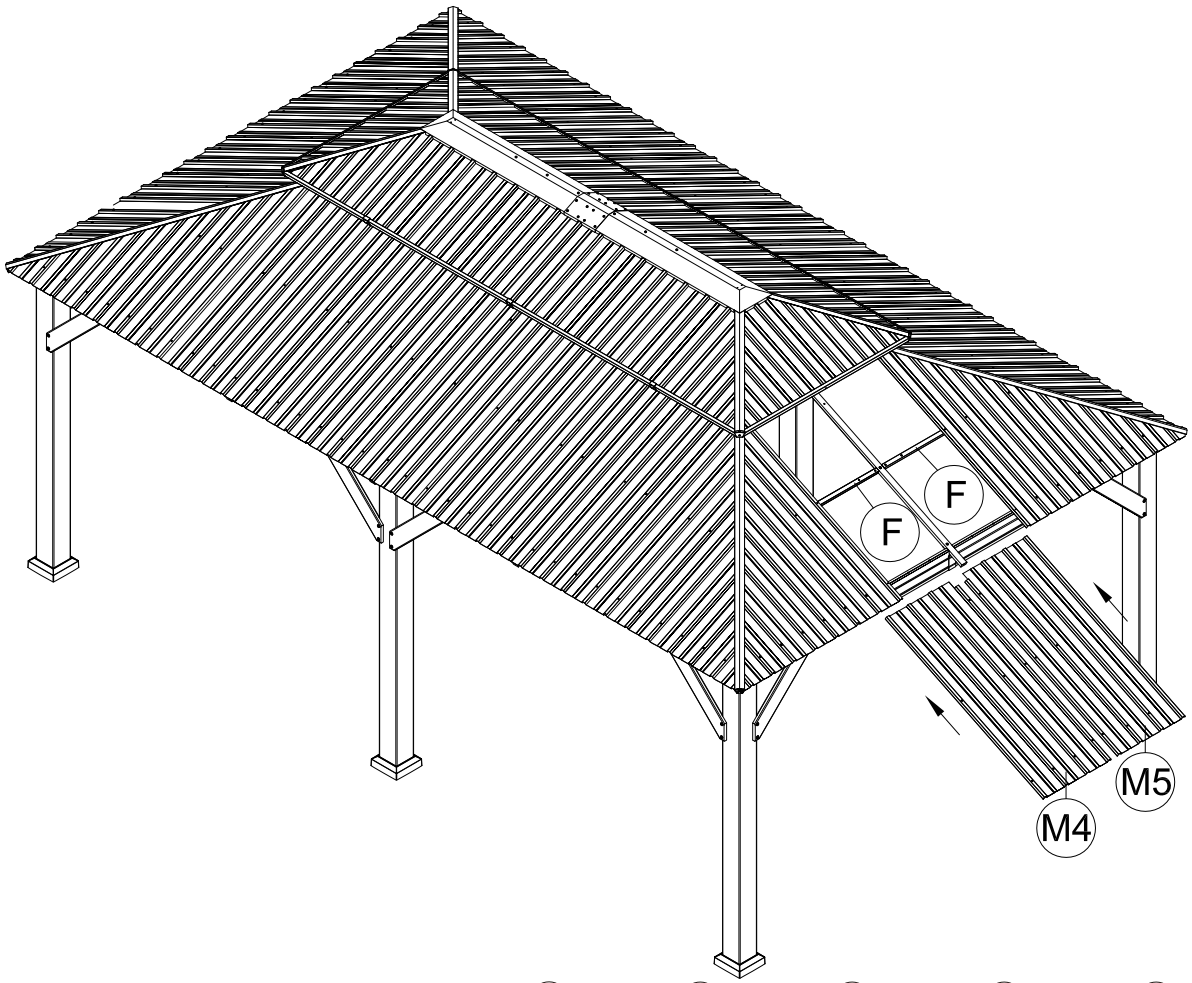


(3) Place 6 Part #W between roof panels and beams. Then secure with 6 Bolts #10 and 6 Nuts #5; Place 1 Part #W between roof panels and Part #E2. Then secure with 1 Bolt #9.

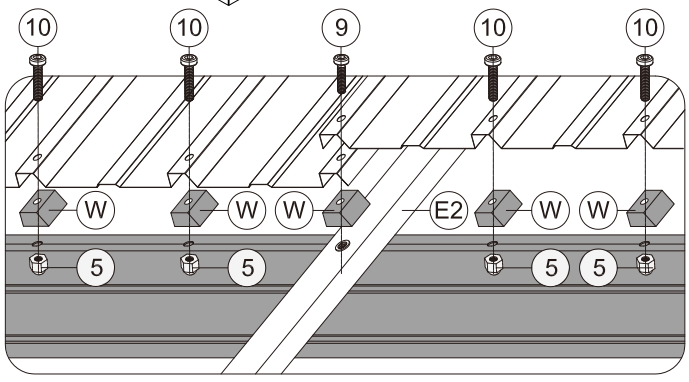

(4) Repeat the above procedures to assemble the opposite side.



W 4x

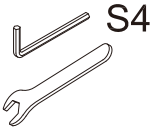


1 1x



M6


5 4x




M6x45


11 4x

Place Part #W between roof panels and Part #E2. Then secure with Bolt #11 and Nut #5.

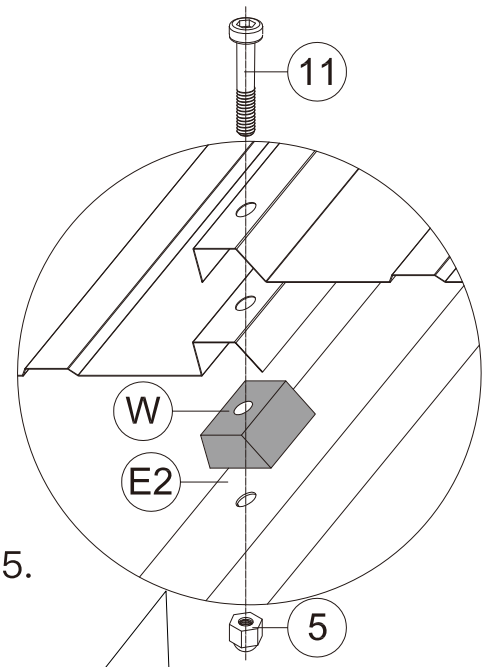


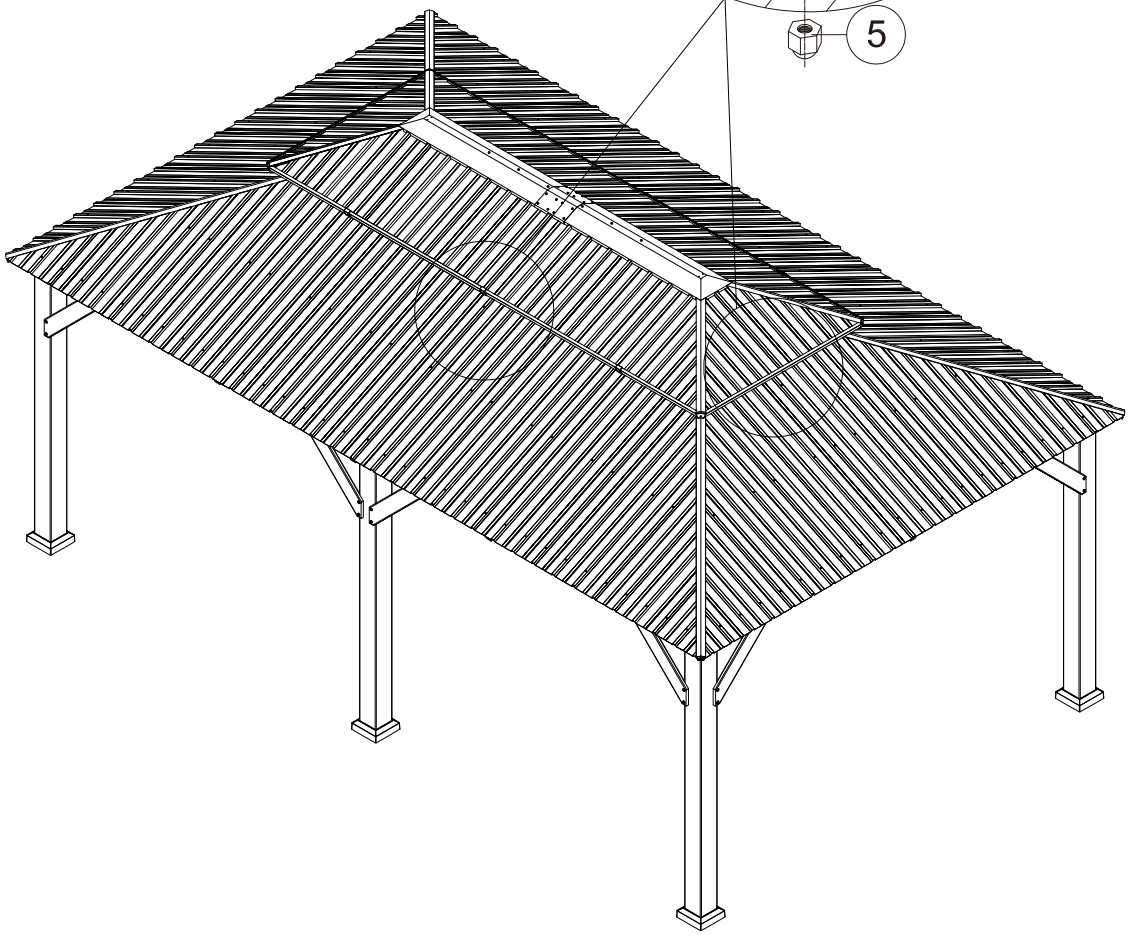


Repeat the above procedures to assemble the other 3 sides.

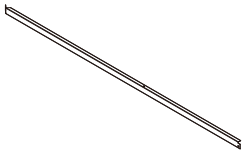


K2 2x

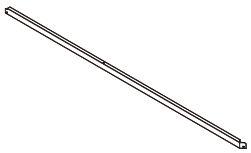

K3 2x

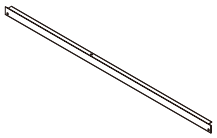

K4 2x

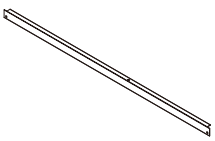

K5 2x




X2 6x





ST6.3x15

2 6x

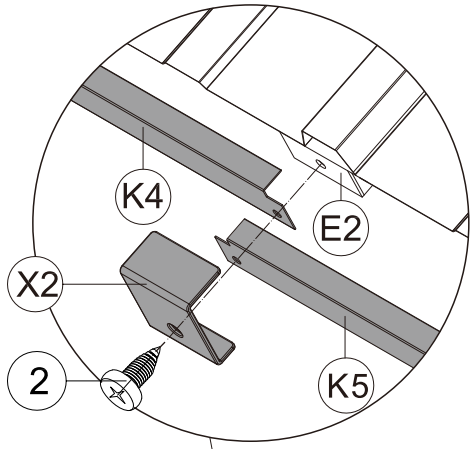


(1) Place Part #K4 and Part #K5 on Part #E2; Put on Part #X2 and secure with Screw #2.

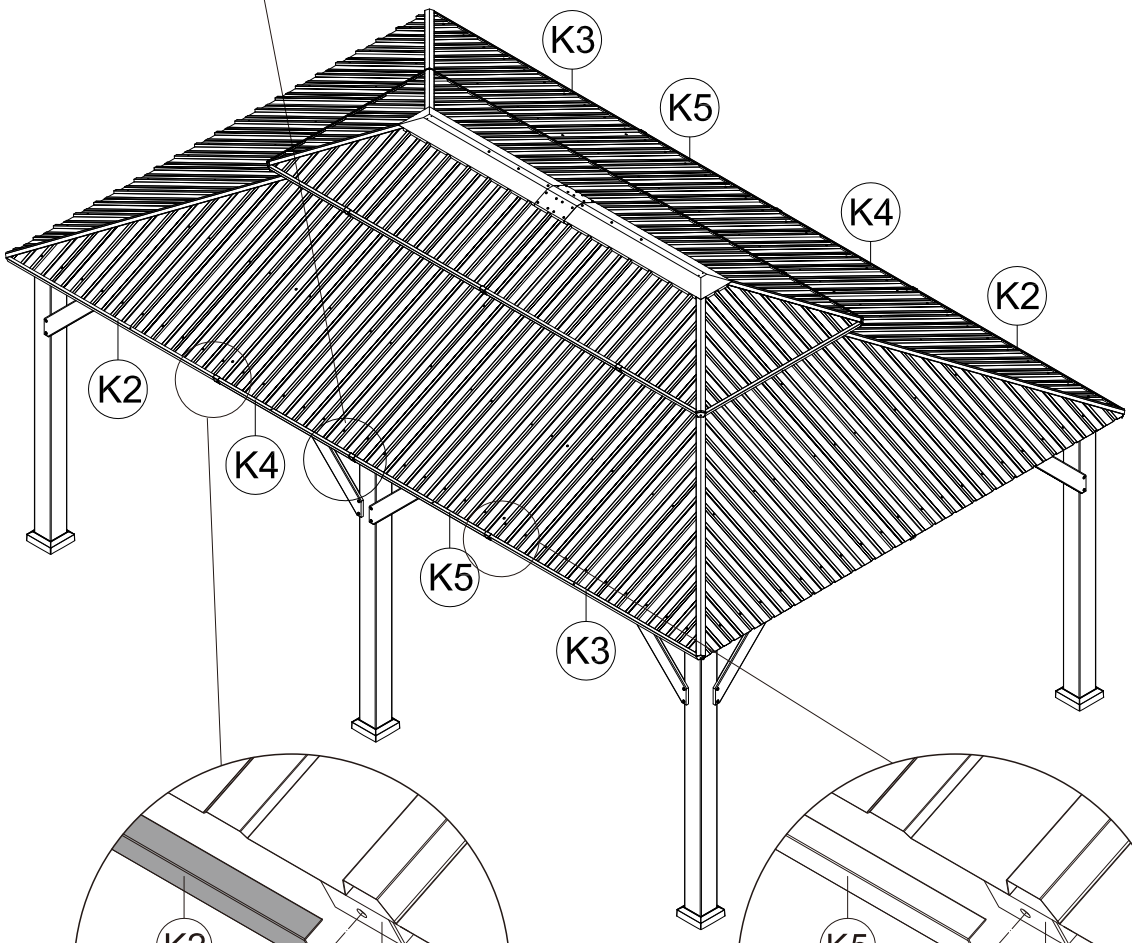

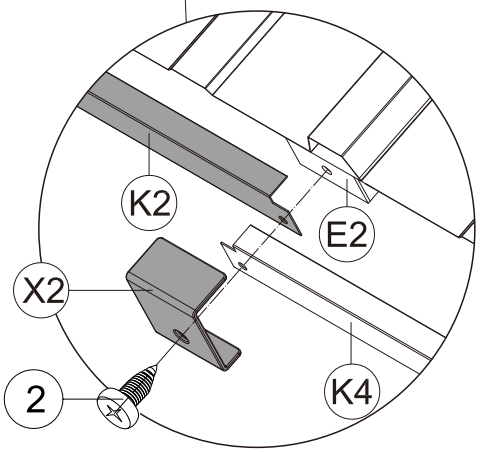


(2) Place Part #K2 on Part #K4 and Part #E2; Put on Part #X2 and secure with Screw #2.

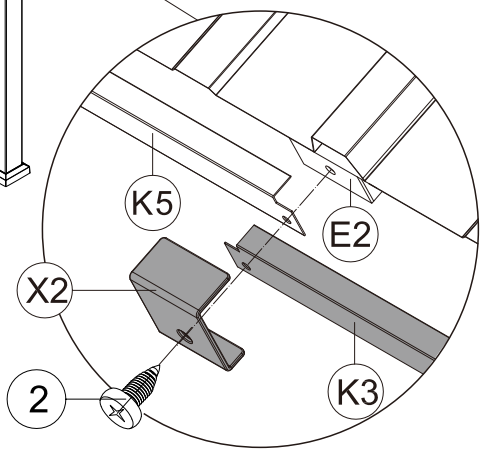


(3) Place Part #K3 on Part #K5 and Part #E2; Put on Part #X2 and secure with Screw #2.

(4) Repeat the above procedures to assemble the opposite side.

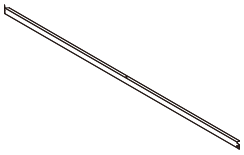

K 2x

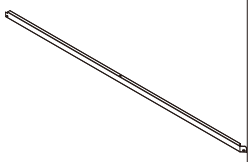

K1 2x




X2 2x




ST6.3x15

2 2x

(1) Attach Part #K and Part #K1 to the frame; Put on Part #X2 and secure with Screw #2.

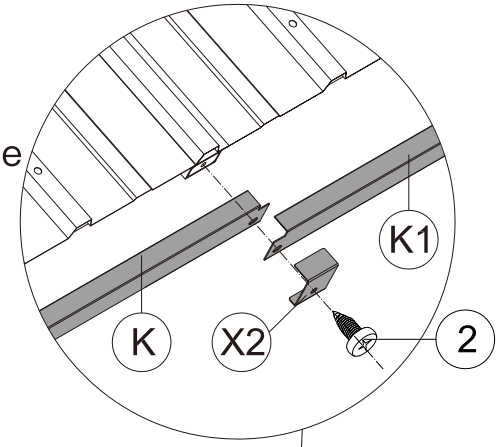

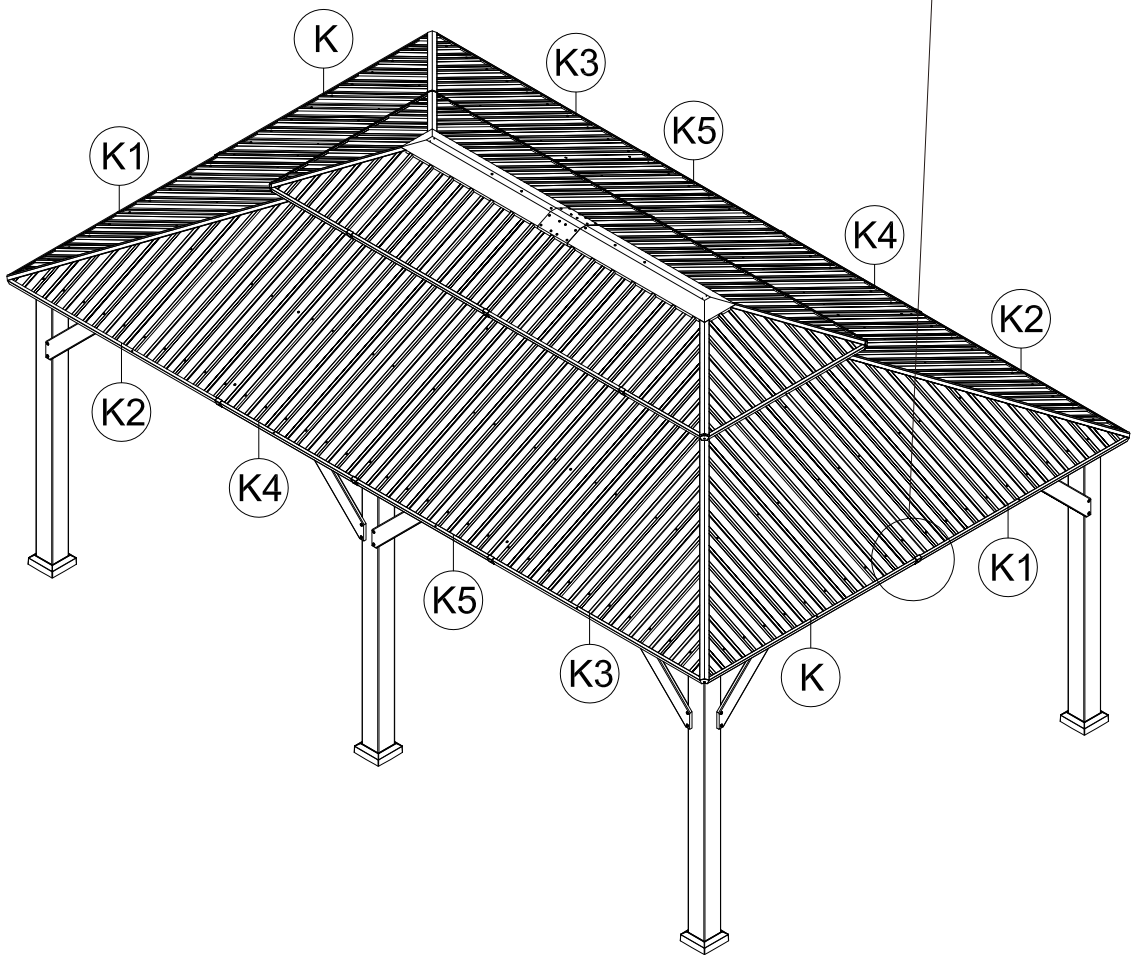

(2) Repeat the above procedures to assemble the opposite side.




X3 4x



ST6.3x15

2 4x

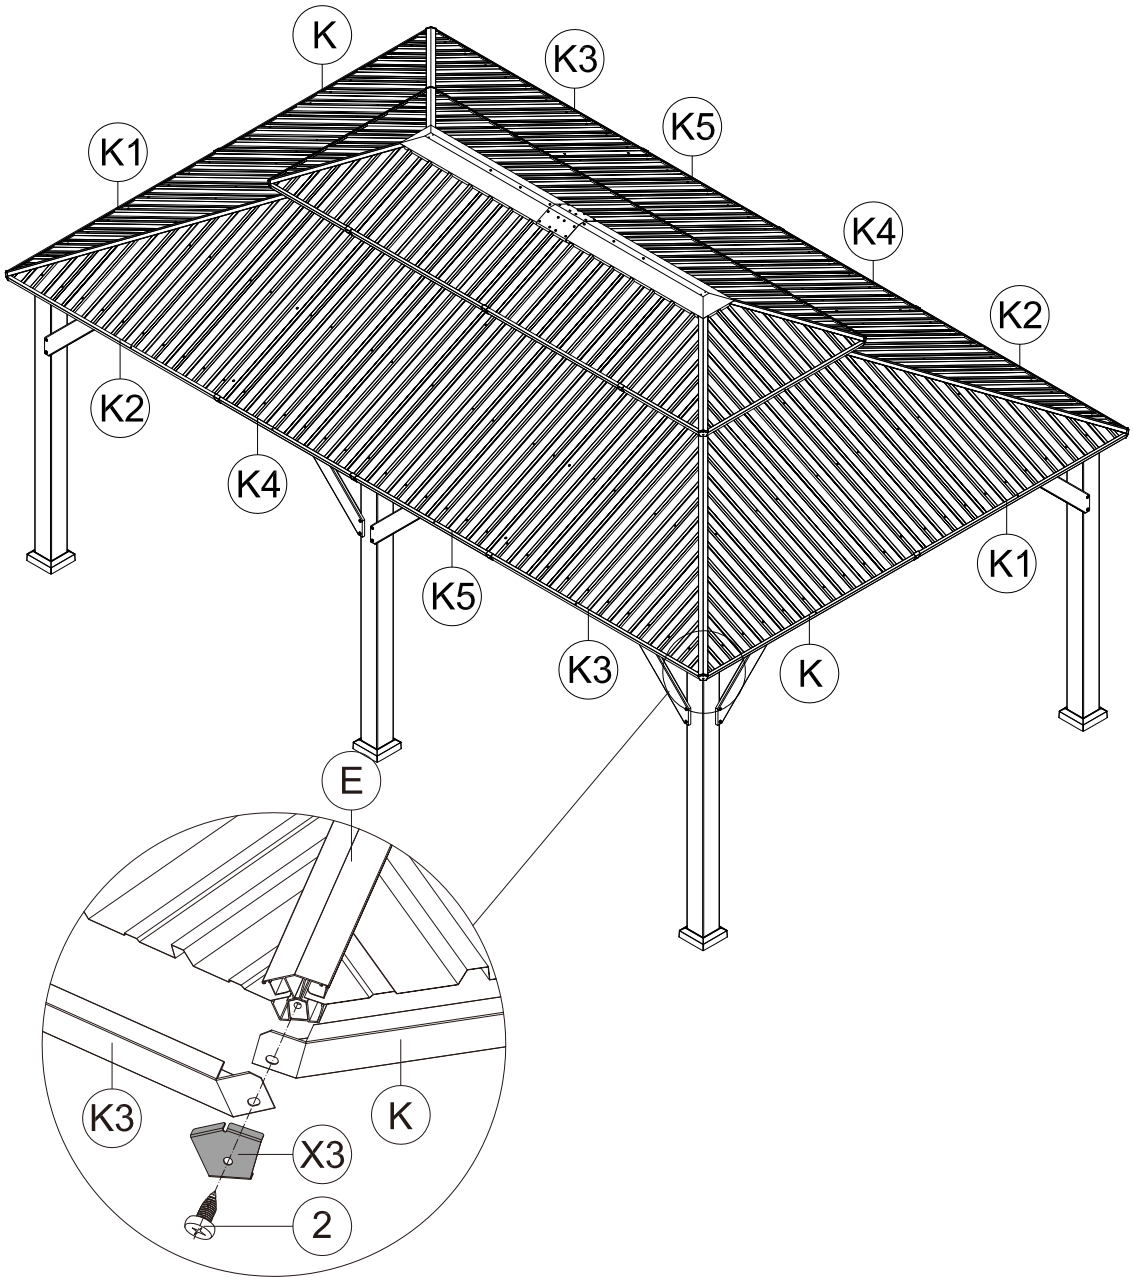

(1) Place Part #K3 and Part #K on Part #E;


Put on Part #X3 and secure with Screw #2.

(2) Repeat the above procedures to assemble the other 3 corners.




ST5x16

3 12x

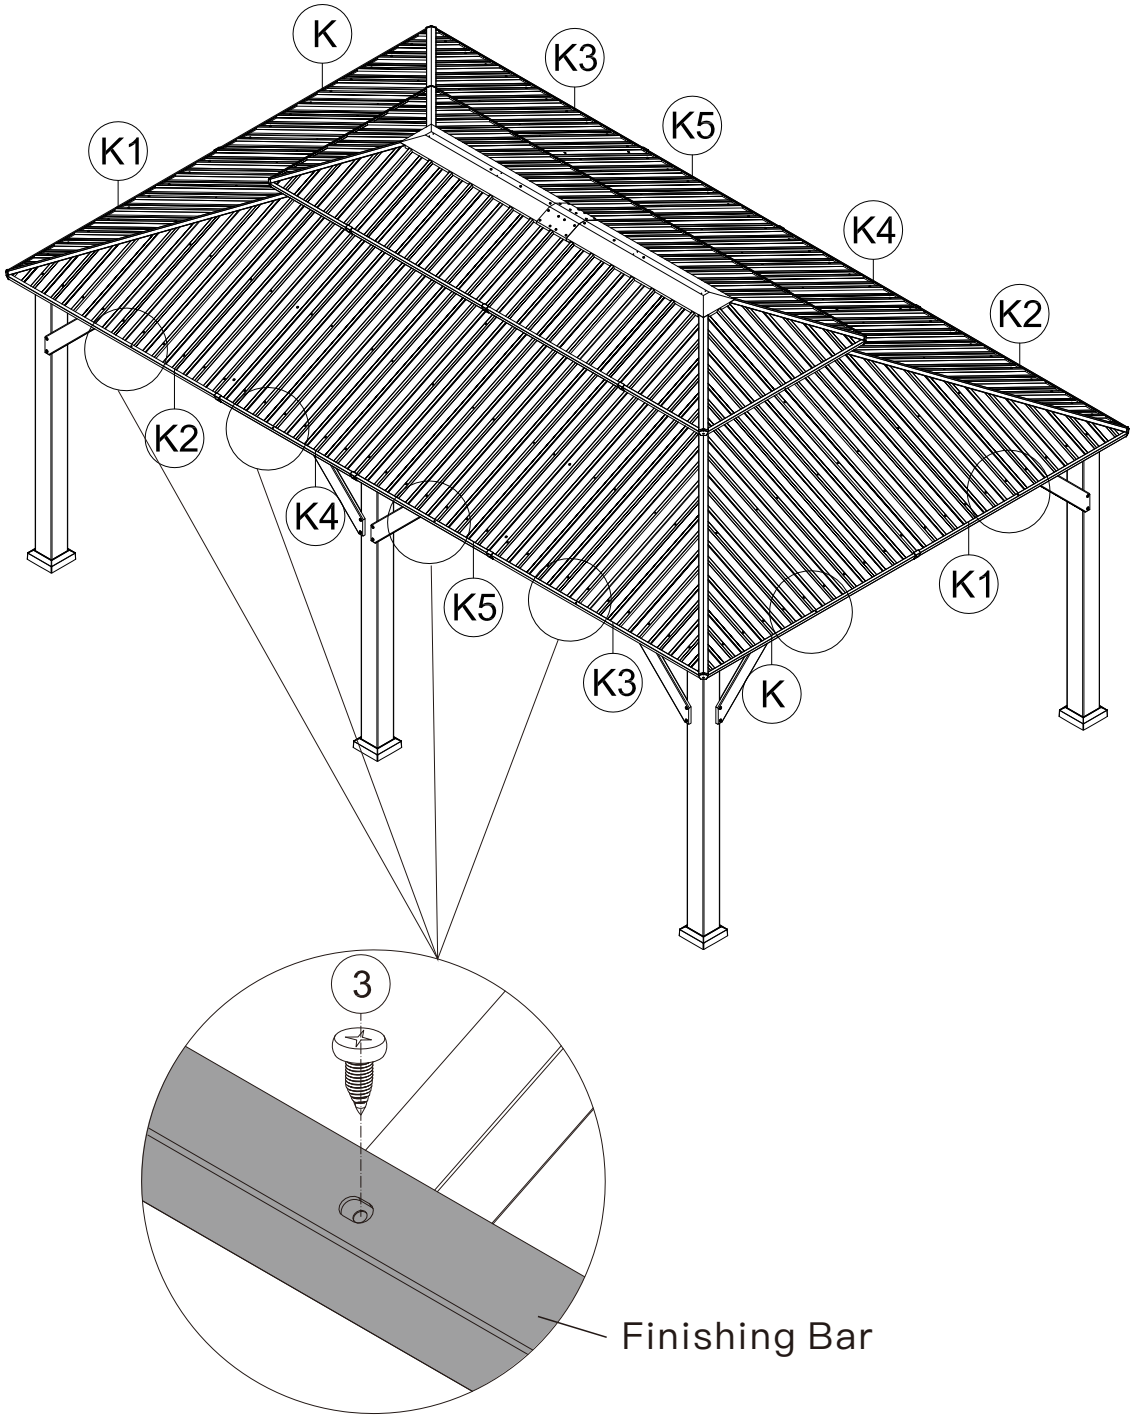


(1) Use Screw #3 to secure finishing bar with roof panels.

(2) Repeat the above procedures to assemble the other 3 sides.





Y1 4x





Y2 2x


Hang up Mosquito Sidewalls to Inside Track

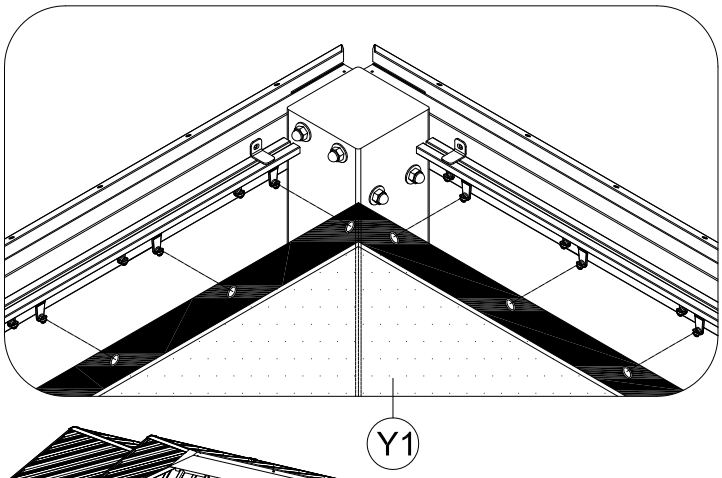

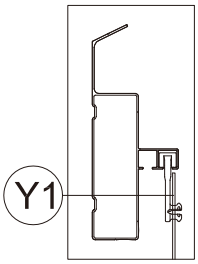


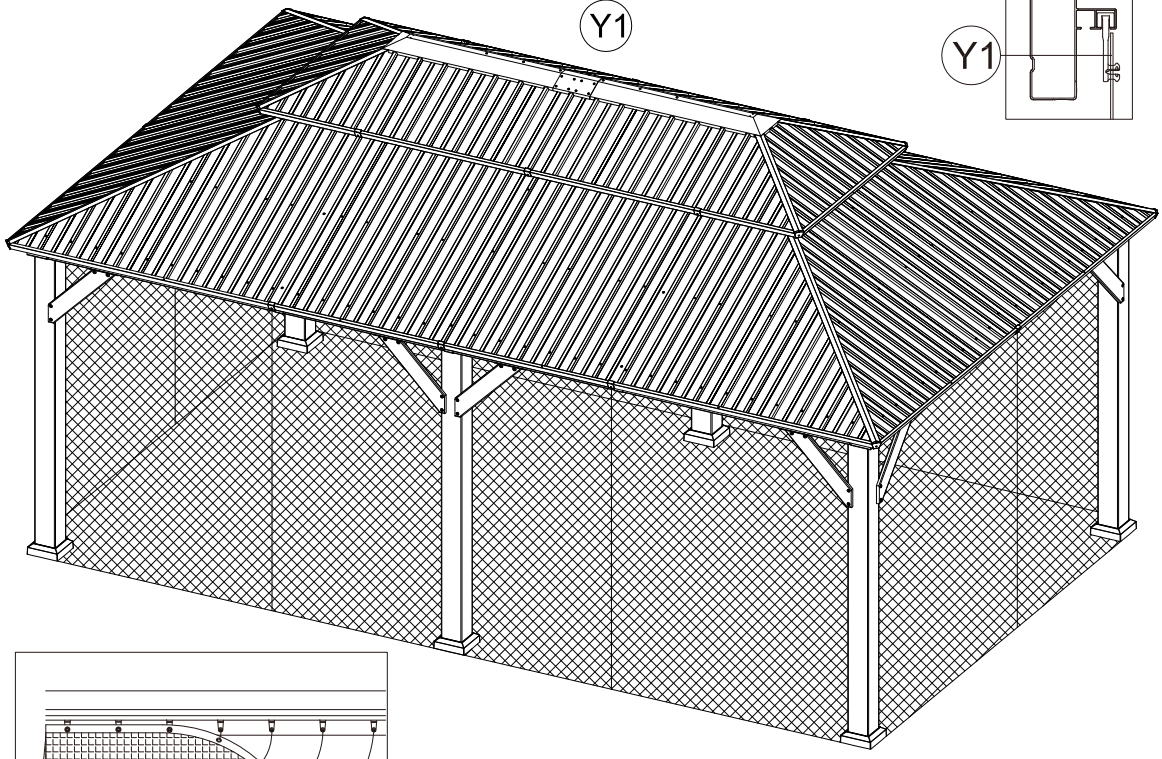

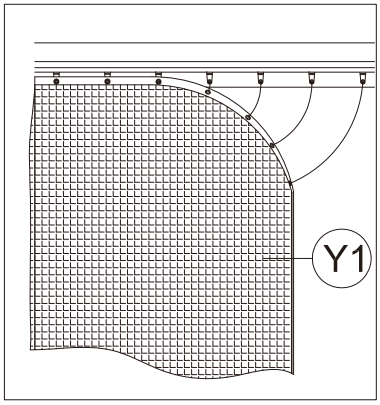


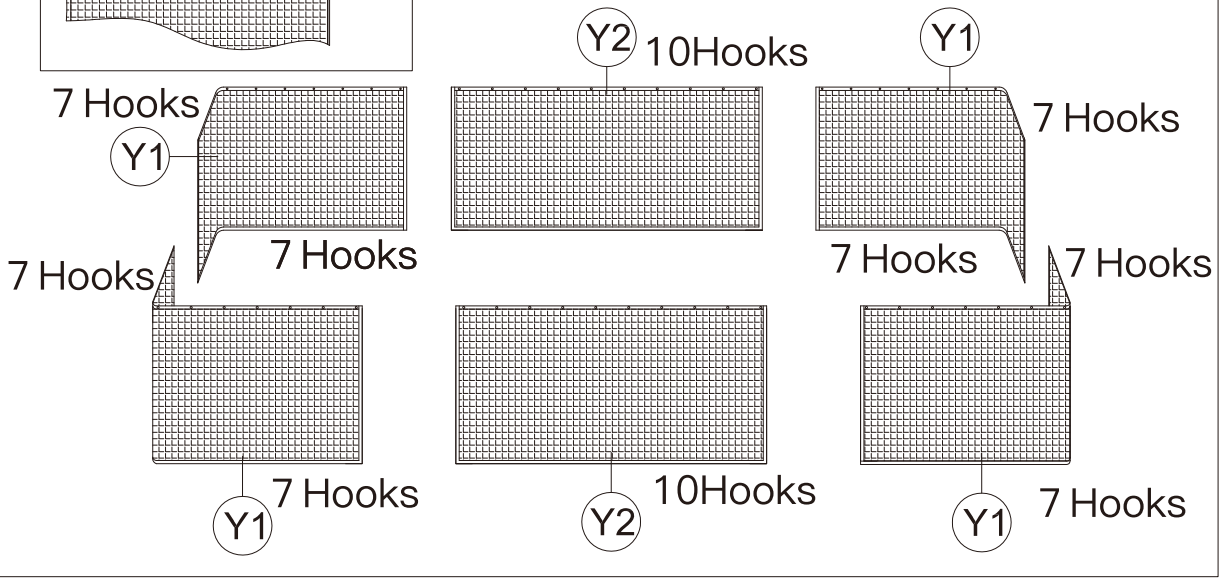

Hang up Solid Sidewalls to Outside Track



Y 4x



Y3 2x

