
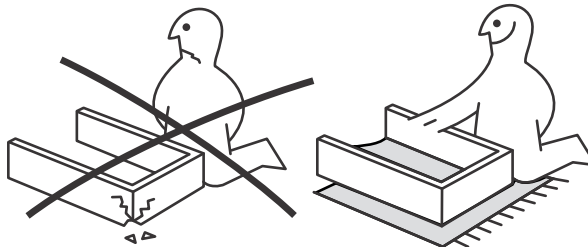
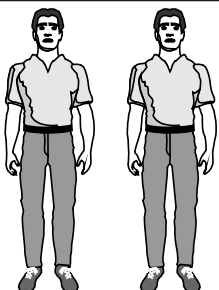



ASSEMBLY GUIDE

GRAND 3-DOOR WARDROBE

SKU S-5691 - White
SKU S-5692 - Mahogany
SKU S-5693 - Mocha
SKU S-5694 - Honey Pine
SKU S-5696 - Java

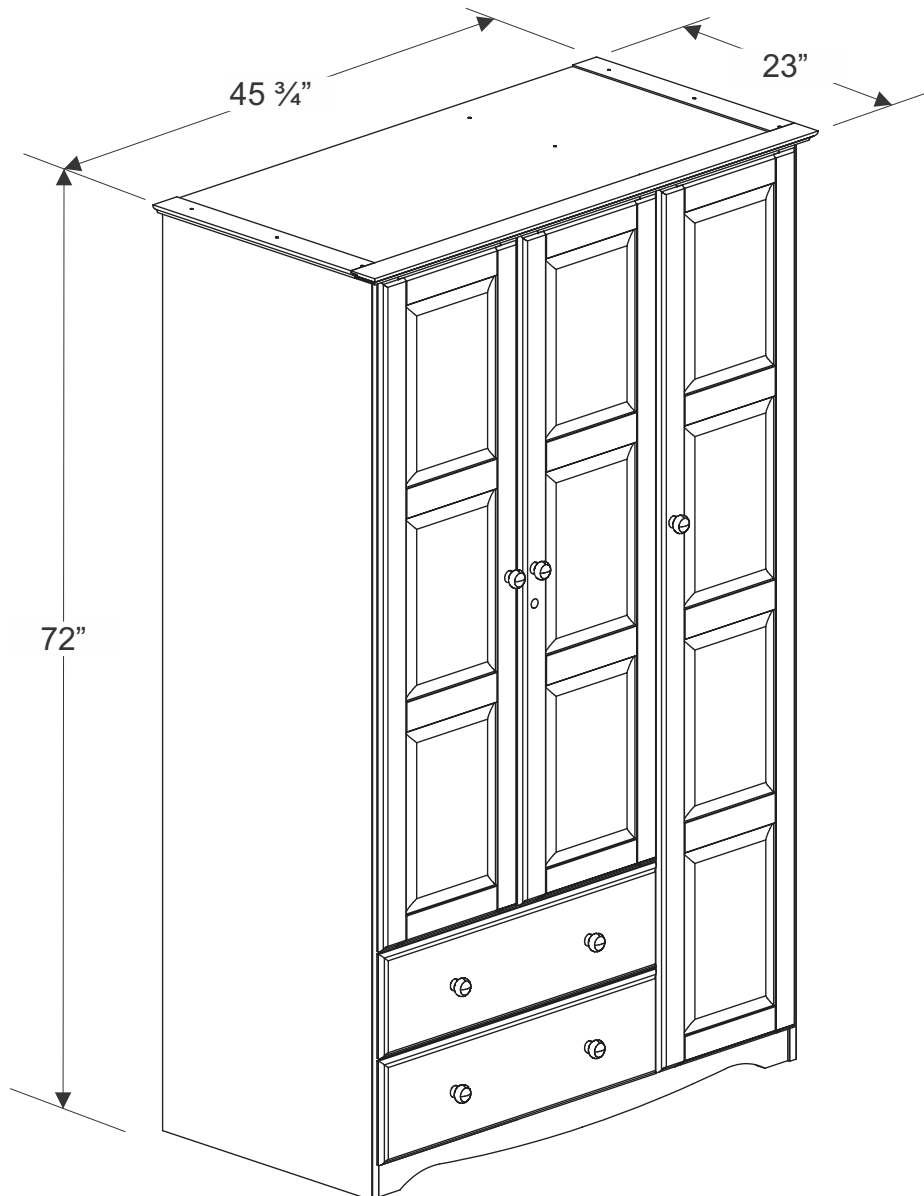

REV - 05/2025

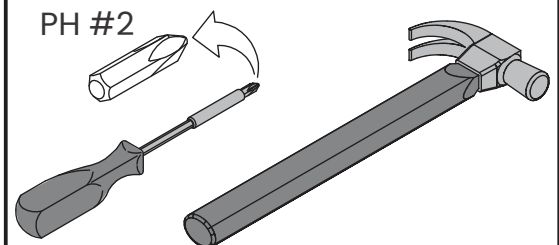

page 2/22


Before You Begin Assembly

- Carefully inspect the package contents. A complete parts checklist is provided below.
- If any parts are missing or damaged, please contact us at info@palaceimportsinc.com for assistance.










Assembly Tips




- Assemble the item on a flat, smooth surface. We recommend placing a blanket or protective covering underneath to prevent scratches.
- Use a power drill **only at a low-speed setting** to avoid damaging components.
- Assemble the product as close as possible to its final location to minimize the need for moving it later.
- Important: The hardware pack contains small parts that may pose a choking hazard.
Keep all small items out of reach of young children.

PARTS LAYOUT

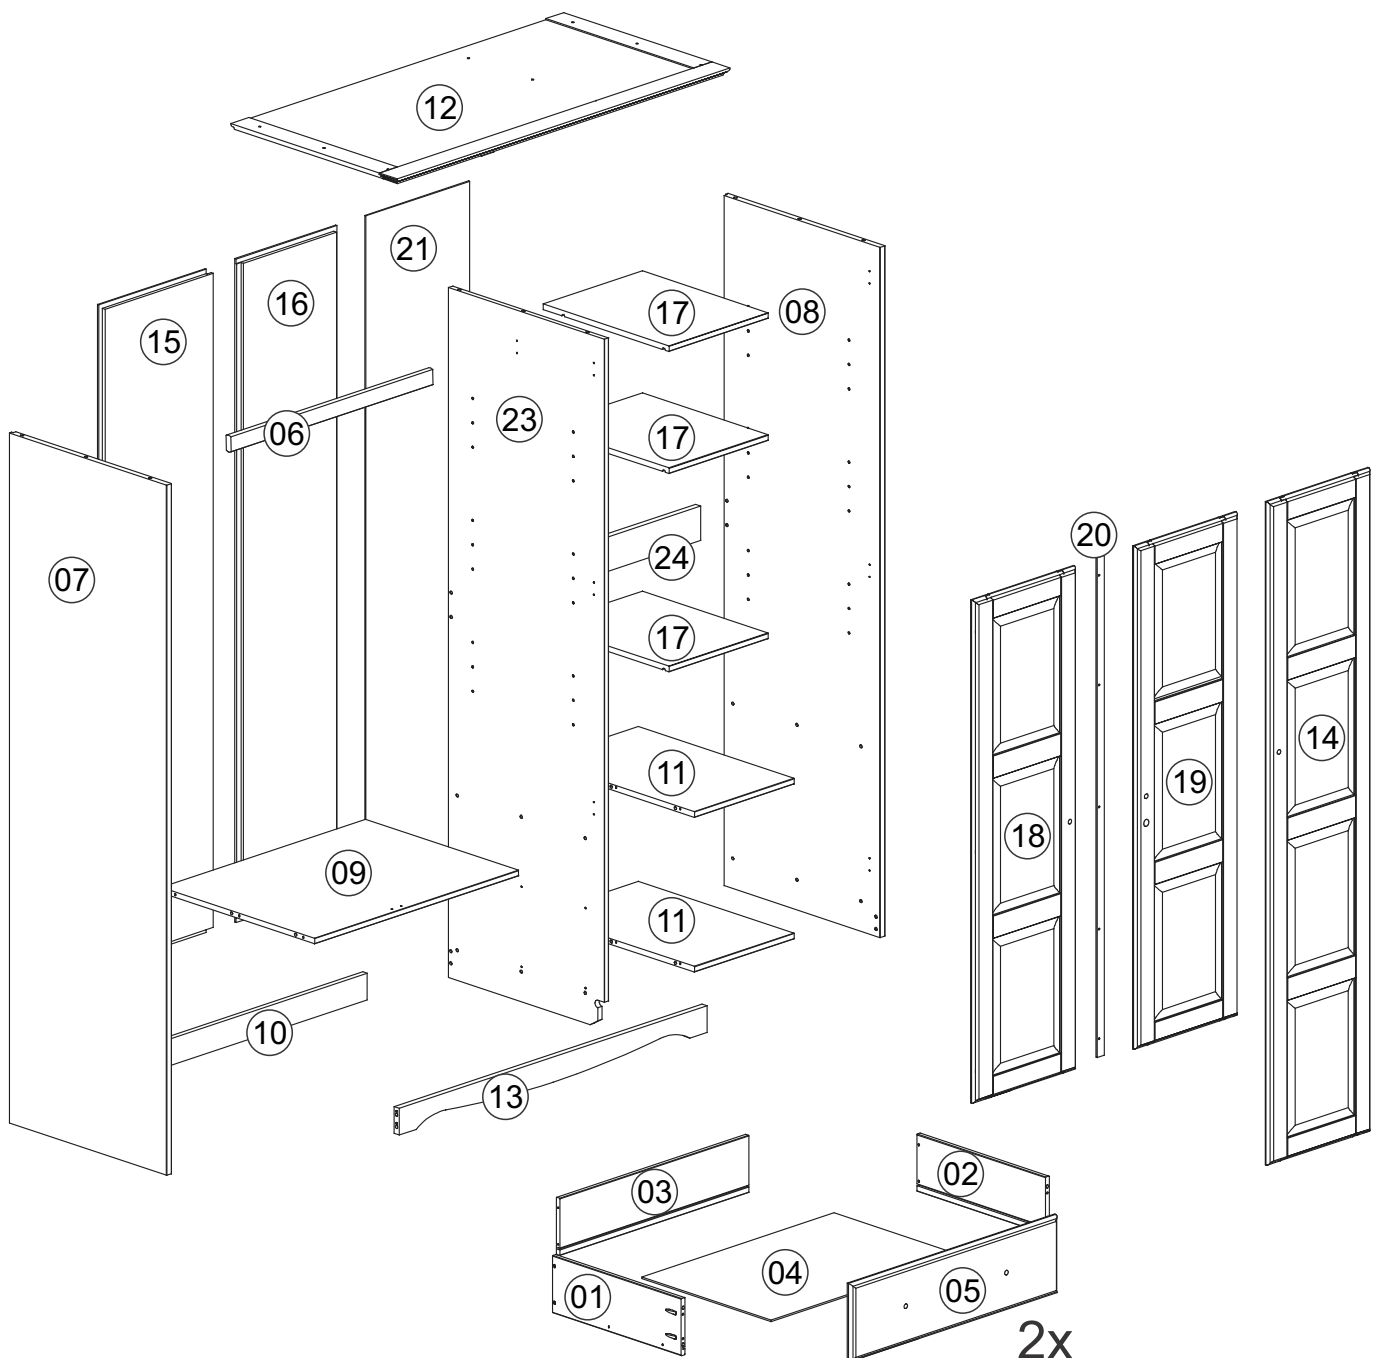


Screws Are Illustrated at Actual Size for Accurate Reference

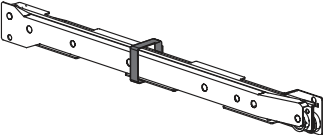A1	 4,0x30	44+3
A4	 3,5x14	8+1
A8	 3,0x20	02+1
A16	 4,0x40	09+1
A41	 4,0x30	07+1
A44	 3,5x14	57+3
B31	 6,0x10	16+1
C2	 8,0x25	47+3
D3	 45x27x12	02
D4		12
D10		02
D16	 17,5x17,5x13	01
D27		05+1
D35	 50x13x1,2	02
E21	 385mm - 15 1/4"	02
E22		02

F1		01
F2		01
F3		02
F10		09
G1	 10x10	49
H1		07

TIPOVER RESTRAINT KIT

A47	 3,0x20	02+1
F8	 47x20x9	02
F15	 300mm	01



WARNING:
CHOKING HAZARD

Contains small parts - choking hazard.
Adult supervision is required during assembly.
Not suitable for children under 3 years of age.




WARNING:

Important Safety Notice:




This furniture includes tip-over prevention hardware, which **MUST** be securely attached to the wall as outlined in the assembly instructions. Failure to do so may result in serious injury or death.


01)

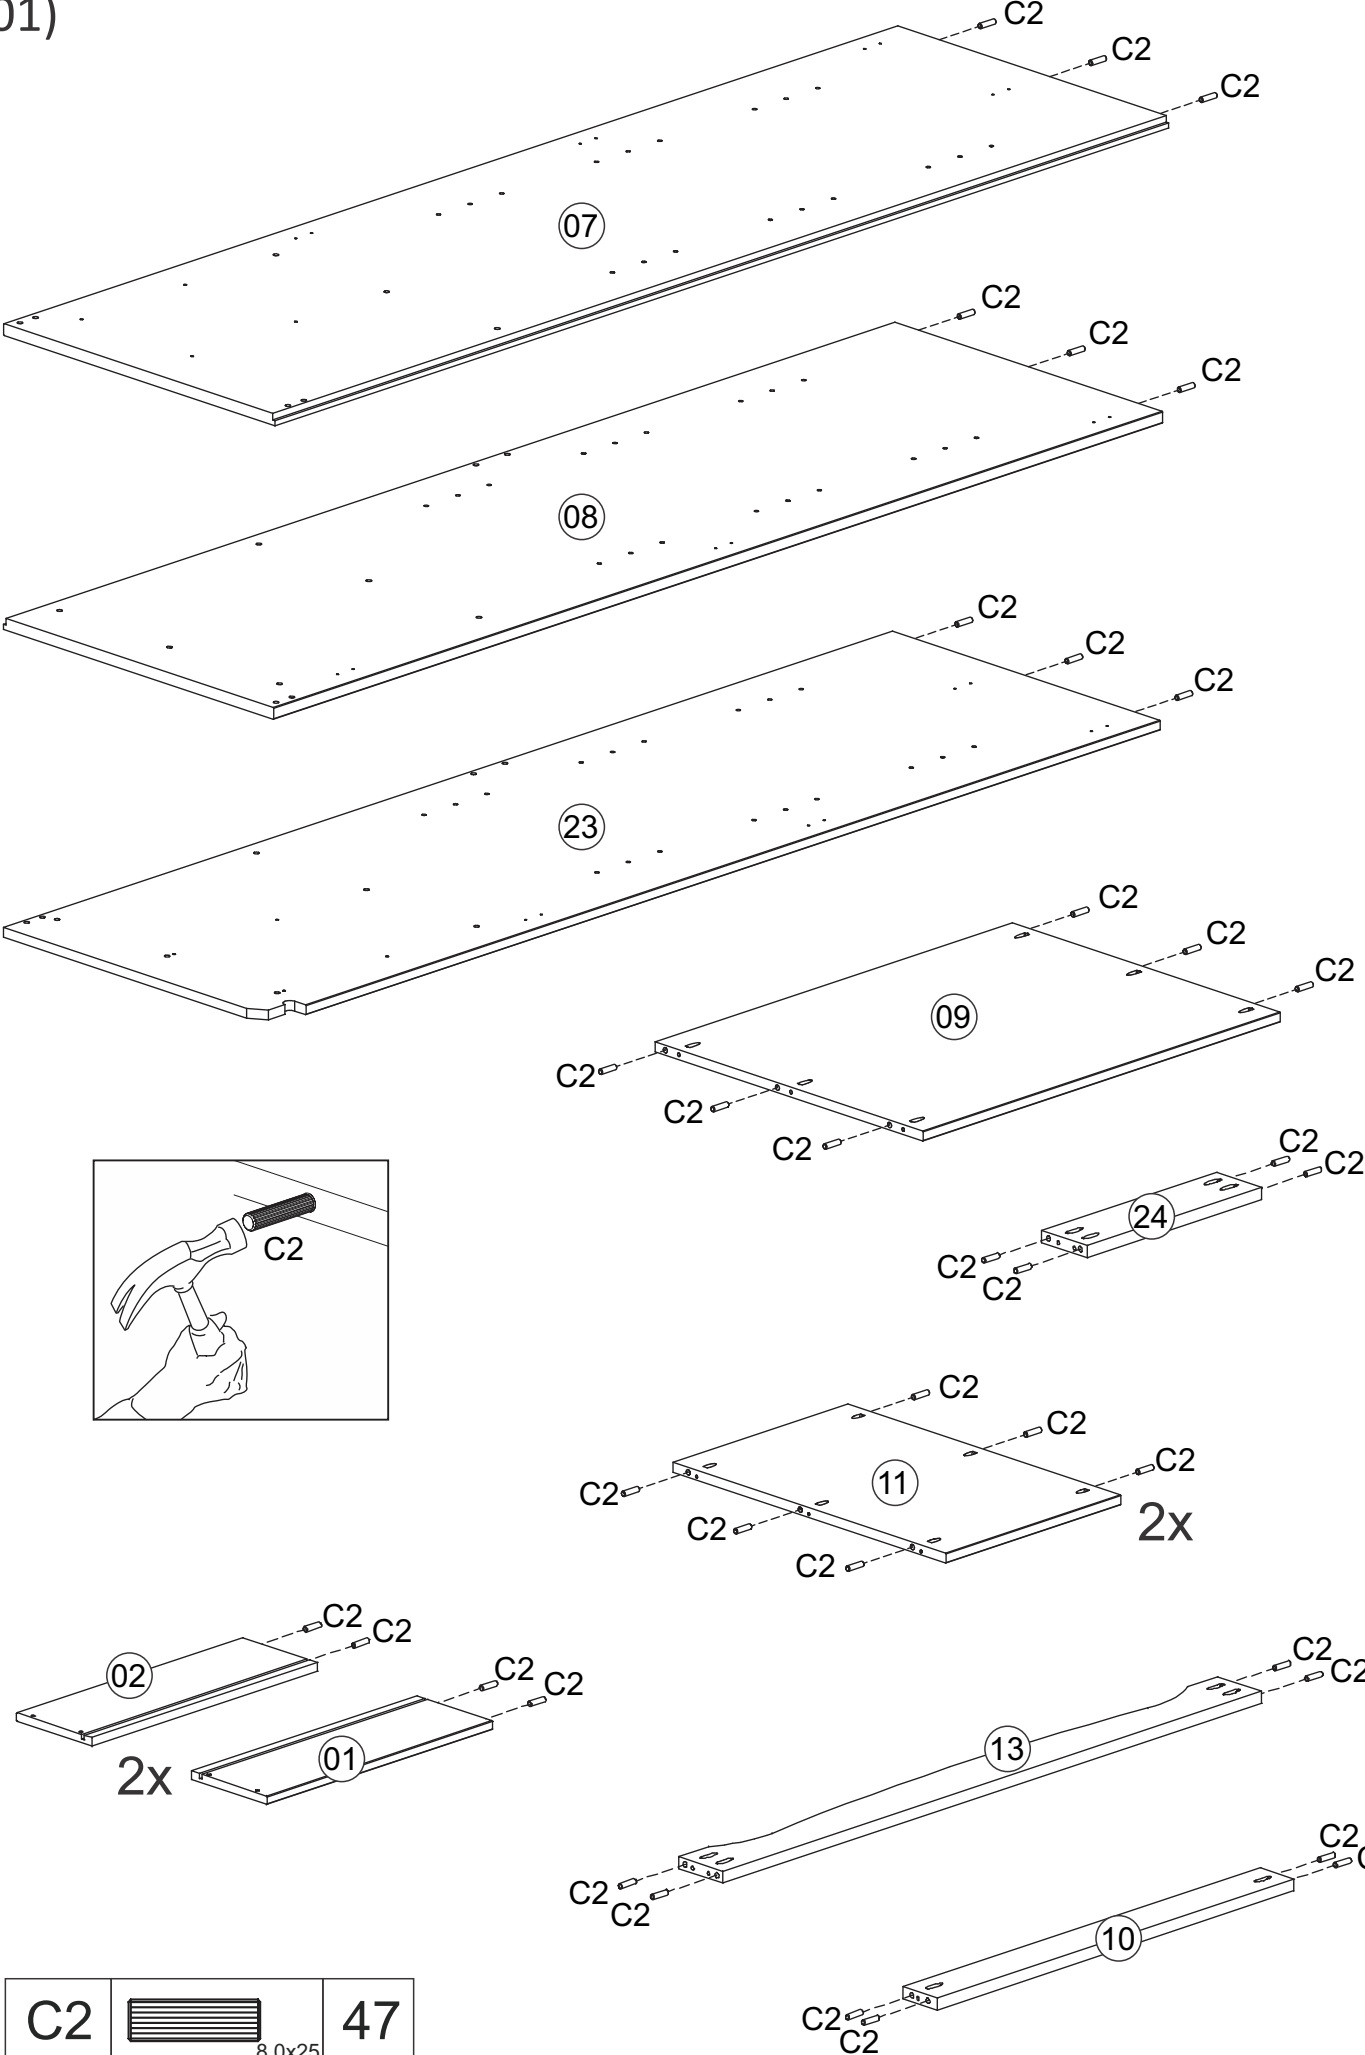




C2		47
8,0x25		

02)

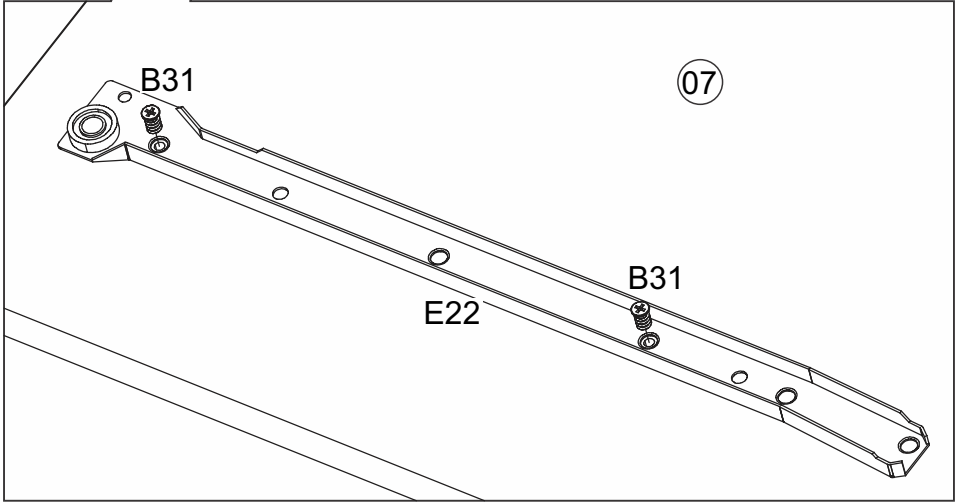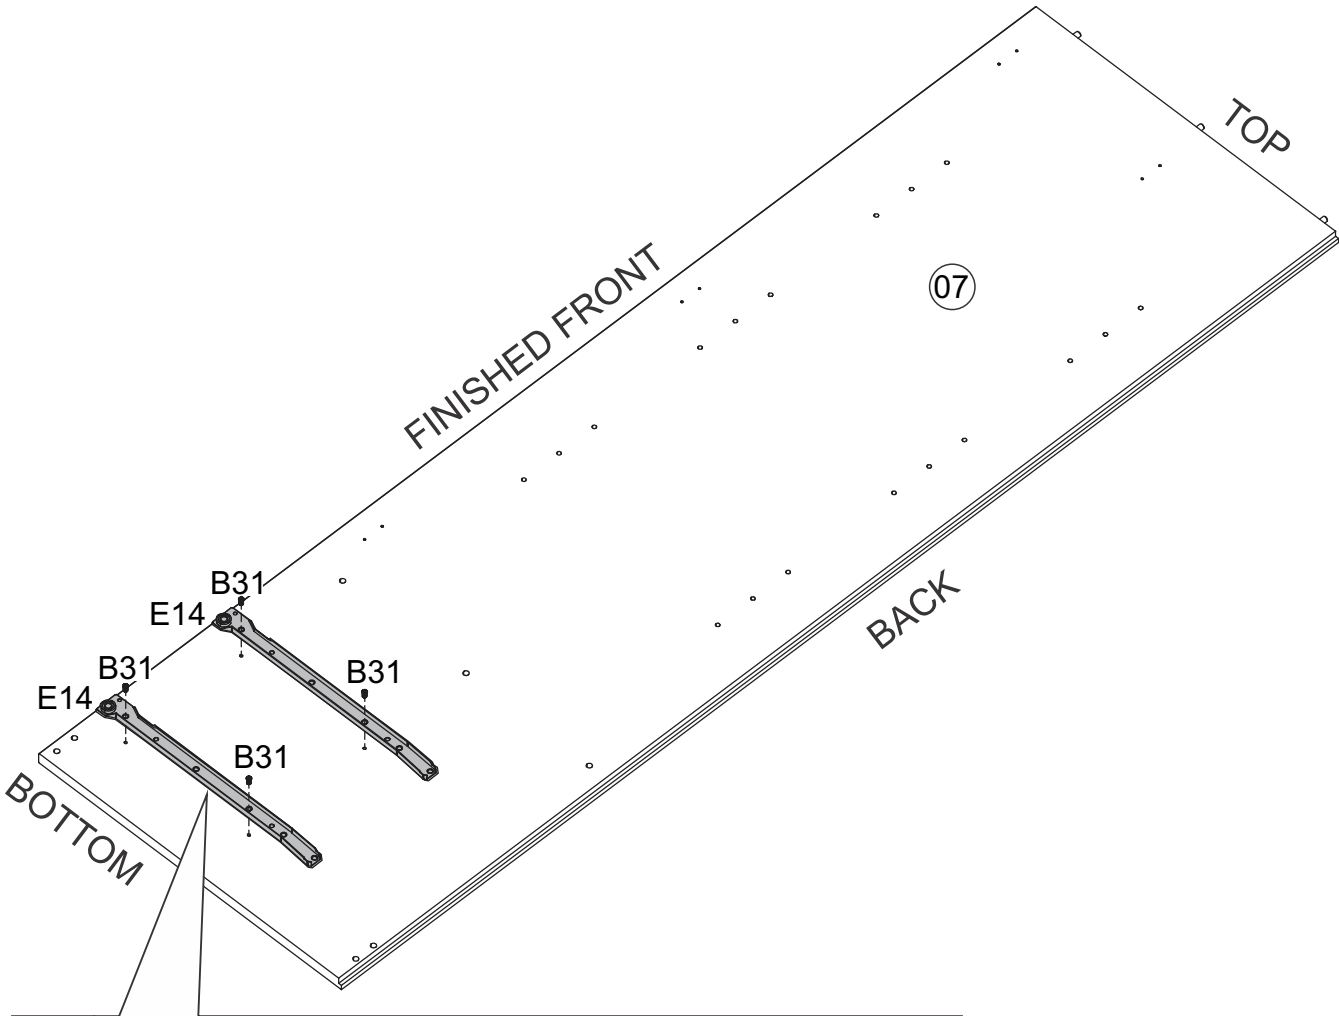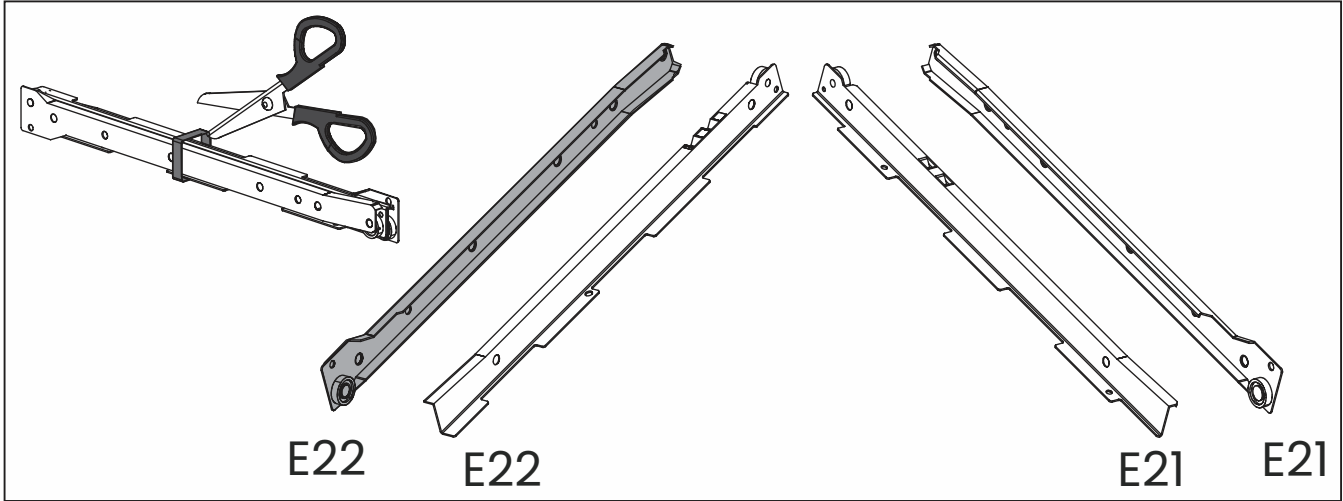


B31	 6,0x10	04
E22	LEFT Side 	02

03)

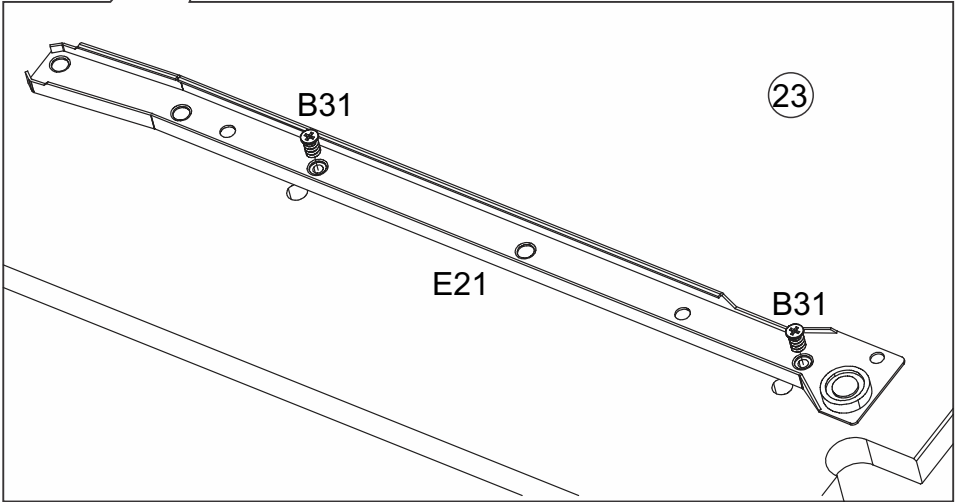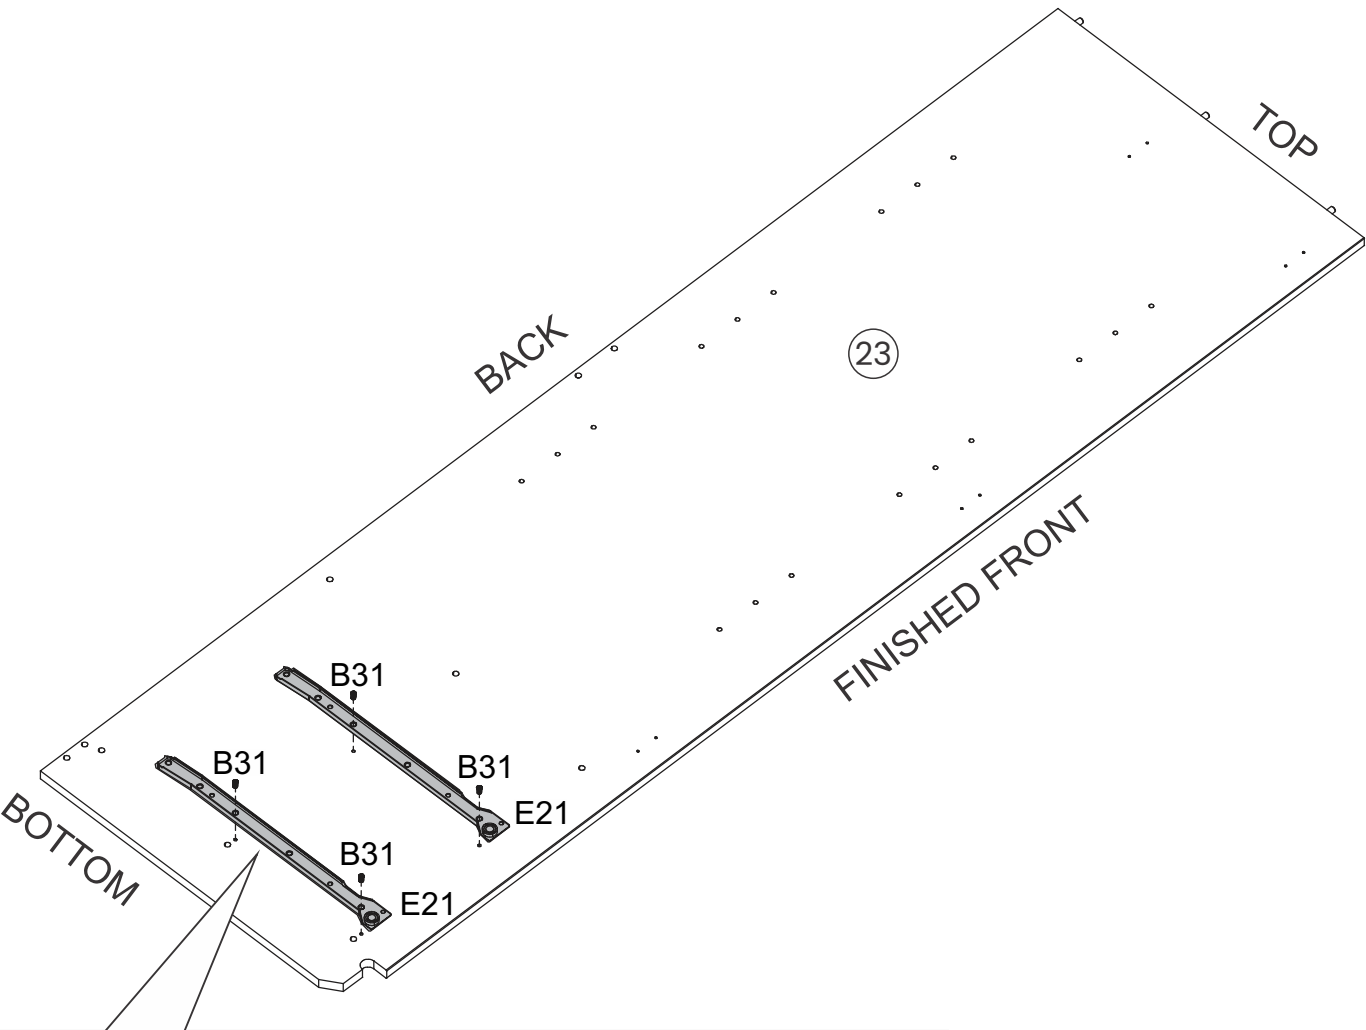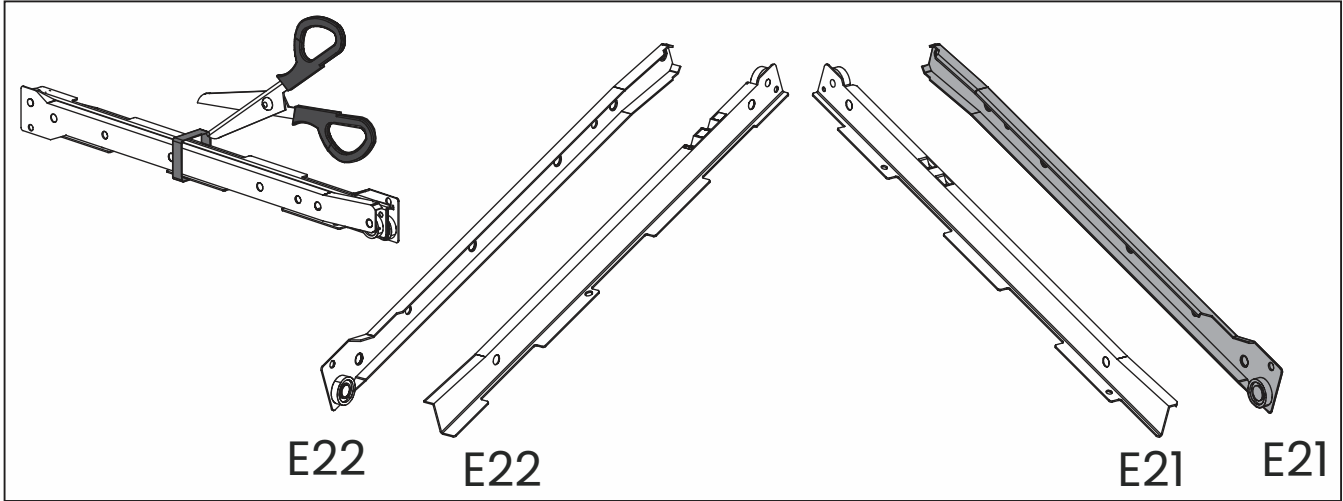

B31	 6,0x10	04
E21	 RIGHT Side	02


04)

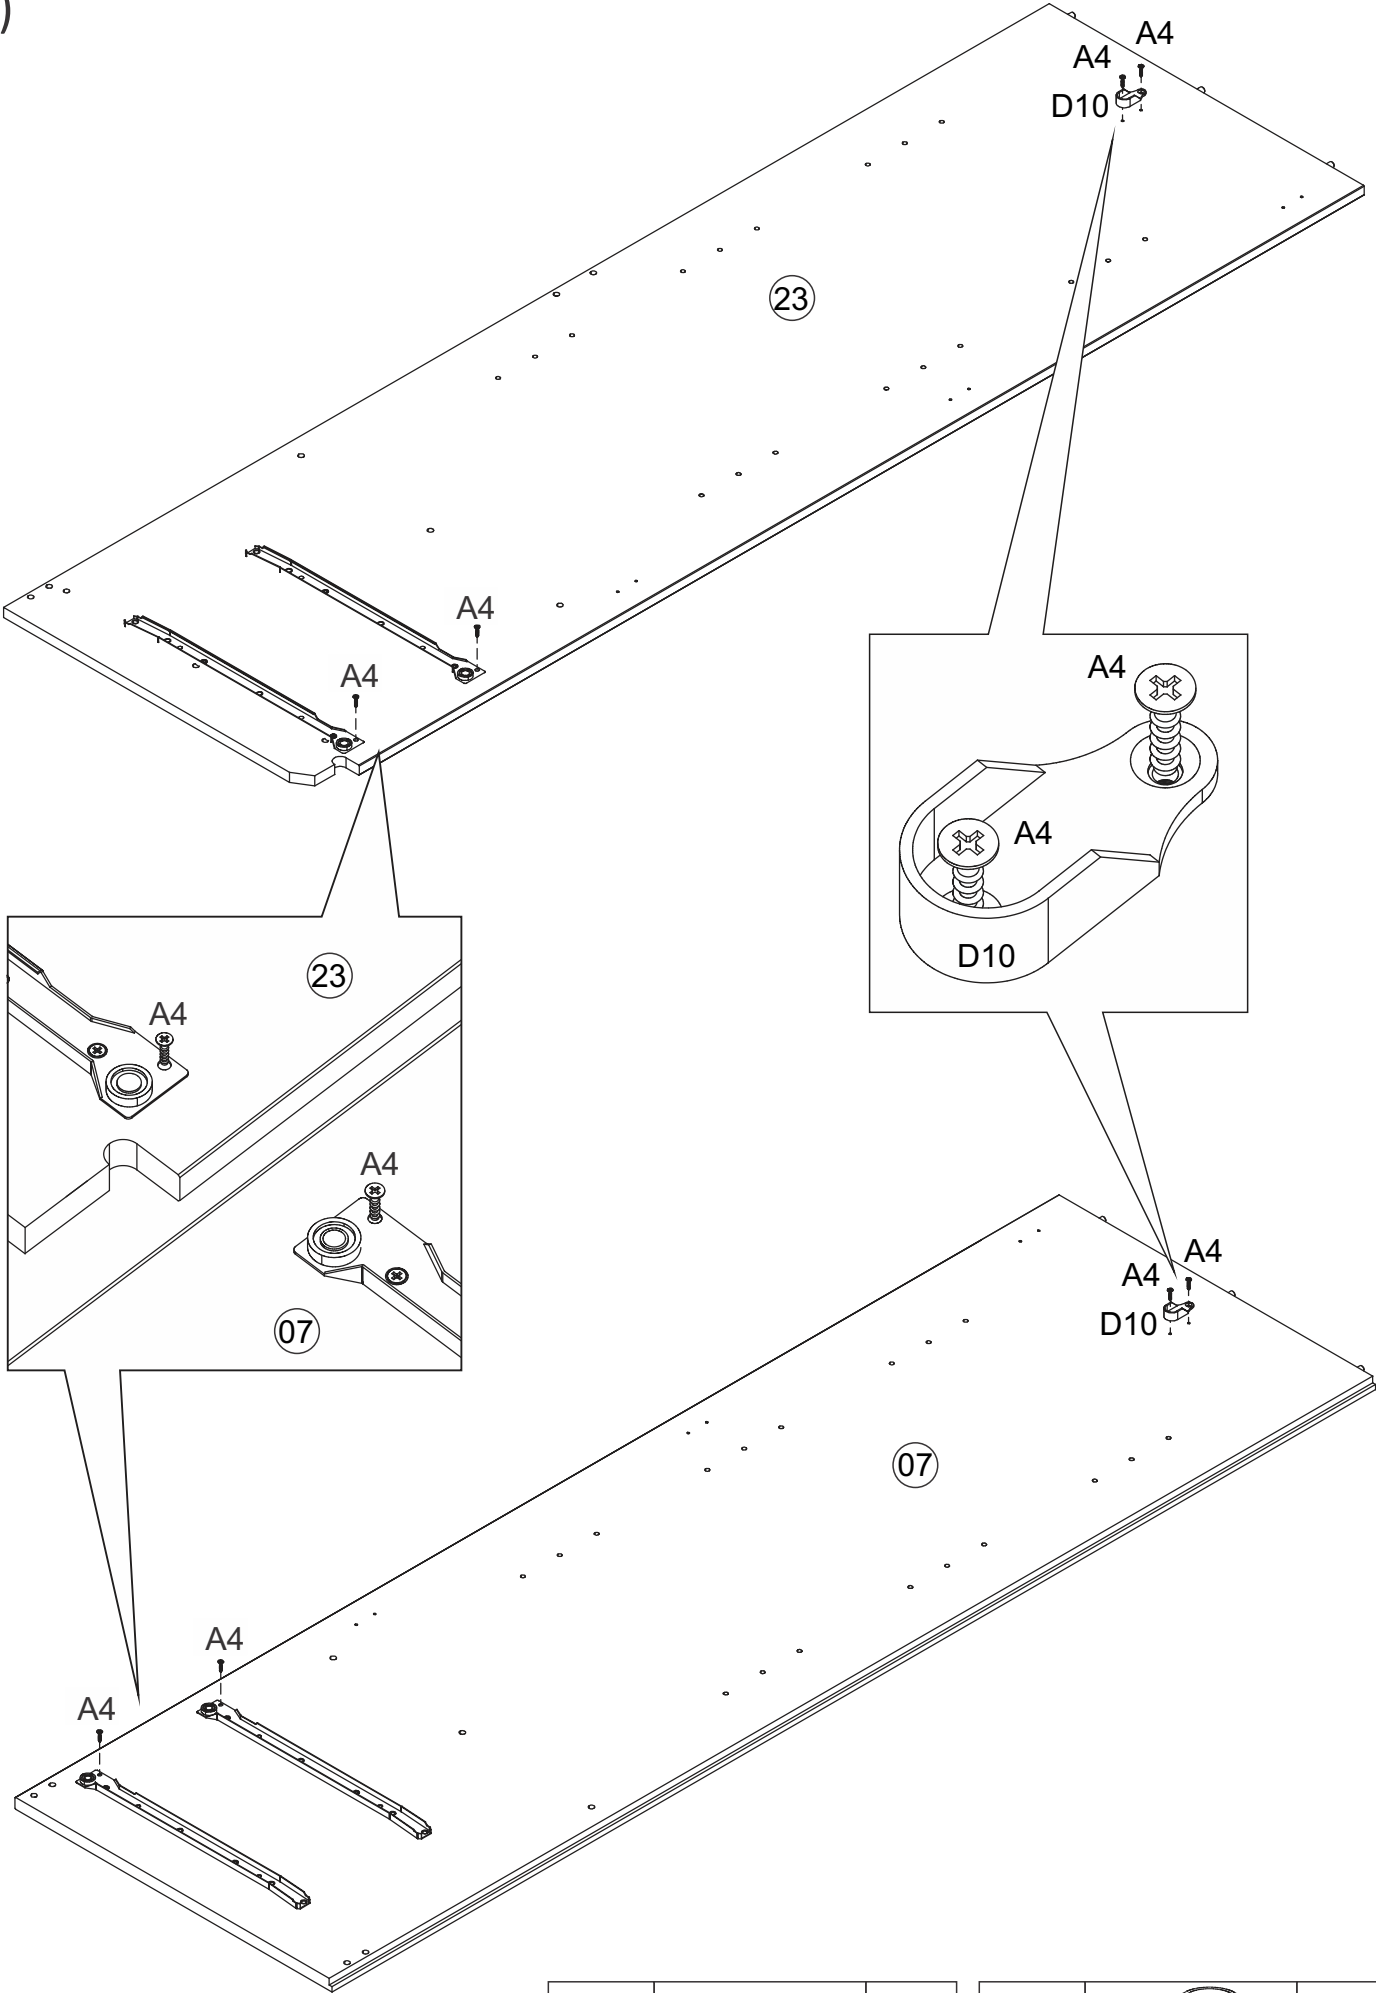


A4		08	D10		02
----	---	----	-----	---	----

3,5x14



05)

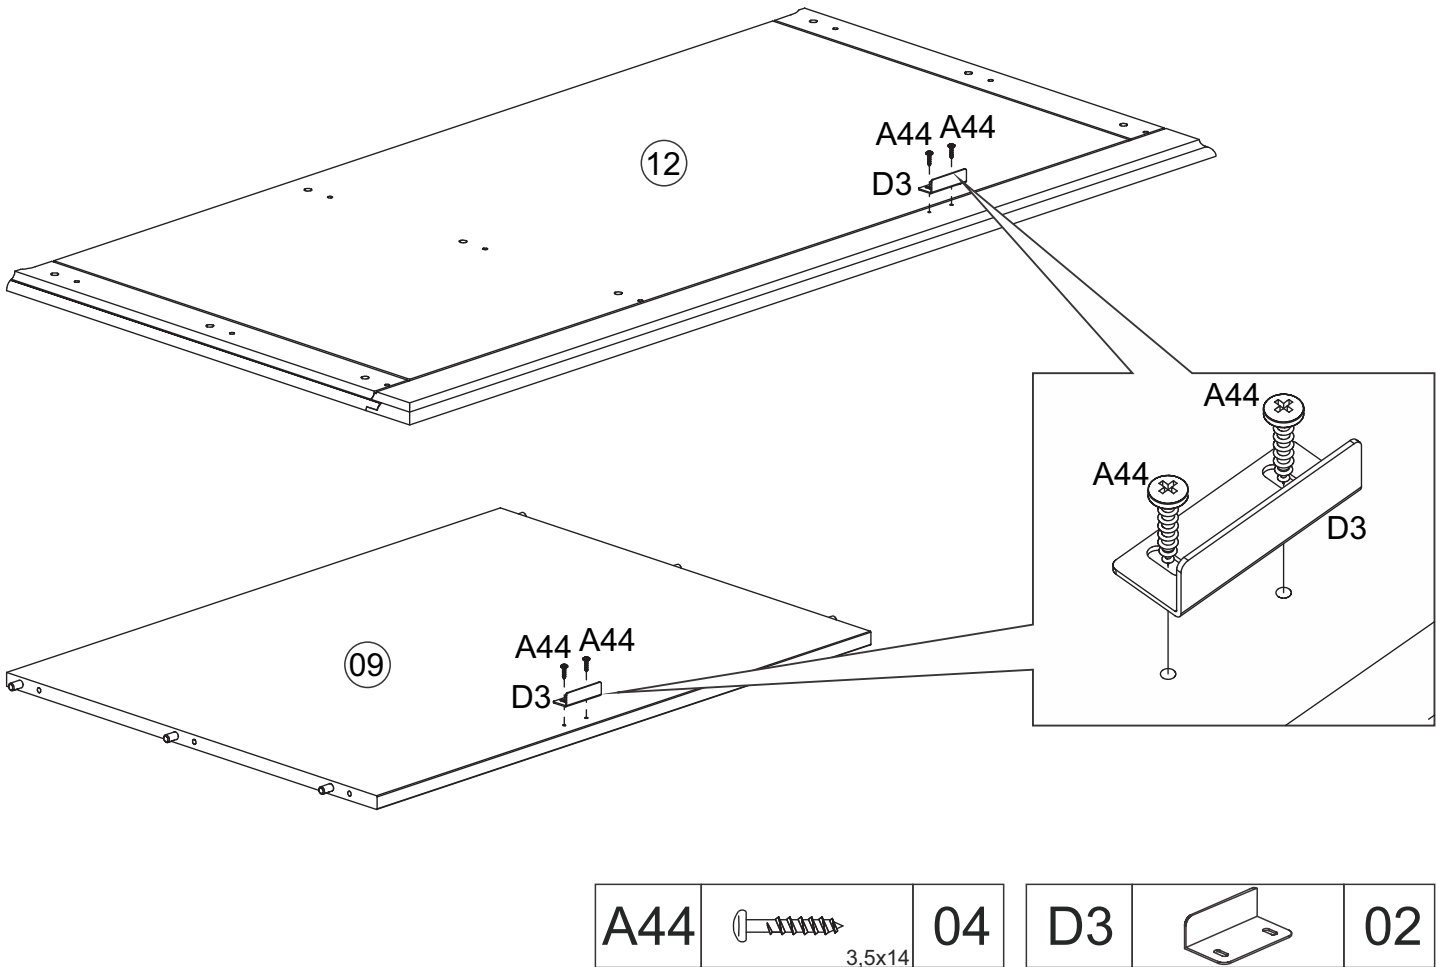

06)


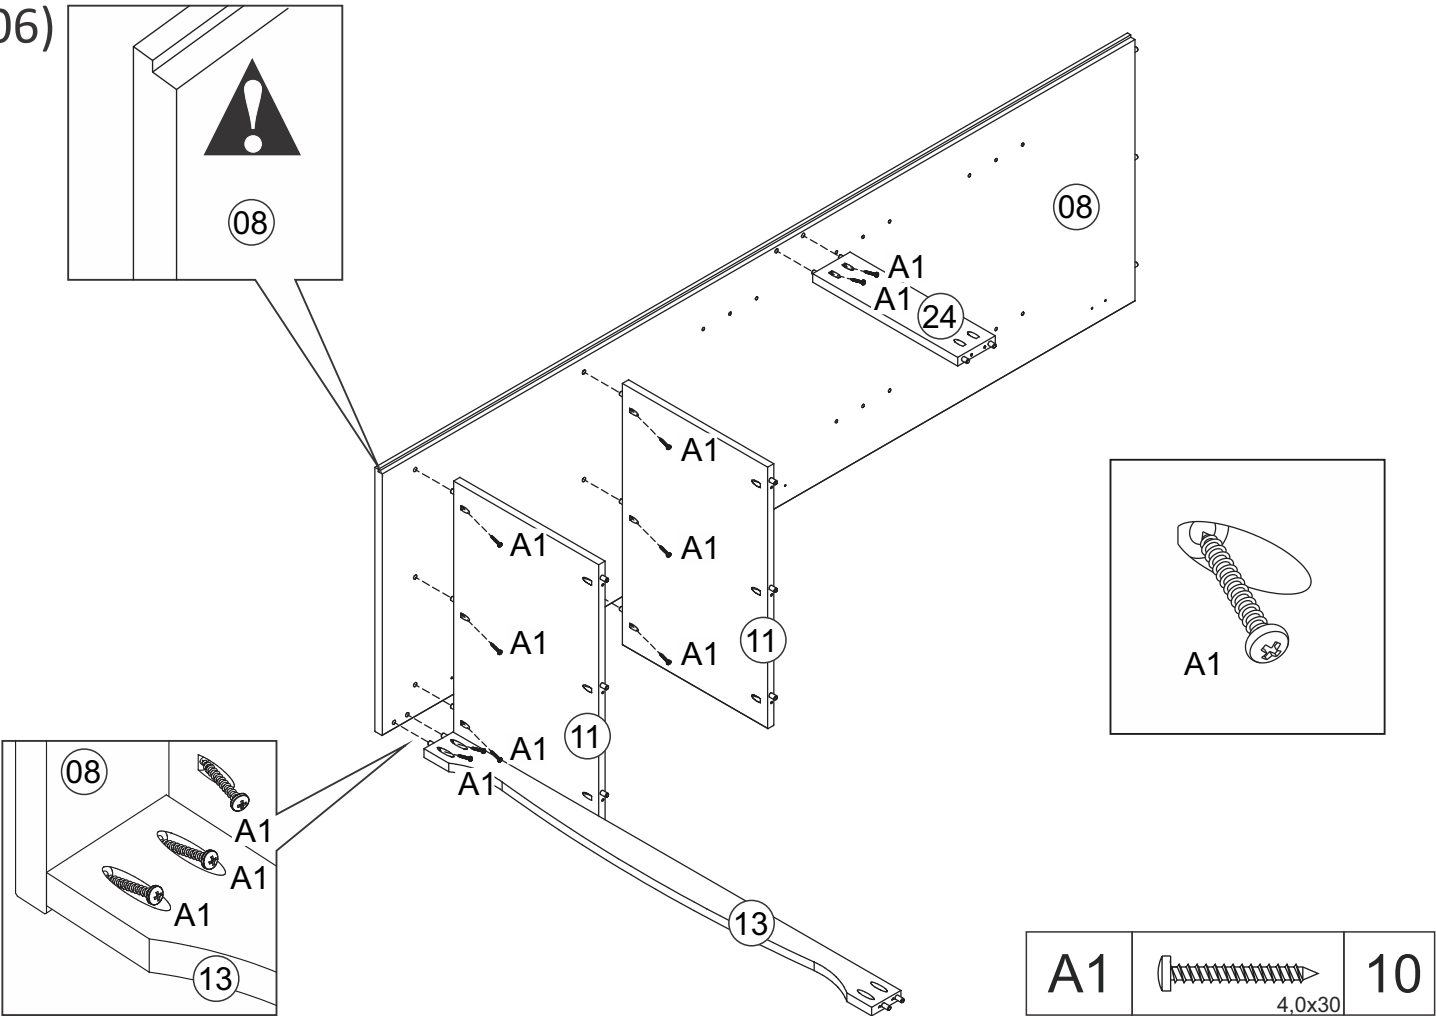



07)

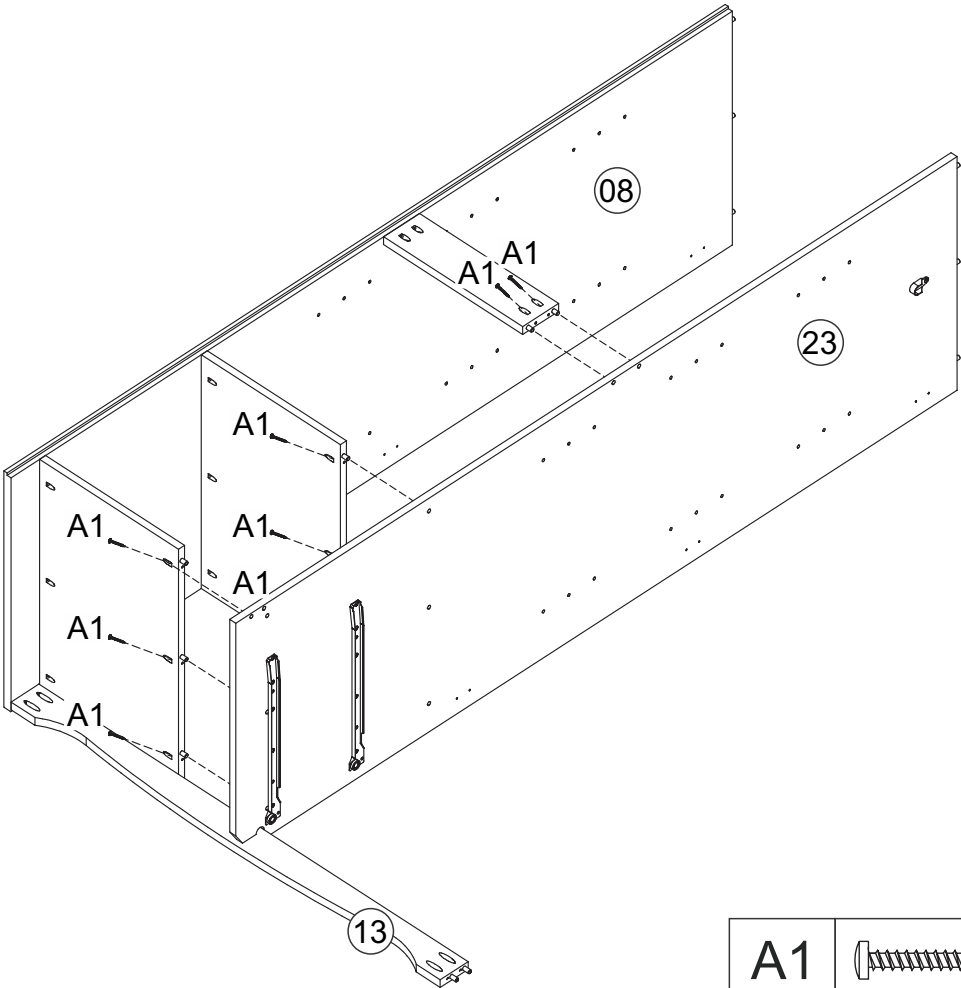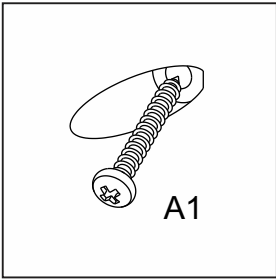



A1		08
4,0x30		

08)

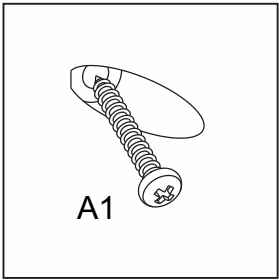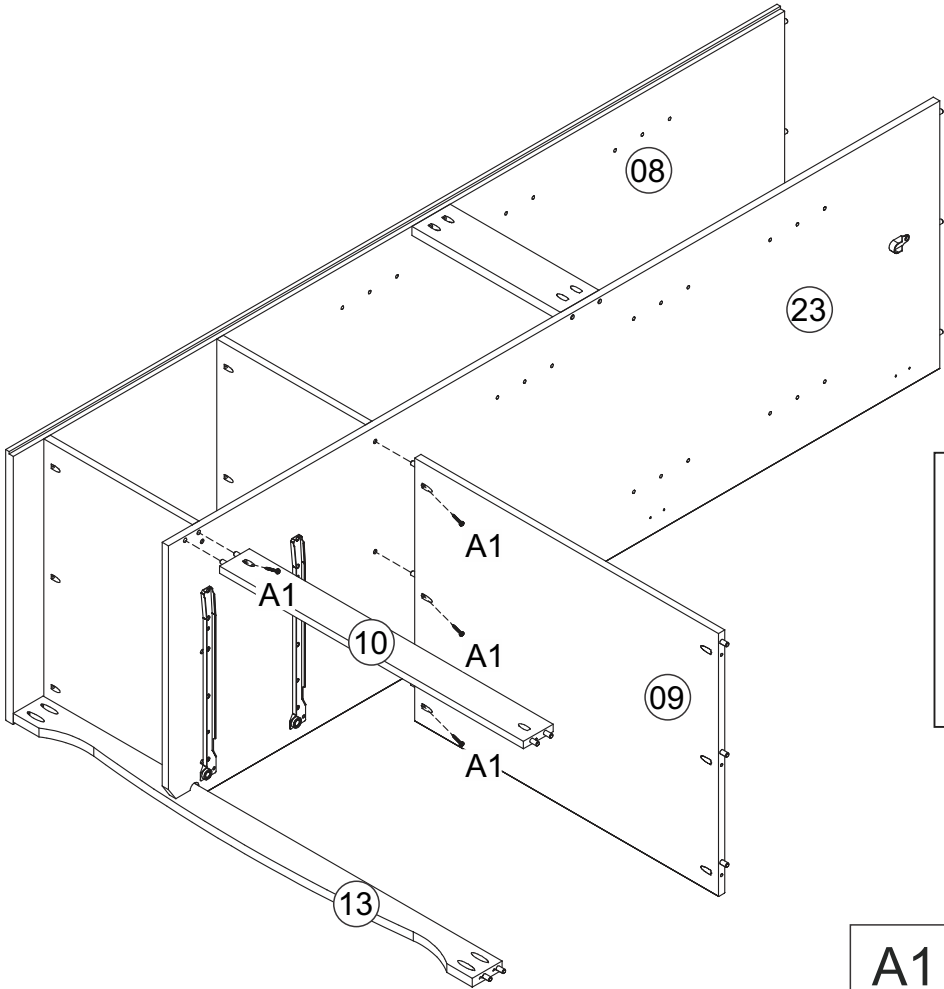



A1		04
4,0x30		

09)

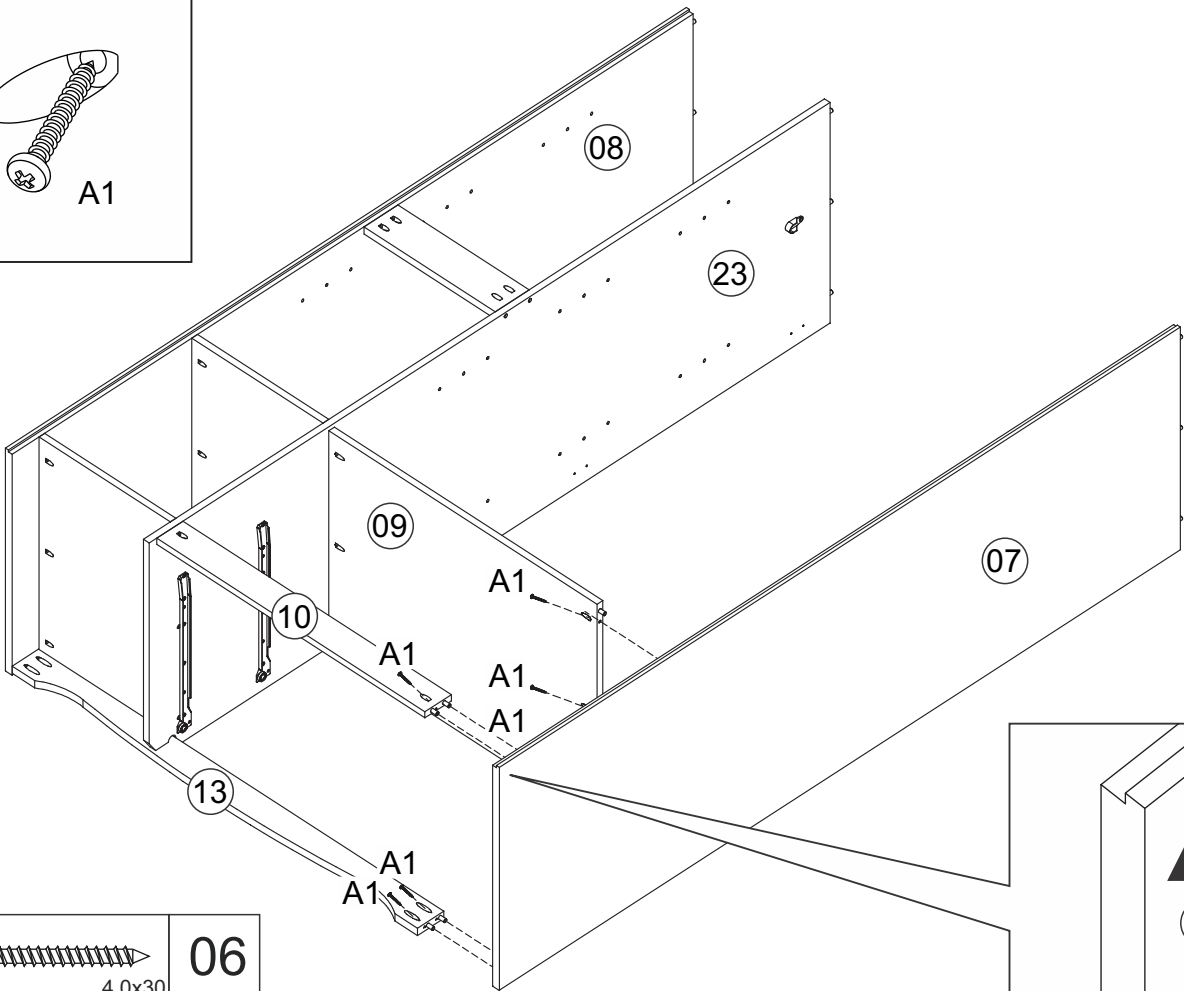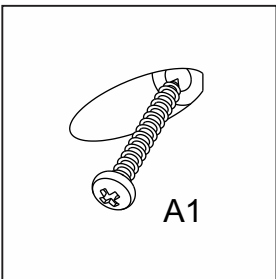


A1		06
4,0x30		

10)

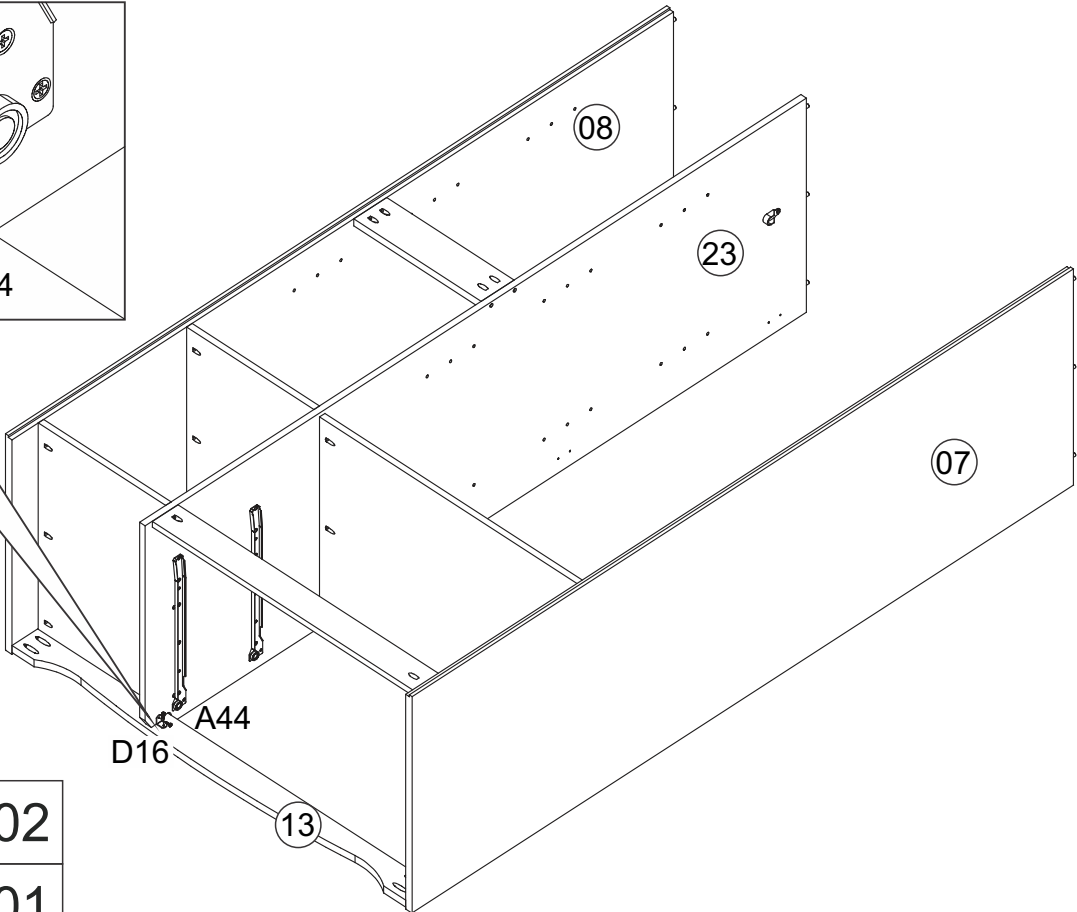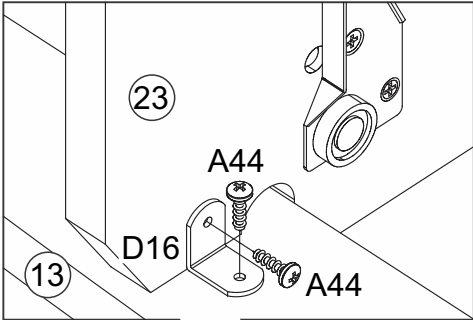


A44		02
3,5x14		
D16		01


11)

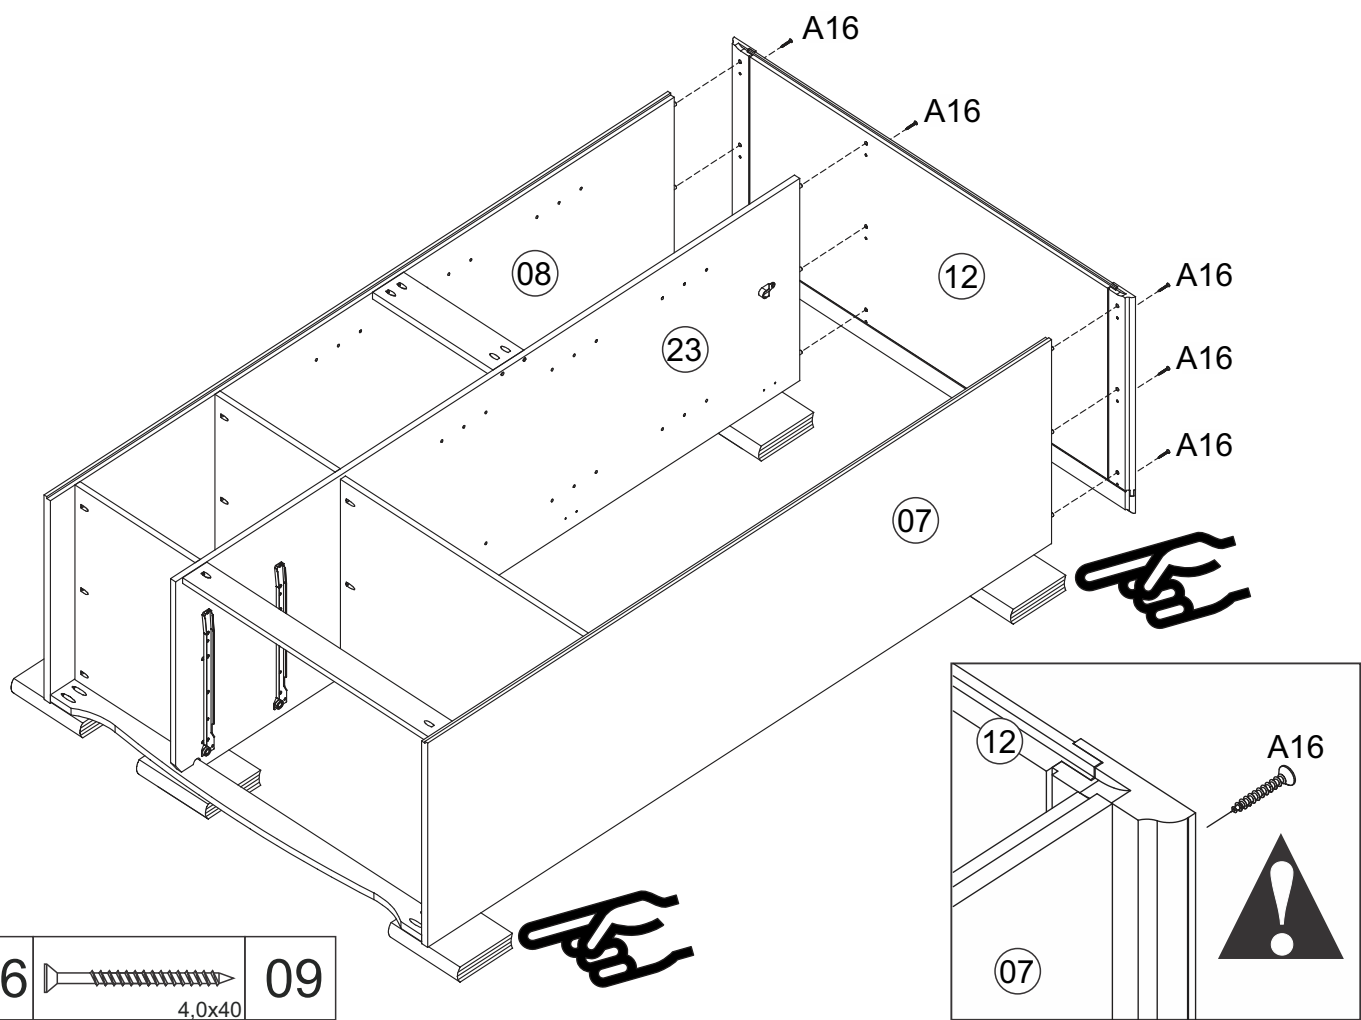


12)

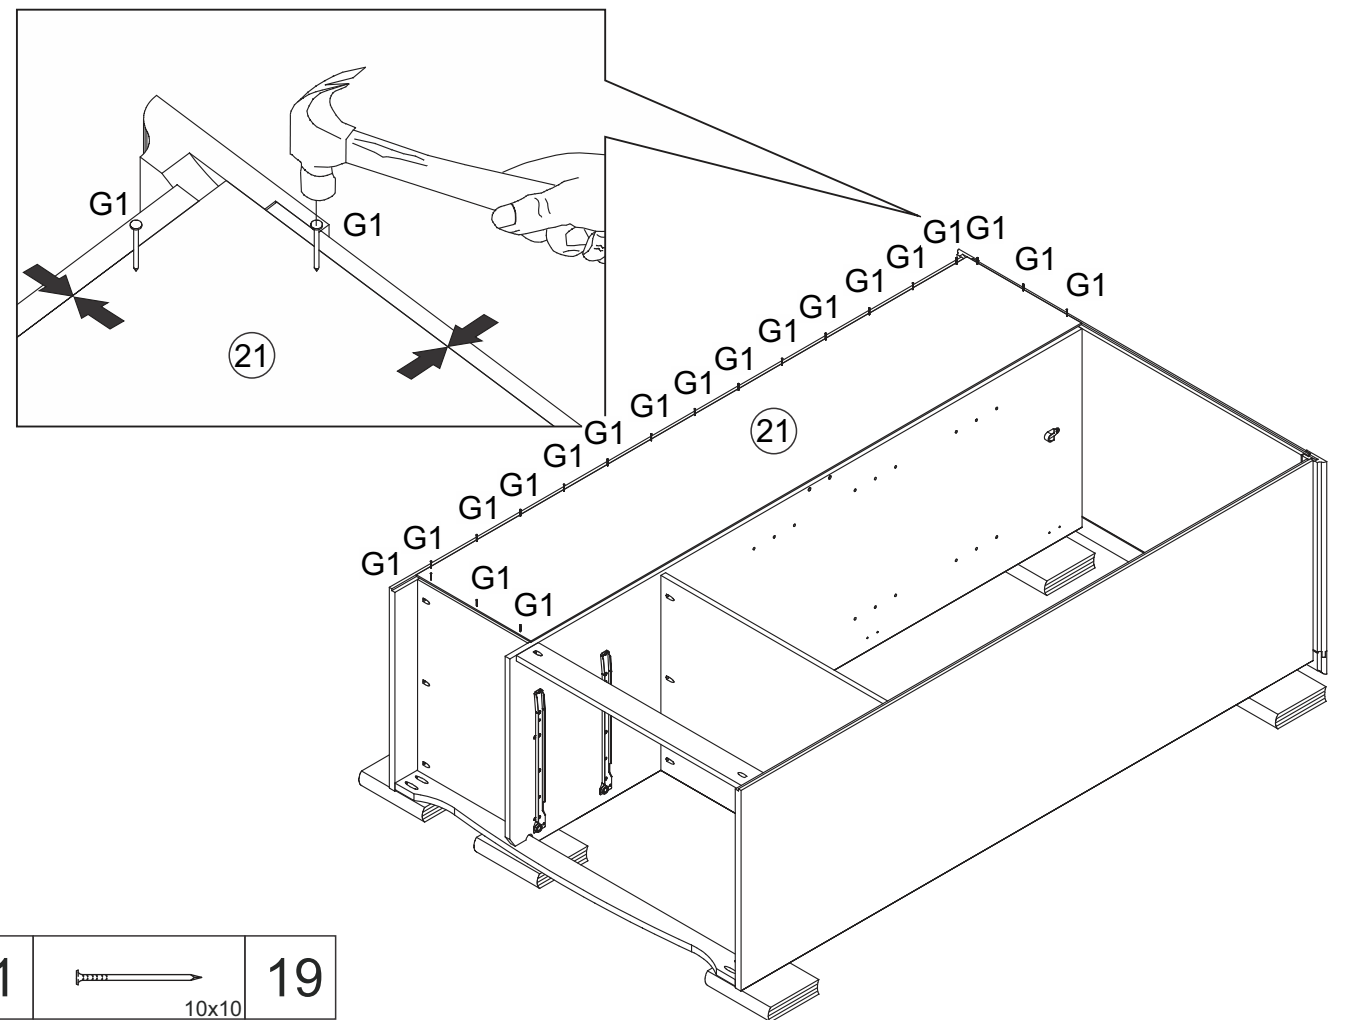


13)

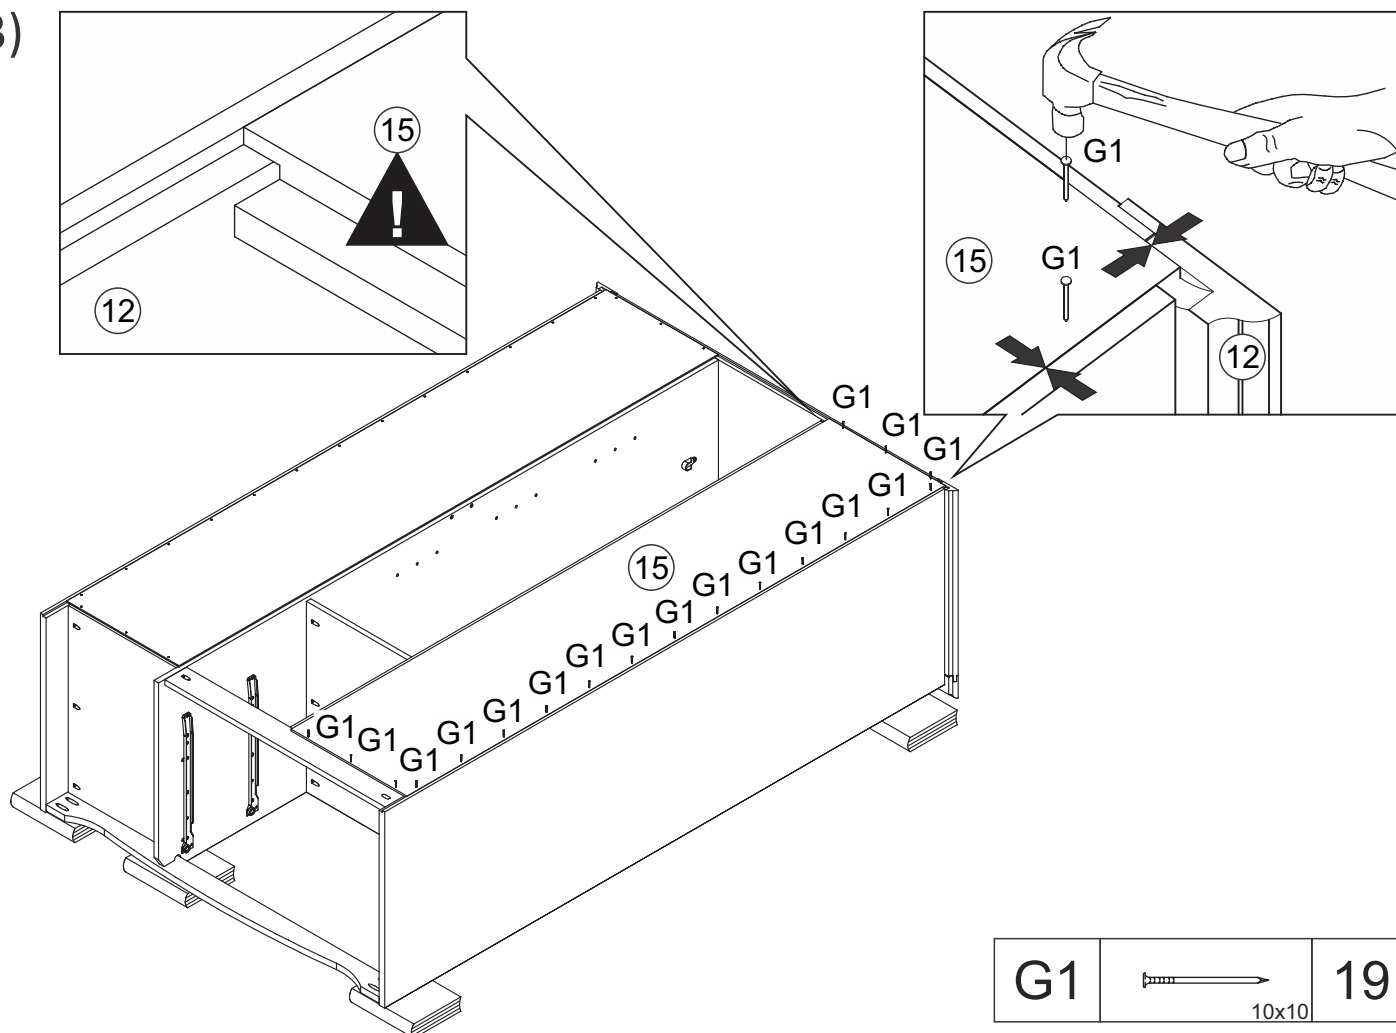

14)

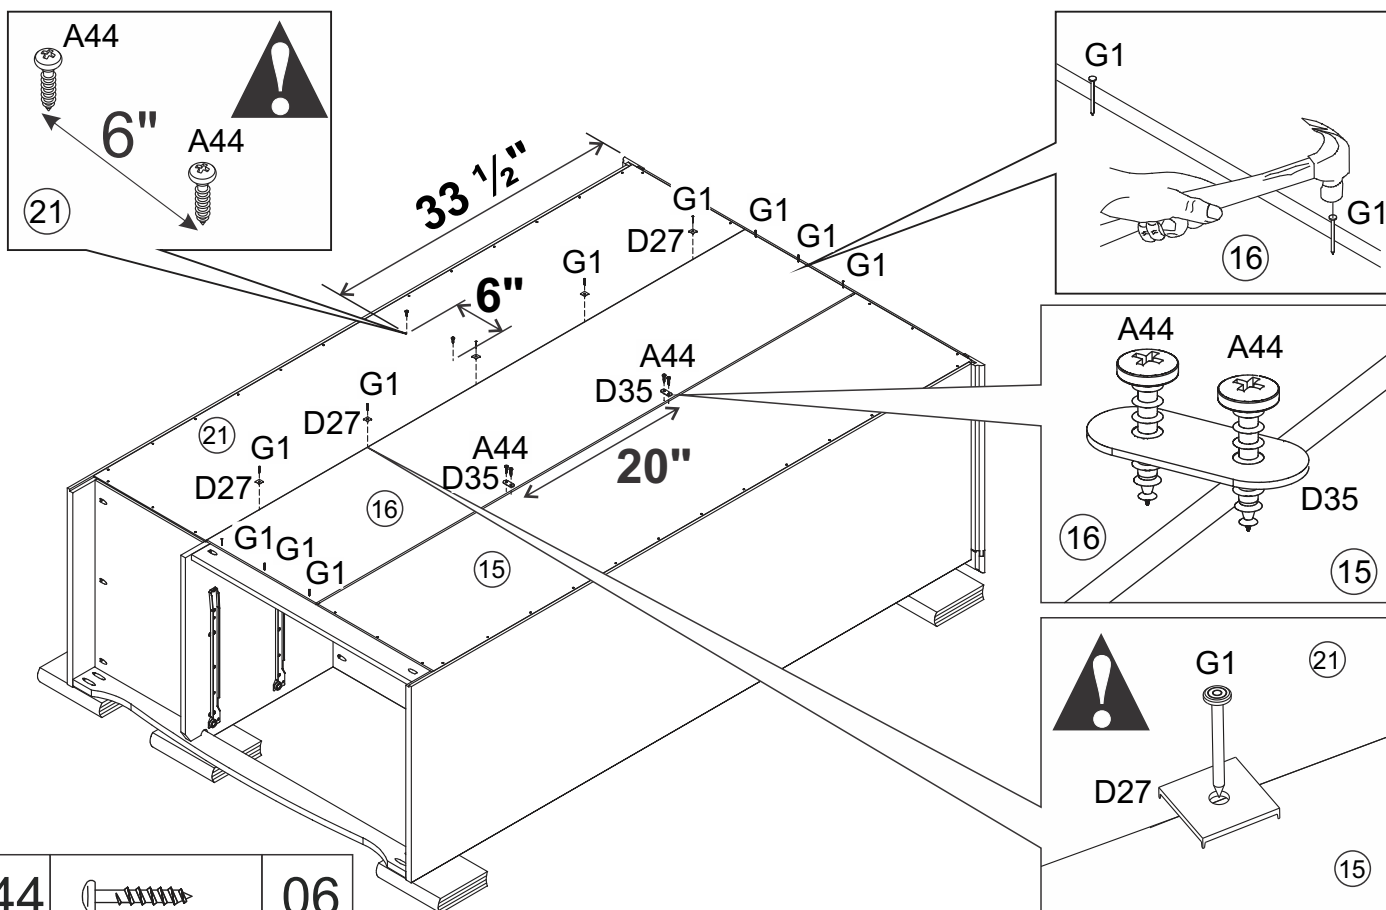


15)


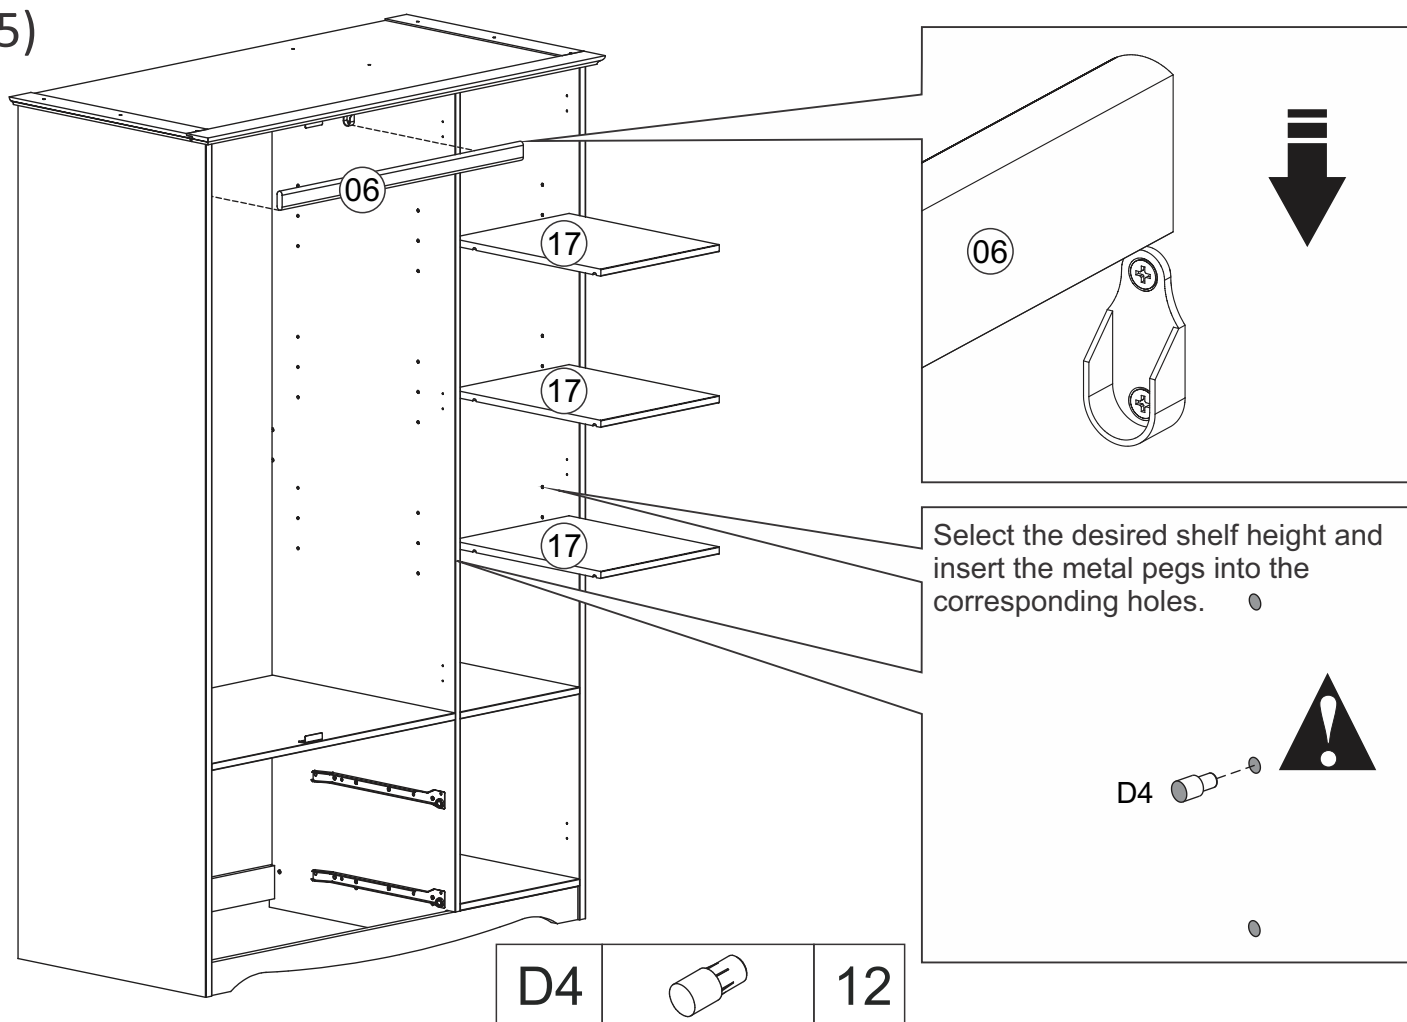


16)

If the hinge (F10) is detached, attach it to the hinge plate by aligning and pushing it in until it clicks securely into place.

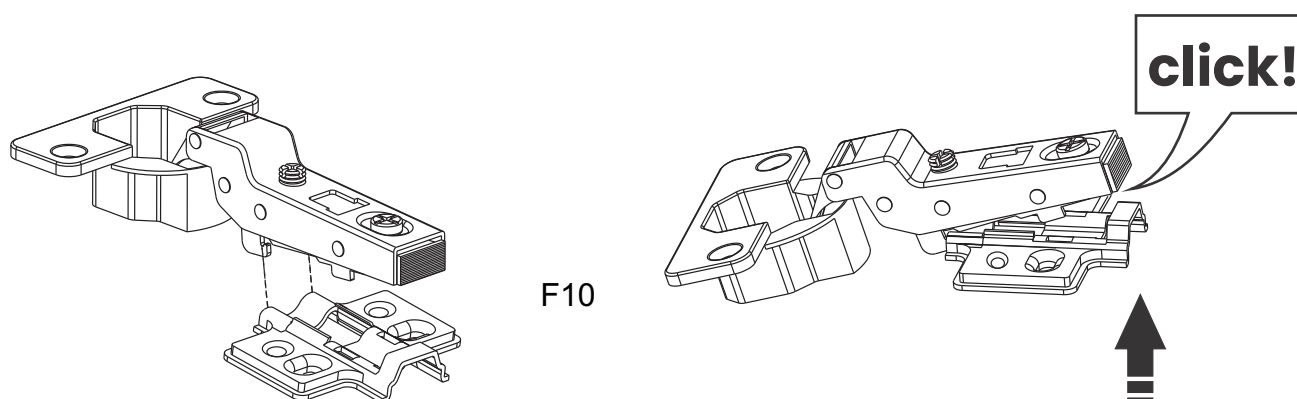

17)

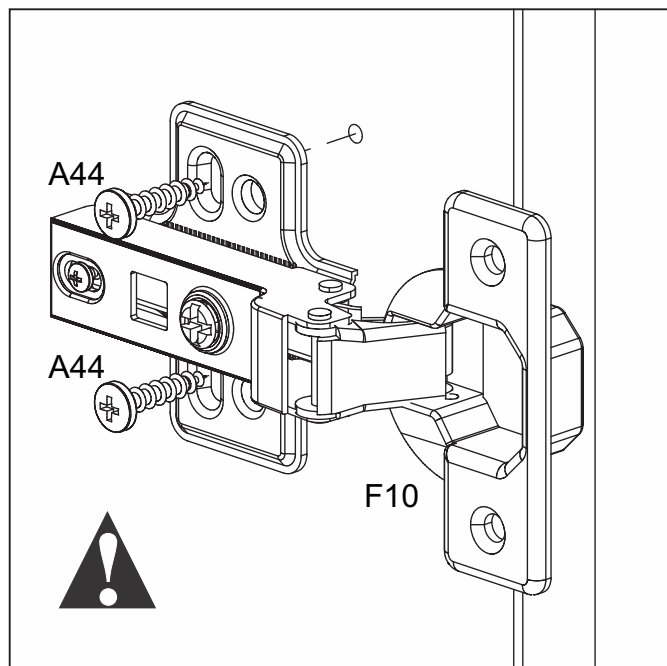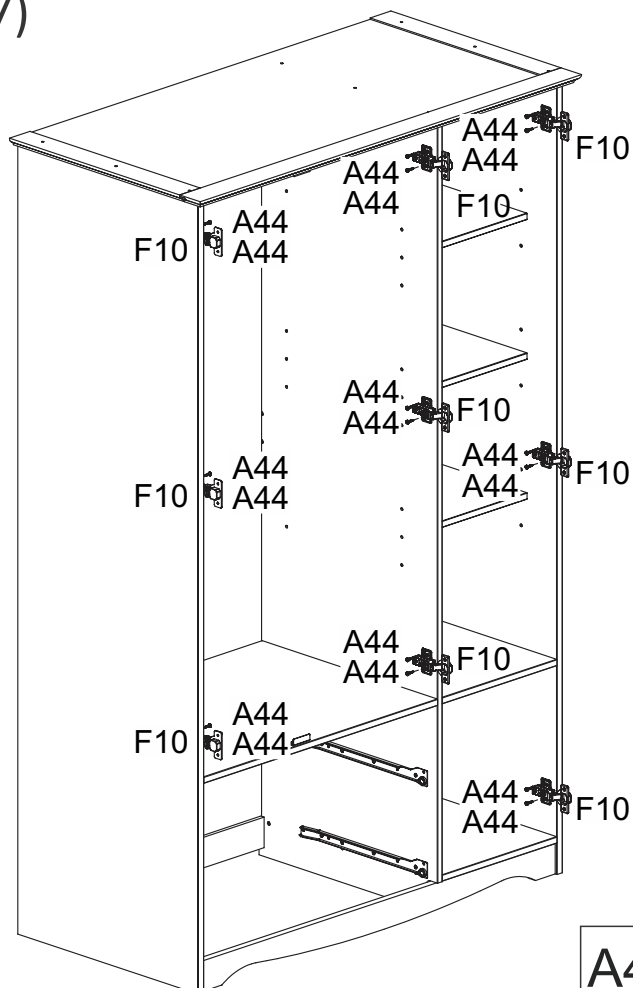

A44



3.5x14




18

F10



09

18)

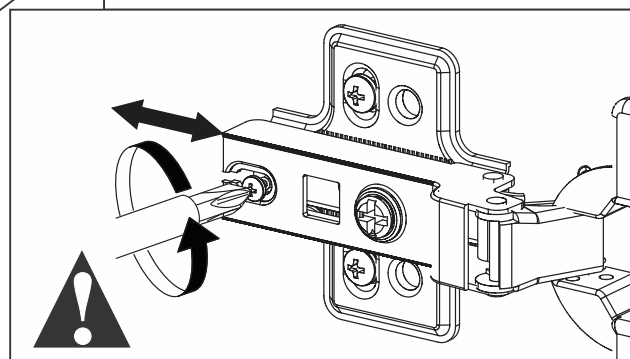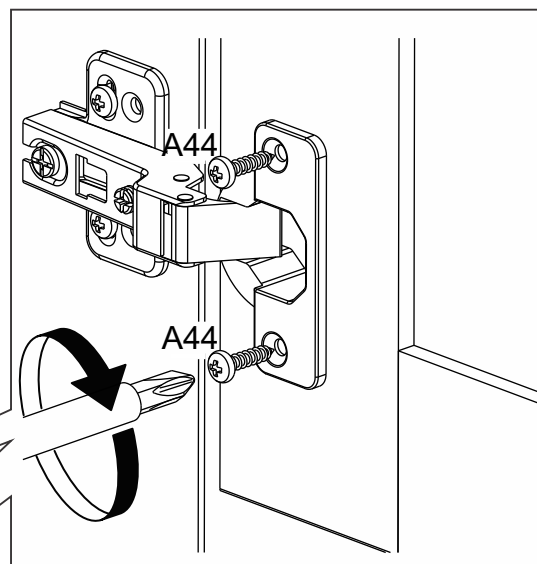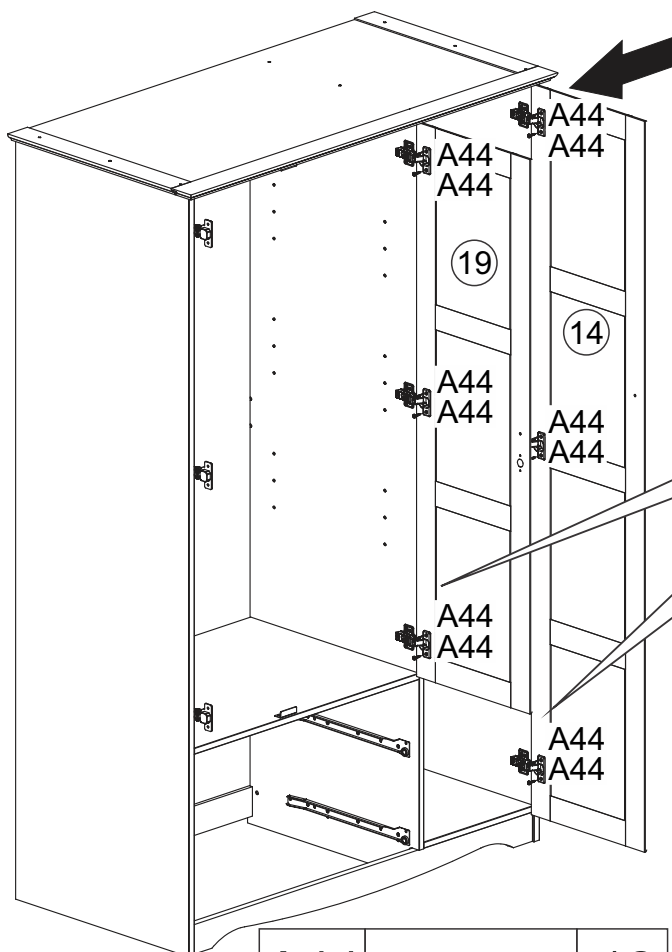

You may need to adjust the hinges (F10) before installing the door


A44



3.5x14




12


19)

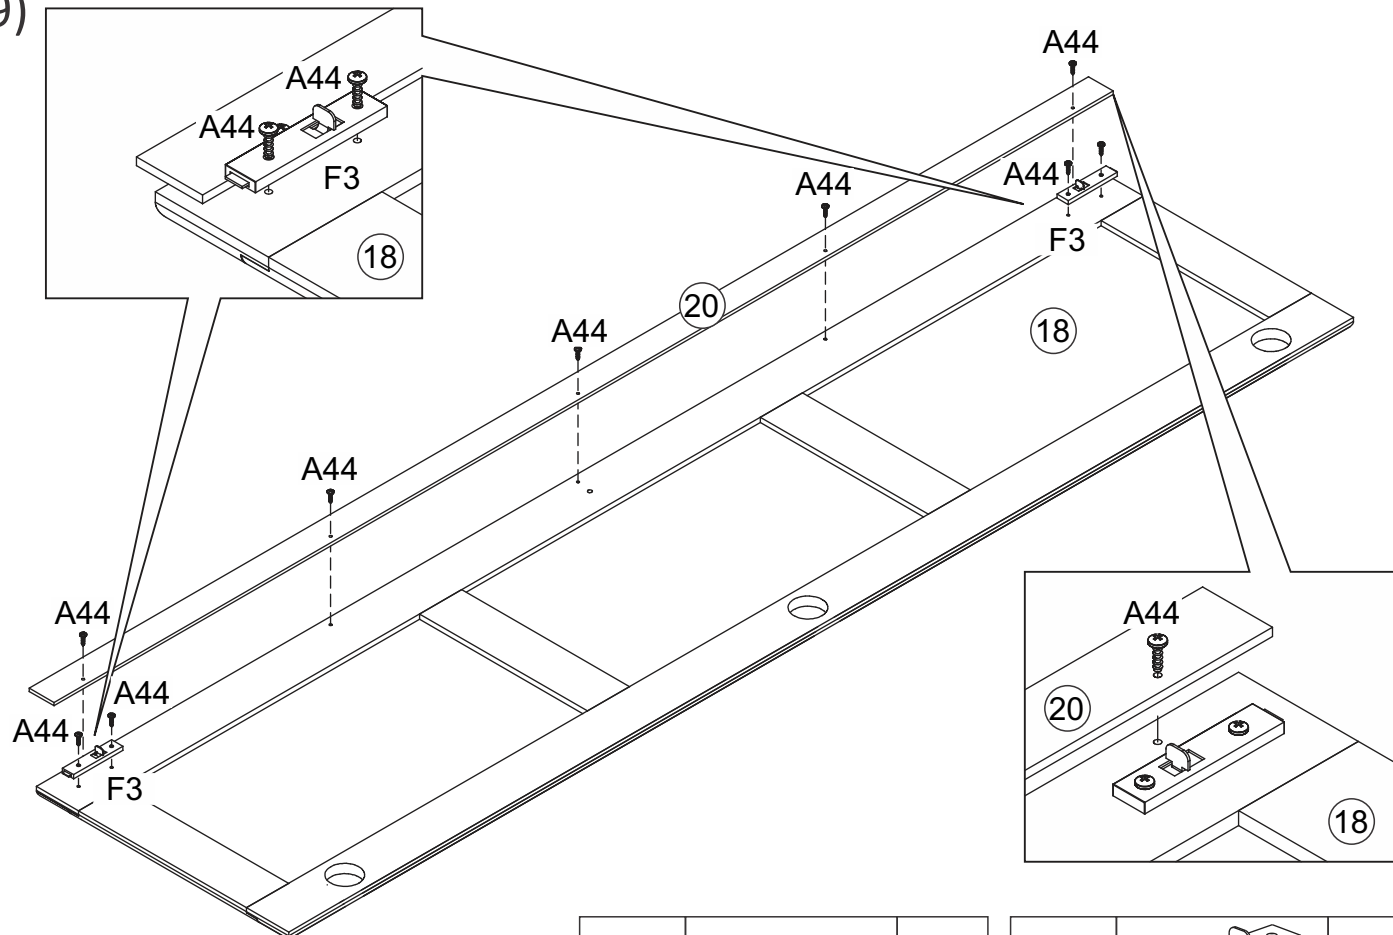


A44		09	F3		02
	3,5x14				

20)

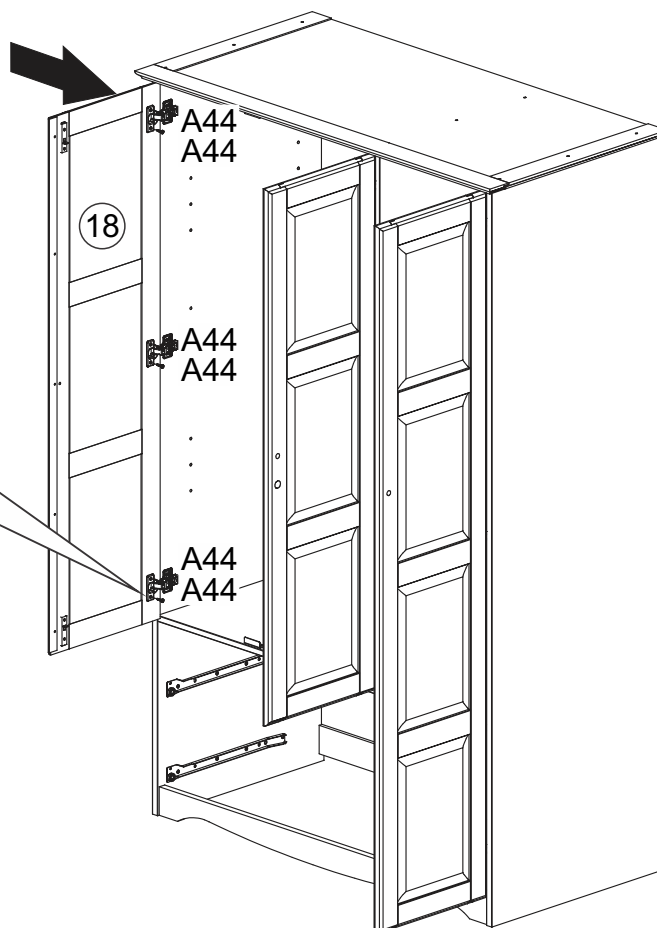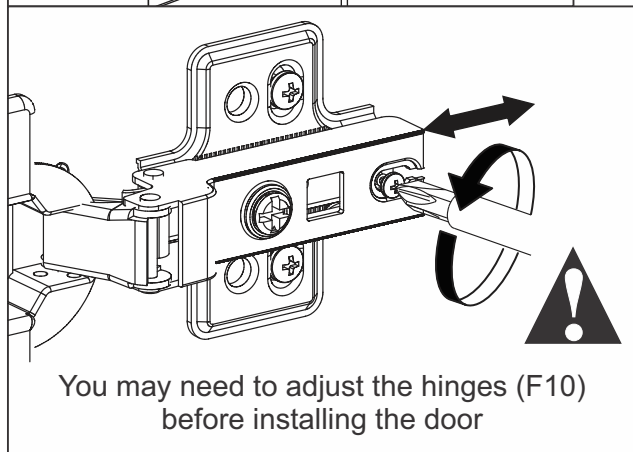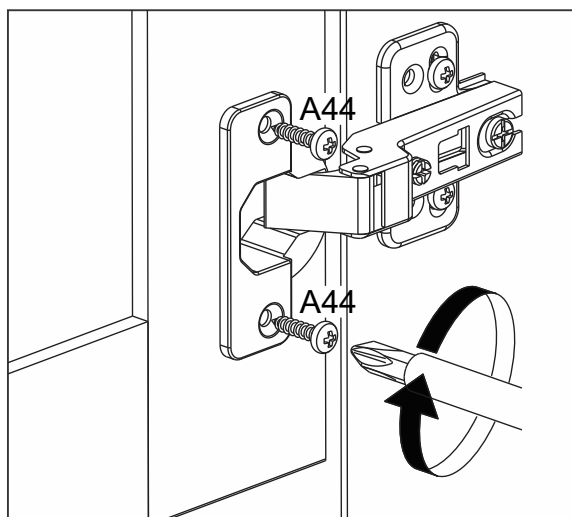


A44		06
	3,5x14	












21)

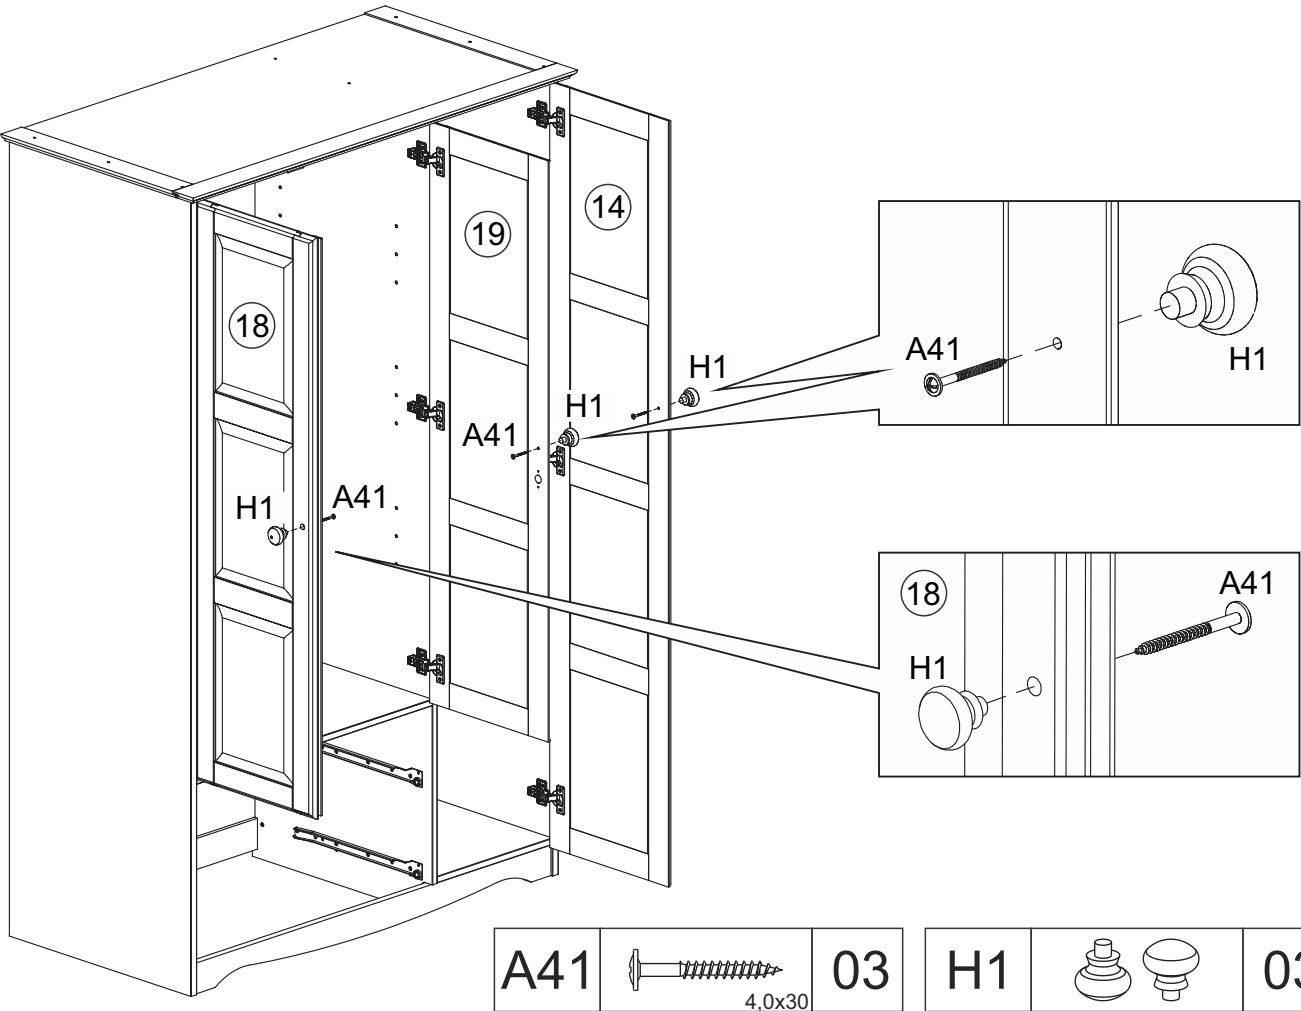






22)

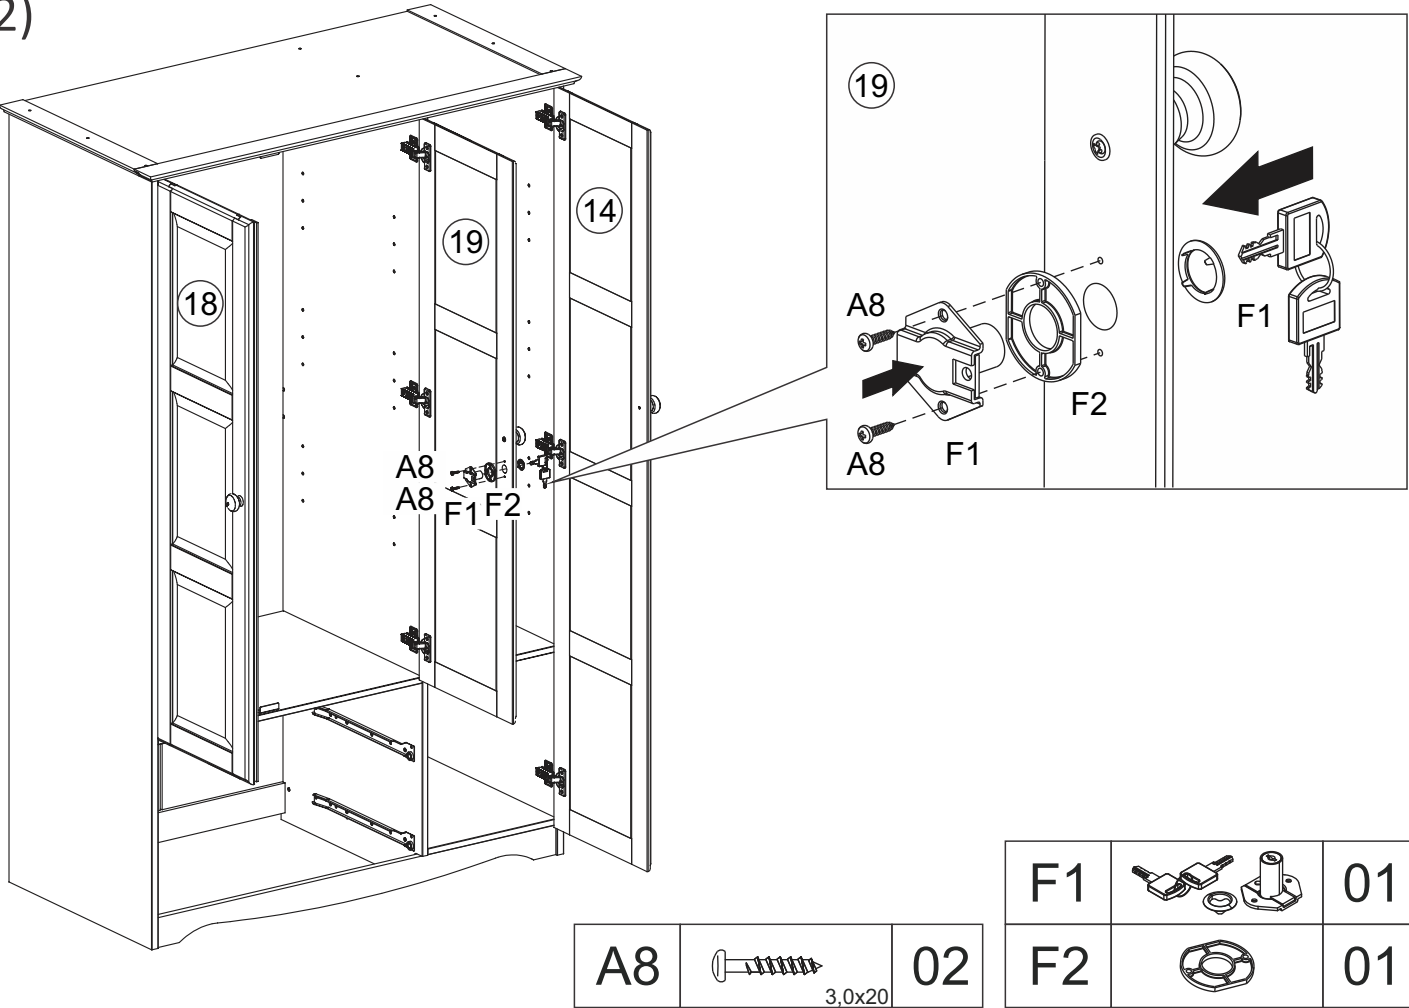

23) HINGE ADJUSTMENT GUIDE.

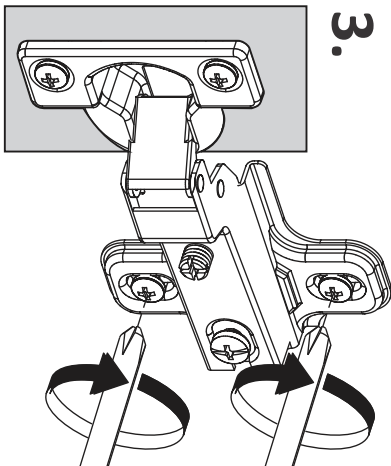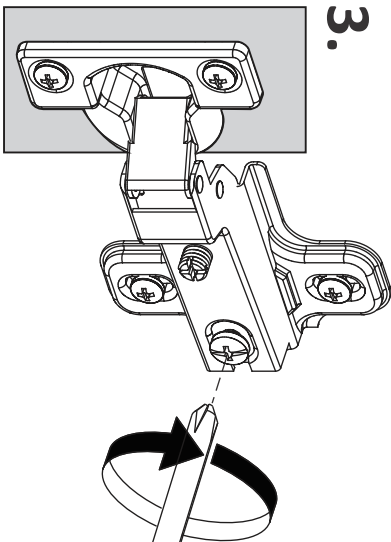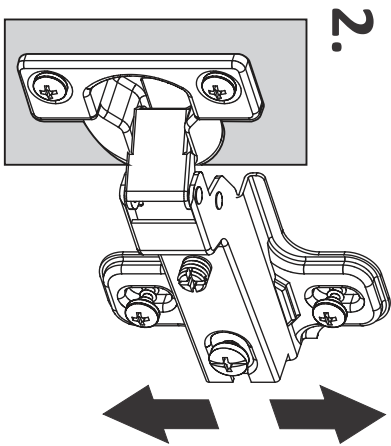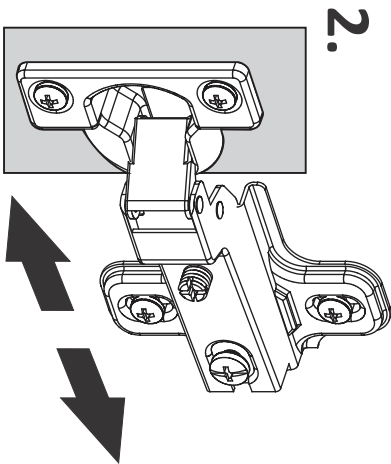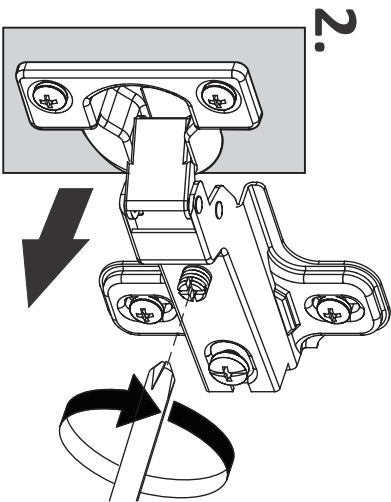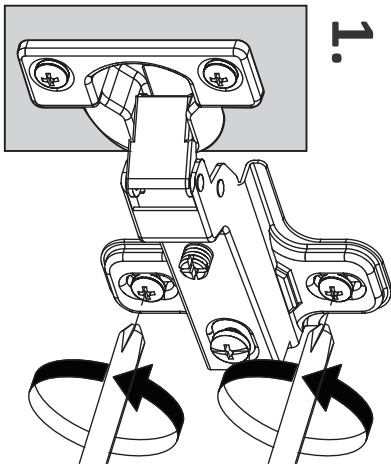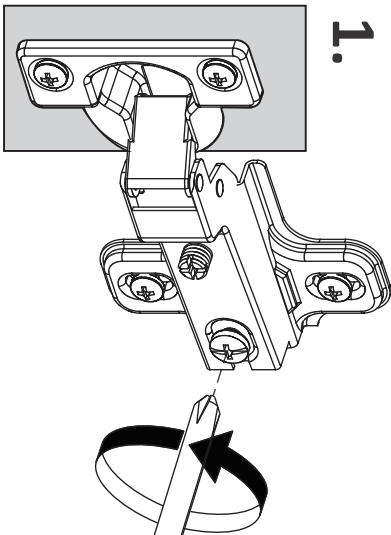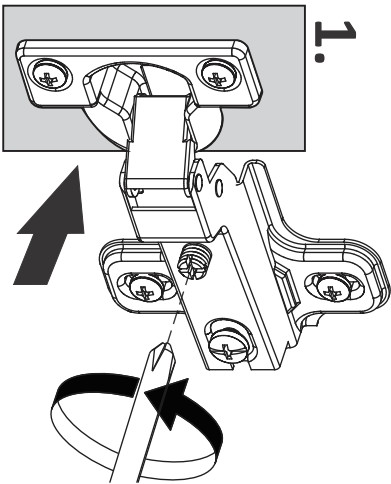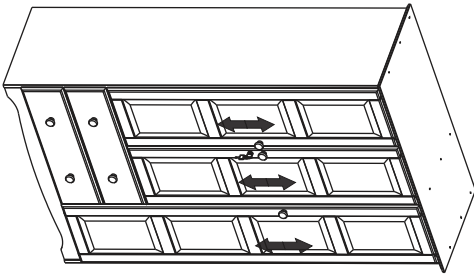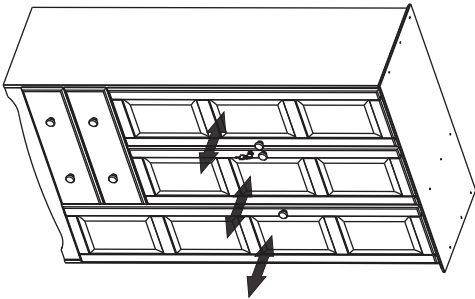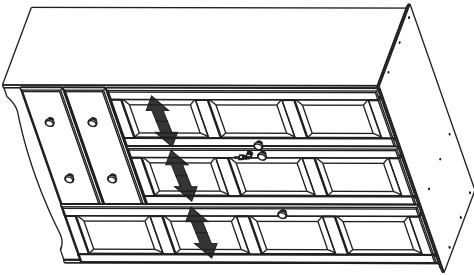





24) 2x

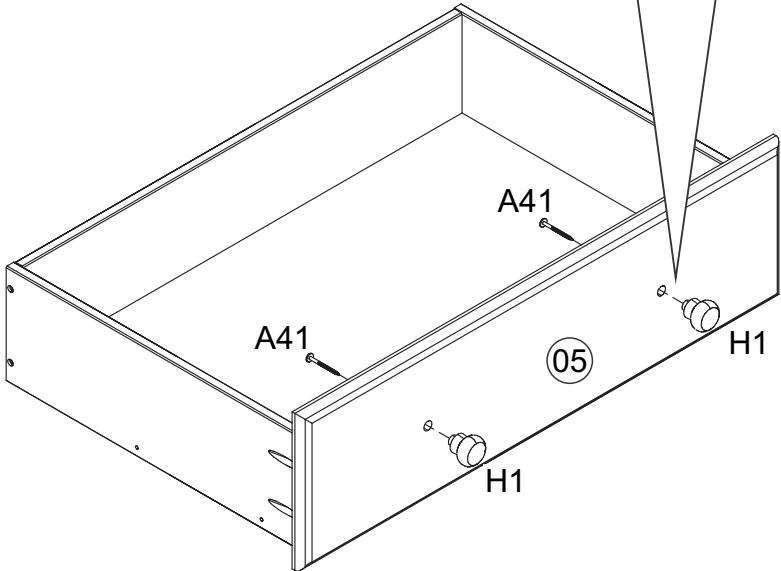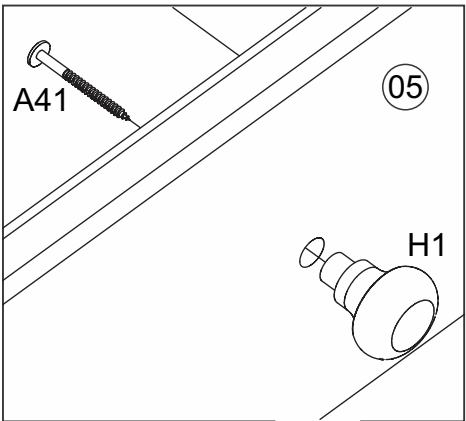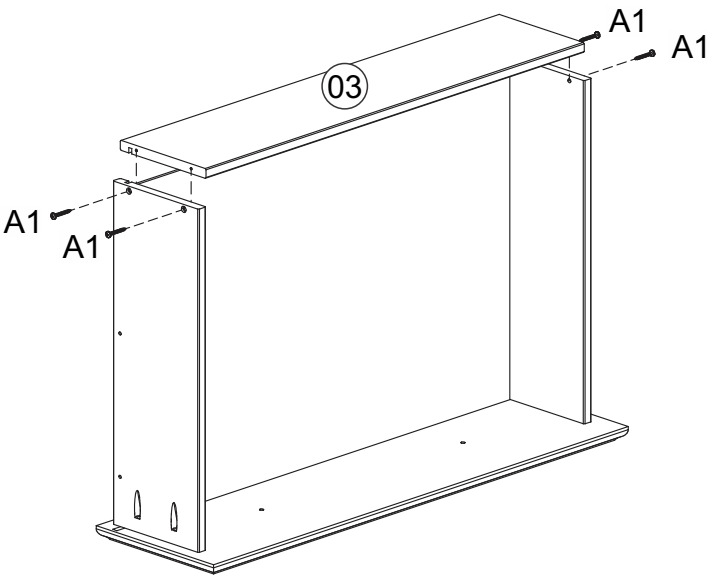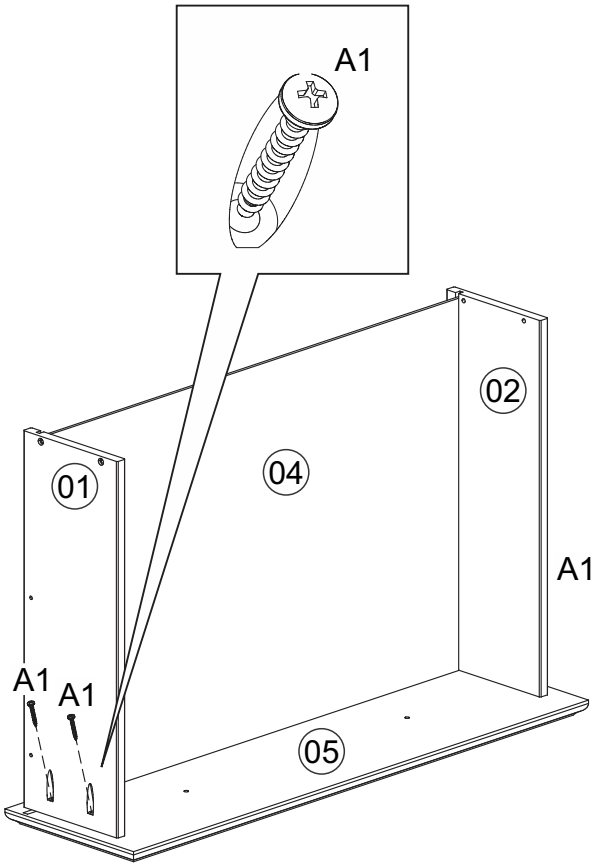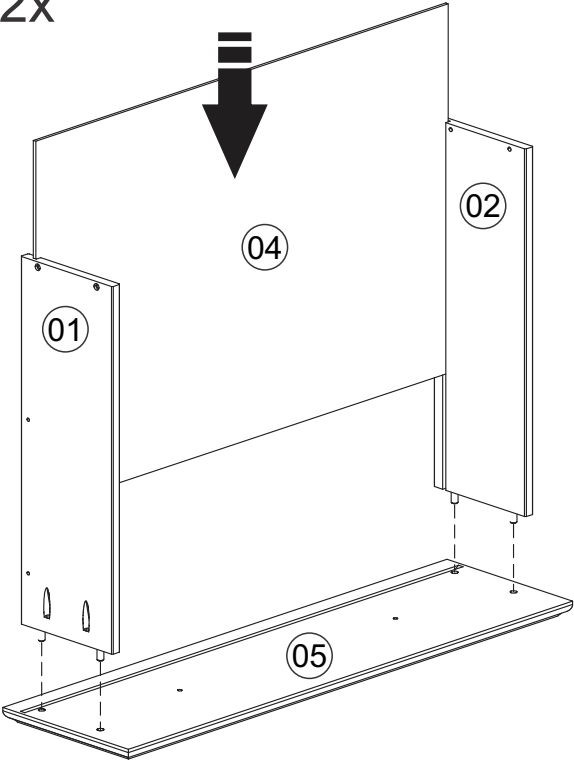

A1	 4,0x30	16
A41	 4,0x30	04
H1		04

25) 2x


Turn the assembled drawer
OVER to install glides.

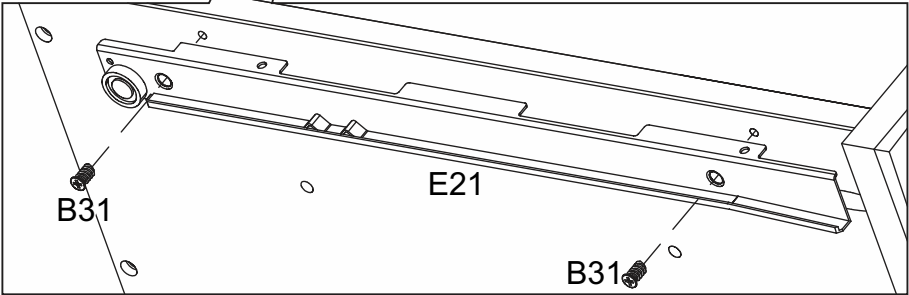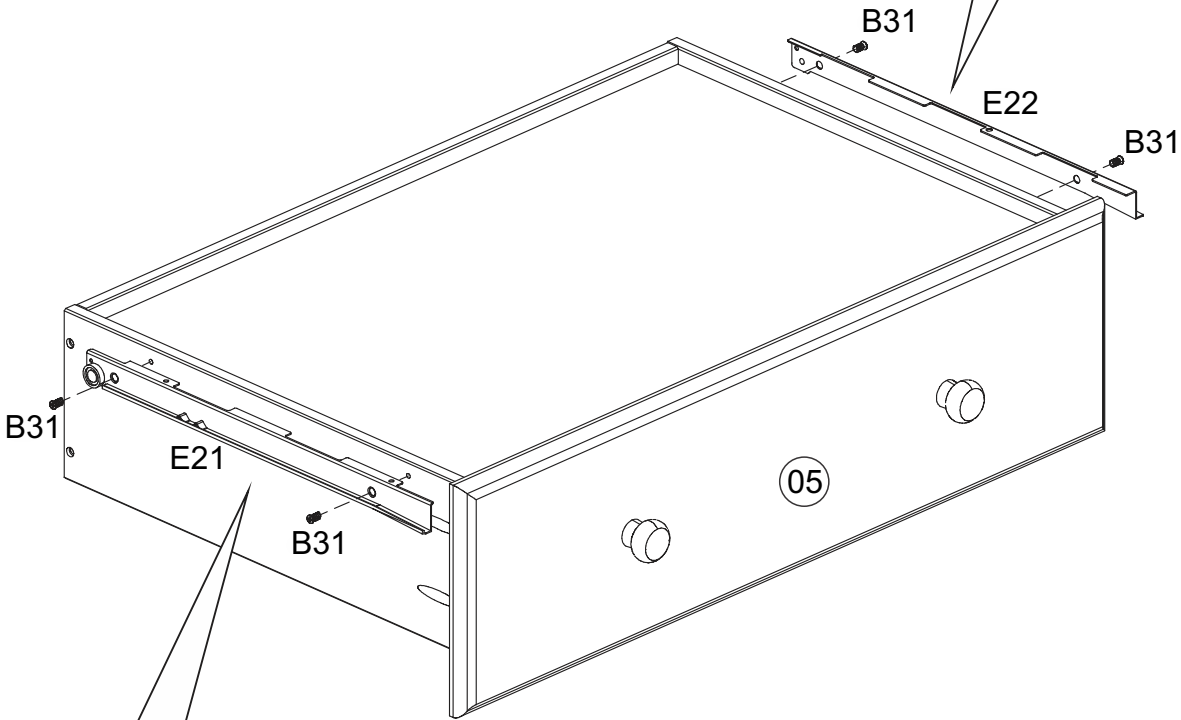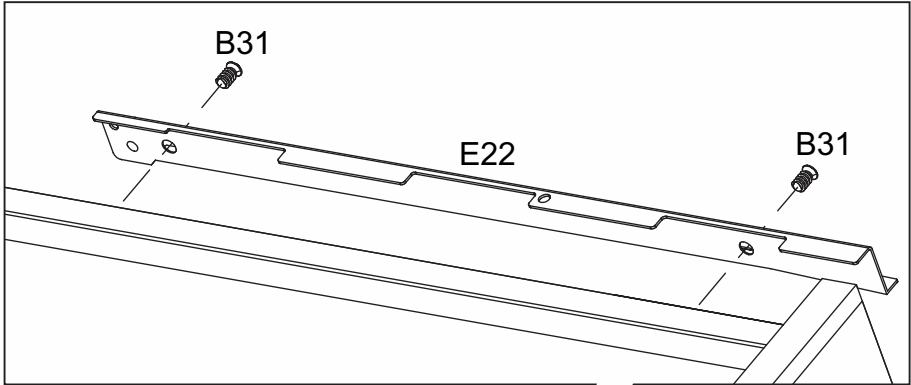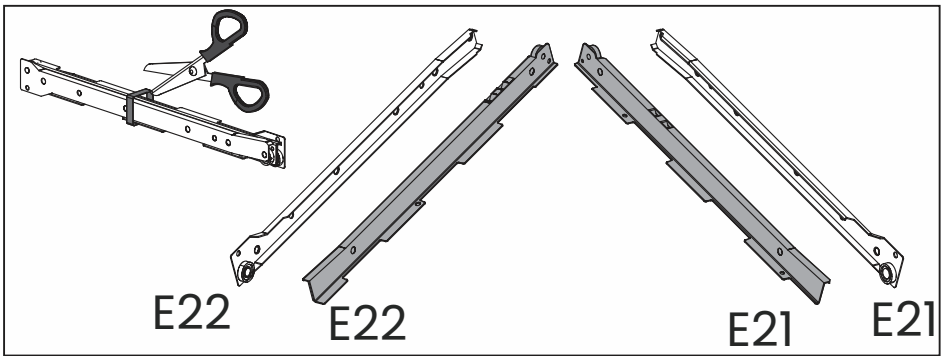






B31	 6,0x10	8	E21	 Drawer RIGHT	2	E22	 Drawer LEFT	2
-----	---	---	-----	---	---	-----	--	---

26)

Place the labeled drawer on the top position.

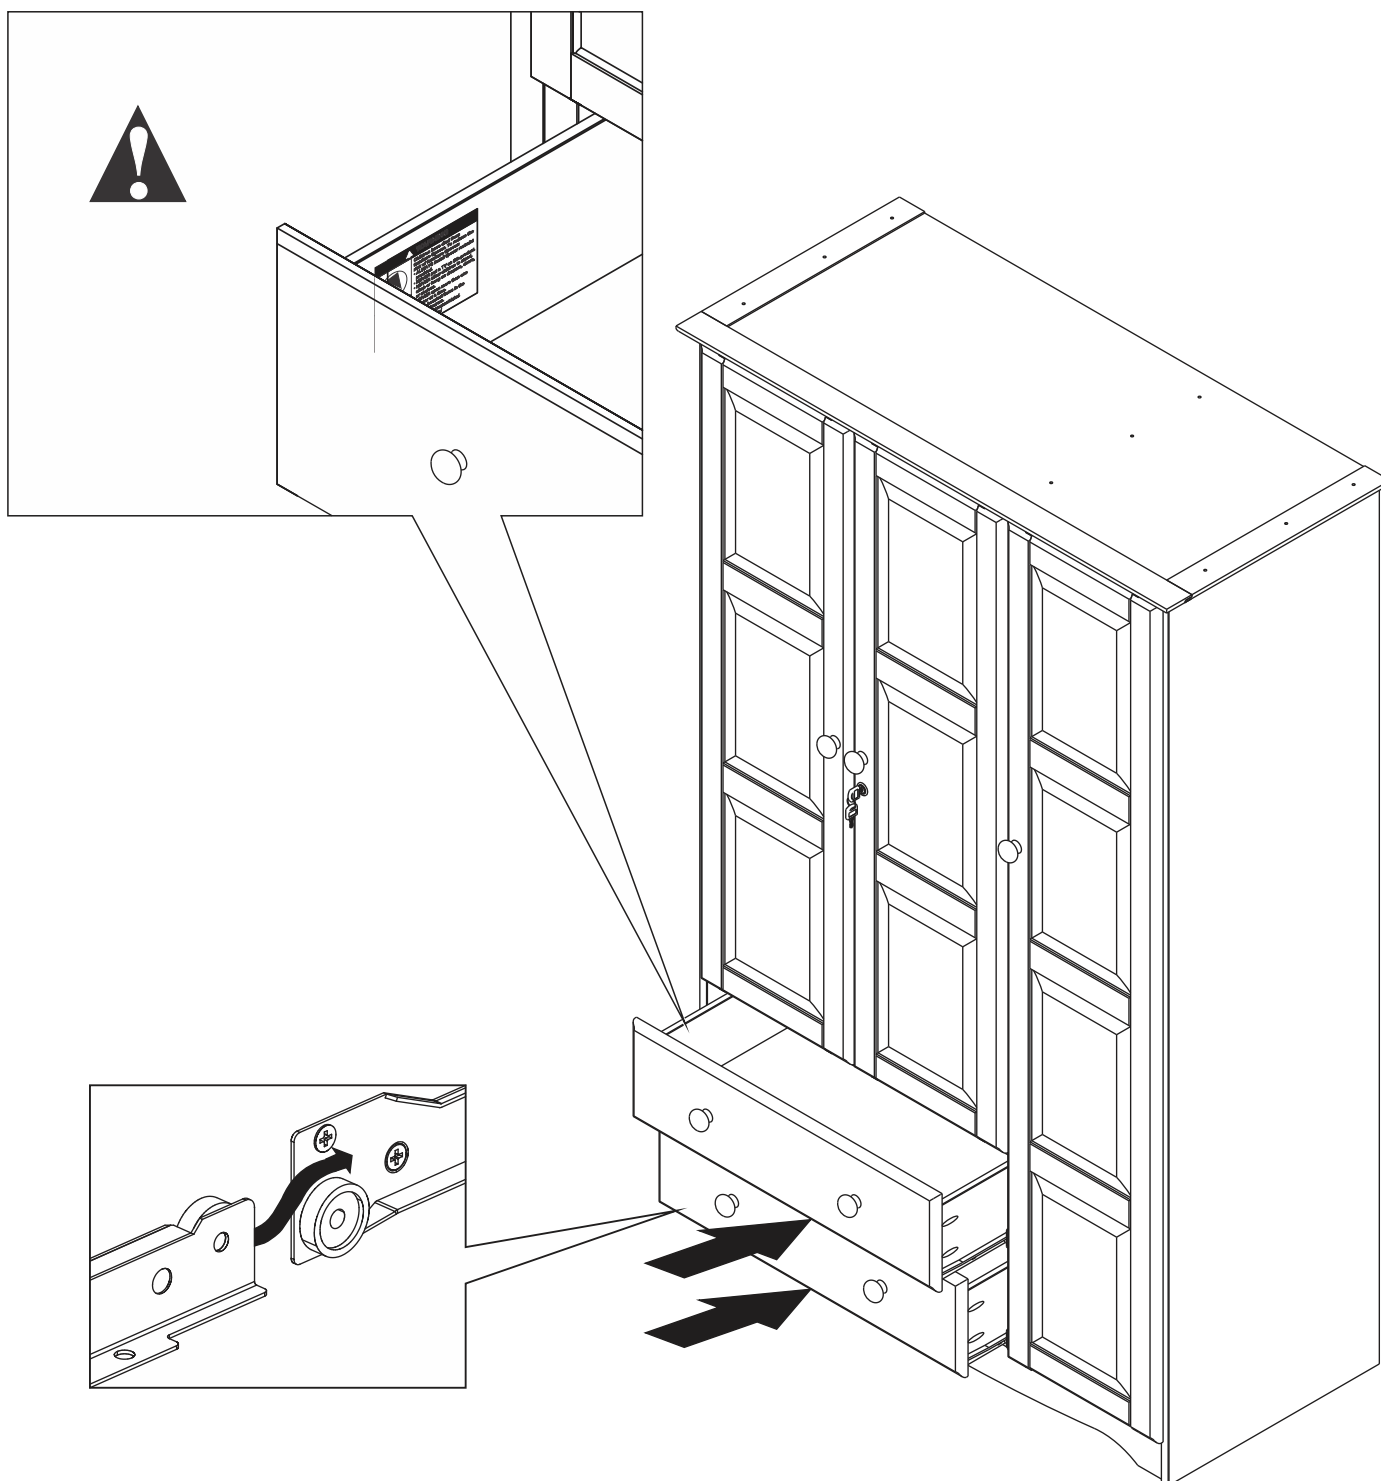

27) Tip-over Restraint Kit Installation

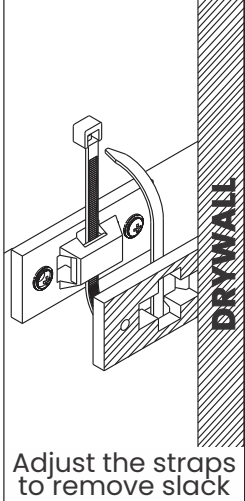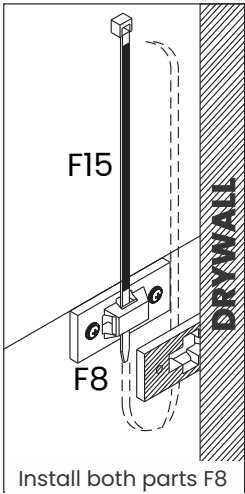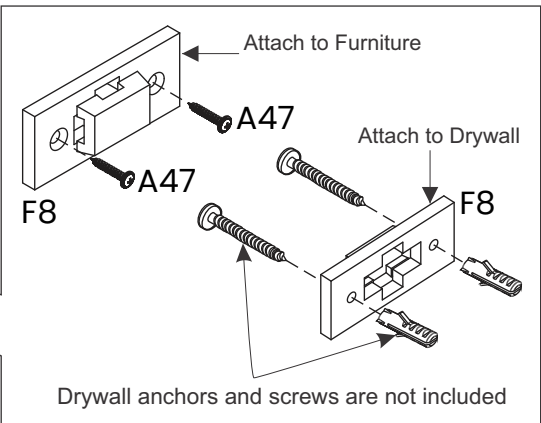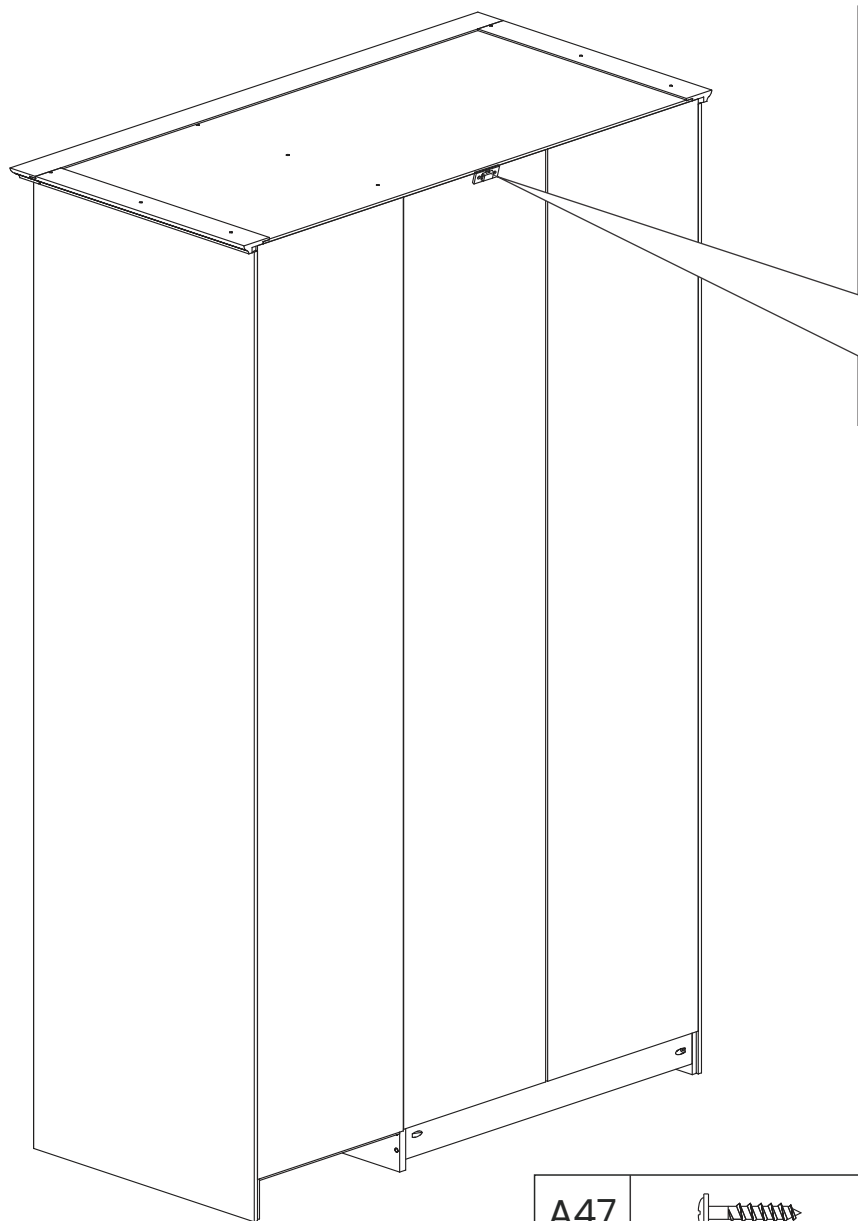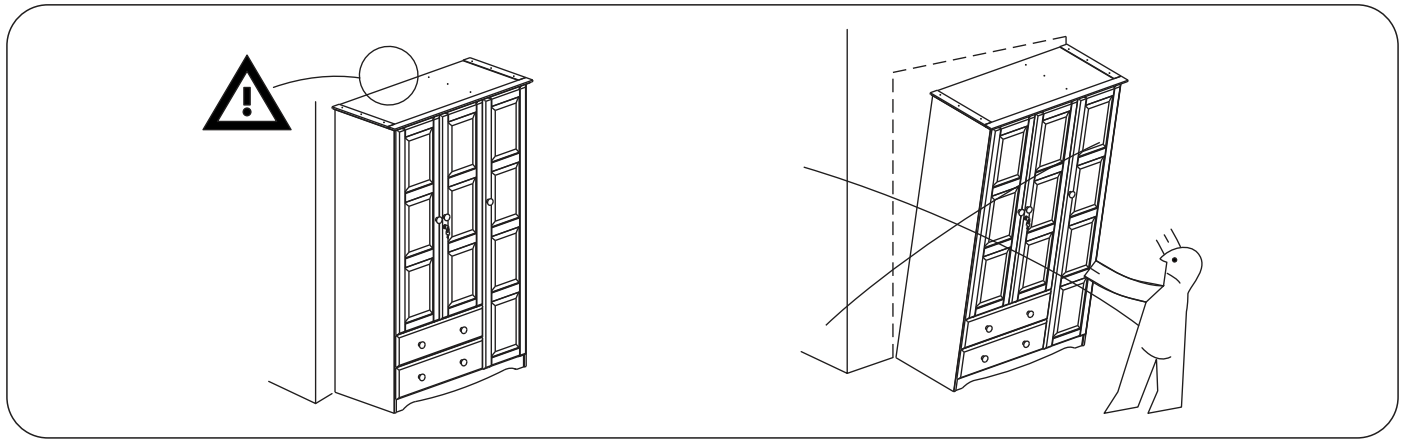

A47	 3,0x20	2
F8		2
F15		1