


Product Installation Instructions

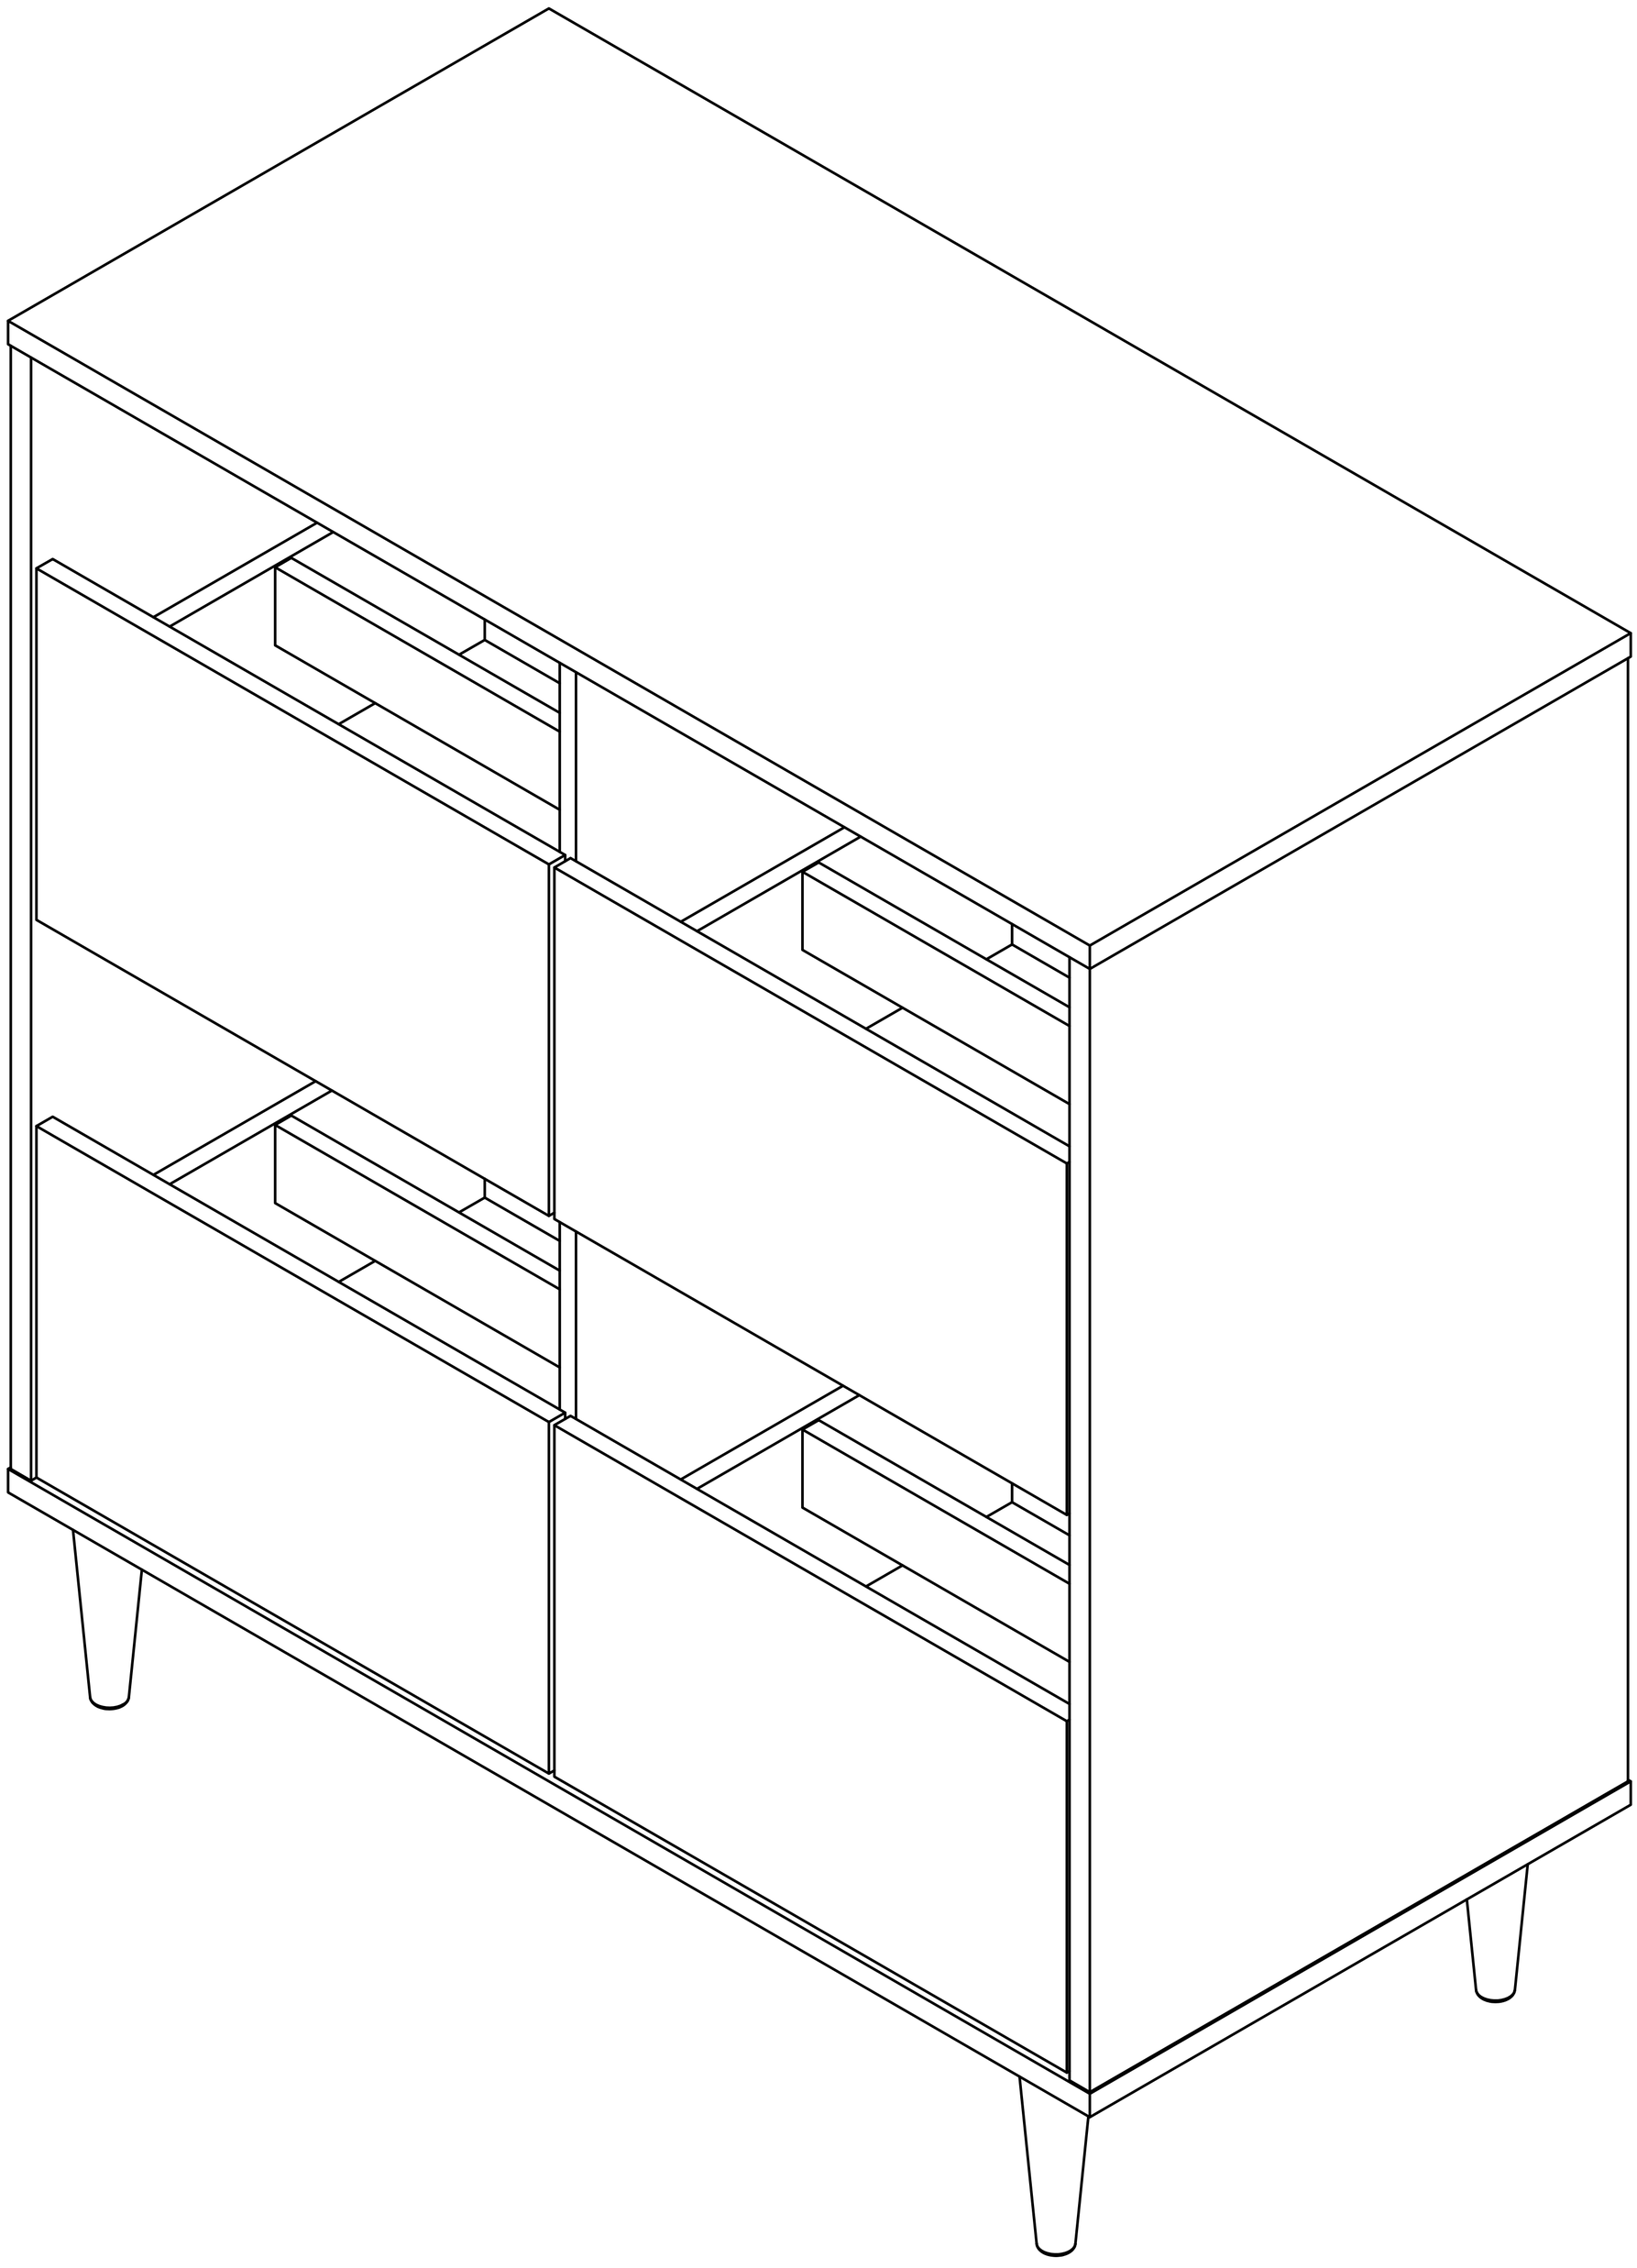


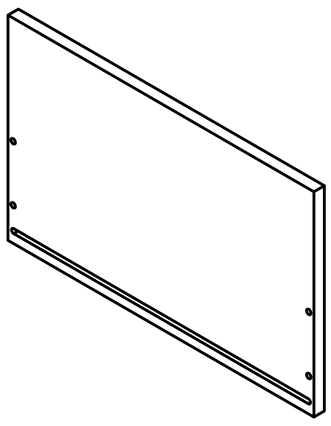


Ax4

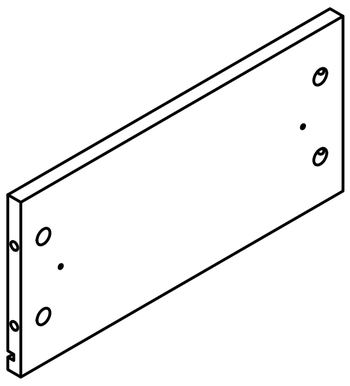


Bx8

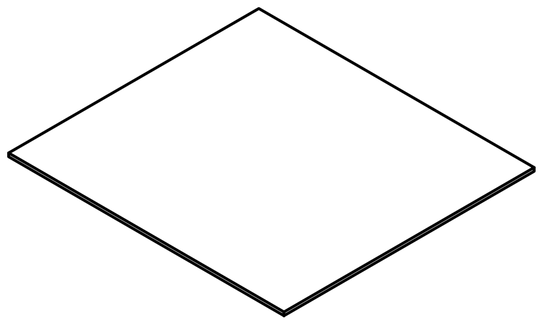


Cx4

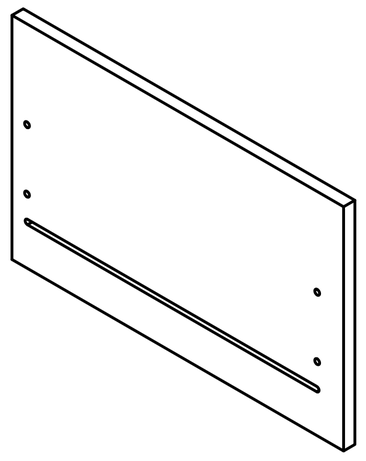


Dx2

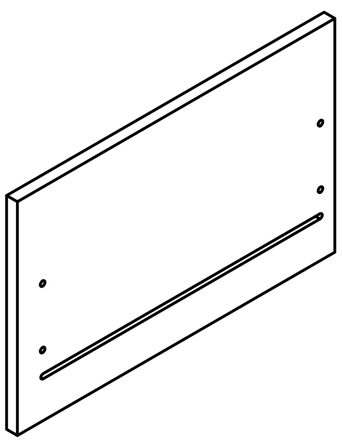


Ex2

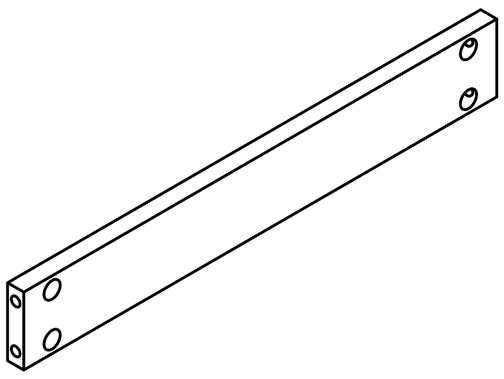


Fx4

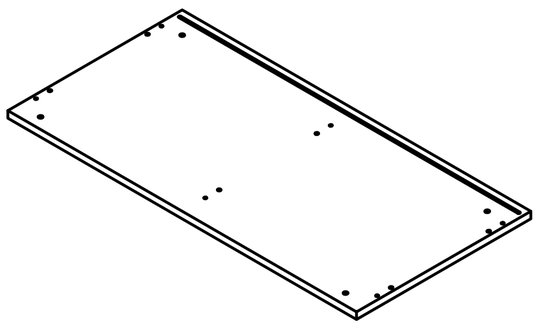


Gx1

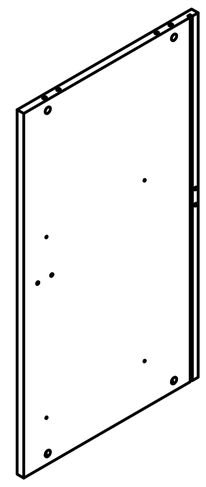


Hx1

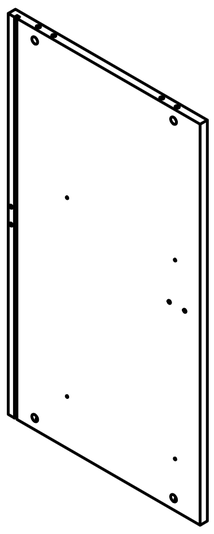


Ix1

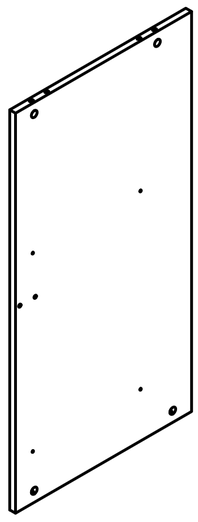


Jx1

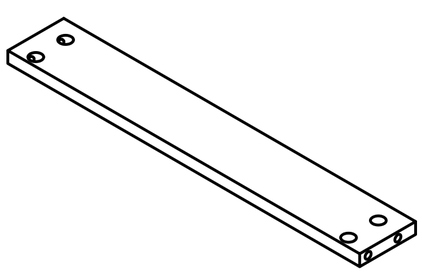


Kx1

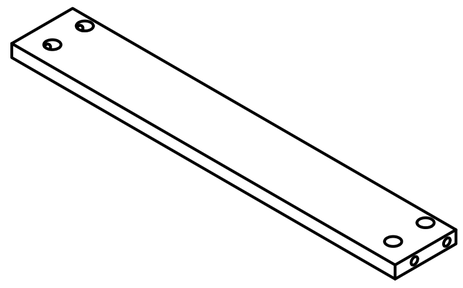


Lx1

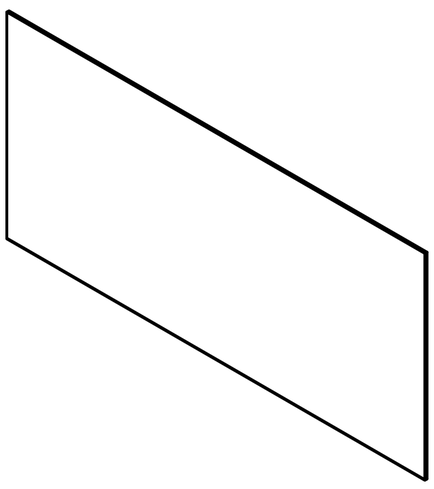


Mx2

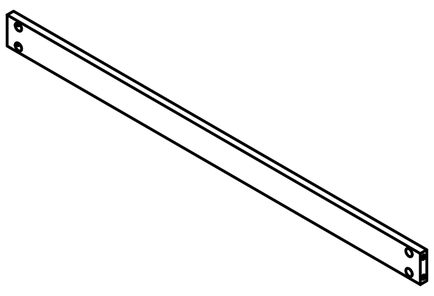


Nx1

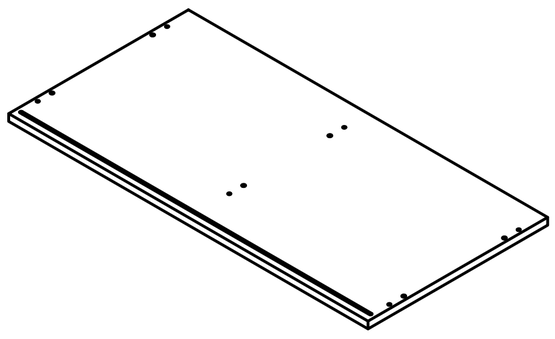






Ox1

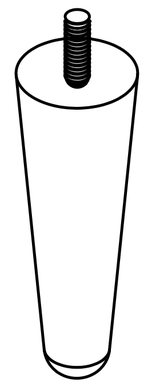


Px5

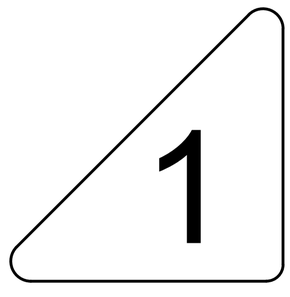

Accessories list

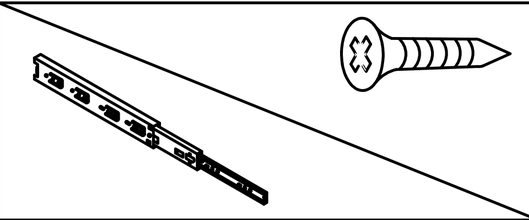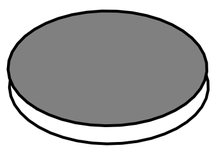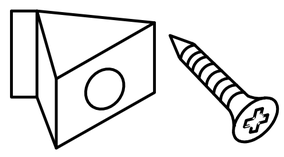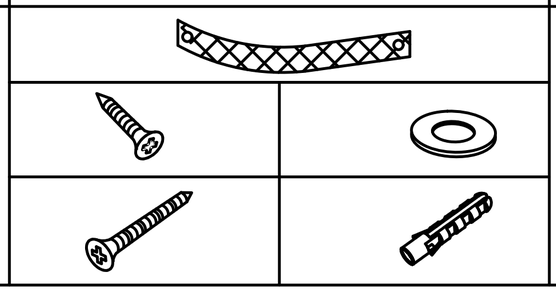
1		Two in one screw (6x28mm)	72pcs +5pcs
2		Two in one nut (10x12mm)	72pcs +5pcs
3		Wood chipping (6x30mm)	12pcs +4pcs
4		Guide & Screw(29cm) (3x12mm)	40pcs +8pcs 8pcs
5		Non-slip pads (φ12x2mm)	5pcs +1pcs
6		Fixing clip & screw (3x16mm)	8pcs +1pcs
7		anti-tipping tape Screw & gasket (3.5x14mm) Screw (4x45mm)	1pcs 1pcs 2pcs 1pcs 1pcs




Double-head screwdriver, use as required

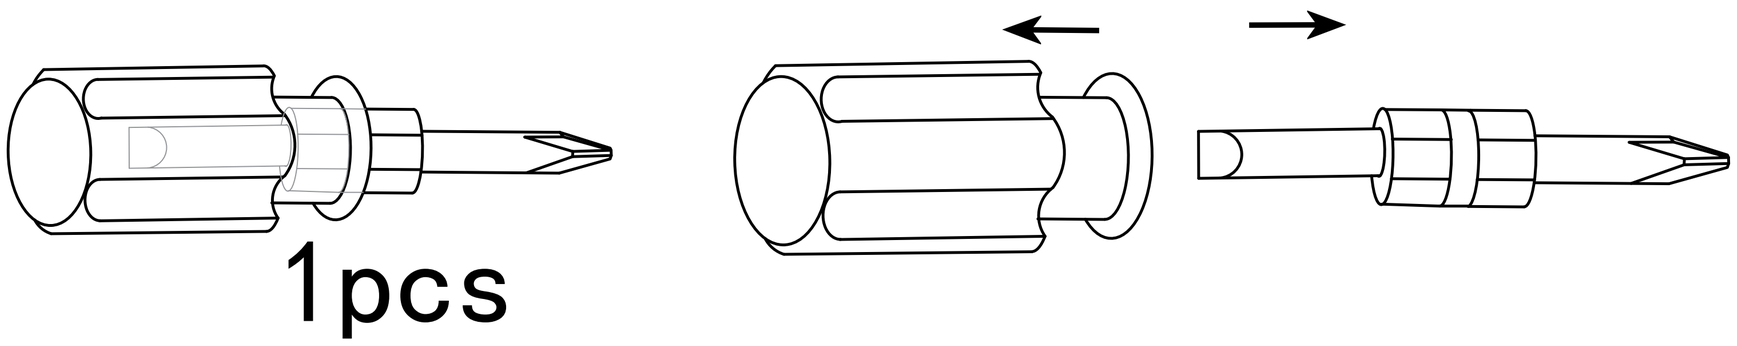



1pcs

Product structure decomposition

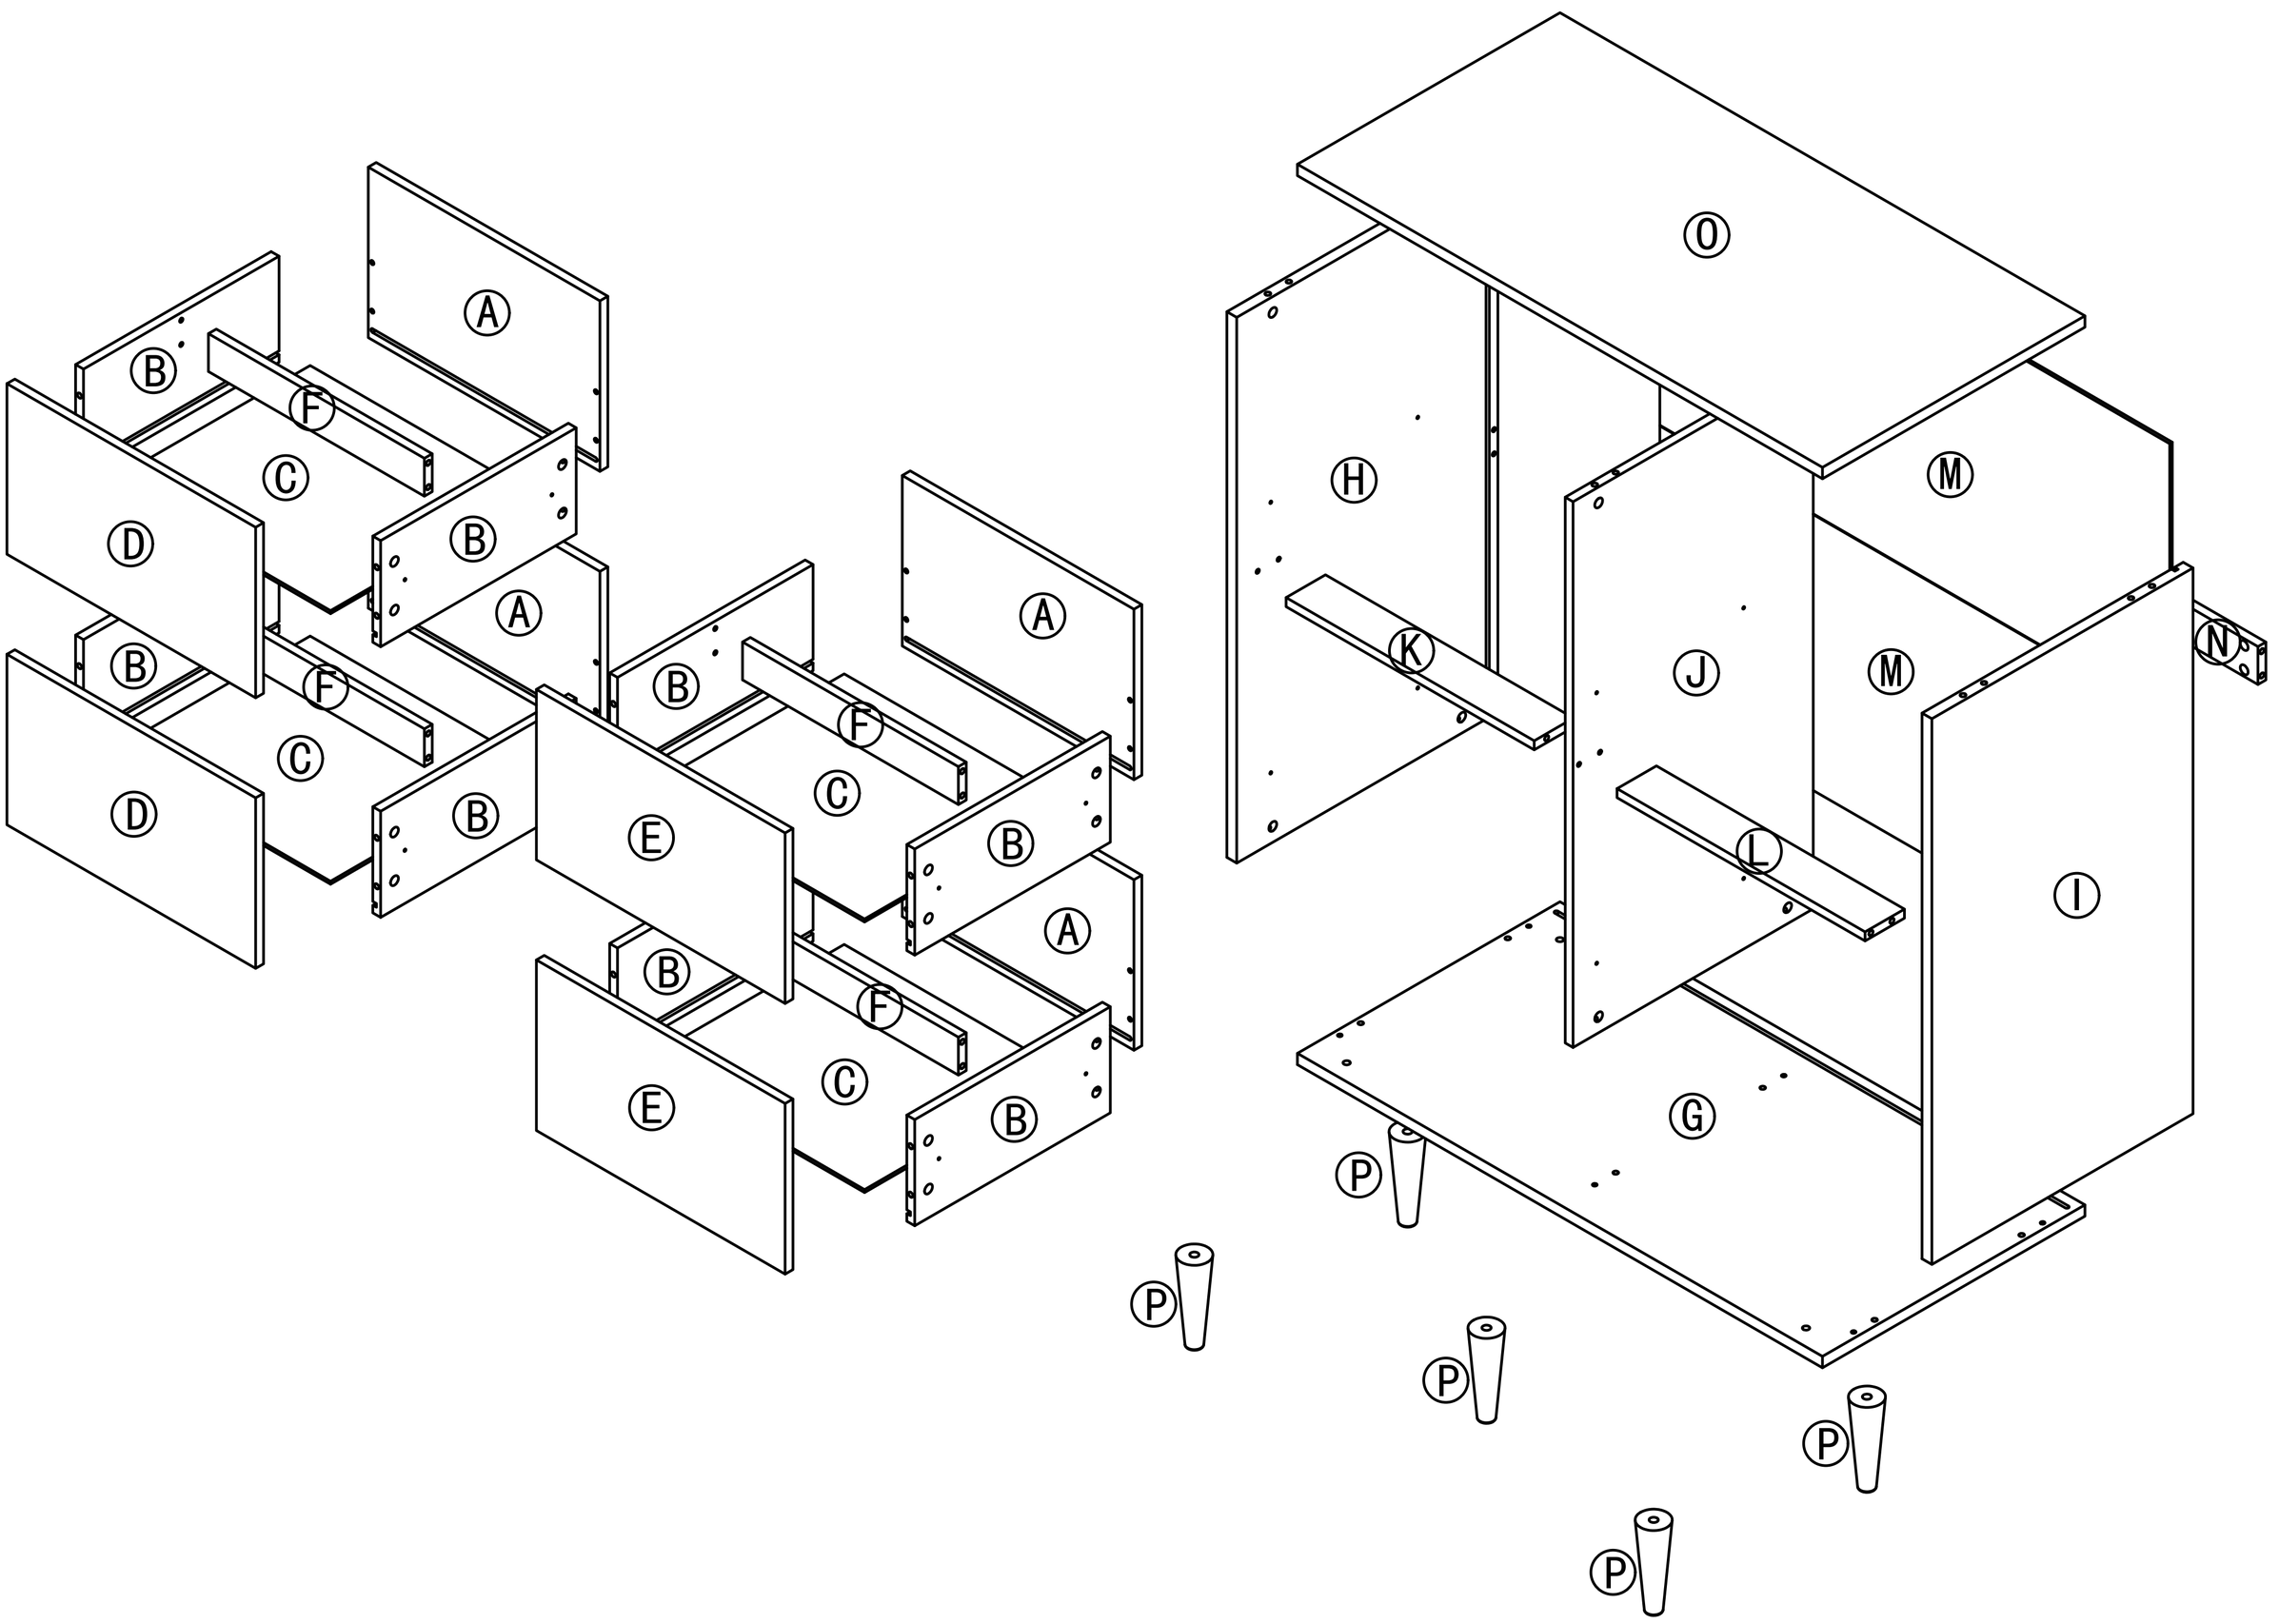

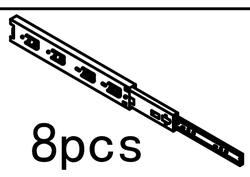
①		48pcs	②		48pcs	④	 8pcs	 16pcs

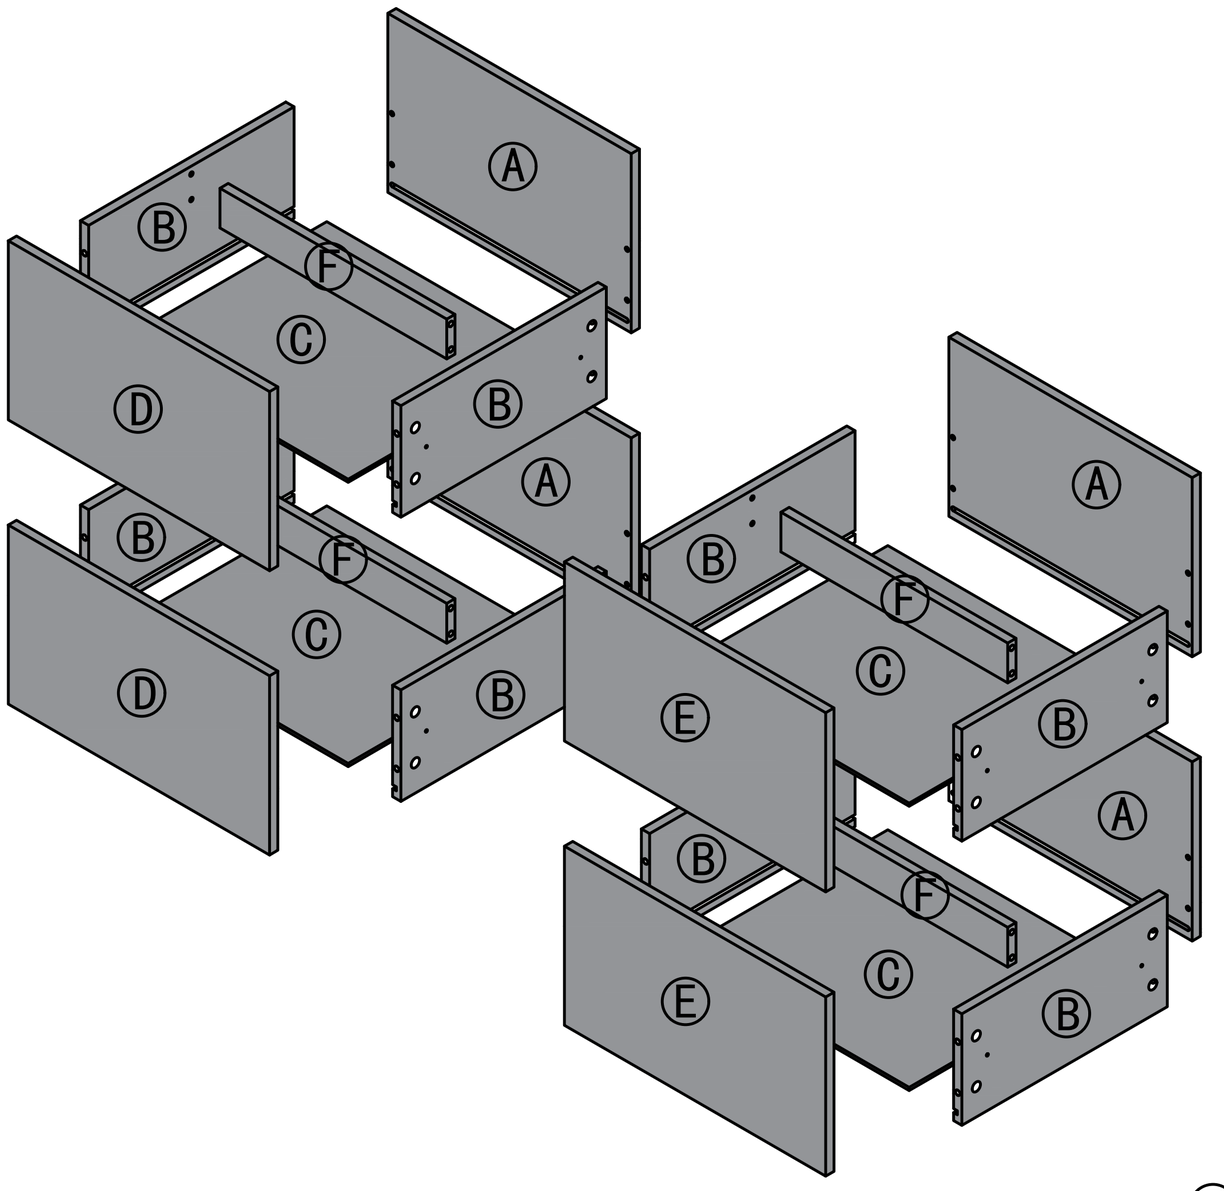

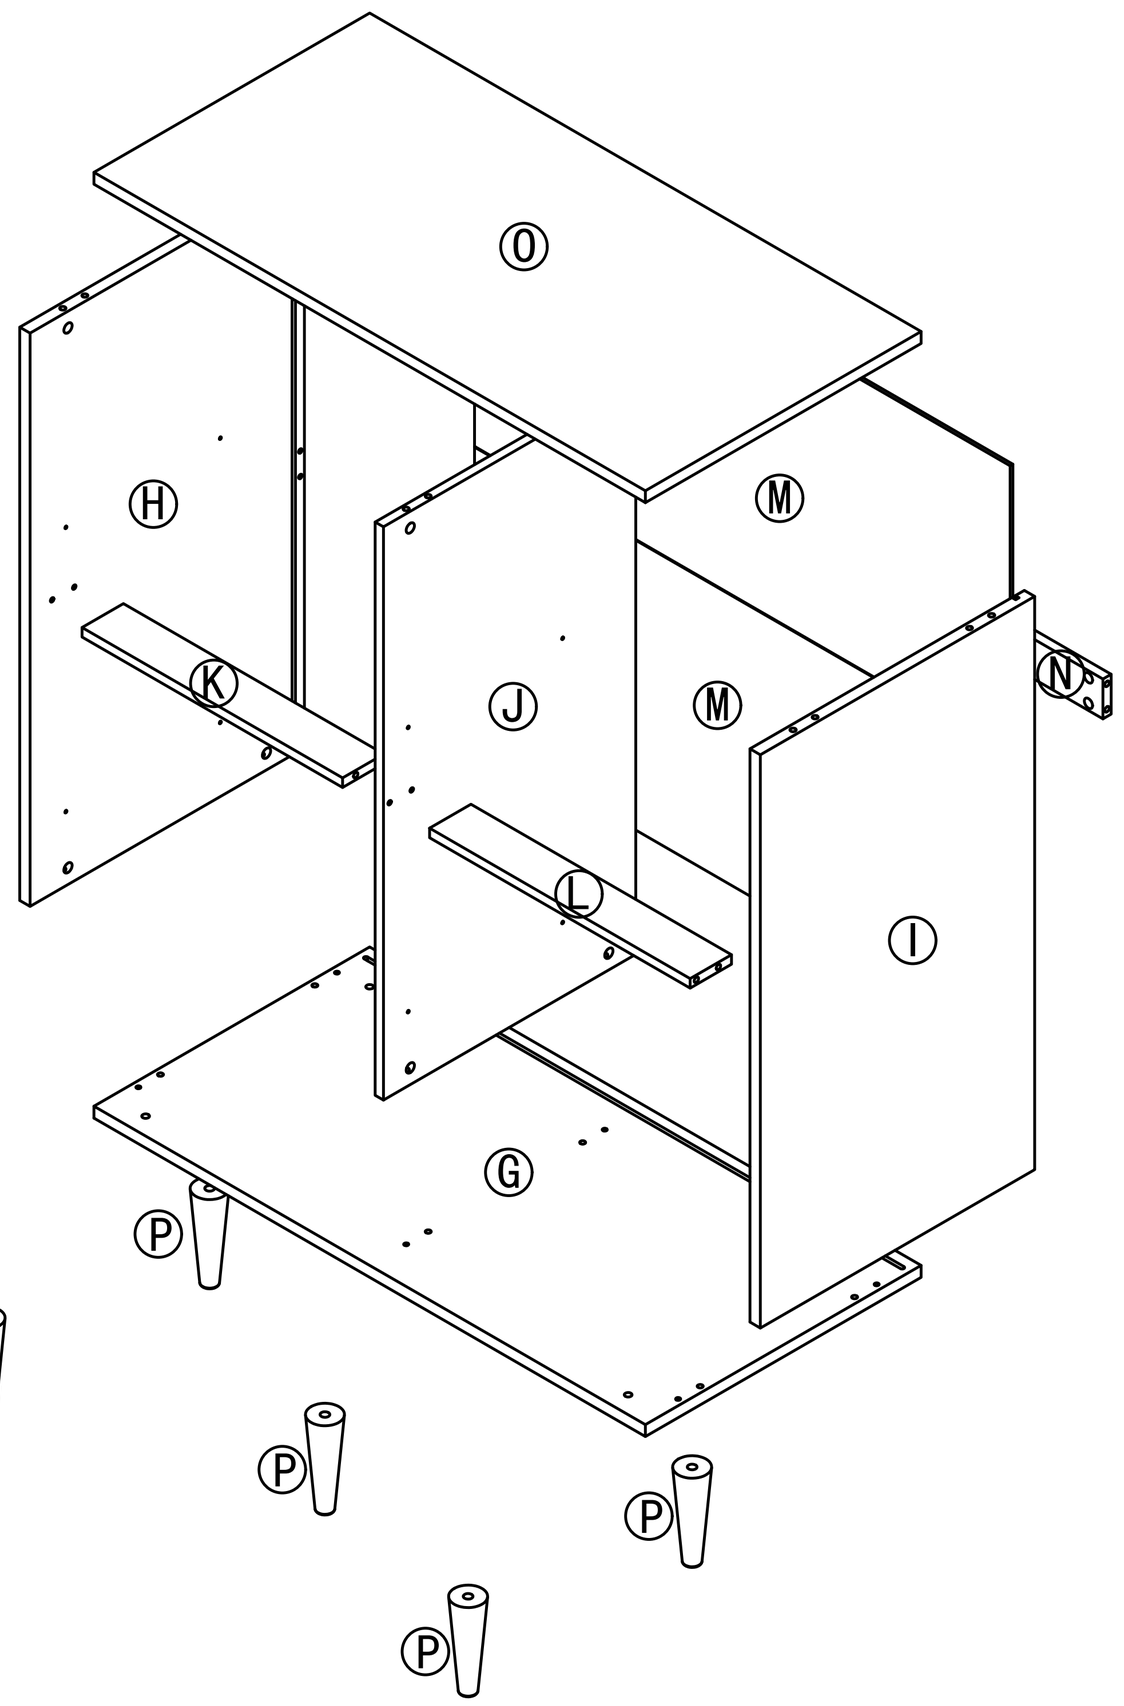


Use parts ① and ②


Step1

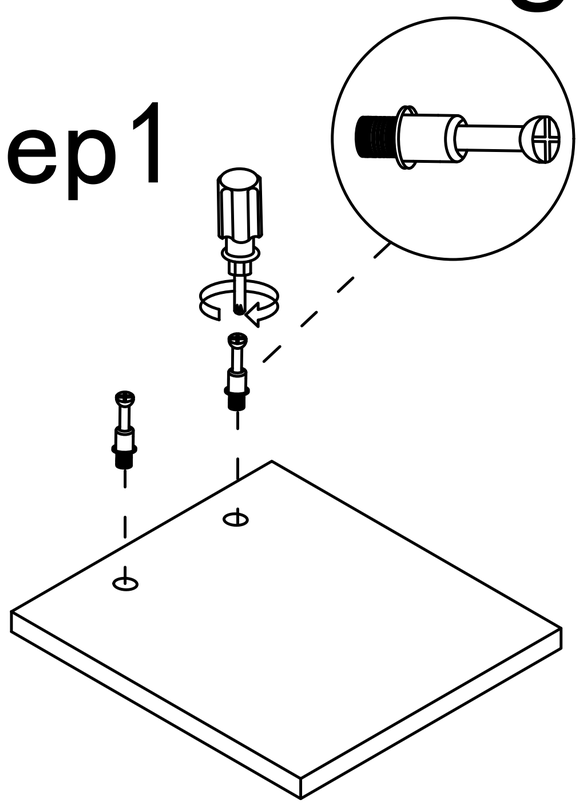


Step2

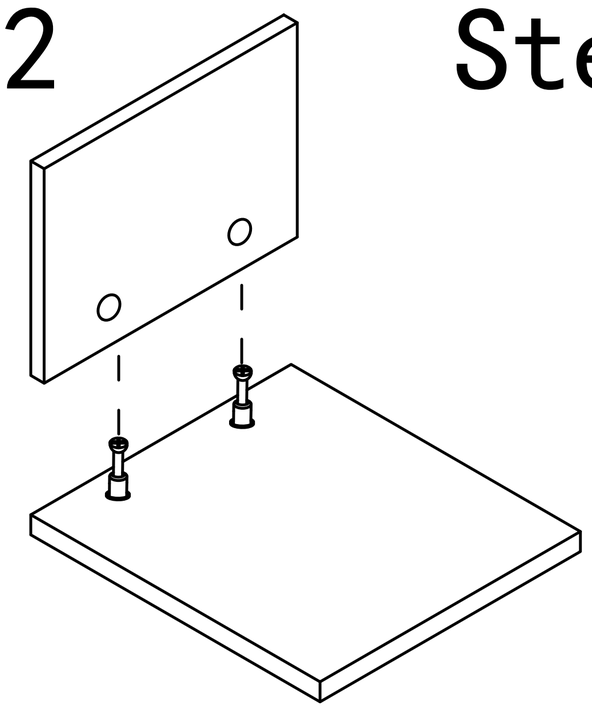


Step3

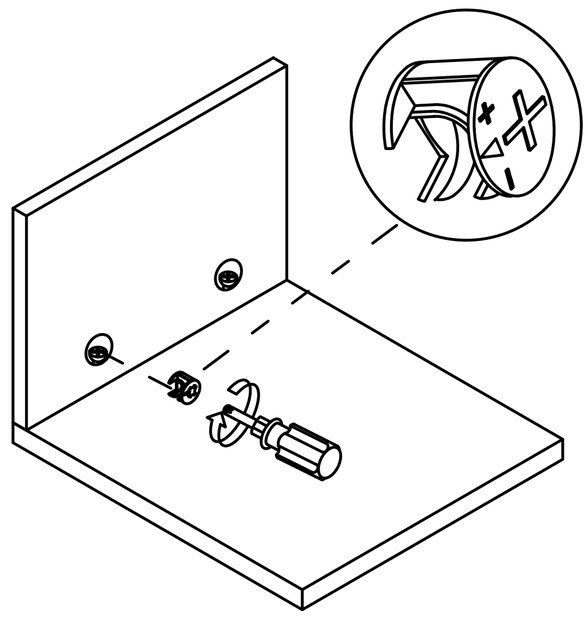

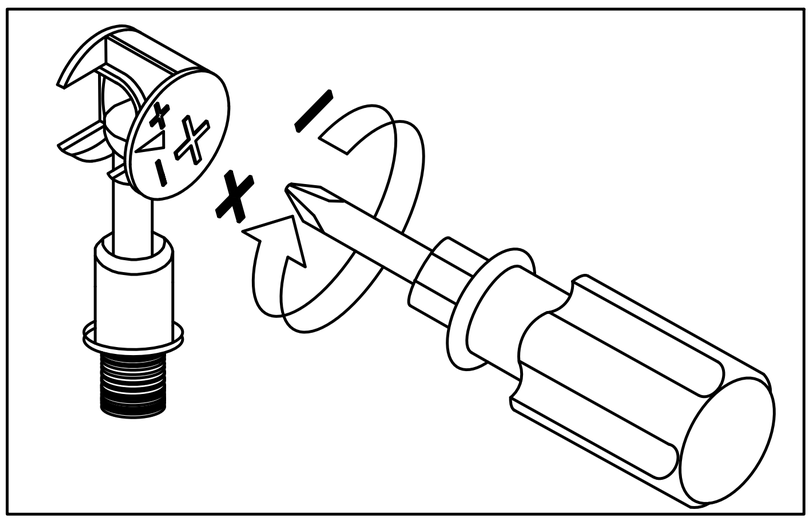



Use a screwdriver to lock in the direction of the "+" sign

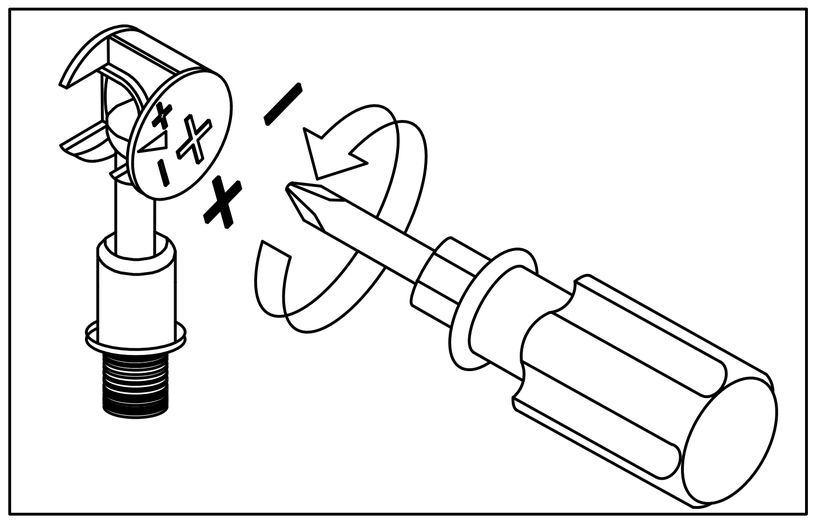

Disassemble along the direction of "-" sign


Step 1

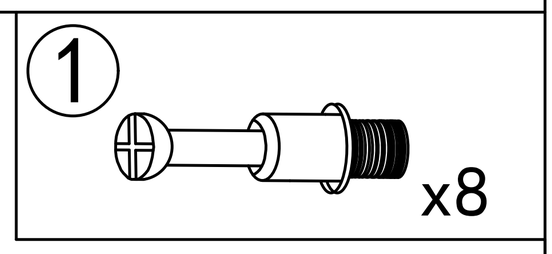

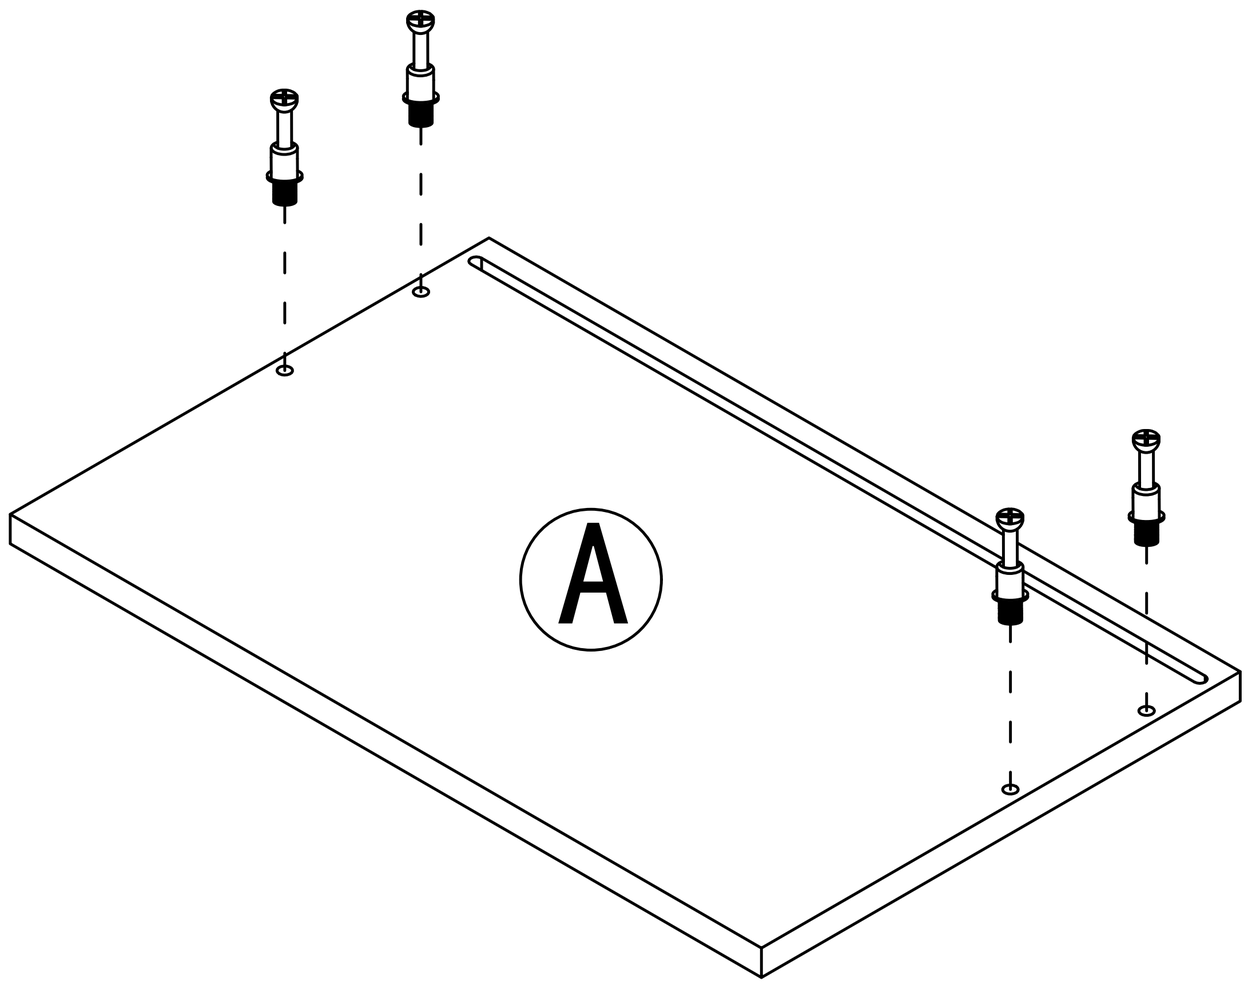

x2


Step 2

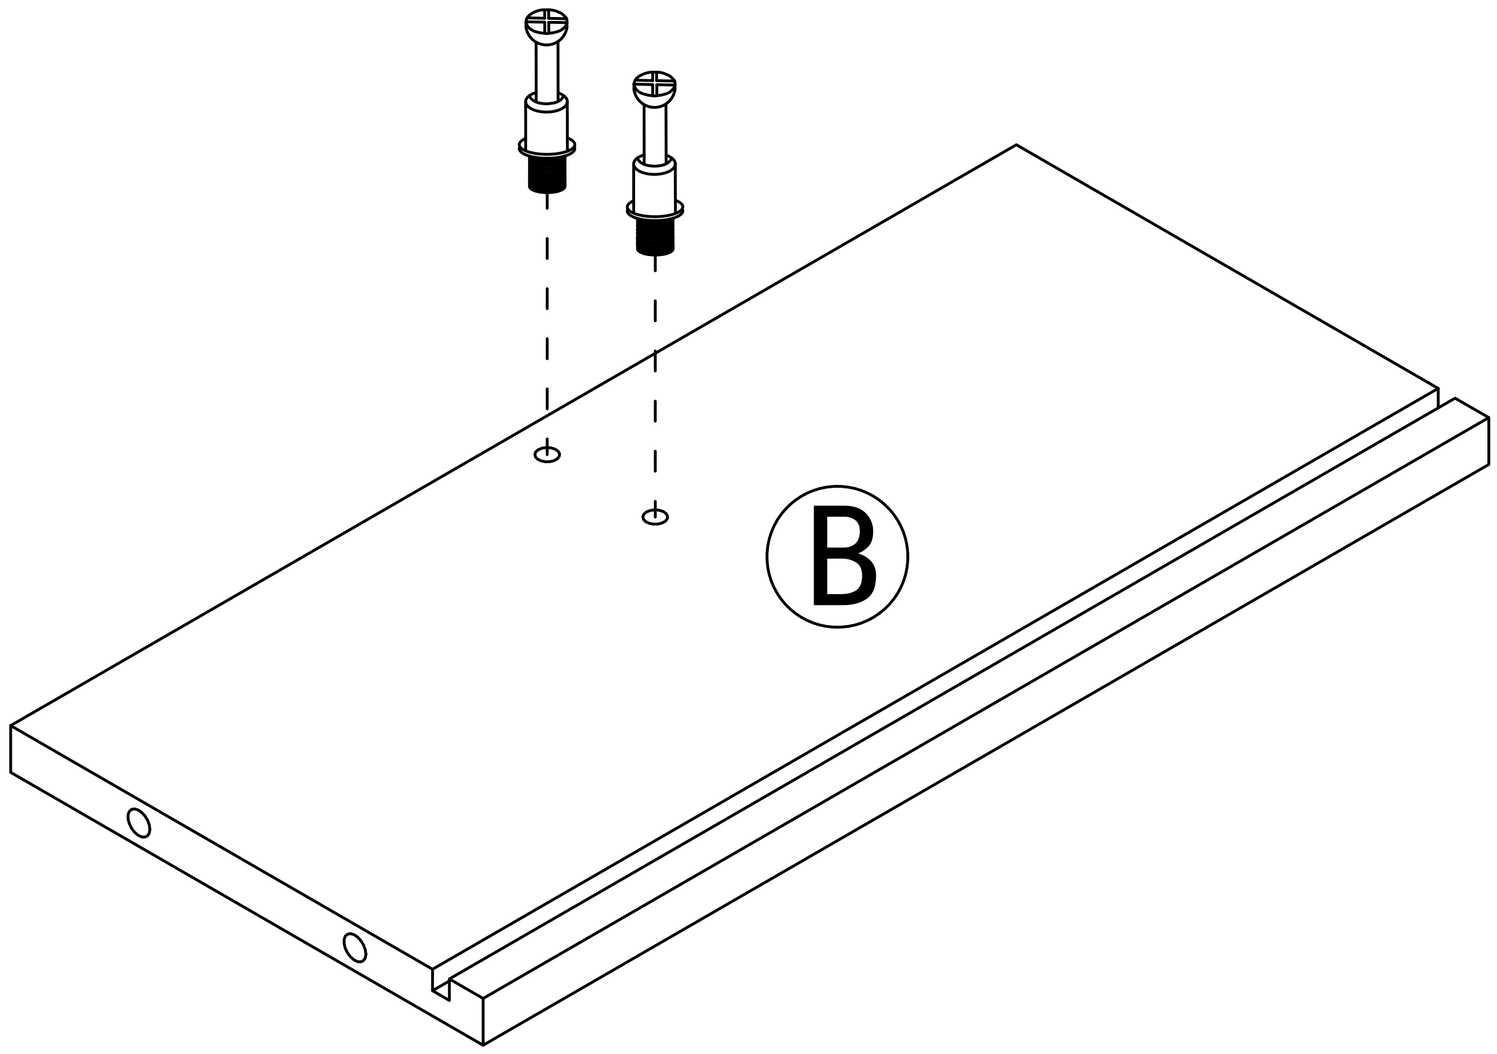

1 x8

x4

Step 3

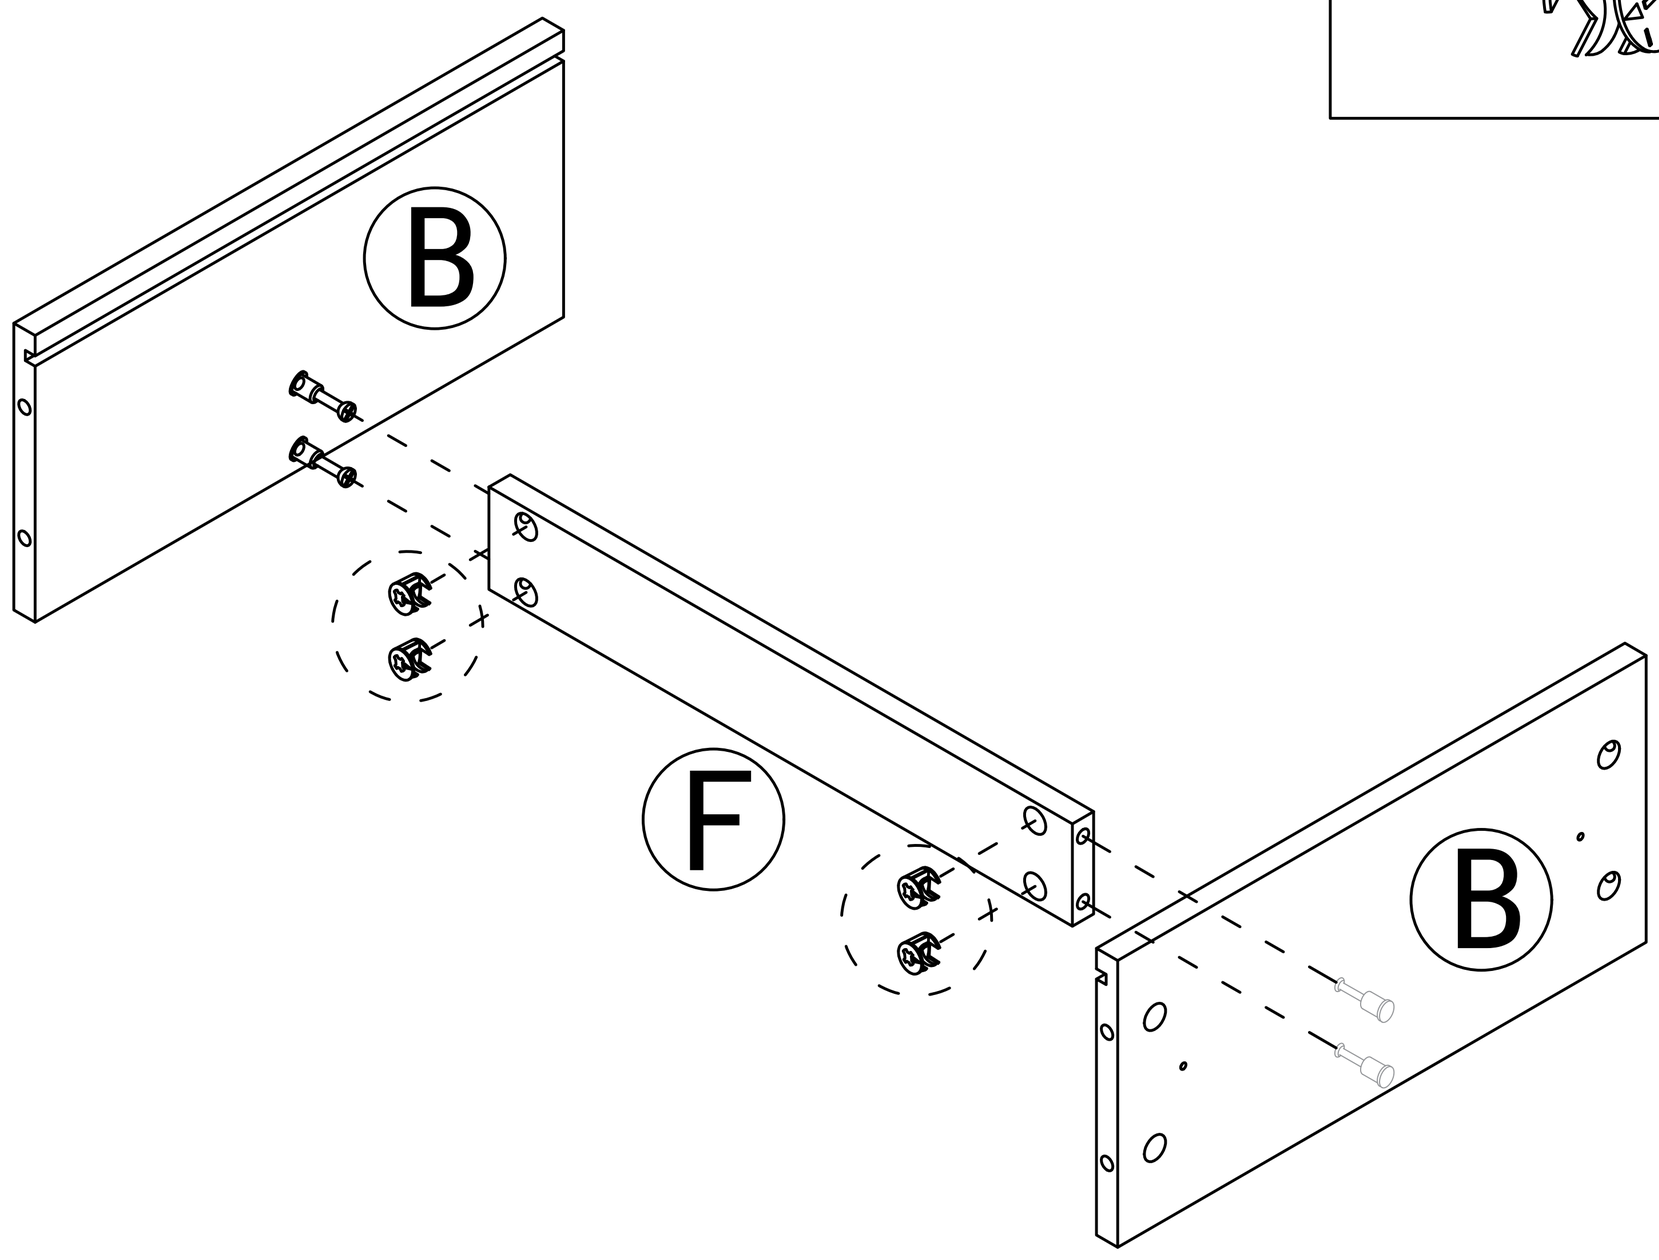


2 x8

x2


6

Step 4

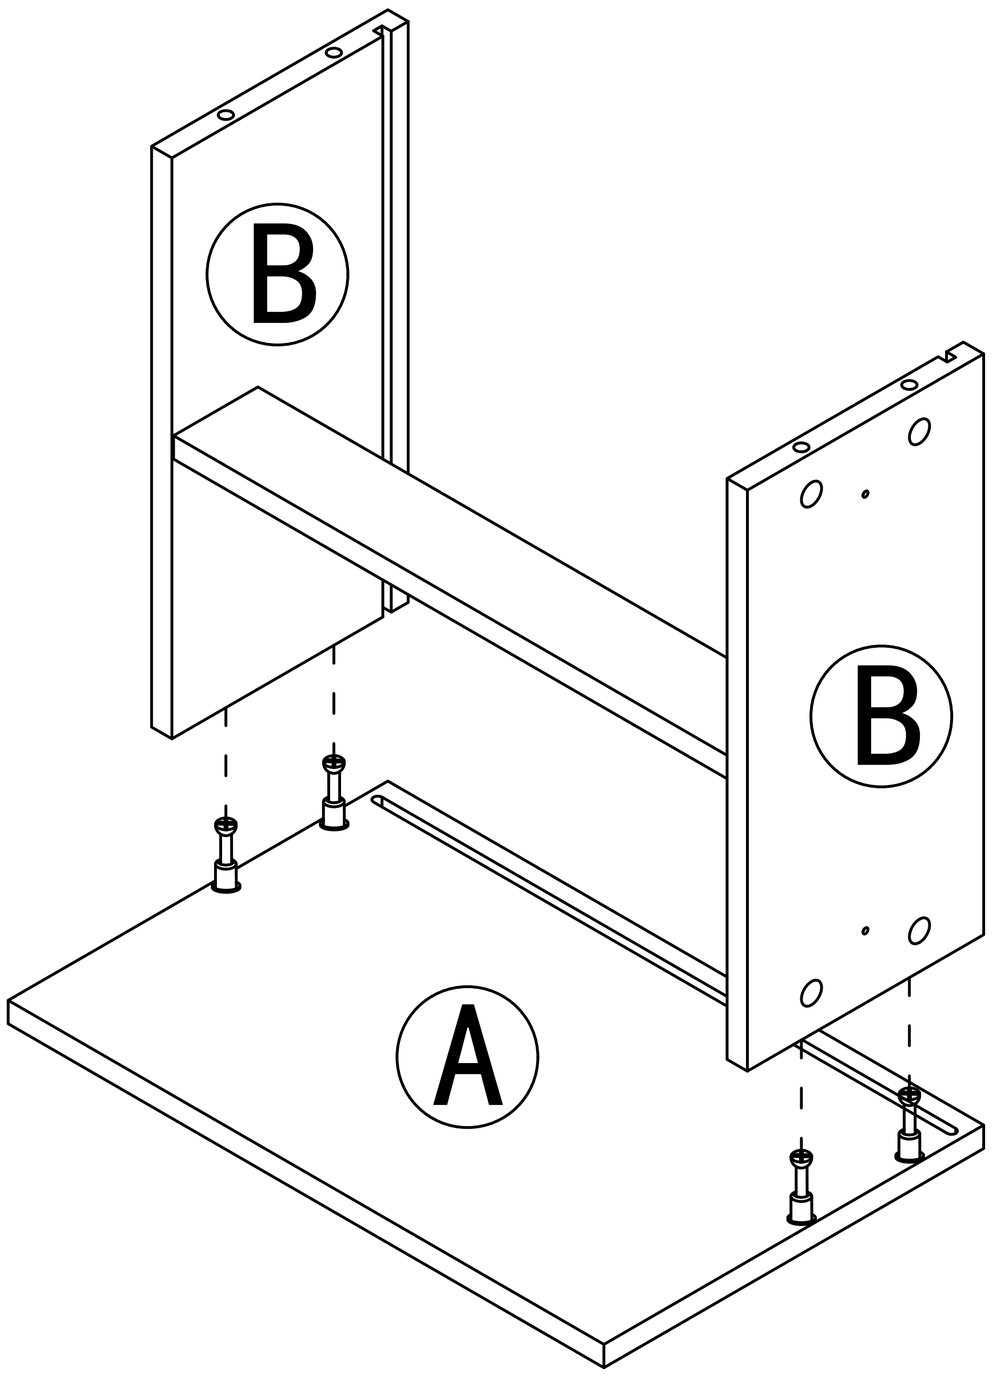


x2


Step 5

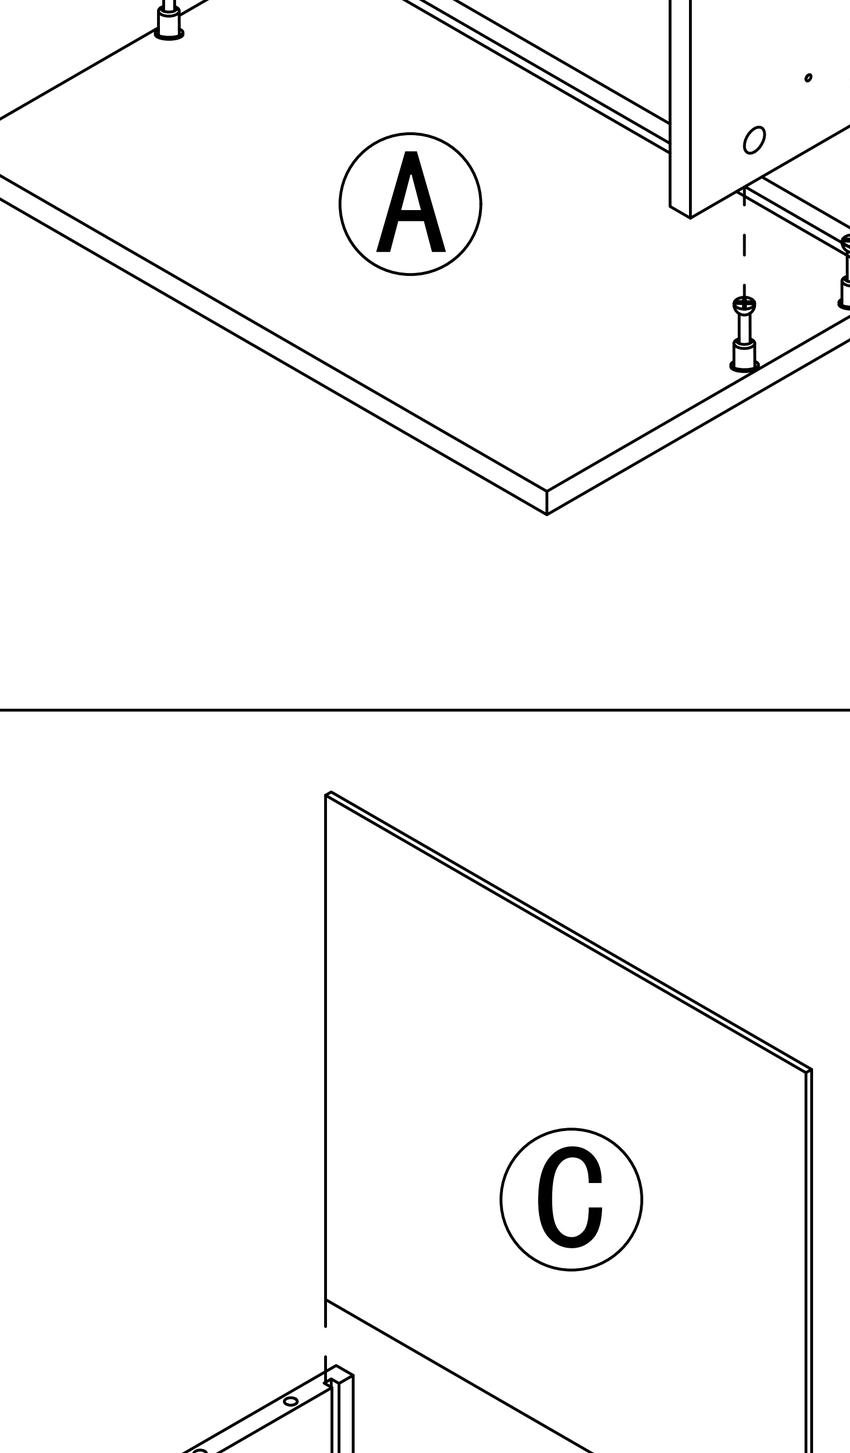


x2


Step 6

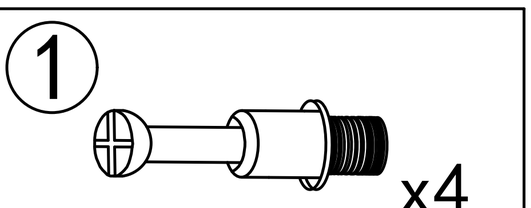

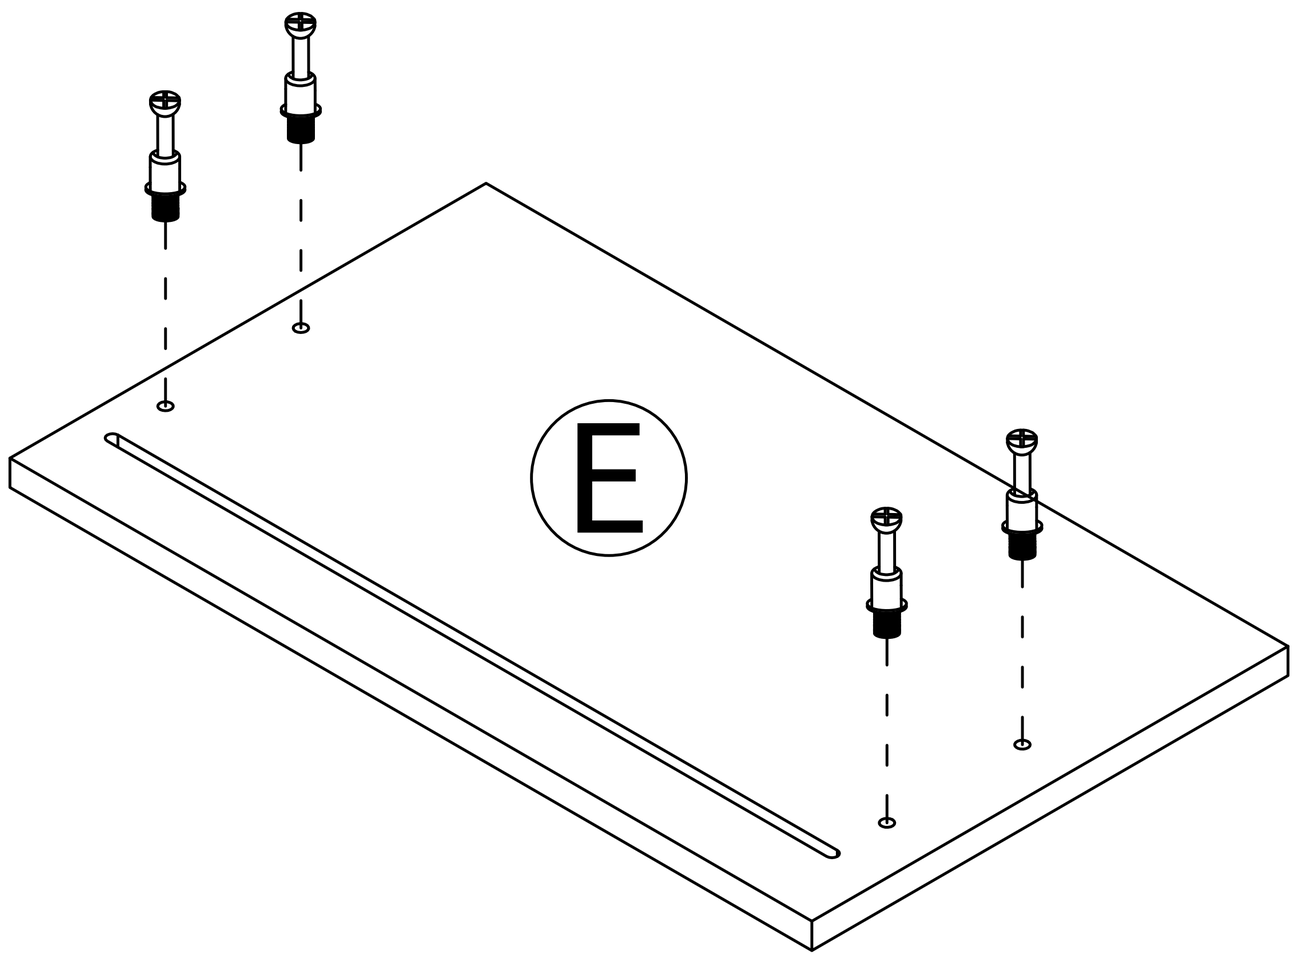


Step 7

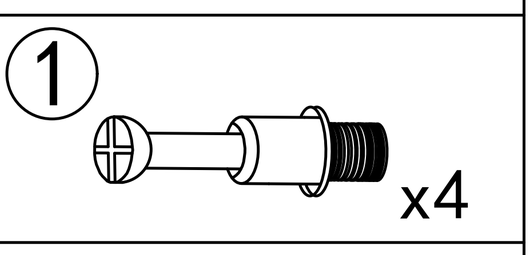

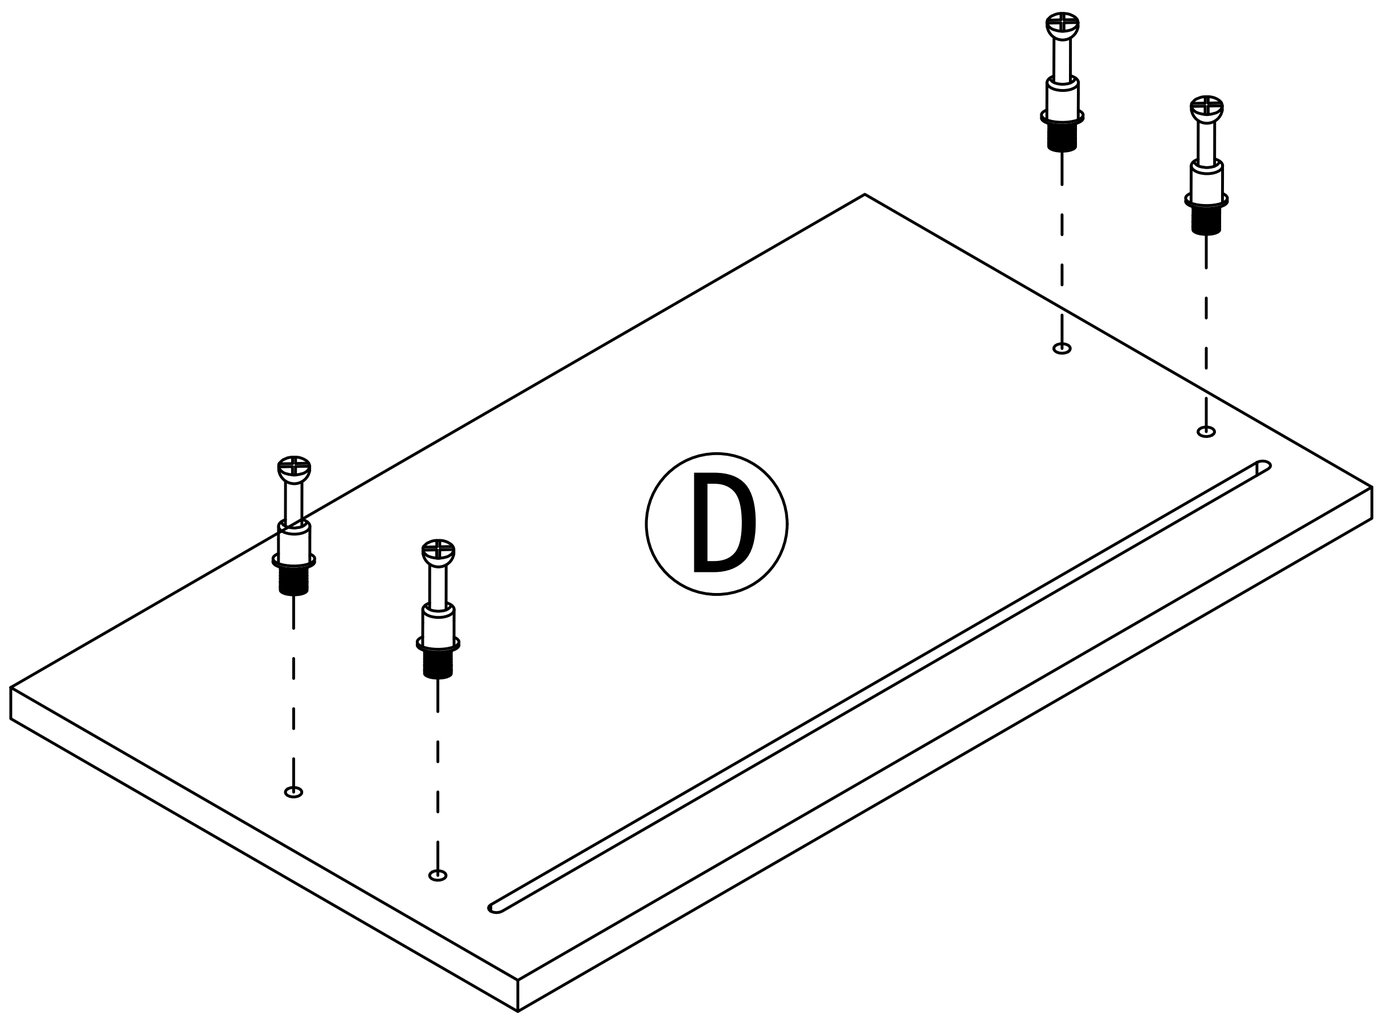


Step 8

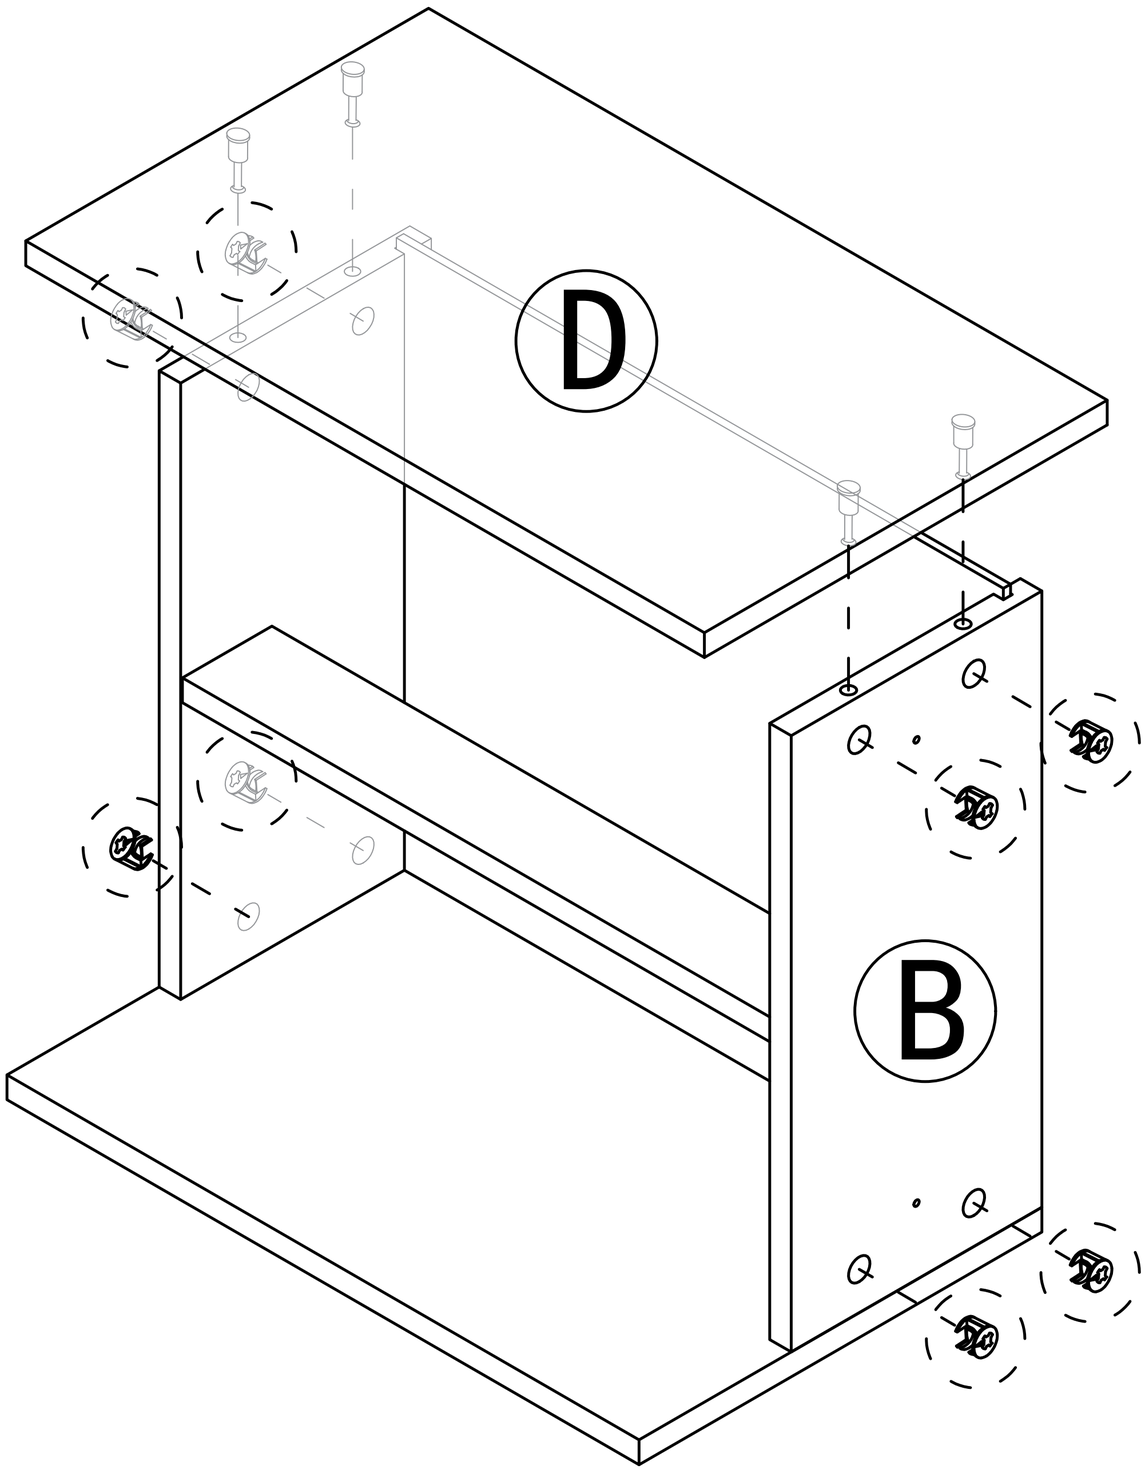


2 x8


Step 9

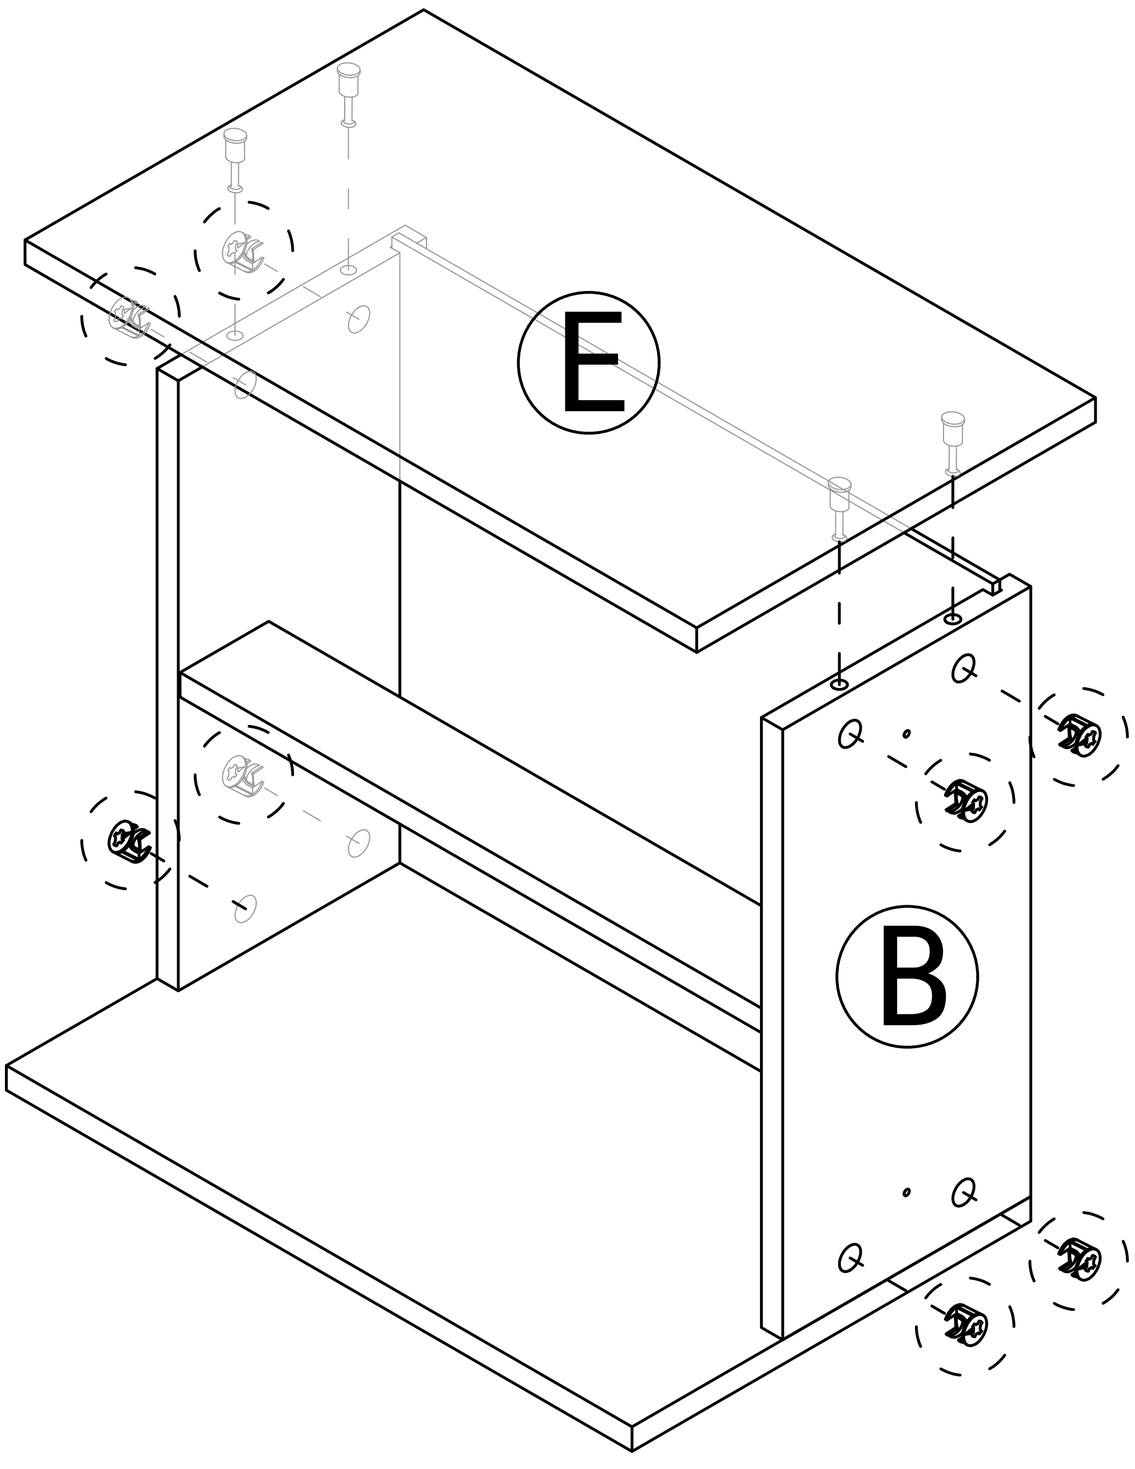

2 x8

Step 10

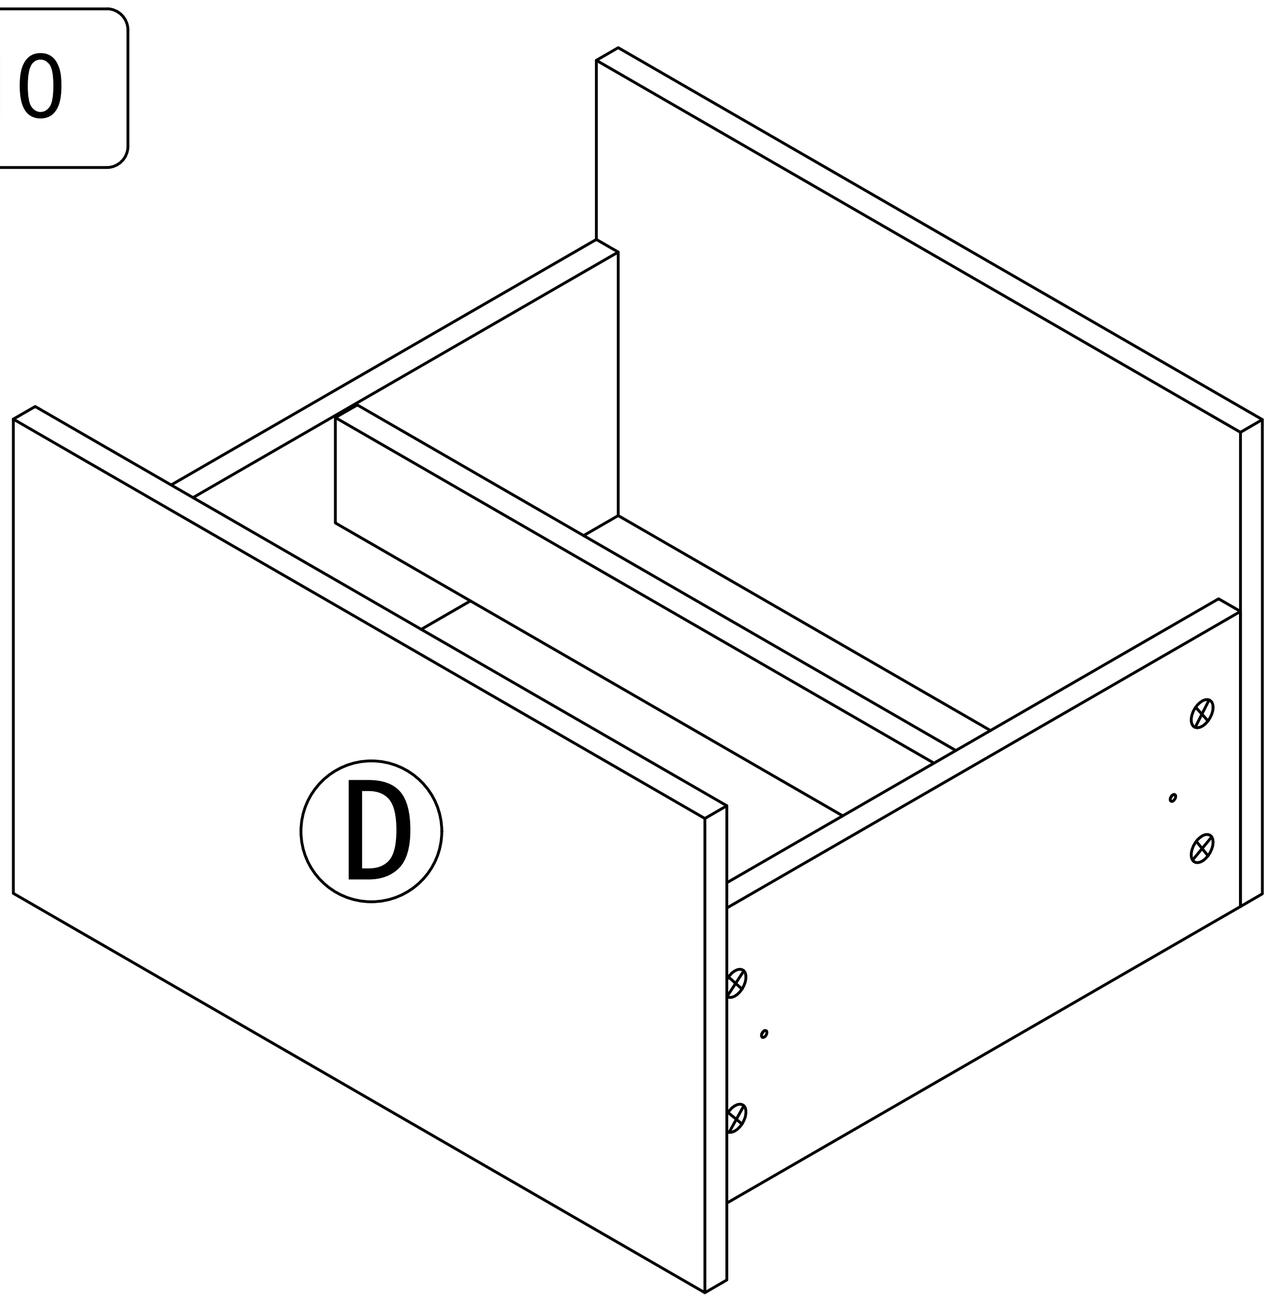


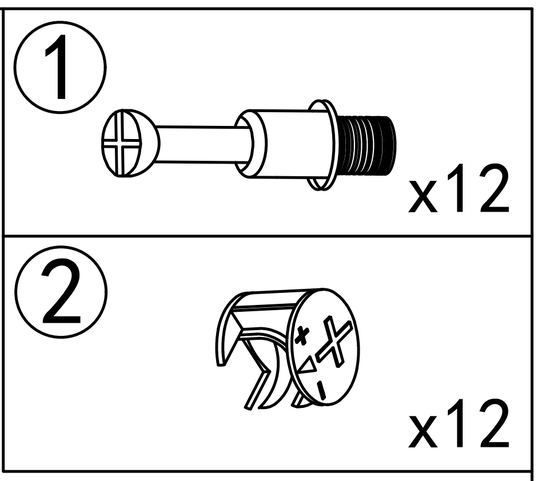


x2

Repeat the above installation steps.

Step 11

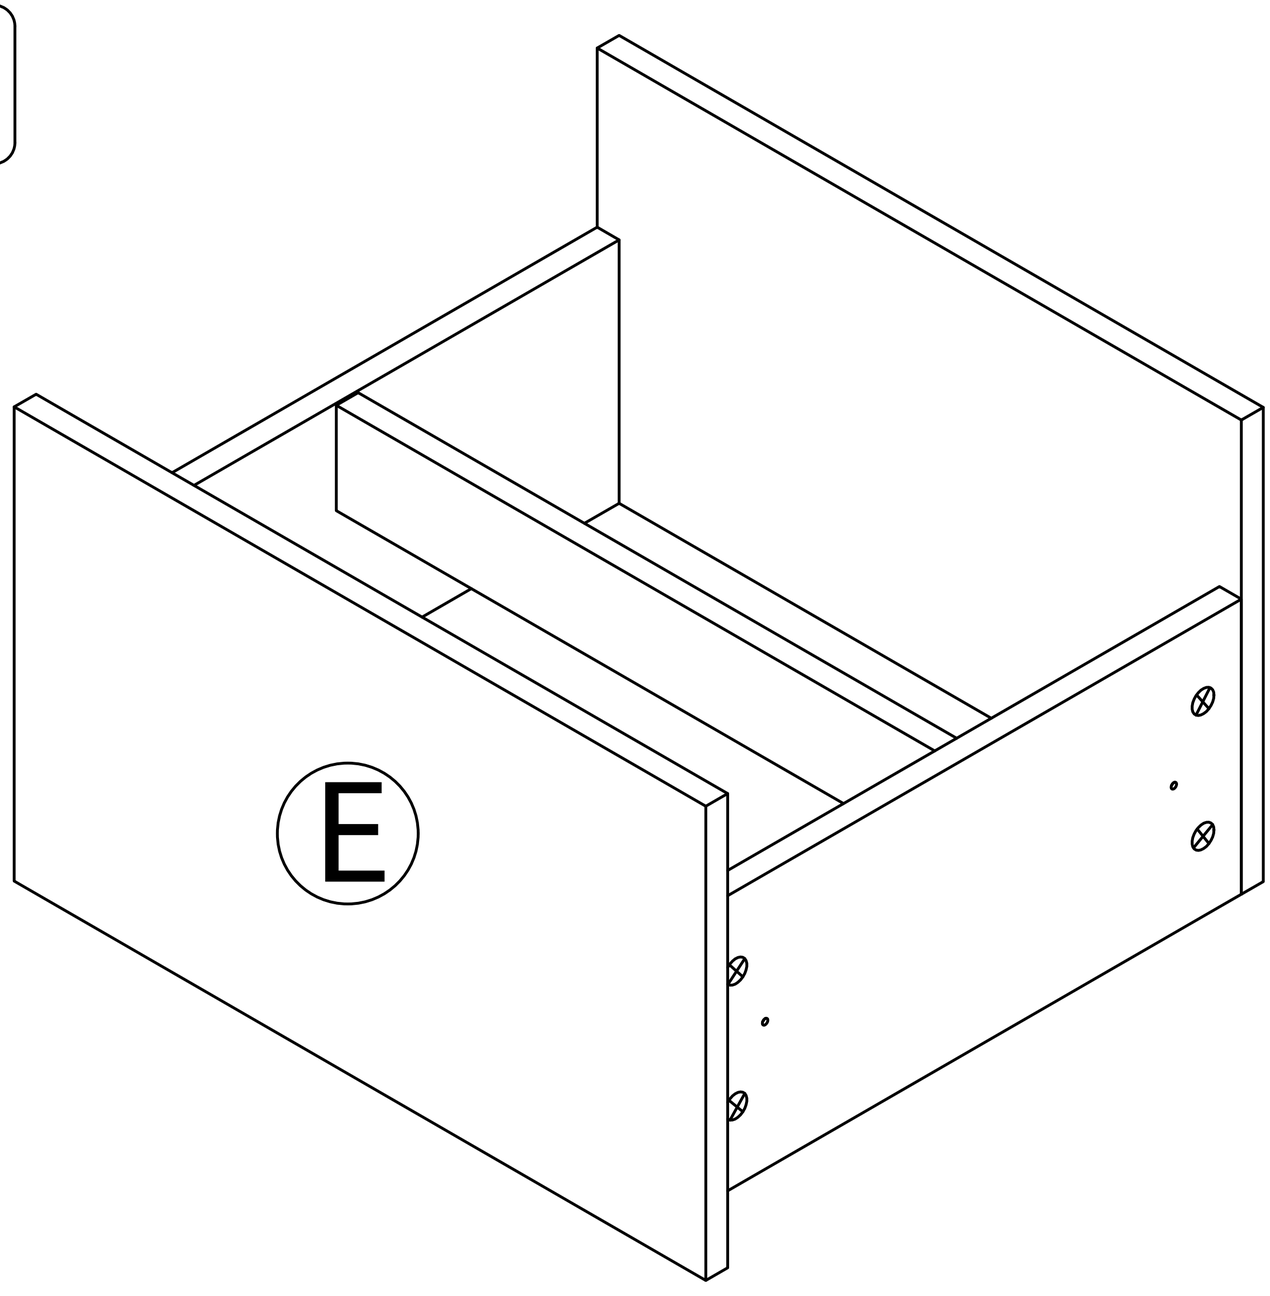


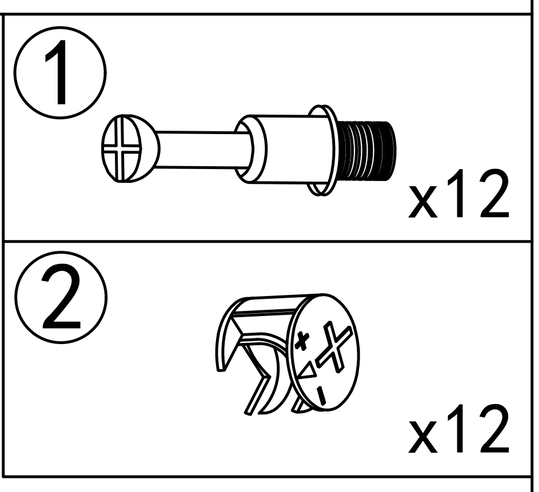

x2


Repeat the above installation steps.

Drawer rail breakdown diagram

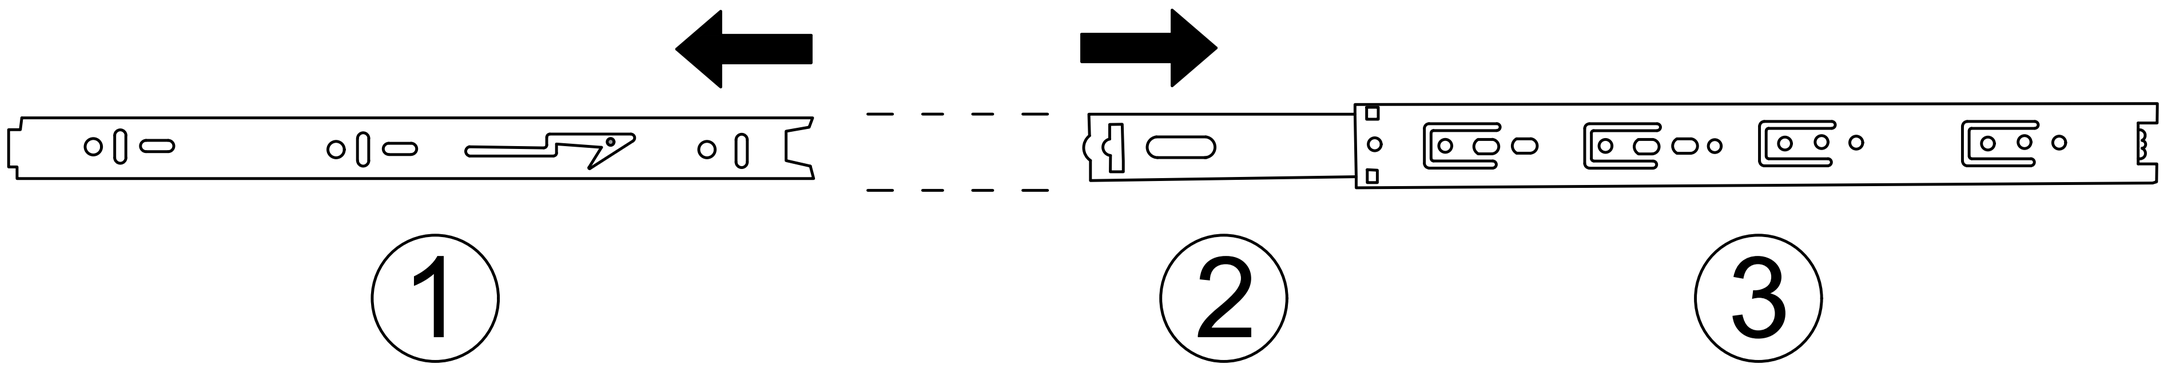


① Dismantle the schematic diagram

Step 1 : Pull the rails apart

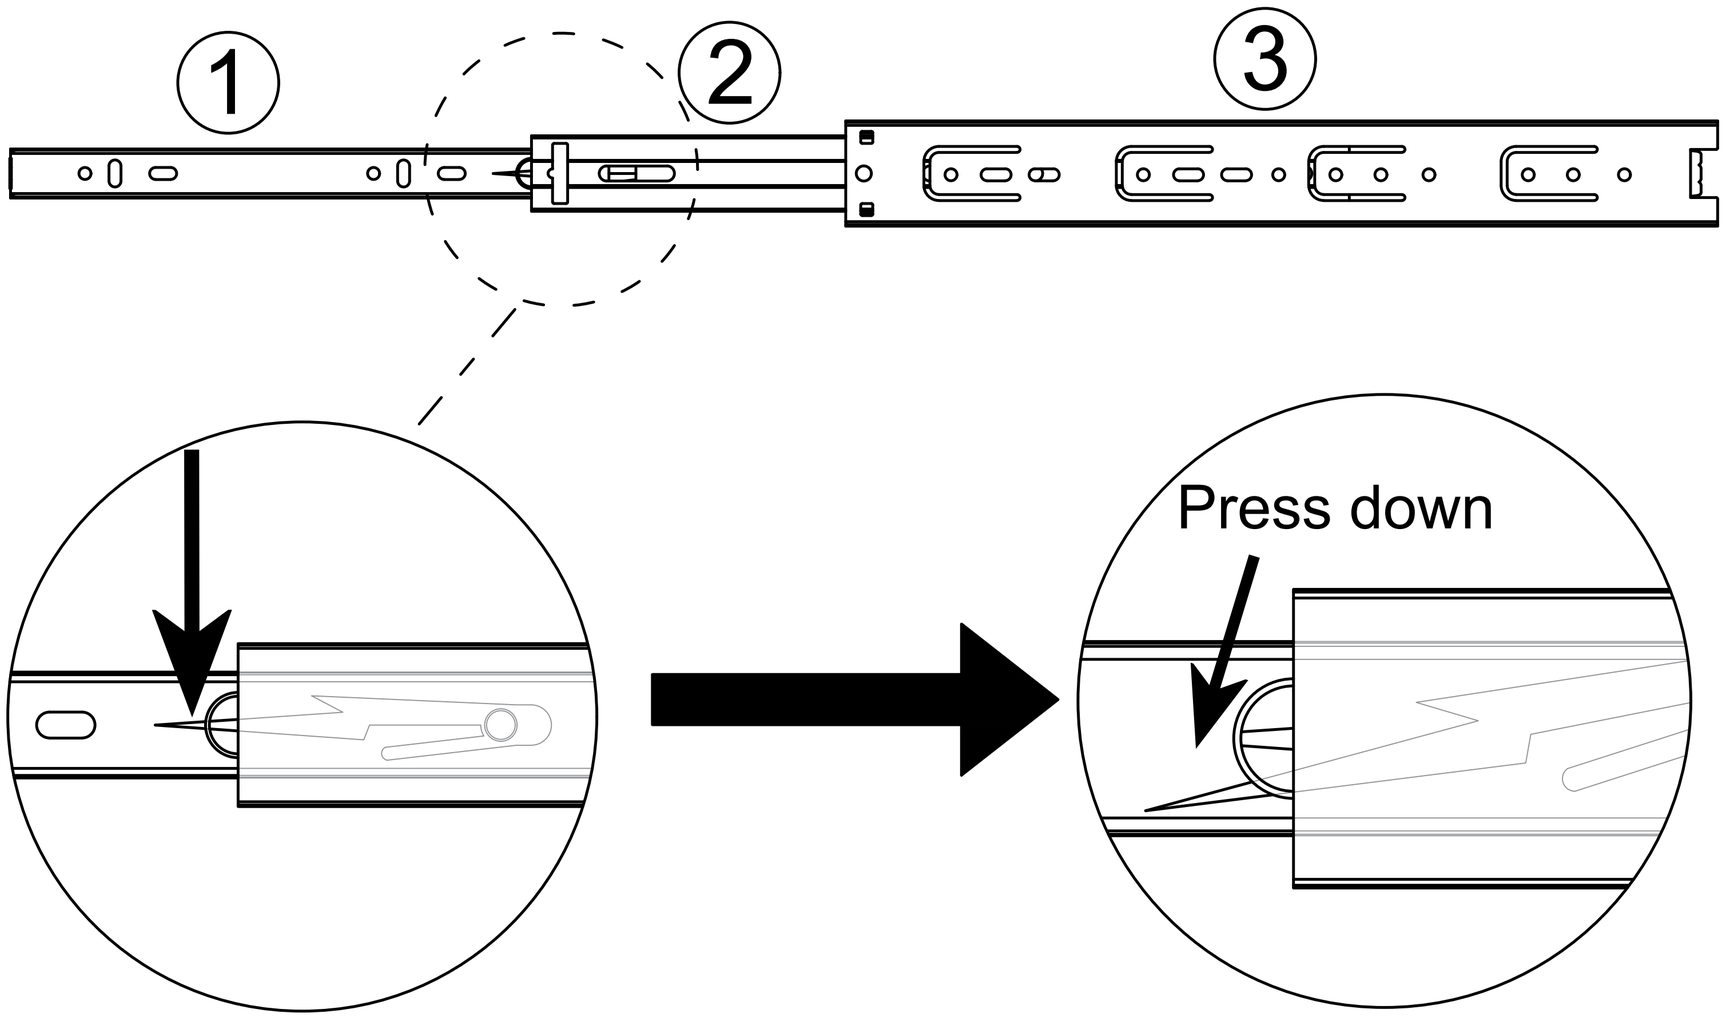



Step 2 : Press the nylon button and pull out ①.

Drawer rail decomposition completed schematic diagram

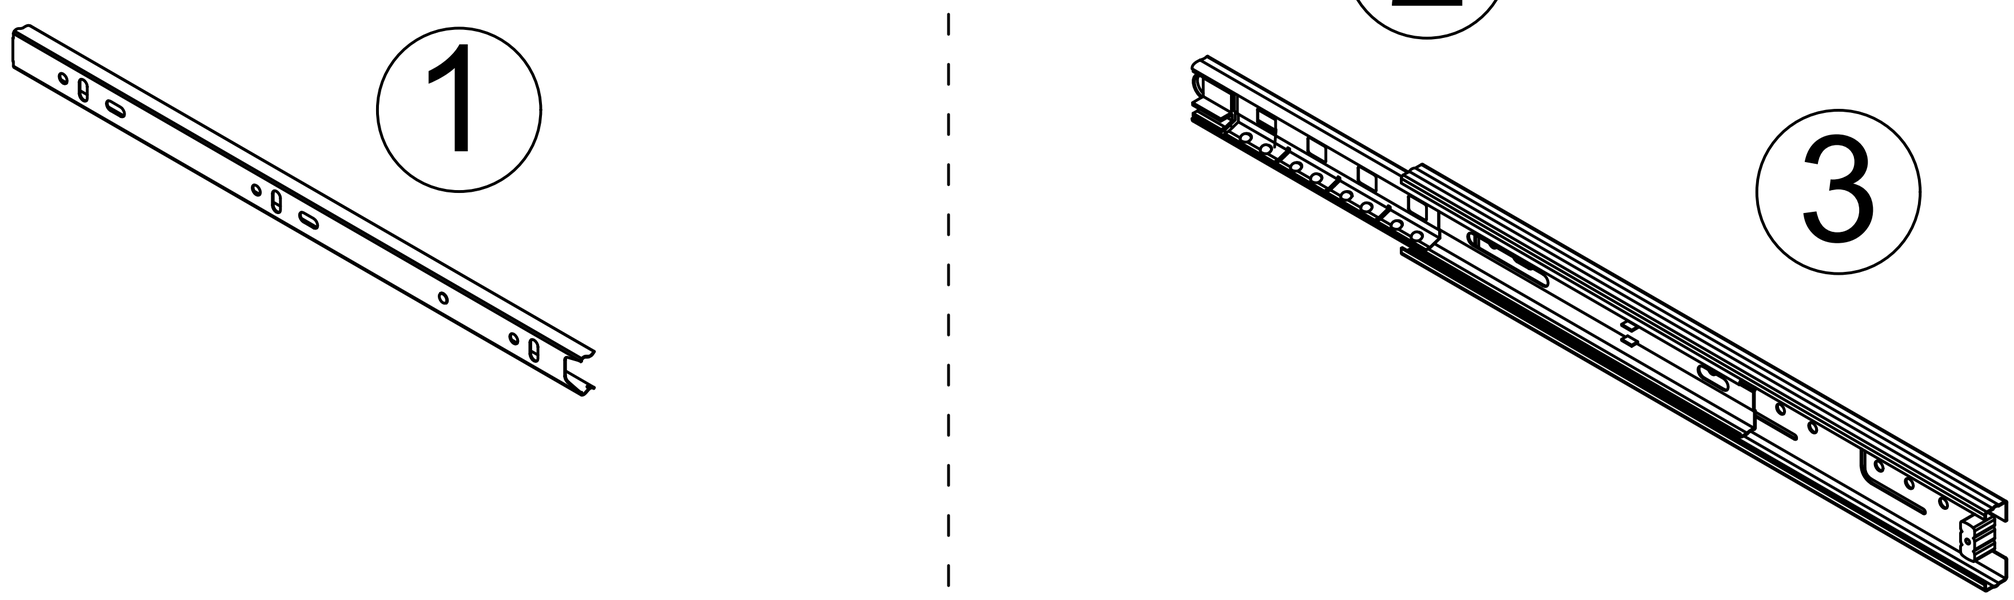


Step 12

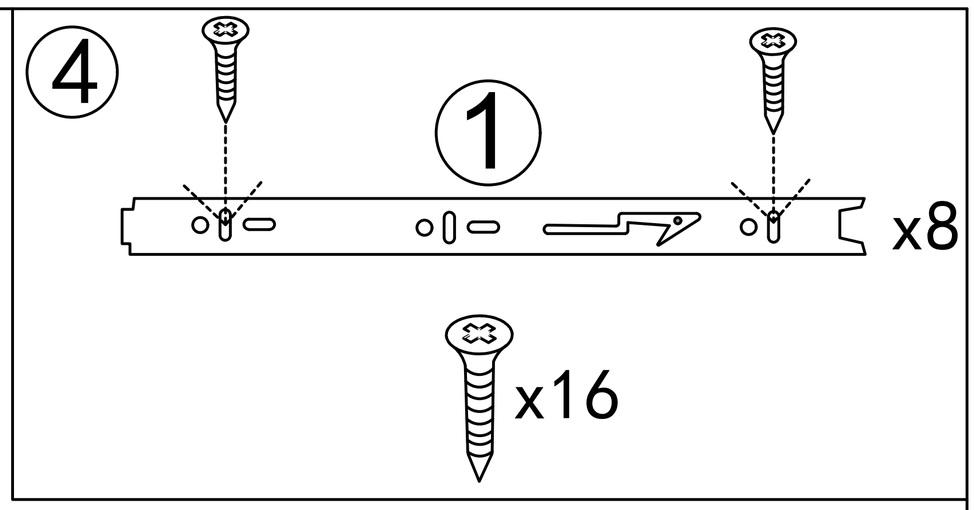


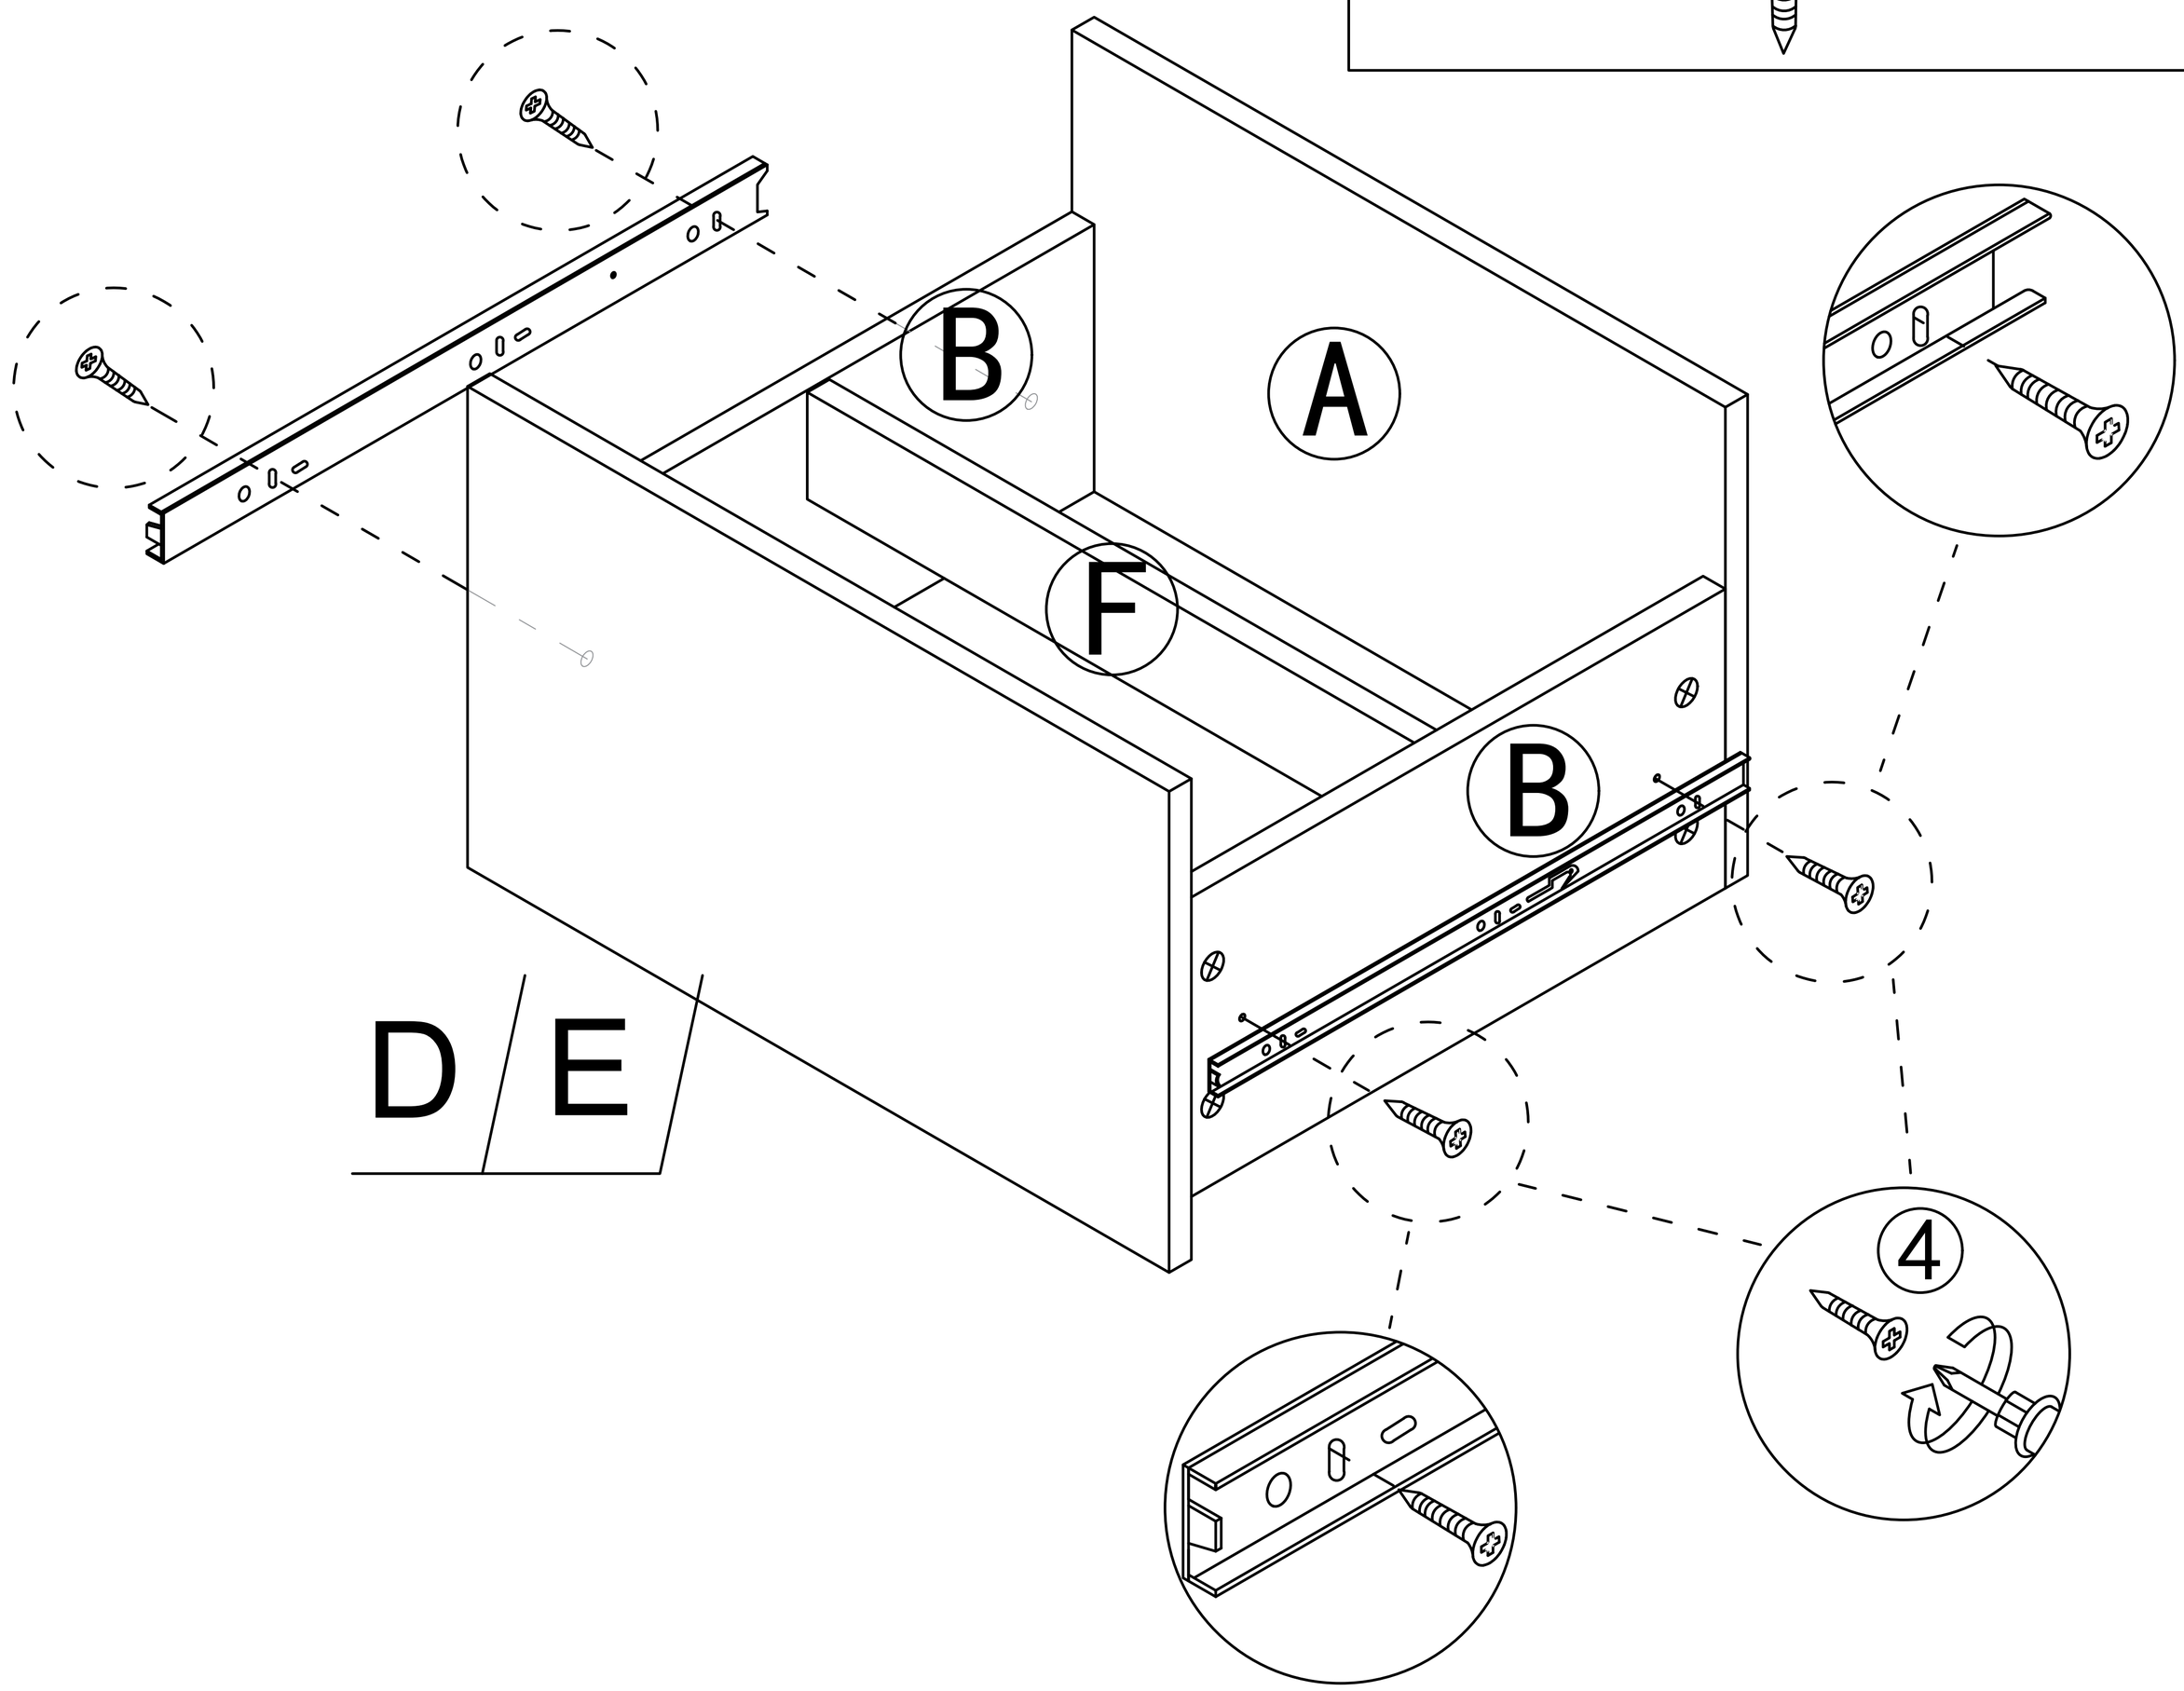






Install the guide rail according to the above steps.

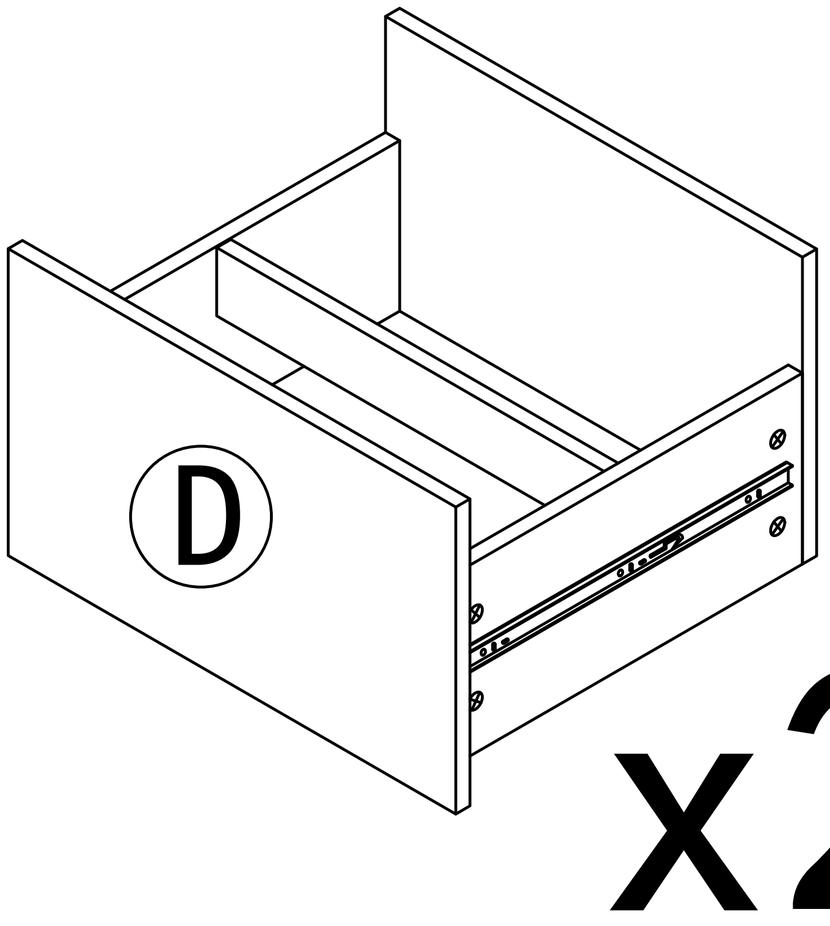


x2

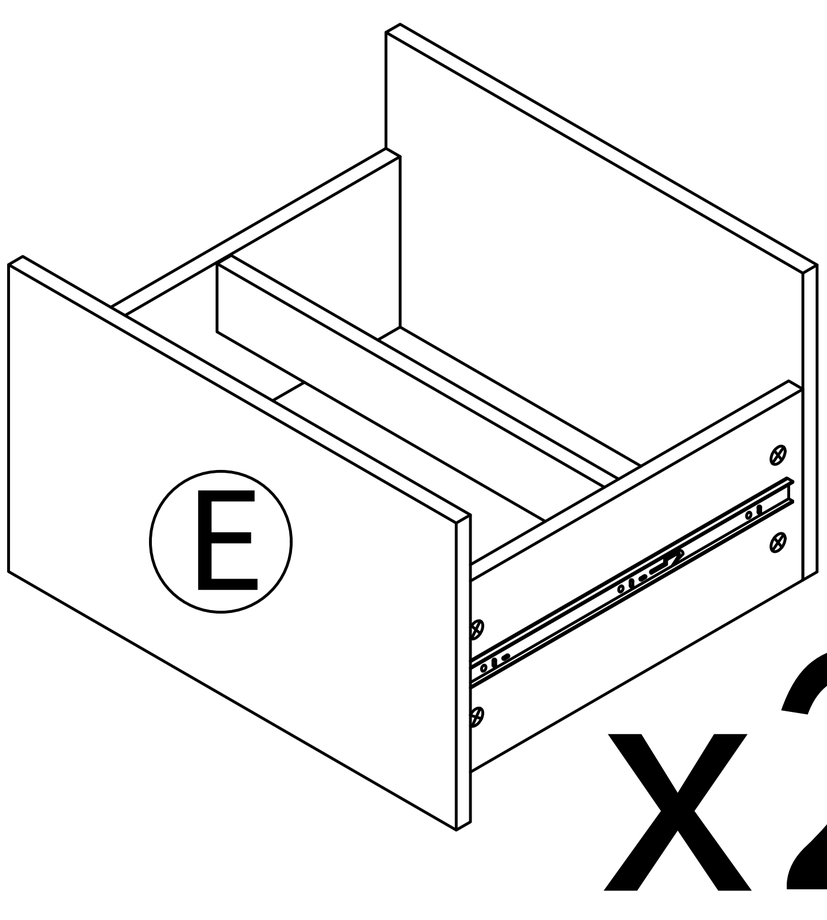


x2

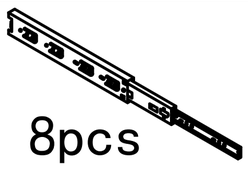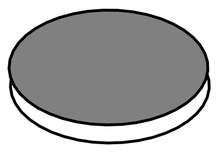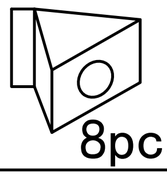
①		24pcs	②		24pcs	③		12pcs
④	 8pcs  24pcs		⑤		5pcs	⑥	 8pcs  8pcs	
⑦	1pcs 1pcs 1pcs 1pcs  2pcs							

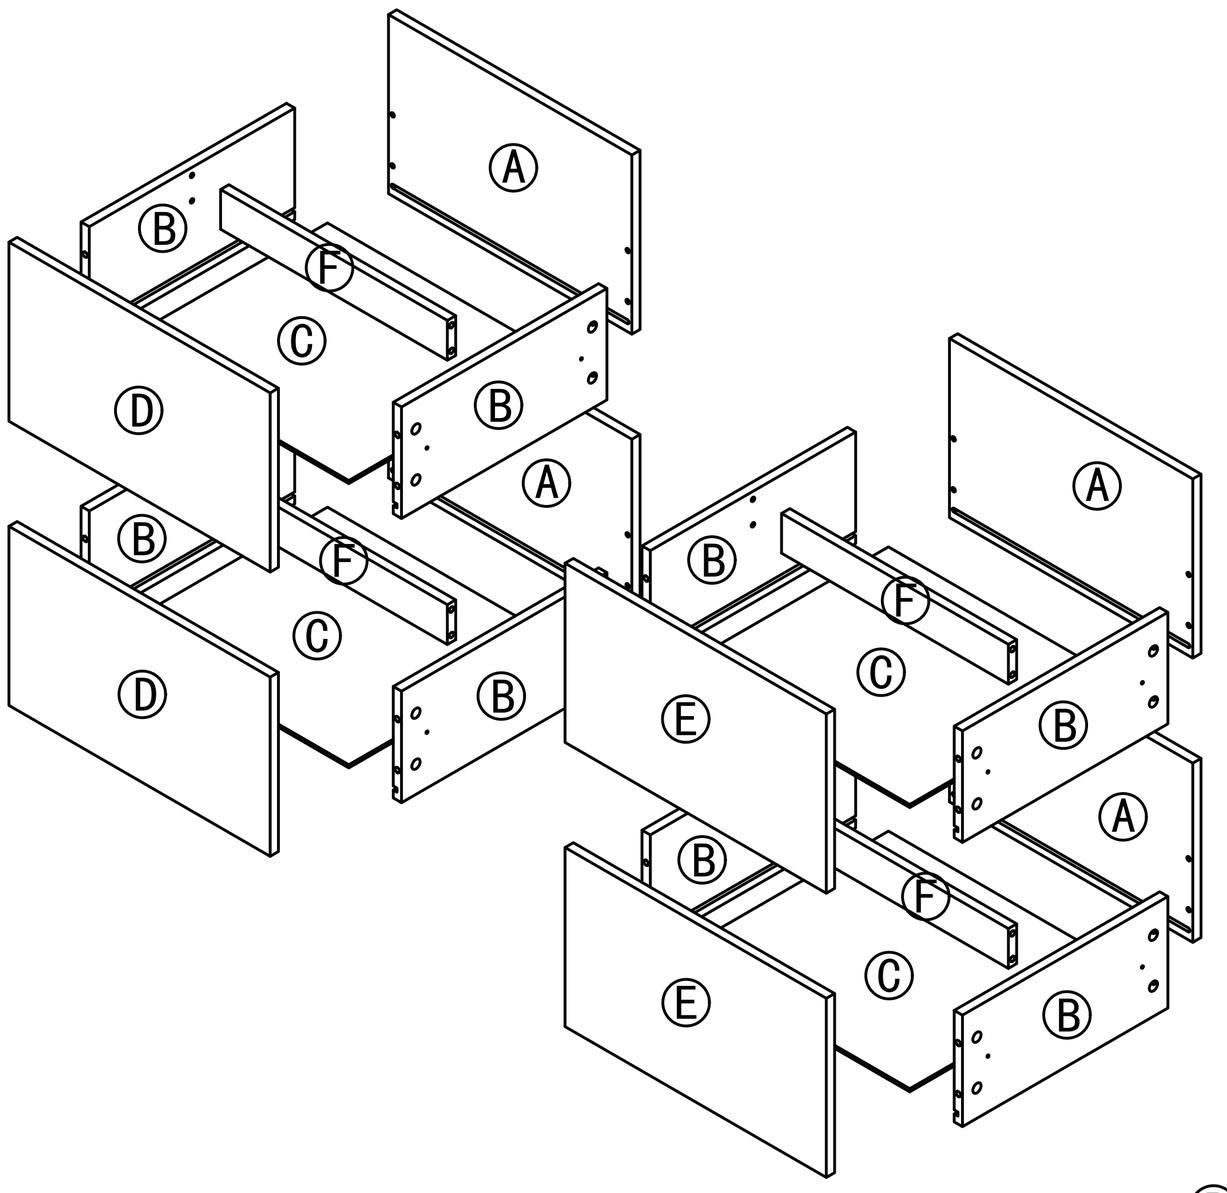

Step 13

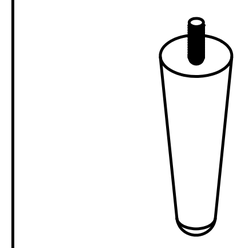


Px5

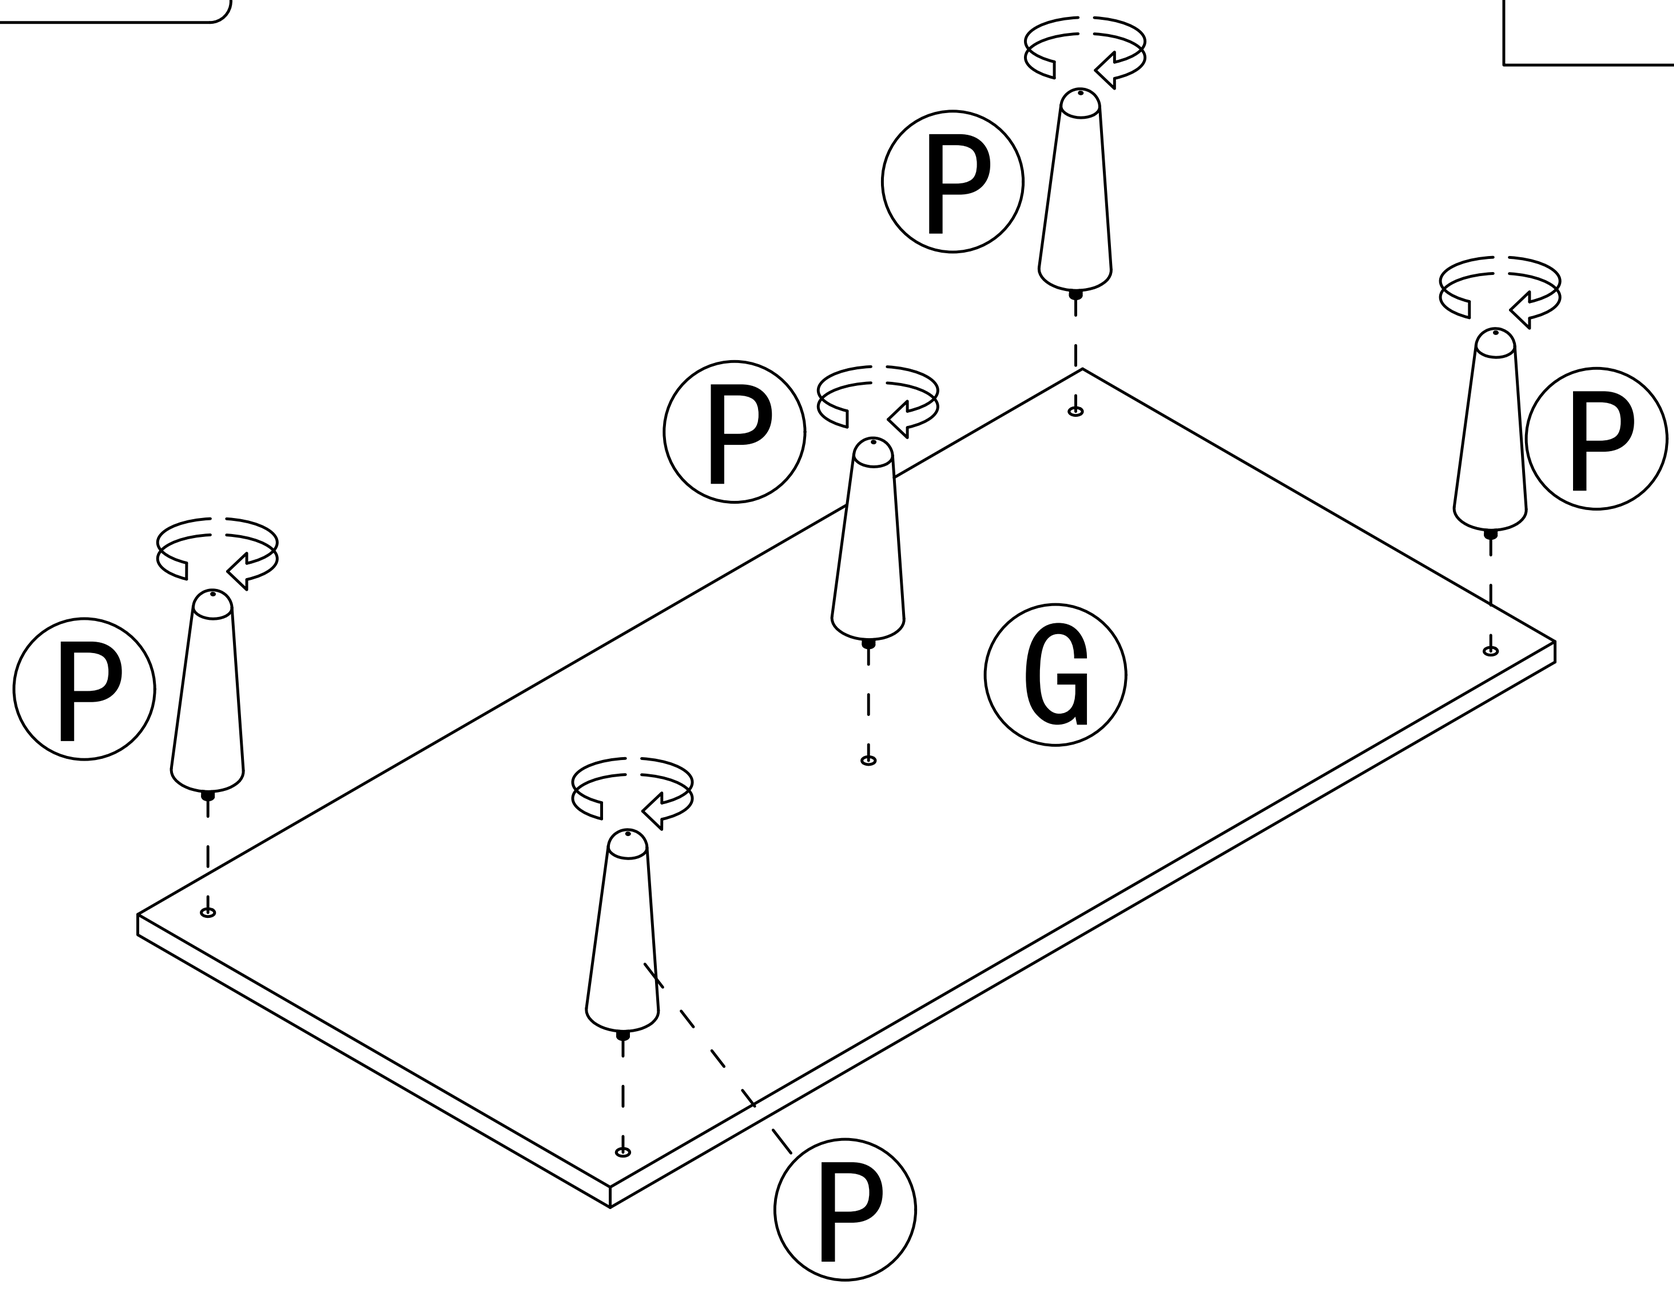


Step 14


Tear off release paper and stick the black foot pad on the board

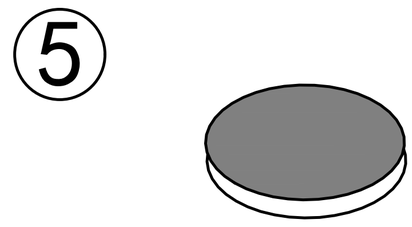


x5

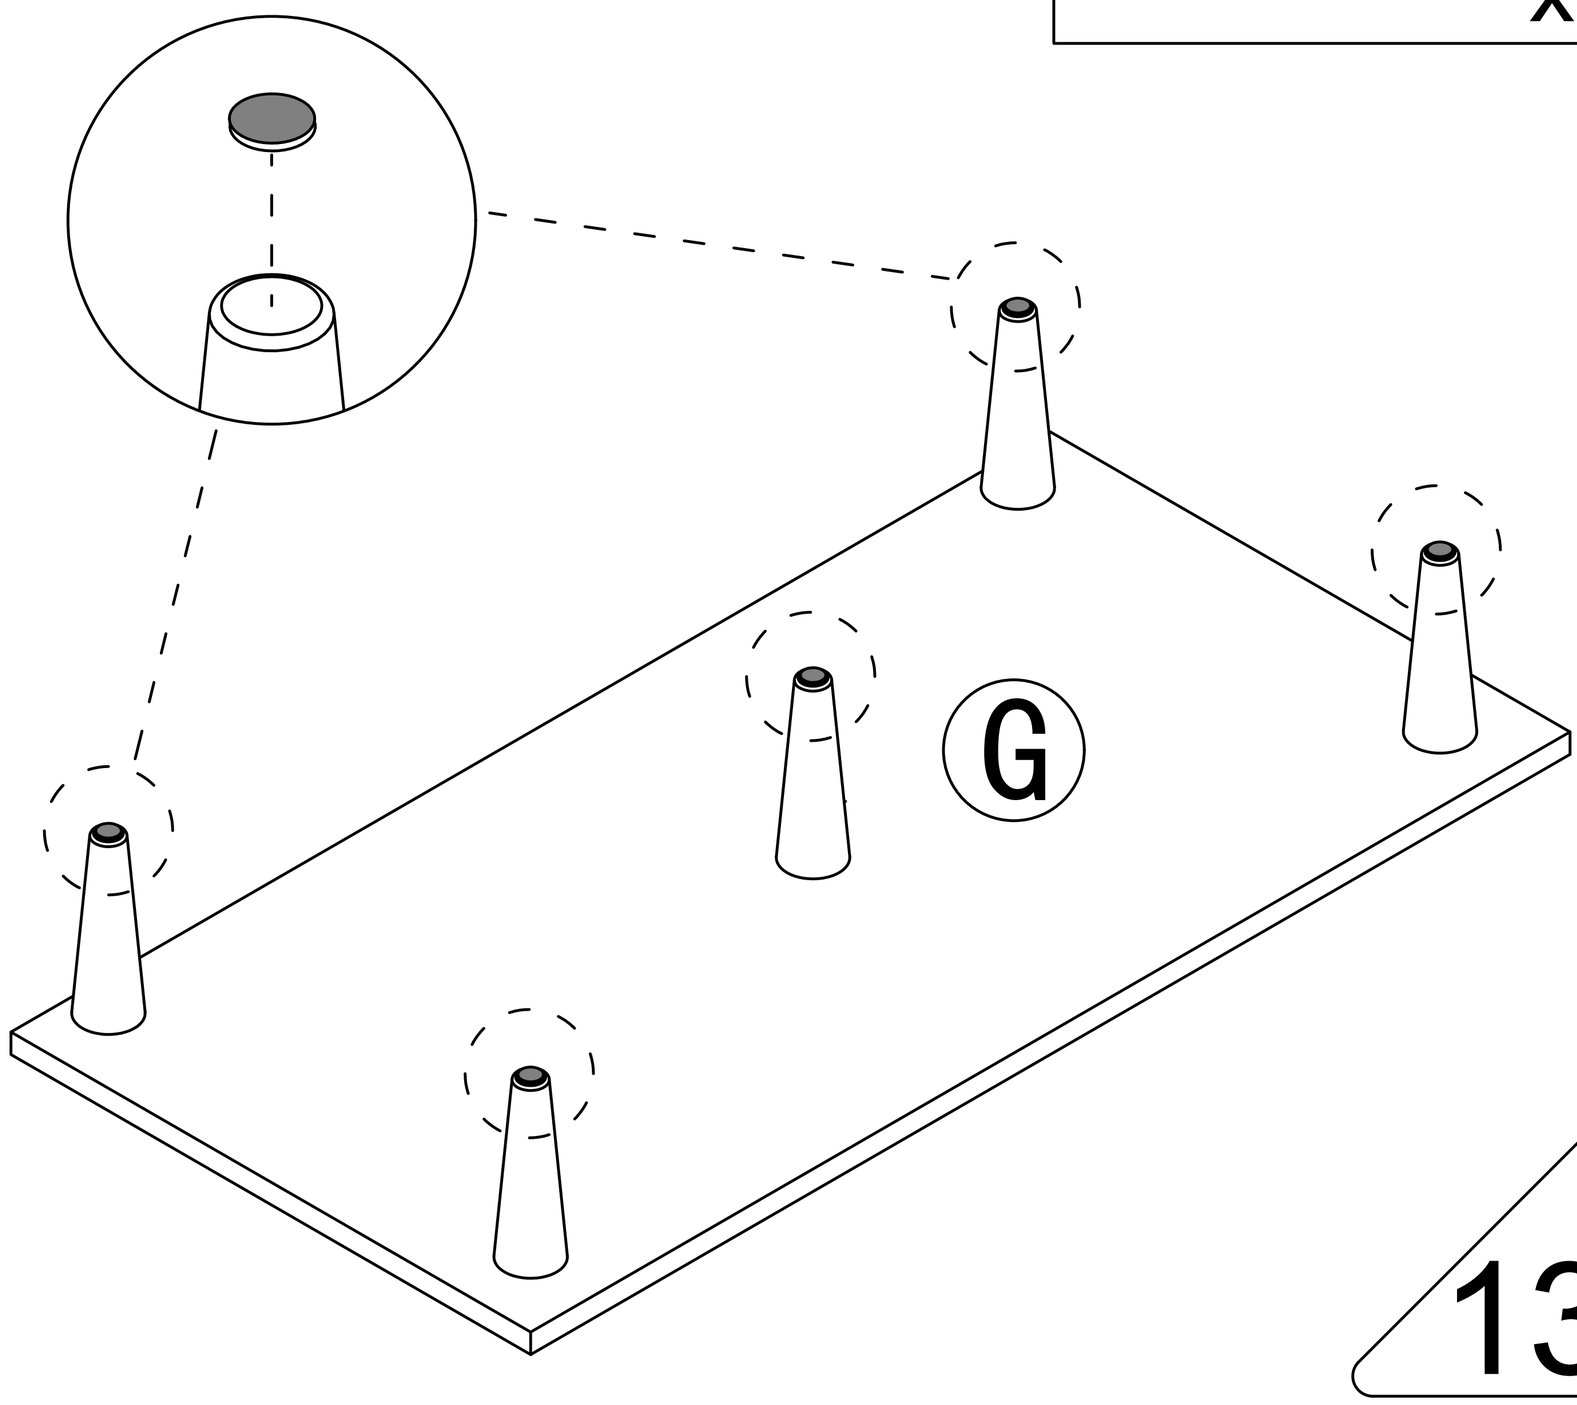


Step 15

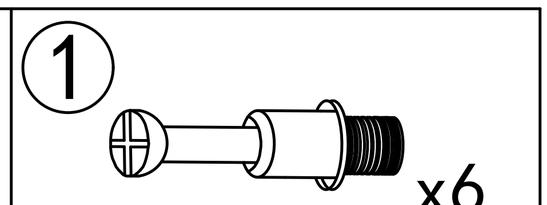


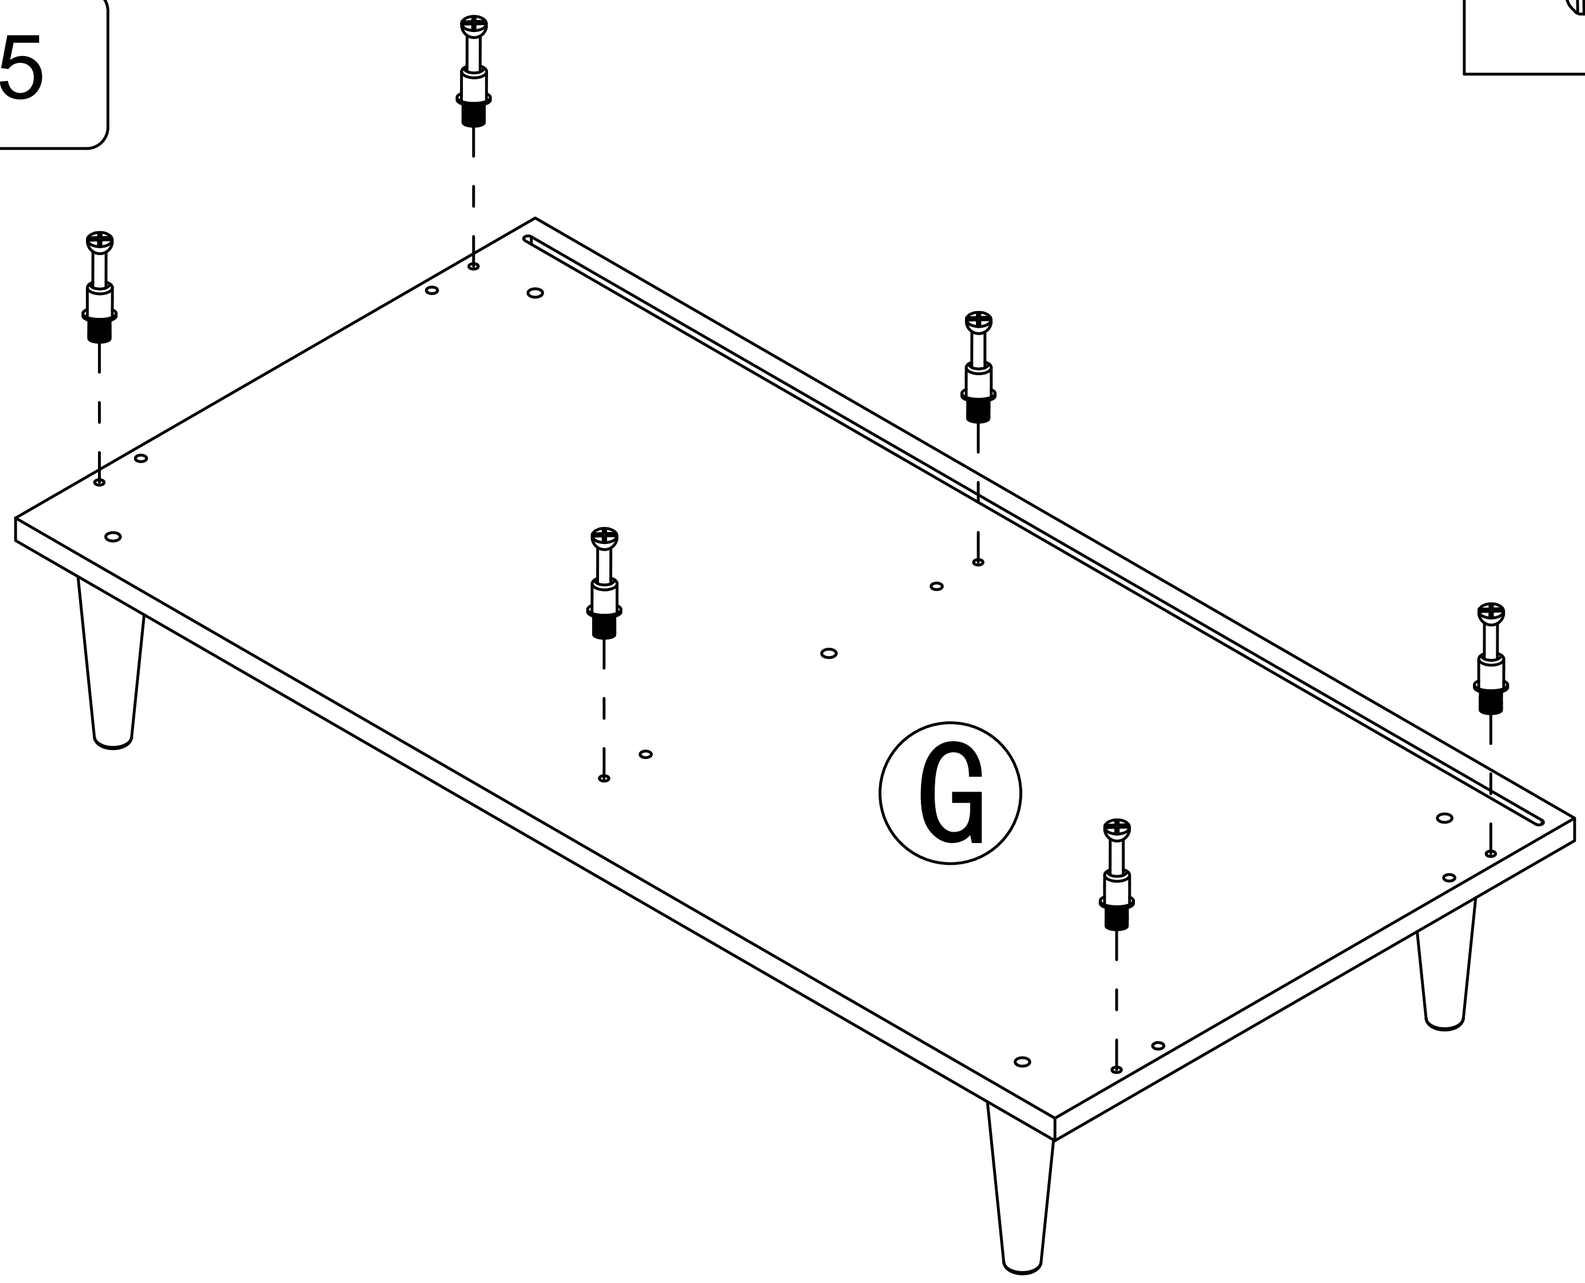


Step 16

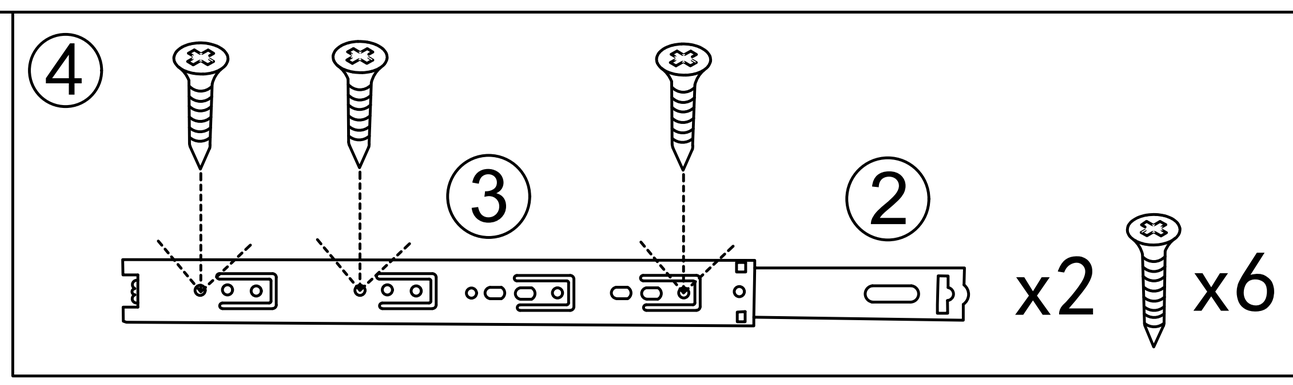


This hole is for strengthening fixed hole customers can choose to install according to their needs.

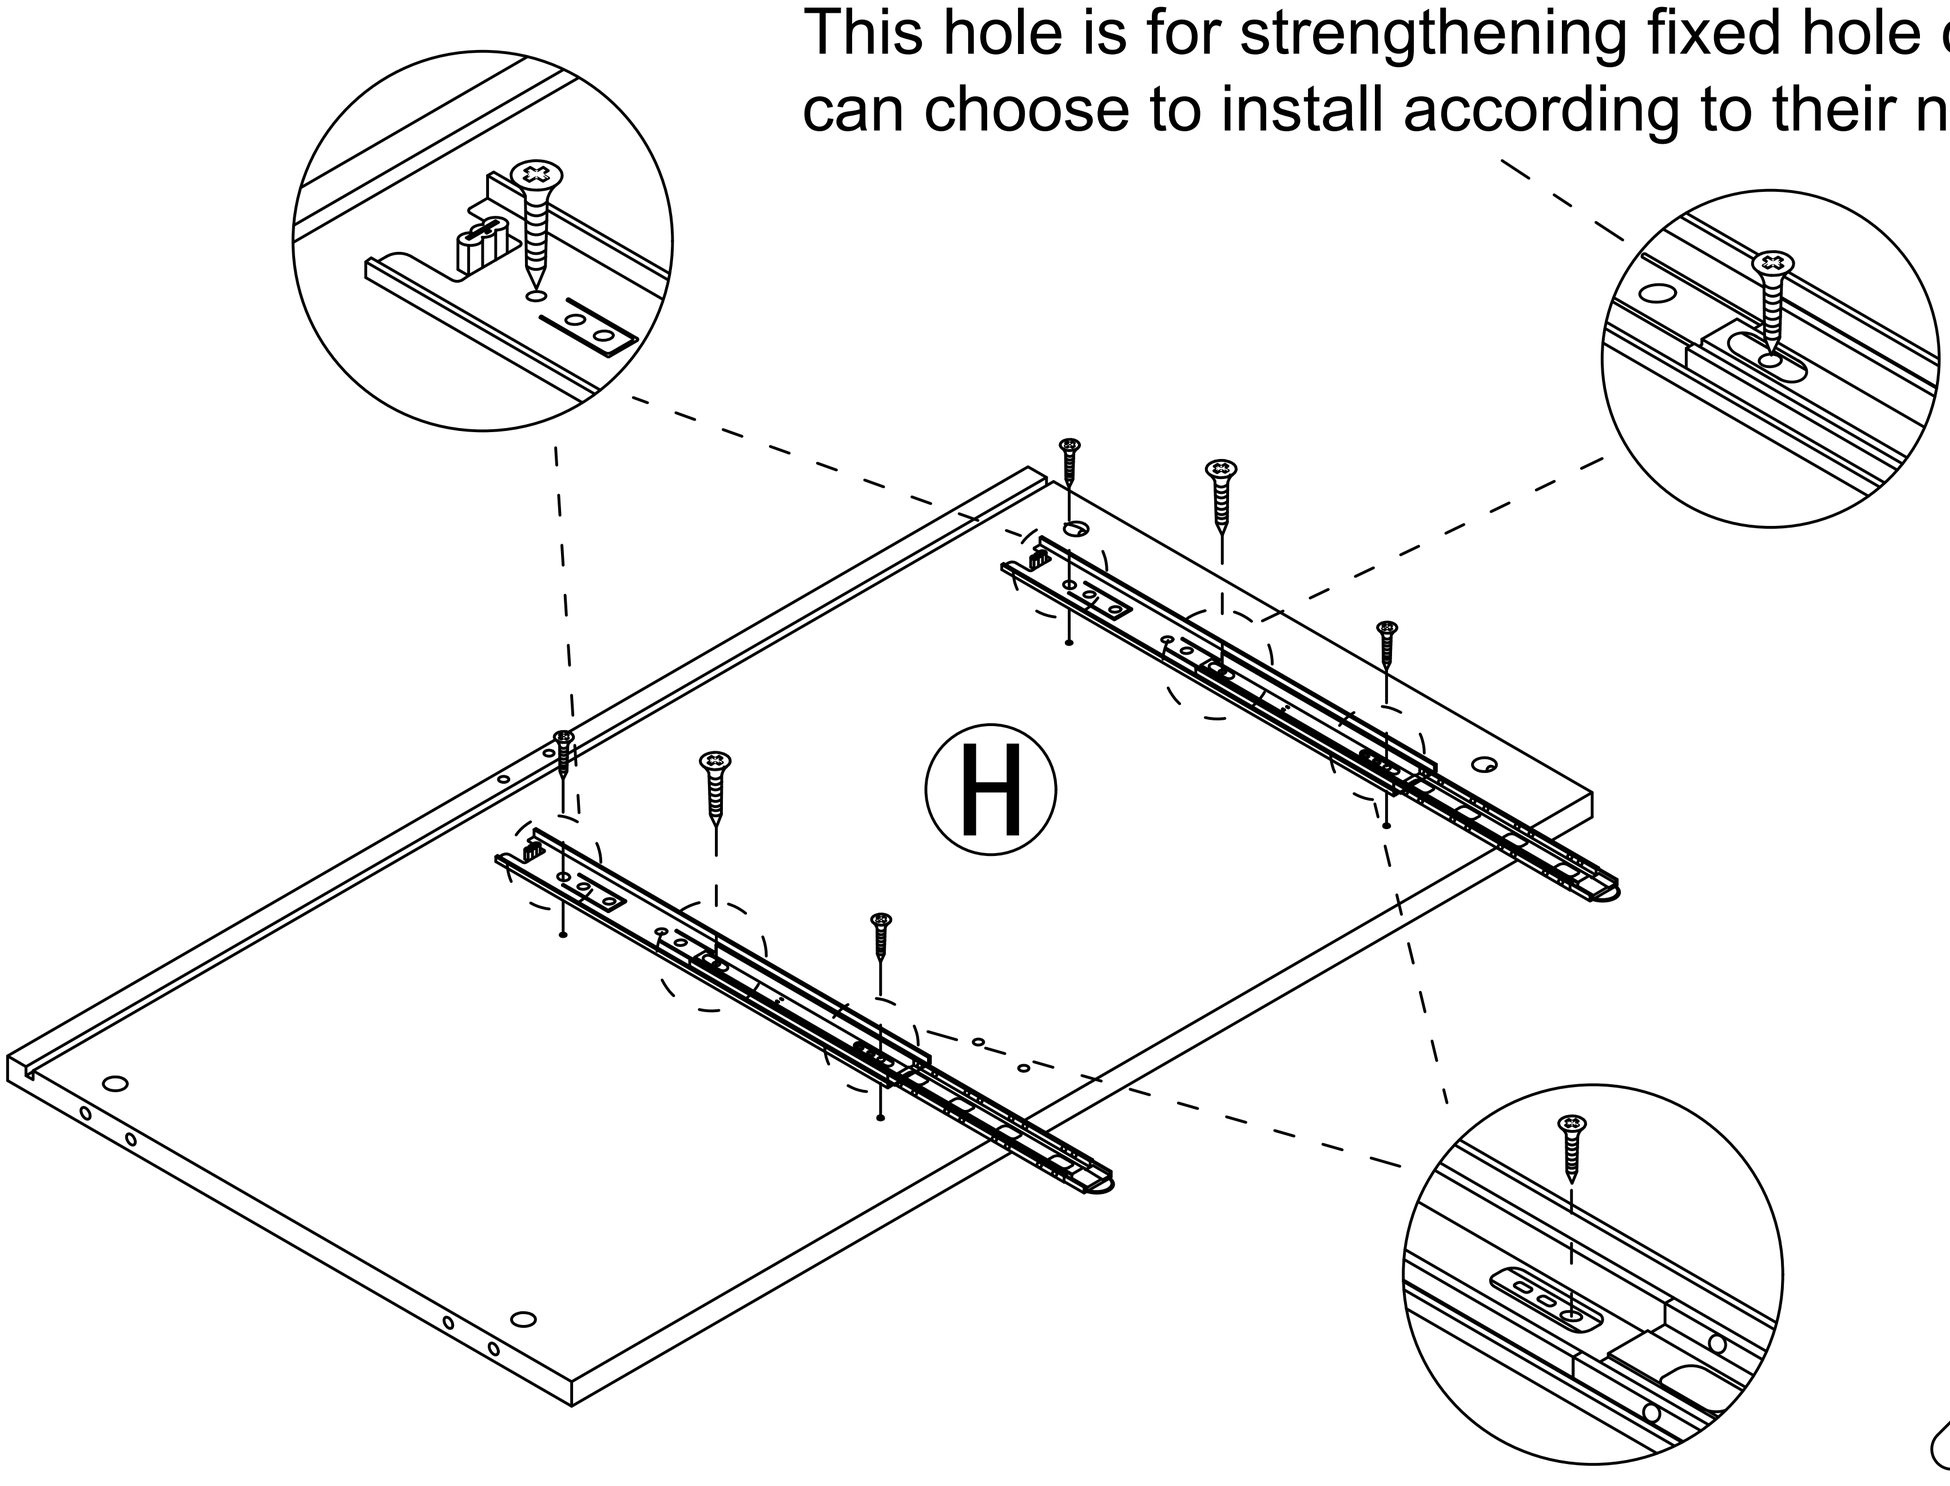


Step 17

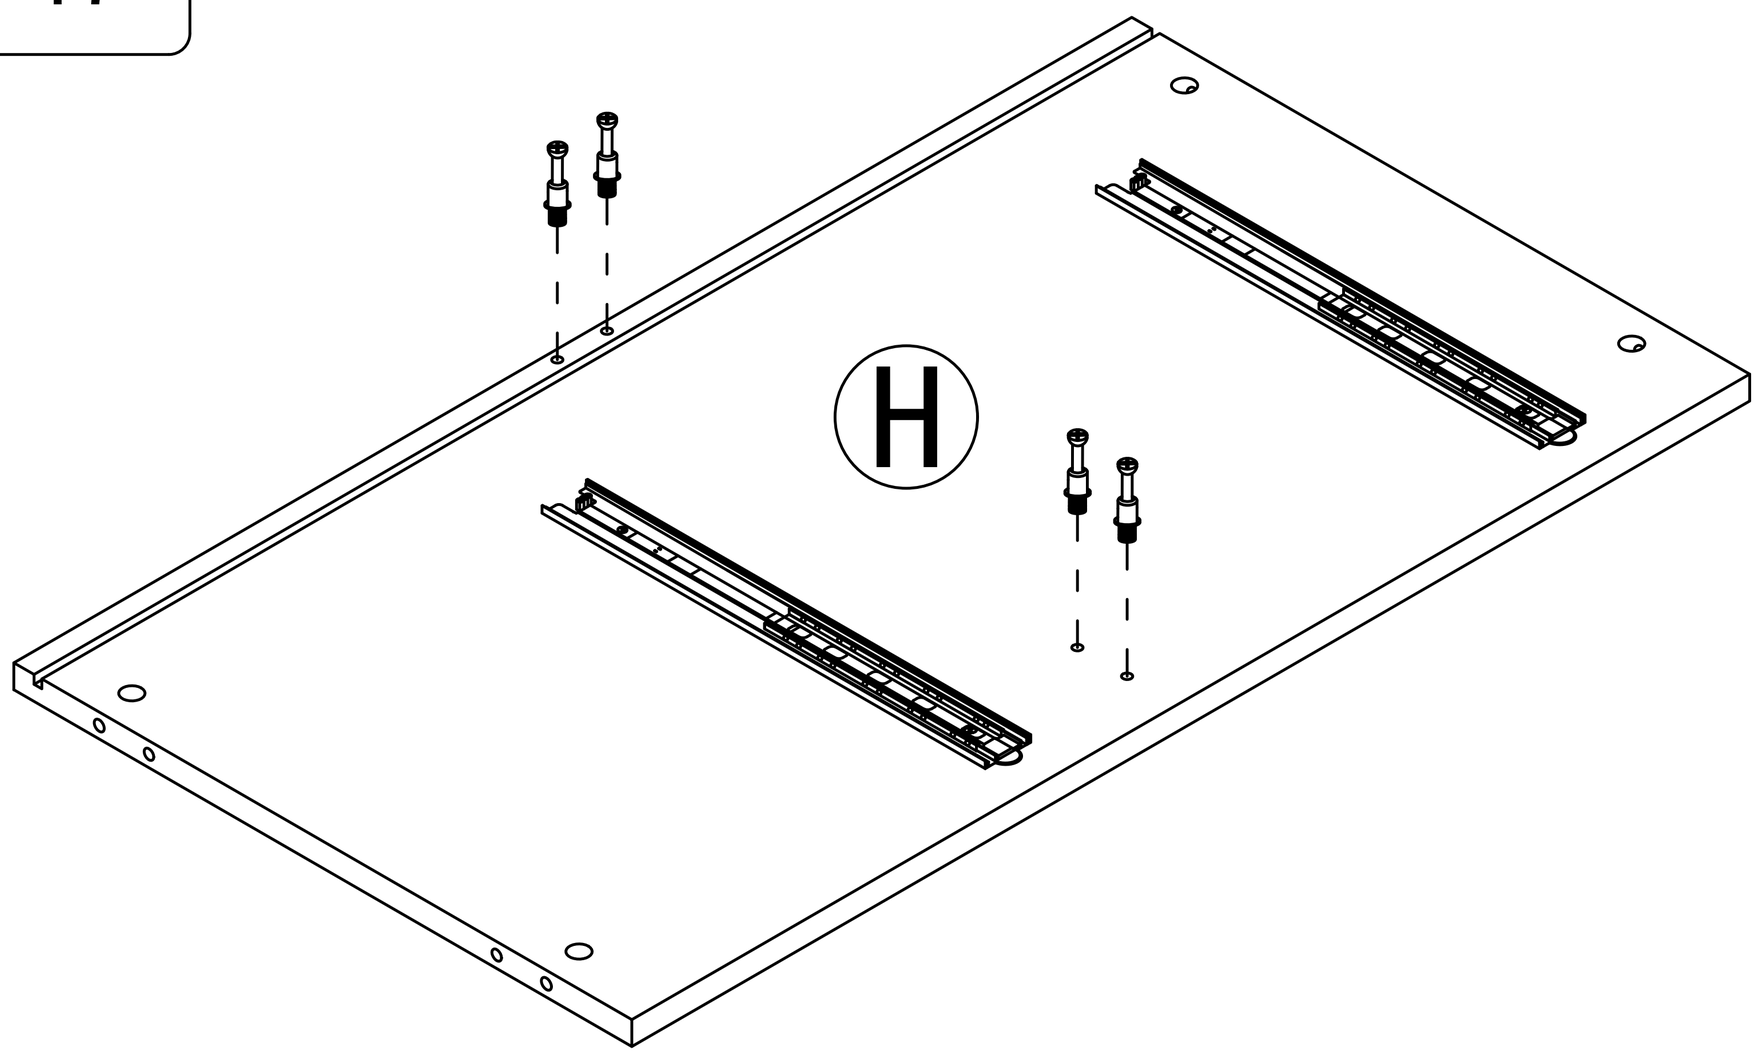


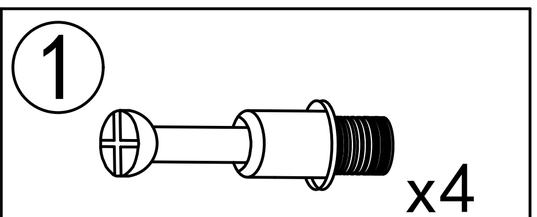

Step 18

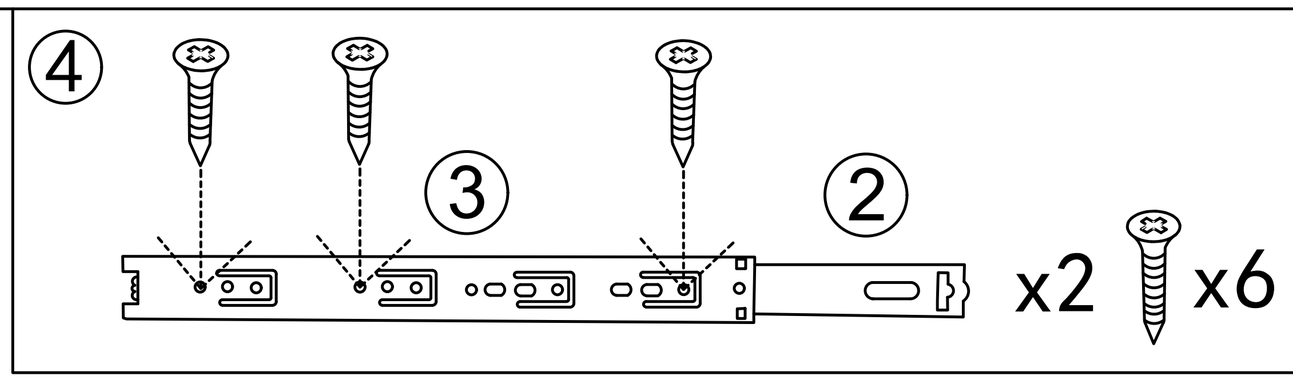


This hole is for strengthening fixed hole customers can choose to install according to their needs.

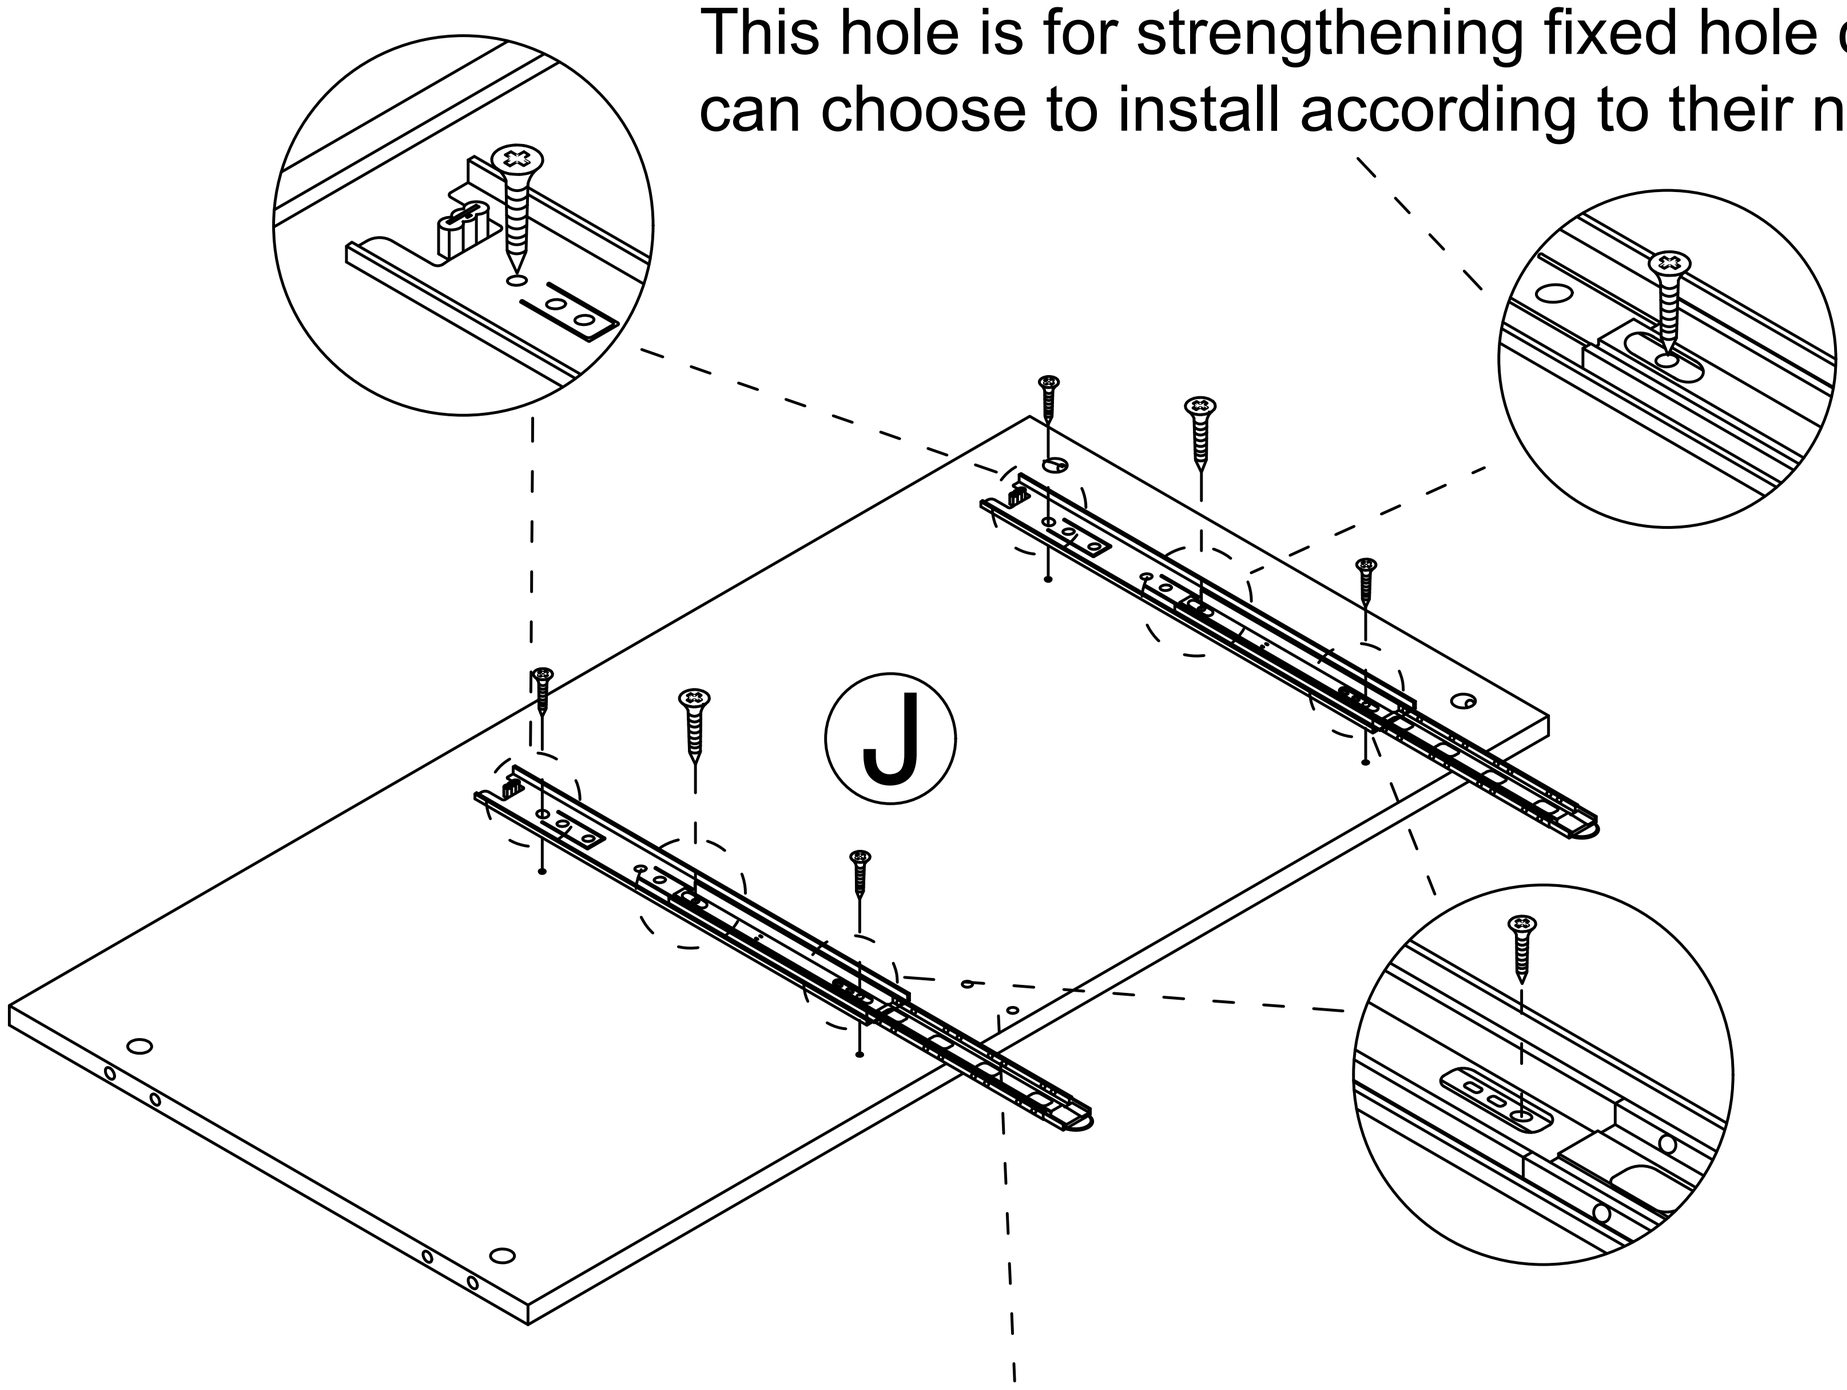


Note: There are two holes in the direction in which the guide rail extends. Do not install the guide rail upside down.

Step 19

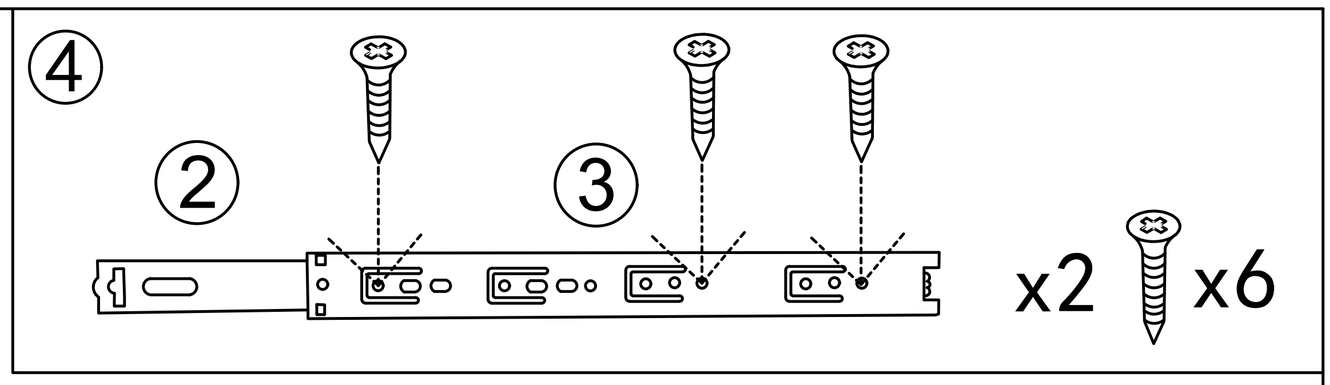



This hole is for strengthening fixed hole customers can choose to install according to their needs.

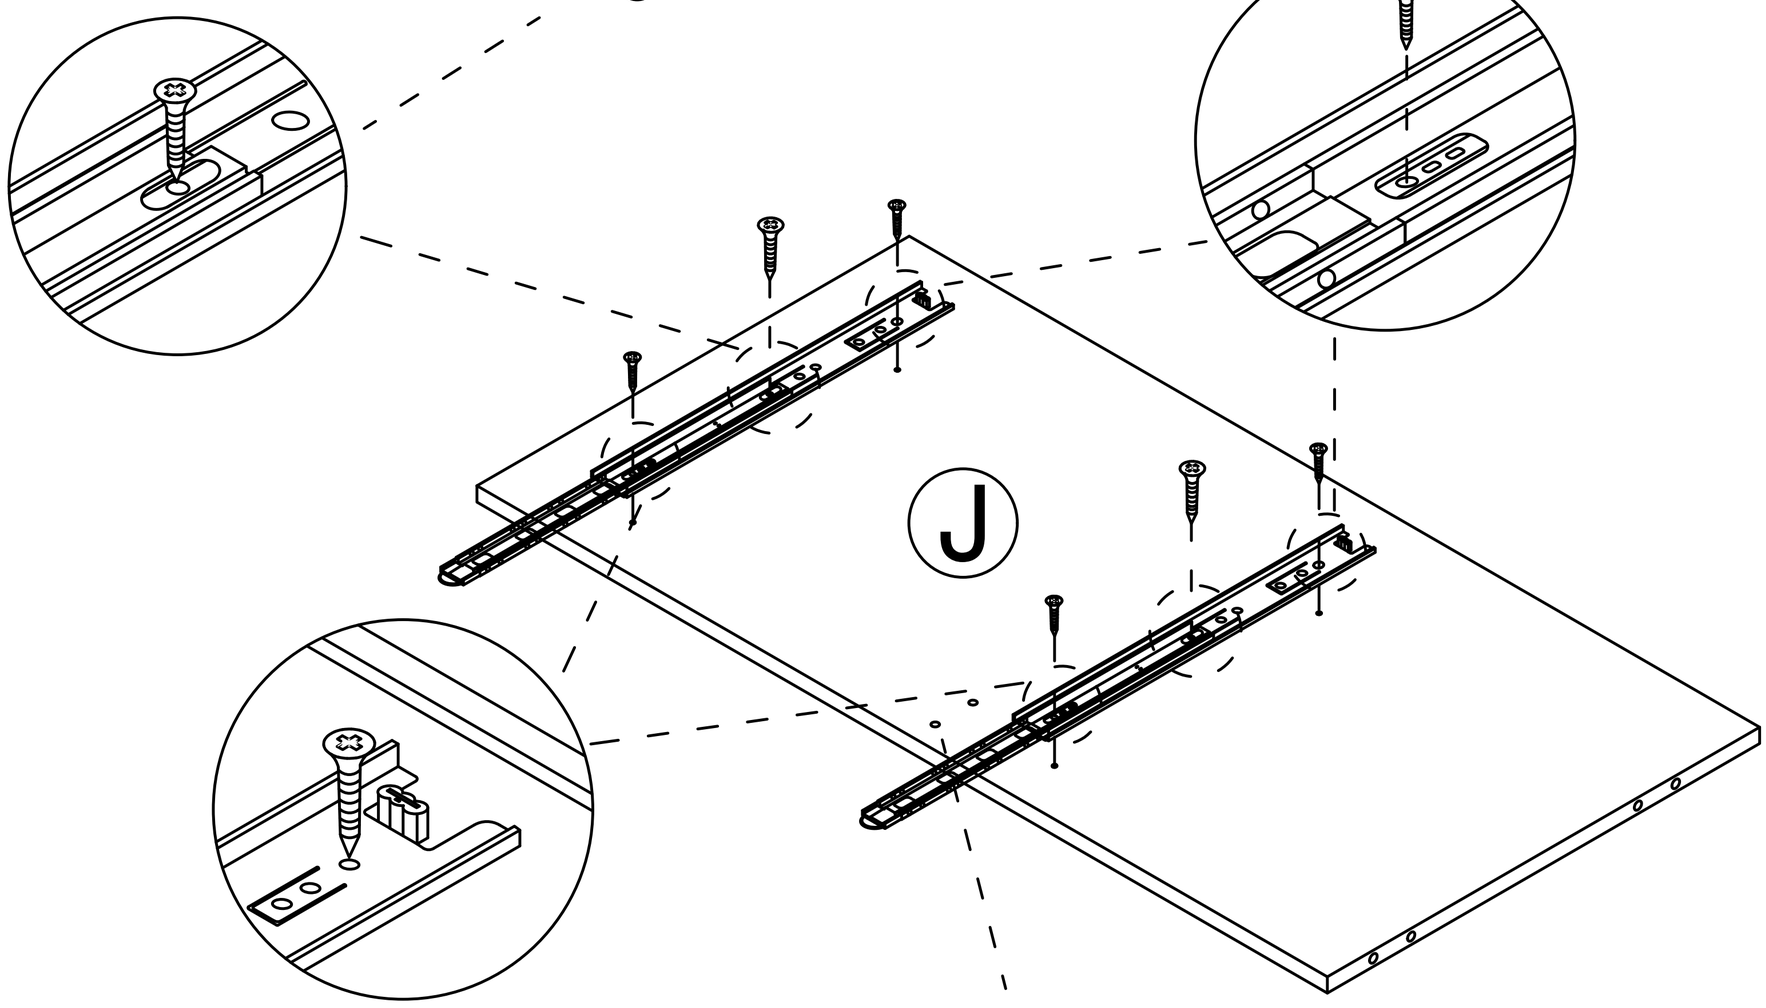


Note: There are two holes in the direction in which the guide rail extends. Do not install the guide rail upside down.

Step 20

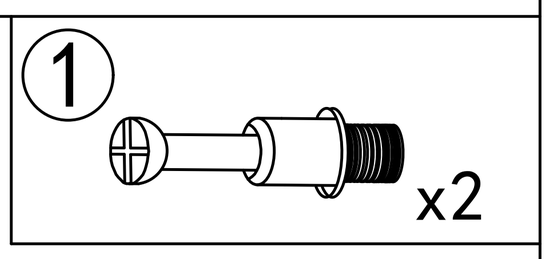


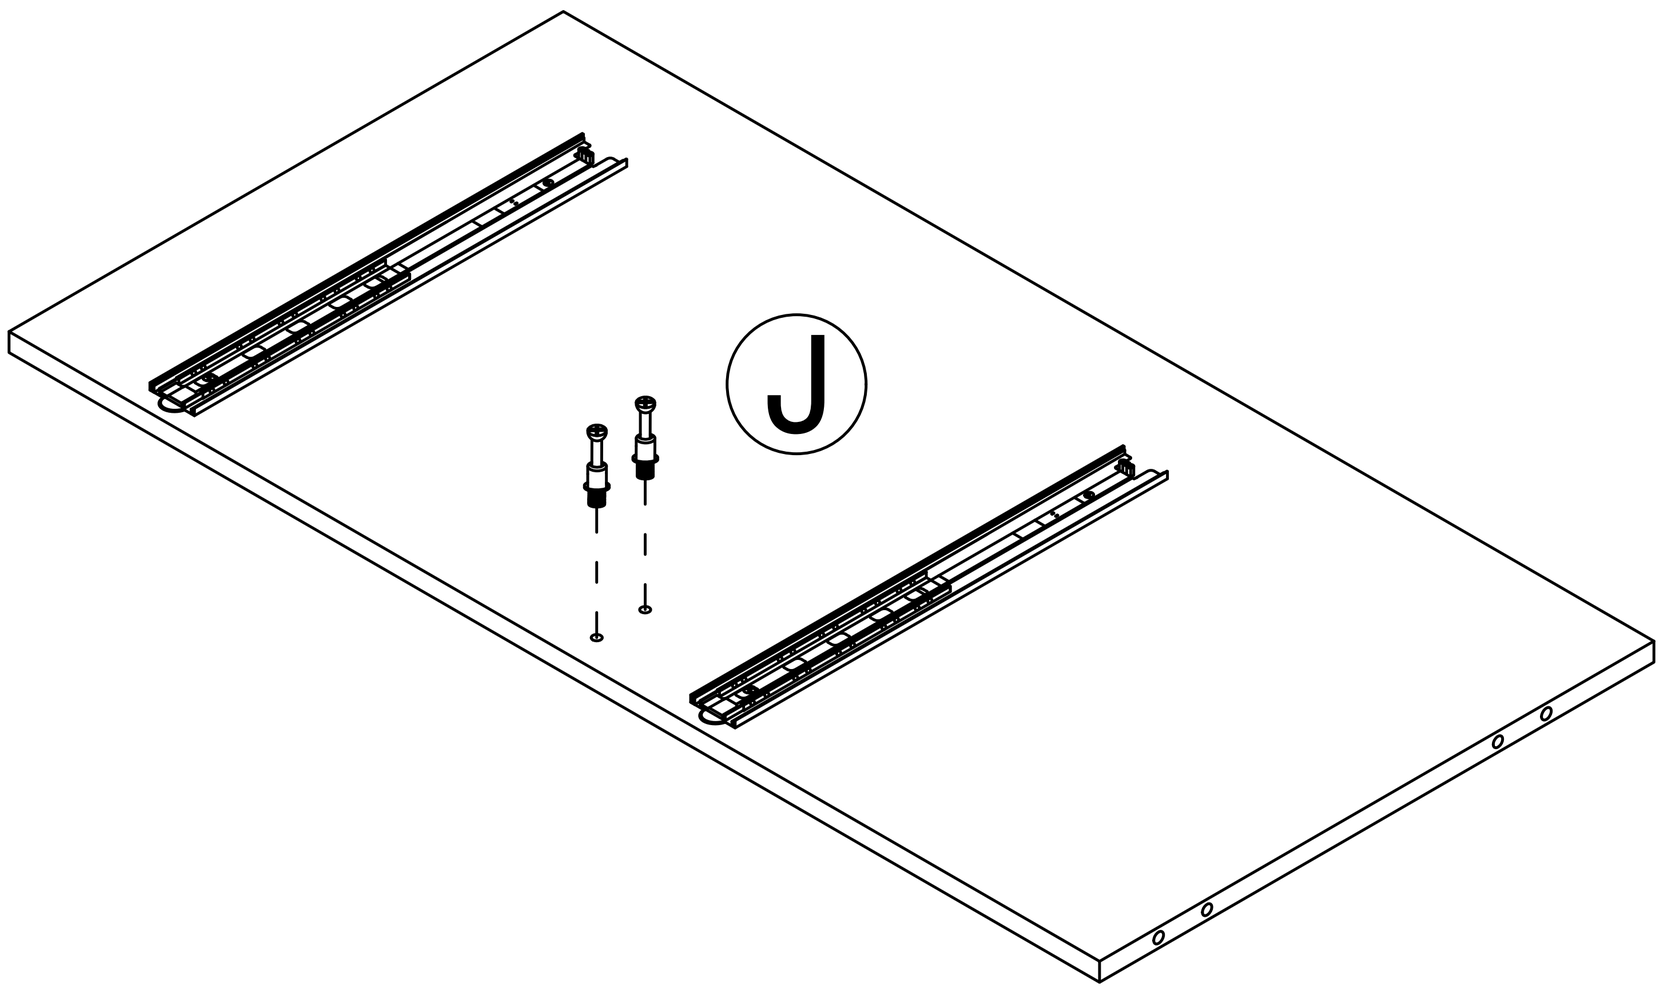


Step 21

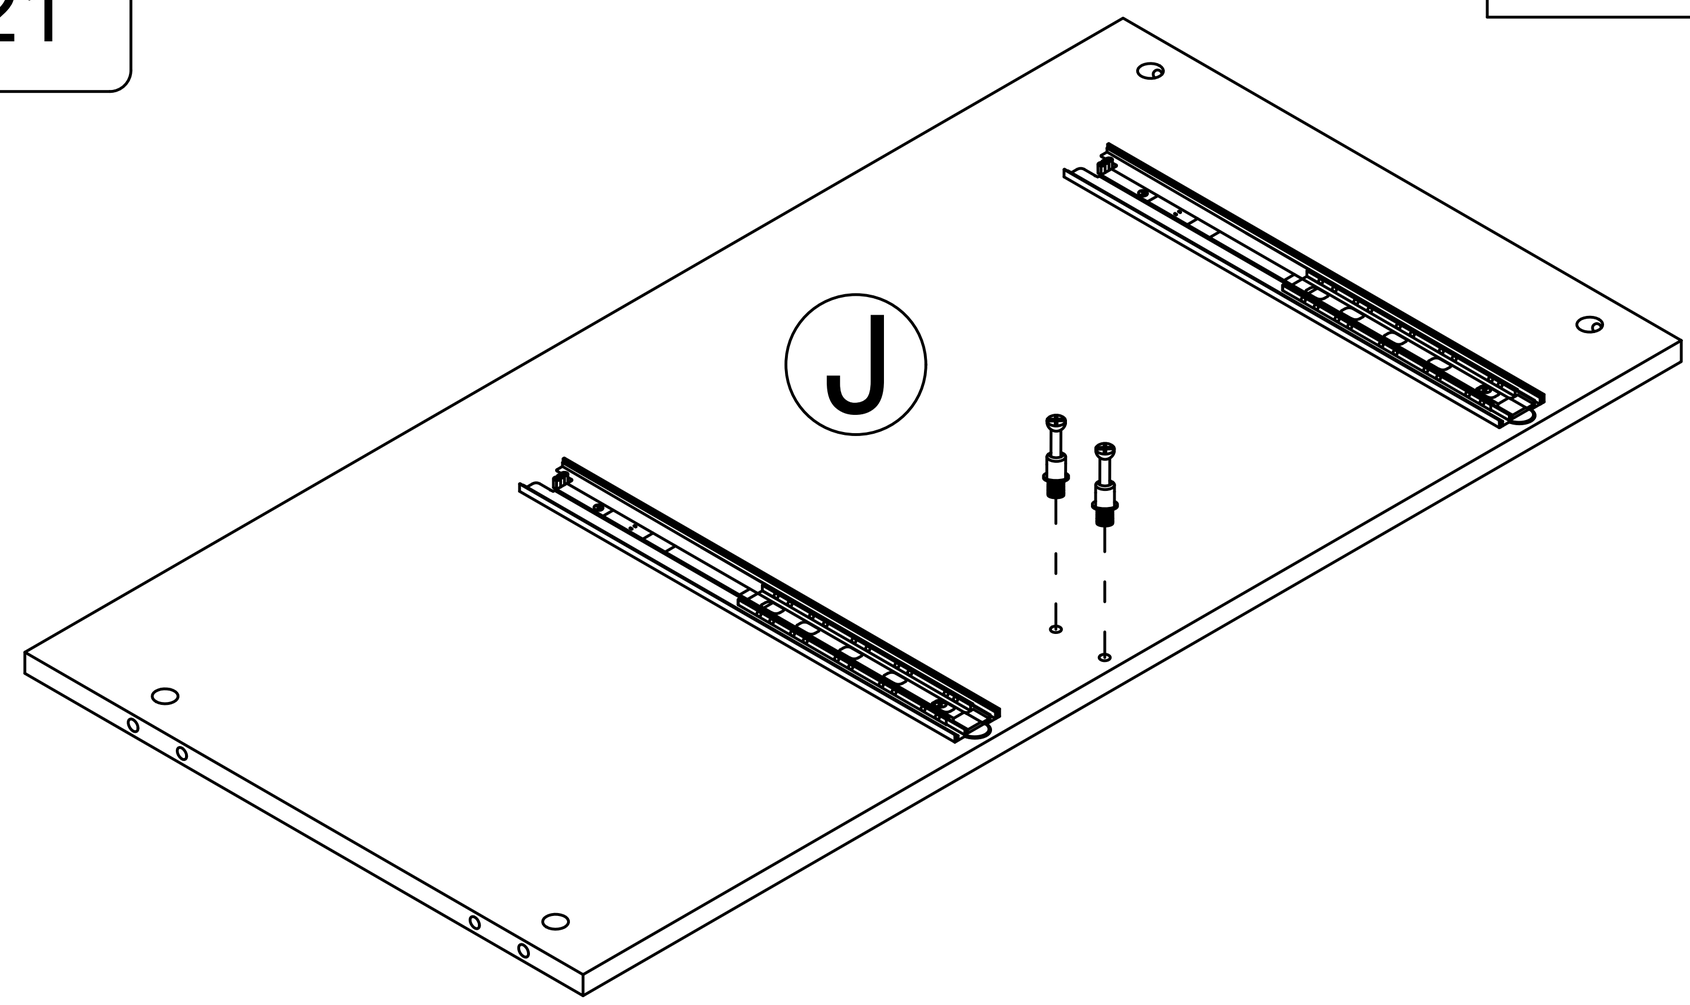


Step 22

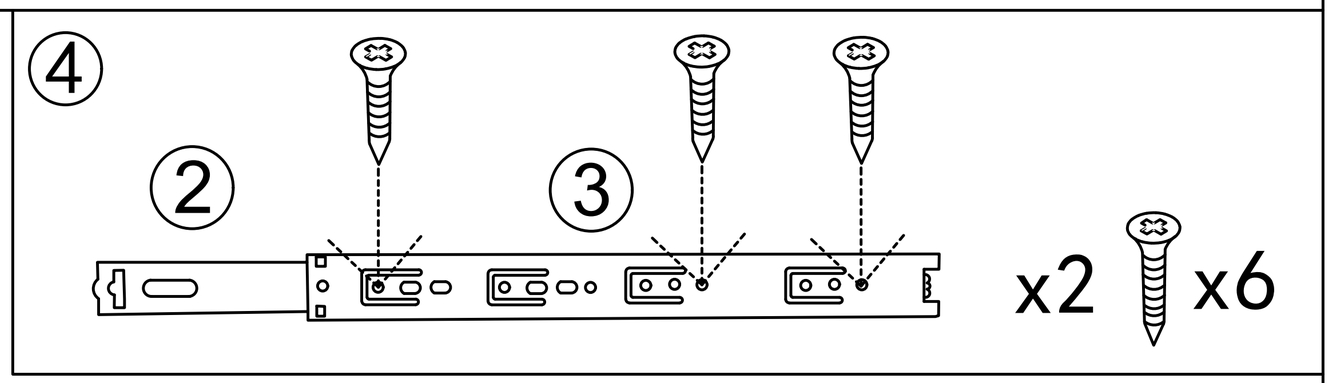


This hole is for strengthening fixed hole customers
can choose to install according to their needs.

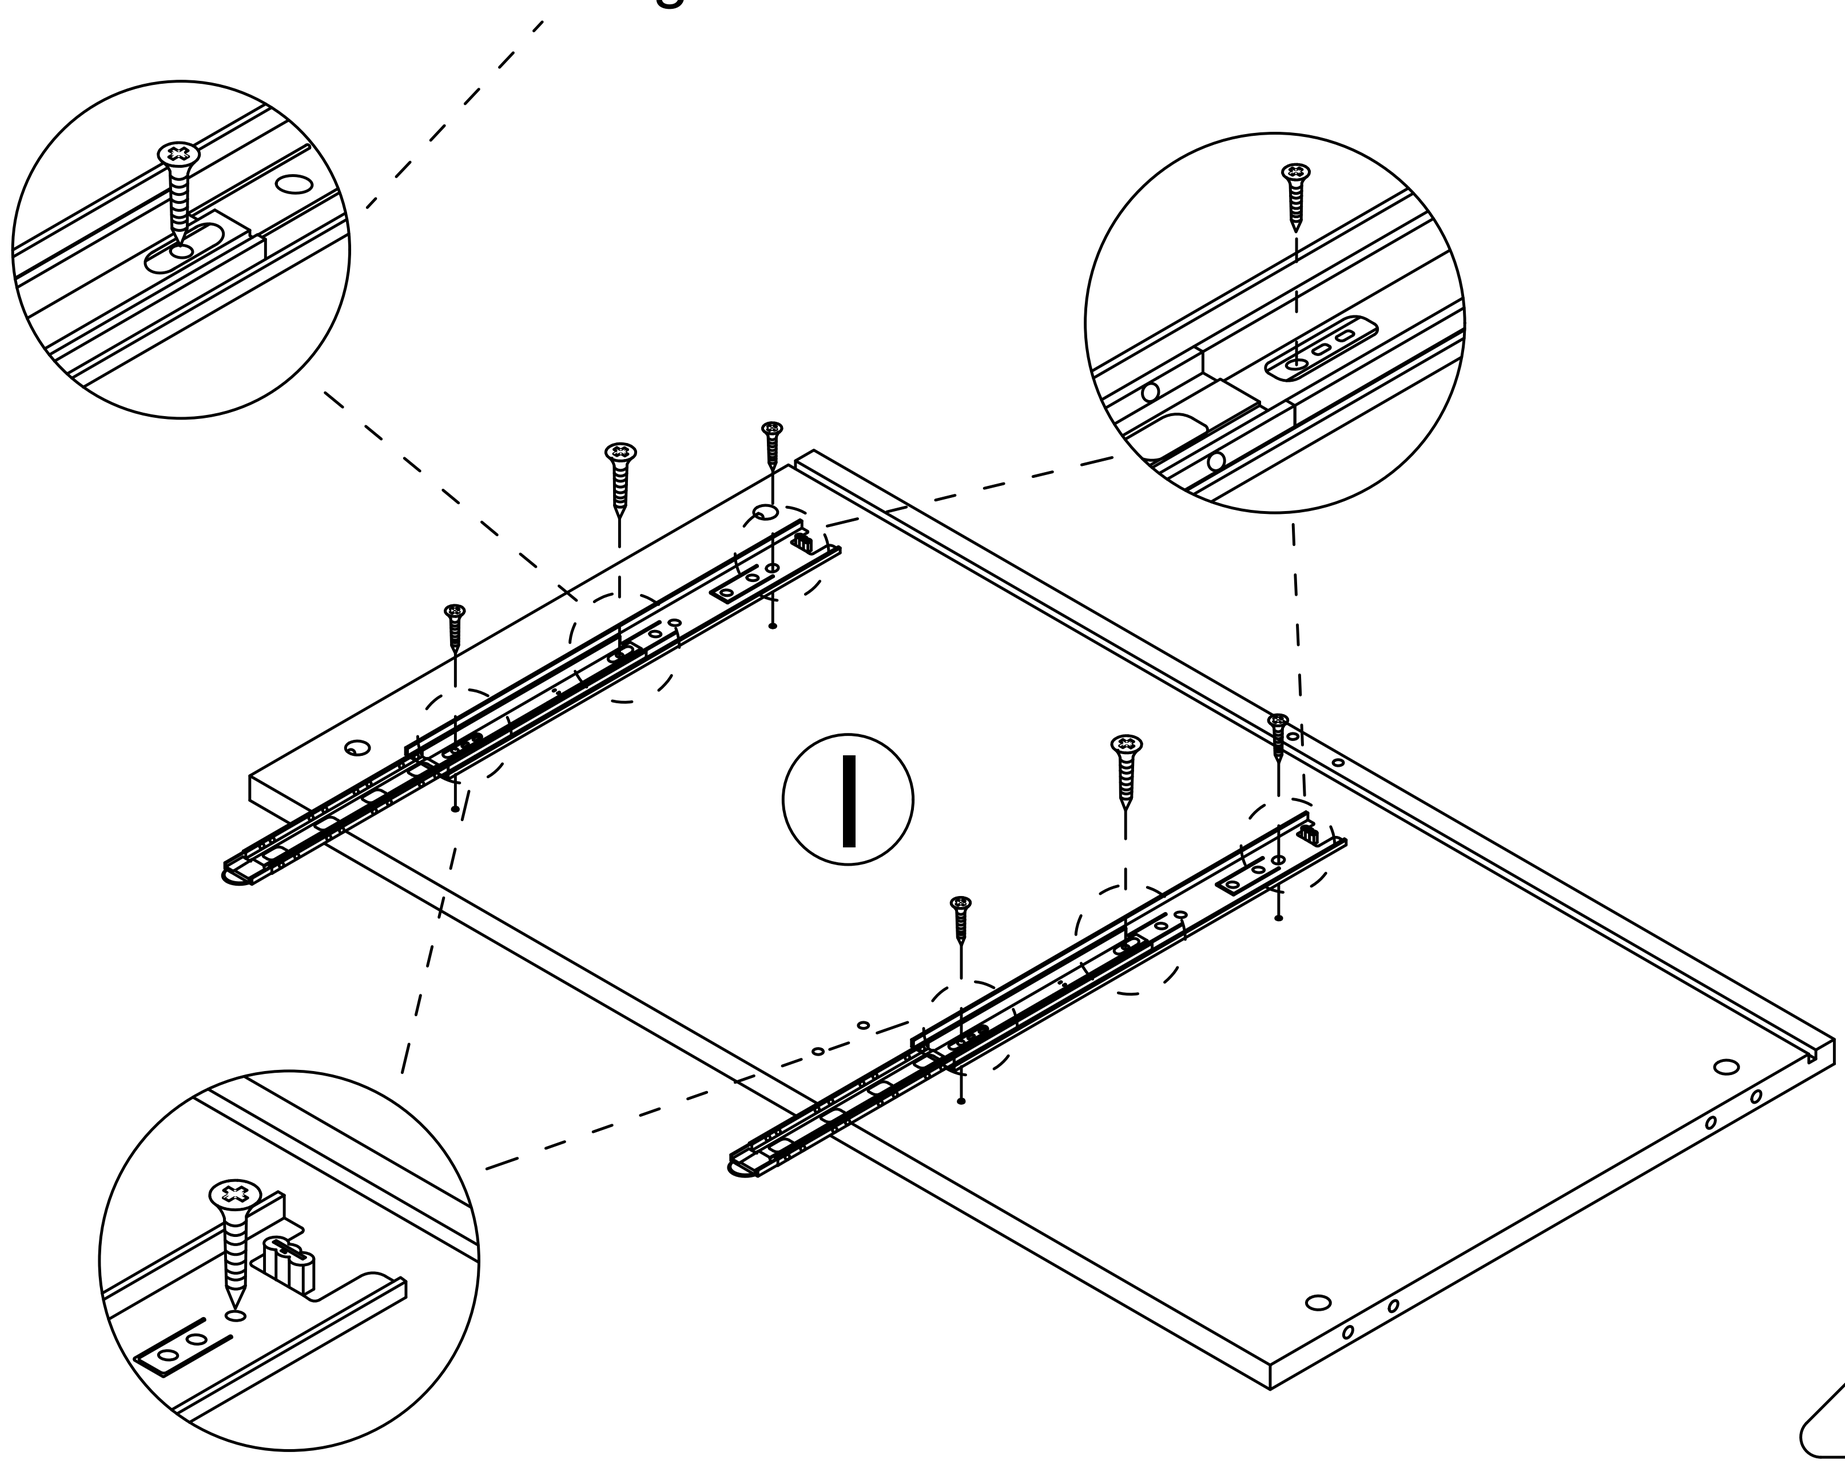

Step 23

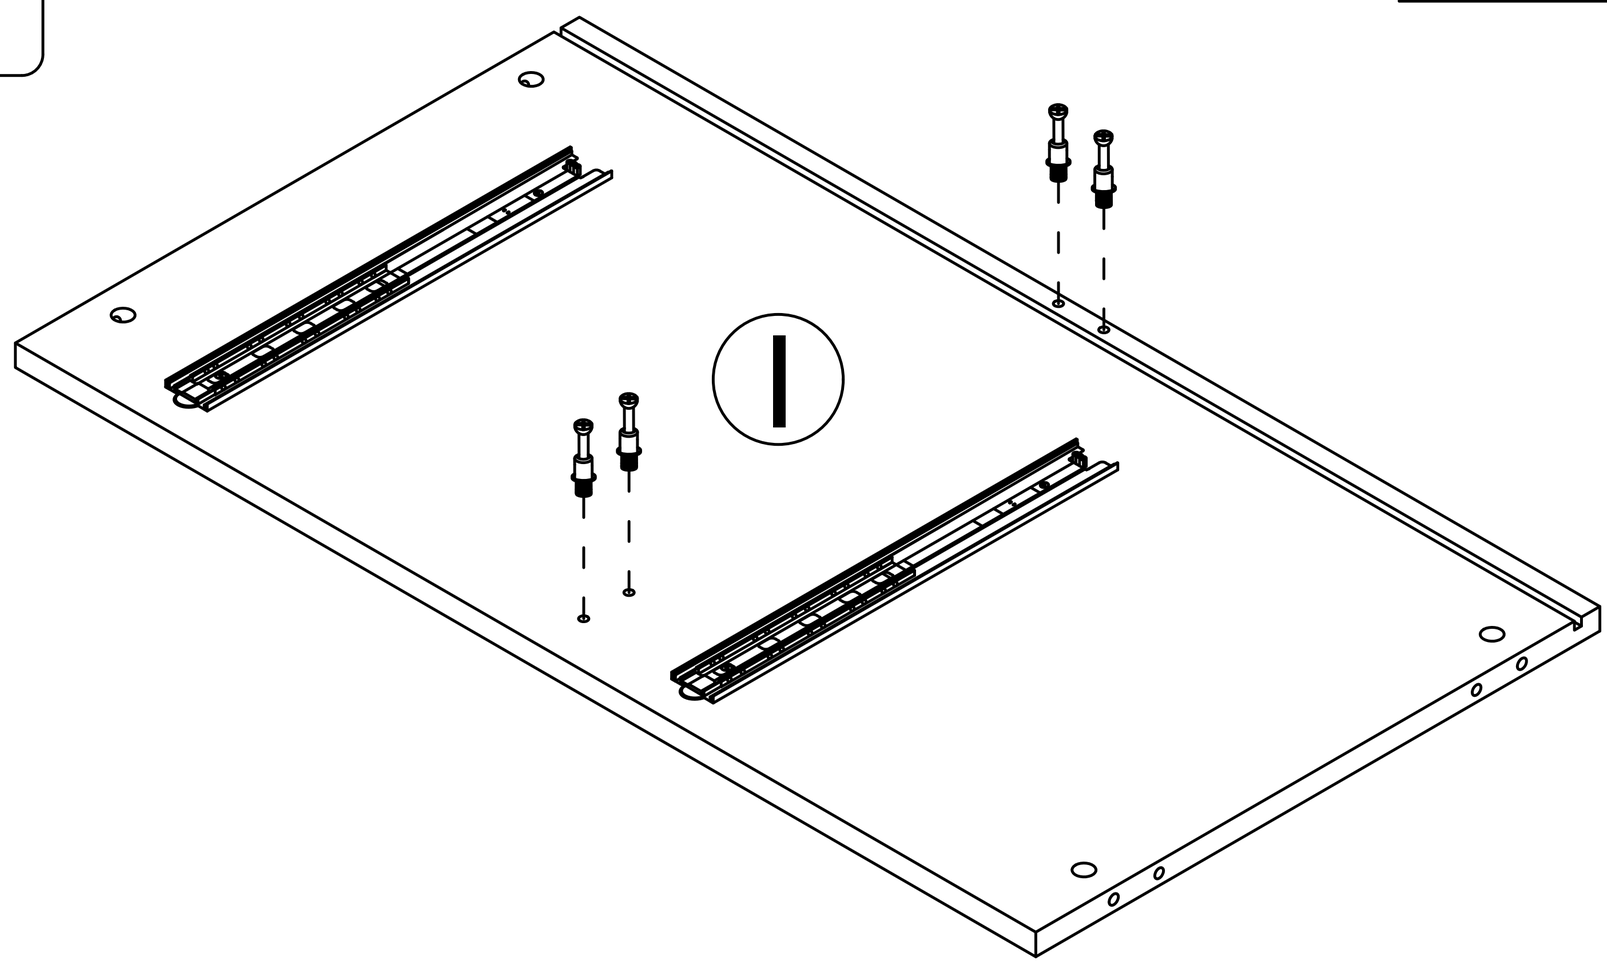


1



x4

Step 24

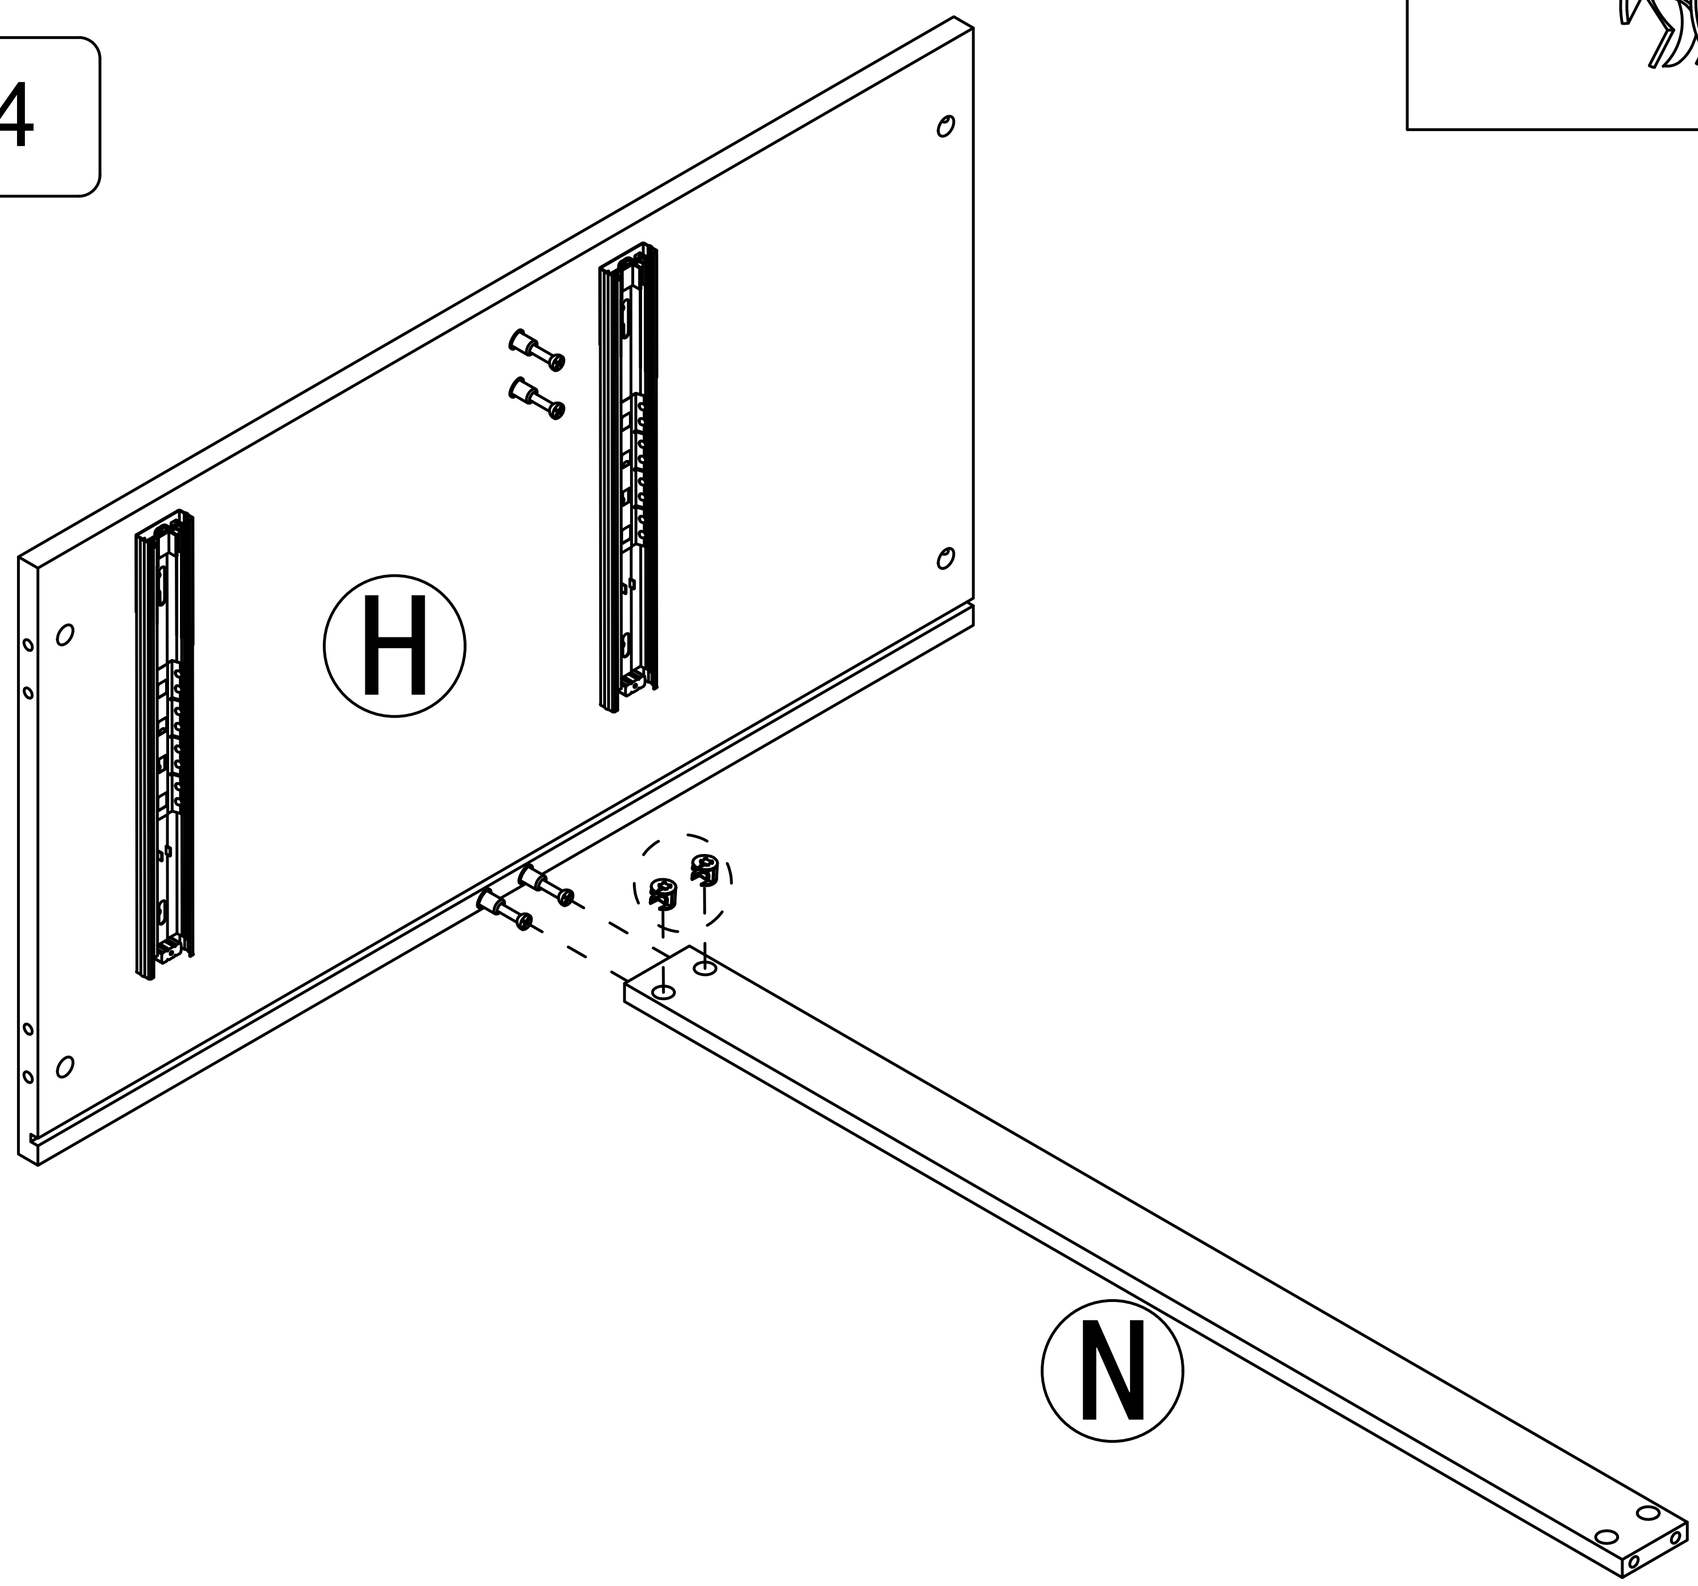


2



x2


Step 25

2 x2

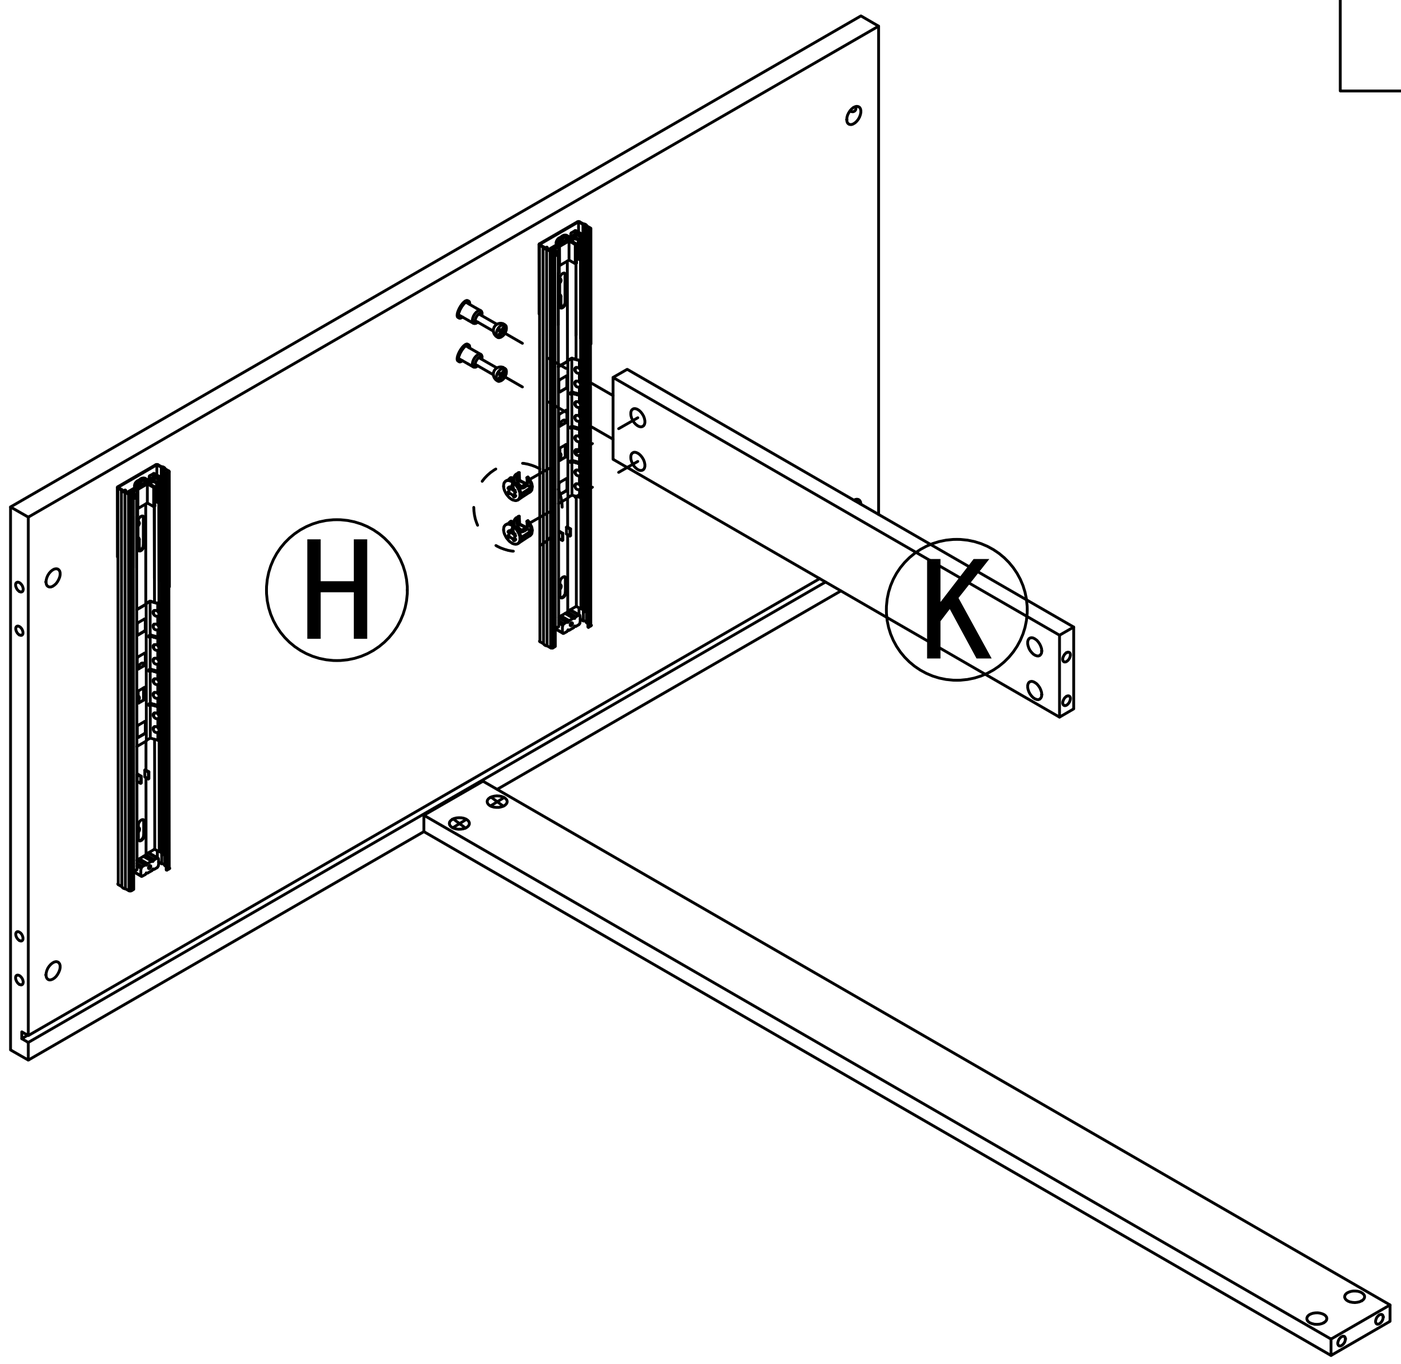


Step 26


2 x2

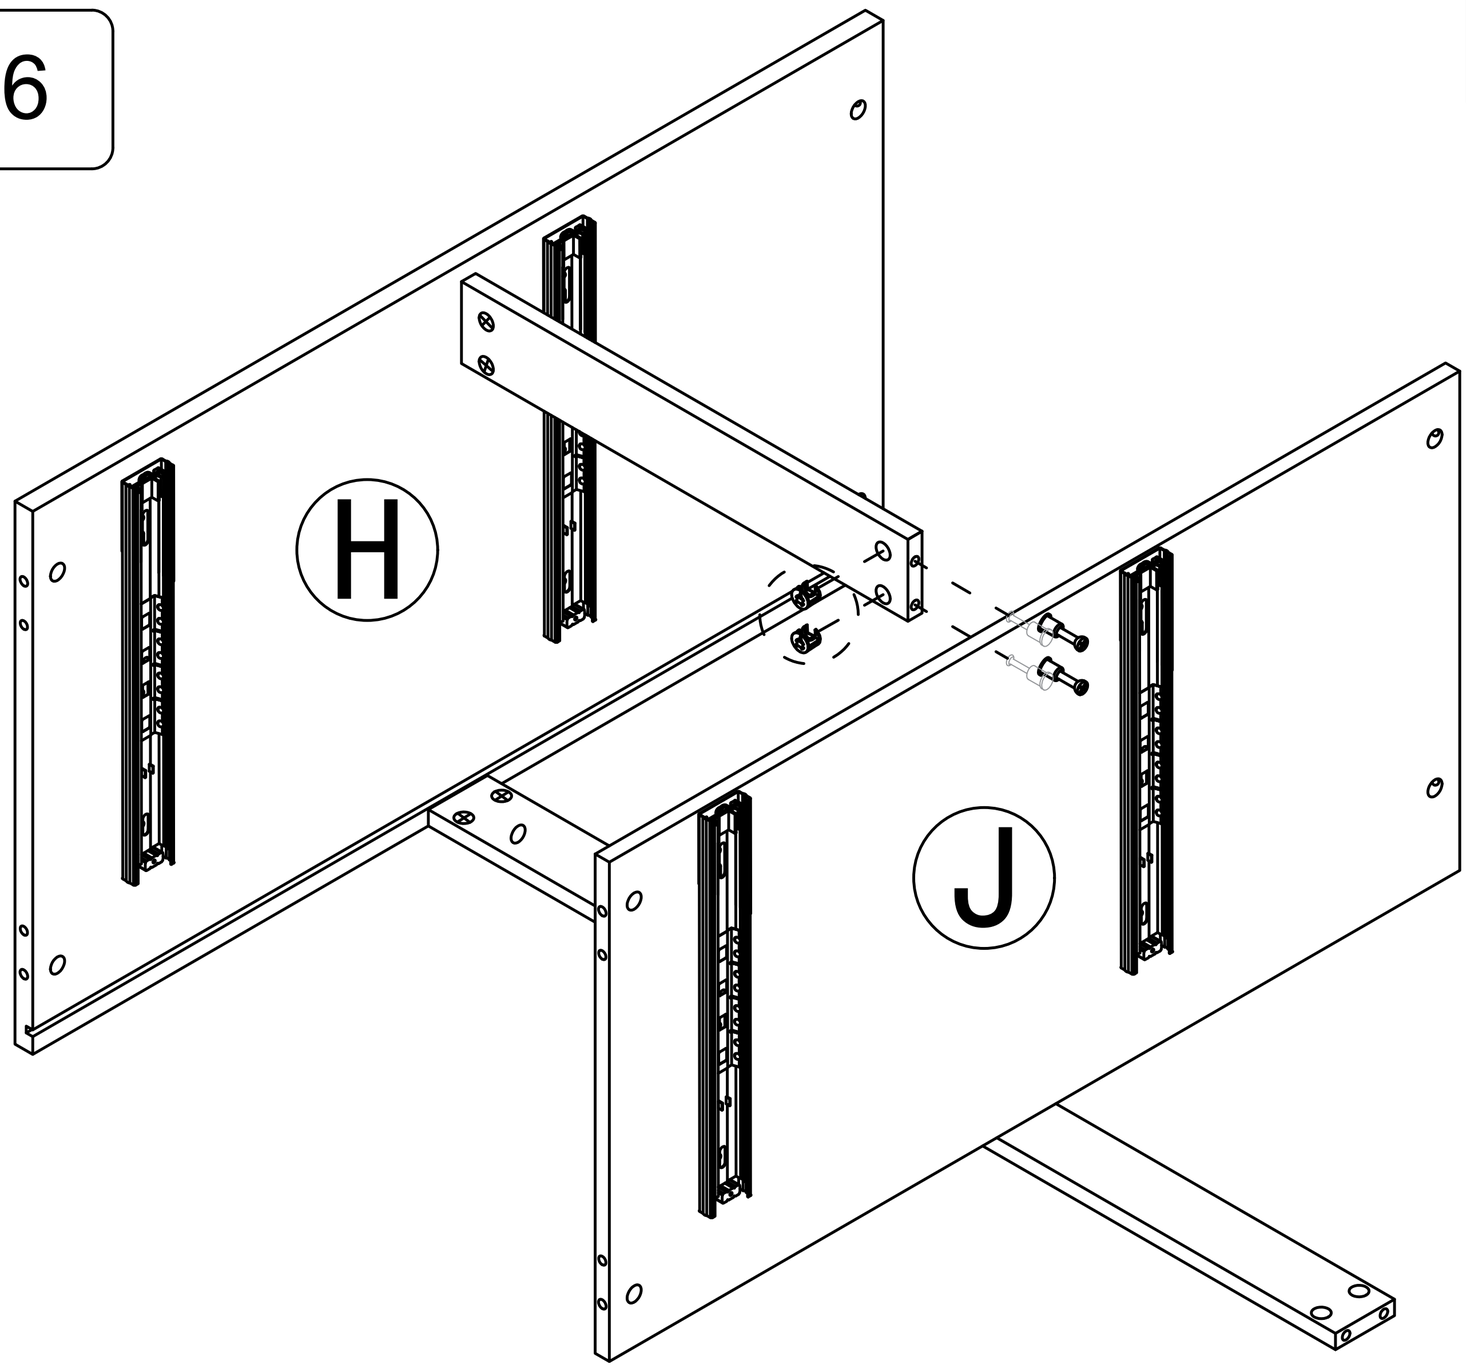

Step 27

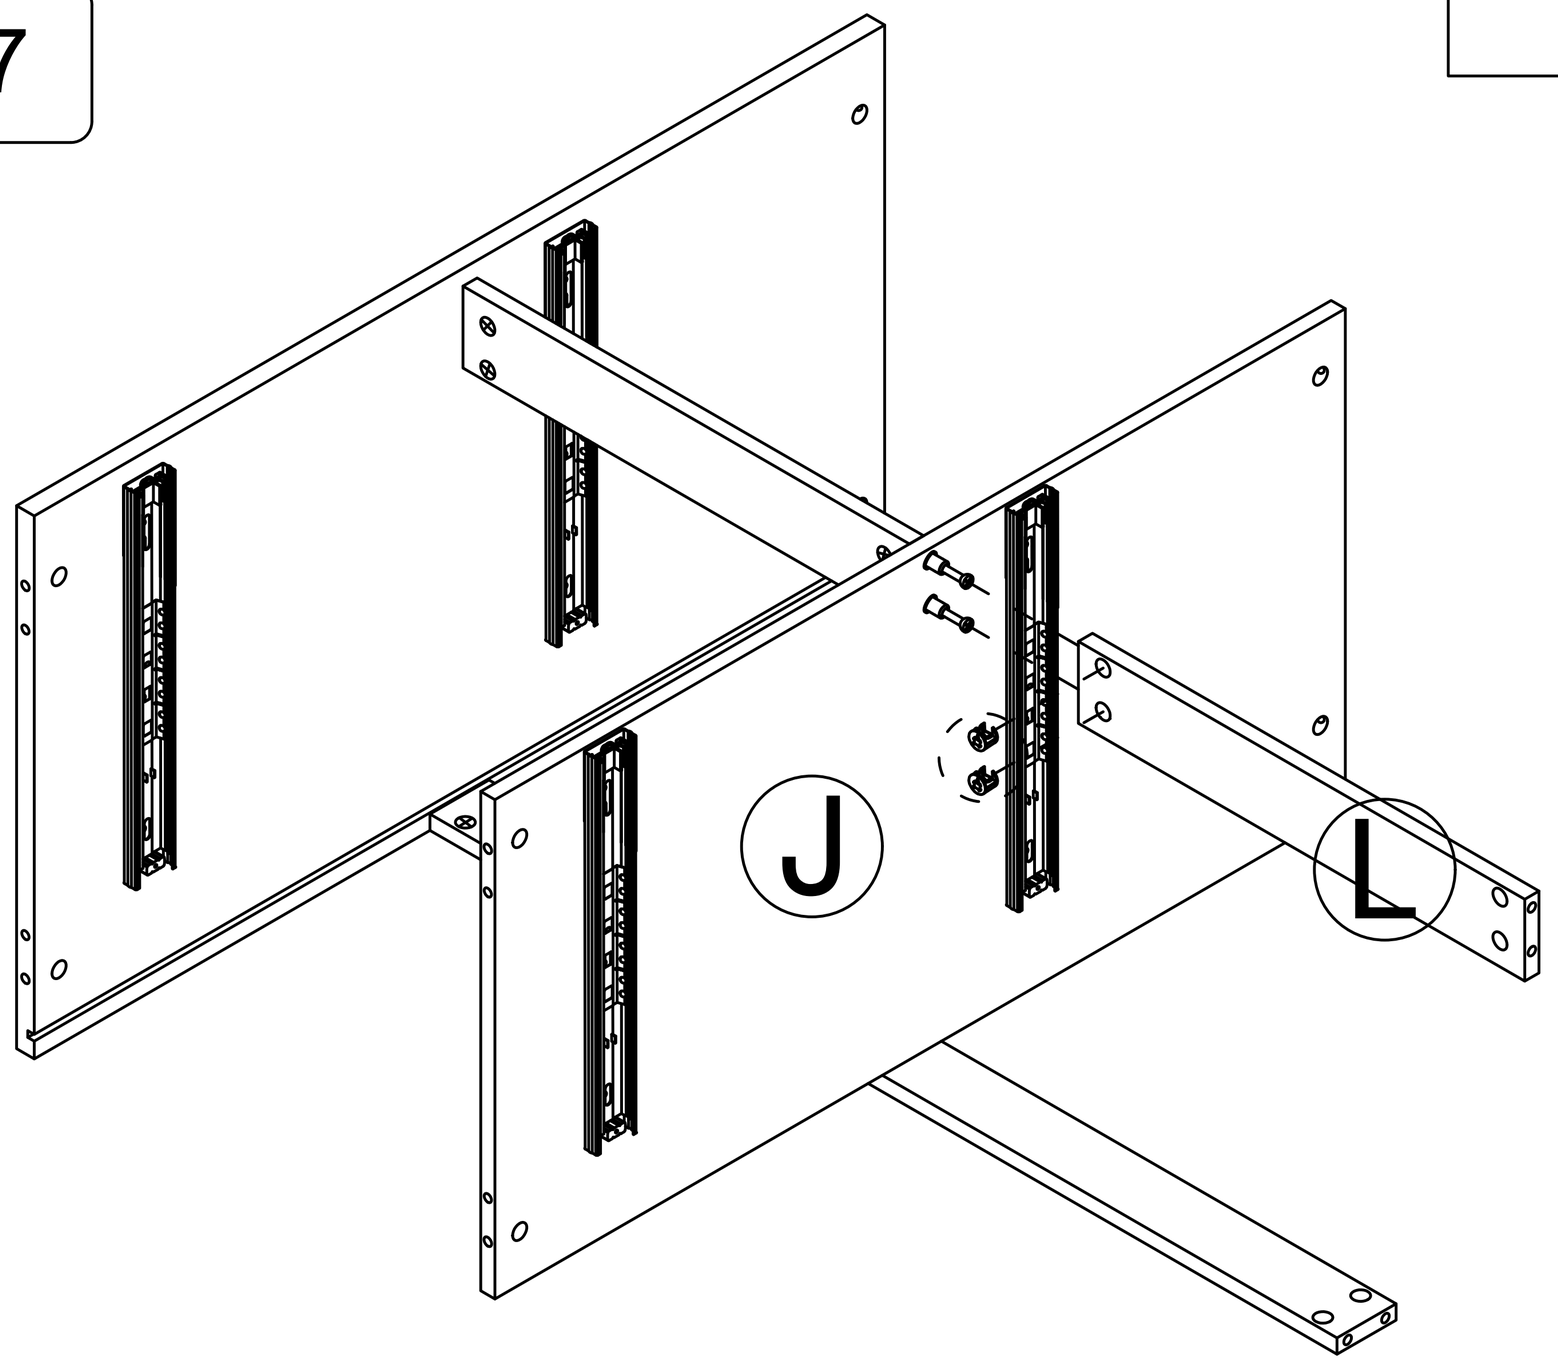


2

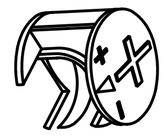

x2

Step 28

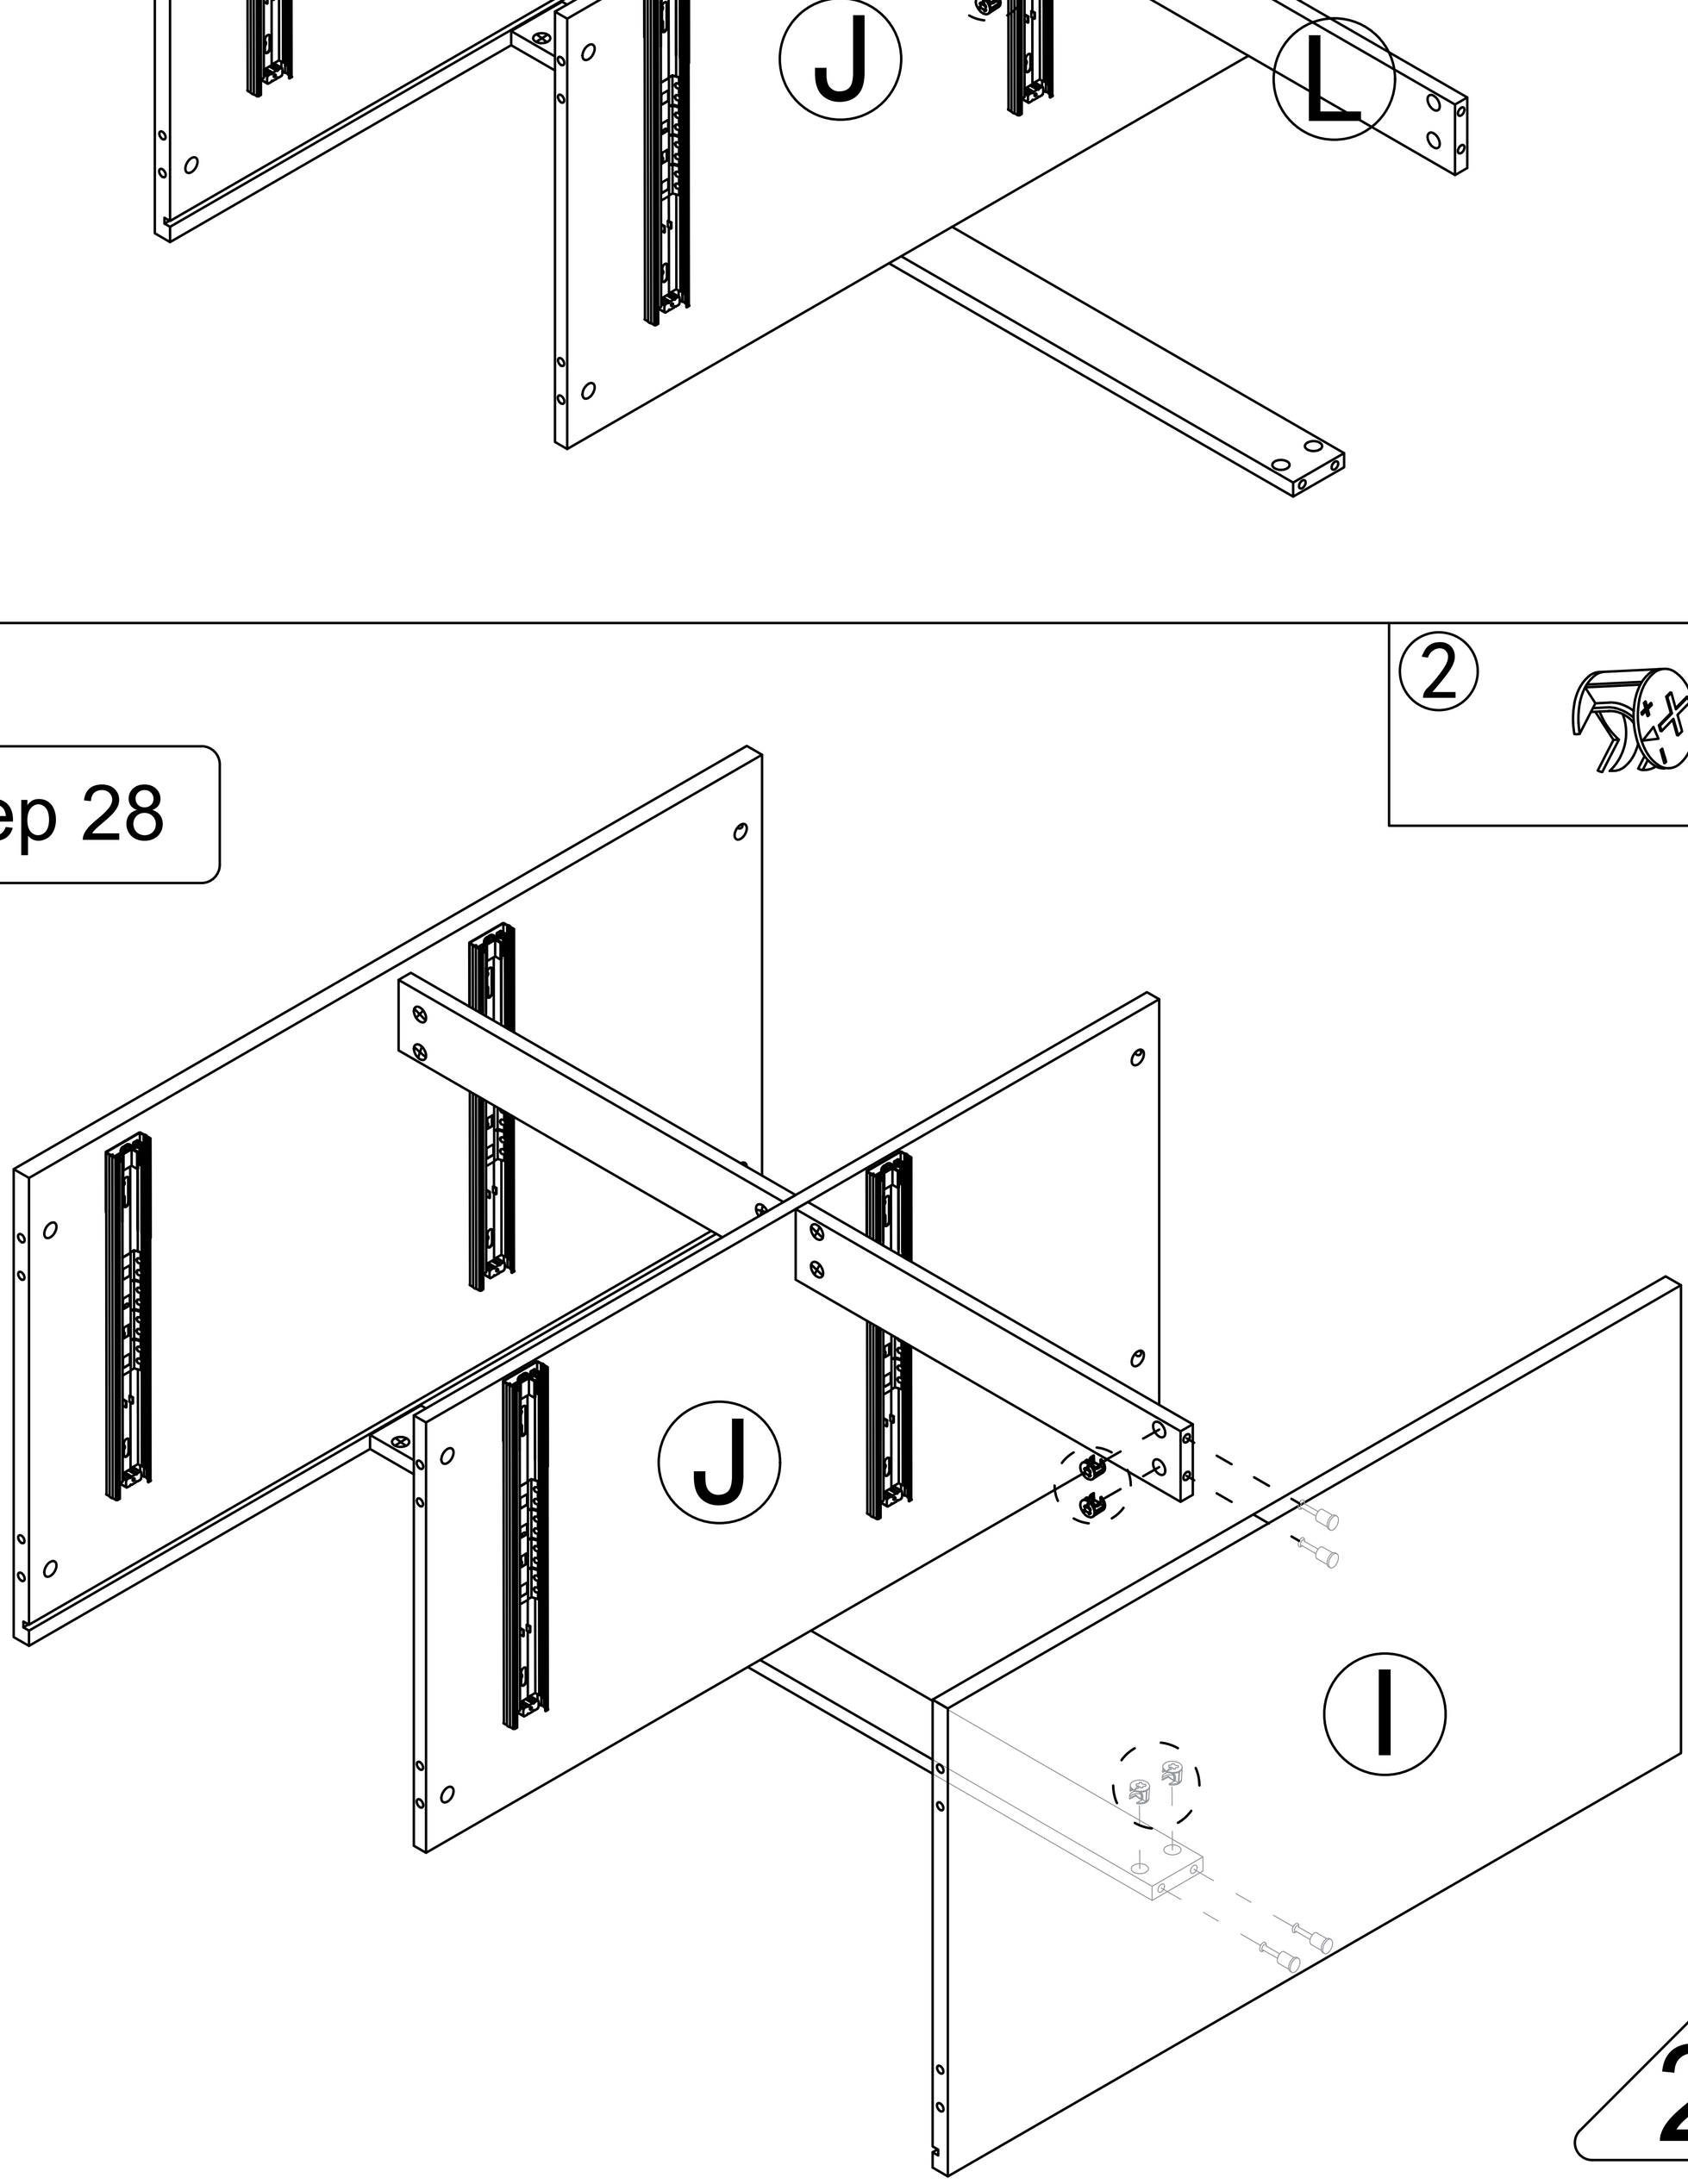


2


x4

Step 29




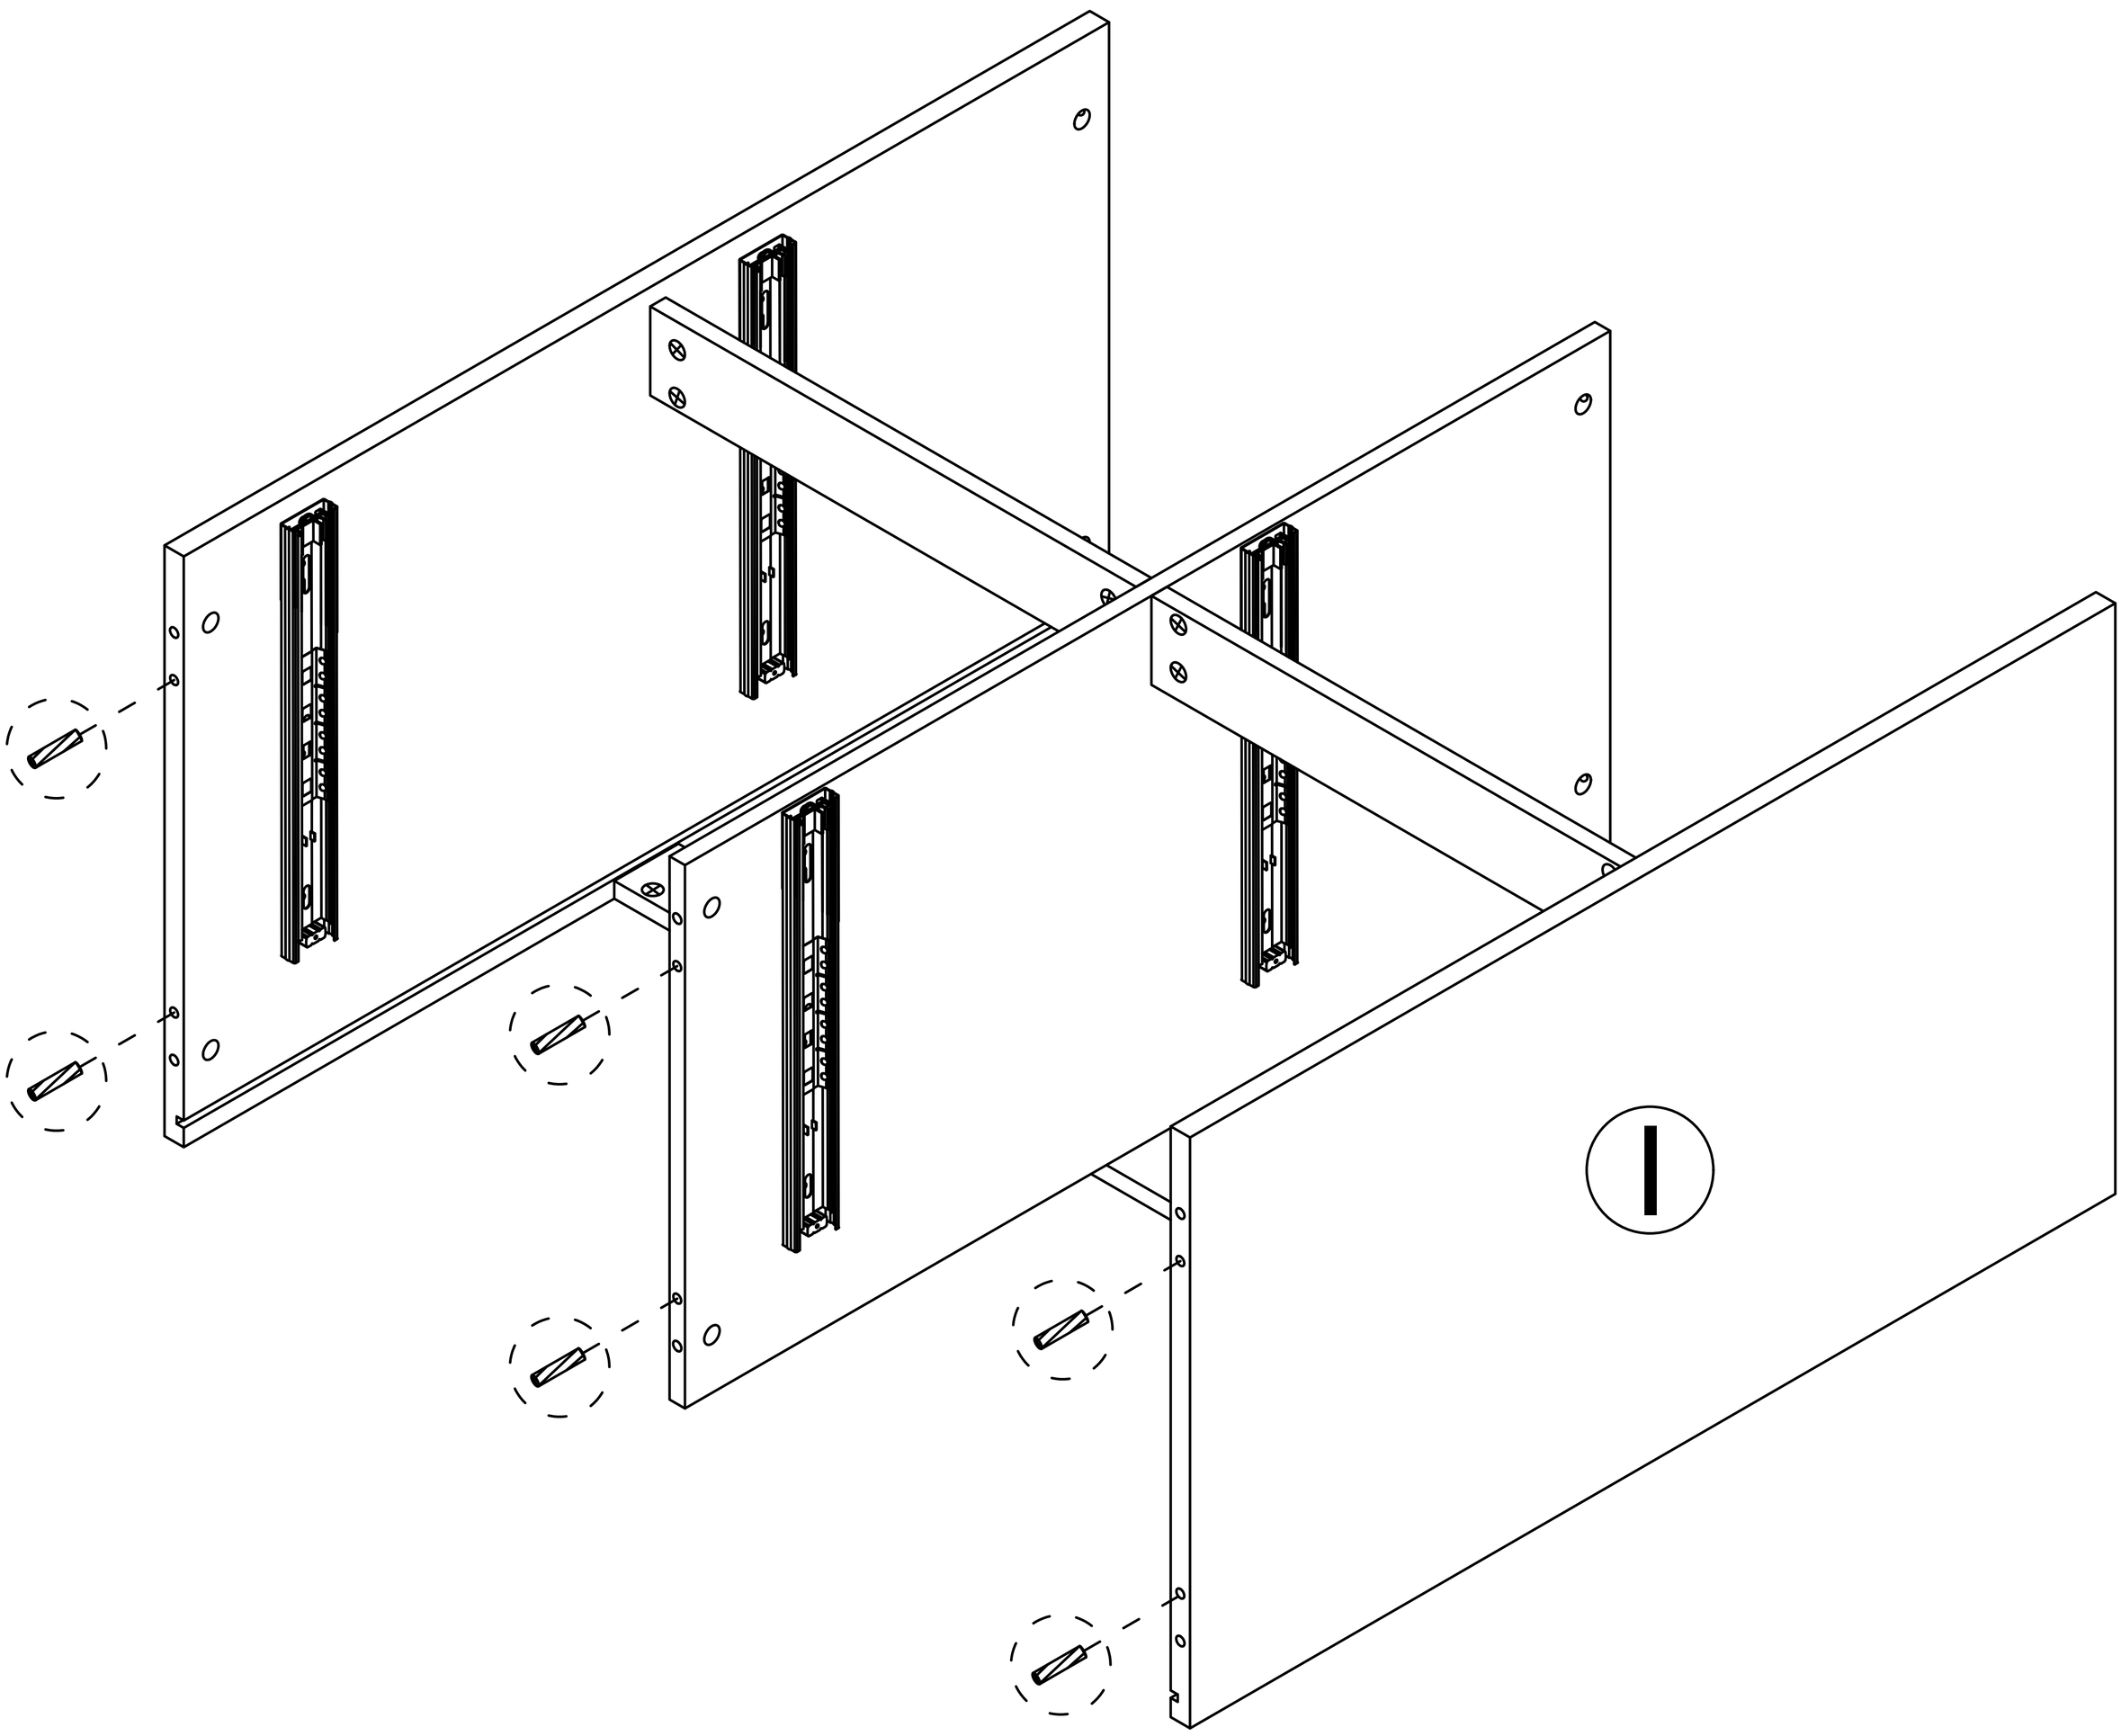

Step 30

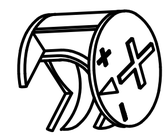



x6

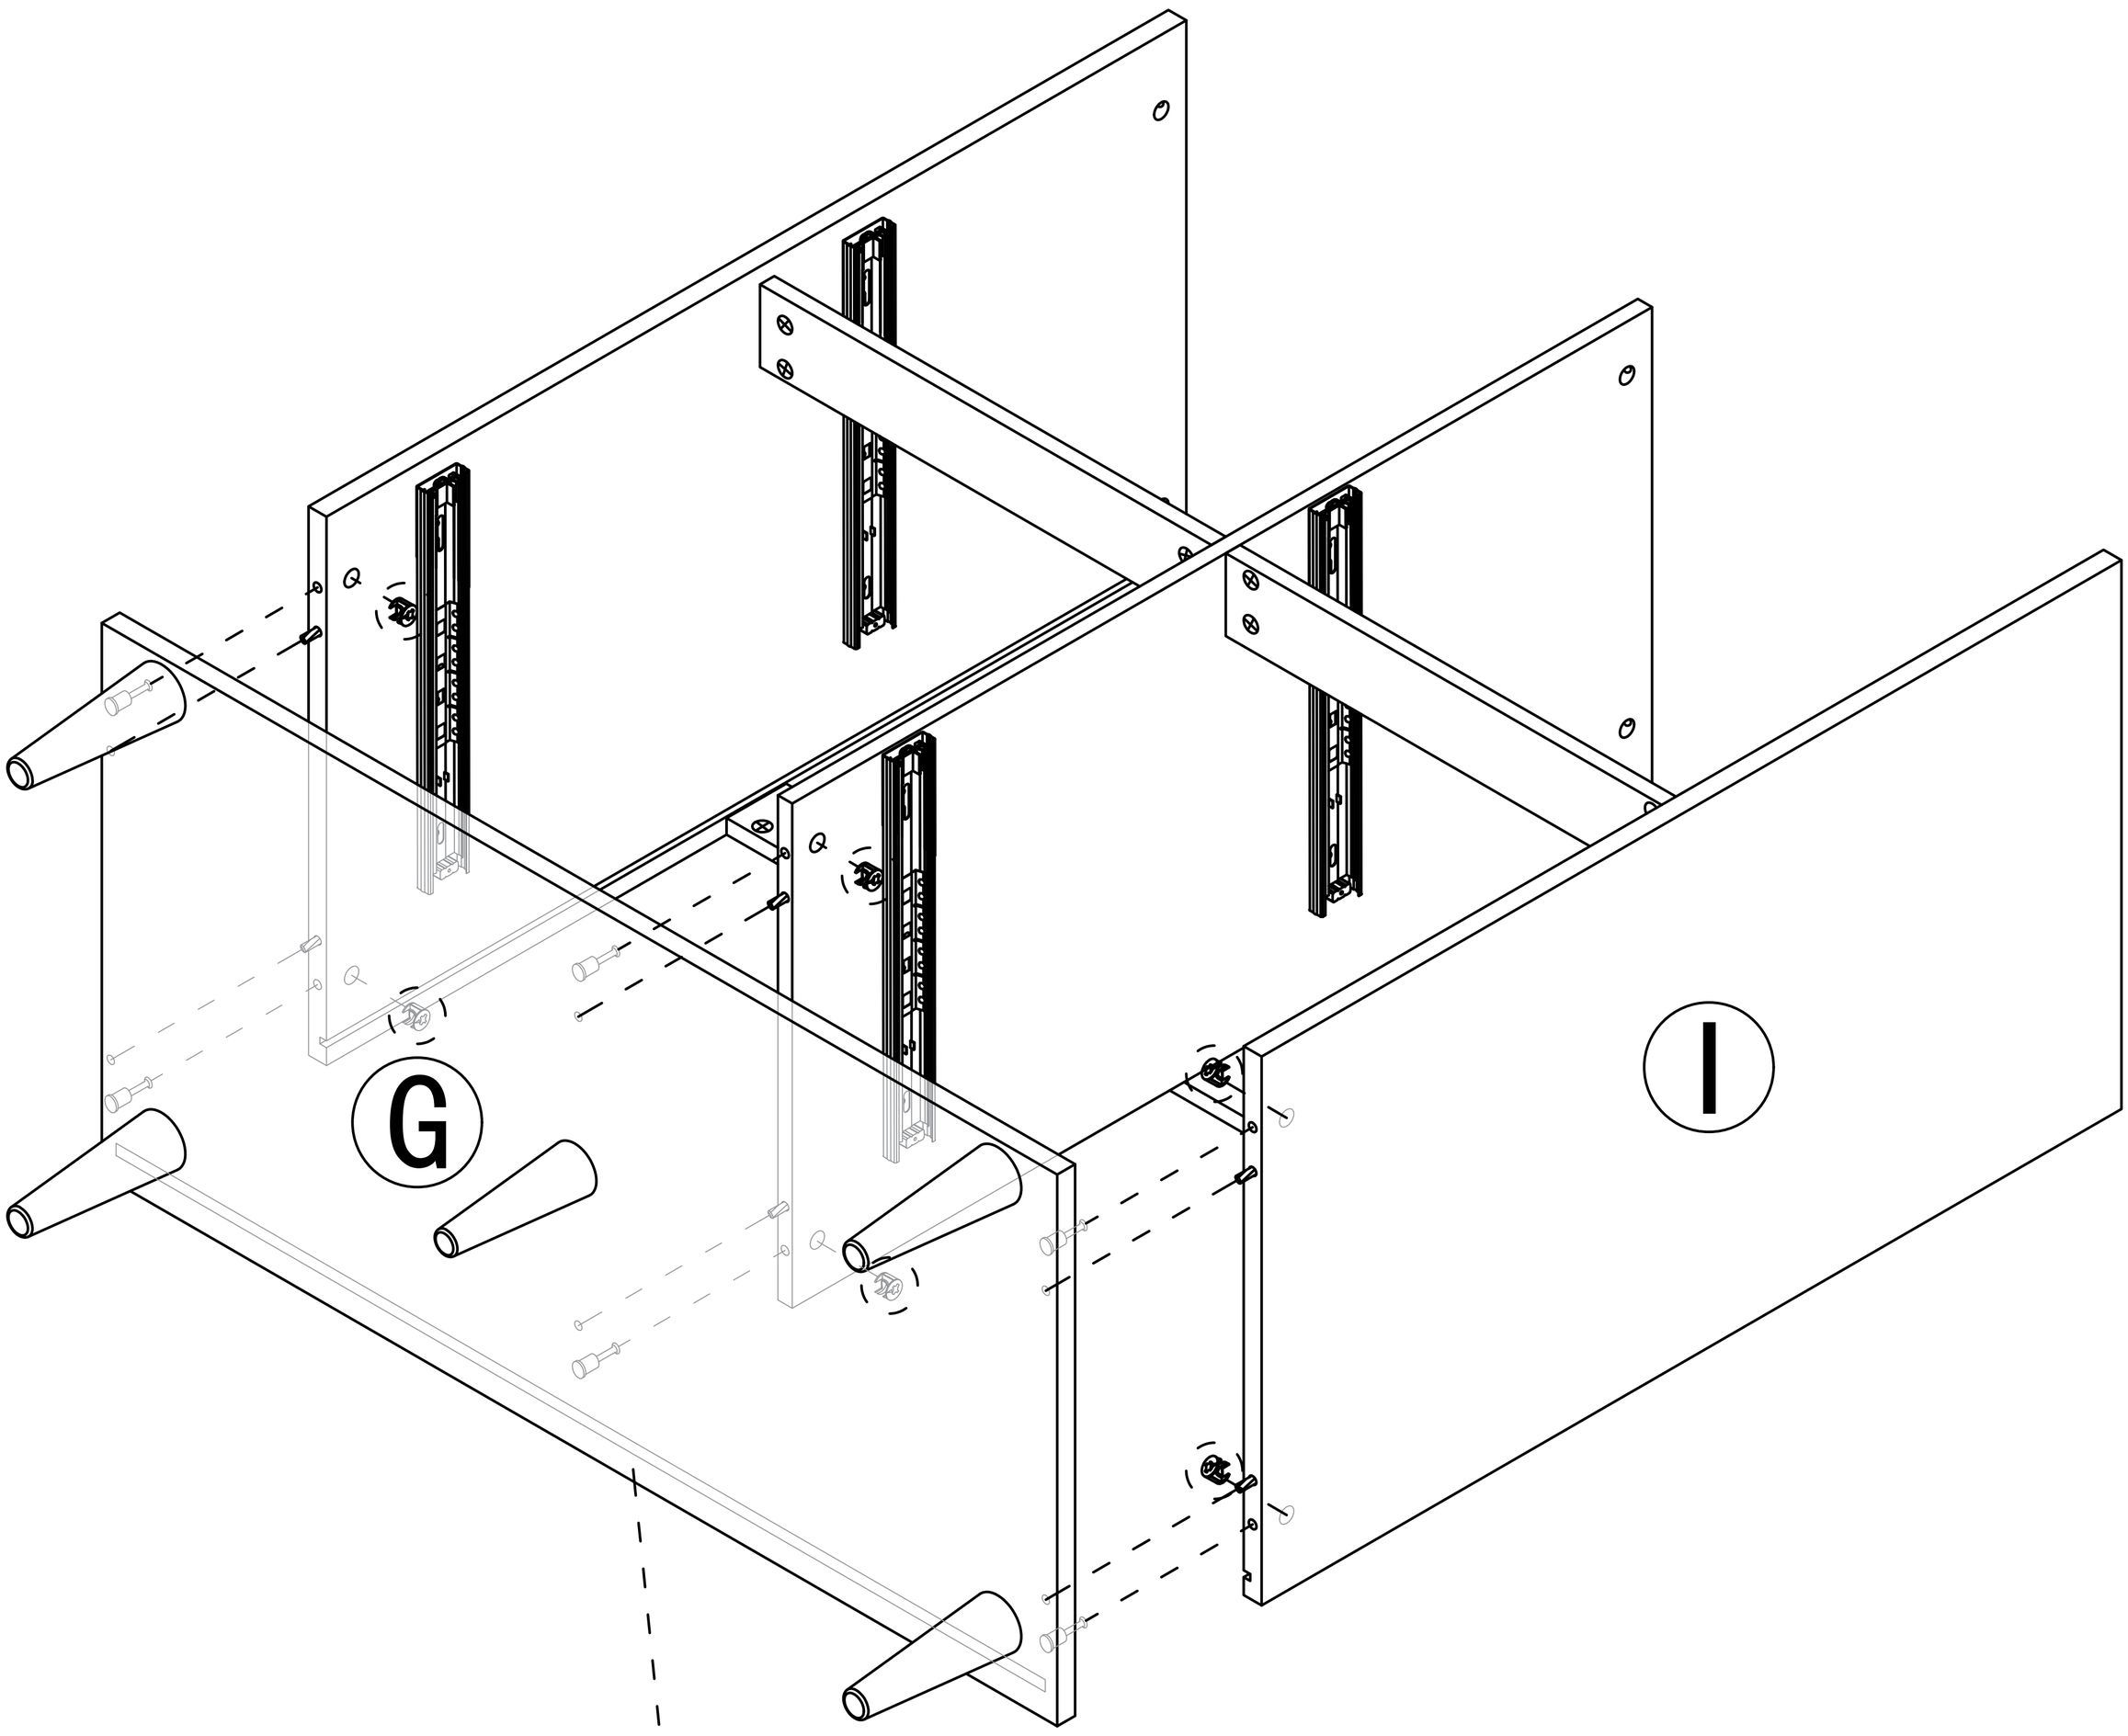


When installing the G board, pay attention to align the slot.


Step 31

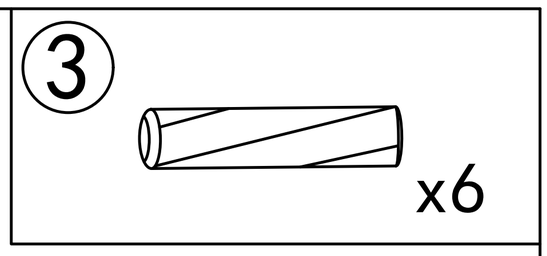

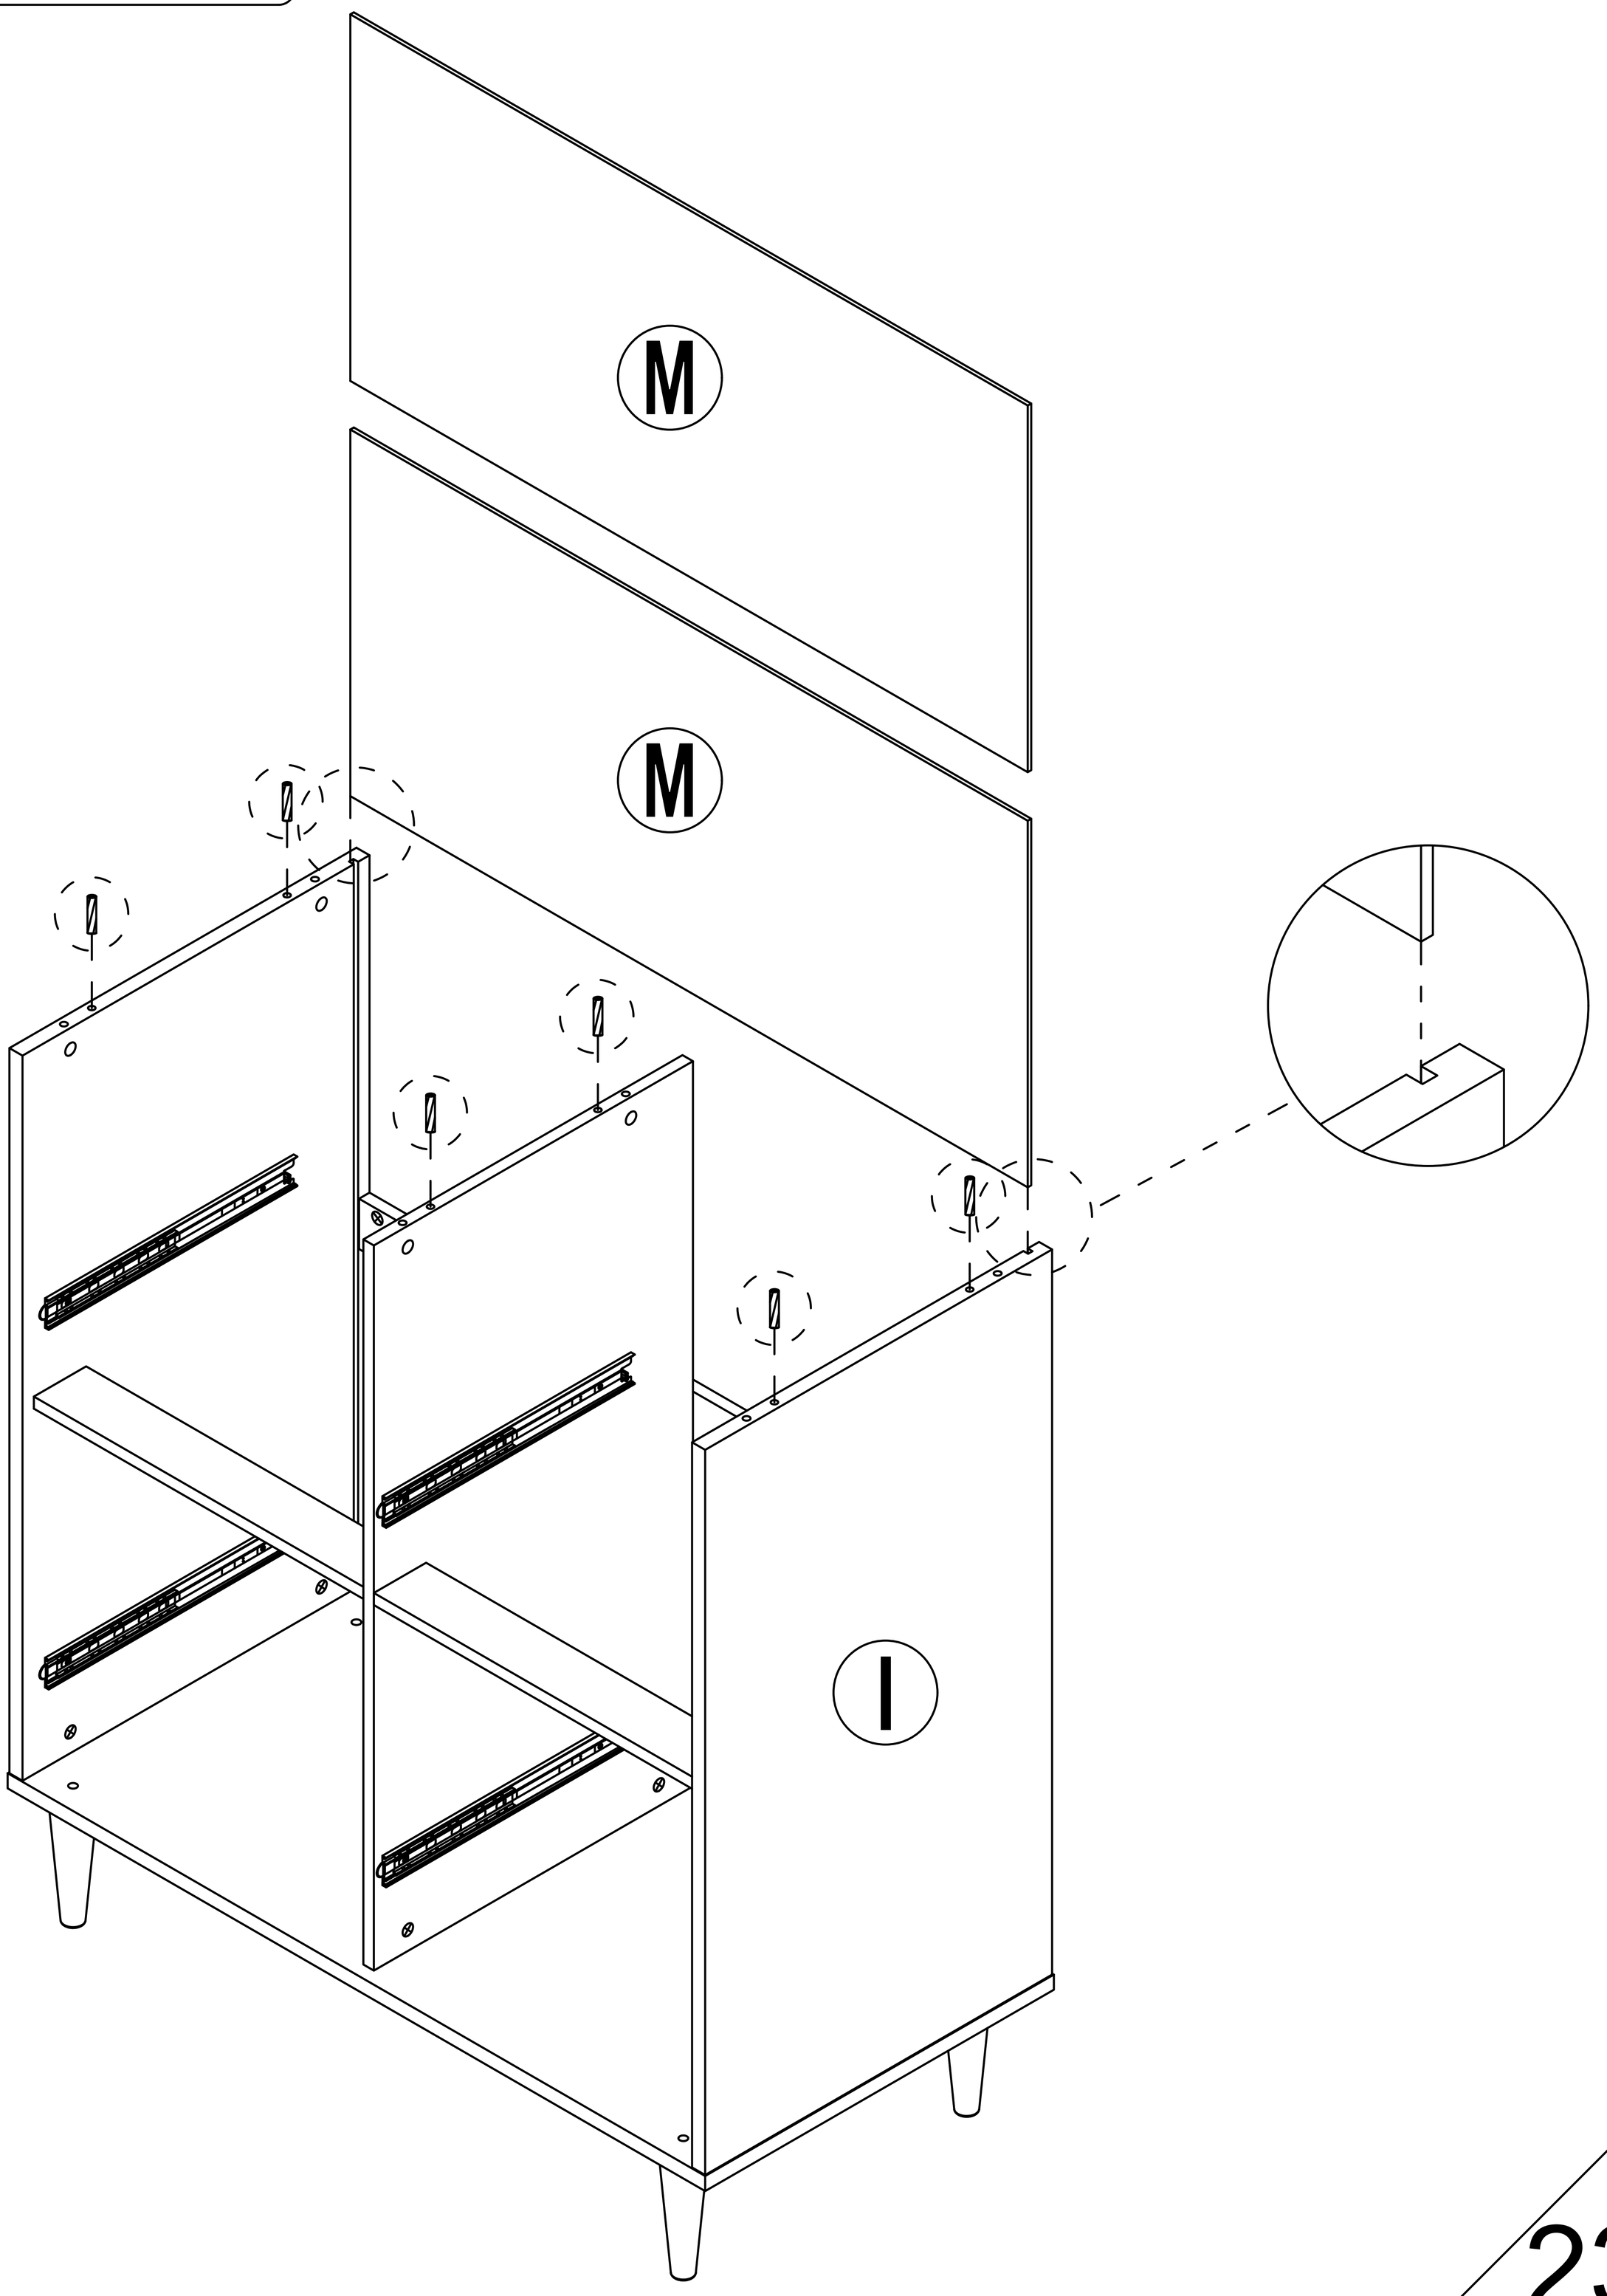



Step 32

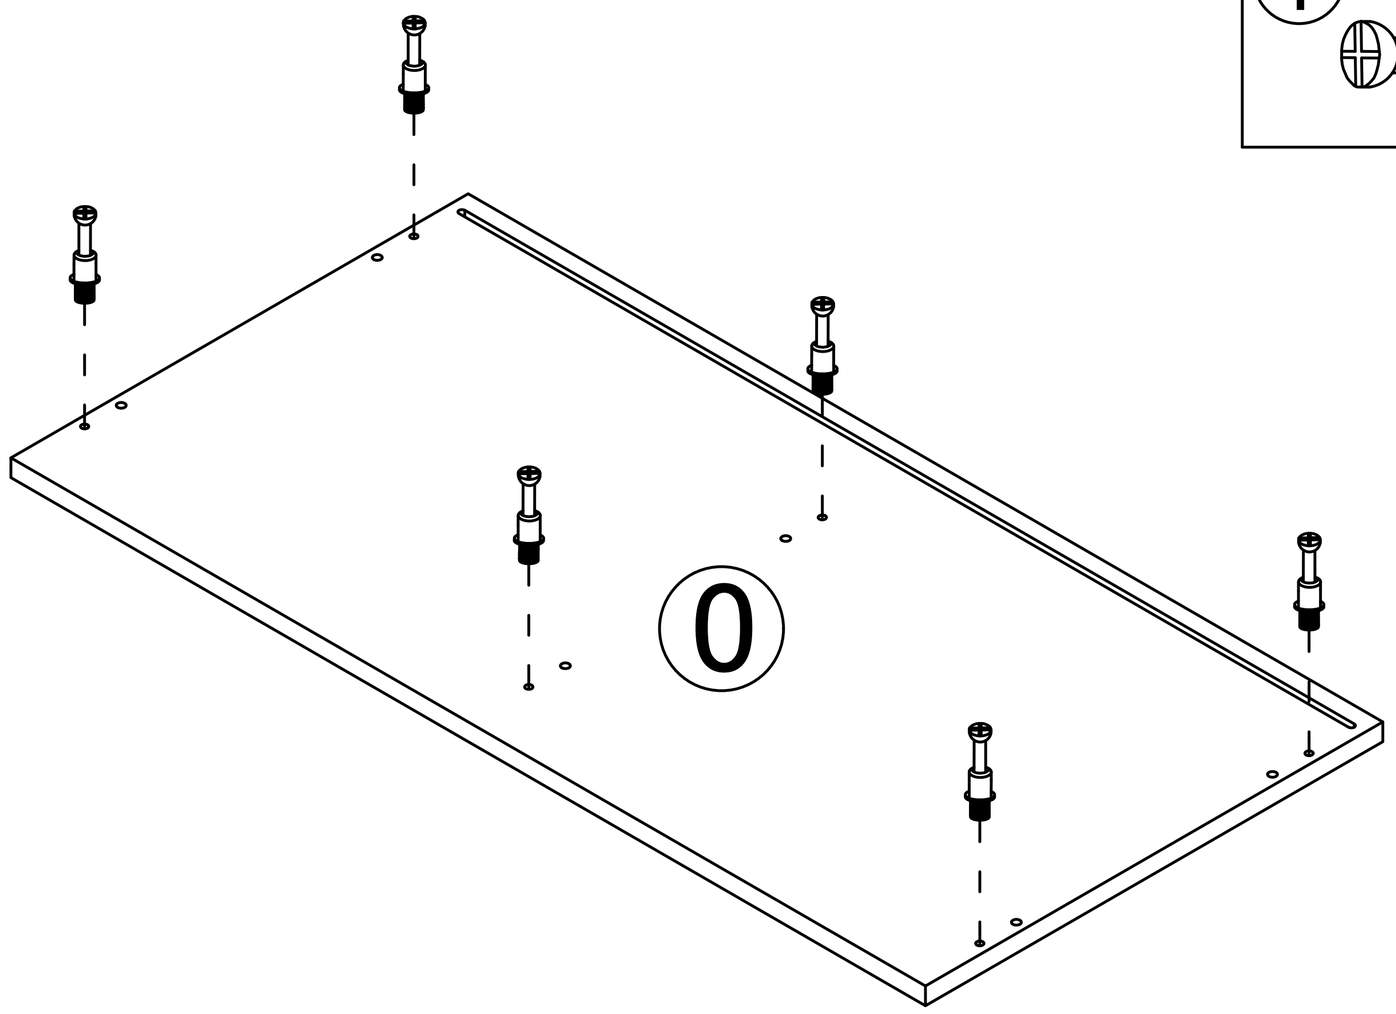

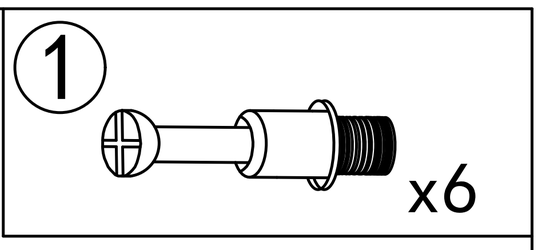


Step 33

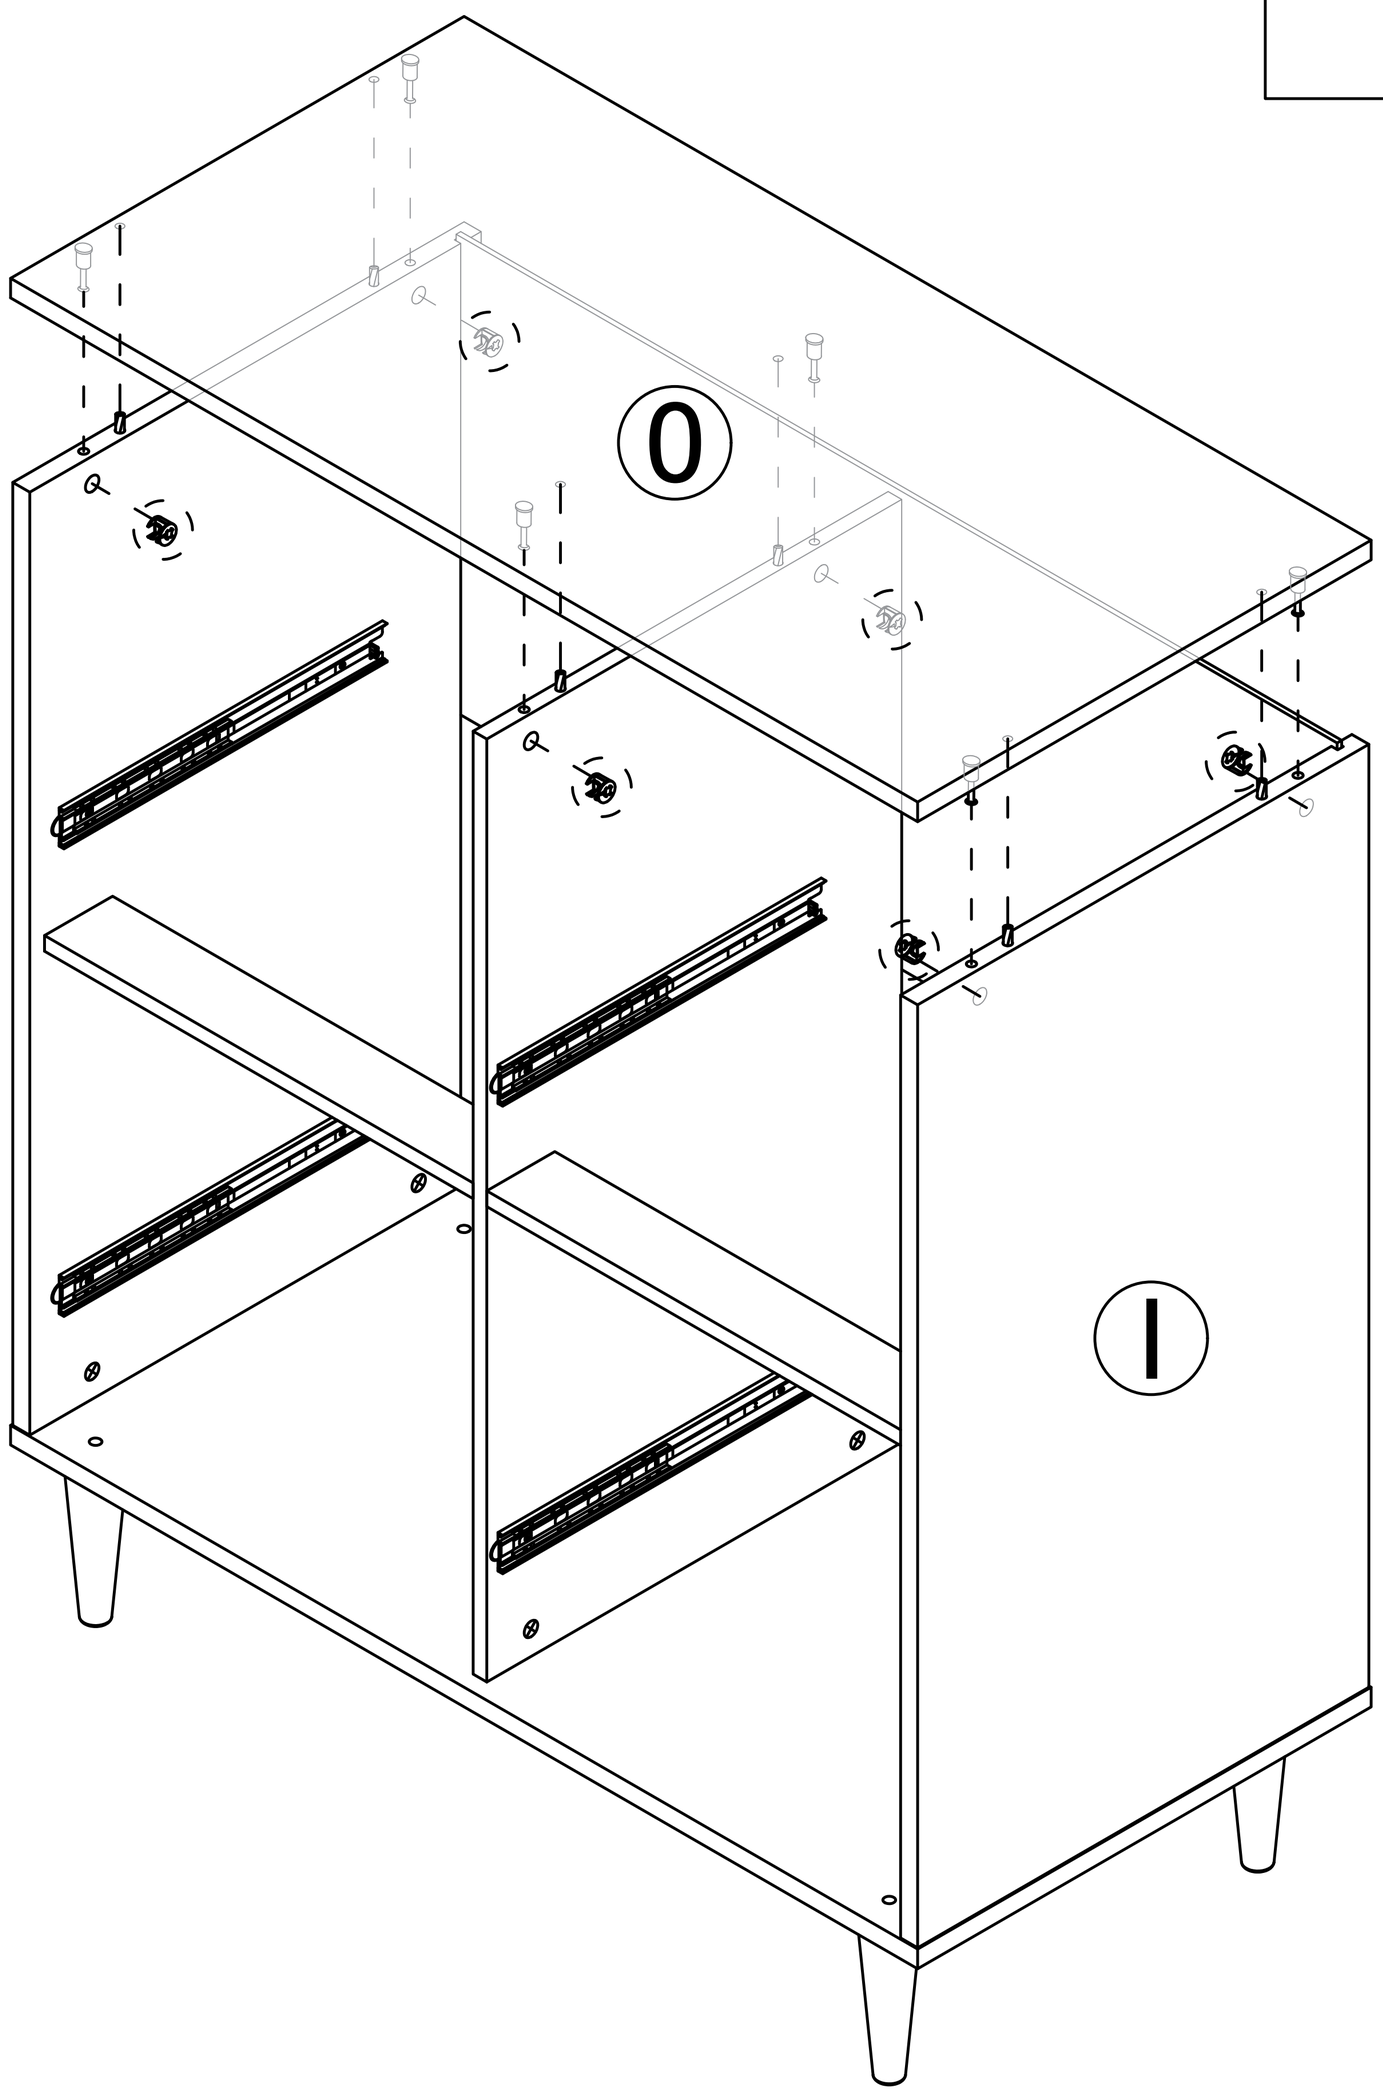

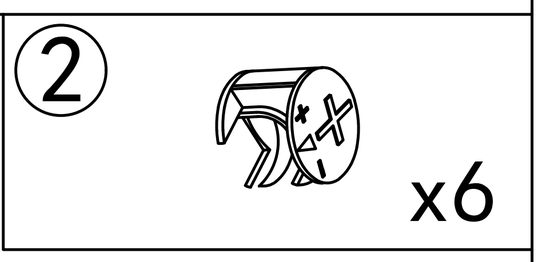


Step 34

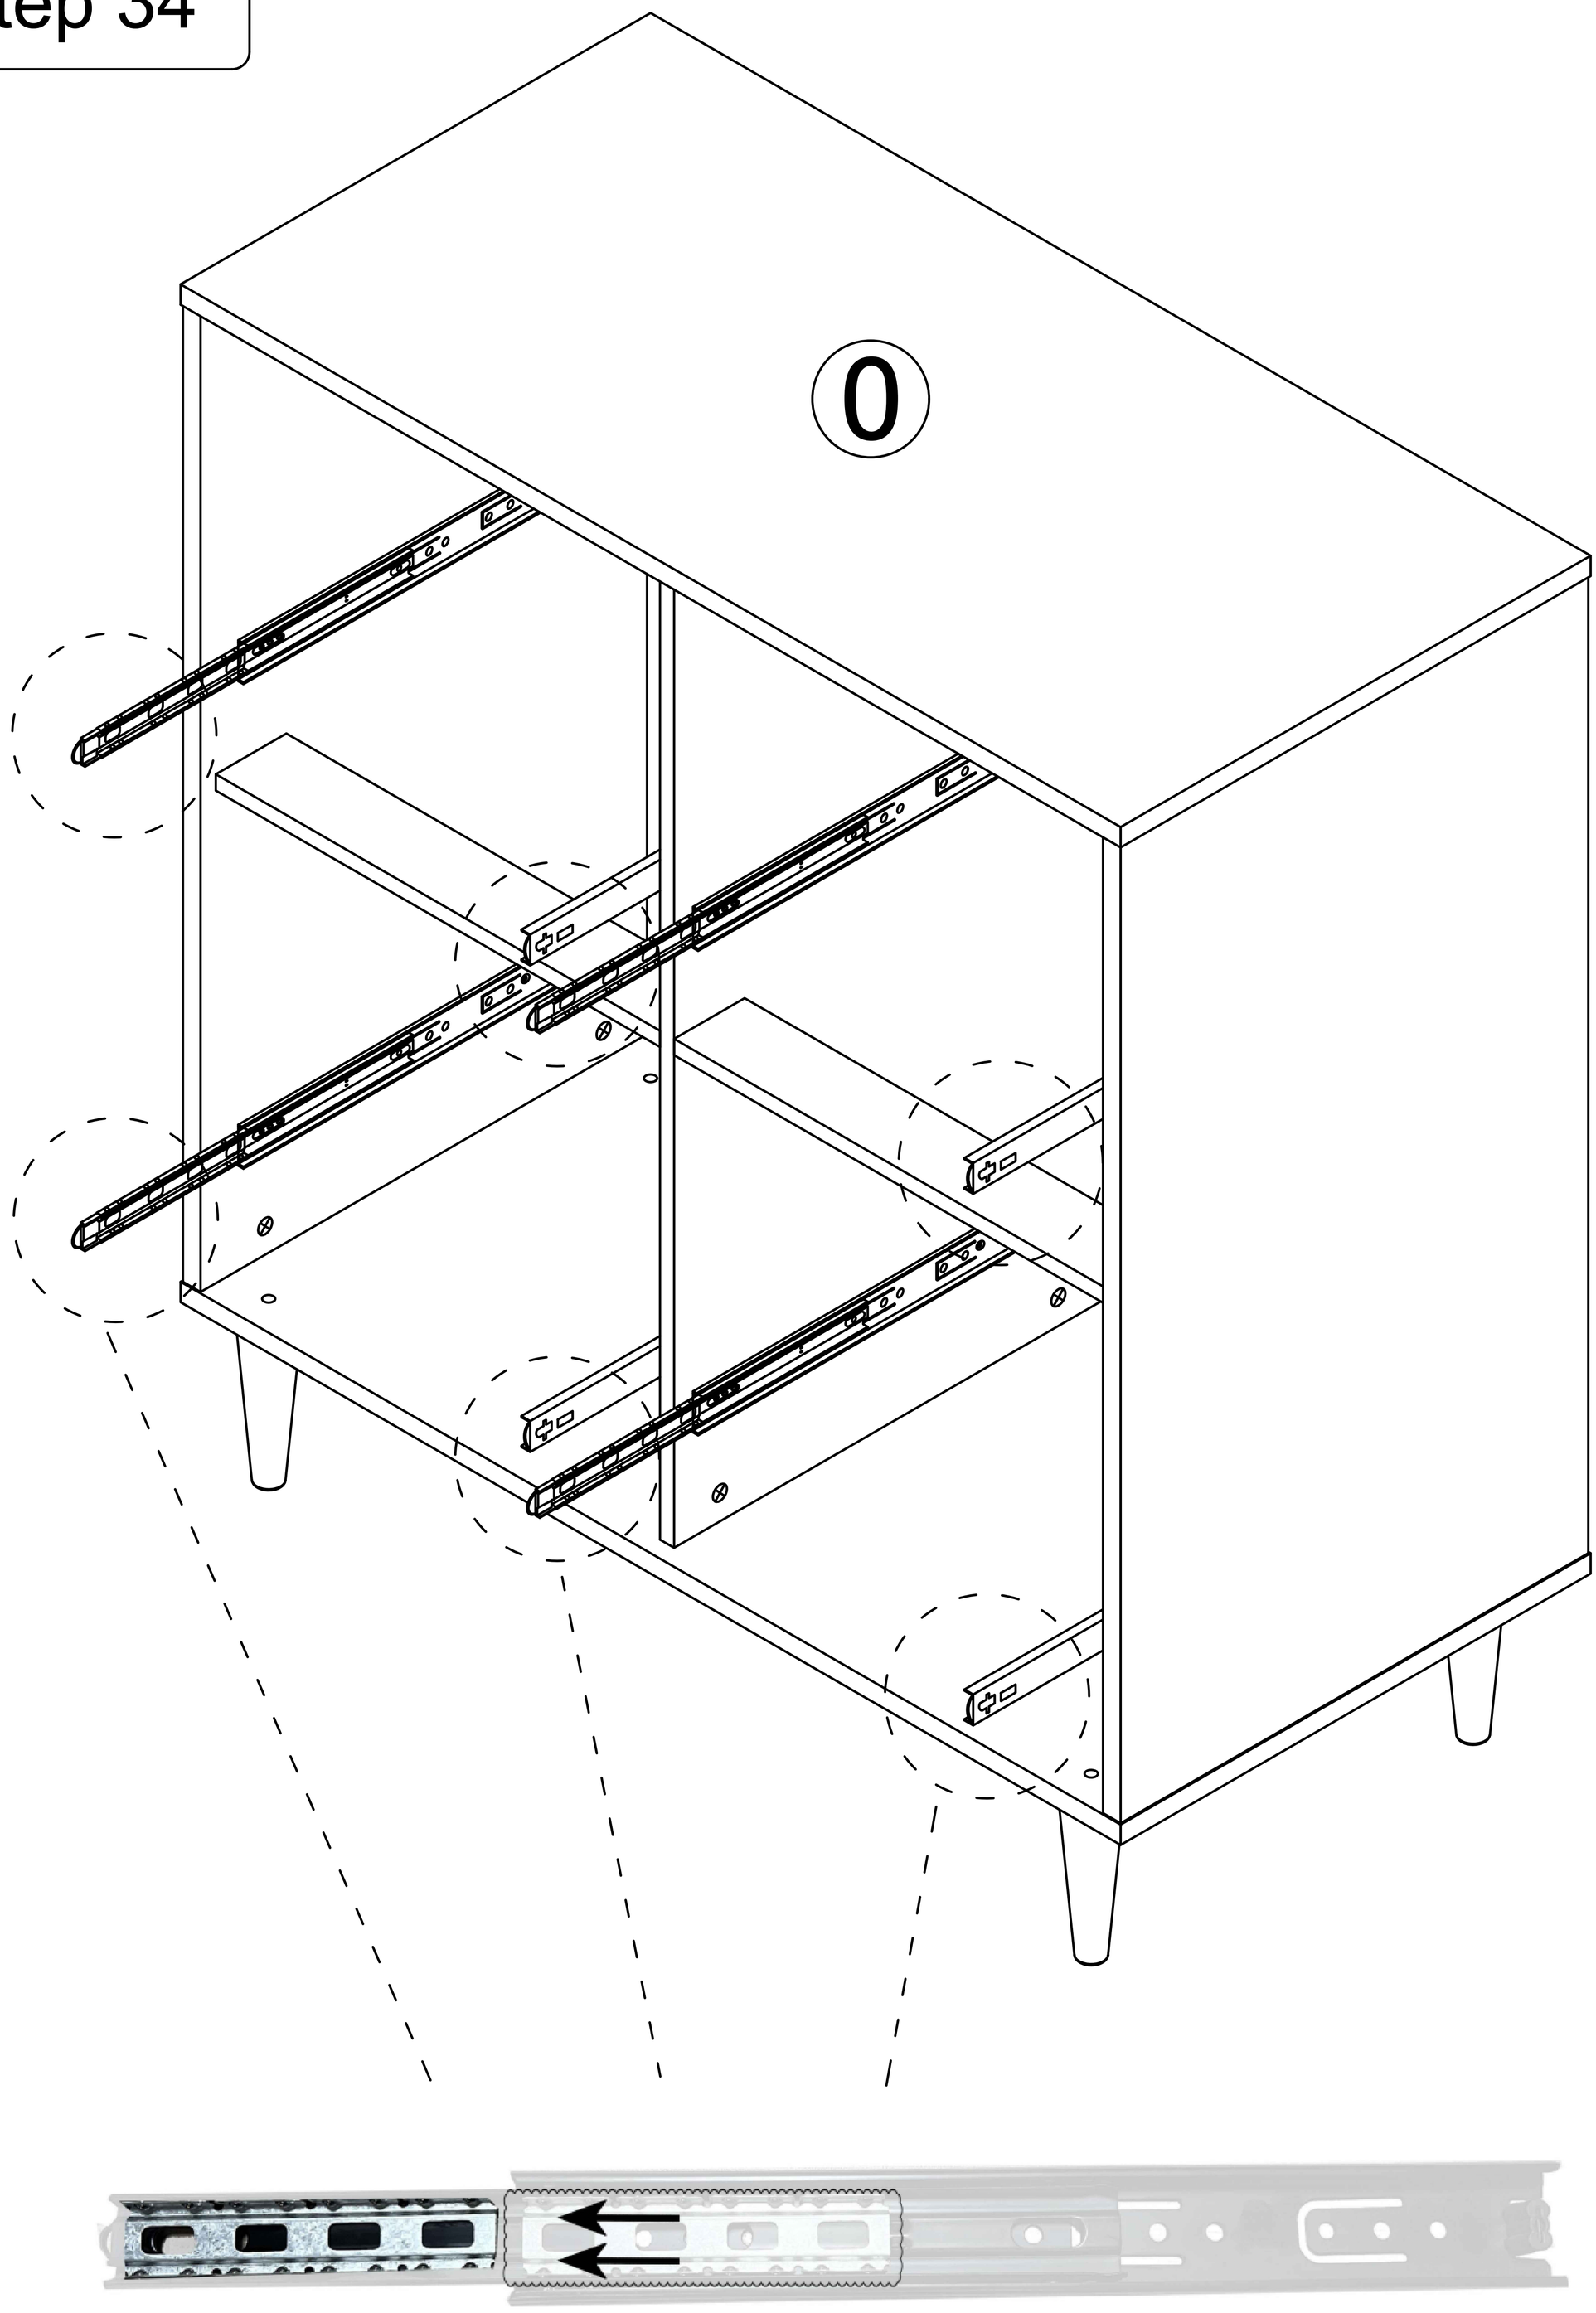


As shown，When installing the drawer,
pull the guide rail out first, Slide beads are also pulled out.

Step 35

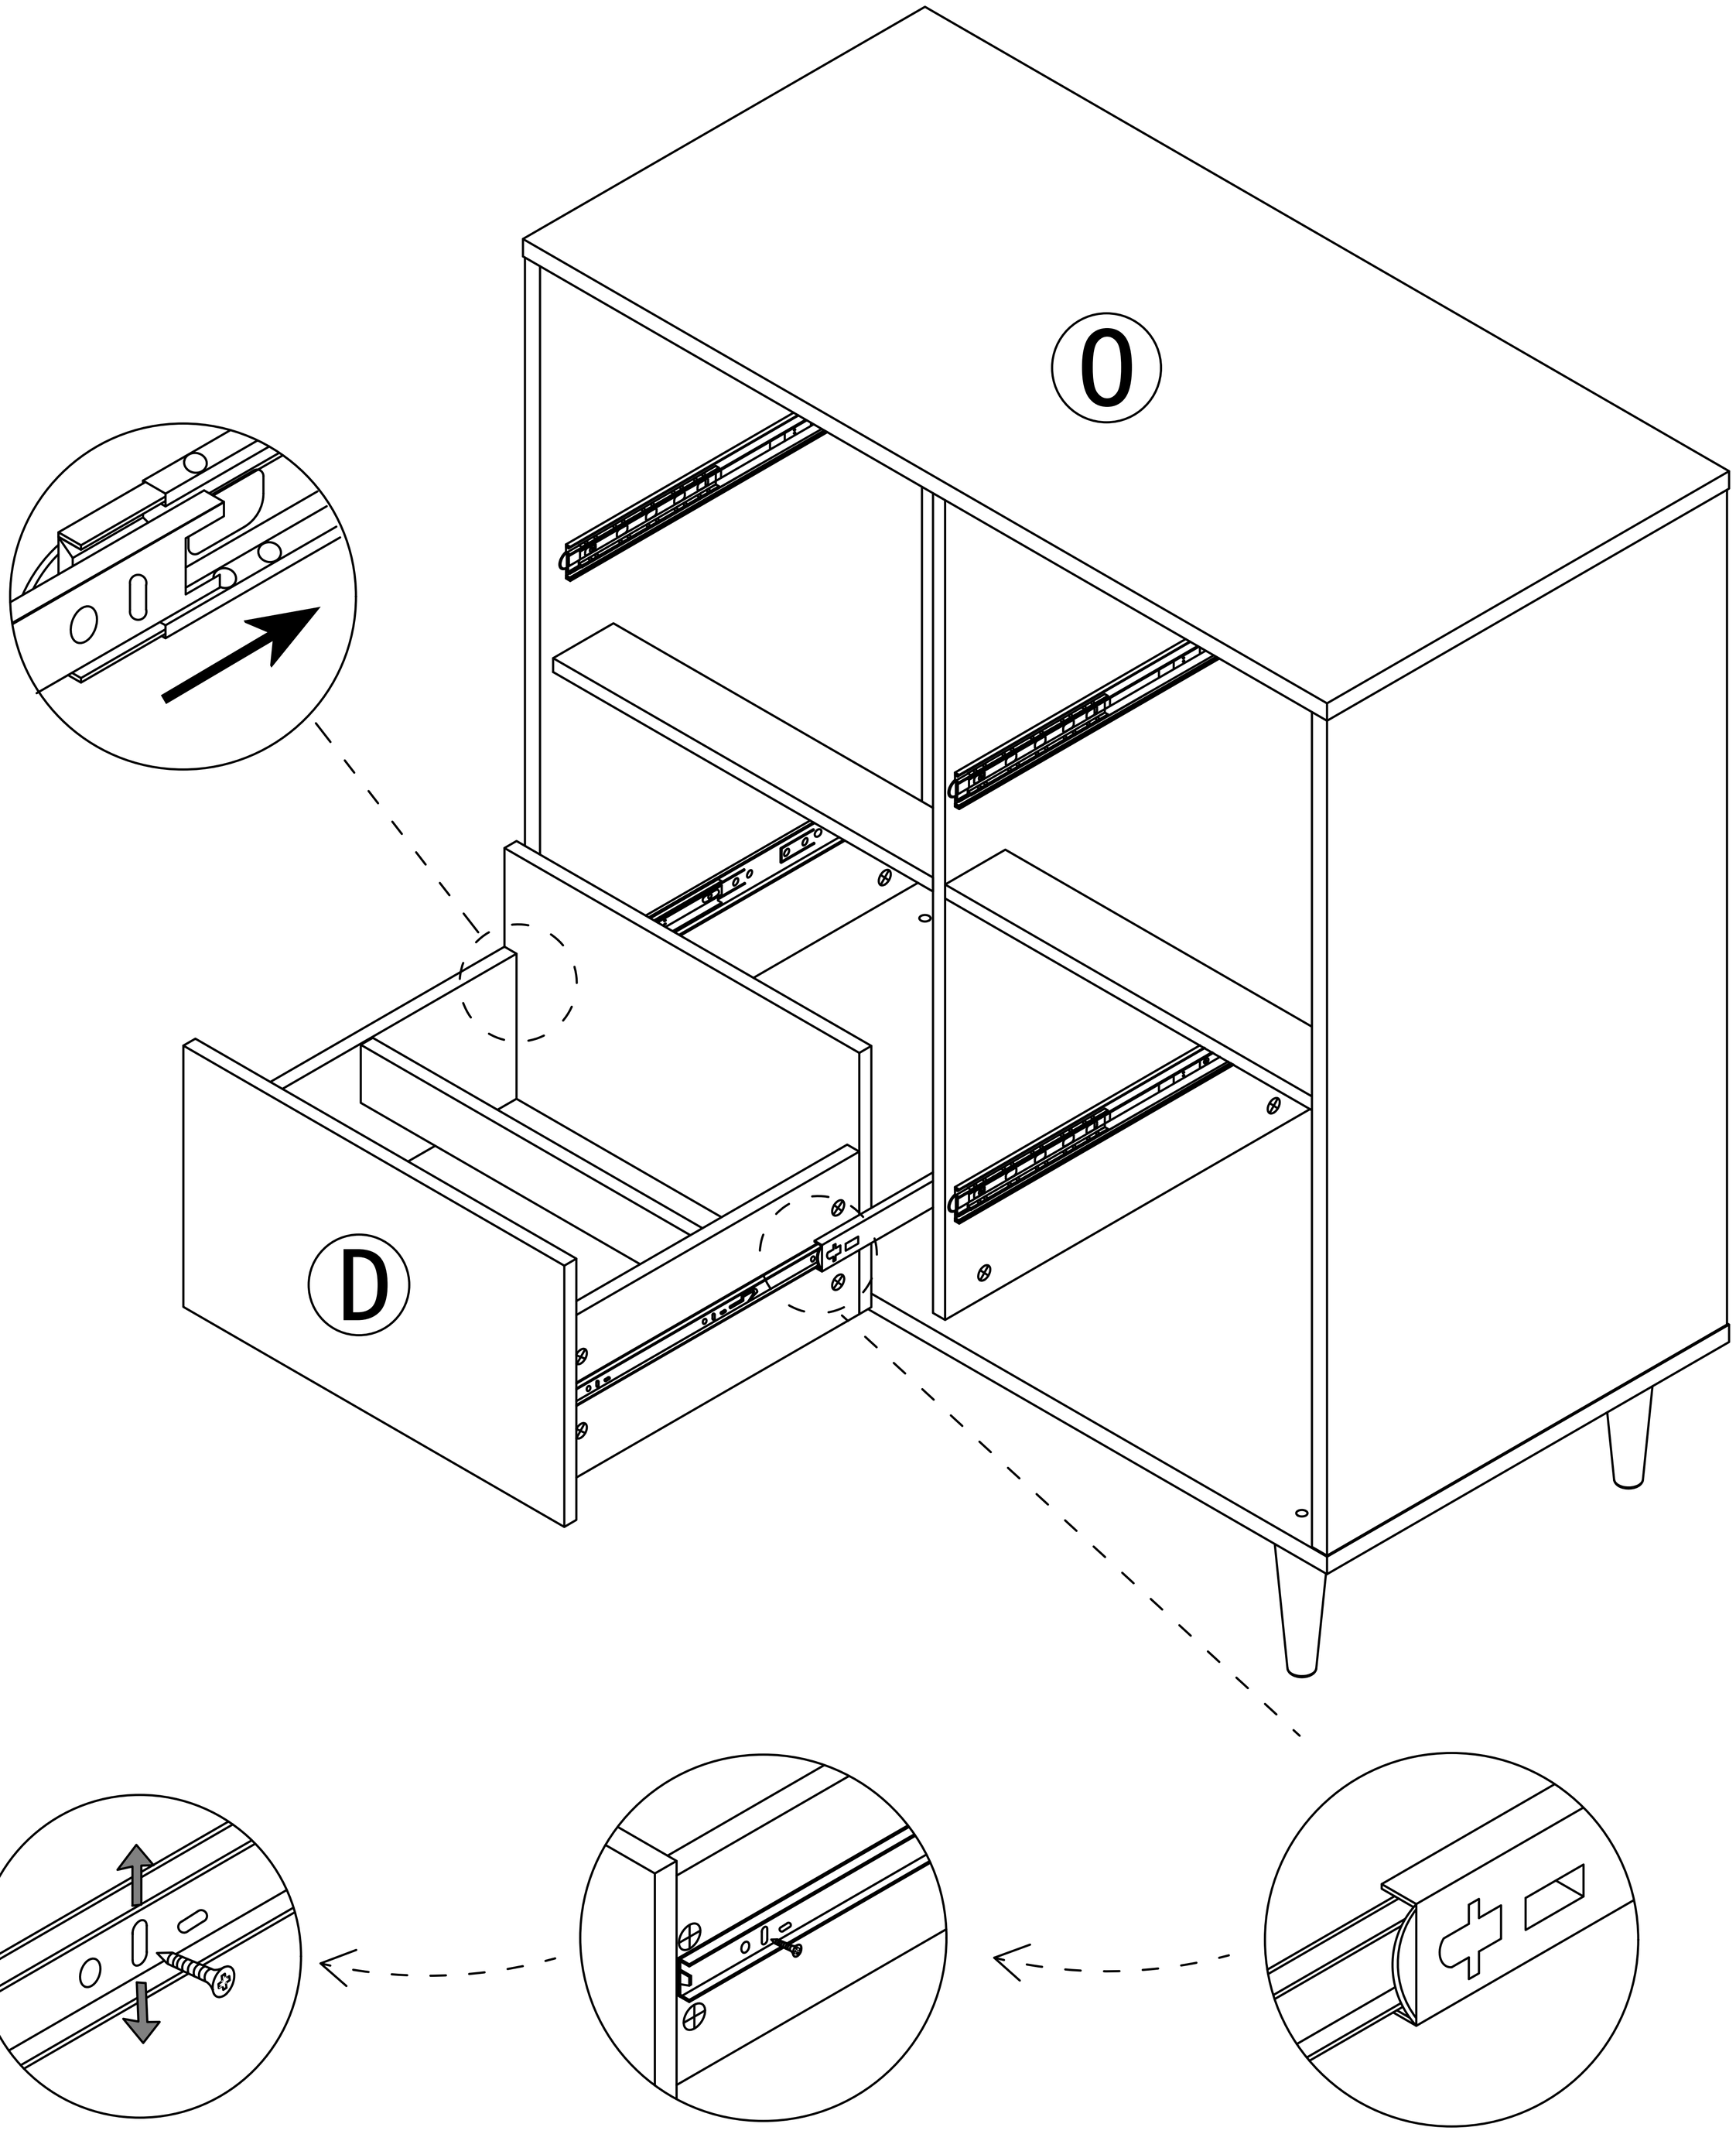

If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap


Step 36

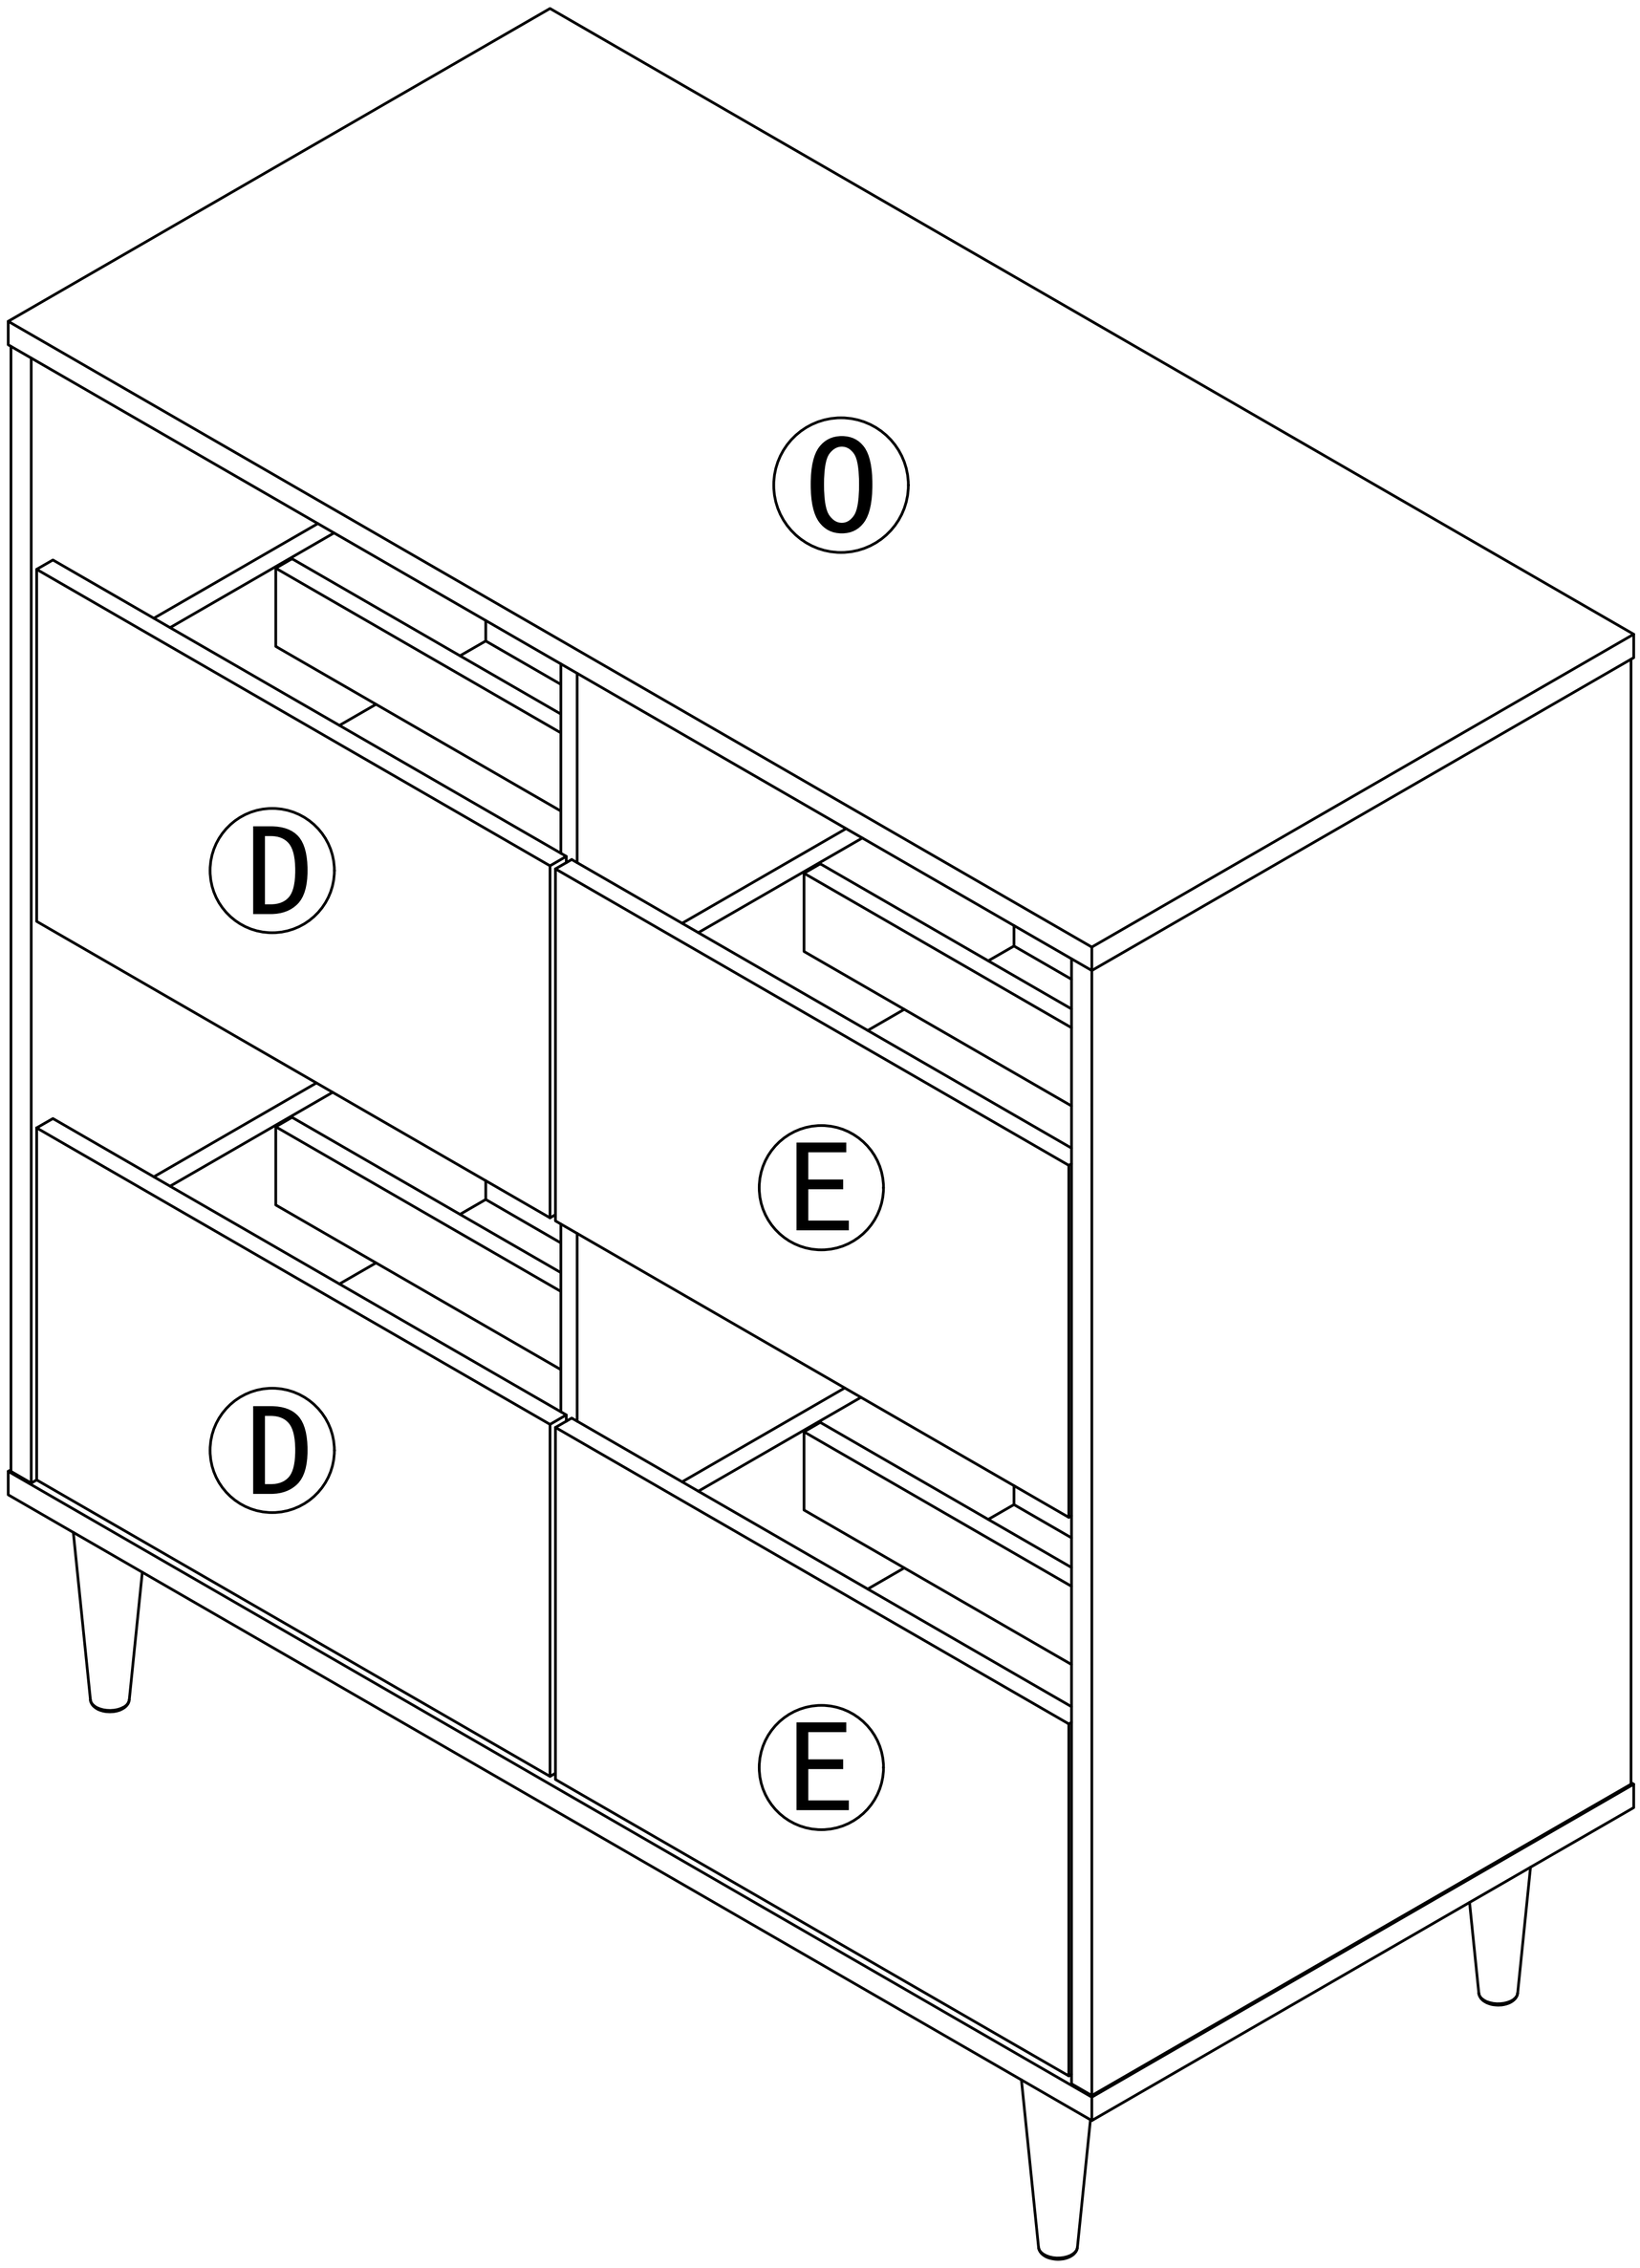


Repeat the drawer installation steps

Step 37

6 x8

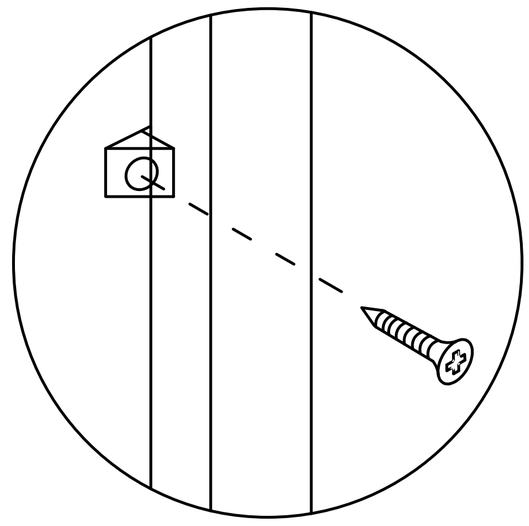


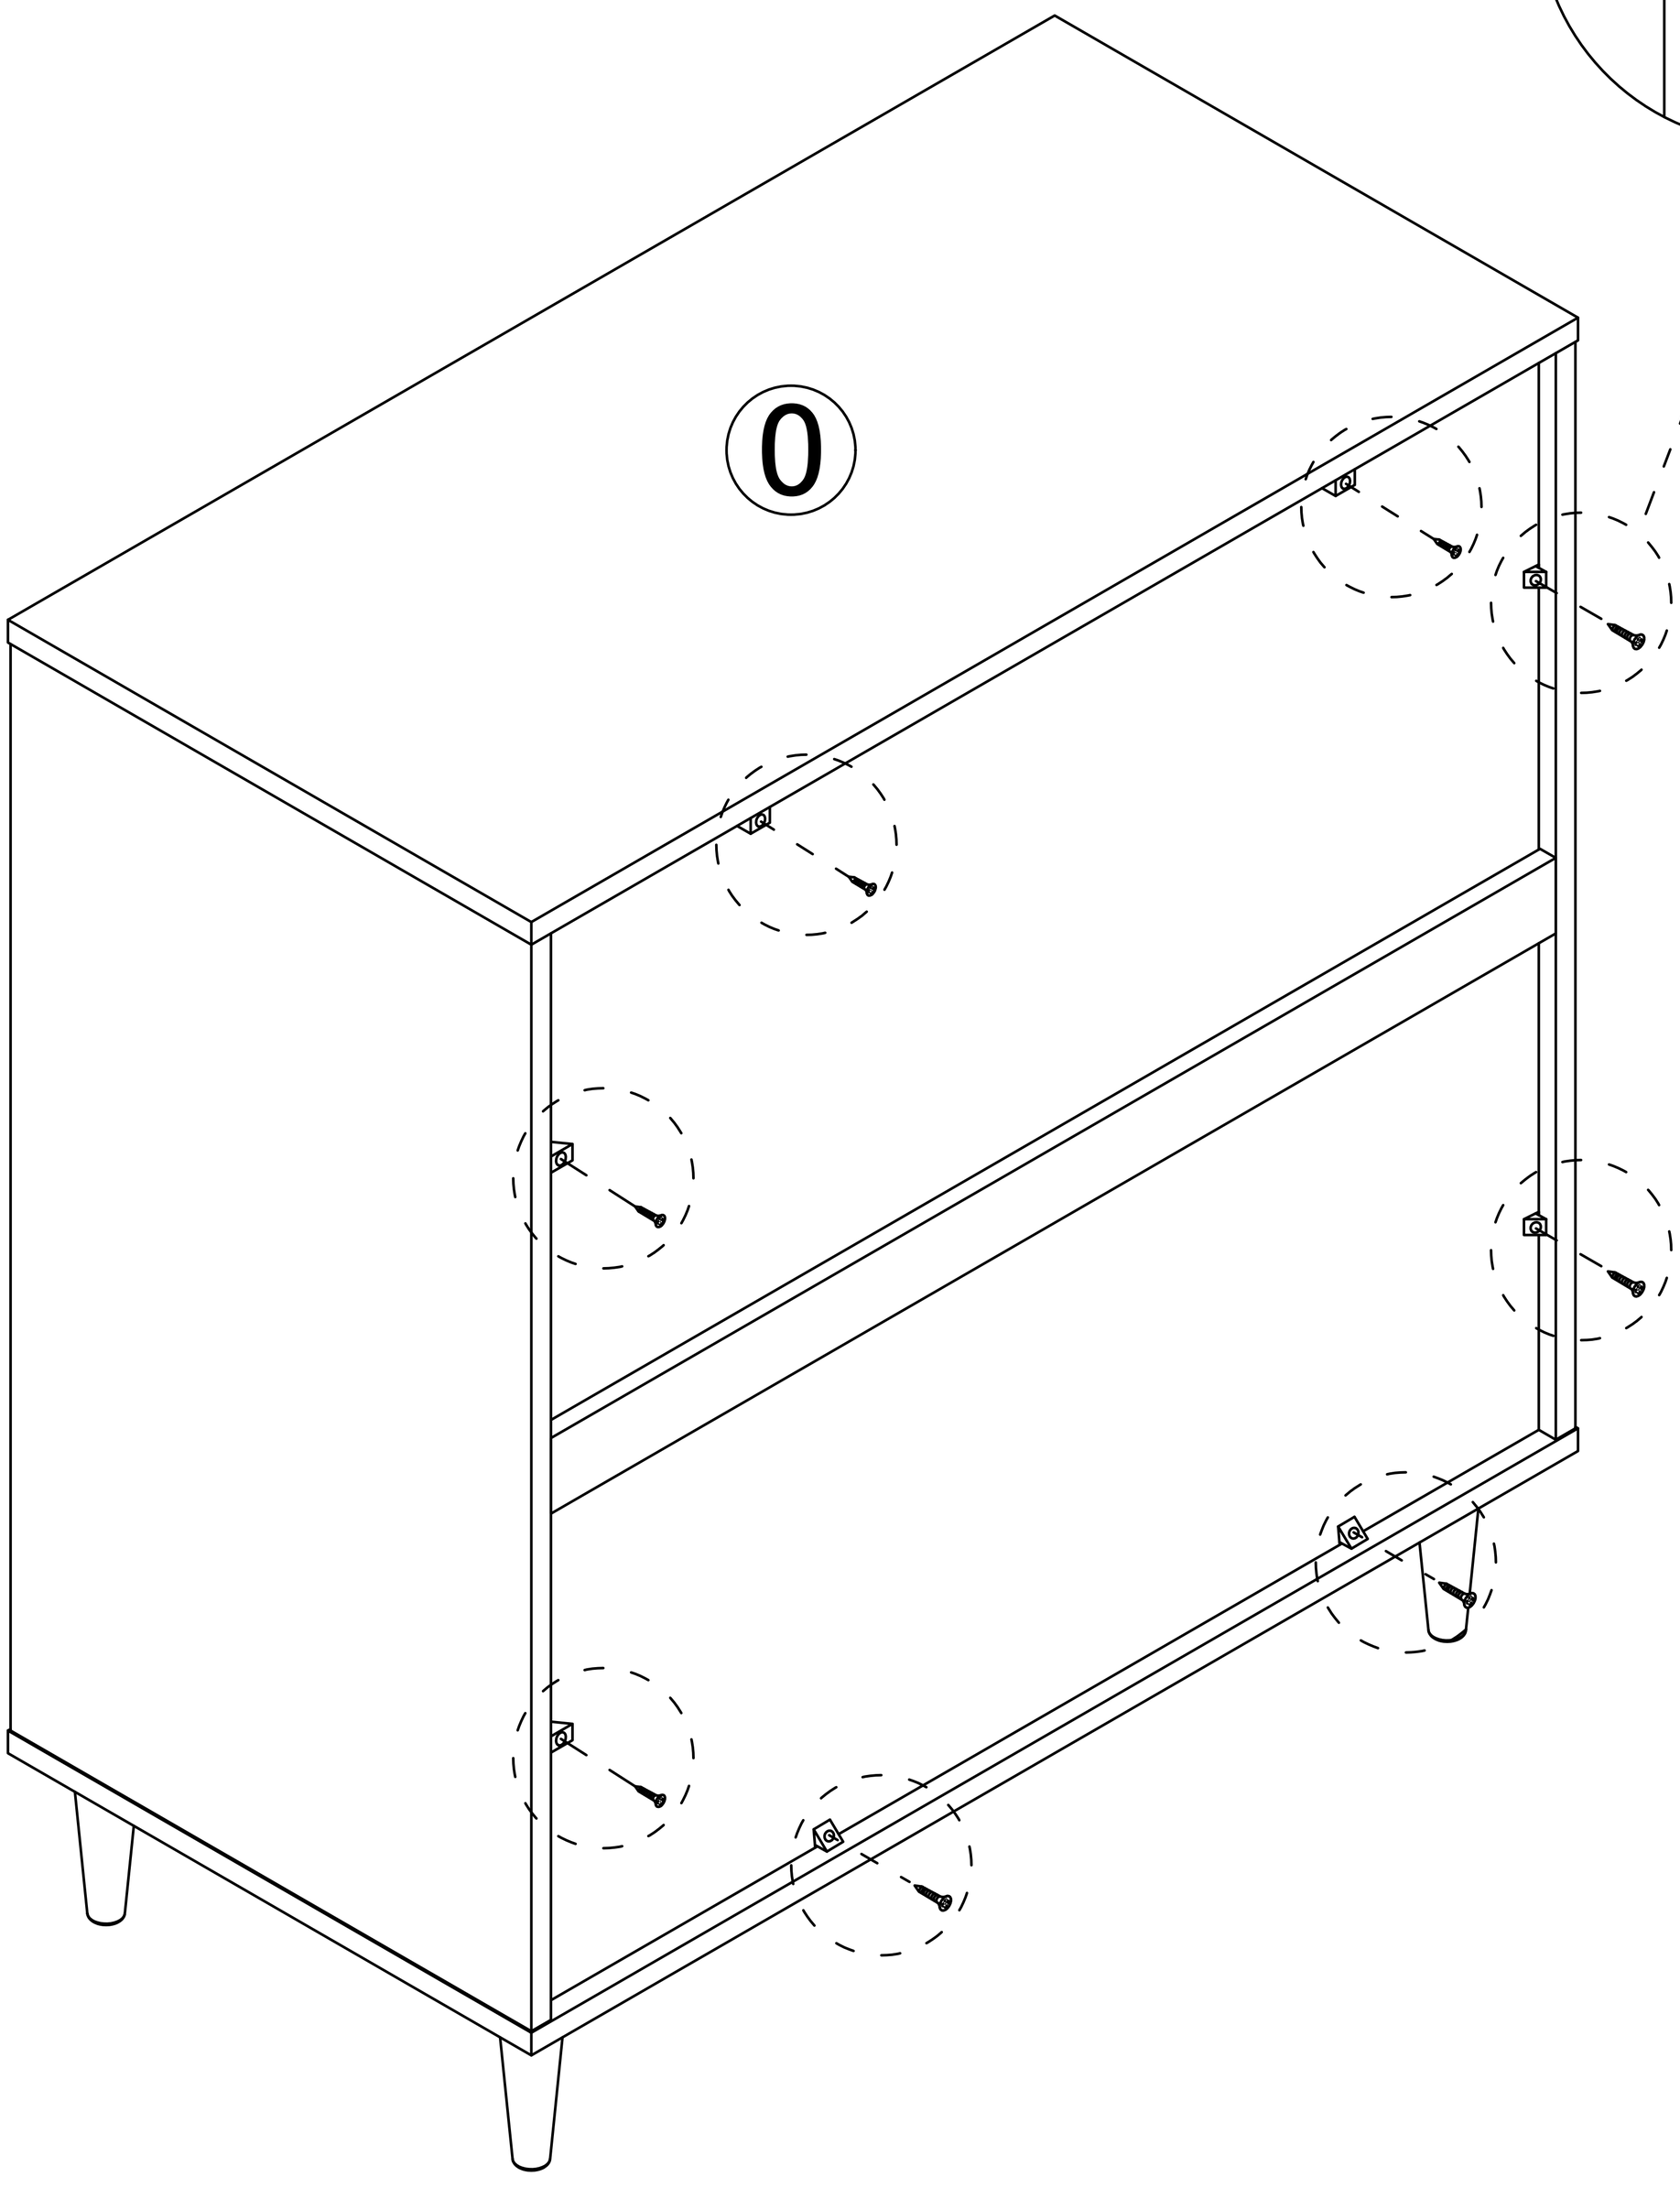


Step 38

7 1pcs


1pcs 1pcs

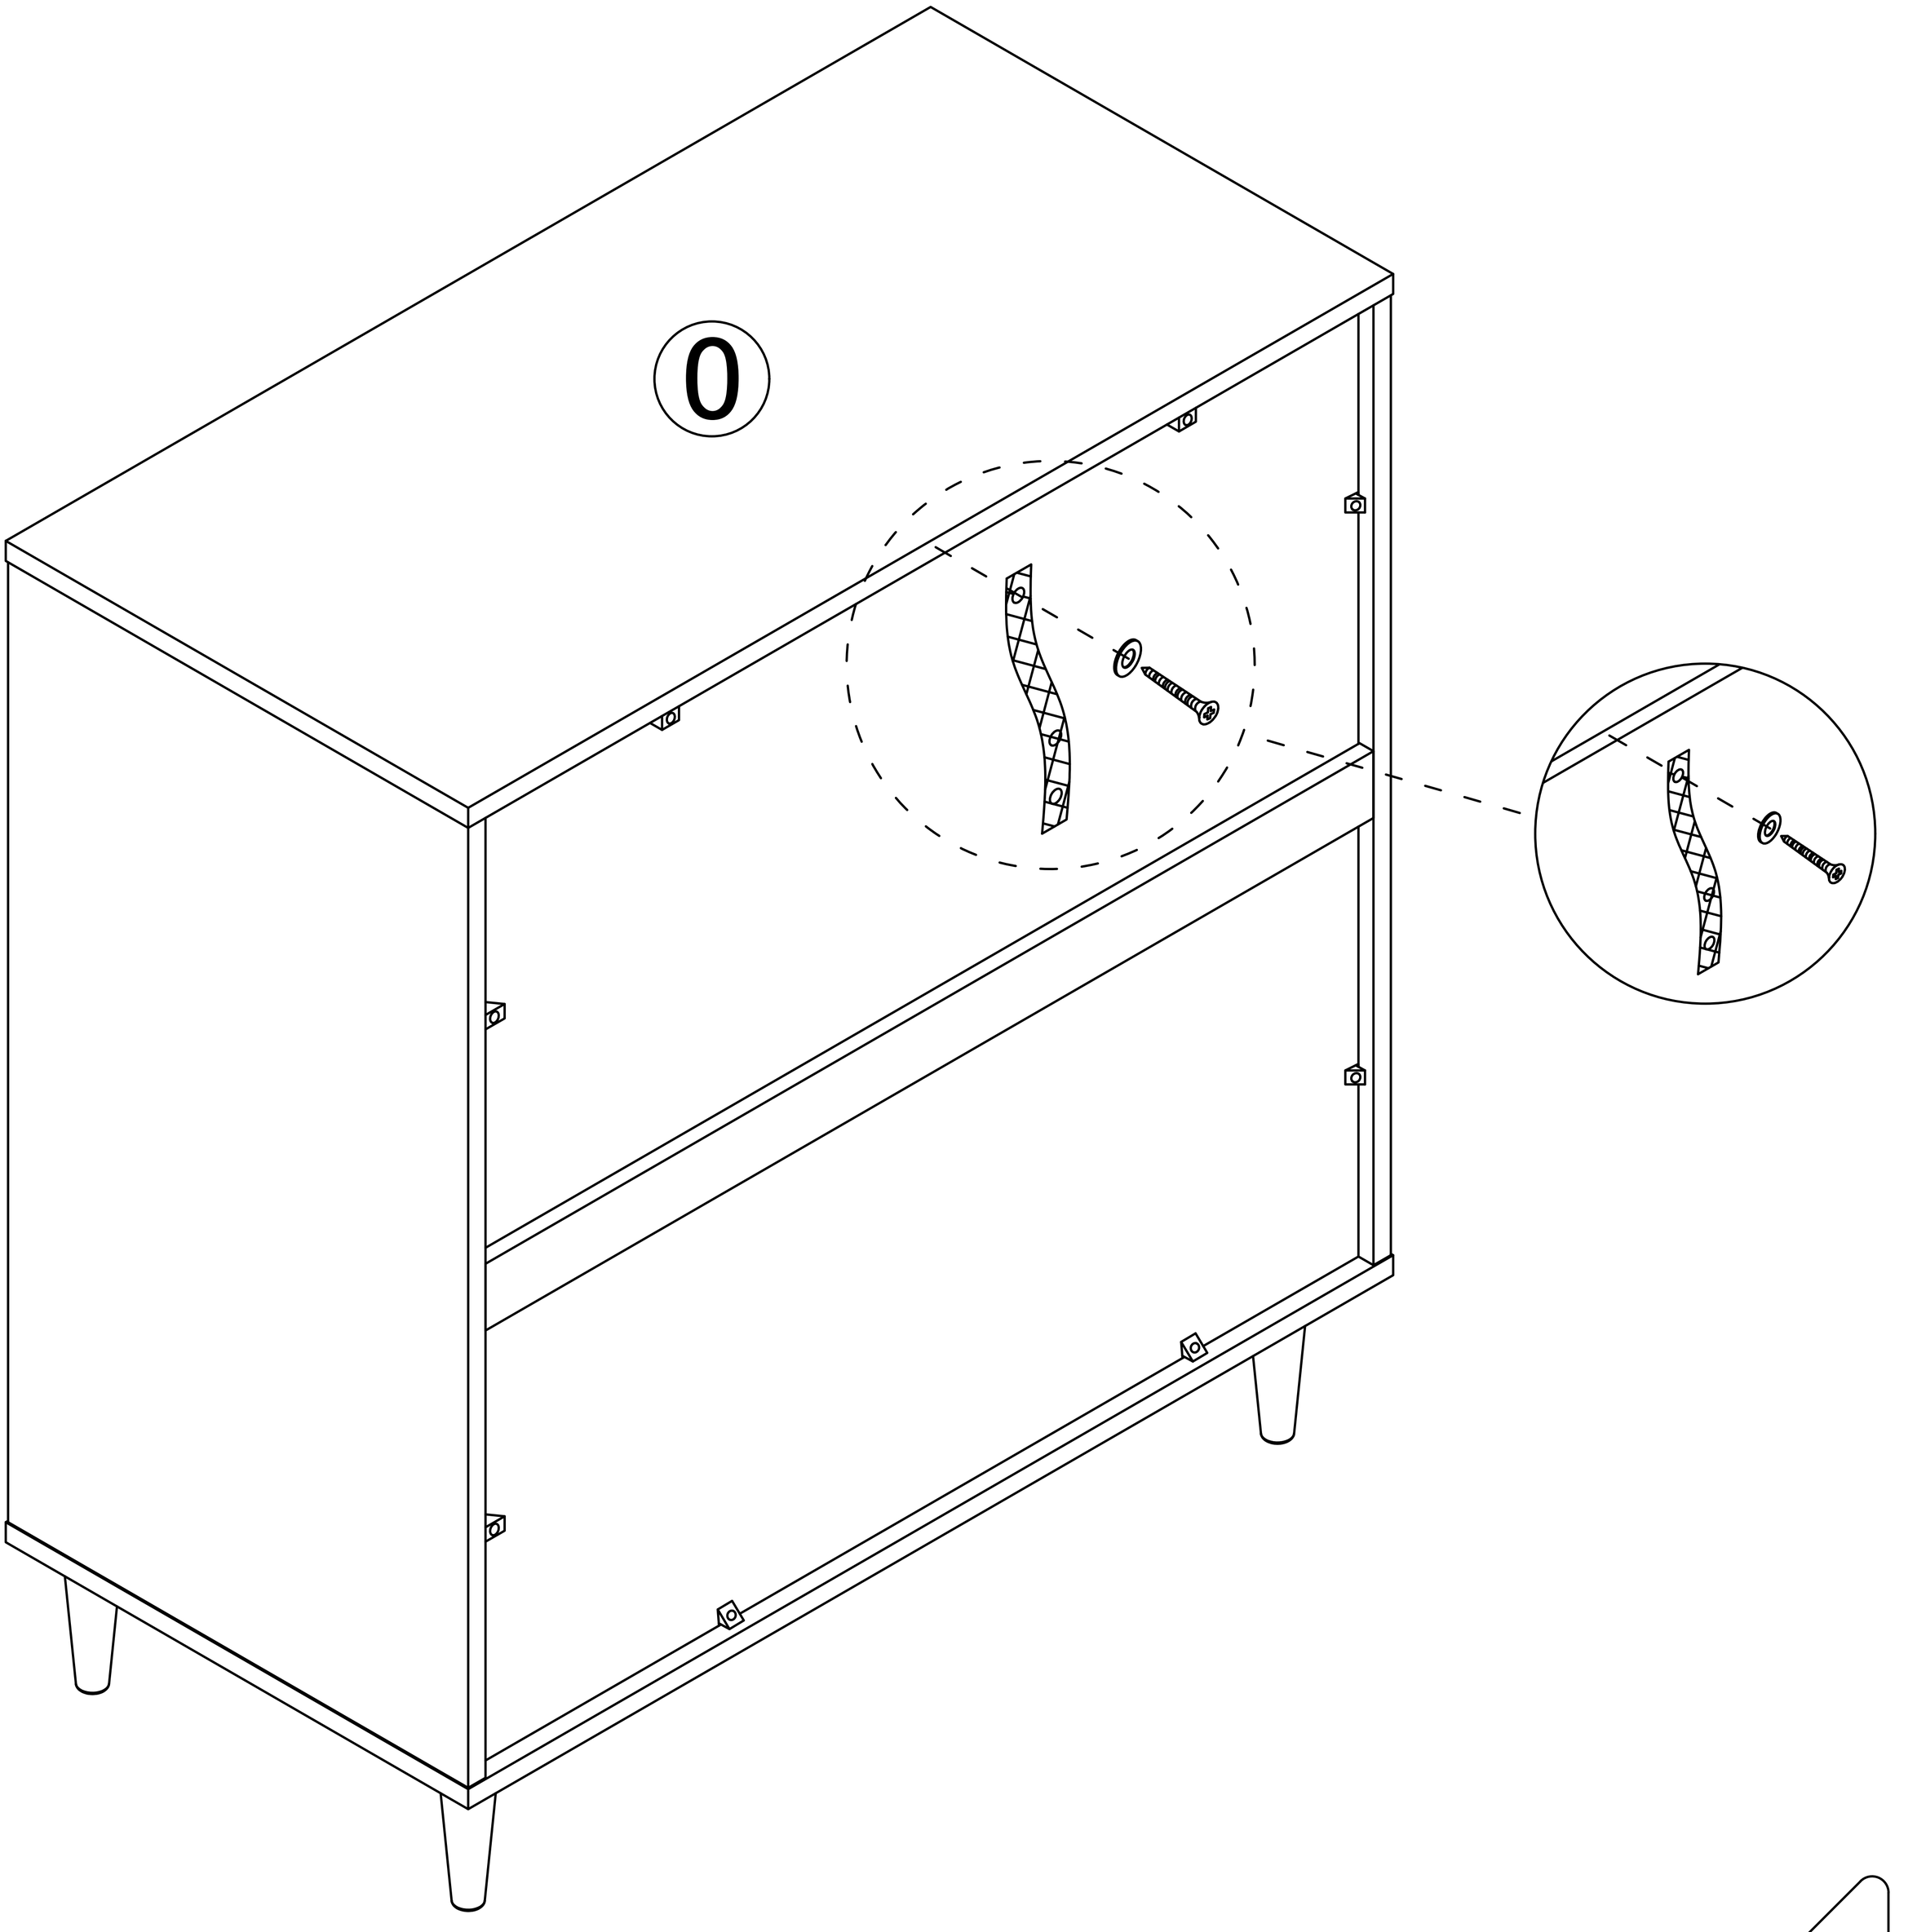

Step 39

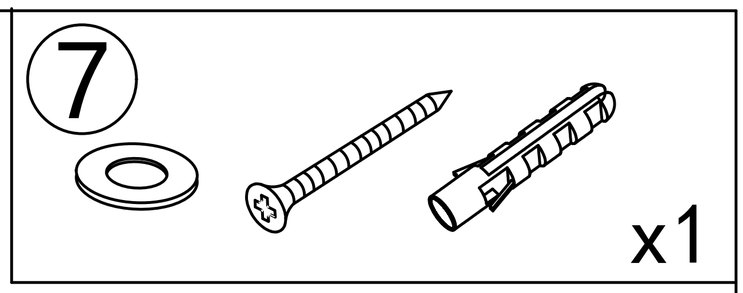

use a ruler to measure theapproximate height of the producton the wall, and then mark it witha pencil.

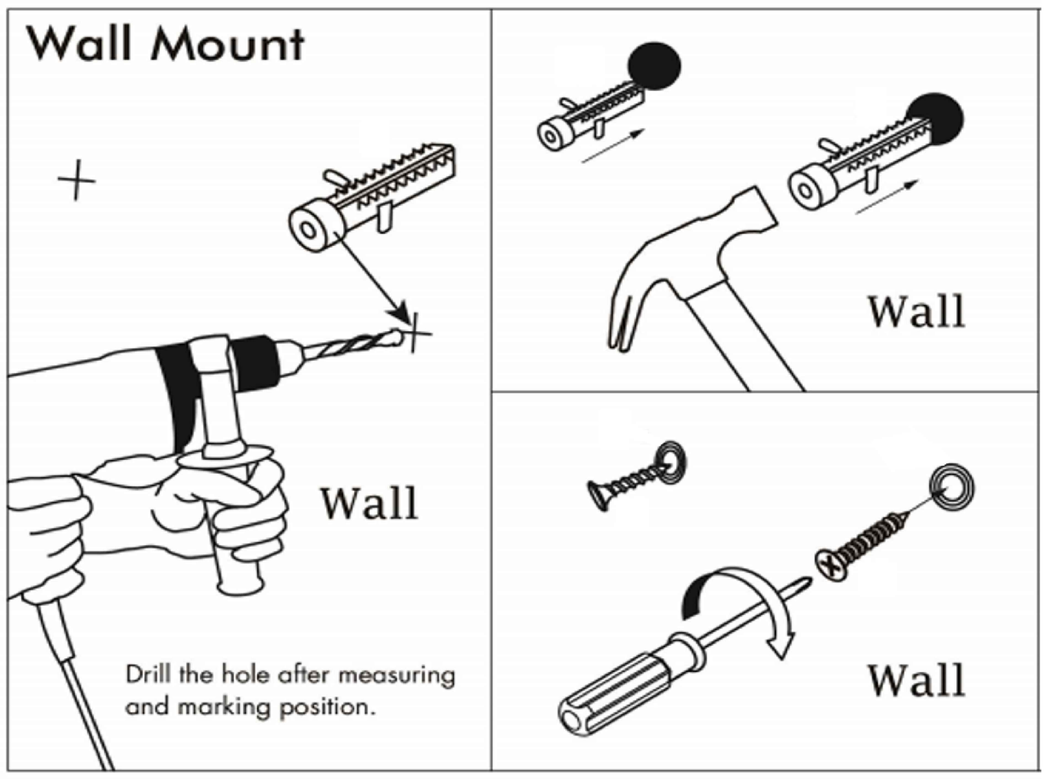

Put the expansion bolt into the hole.

Pass the matching screws throughthe "anti-rewind" and tighten themto fix them on the wall.

Use a tape drill to make holesin the wall that are suitable for theproduct screws.

