


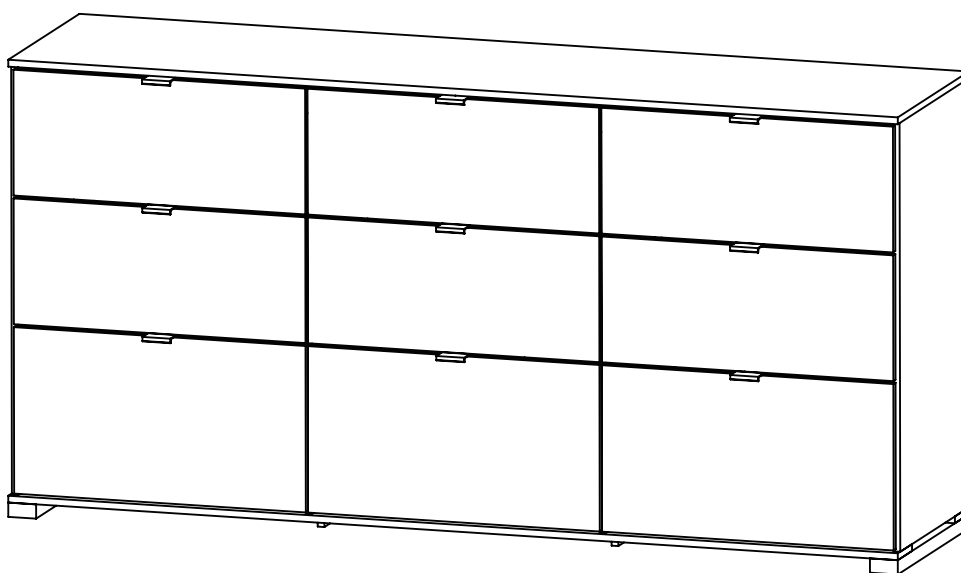

ASNG116

Wood dresser

V3.1

wlive-cs@devaise.com



IMPORTANT INFORMATION

READ CAREFULLY.

KEEP THIS INFORMATION FOR FURTHER REFERENCE.

GENERAL GUIDELINES

- Please read the following instruction carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps. Please **contact us** when further information and help are needed.

NOTES





- Please follow the assembly instructions precisely and only use the product as intended.
- If an odor is present when first opening the package, please leave the unwrapped product in a shaded and ventilated area for a few days to air out.
- Prior to assembly, please check the product for defects or missing accessories. If any defects are found or accessories are missing, do not use product as damage or injury may occur;
Please **contact us** for assistance and replacement.
- It is suggested you regularly check the products bolts and connections to ensure safe use.
- Assemble the item on a soft flat and clean surface to avoid scratches and damage.
- It is recommended that two people assemble this product.

WARNINGS

- During assembly, keep parts and packaging materials away from children and pets as there could cause injury and are a potential choking hazard.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- Please open the item slowly and cautiously to avoid pinching your hands by metal joints, especially children.


ANTI-TIP WARNING

- Serious or fatal crushing injuries can occur from furniture tip-over. To prevent this furniture from tipping over it must be permanently fixed to the wall.
- Since different wall materials require different types of fixing device, for advice on suitable fixing systems, contact your local specialized dealer.

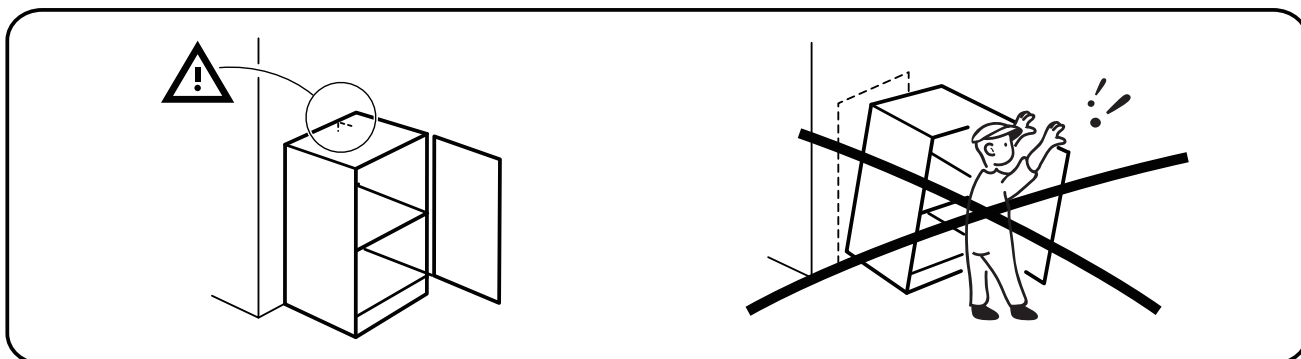
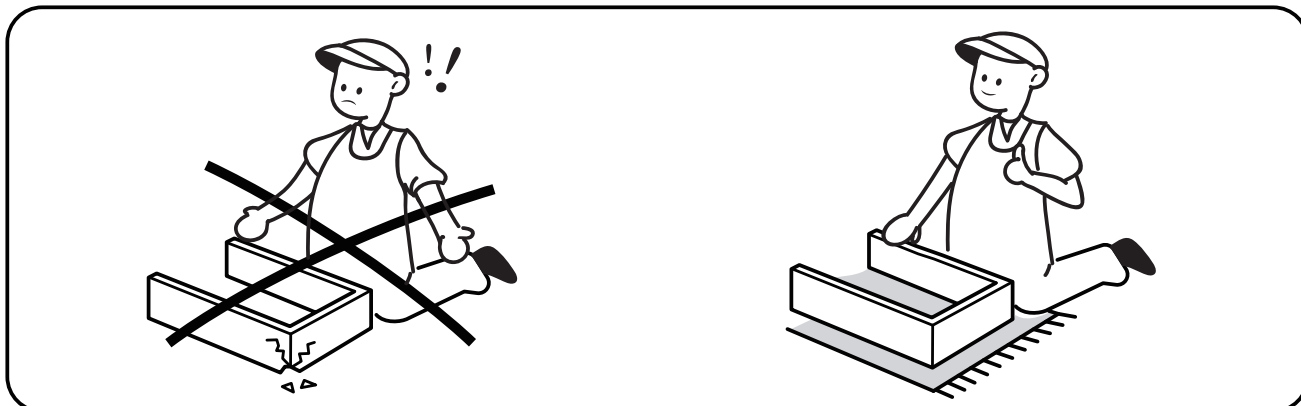
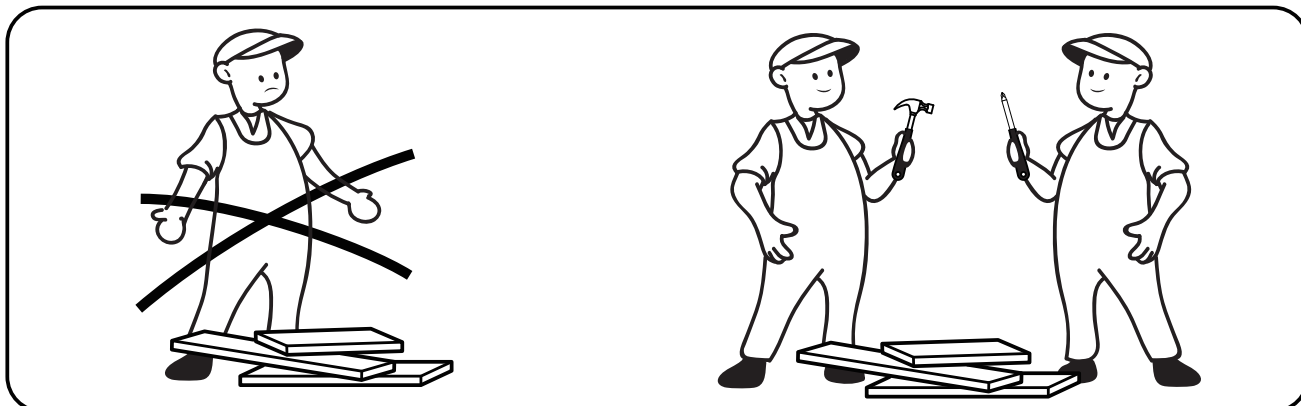
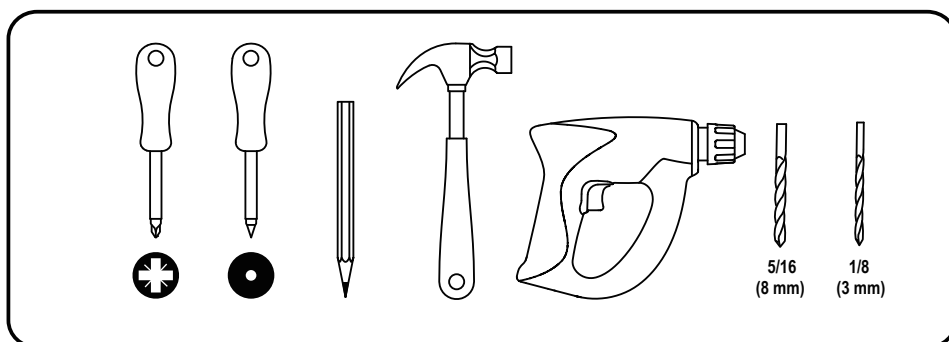


- If you have any further questions, please feel free to contact us by email or official website: **wlive-cs@devaise.com**
We will reply ASAP.
- Before installation, please make sure you have all the hardware, the serial numbers are properly labeled corresponding to the list, and the quantity is correct.
- Enjoy your new purchase!

EXPLODED DRAWING


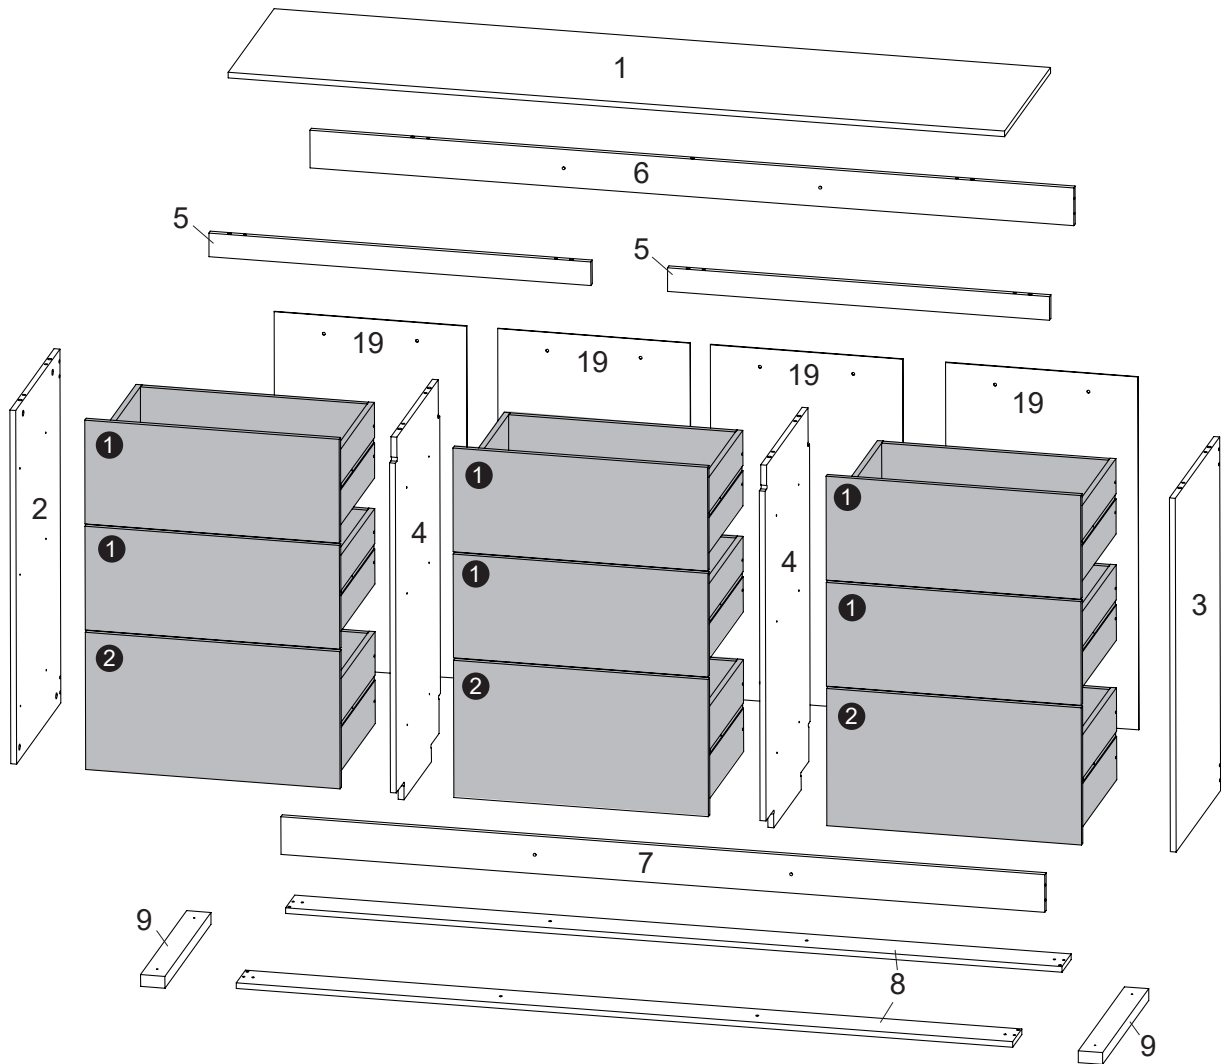


1

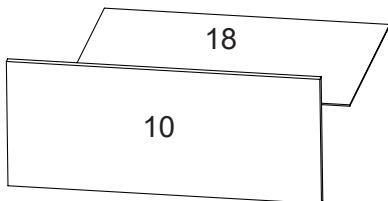








x6

2

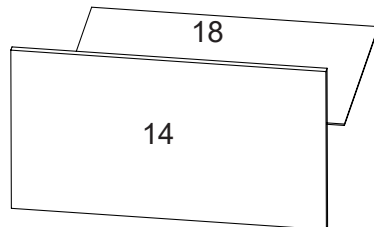




x3

PARTS

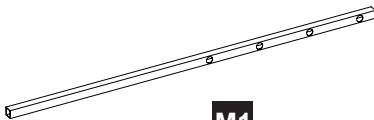 A X54	 B X18	 C X54
 D X16 M5x50	 E X18	 F X9
 G X18 M4x11	 H X72 M4x10	 I X40 M4x30
 J X16 M4x12	 K X54	 L X1
 M1	 M2	 M3 X2
		 N X1

REMARK

MINIFIX POSITION



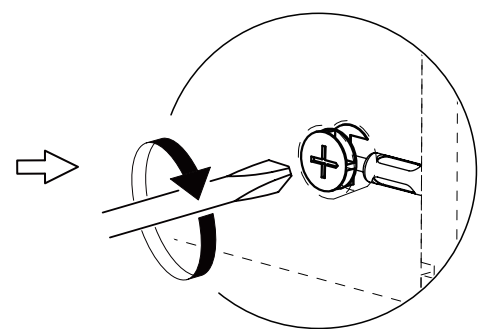
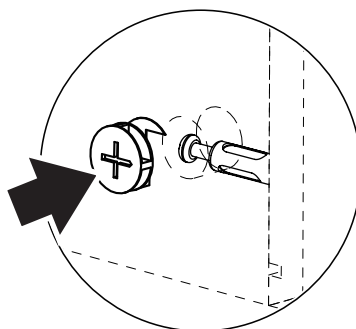
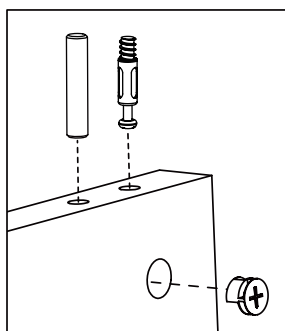


1


B X8

**REMARK**

Put a blanket under the board to avoid scratch or damage.

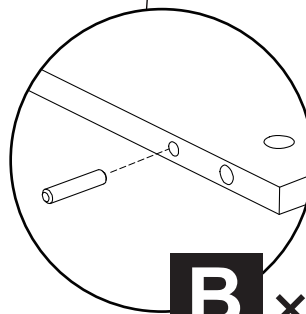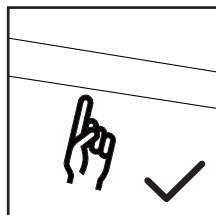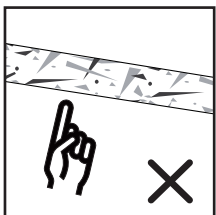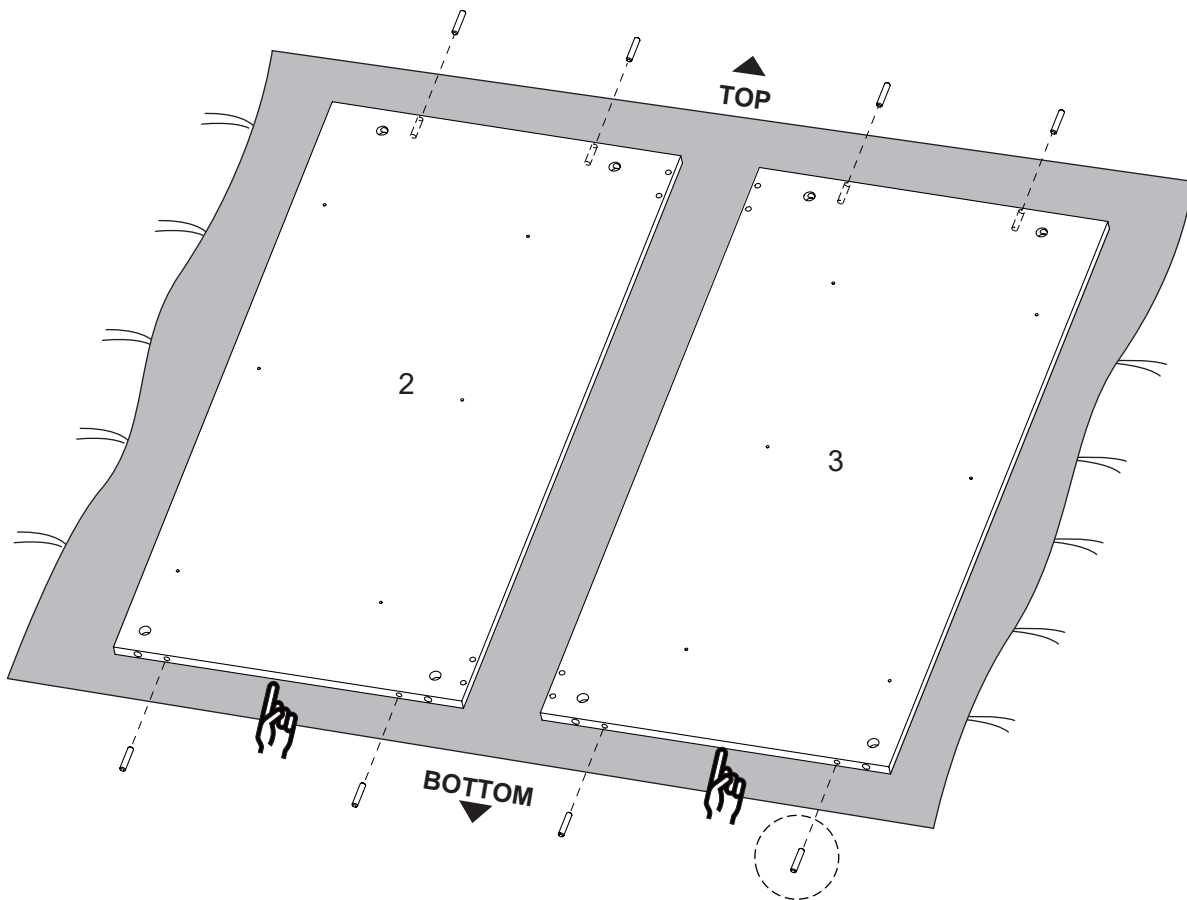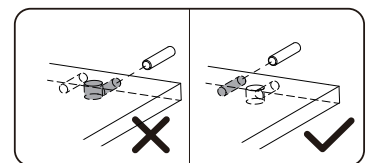**B** x8



2

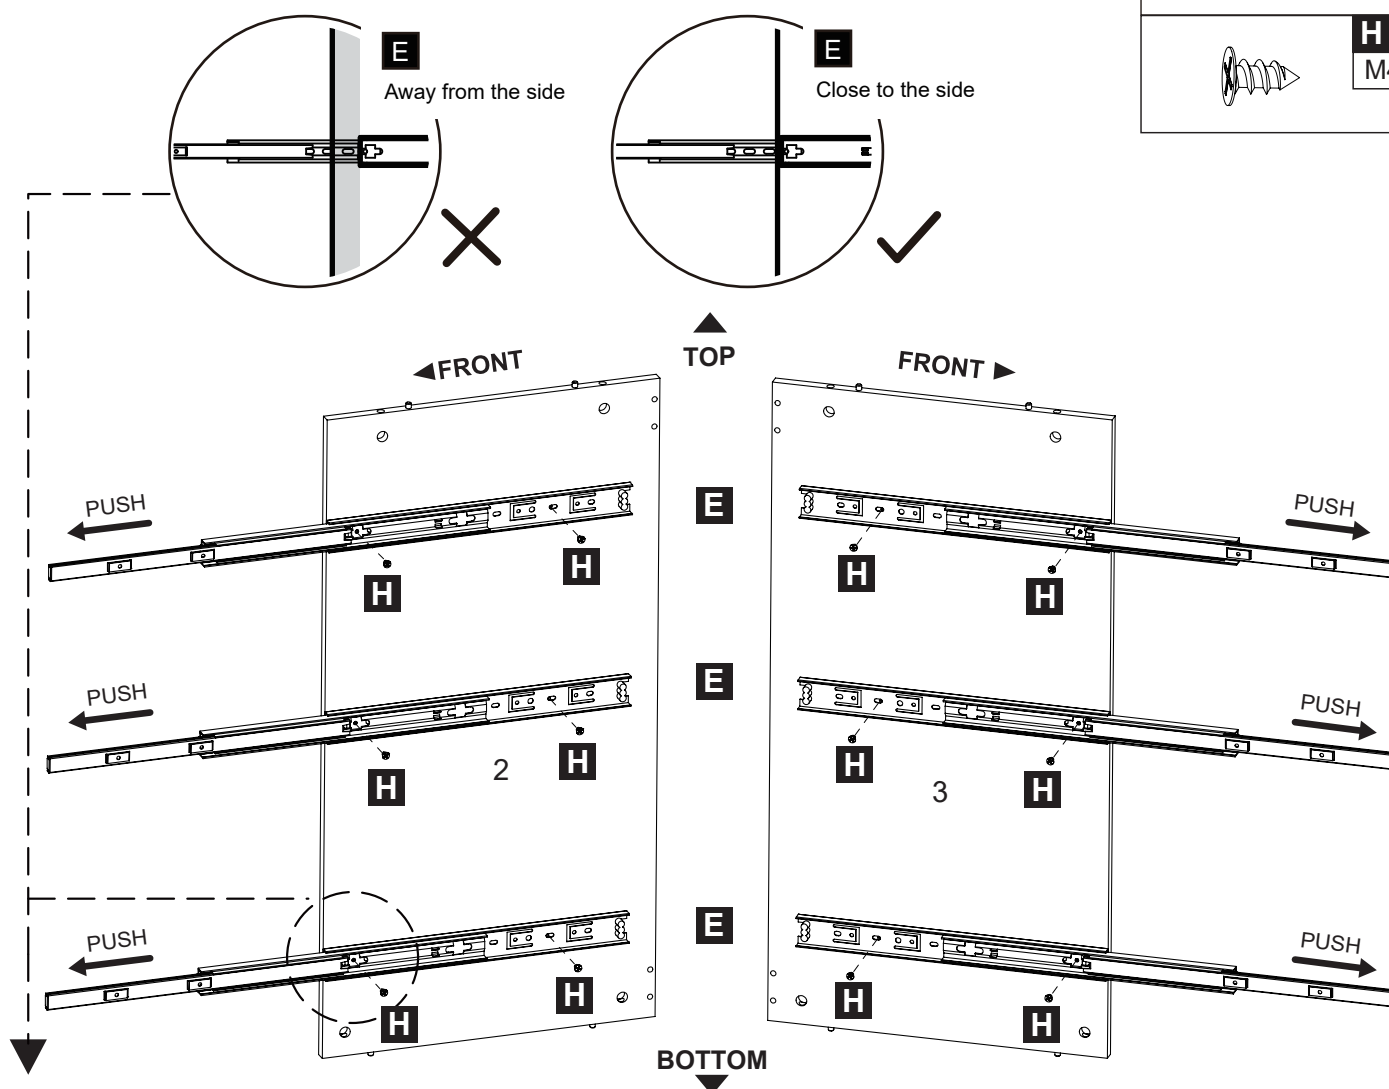

E X6
H X12 M4x10



REMARK

1. When installing, please make sure the screws are flattened, not crooked; Otherwise the drawers will not be installed perfectly.
2. Please locate the holes from the back of part **E**.
3. Then please install part **H** from the front of part **E**.
4. Please install hole #2 first, then hole #10.

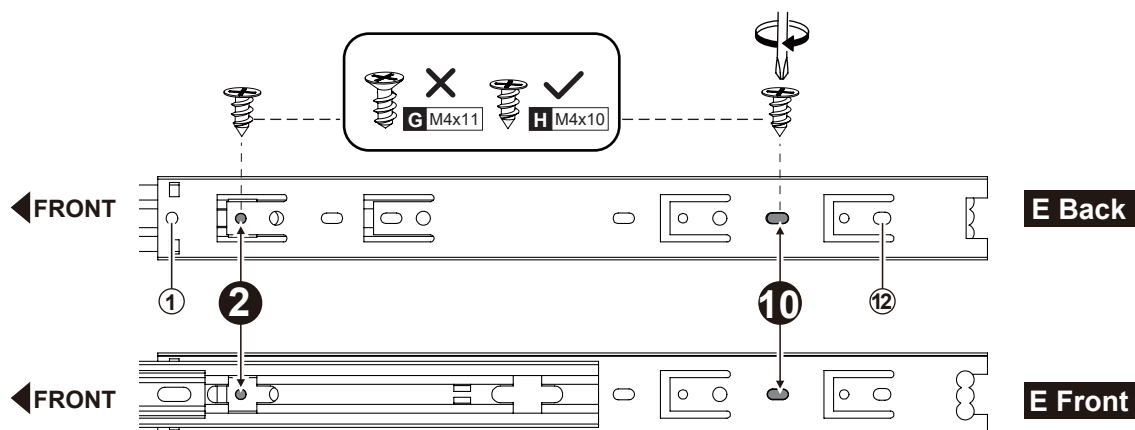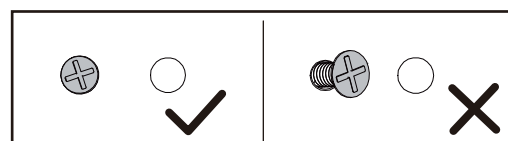

3




B X4

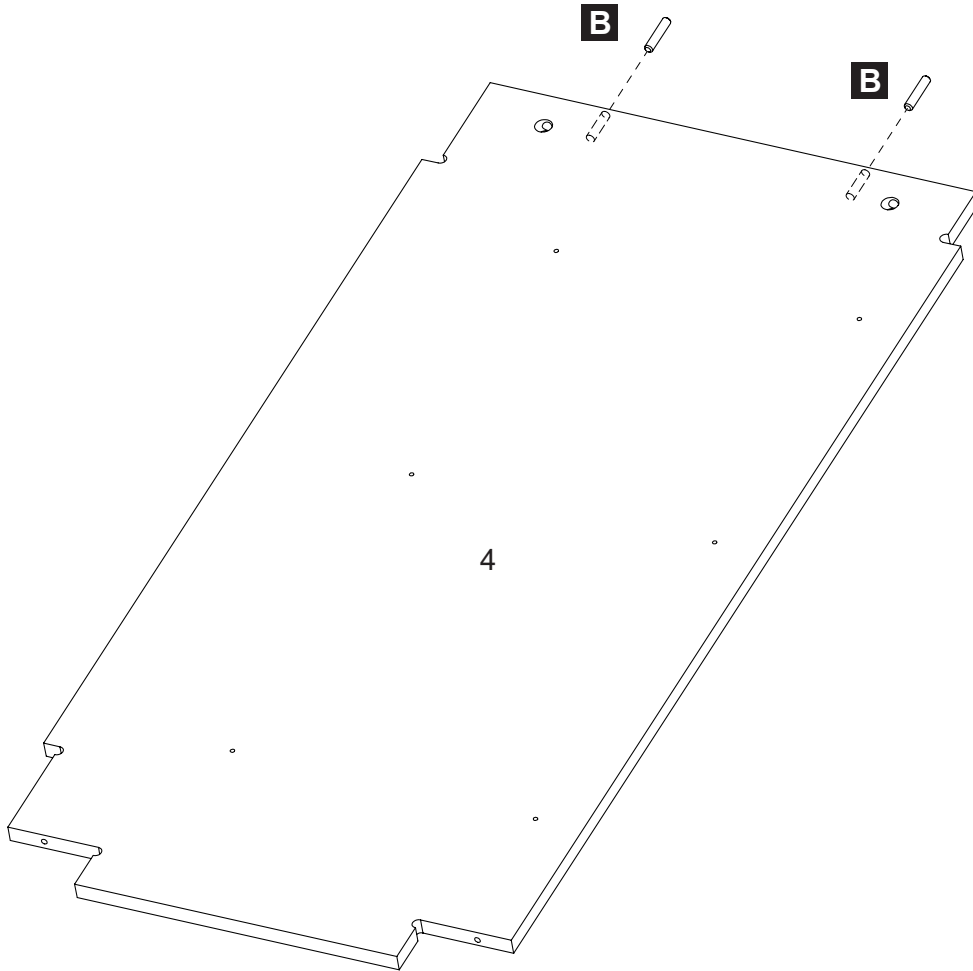

×2



4

	E X6
	H X12 M4x10

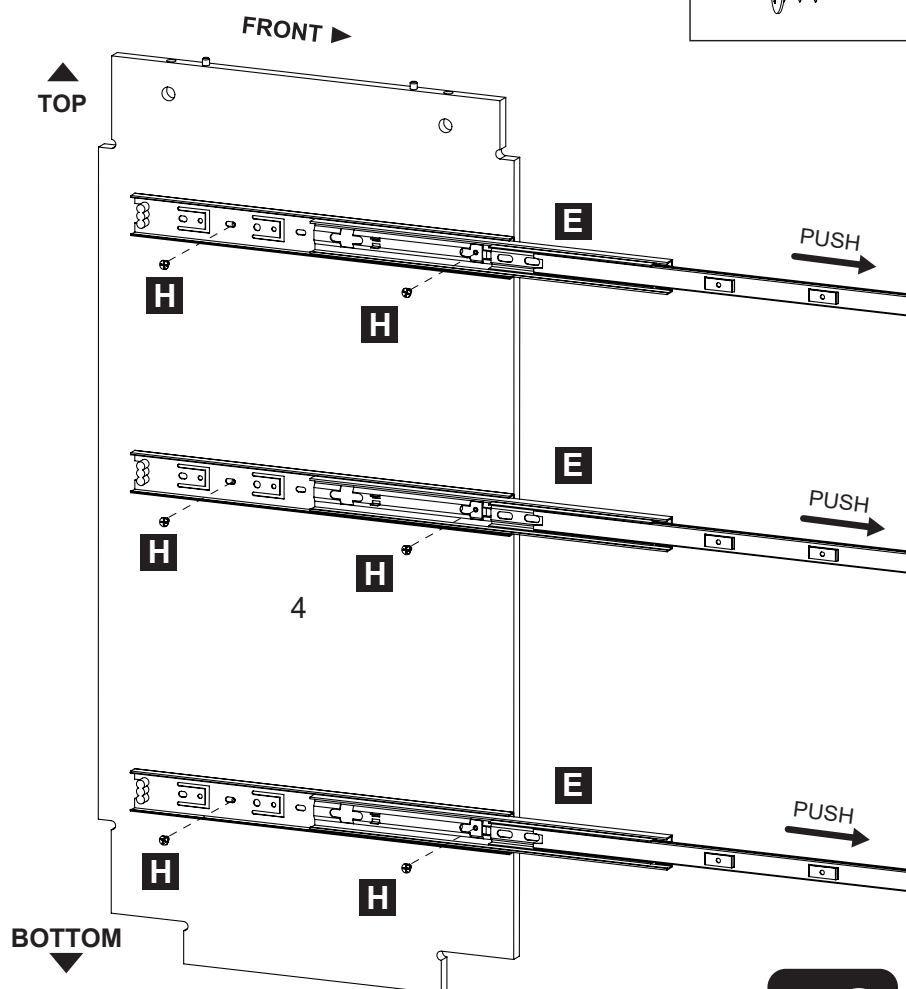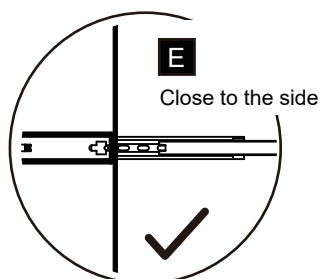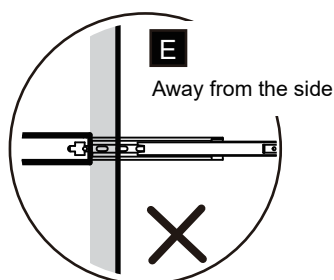



REMARK

1. When installing, please make sure the screws are flattened, not crooked; Otherwise the drawers will not be installed perfectly.
2. Please locate the holes from the back of part **E**.
3. Then please install part **H** from the front of part **E**.
4. Please install hole #2 first, then hole #10.

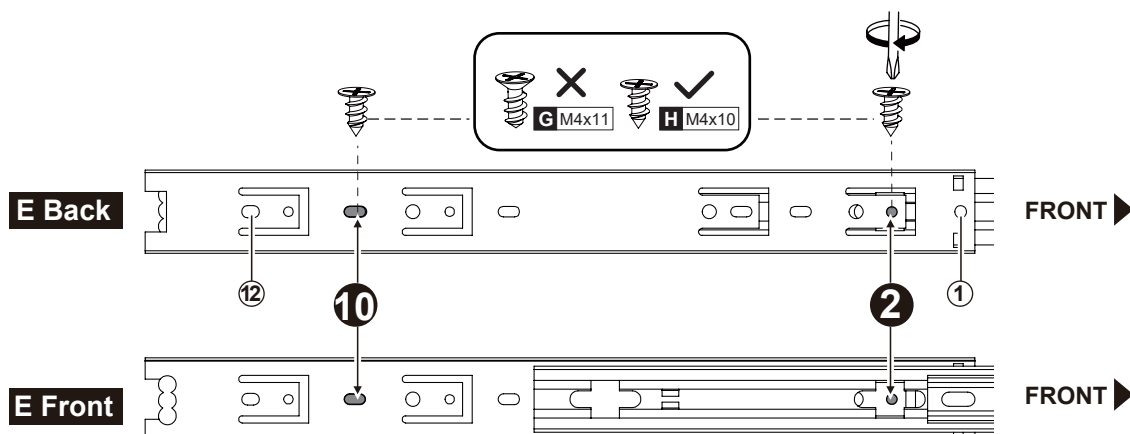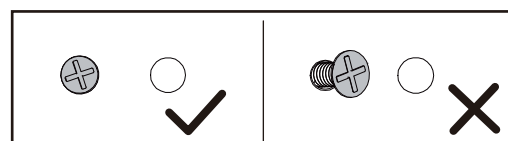

5



	E X6
	H X12 M4x10

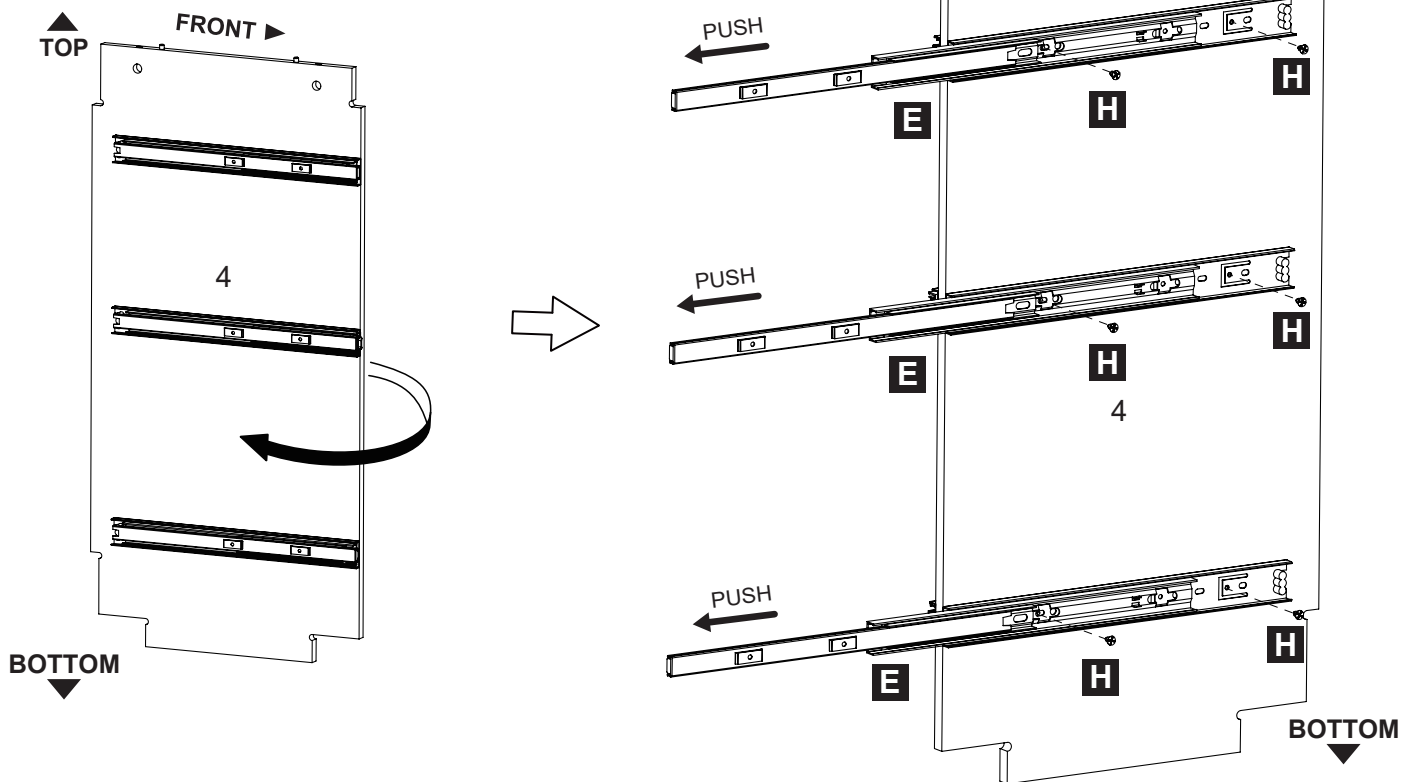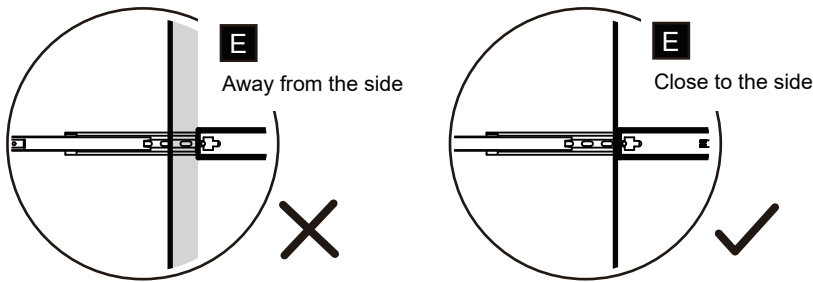

REMARK


1. When installing, please make sure the screws are flattened, not crooked; Otherwise the drawers will not be installed perfectly.
2. Please locate the holes from the back of part **E**.
3. Then please install part **H** from the front of part **E**.
- ⚠ 4. Please install hole #11 first, then hole #5.

×2

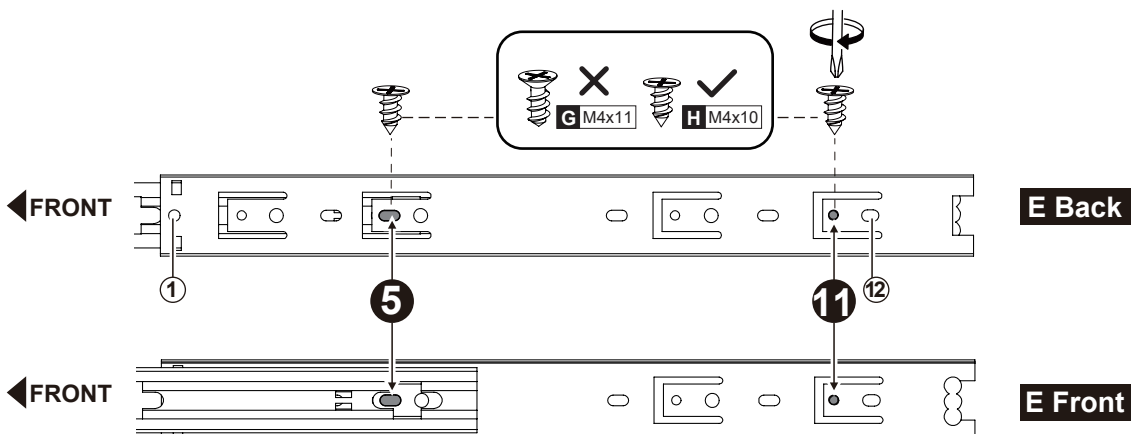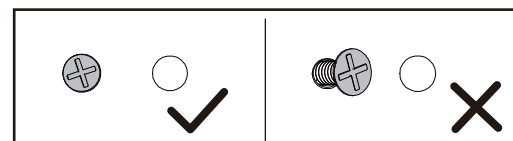

6





A X14



REMARK




Please do not screw **A** too deep or too shallow.

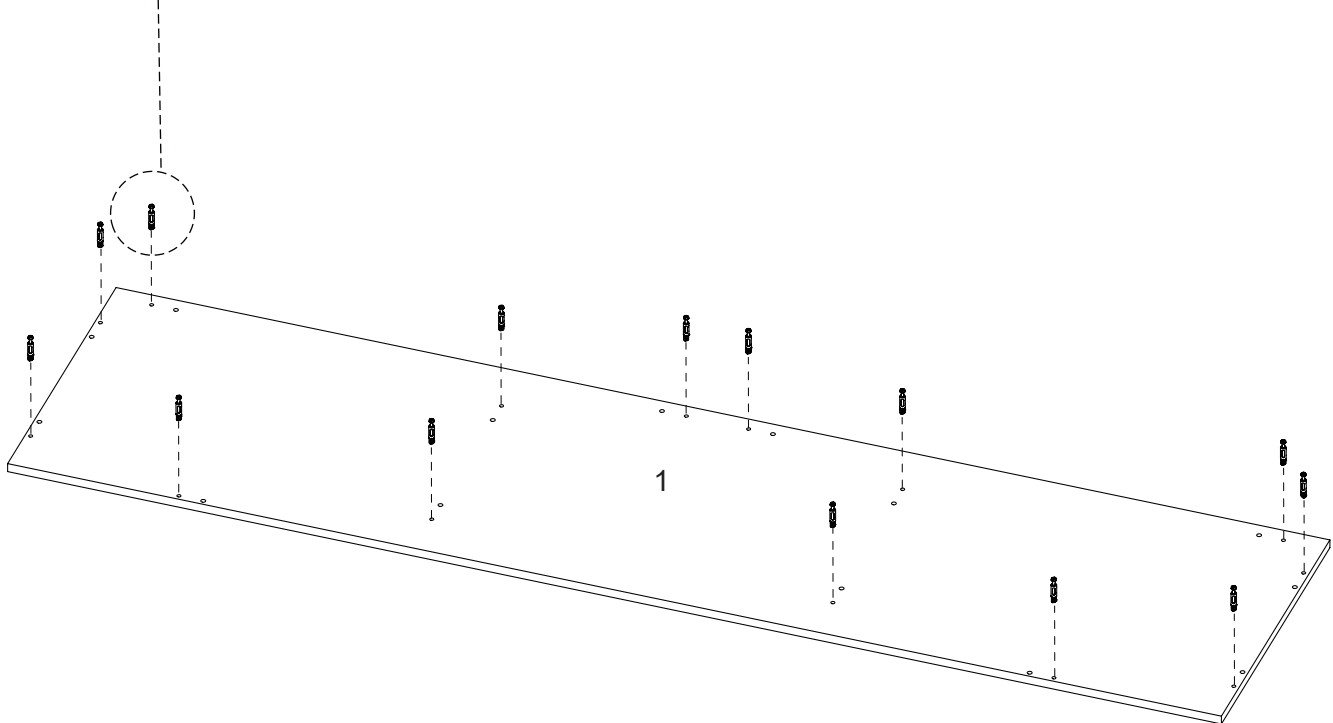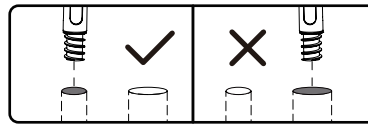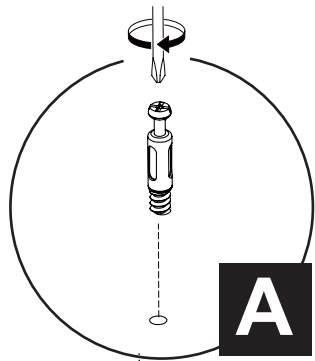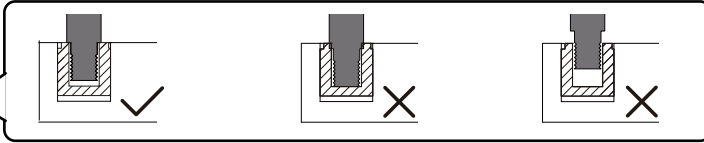


7






B X6



B x6


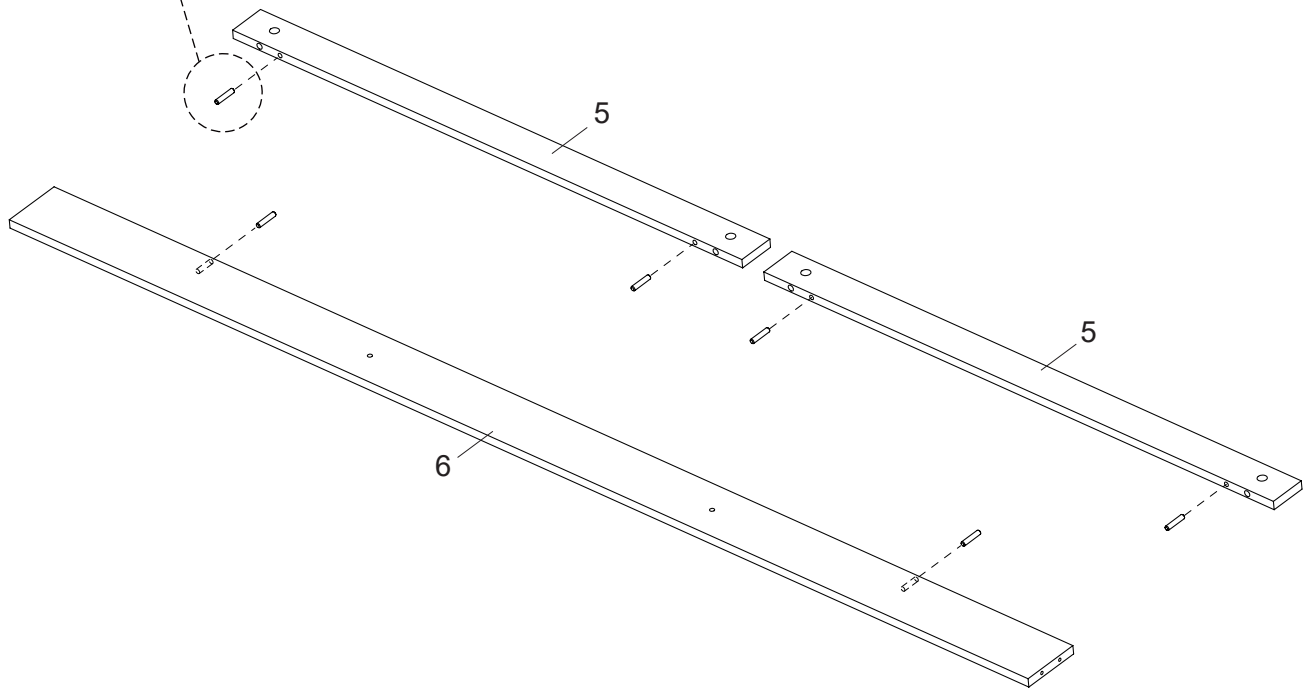


8

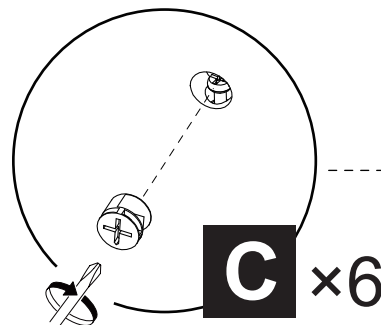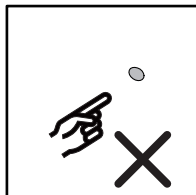
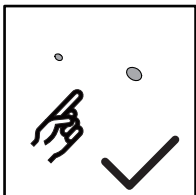
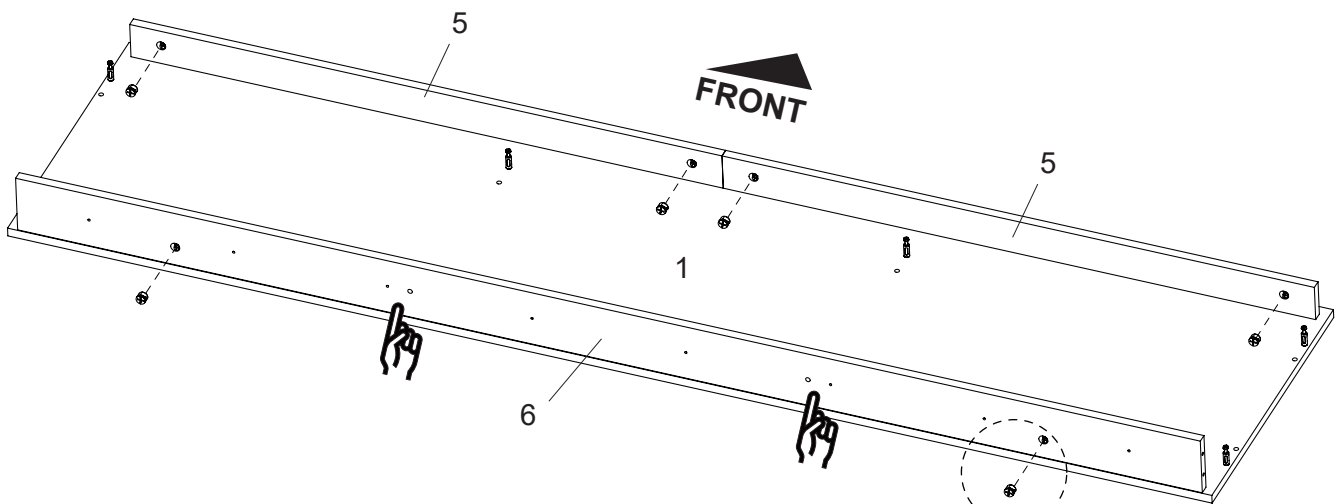
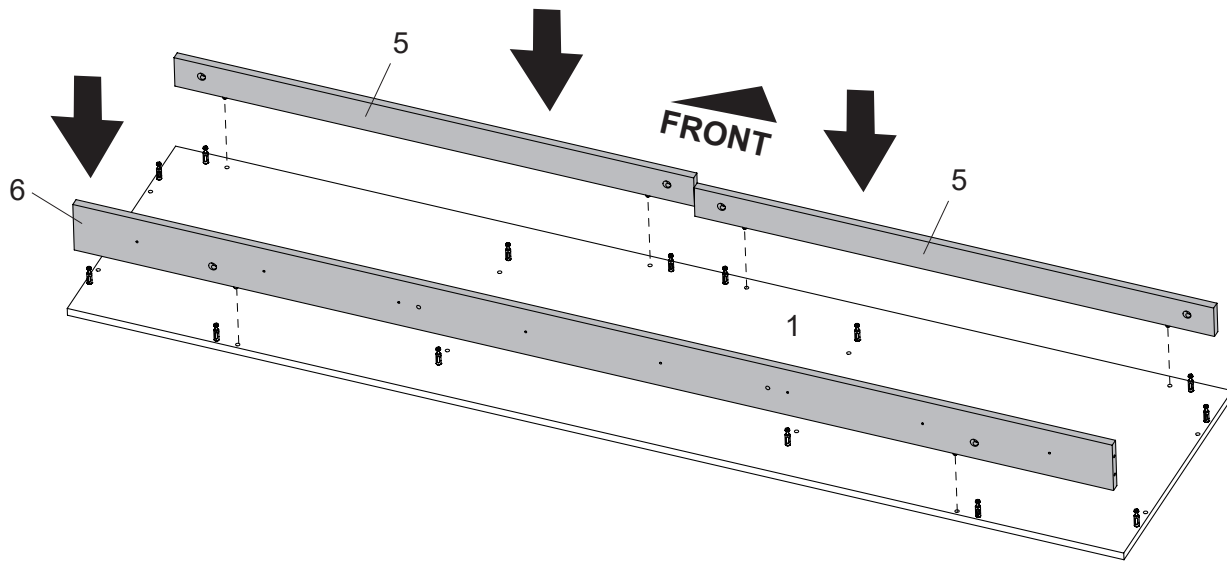

C X6

C ×6

9


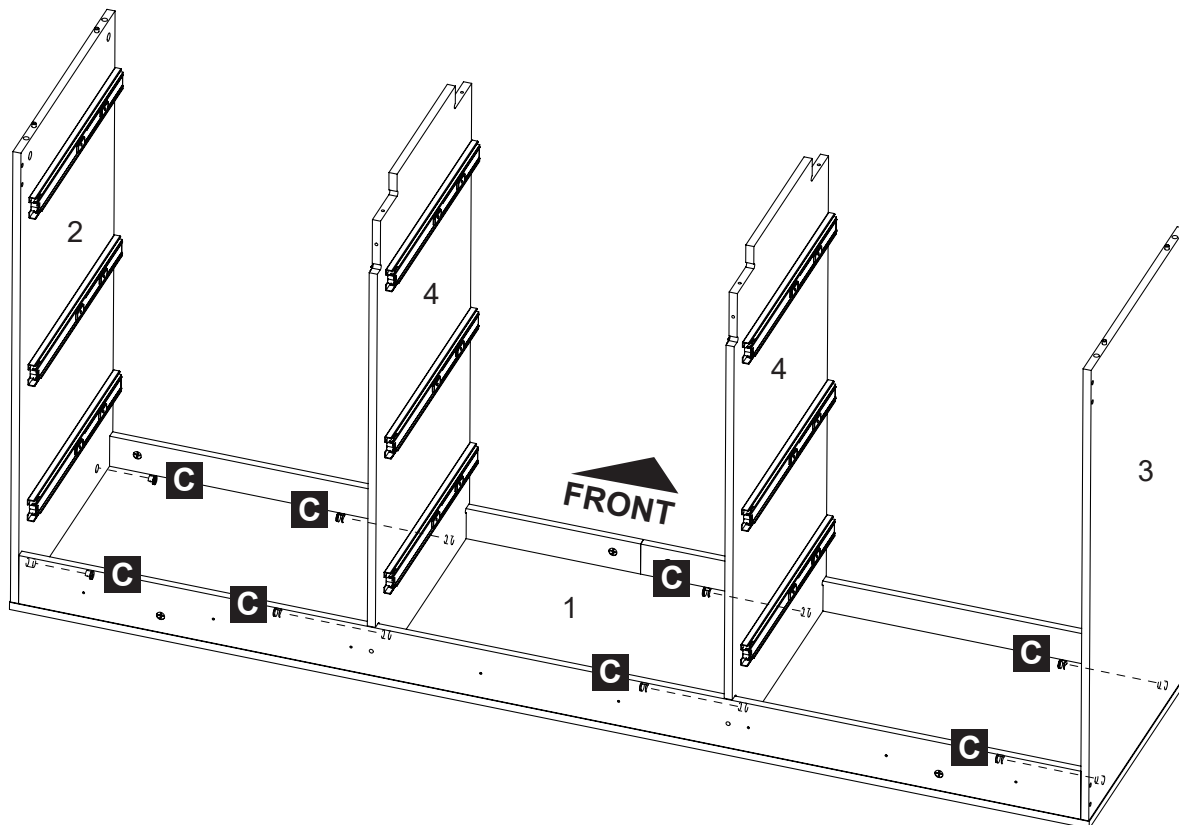
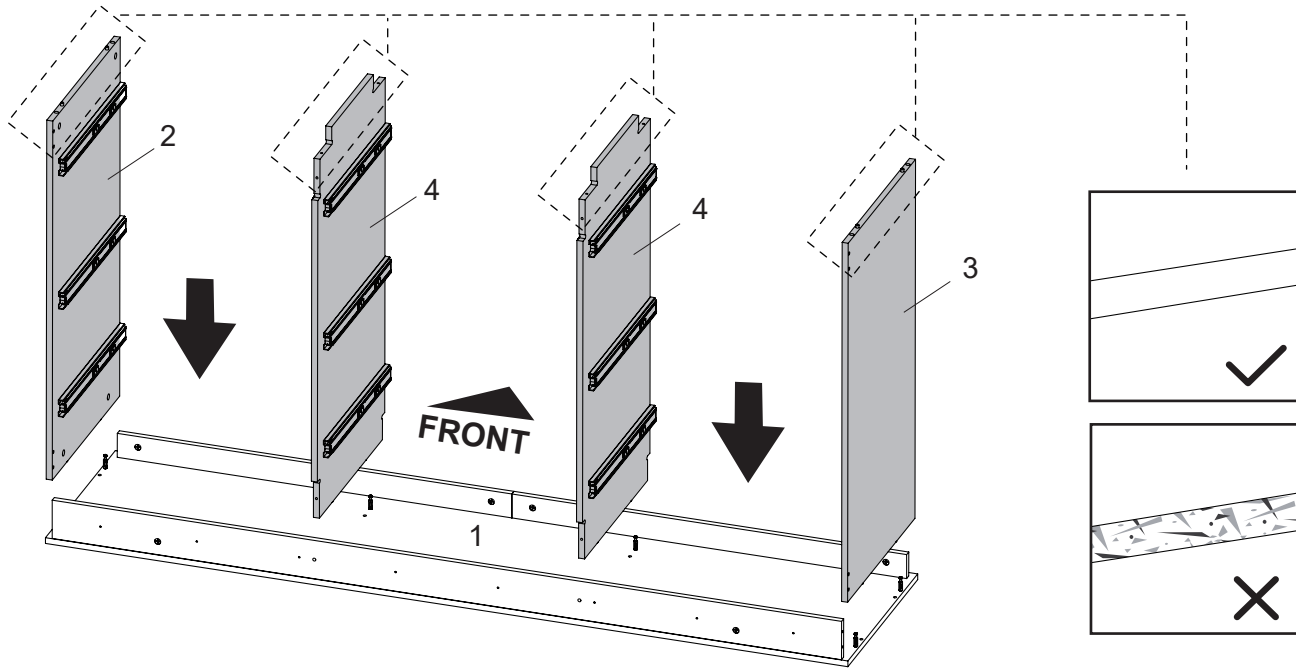
C X8

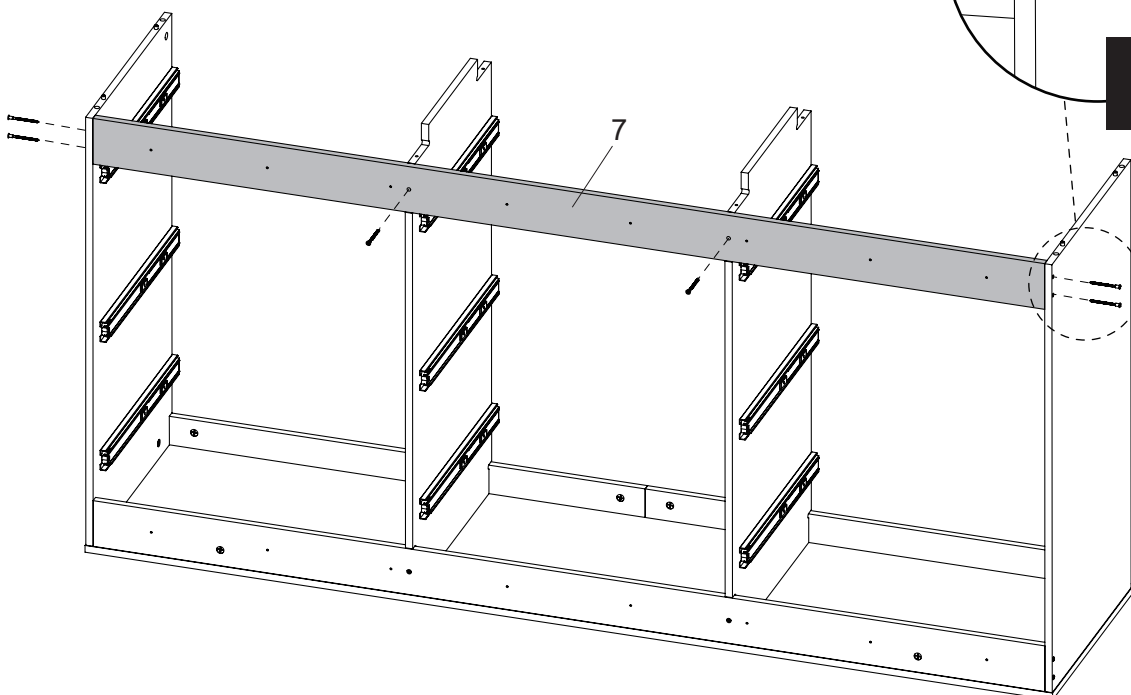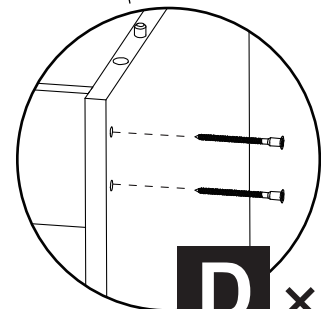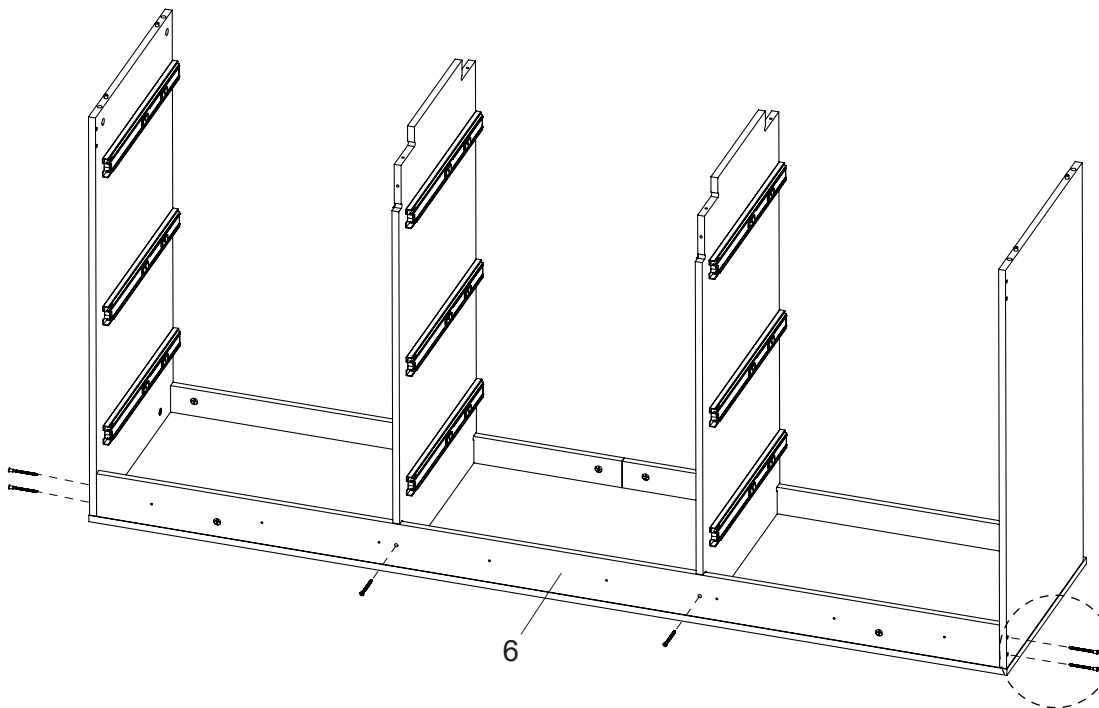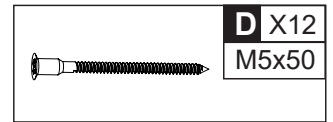




10





11

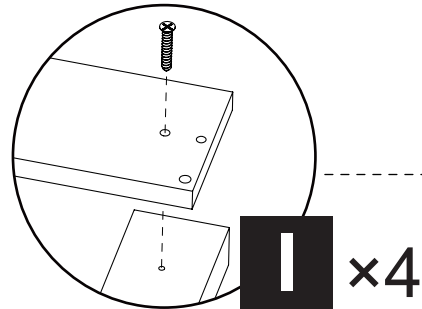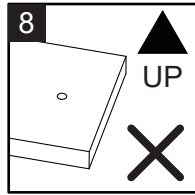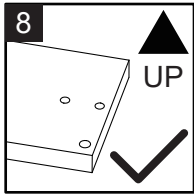



	A X4
	I X4 M4x30

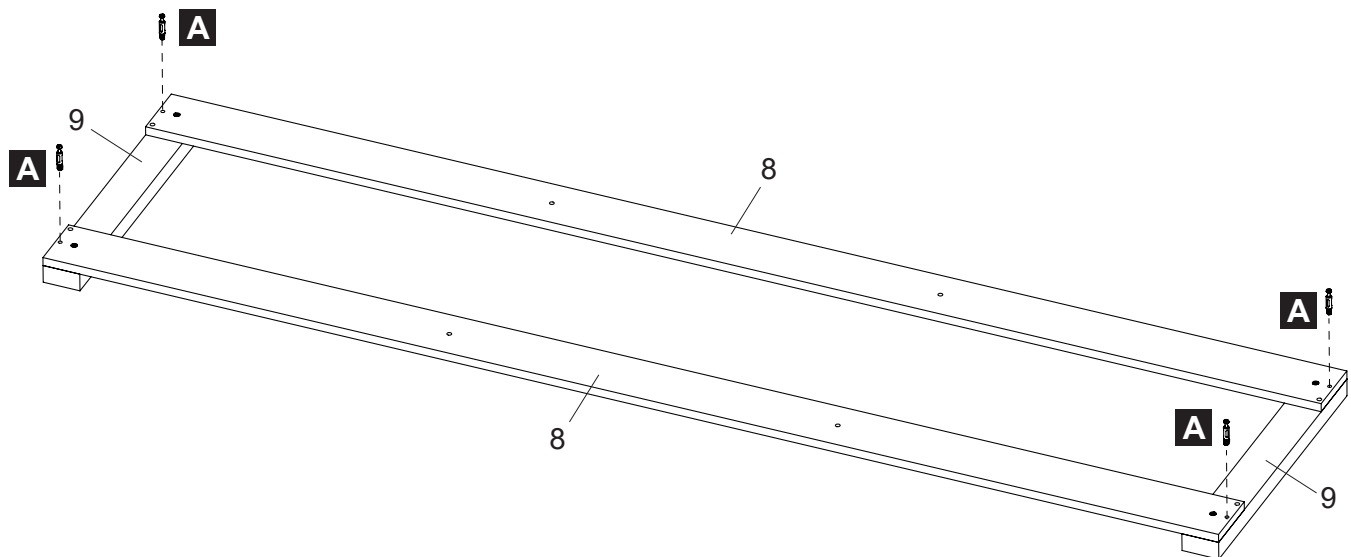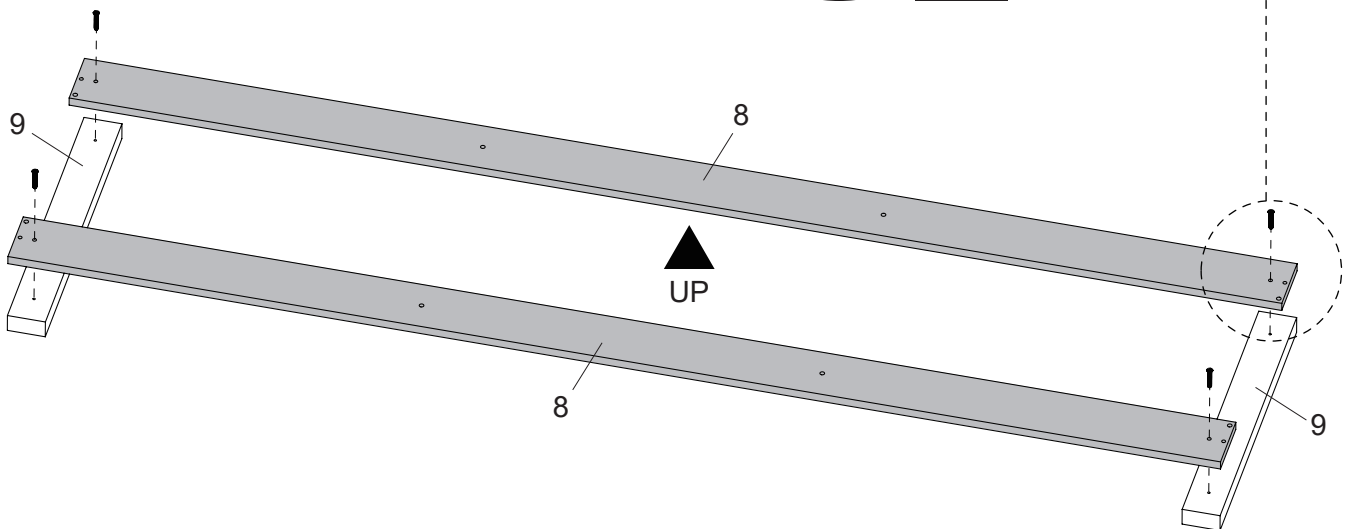




12

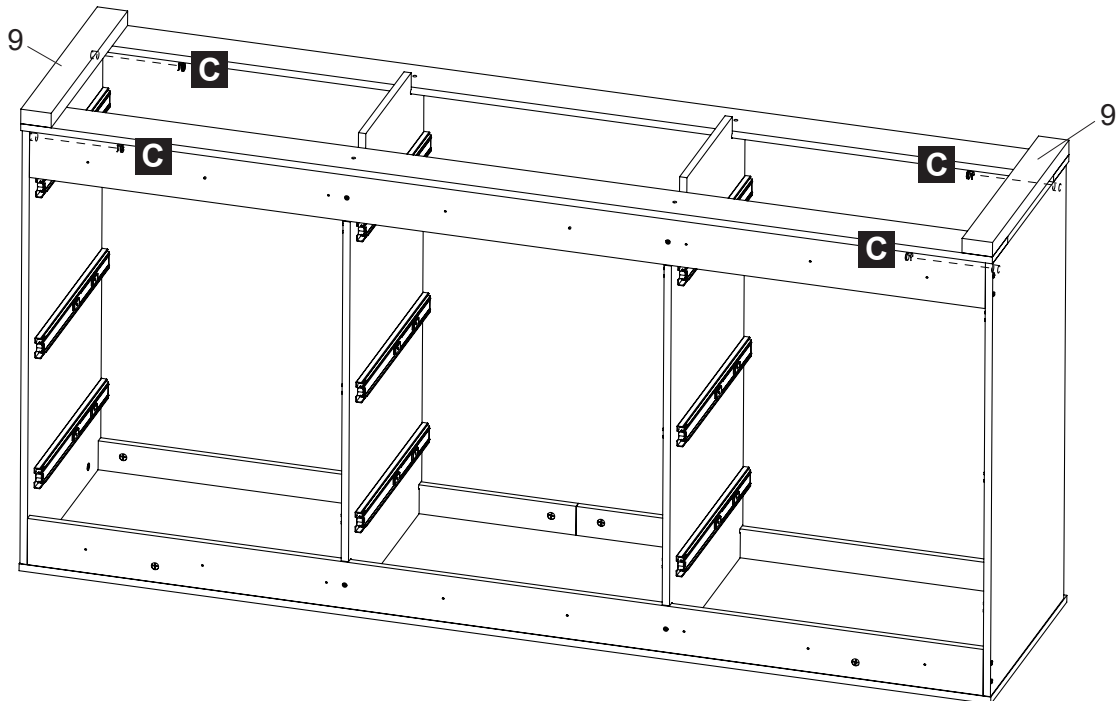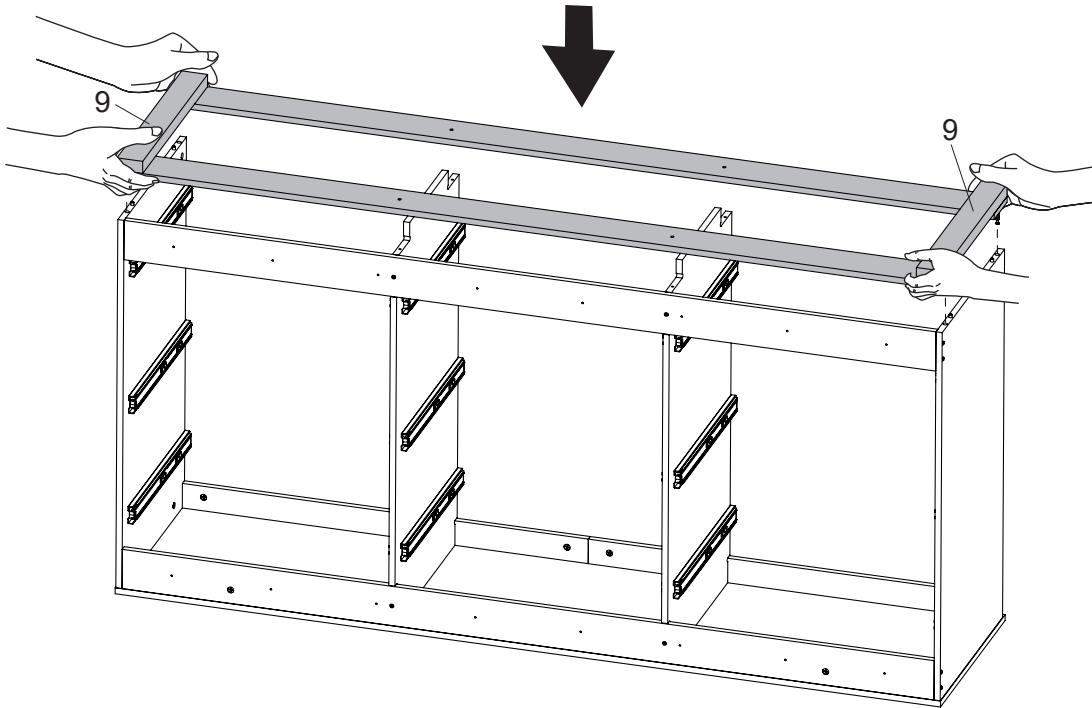
C X4


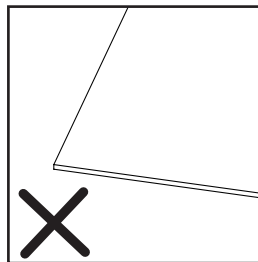
13

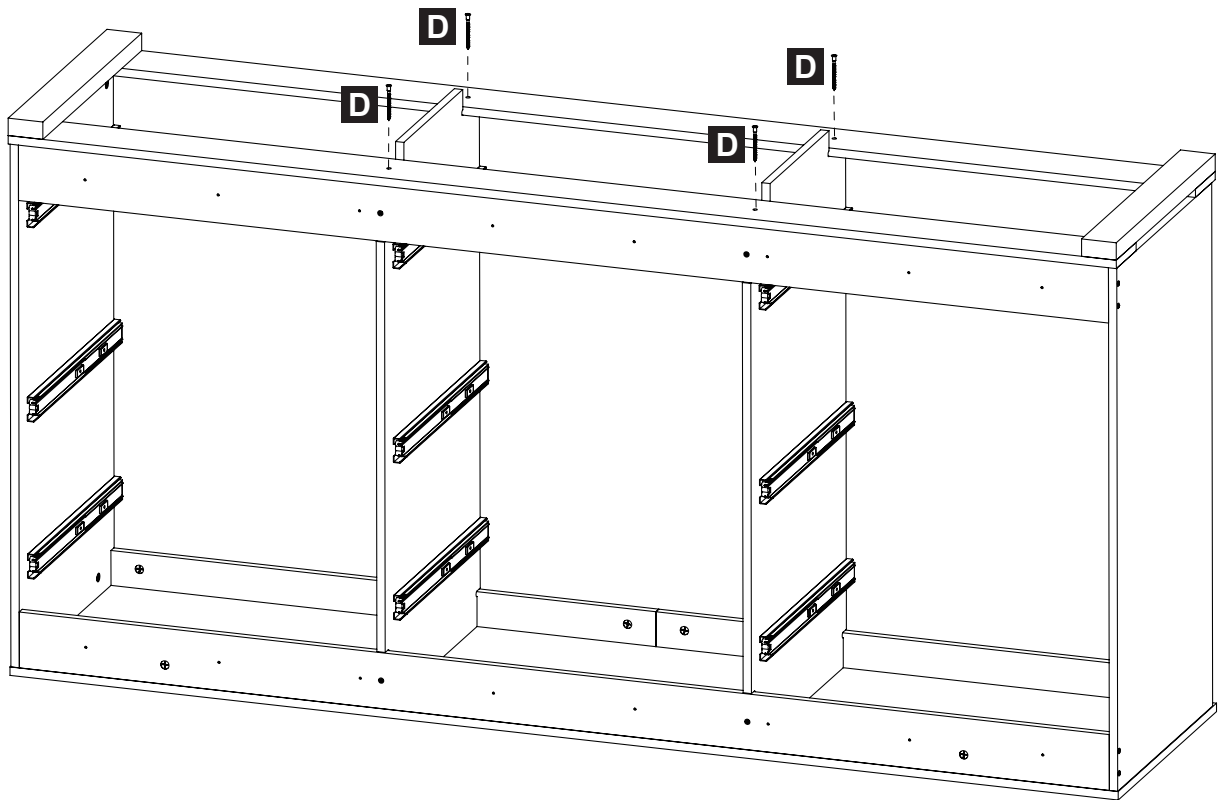

14

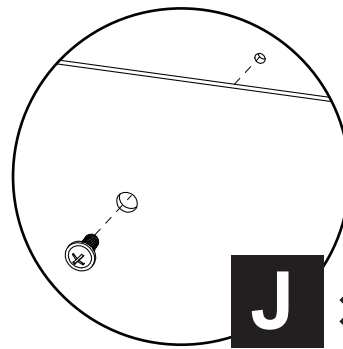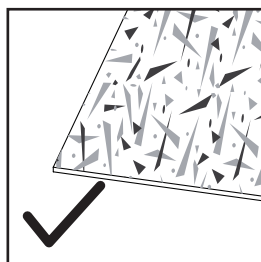
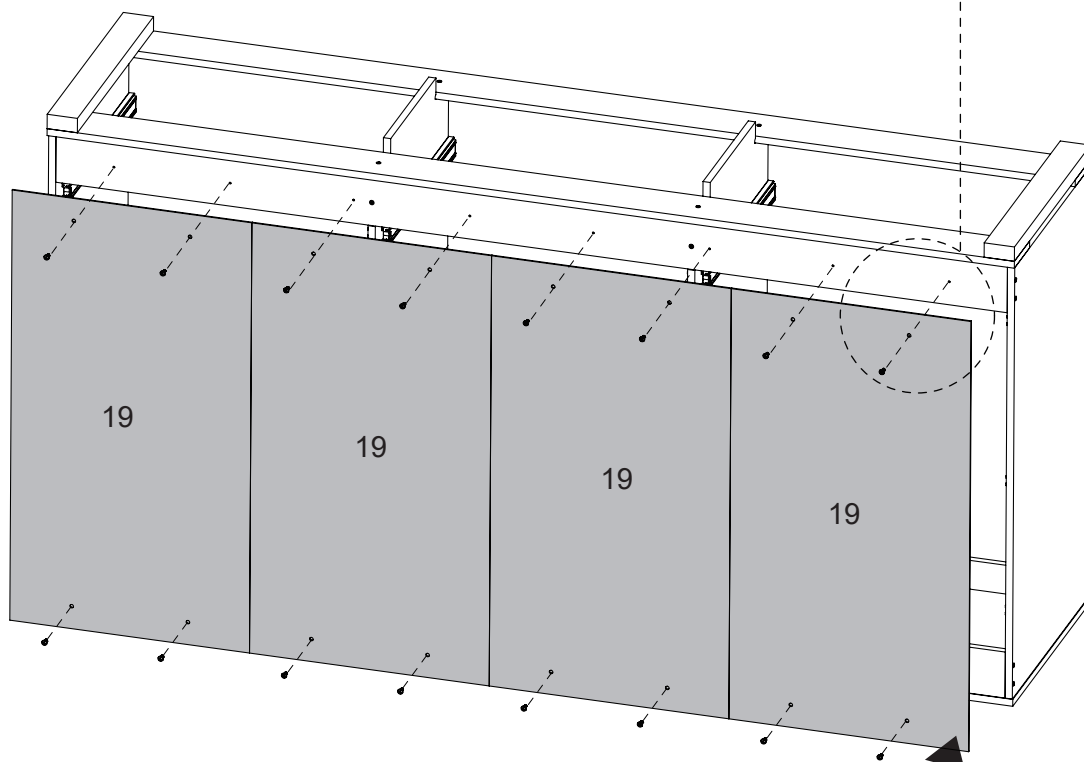

J X16
M4x12

J x16


origin wood - colored






pure colored

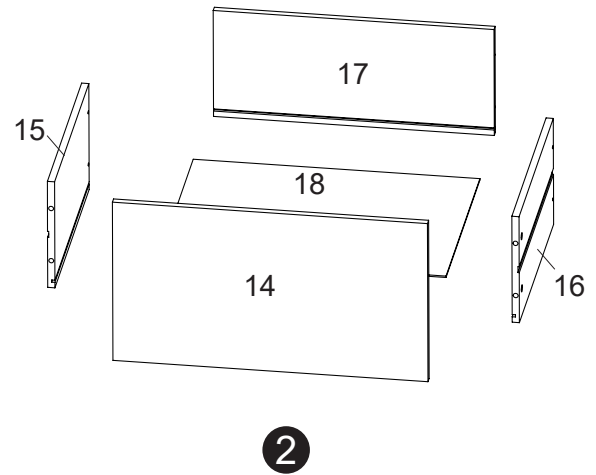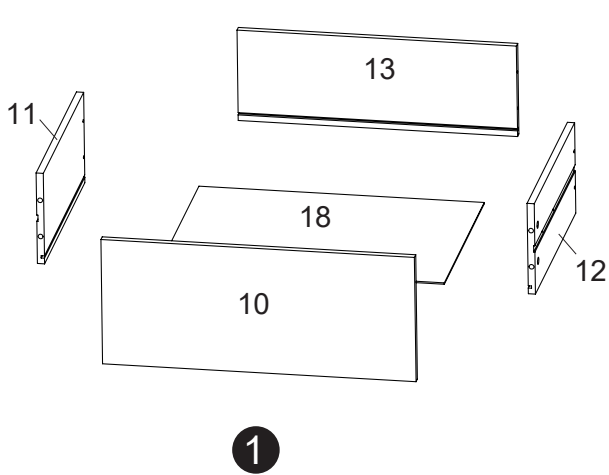REMARK





15

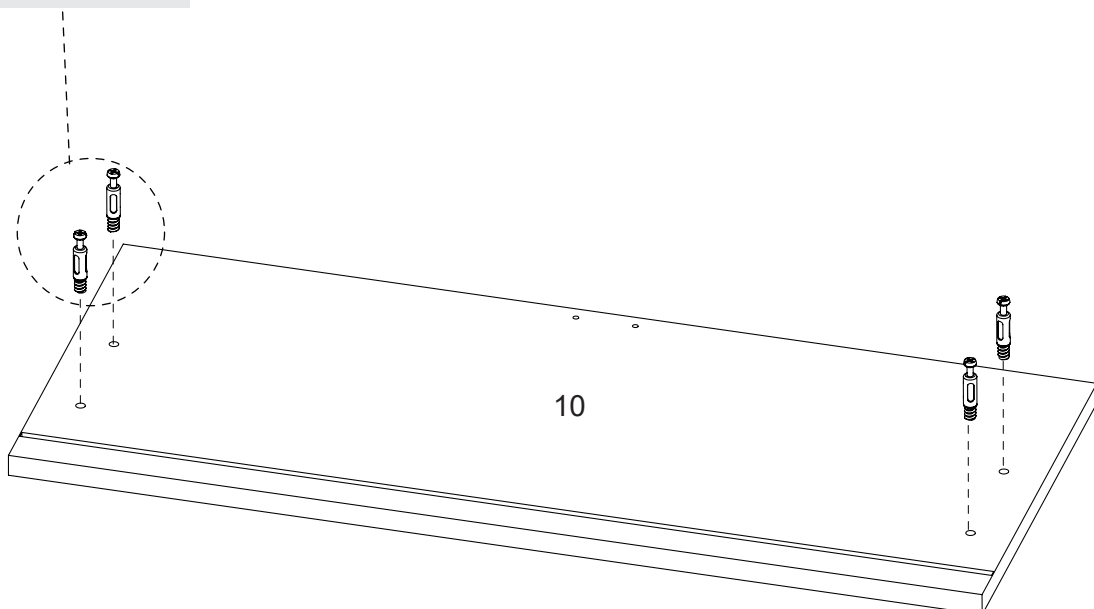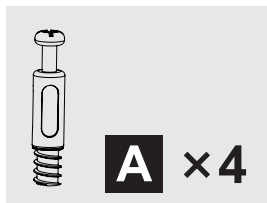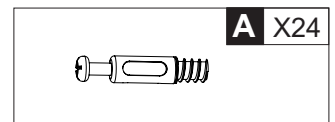

x6


16

C X24

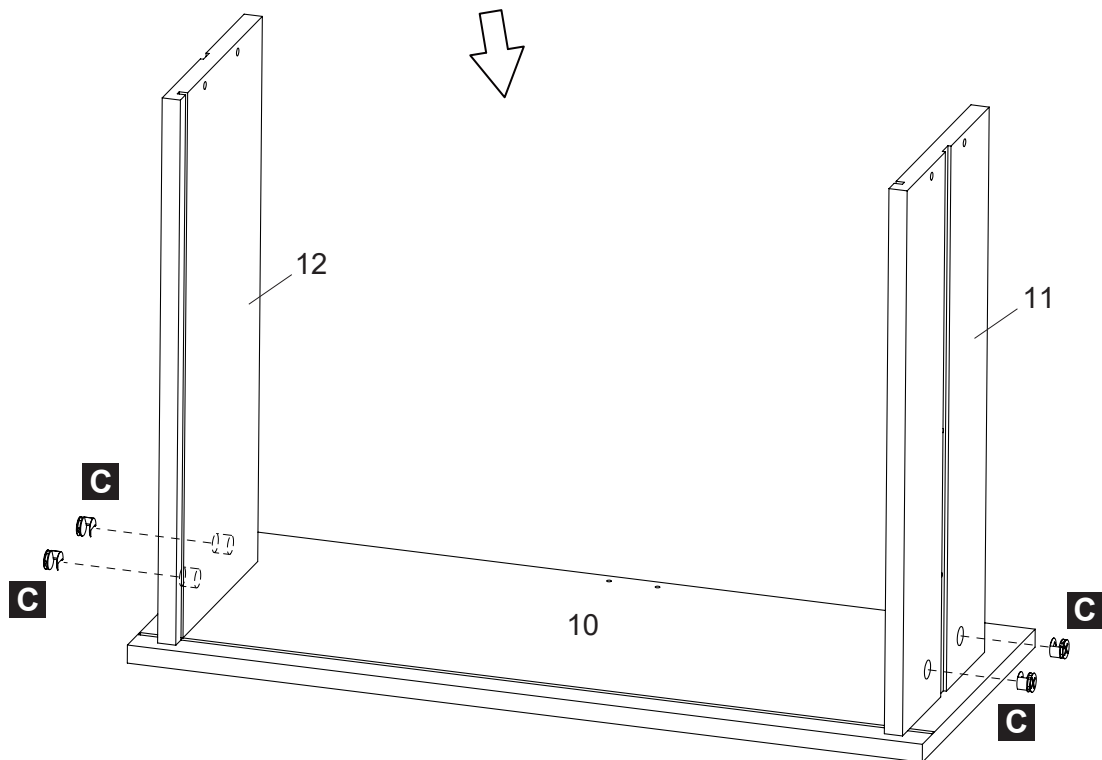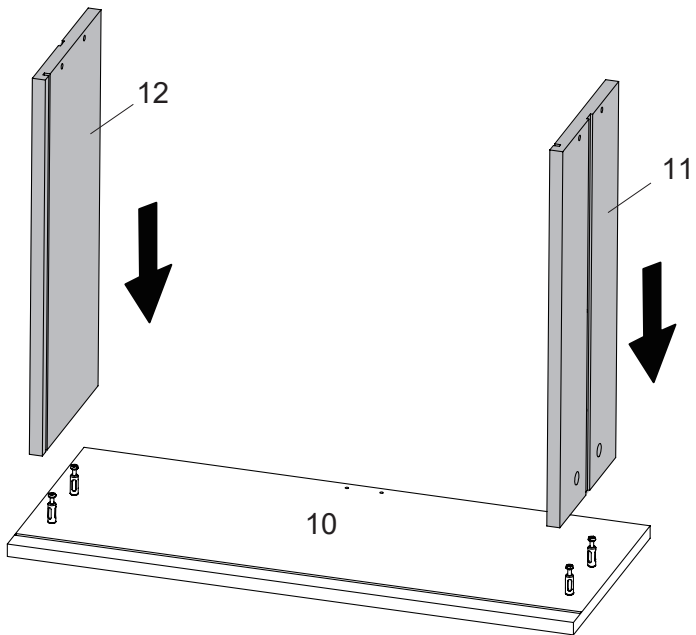




×6

17

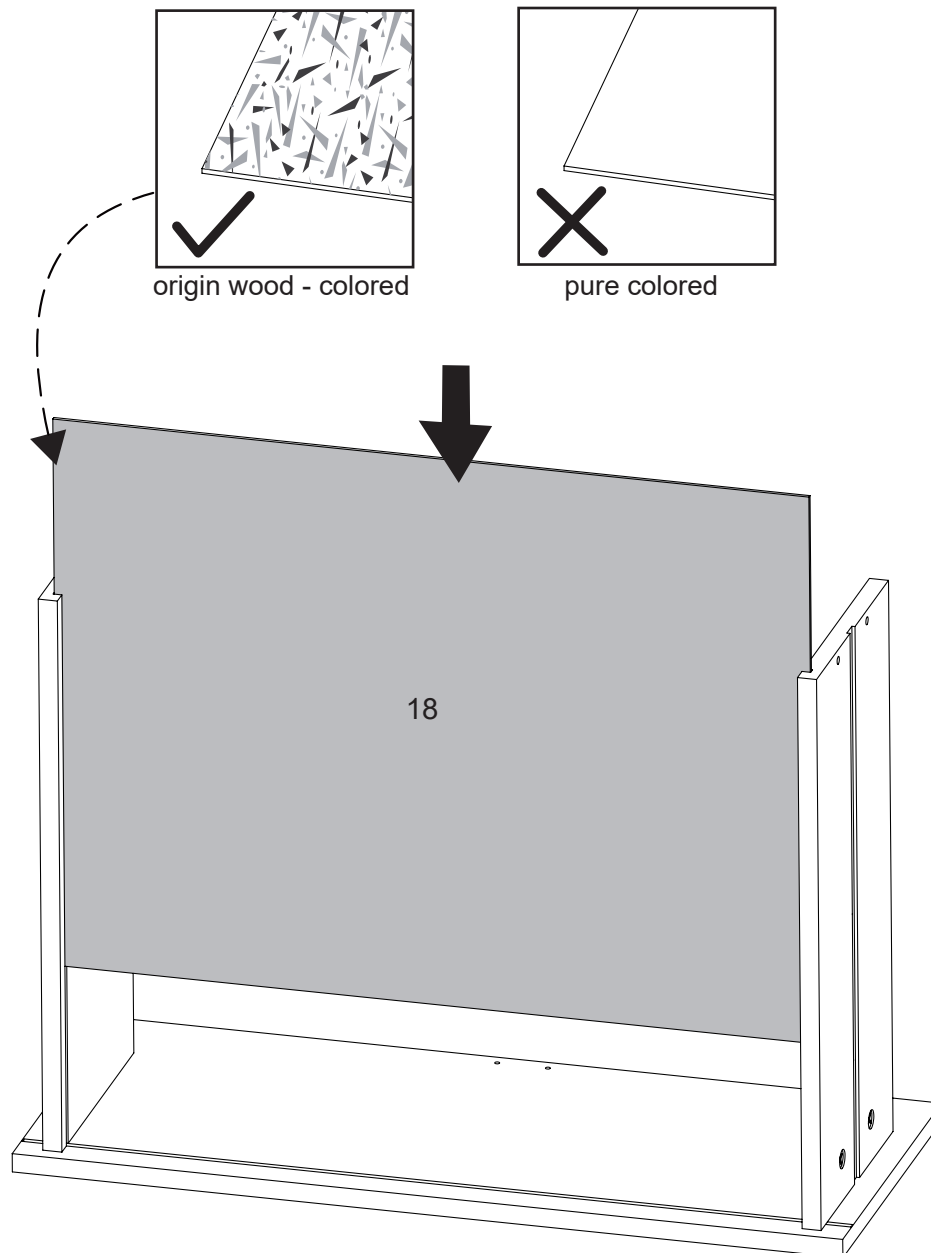


×6

18

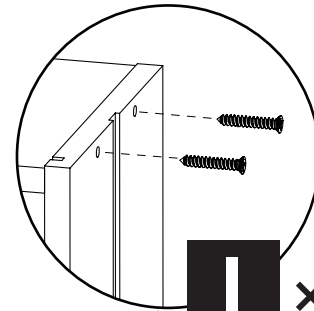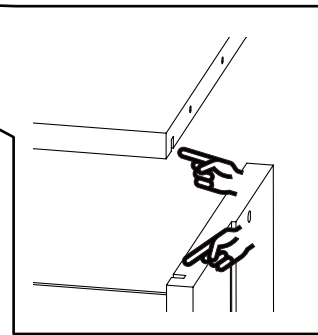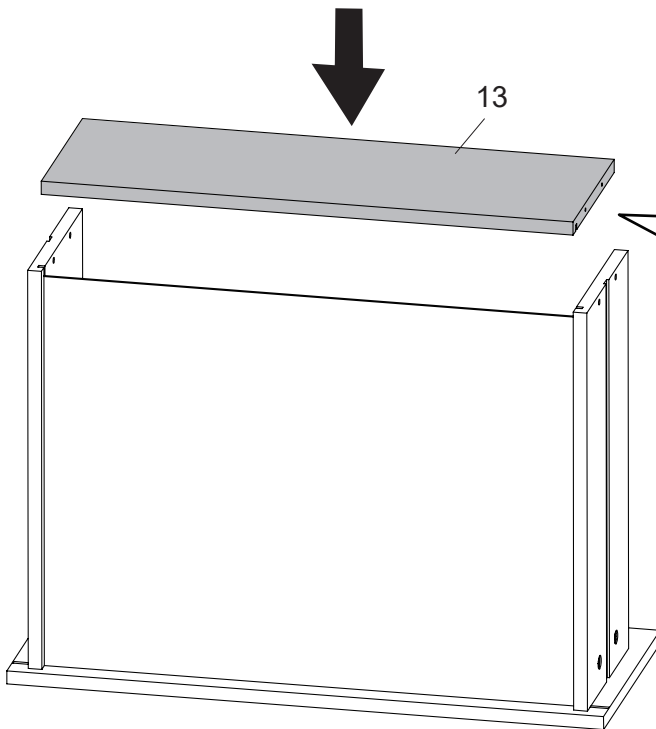

X24
M4x30


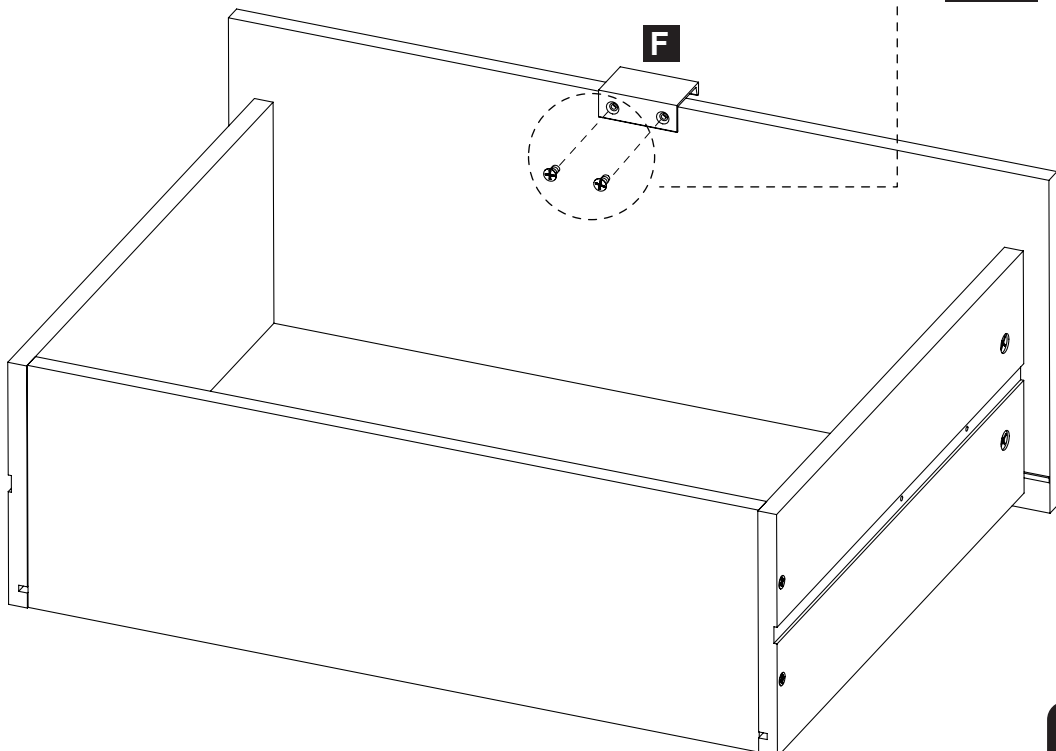
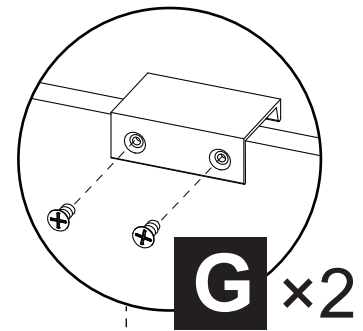
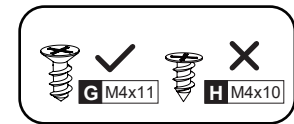
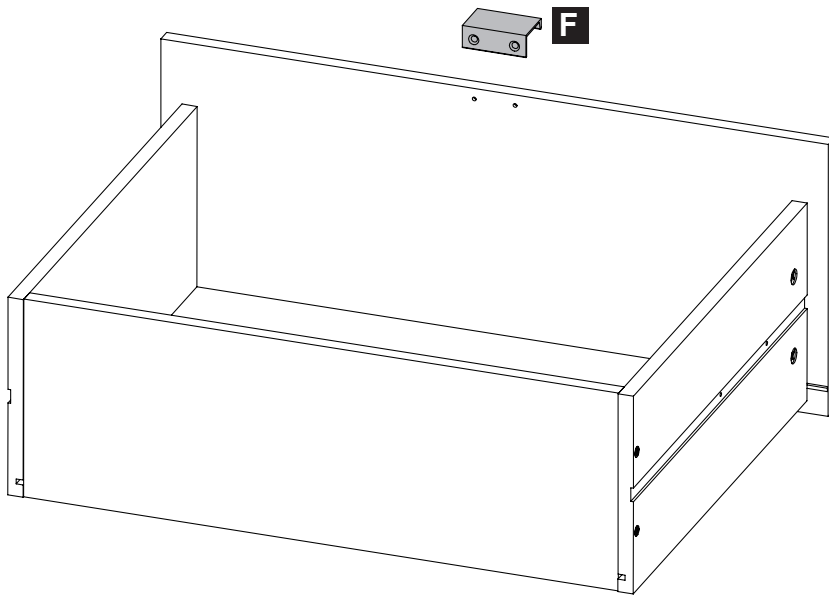
I x4

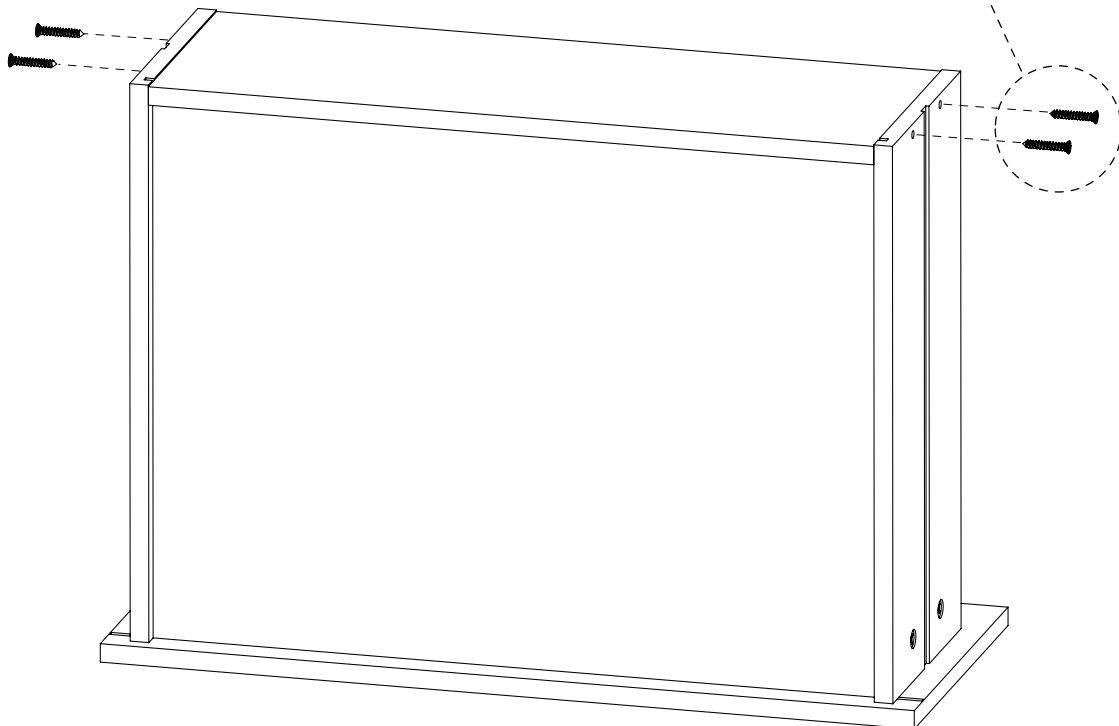

x6

19


	F X6
	G X12 M4x11




x6

20

A X12





A ×4

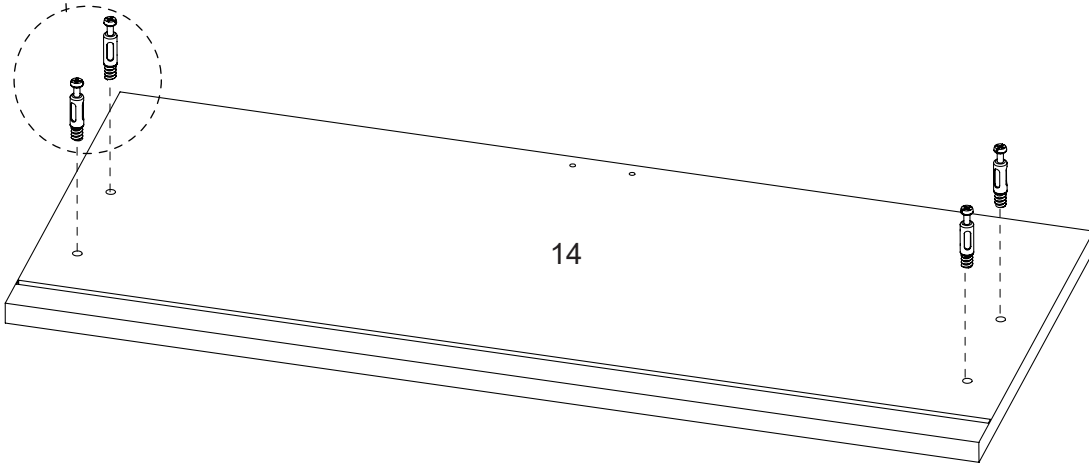


×3

21

C X12

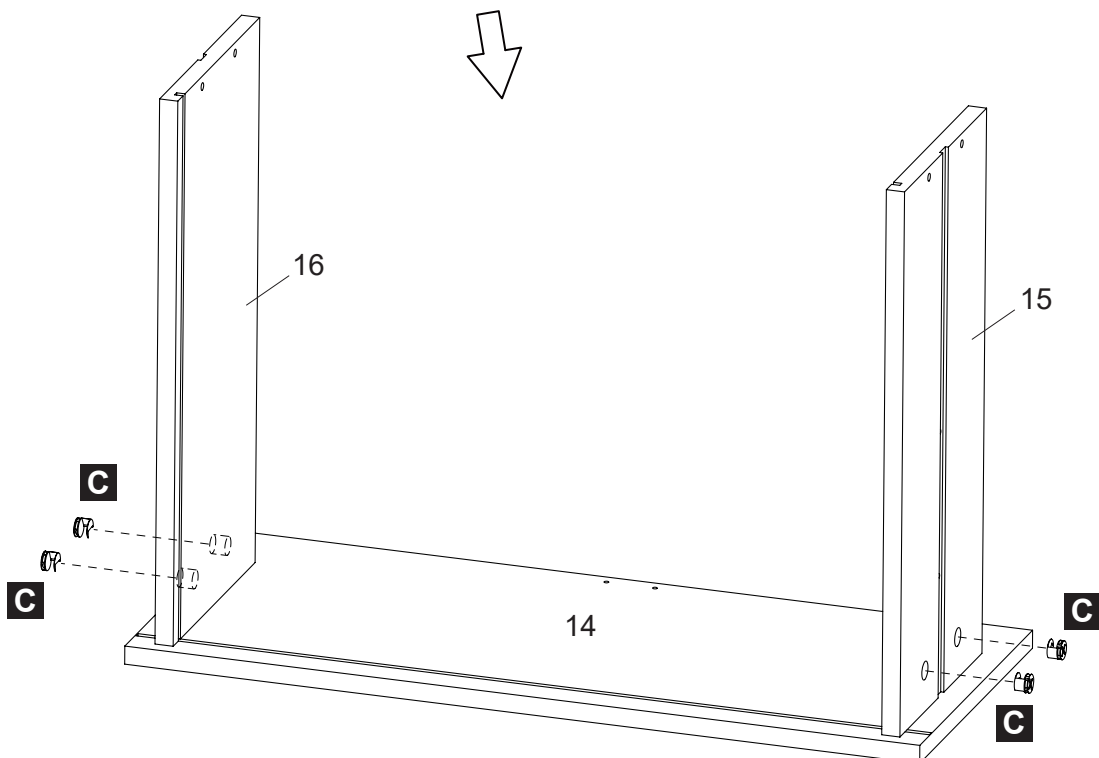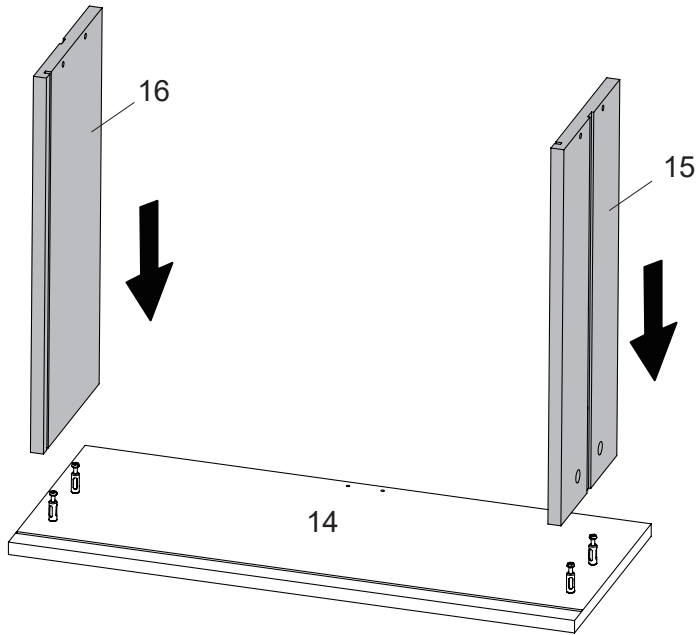


×3

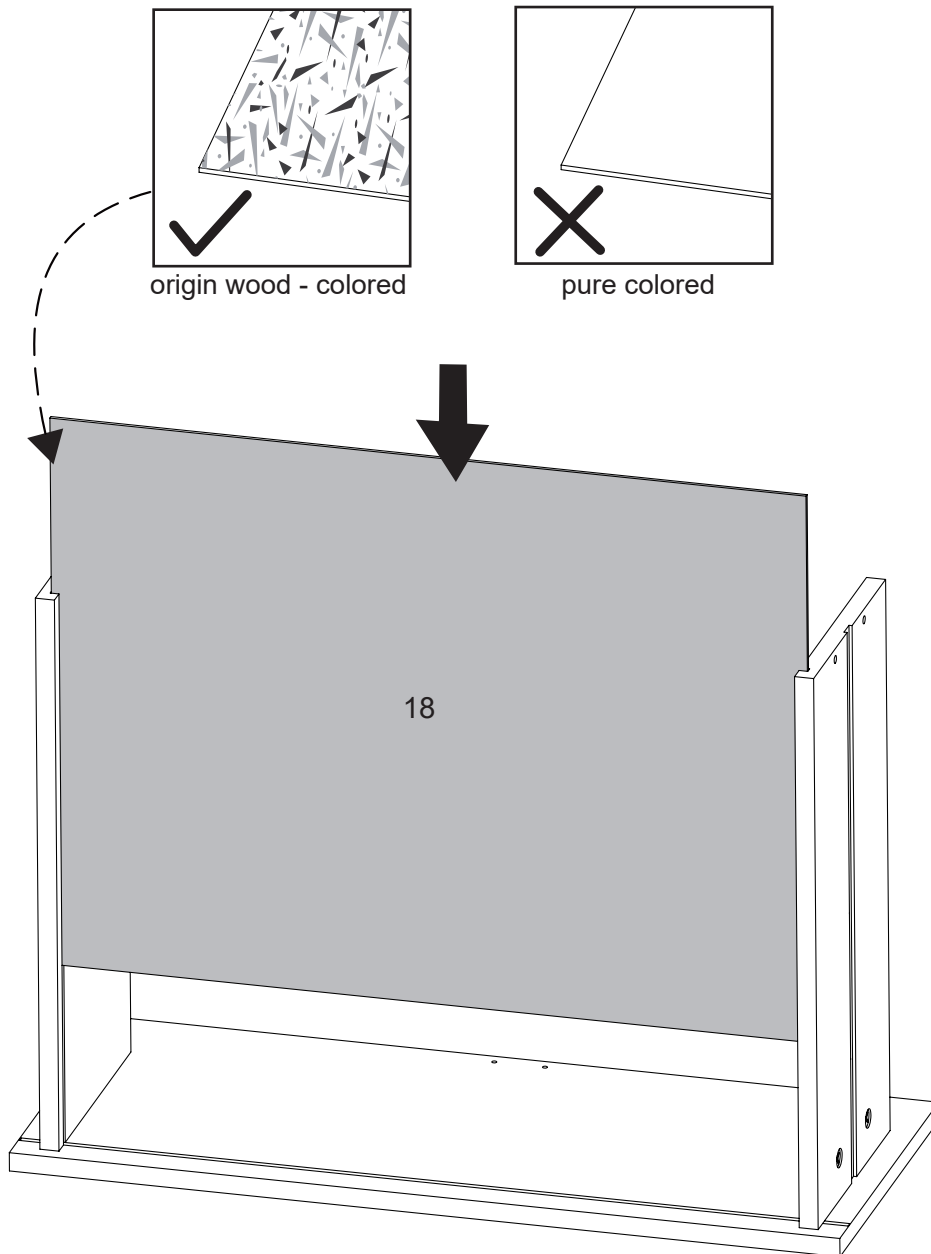






x3

23


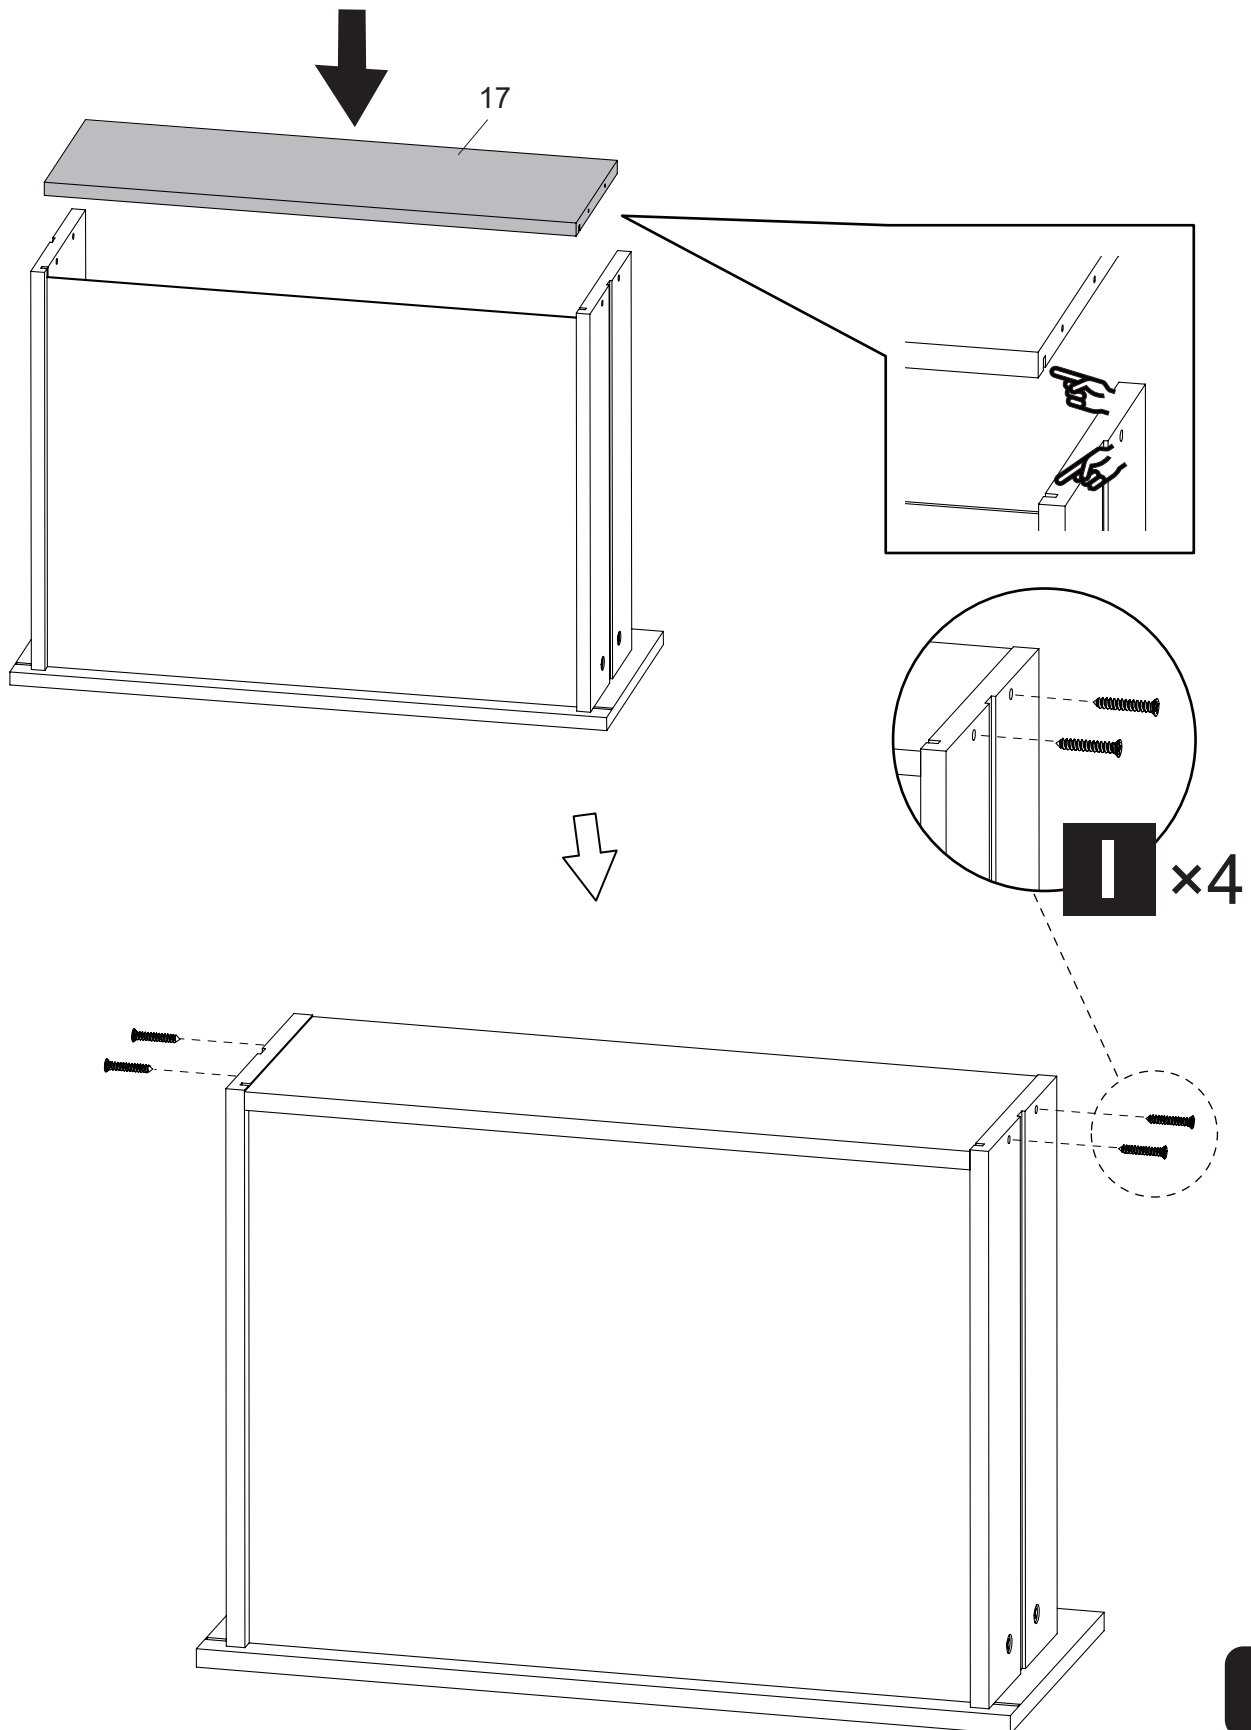


24


	F X3
	G X6 M4x11

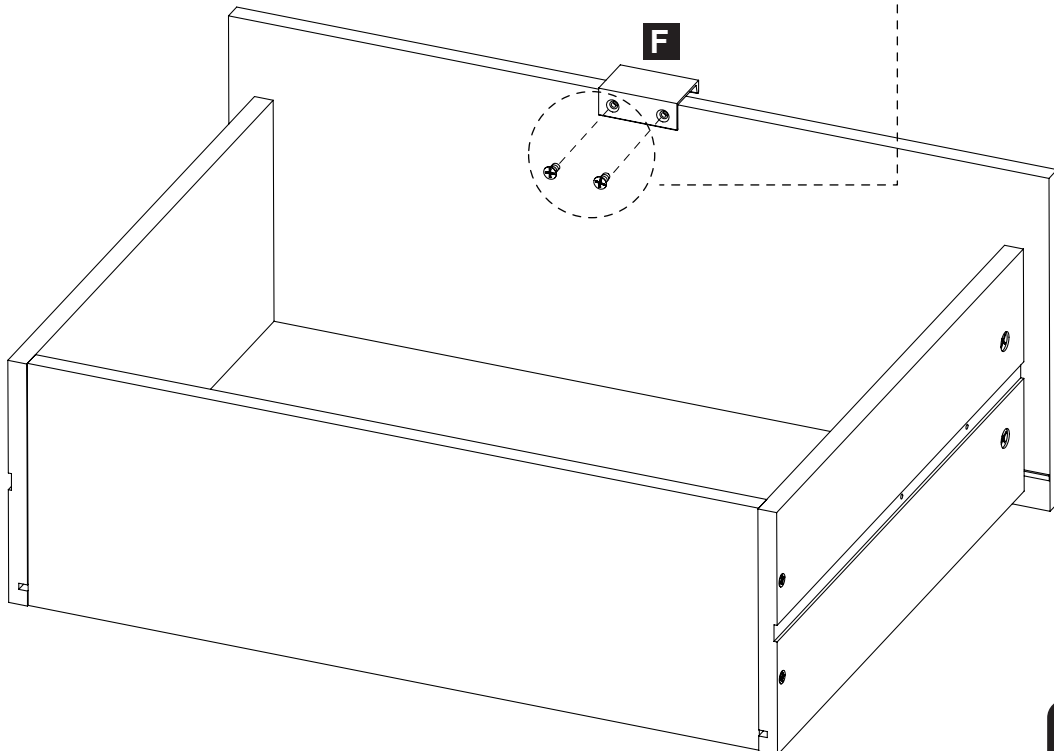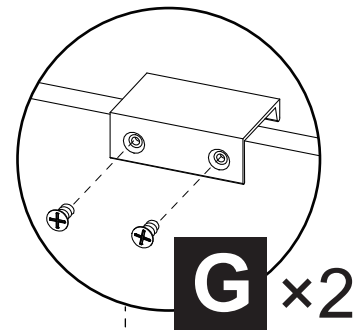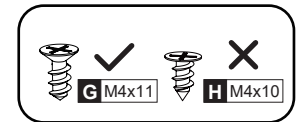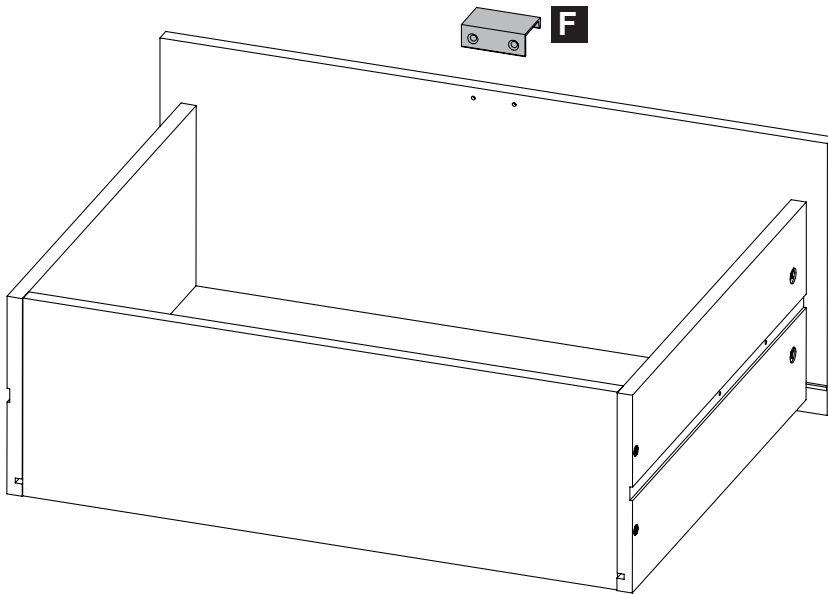





×3

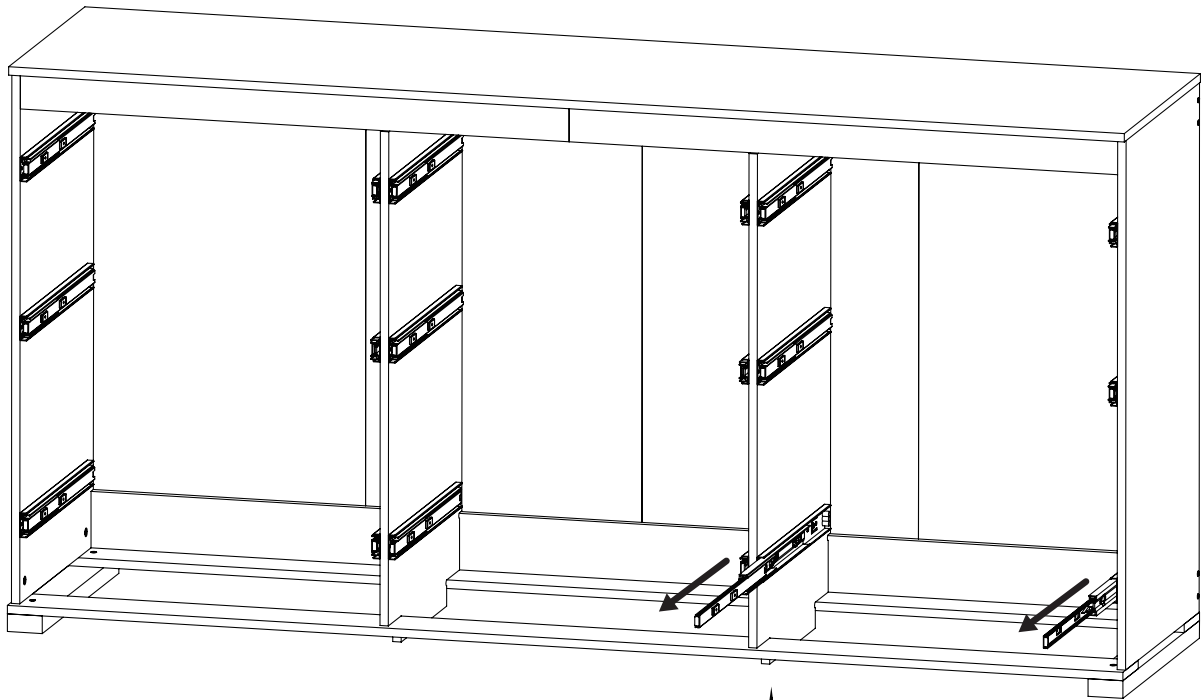**REMARK**




Pulling the rail out completely.

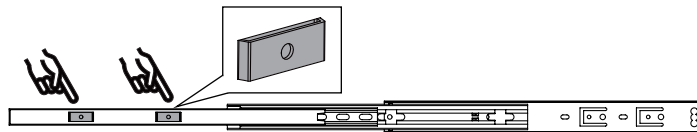**REMARK**


You can observe 2 **raised sections** on the rail.

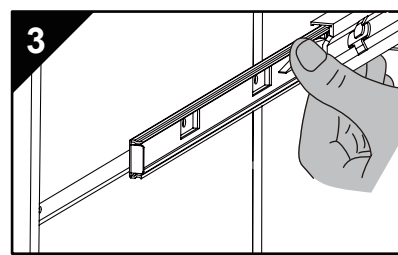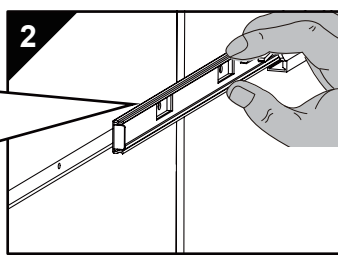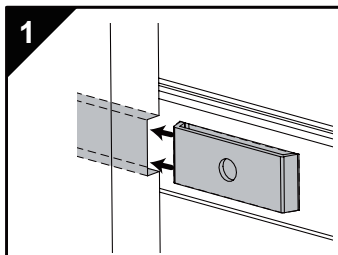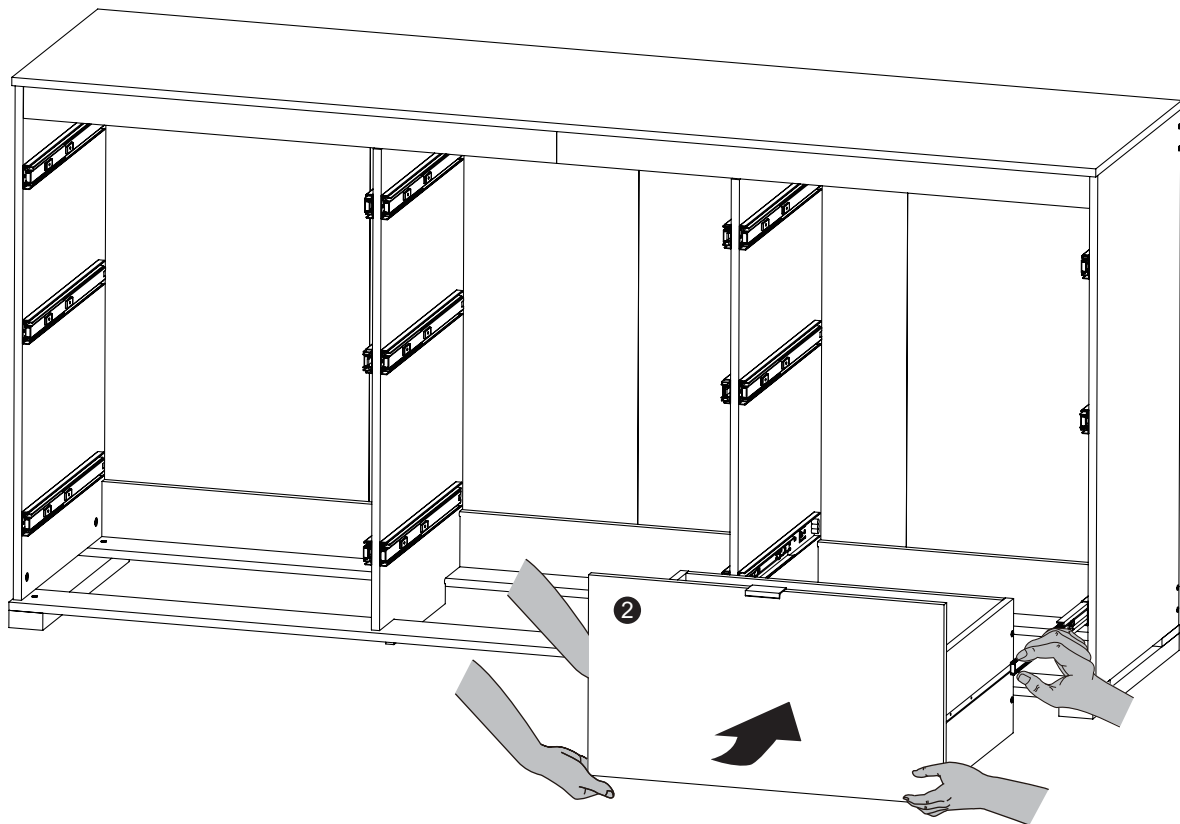**REMARK**

1. It is recommended to assemble by 2 people.
2. Place the bulges on the guide rail into the groove of the drawer.

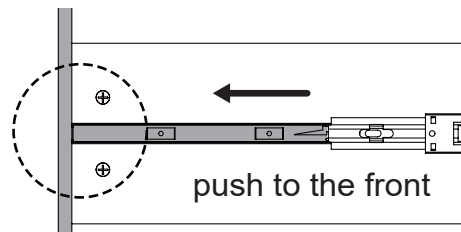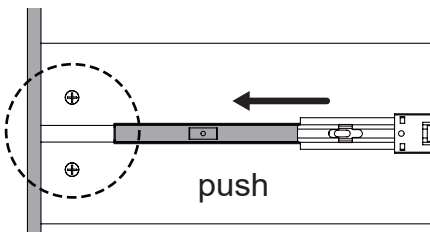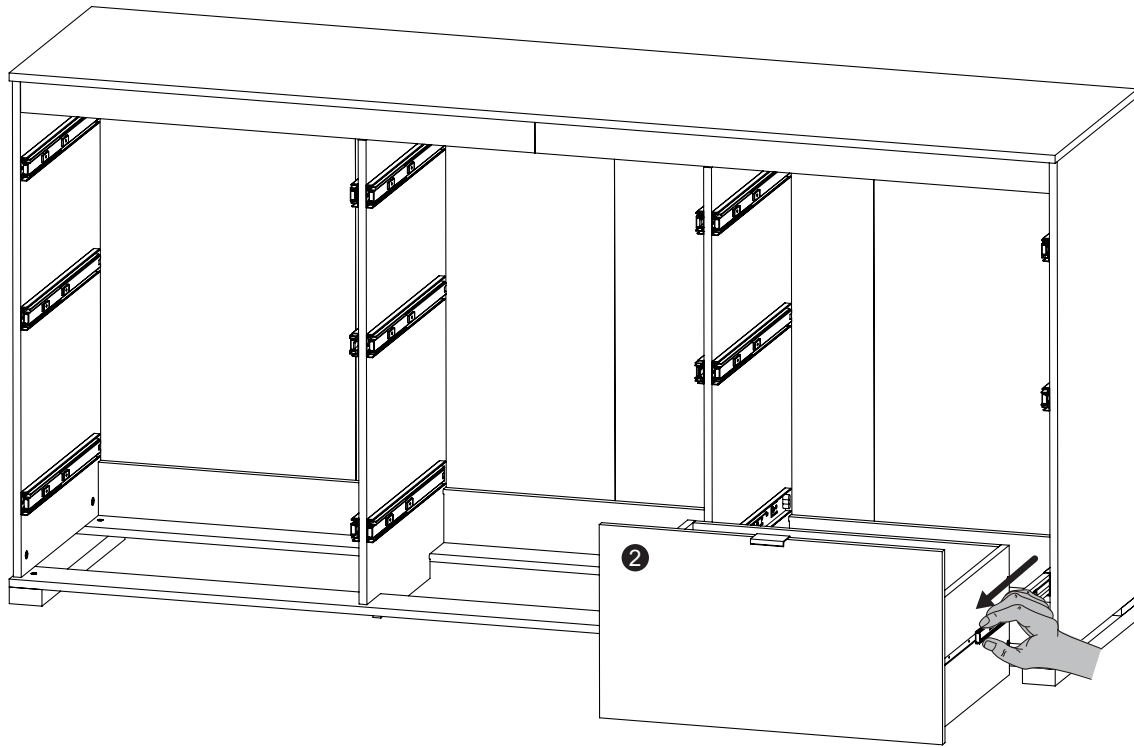**REMARK**





Please push the guide rails on both sides to the front end.




H X4
M4x10

REMARK


Please confirm that the guide rails on both sides are at the most forward position before tightening with screws.

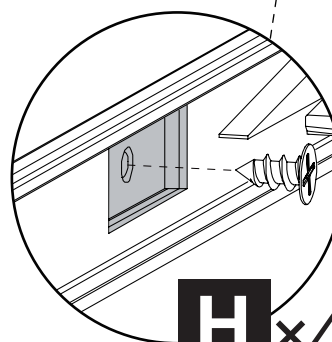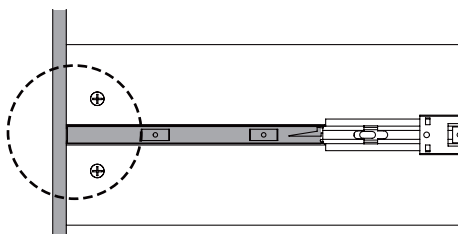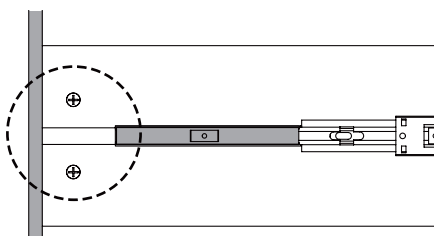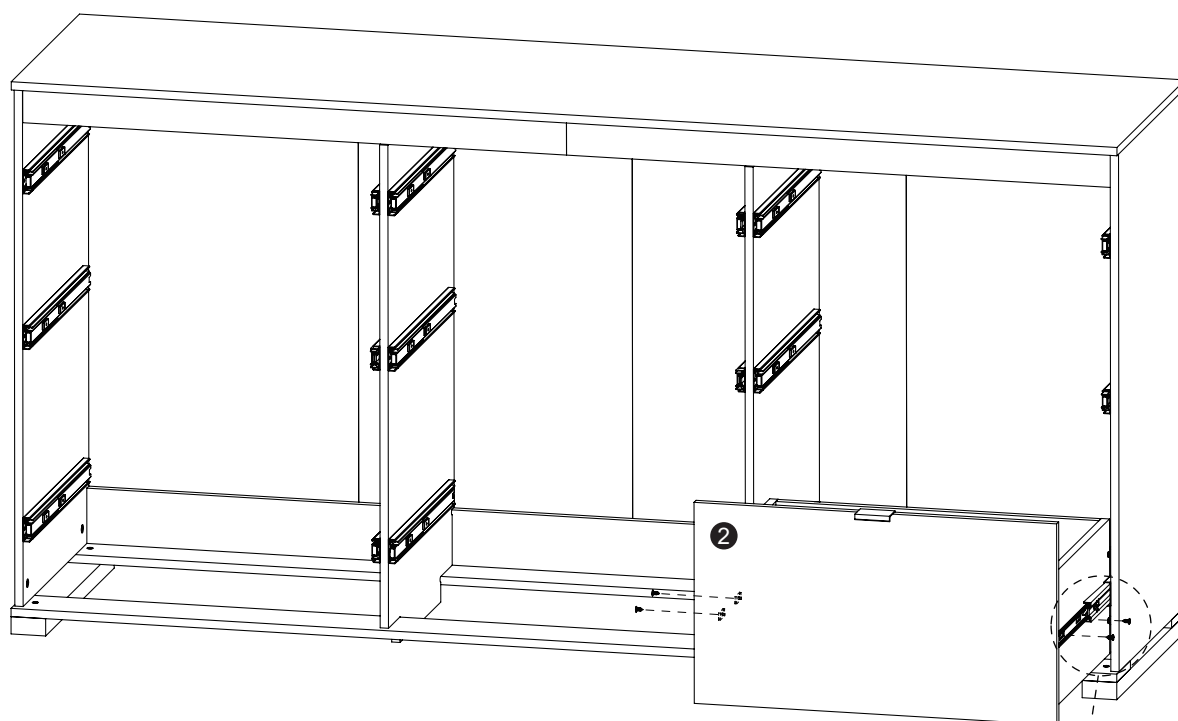


H X4

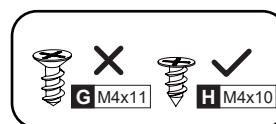

29



**H** X32
M4x10**REMARK**

The installation method of No. 1 drawer is the same as that of No. 2 drawer , please refer to the **step 25 - step 28** for the installation method.

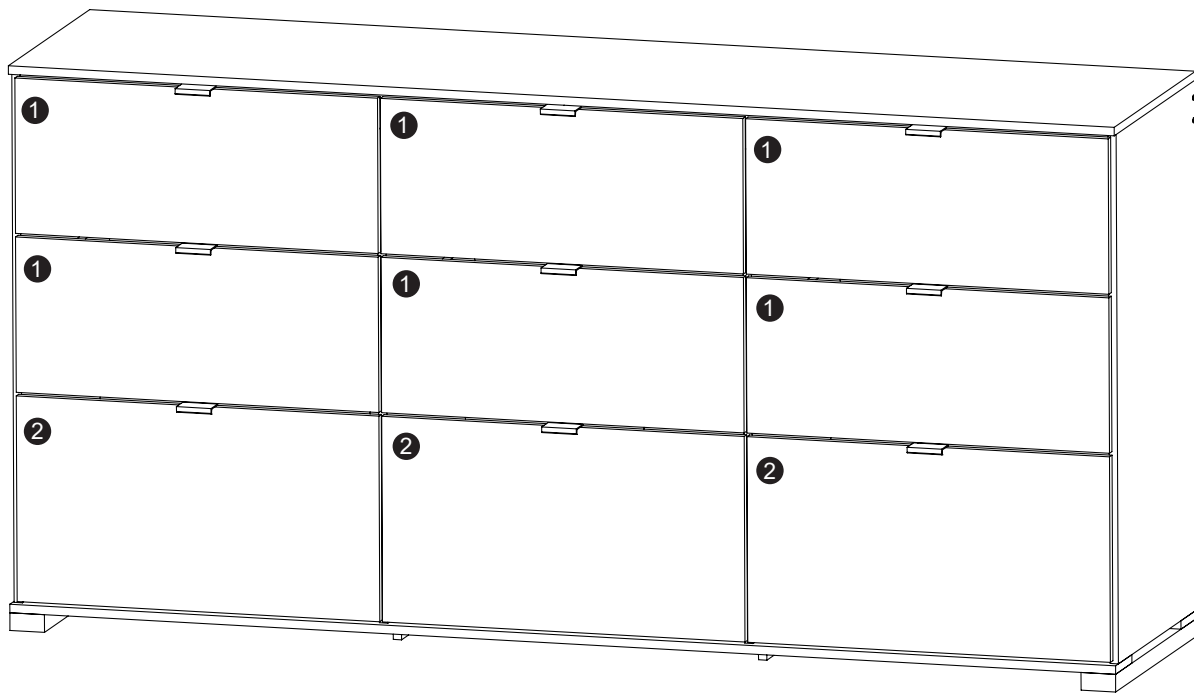

30


K X54

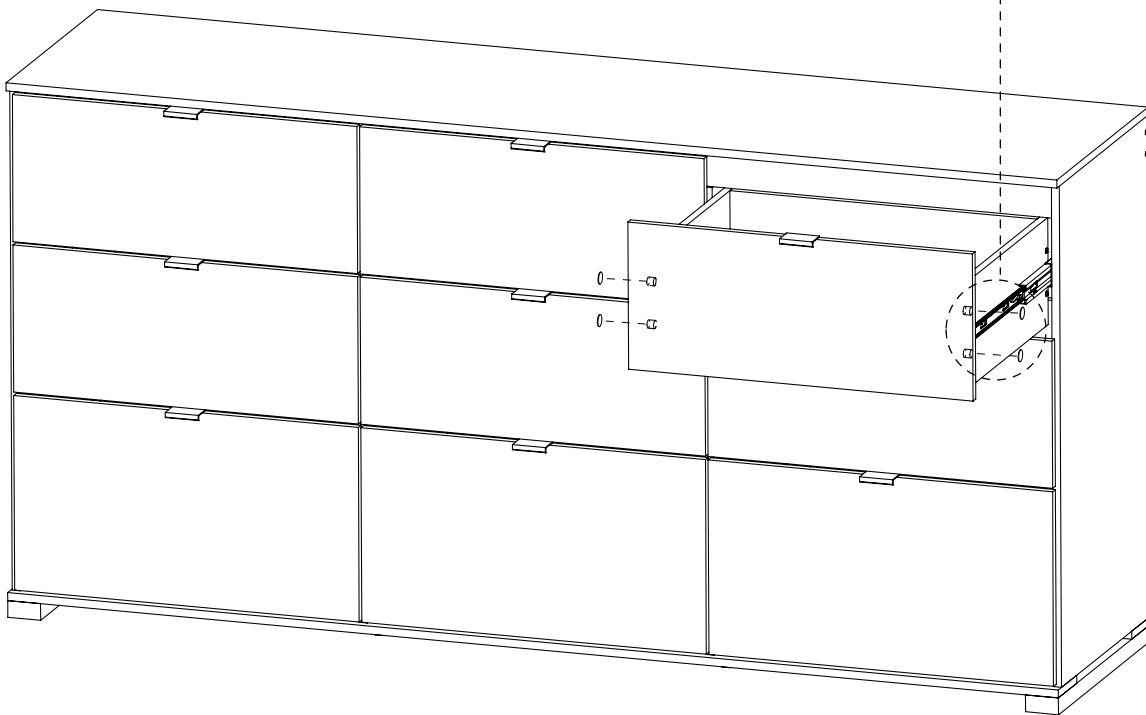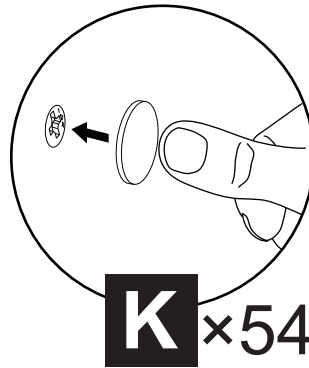

31

**REMARK**

The product is already equipped with anti-tip pipes, further reducing the risk of tipping. You can optionally install them **according to your needs**.

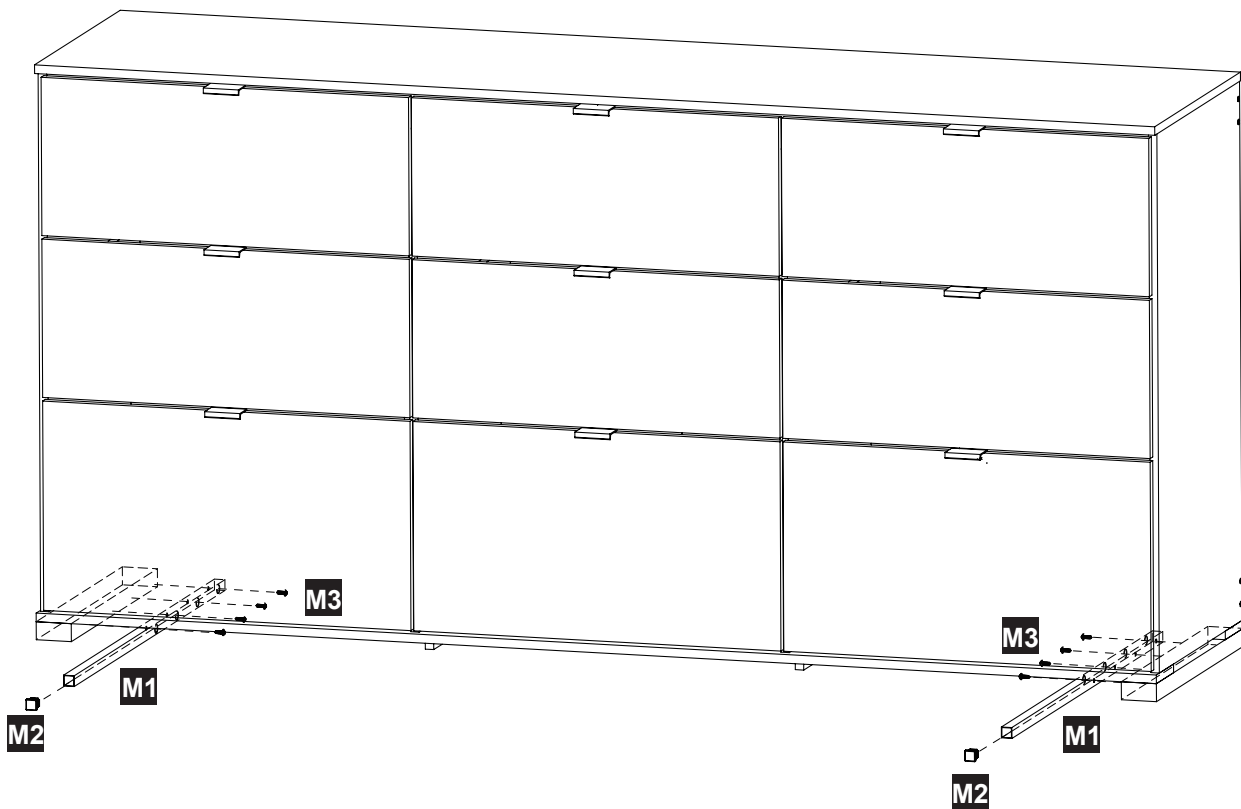




WARNING

ANTI-TIPPING DEVICE


WALL ANCHORING GUIDE

The hardware you should use to secure your furniture to the wall depends on both the type of furniture you have and your wall material.

Attaching your furniture to cavity wall with anti-tipping device

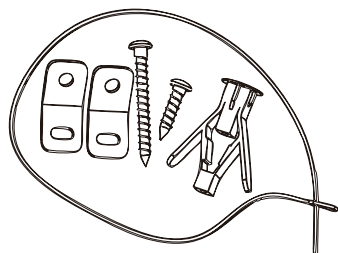

Anti-tipping device bag

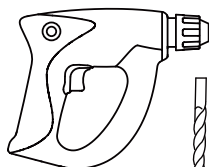

5/16" (8mm)
1/8" (3mm)

Electric drill (not provided)




Fixing hole (round)
Threading hole (oval)

Type of Wall Material


Using the guide below, identify your wall material and choose the corresponding steps.

Mark the attachment point(s) with a pencil at the appropriate height.

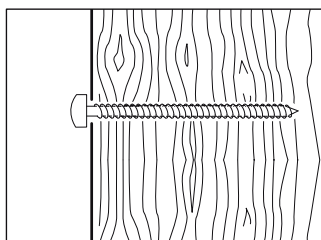


Drywall or plaster with available wood stud

- Drill 1/8-inch (3mm) diameter pilot hole(s) into the wood stud(s), at the height you marked with pencil.

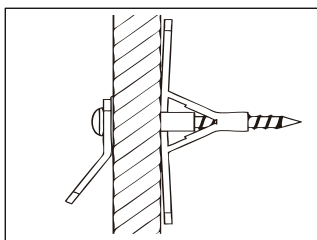

Drywall without available wood stud

- Drill 5/16-inch (8mm) diameter hole(s) through the wall at the height you marked with pencil.
- Drive the plastic plug(s) into the hole(s), using a hammer if needed.

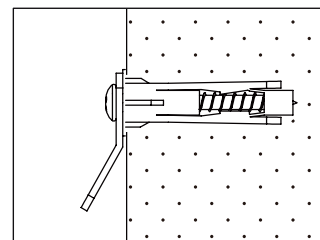

Masonry


- Drill 5/16-inch (8mm) diameter hole(s) 2-inches (50mm) deep into the wall at the height you marked with pencil.
- Drive the plastic plug(s) into the hole(s), using a hammer if needed.

Follow the appropriate pictogram instructions on the following pages, drive the screw(s) with washer(s) through the brackets and tighten screw(s) firmly into the plastic plug(s) in the wall. Do not over-tighten.

If your wall material is not listed here,
or if you have any questions, consult your local hardware store.


STEP

1

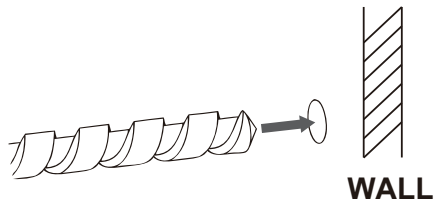


Drill a hole in the solid wall
(Wood wall or Concrete wall)


2

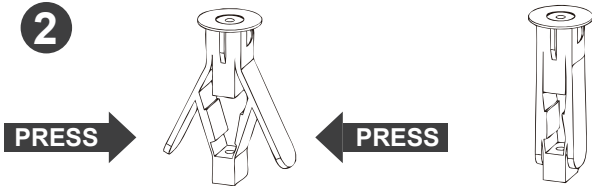



3

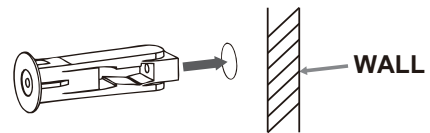

4

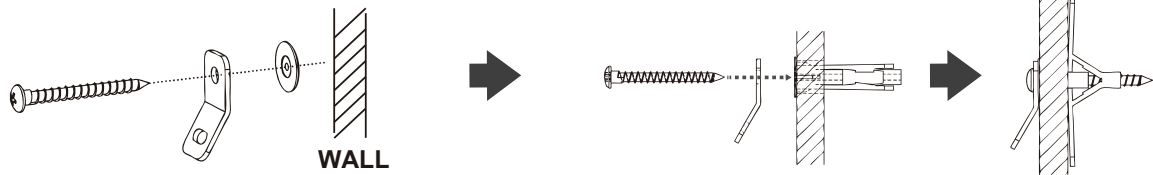

5

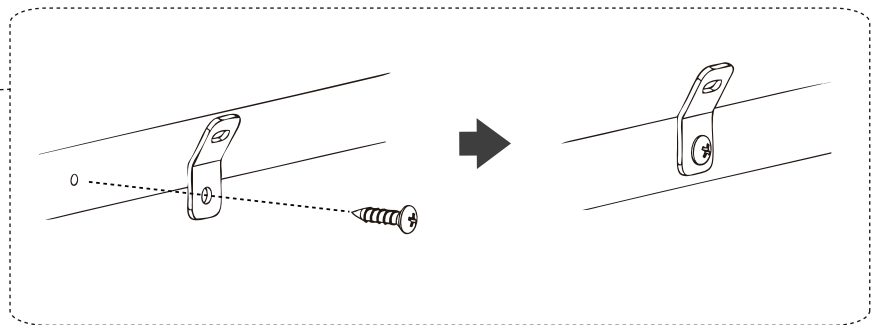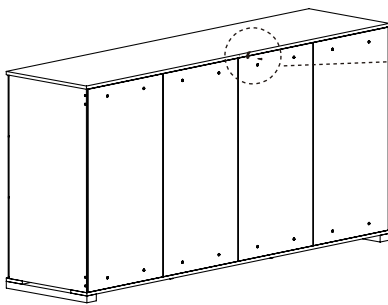

Tightening
the threading

