
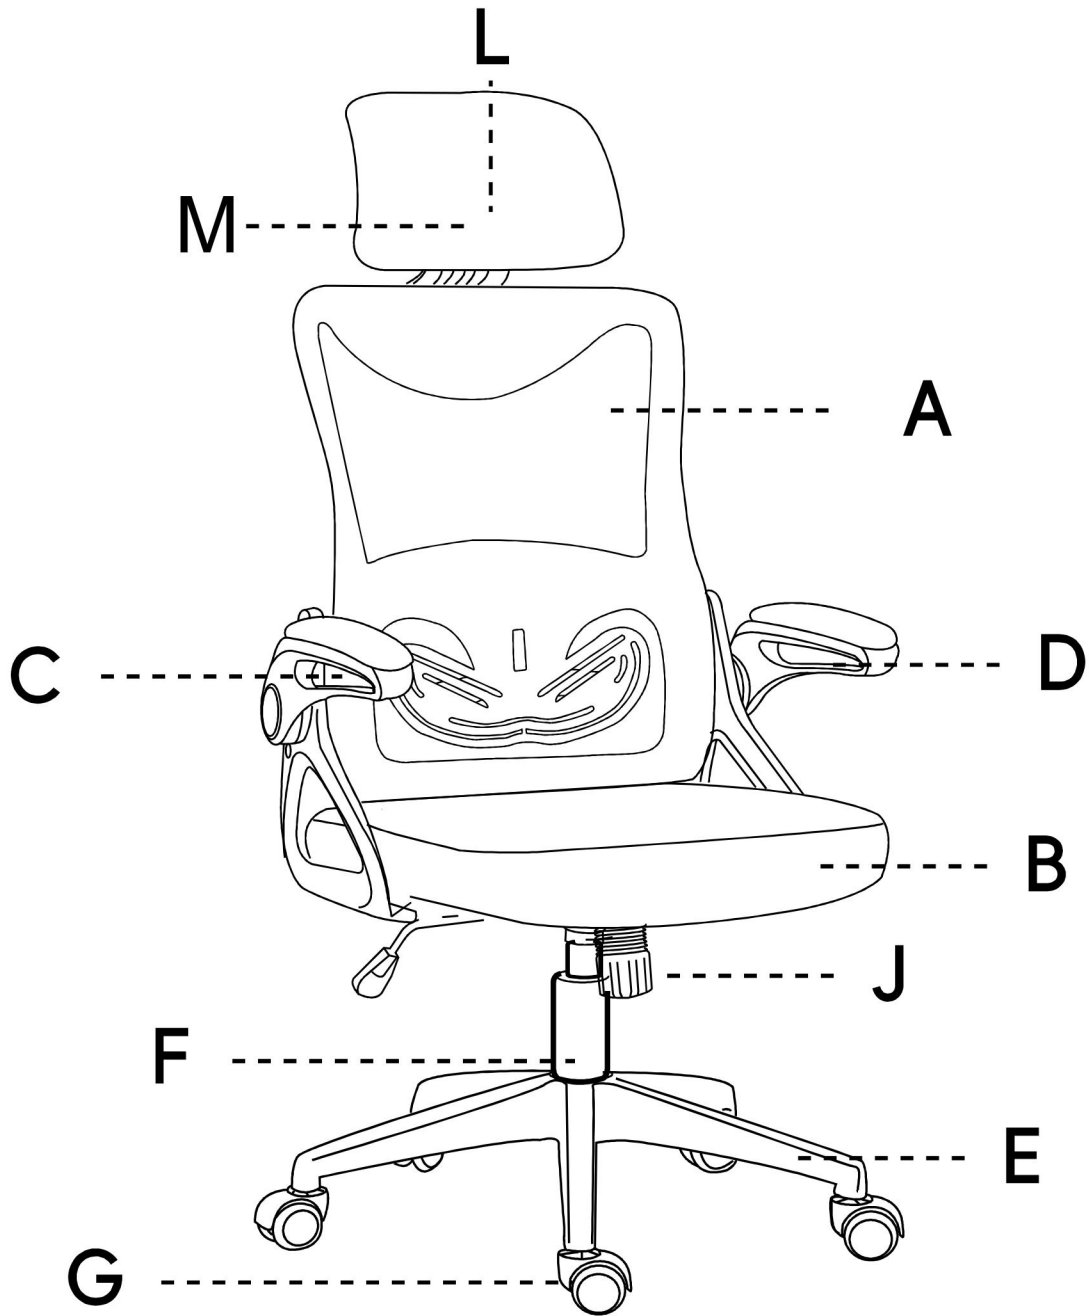

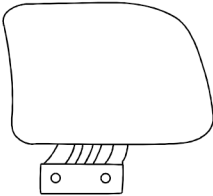
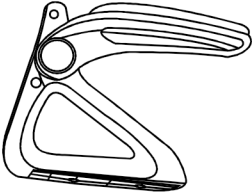
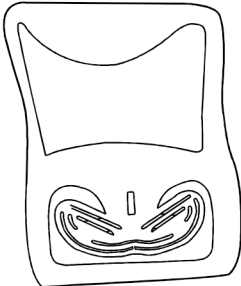
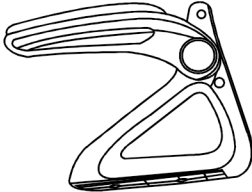
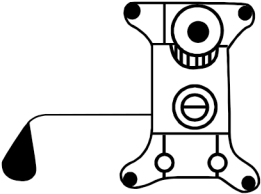
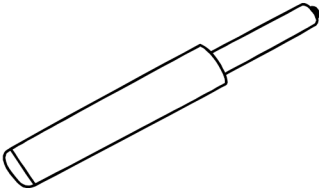
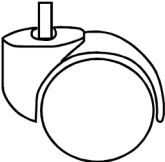




Assembly Instruction

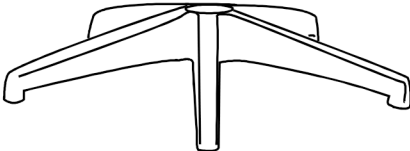


Made In China

PARTS

M×1 COVER 	L×1 HEADREST 	
C×1 ARMREST 	A×1 BACKREST 	D×1 ARMREST 
B×1  SEAT		
J×1 BUTTERFLY HOLDER 	F×1 GAS STICK 	
G×5 CASTOR 	E×1 FIVE STAR BASE 	

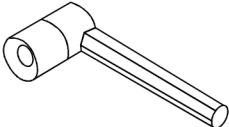
H×1 H-1  × 10 M6x22mm H-2  × 4 M6x30mm	K×8 	N×1 	I×1 
---	---	---	---

STEP 1

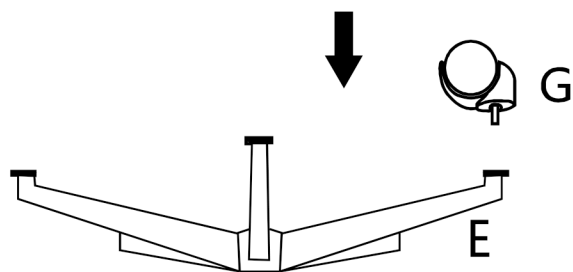


Push the wheels to the base.

STEP 2

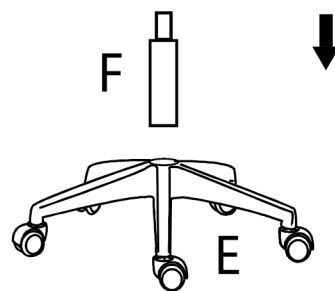


Put the gas lift on the base.

STEP 3

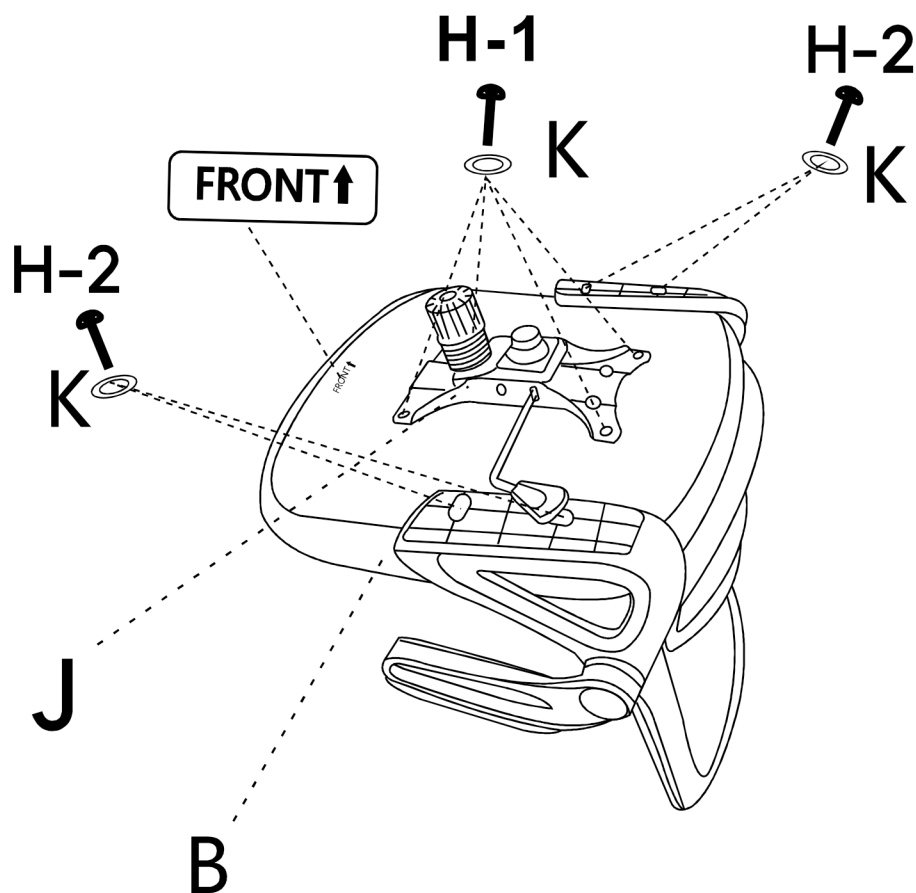


Assemble the armrest and seat cushion first.
After that attach the mechanism on the seat cushion.
Please notice the direction!

STEP 4

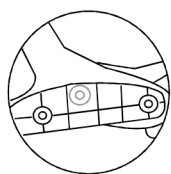


Built-in screw

Please try the looseness of the handrail and use the fitting to adjust it to your optimum looseness before installation.

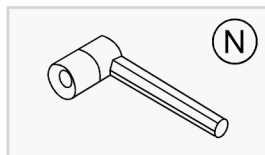


You can use this wrench

H-1

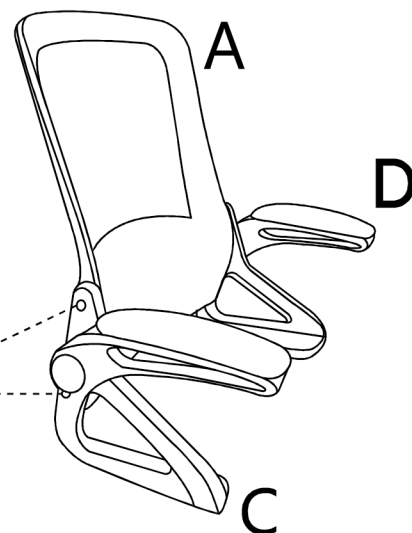

Assemble the armrest and back firstly

STEP 5

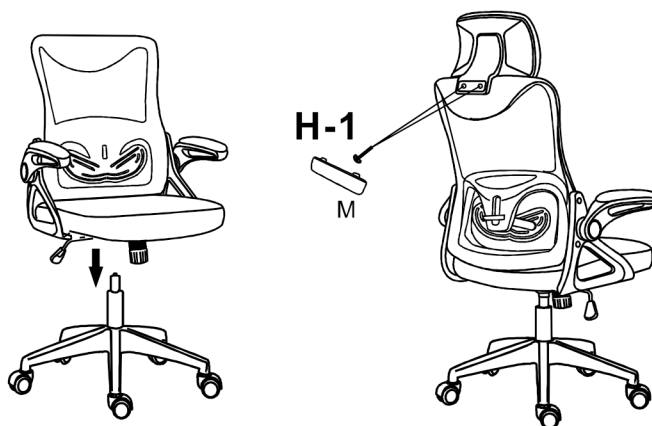

Assemble the chair with two whole parts

STEP 6

