
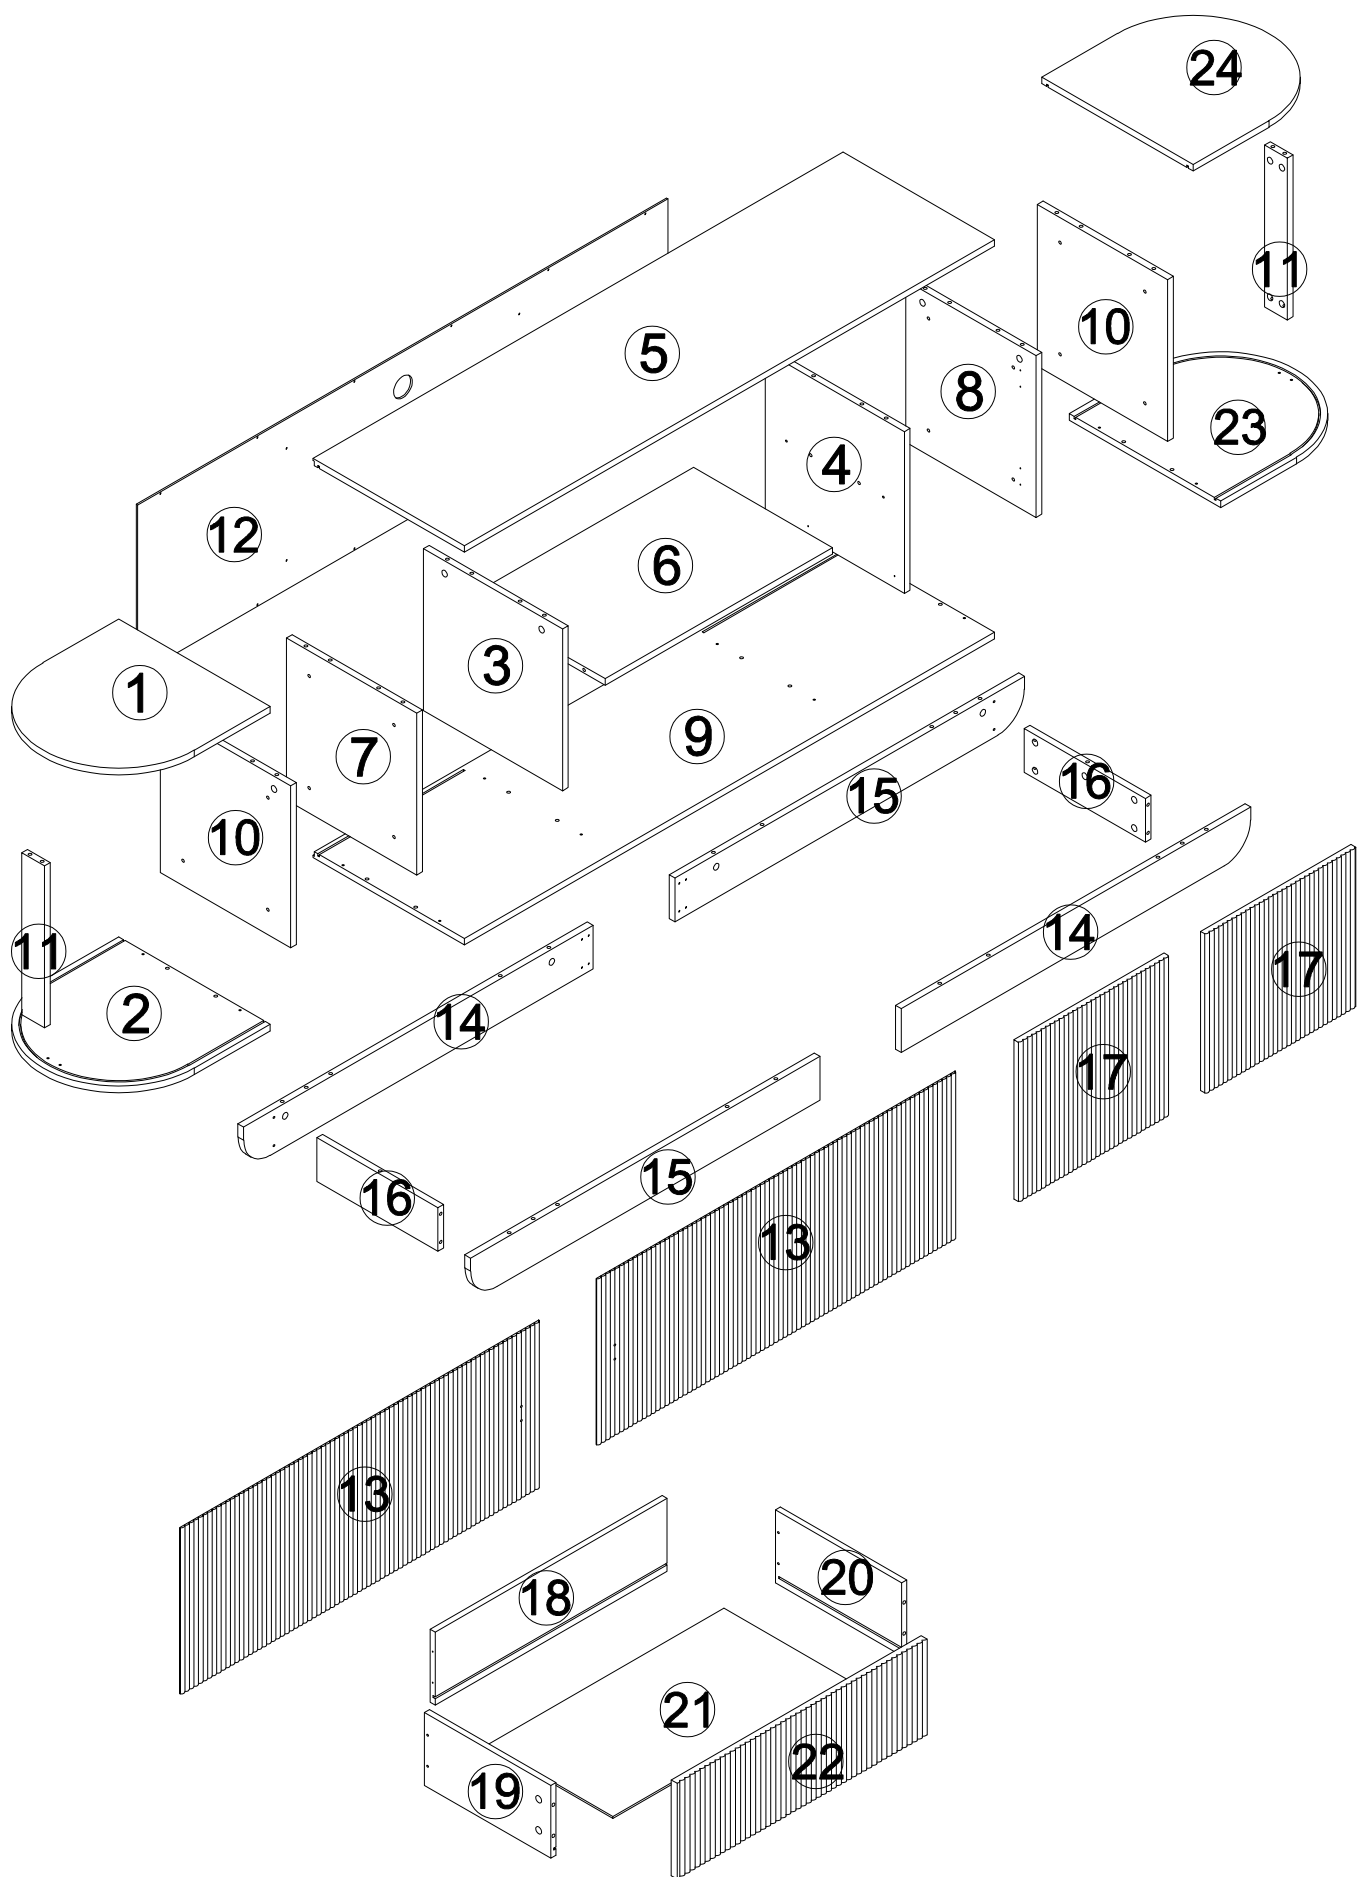
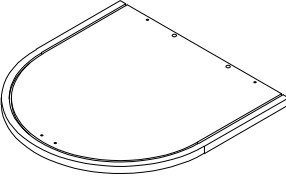
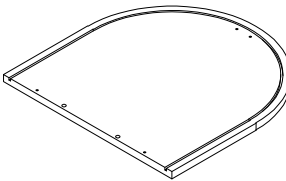

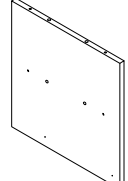
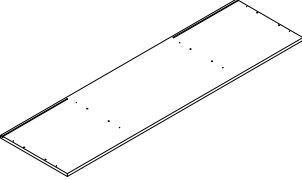
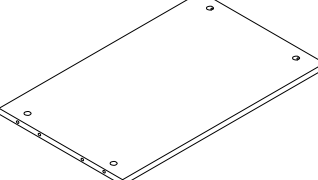

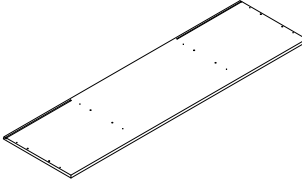

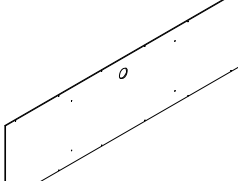
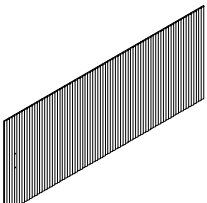
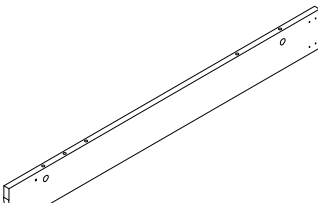
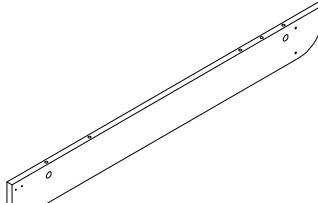
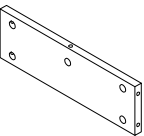
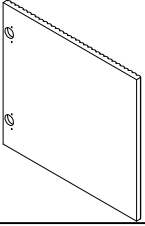
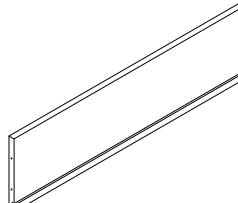
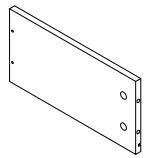
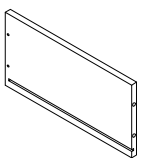
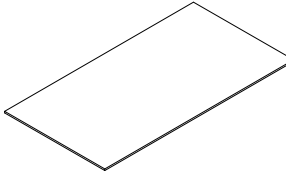
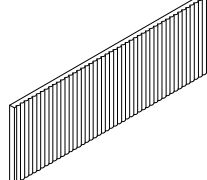
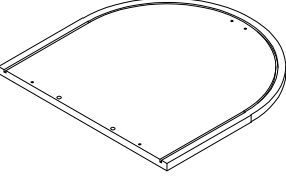












Installation instruction

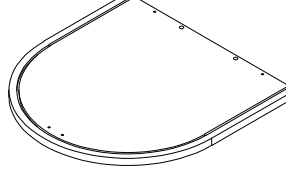

Parts and Operation Elements

			
① 1pc	② 1pc	③ 1pc	④ 1pc
			
⑤ 1pc	⑥ 1pc	⑦ 1pc	⑧ 1pc
			
⑨ 1pc	⑩ 2pcs	⑪ 2pcs	⑫ 1pc
			
⑬ 2pcs	⑭ 2pcs	⑮ 2pcs	⑯ 2pcs
			
⑰ 2pcs	⑱ 1pc	⑲ 1pc	⑳ 1pc
			
㉑ 1pc	㉒ 1pc	㉓ 1pc	㉔ 1pc




Hardware

							
Cam bolt		Cam Lock		ø6x30mm Wood dowel		4x40mm screw	
A	46pcs+2pcs	B	46pcs+2pcs	C	40pcs+2pcs	D	12pcs+1pcs
							
4x30mm screw		3x12mm screw					
E	4pcs	F	8pcs	G	8pcs	H	8pcs
							
4x14mm screw							
J	4pcs	K	2pcs	L	4pcs	M	4pcs
							
3.5x12mm screw		2.5x14mm screw		300mm		300mm	
N	32pcs+2pcs	O	16pcs+1pcs	CR	1pc	CL	1pc
							
300mm		300mm					
DR	1pc	DL	1pc				





SPARE BAG


THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

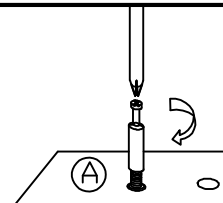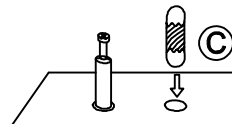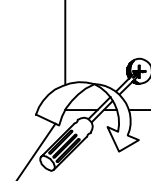							
Gently screw cam bolt into the threaded anchor.		Insert the wood dowel halfway into hole.				Screw the camlock firmly into locked position	



①

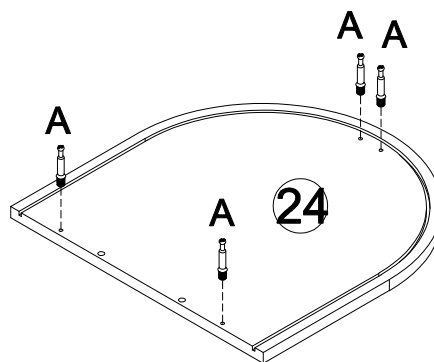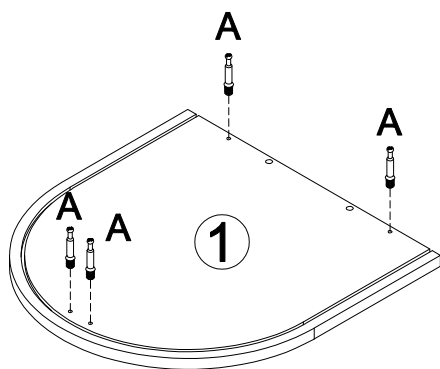


A  x12

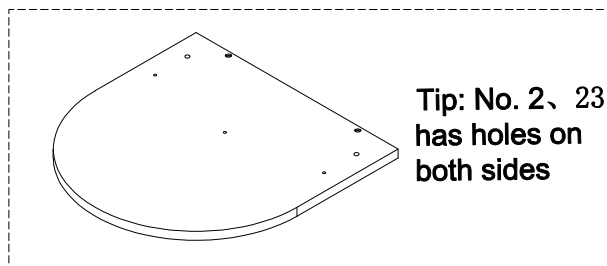


Tip: No. 2、23 has holes on both sides

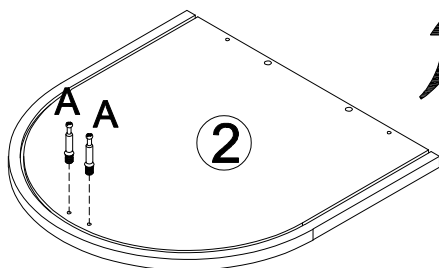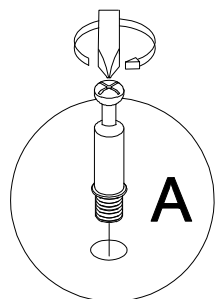

180°

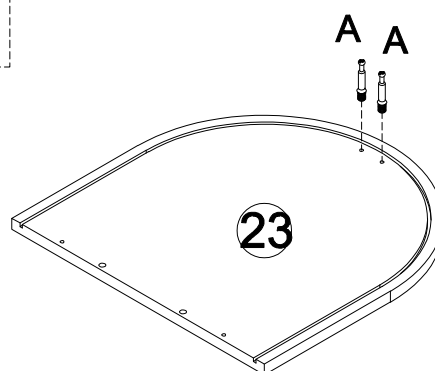



②


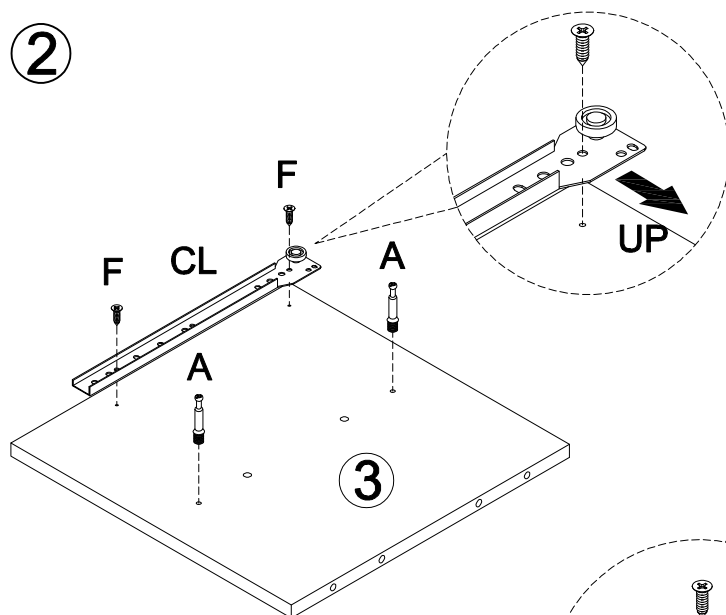



A  x4

F  x4



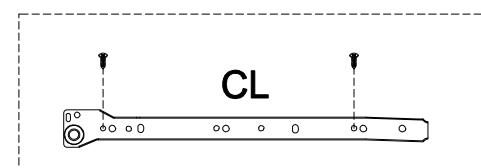


CL  x1



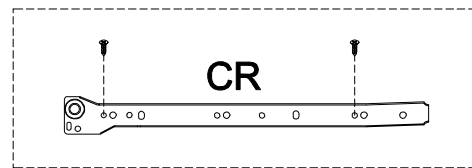
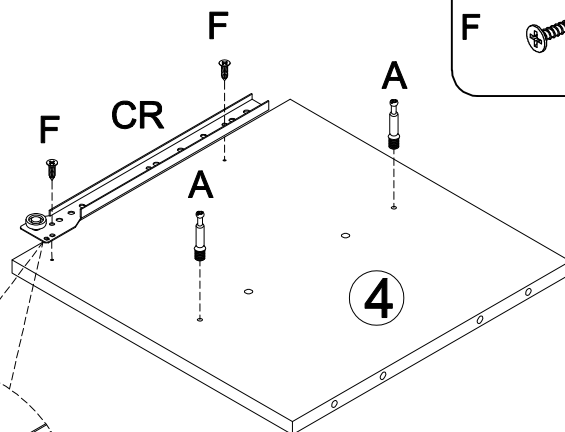


CR  x1

3

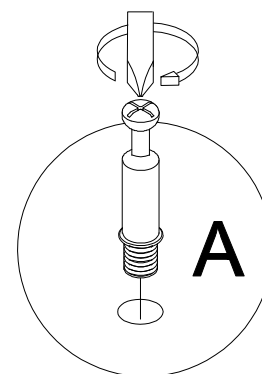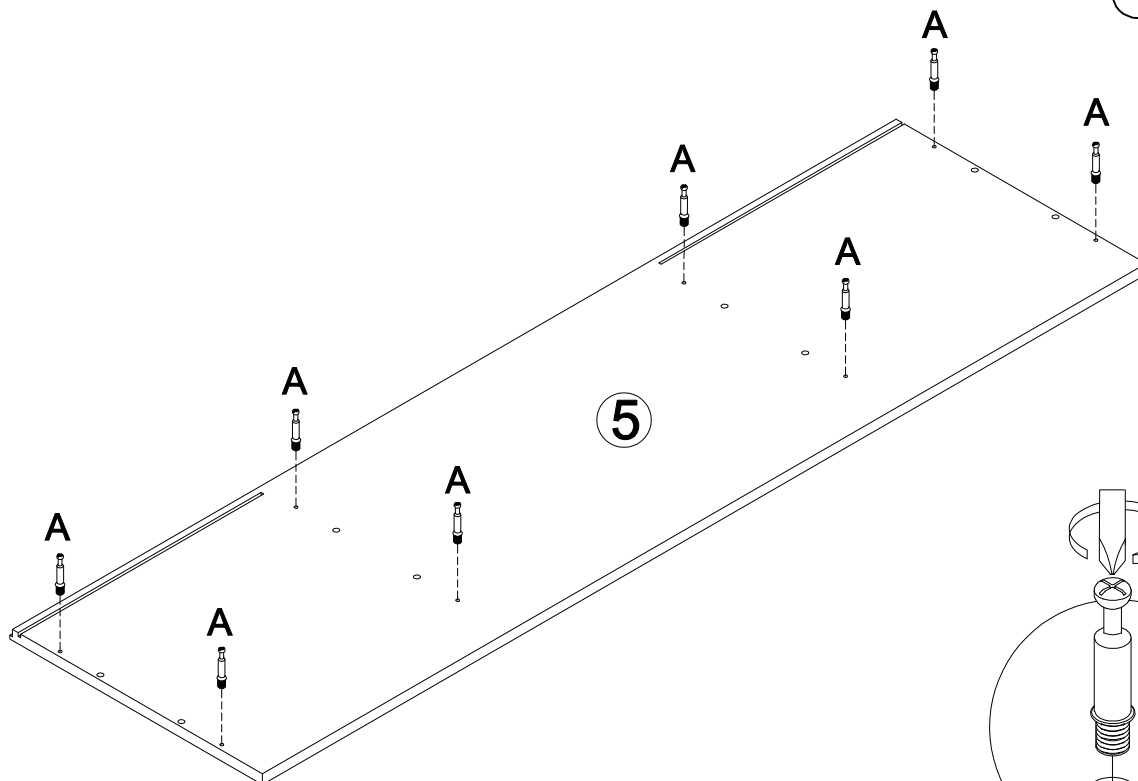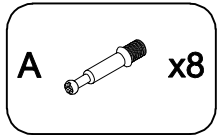


4

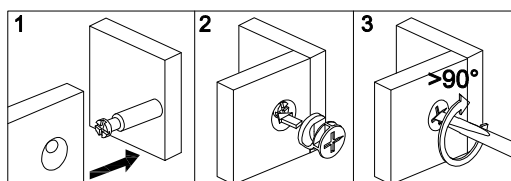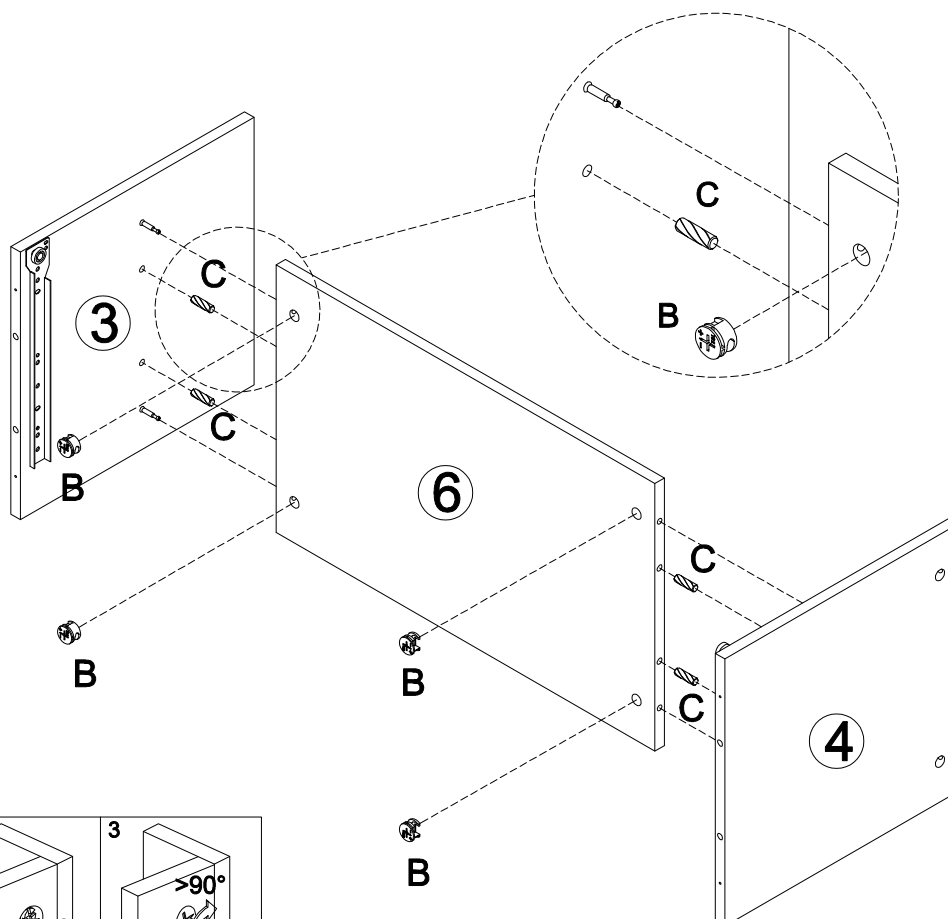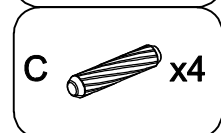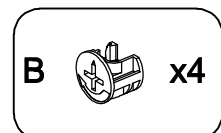


5

The side with the pilot holes of both the No. 7 and No. 8 plate components must be installed facing upwards.

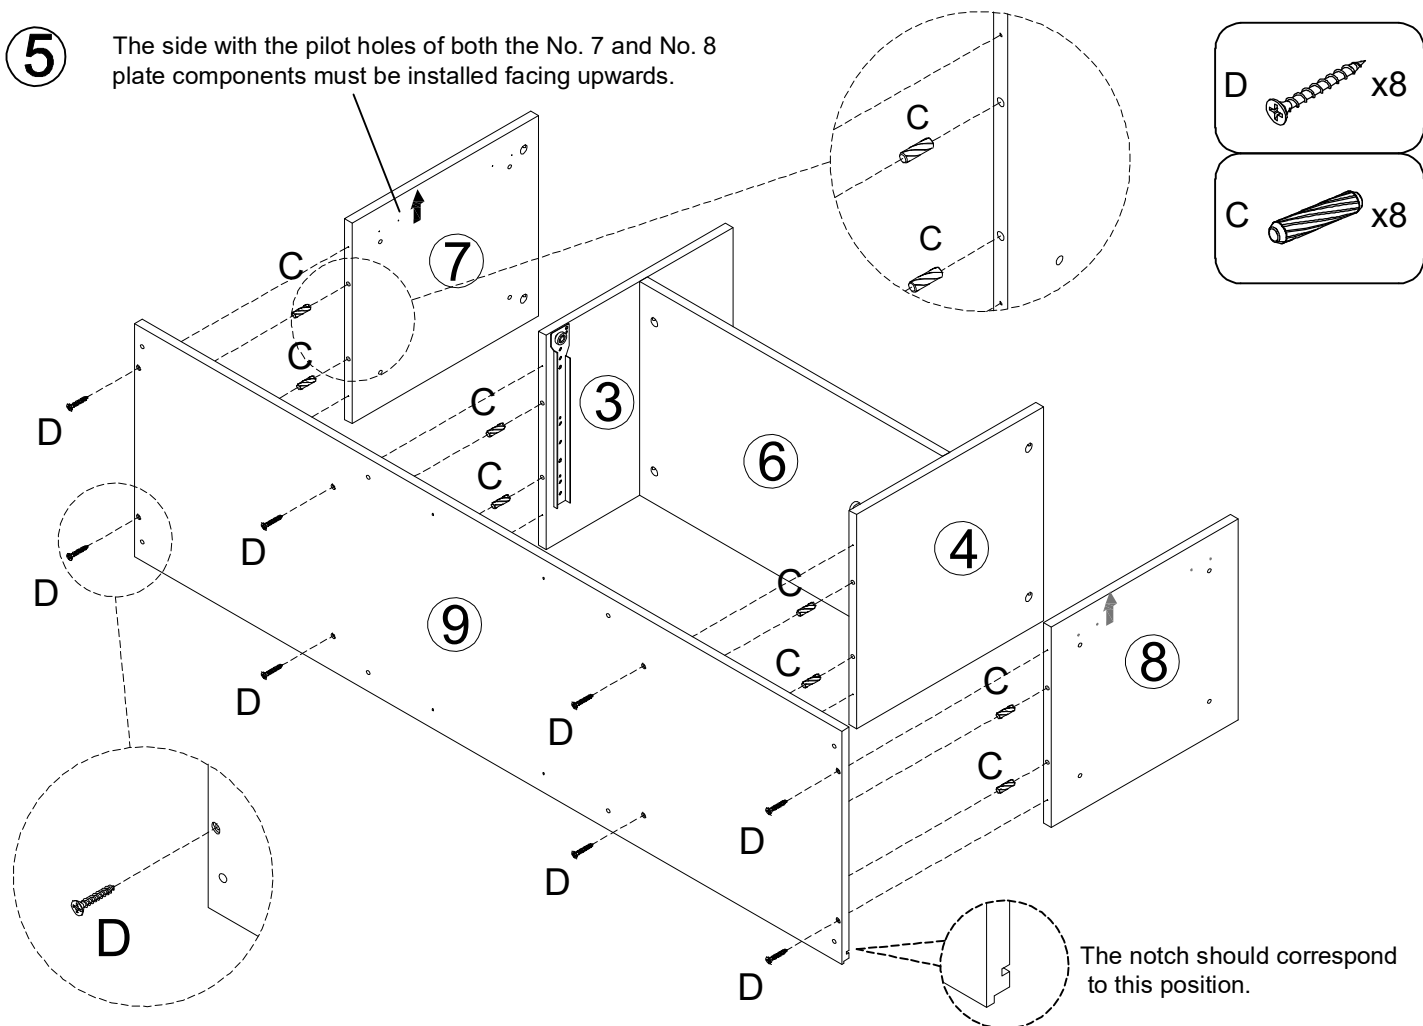


6

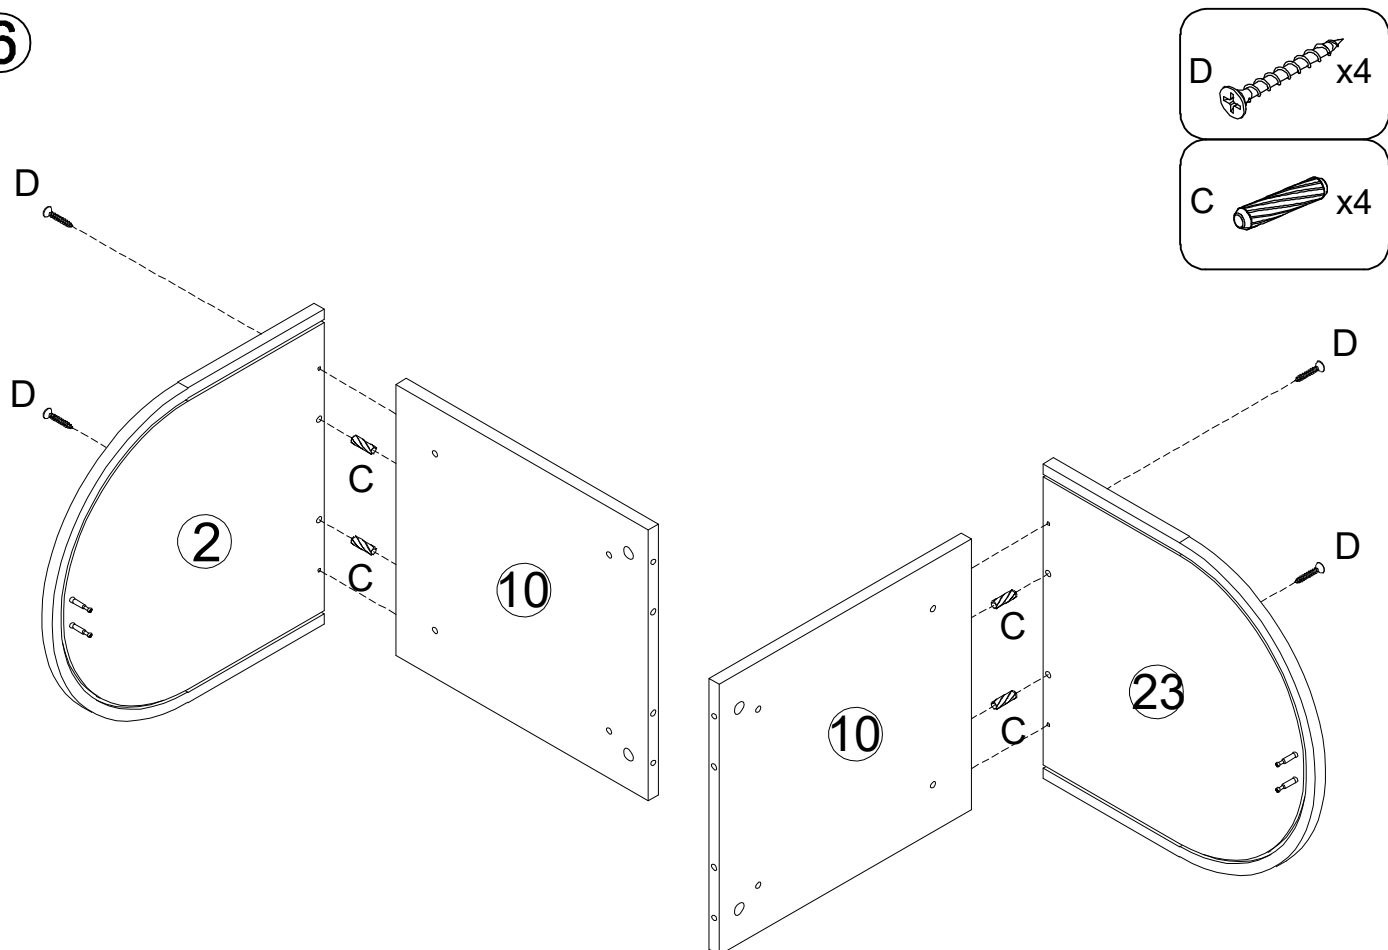

7


B  x4

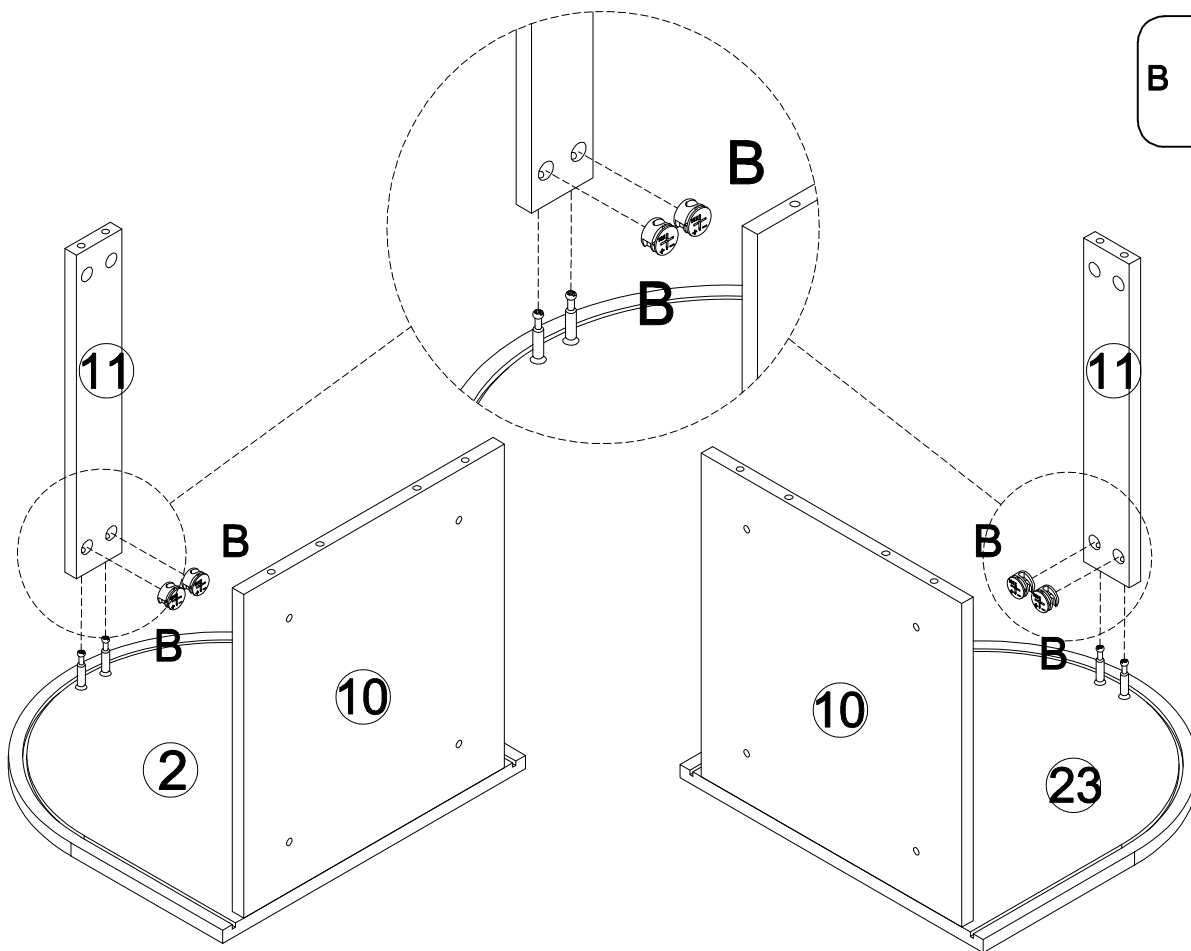


8

G  x8

H  x8

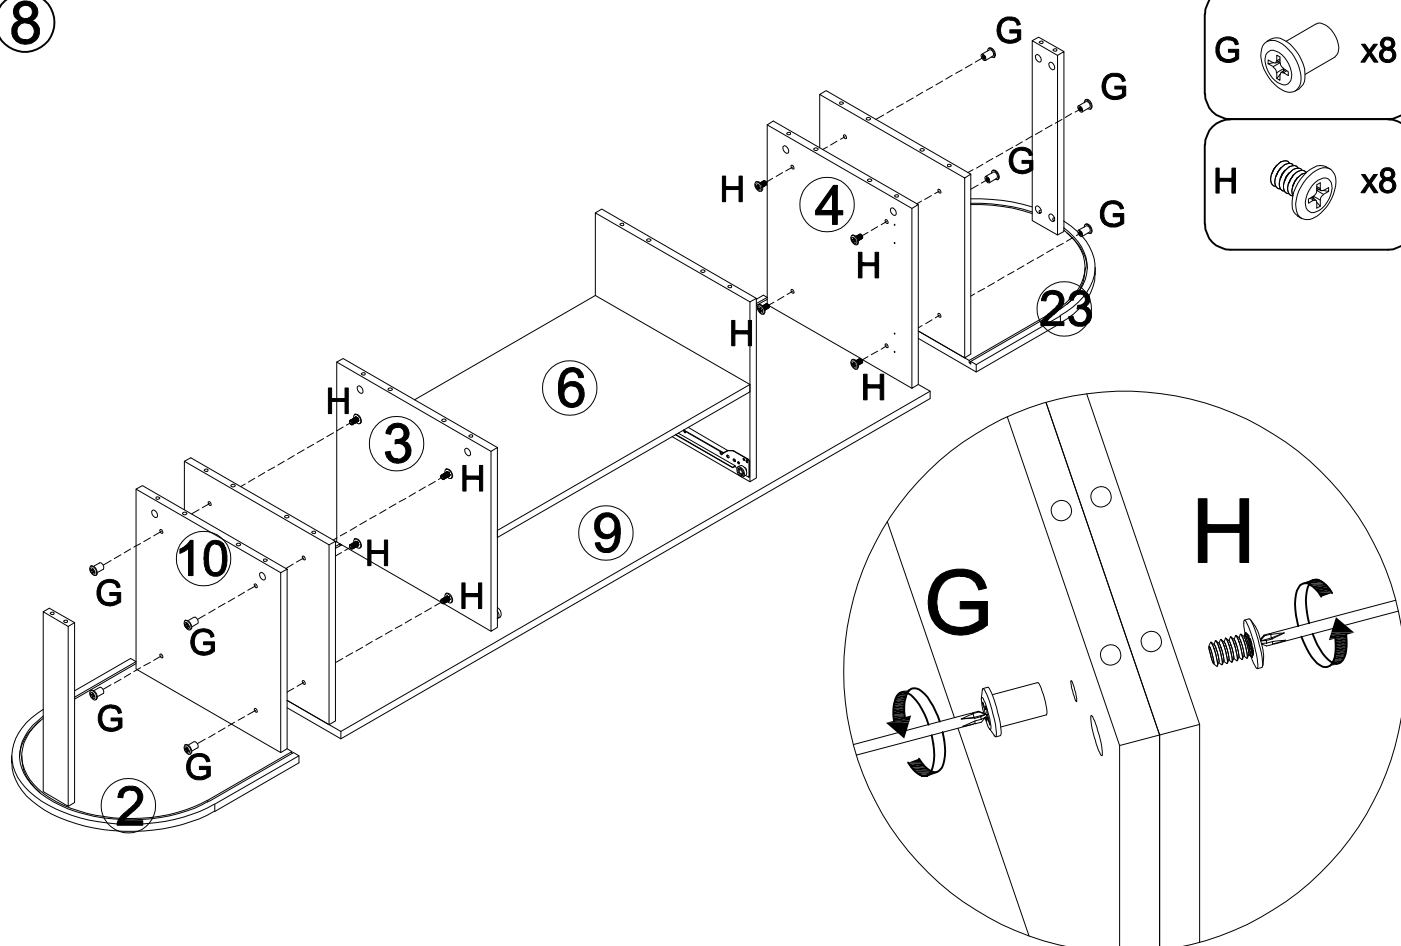


9

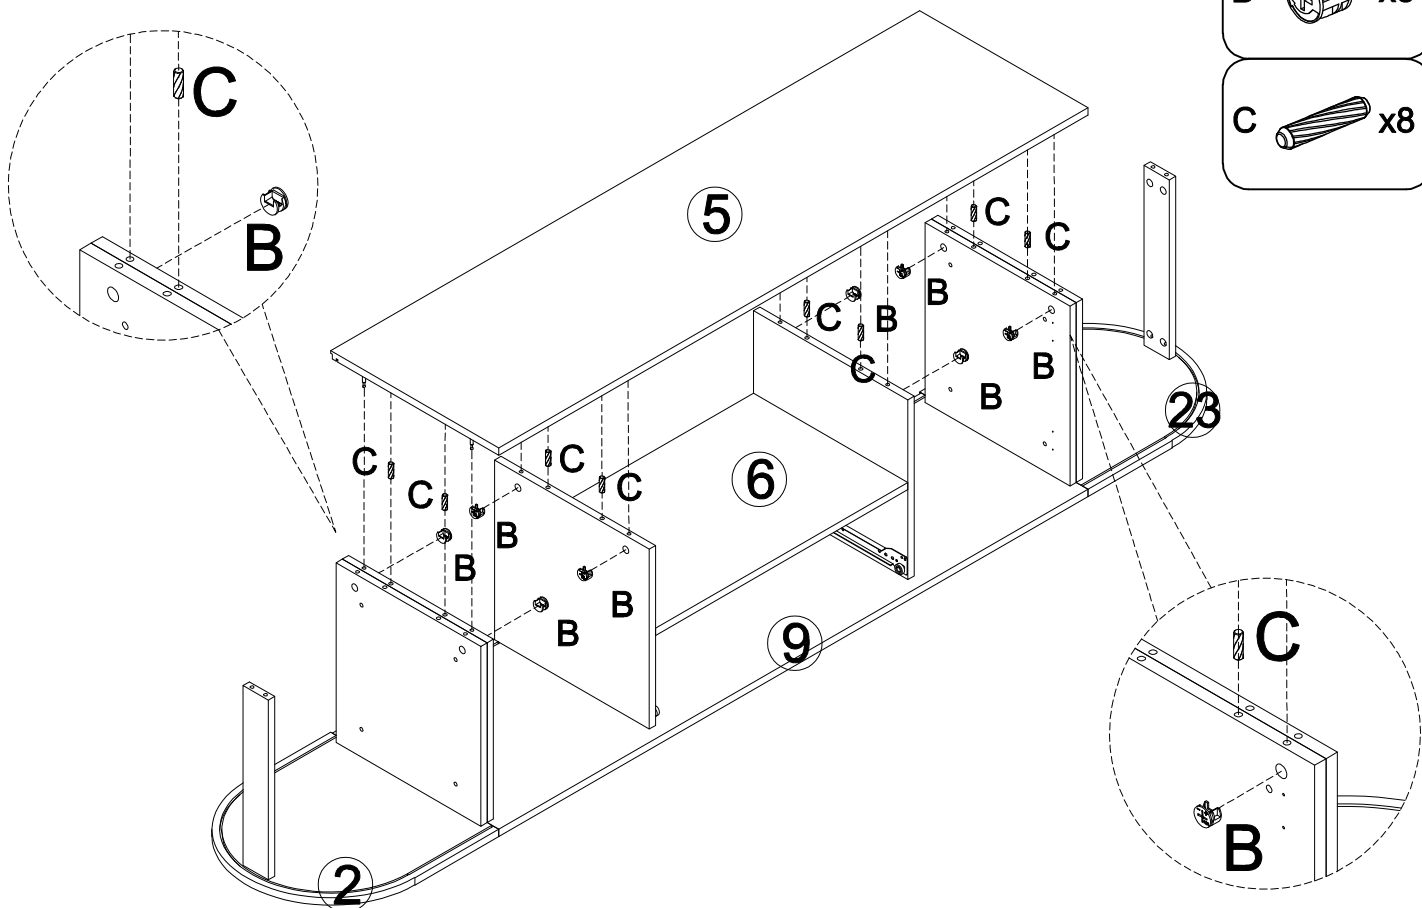


- B  x8
- C  x8

10

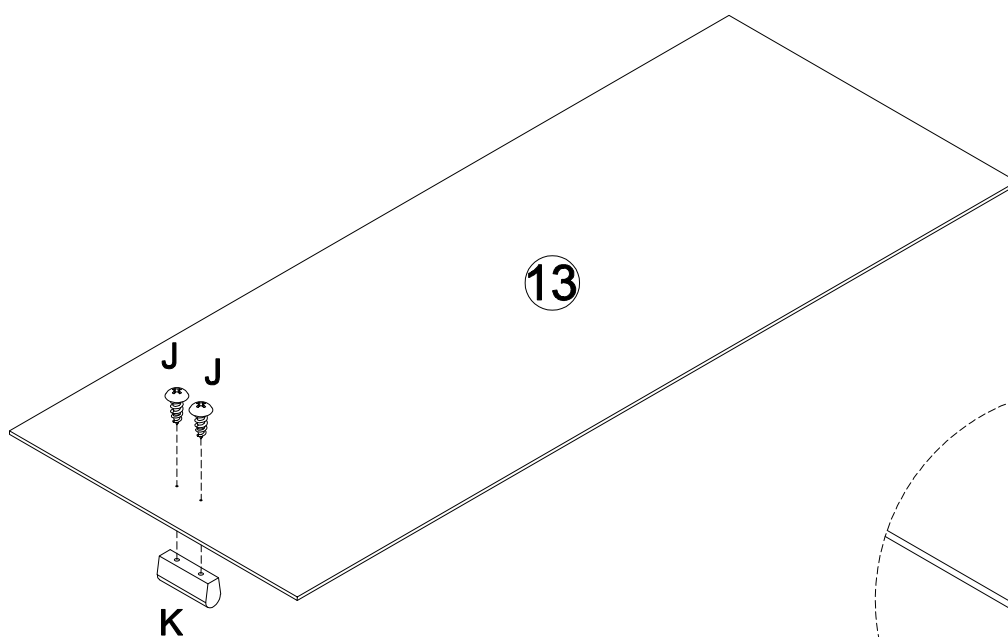


- K  x2
- J  x4


x2

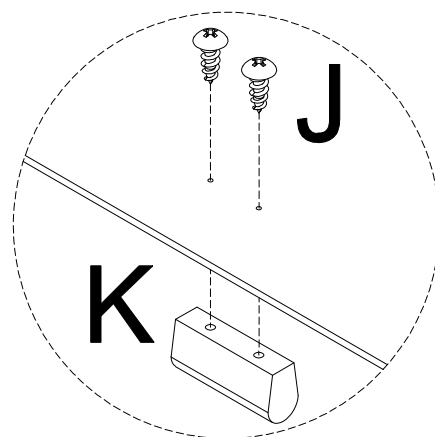


11

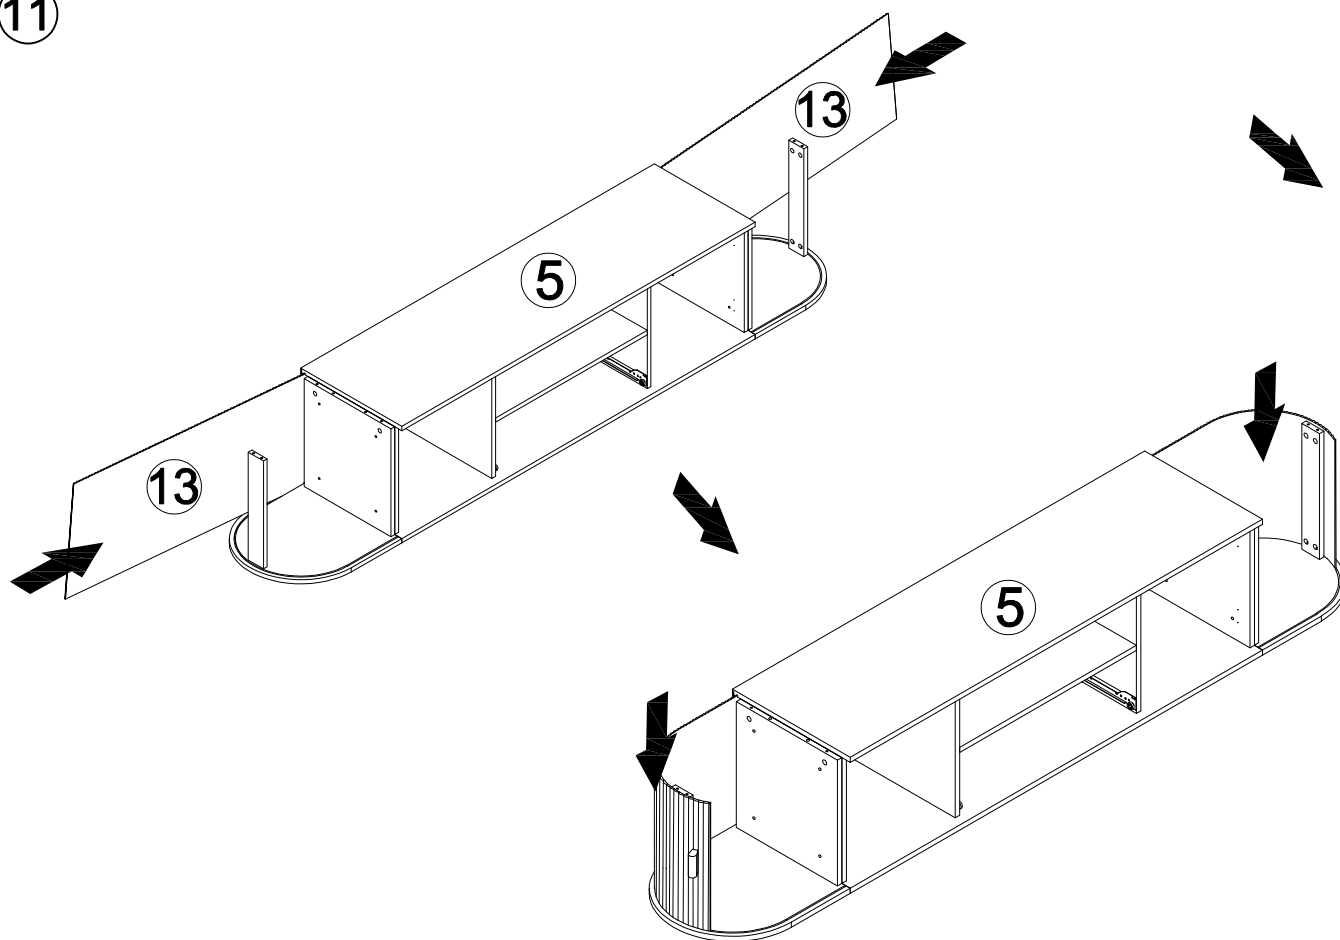

12

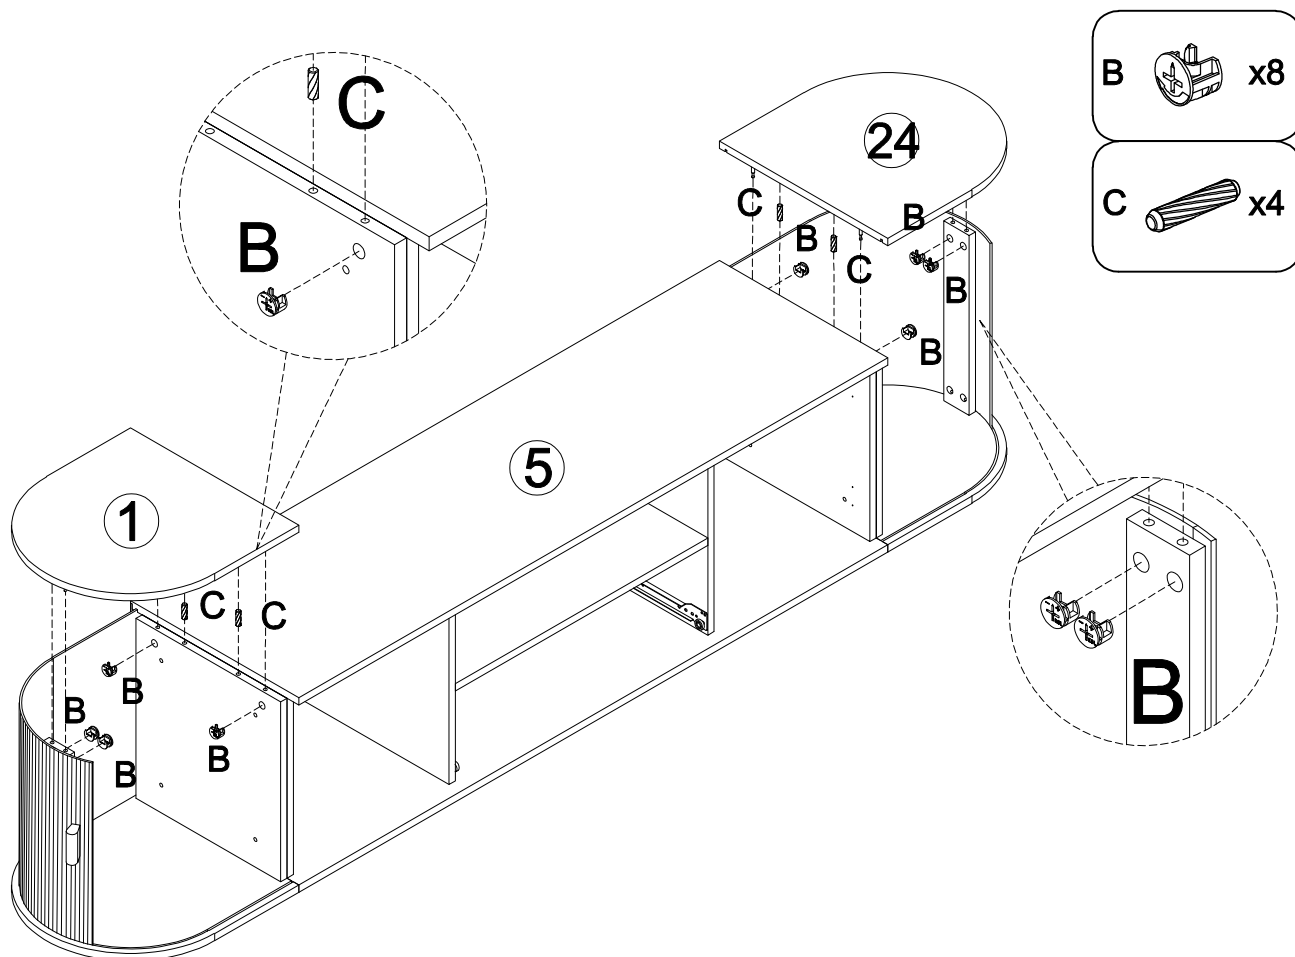


13

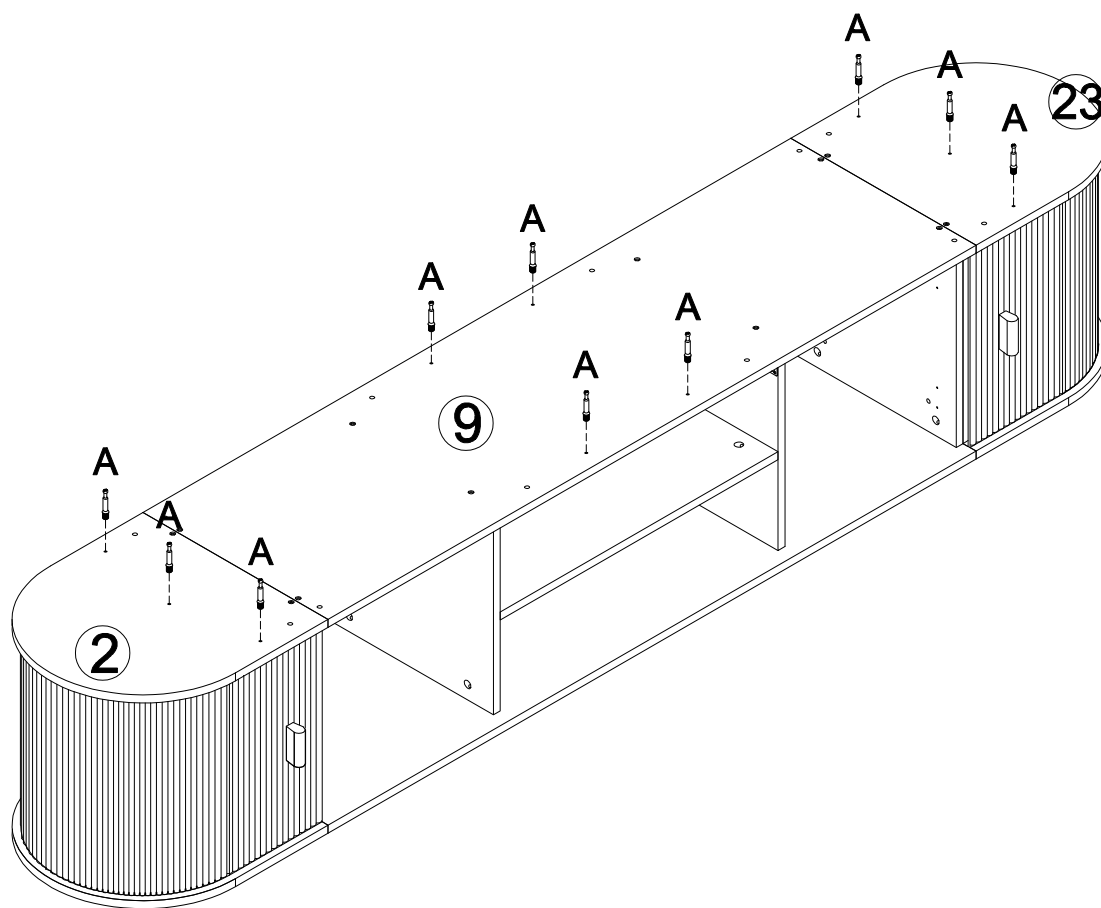



A x10

14



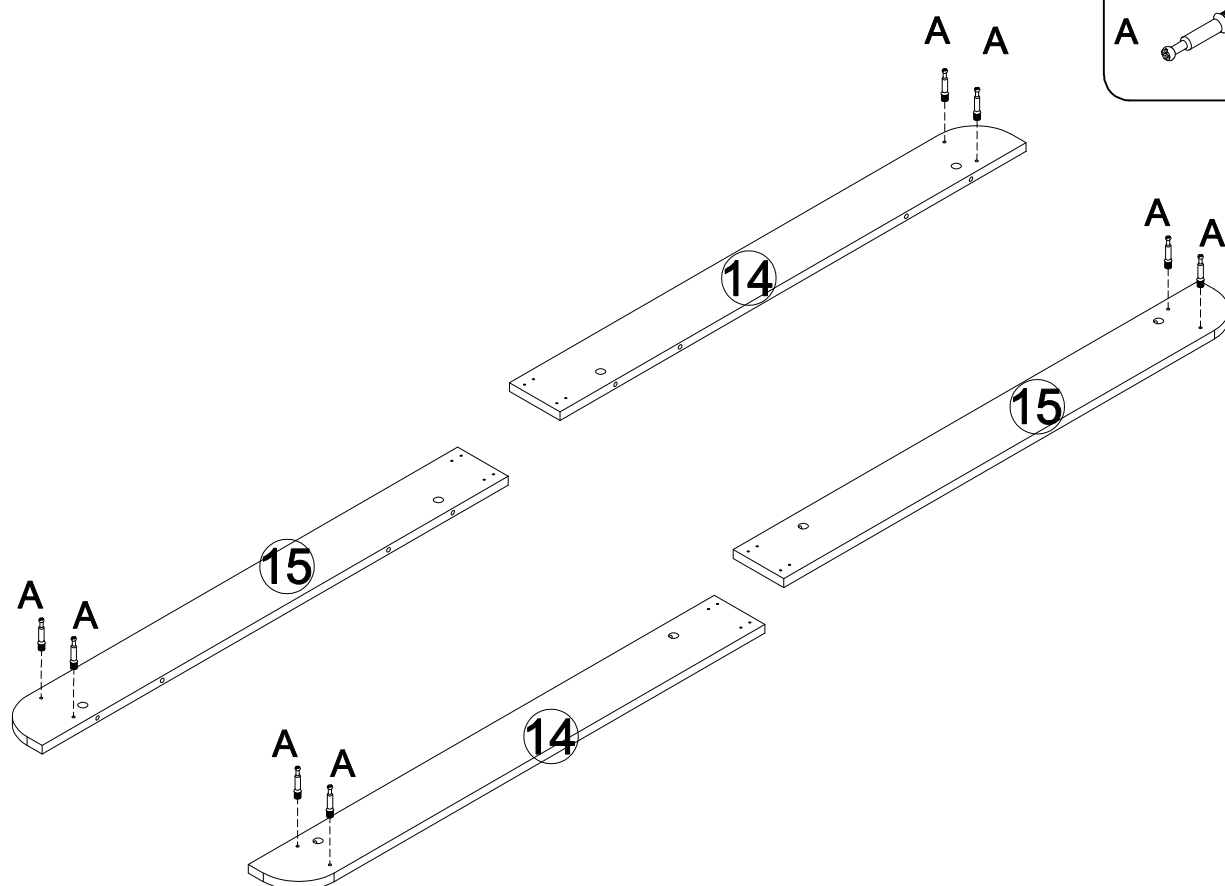


A x8




15

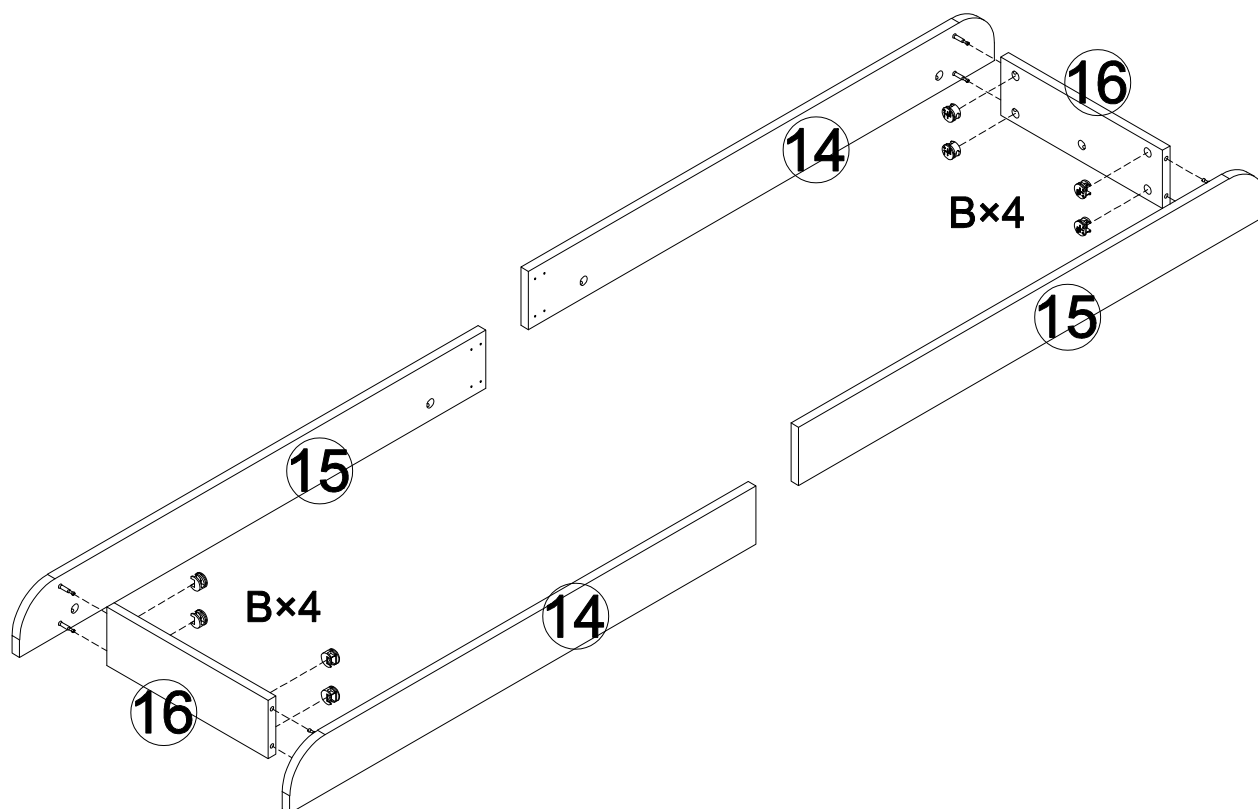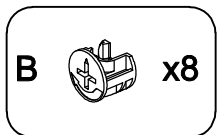


16

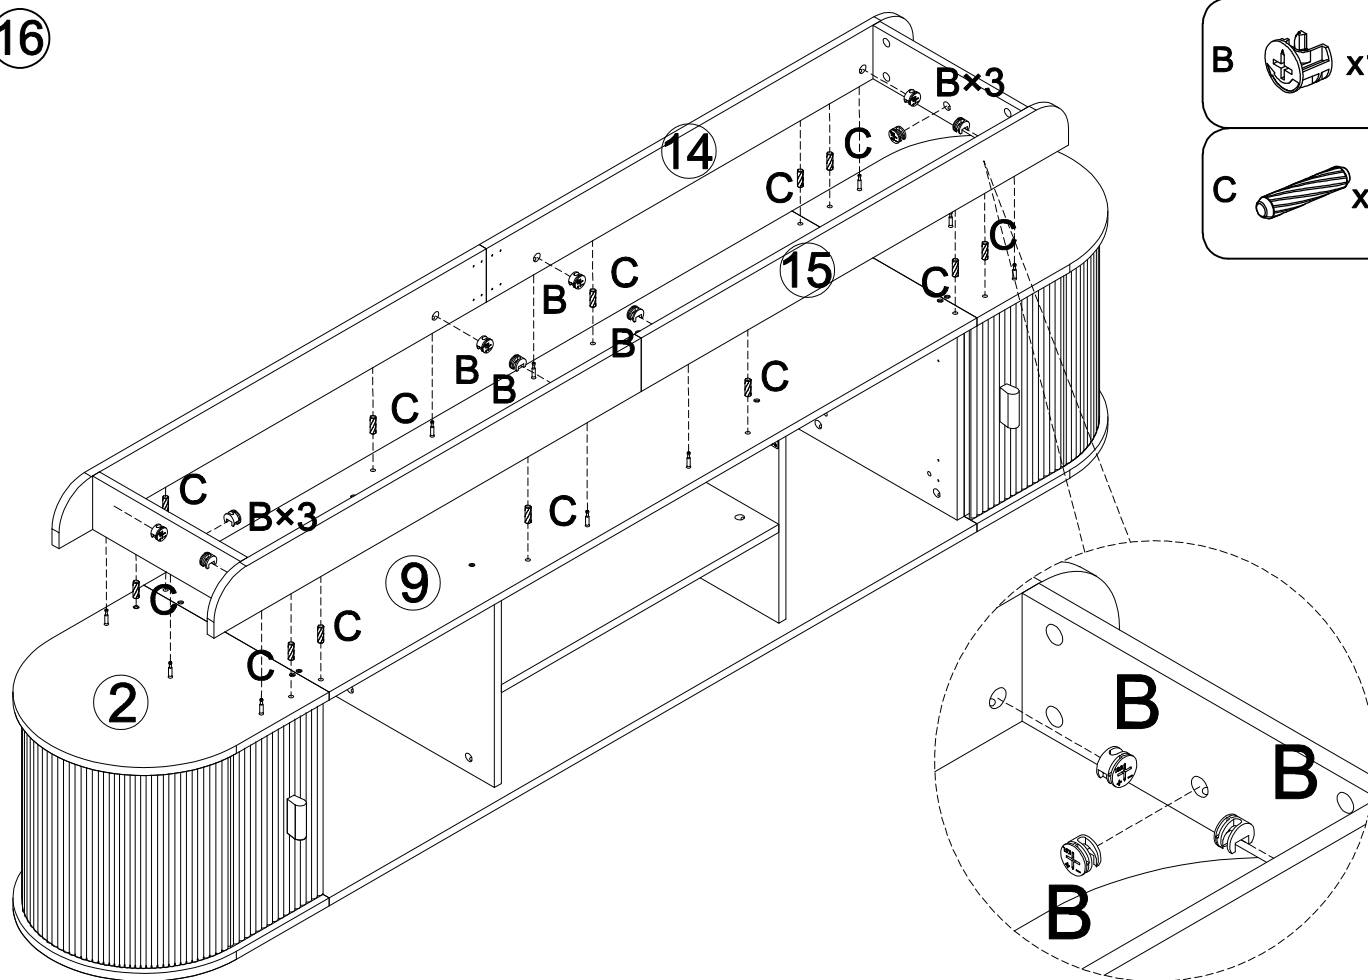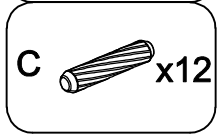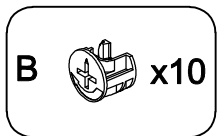


17

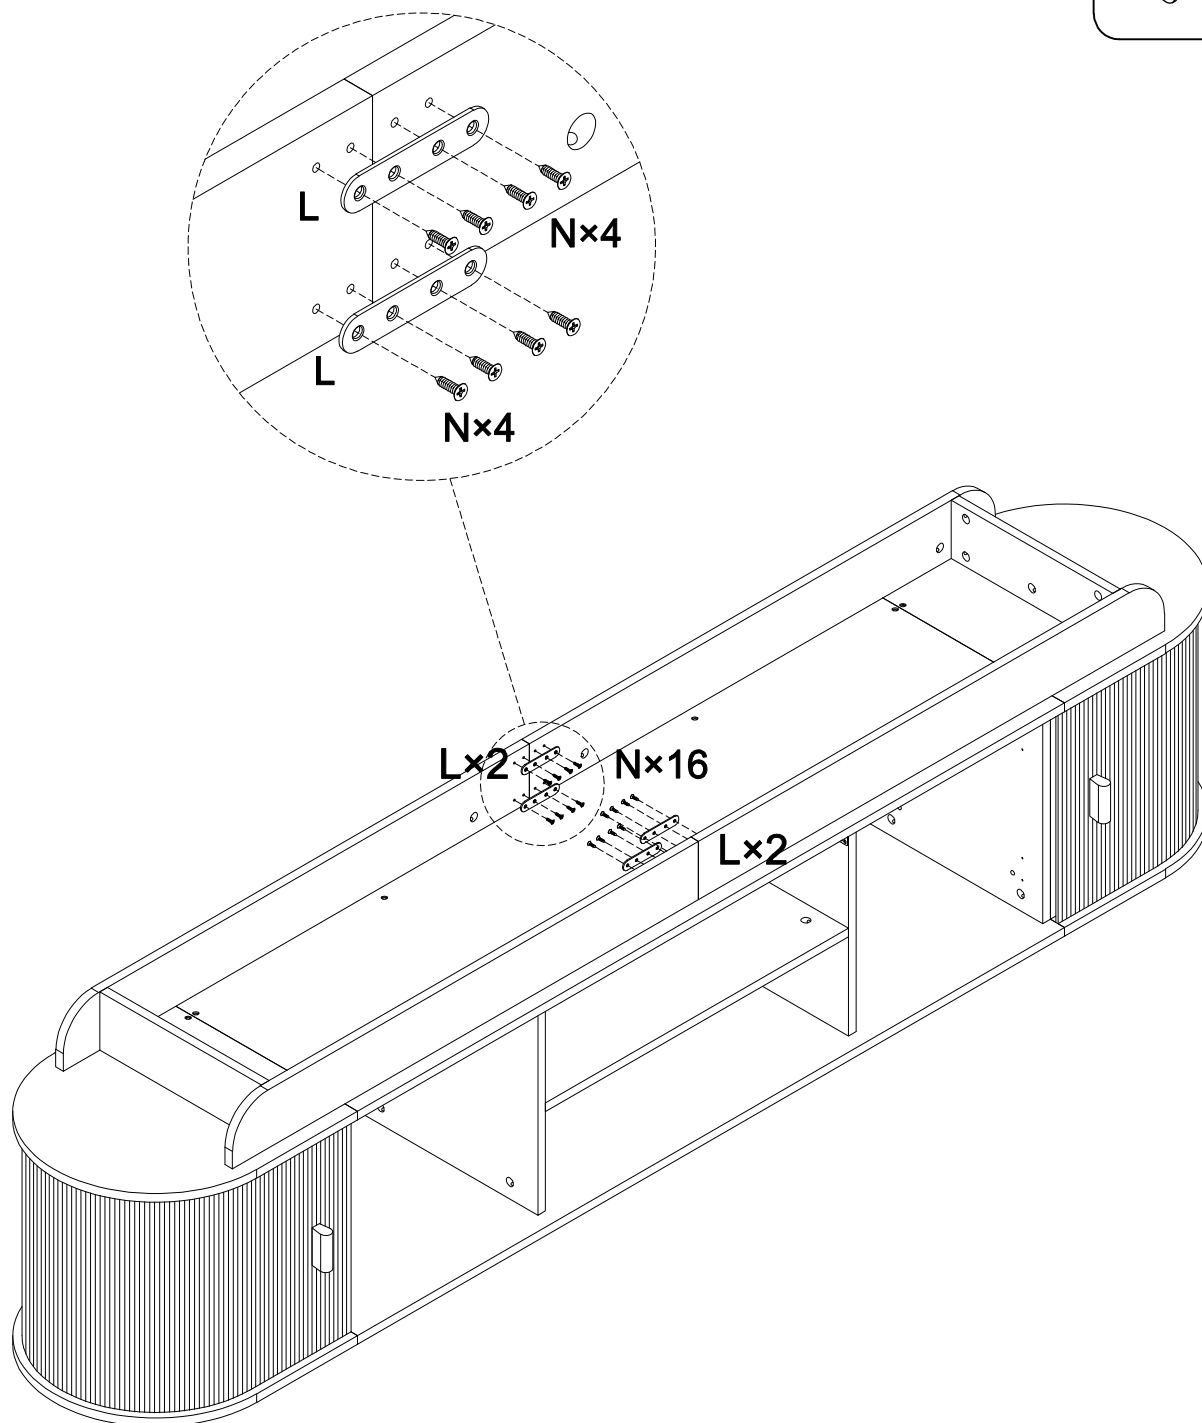
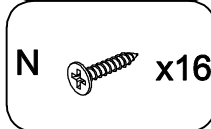
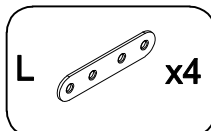


18


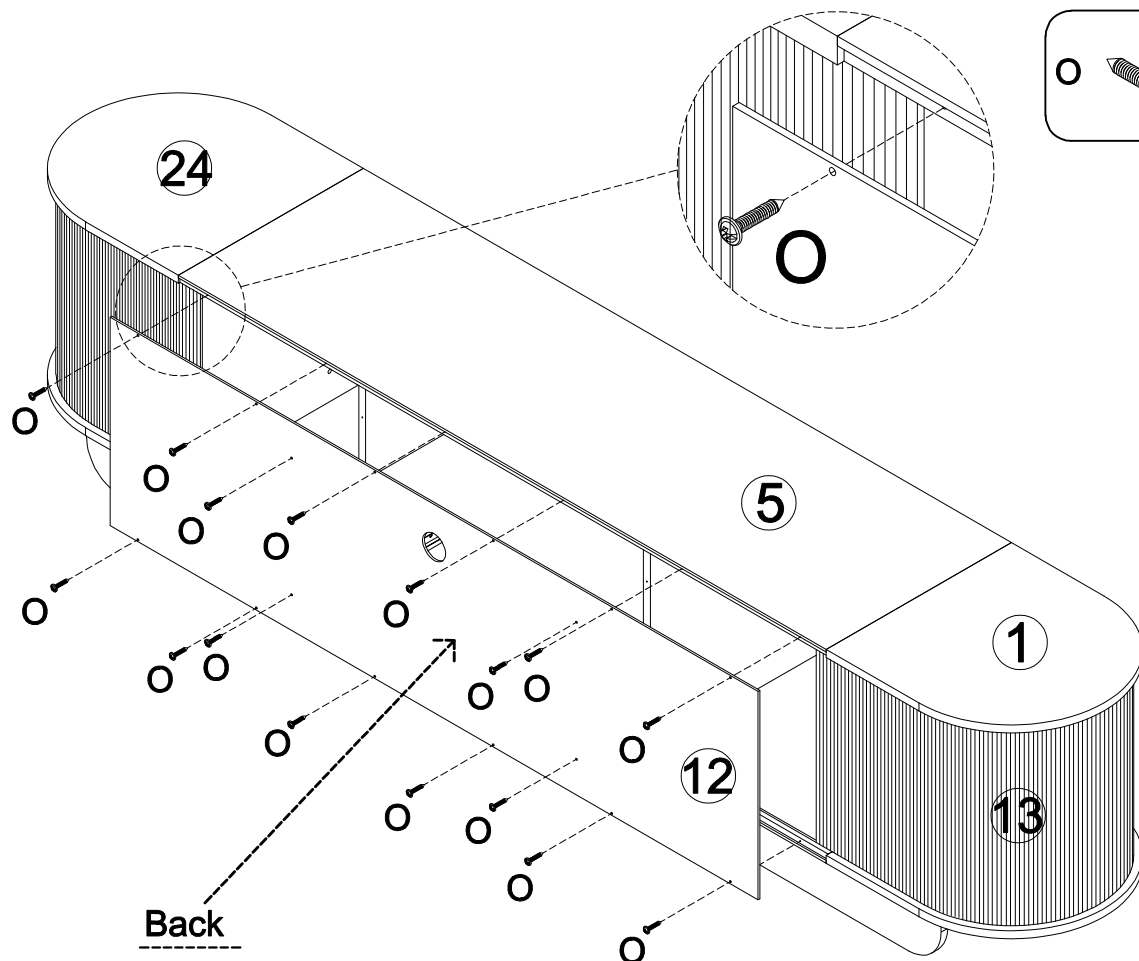


19

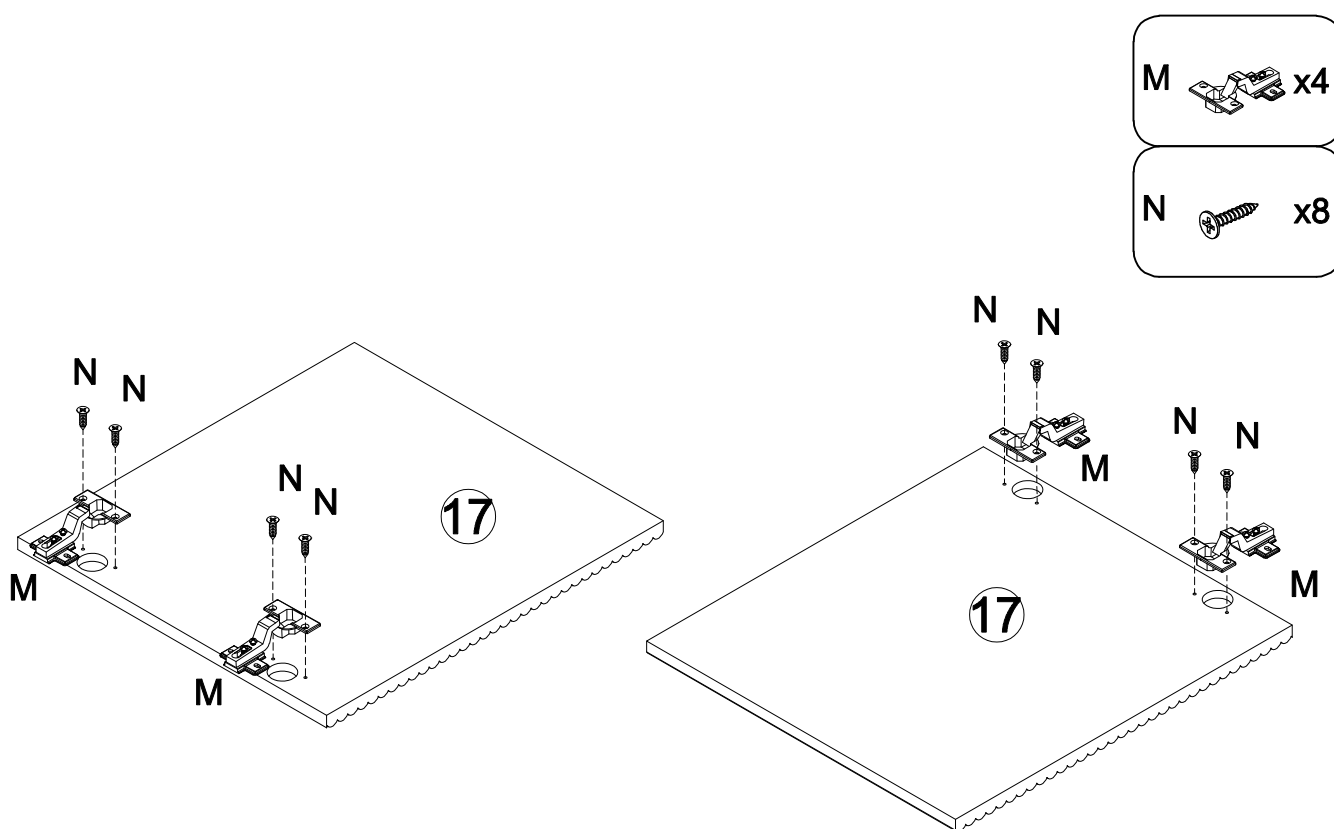


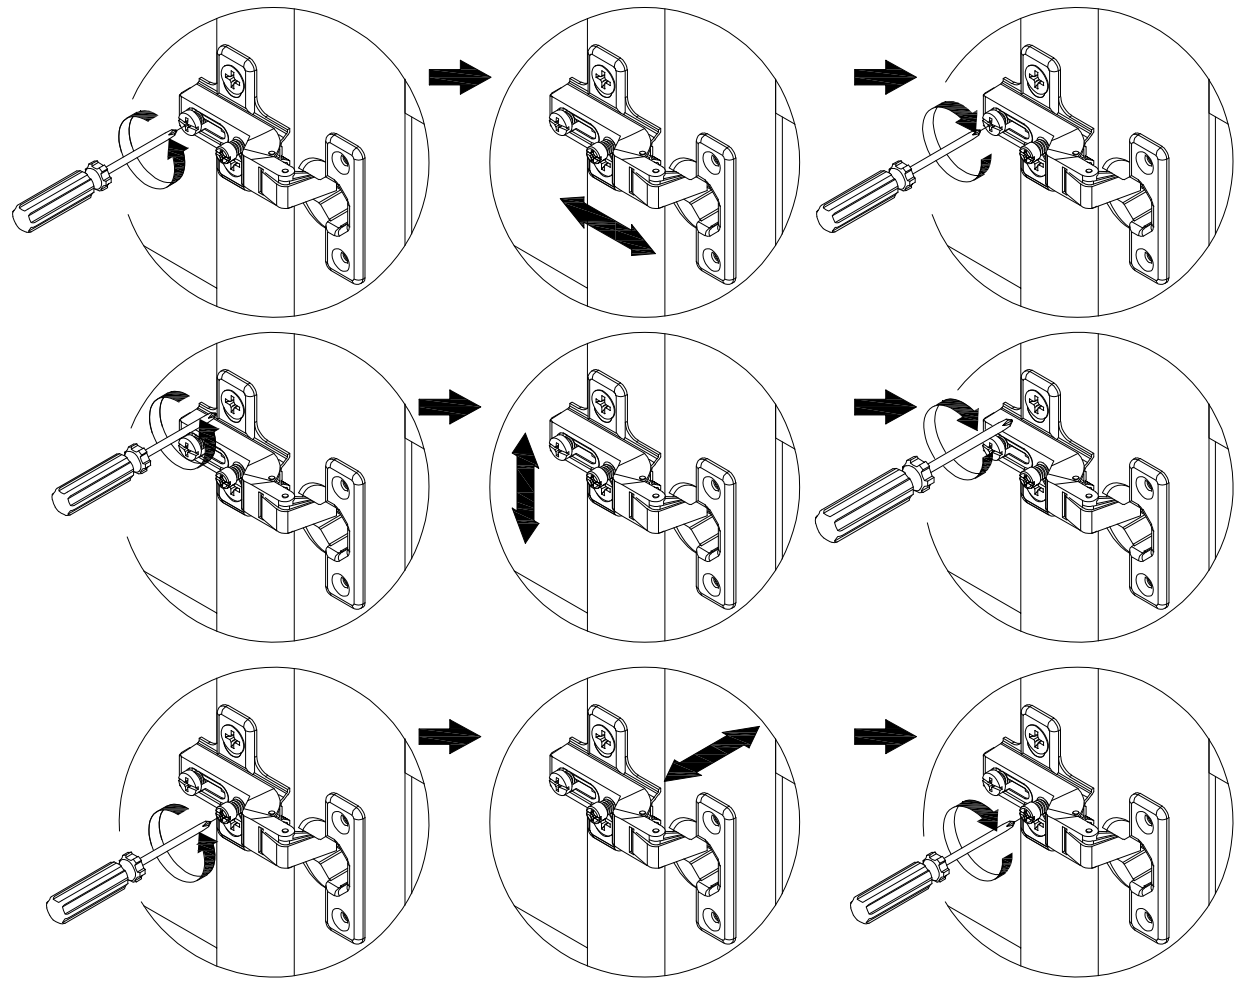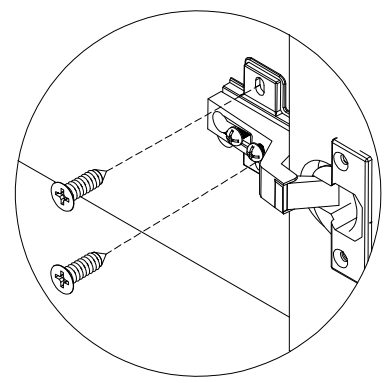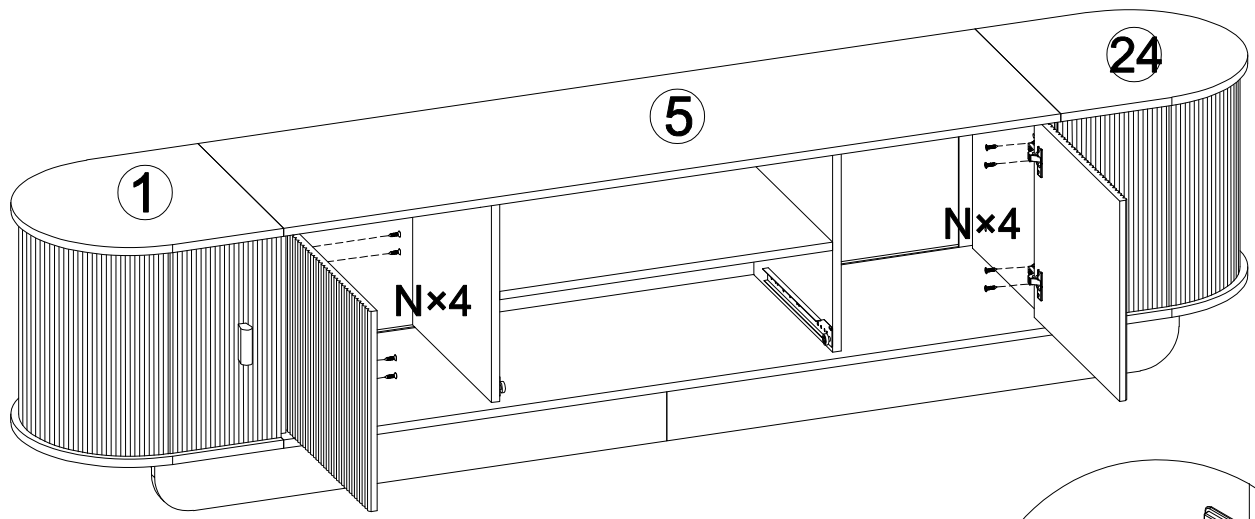

21

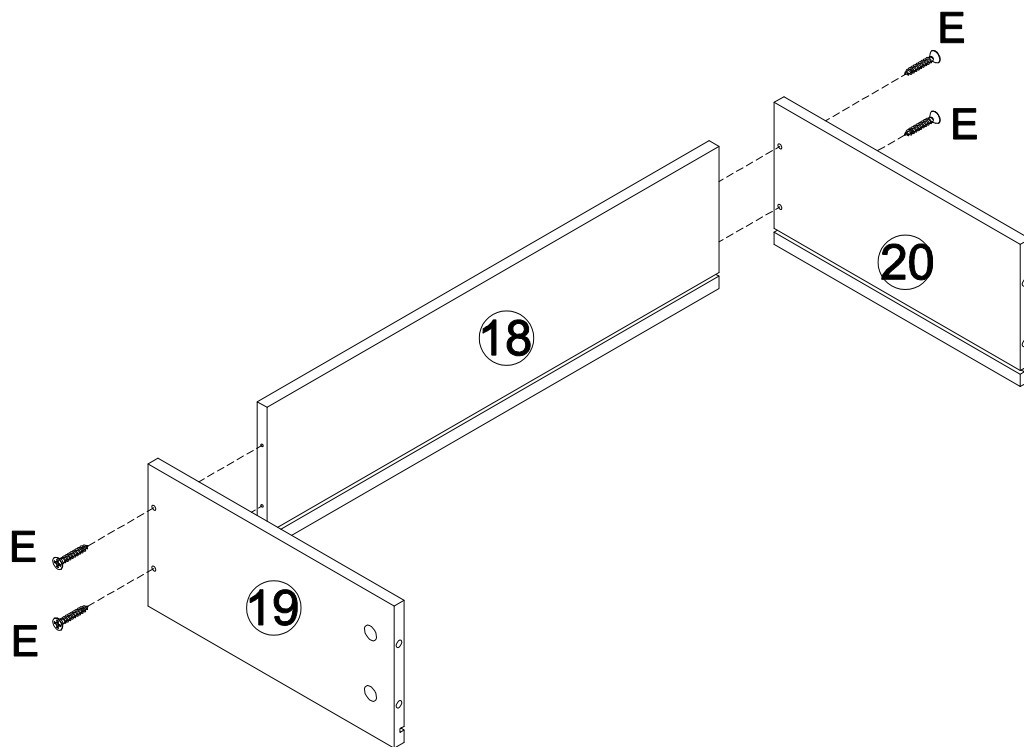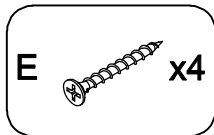


22

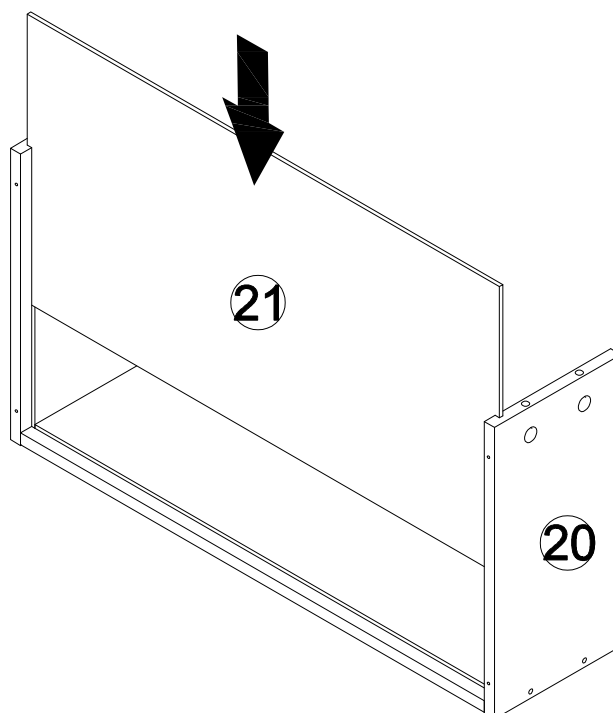


23

A  x4

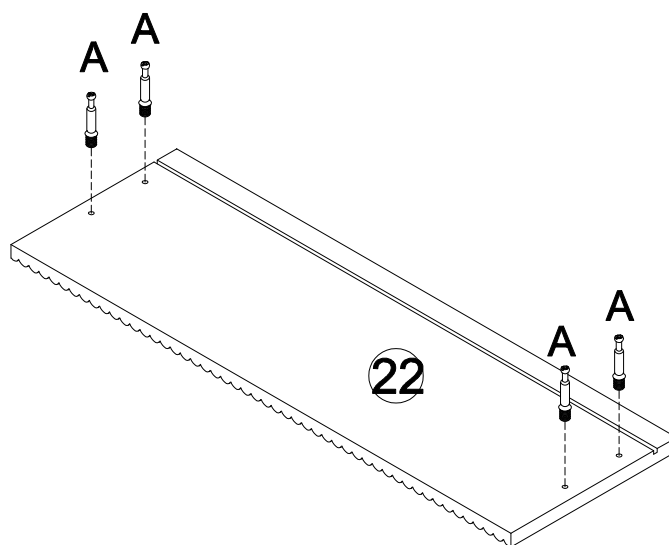


24

B  x4

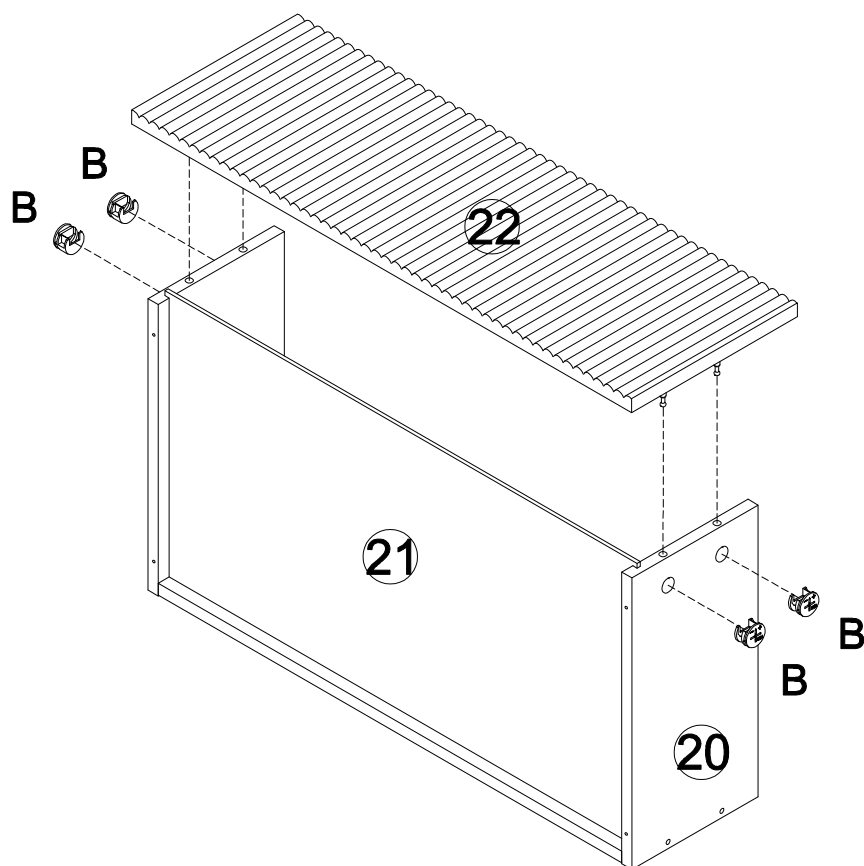


25

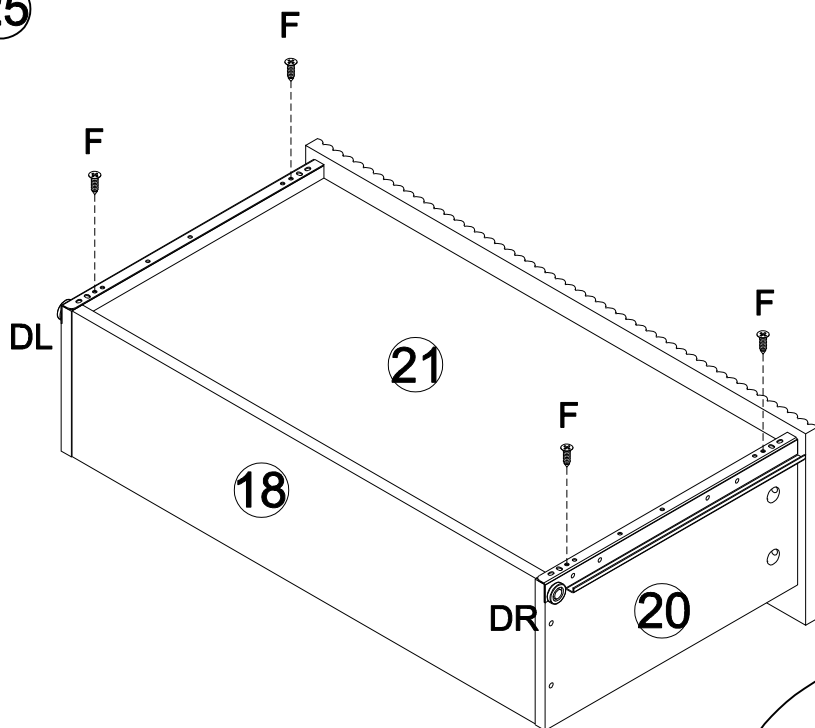

DR x1

DL x1

F x4

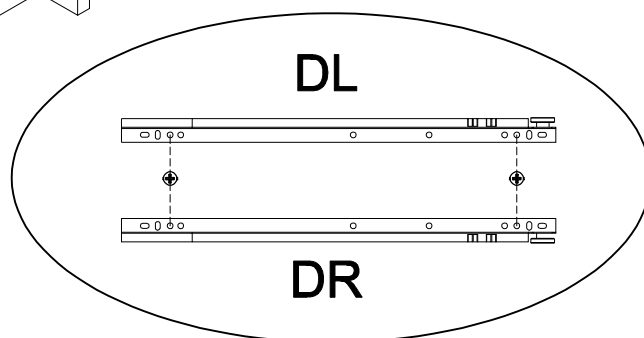

26

