




Assembly Instructions

MODEL NO.: OFD169

RECEPTION DESK SHELL

TUN010CL	TUN011KC		TUN021AG	TUN013LB	TUN018SC	TUN015BG
A  Cam Lock 22Pcs+4Pcs(spare)	B  Klix Cam 22 Pcs+4 Pcs(spare)	C  Dowel 9Pcs+2Pcs(spare)	D  Adjustable Glide 4Pcs	E  6 Hole L-Bracket 6Pcs	F  Screw #4*5/8" 36Pcs+5Pcs(spare)	G  60mm Black Grommet 2Pcs

STEP1

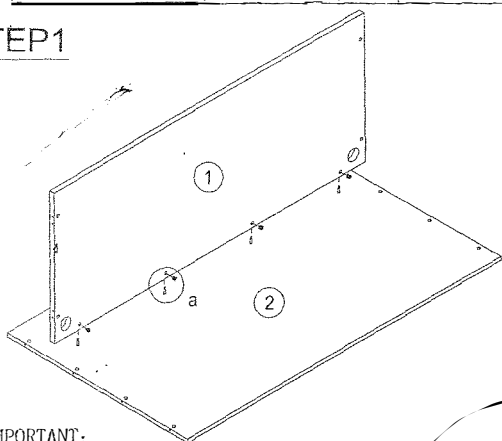


IMPORTANT:

FUNCTION OF KLIX CAM




1/4 RIGHT
TURN FOR
LOCKING



MAKE SURE THE ARROW IS
POINTING UPWARDS
BEFORE INSERTING INTO
THE PANEL'S HOLE.

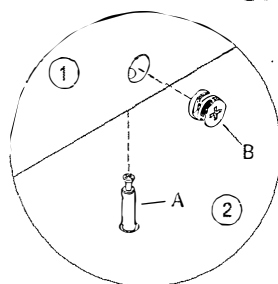

STEP2

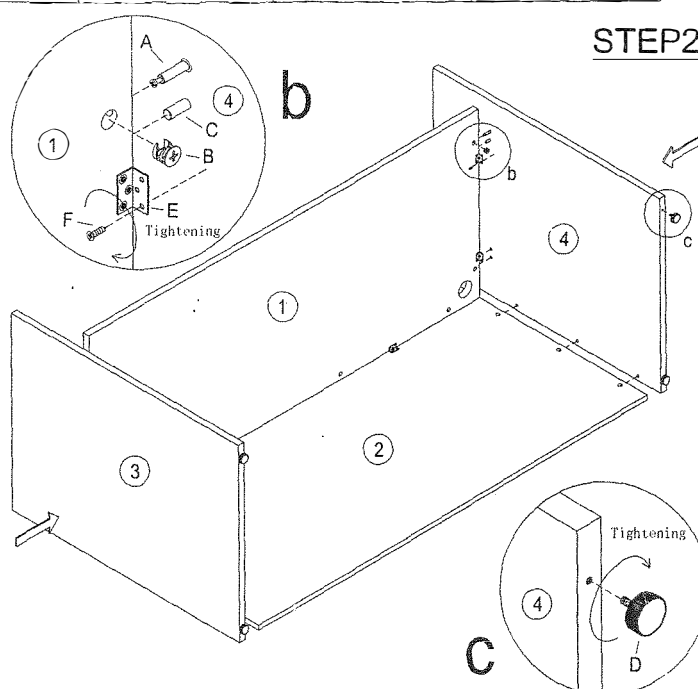

STEP3

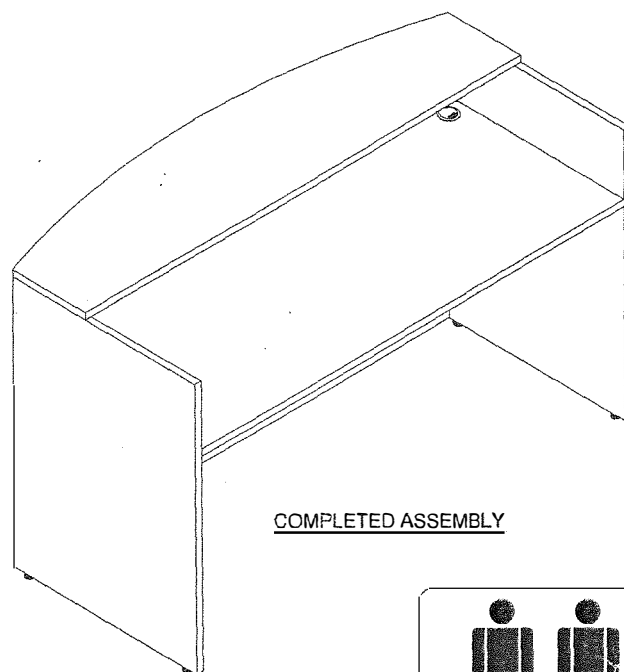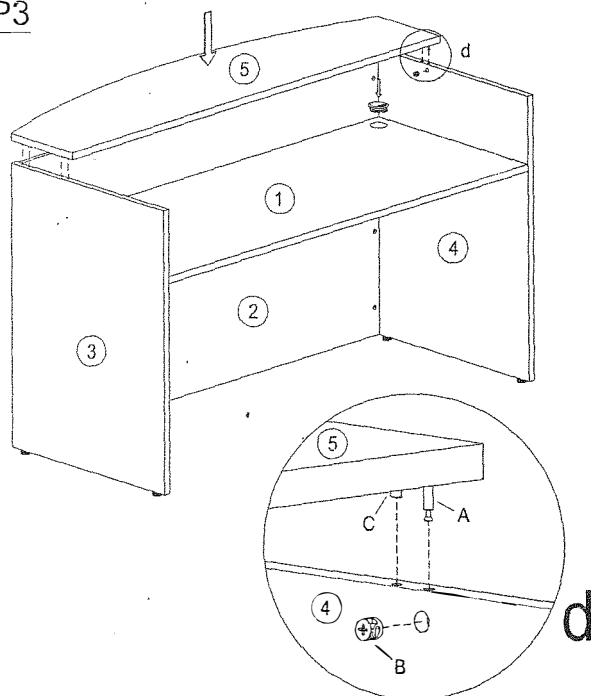

COMPLETED ASSEMBLY












TWO PEOPLE ARE REQUIRED TO
ASSEMBLE AND MOVE THIS MODEL

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws/bolts until all completely assembled.

Please follow these instruction for easy assembly.

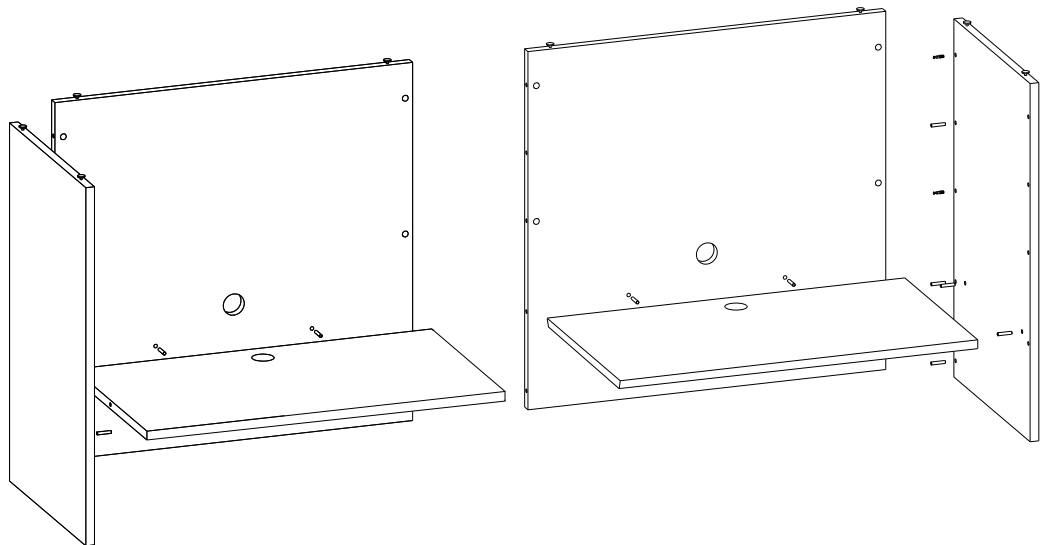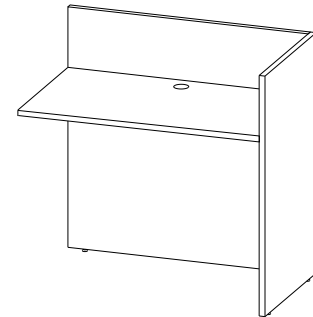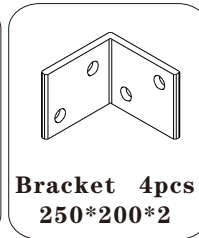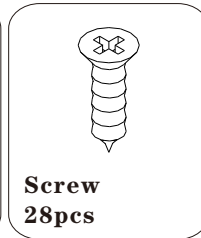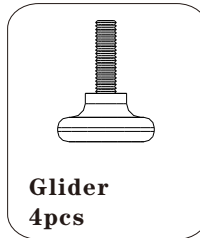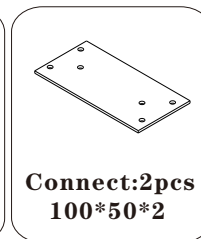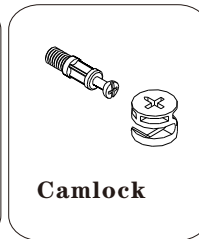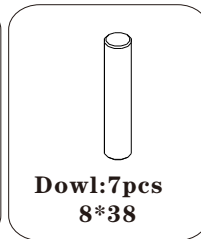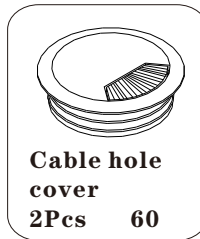

IMPORTANT!!

- ! Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- ! Check that you have all parts and hardware .
- ! Remove all wrapping materials,including staples & packing straps before you start to

No. UP180