


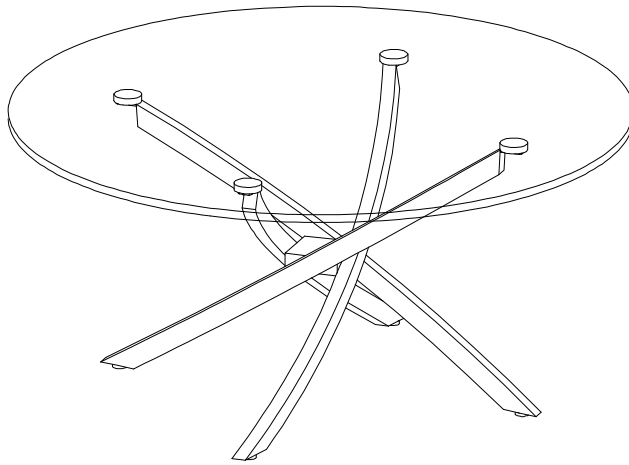



# Assembly Instructions







Please install the products on carpet or soft place

## Parts List


No.	Sketch	Description	Qty
A		Glass Top	1
B		Leg	4
C		Iron Box	1
D		Adjustable Feet	4

## Hardware List


No.	Sketch	Description	Qty
1		Bolts M8x16	4
2		Bolts M8x8	4
3		Offset Ring Spanner	1
4		Allen Key	1

## STEP 1



The hole spacing corresponds to the leg

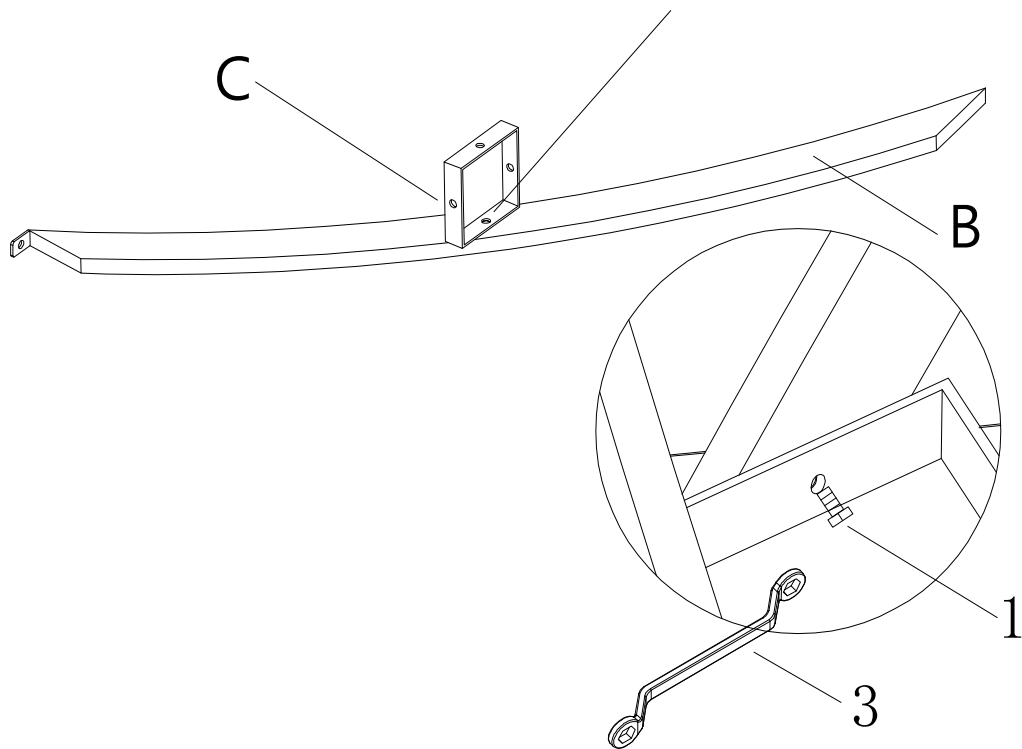



Note: The opening direction of the box should be consistent with the picture

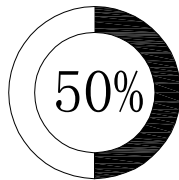

50% tighten all the screws

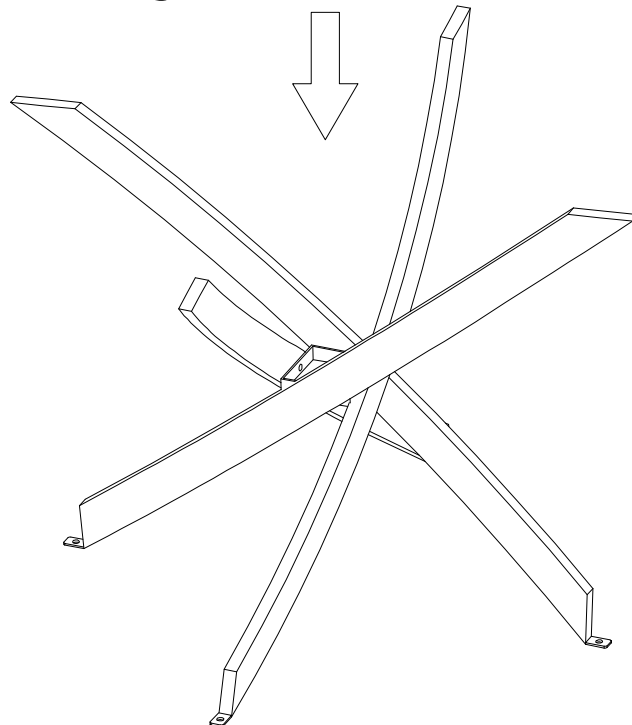


## STEP 2

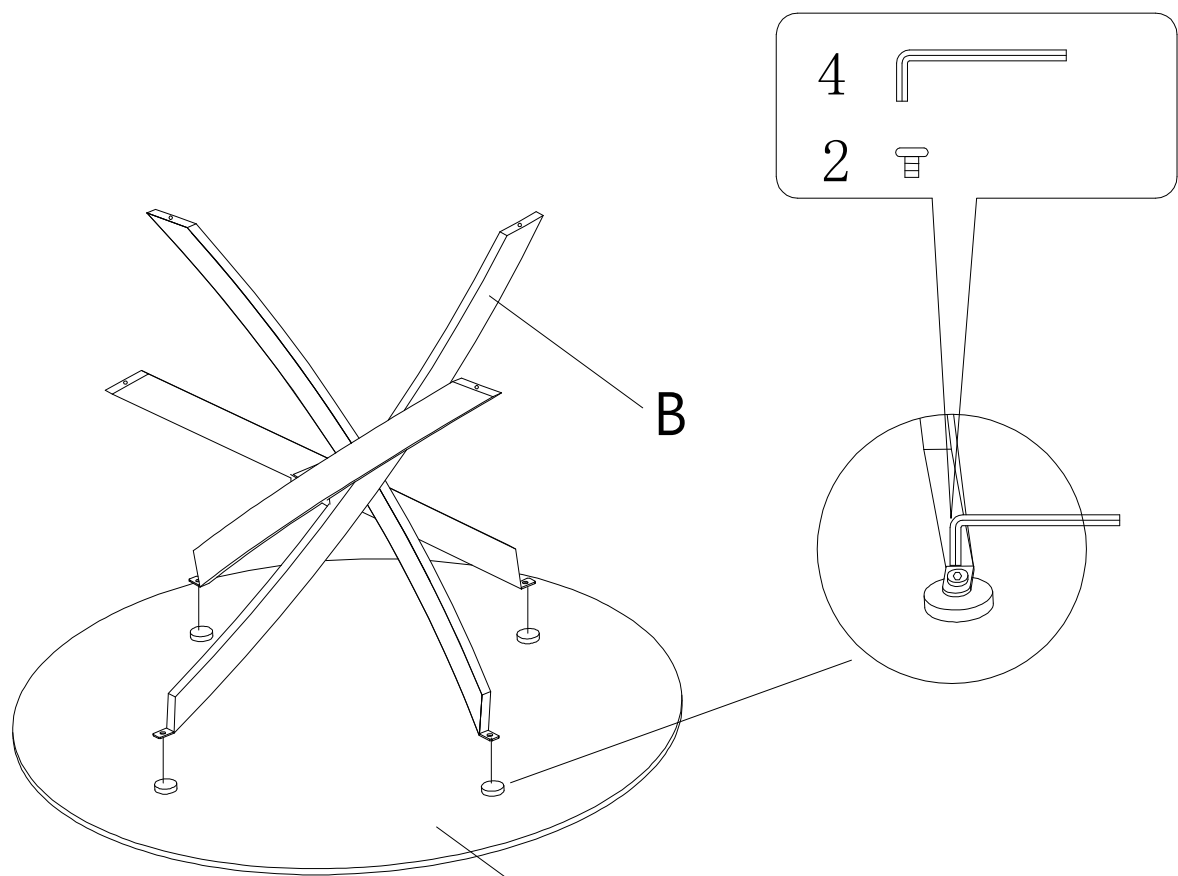


A

B


4



2

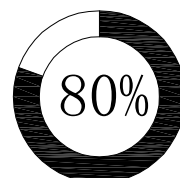


80% tighten all the screws

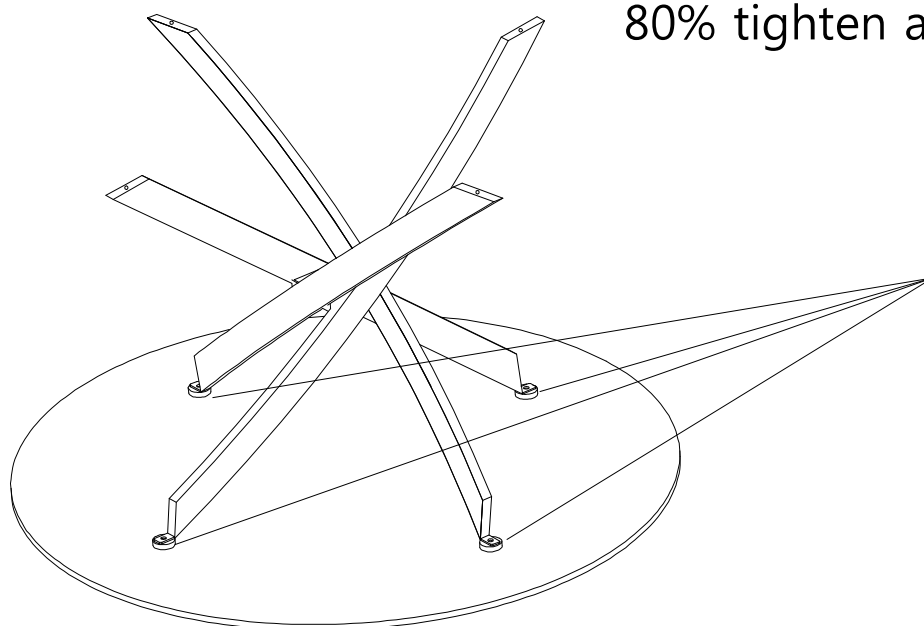


# STEP 3


1.

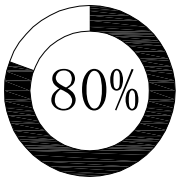


80% tighten all the screws

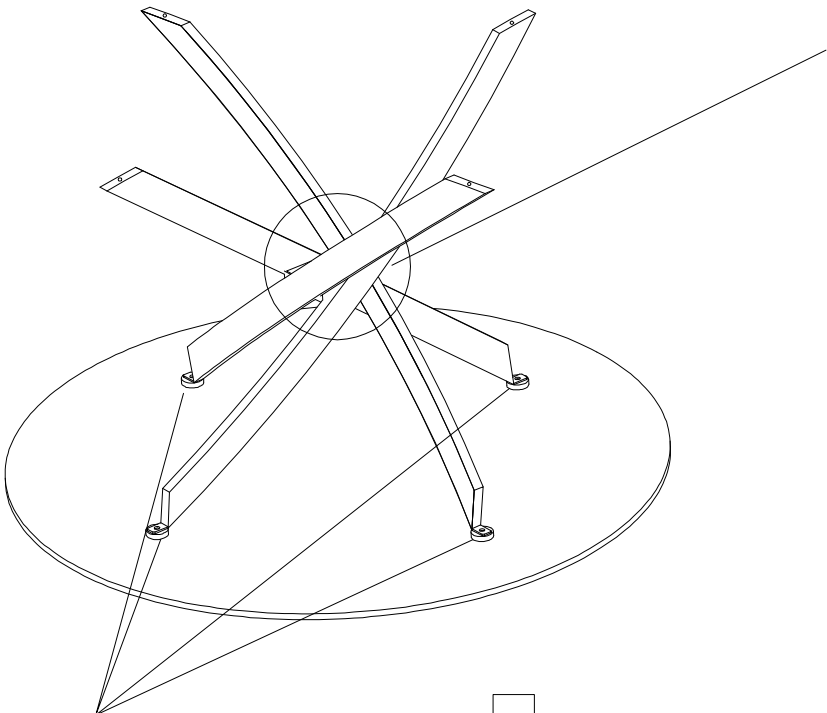

2.

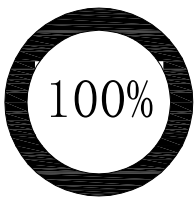


Tighten all the screws




After alingning feet


3.

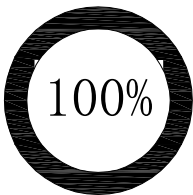

Tighten all the screws

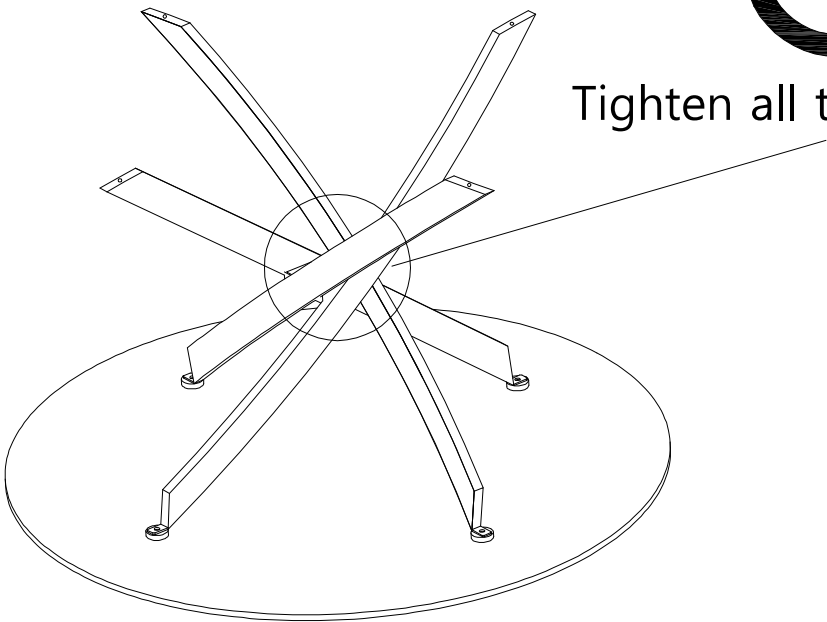

## STEP 4

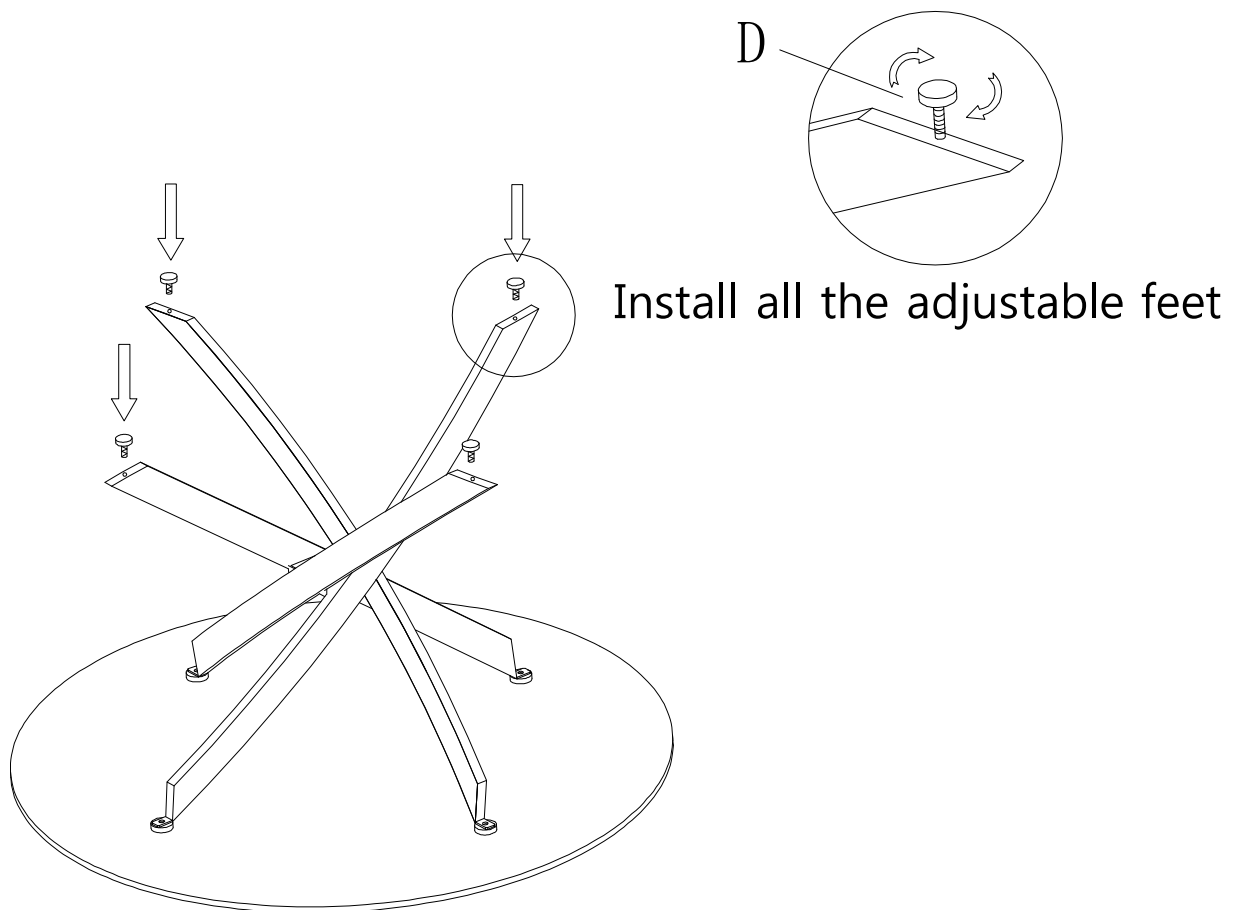

## COMPLETED

