





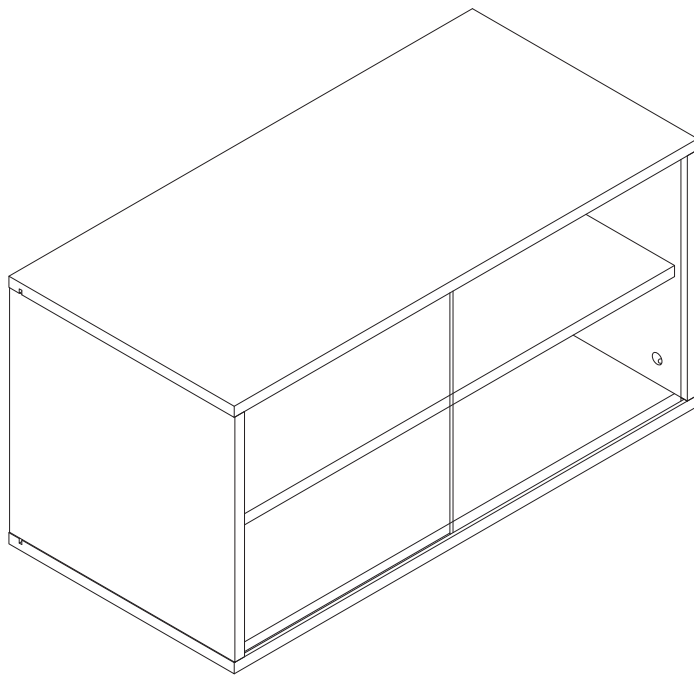







Installation & Assembly

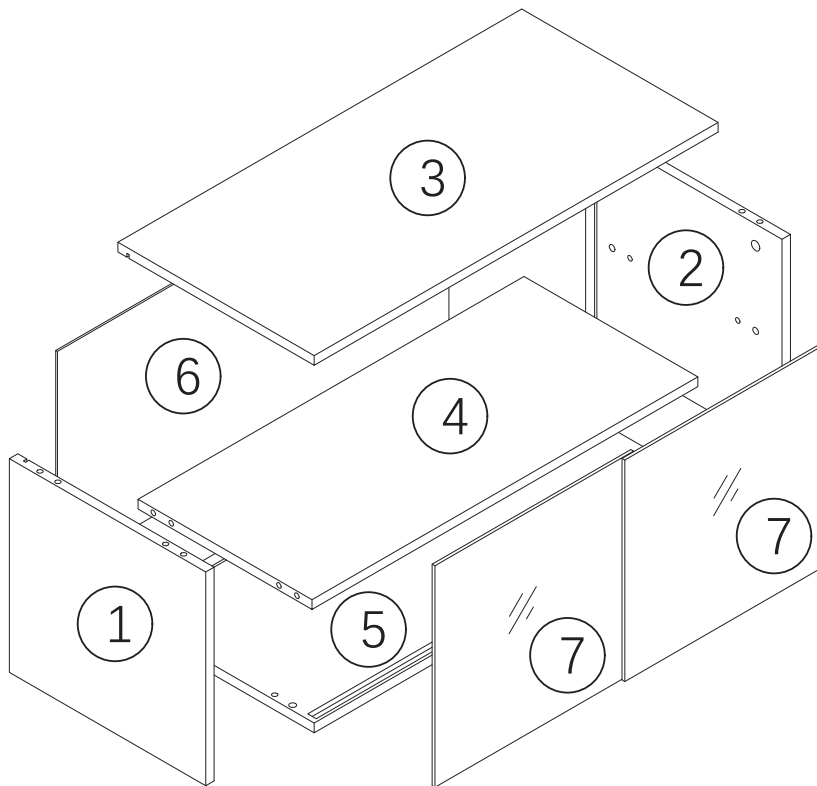




<p>A</p>  <p>12PCS</p>	<p>B</p>  <p>12PCS</p>	<p>C</p> <p>8*40</p>  <p>12PCS</p>	<p>D</p>  <p>6PCS</p>	<p>E</p> <p>3*12</p>  <p>6PCS</p>	<p>F</p> <p>3.5*14</p>  <p>1PC</p>	<p>G</p> <p>3.5*35</p>  <p>1PC</p>	<p>H</p> <p>6*30</p>  <p>1PC</p>	<p>I</p>  <p>1PC</p>	<p>J</p>  <p>8PCS</p>
--	---	---	--	--	---	--	---	---	--




Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I






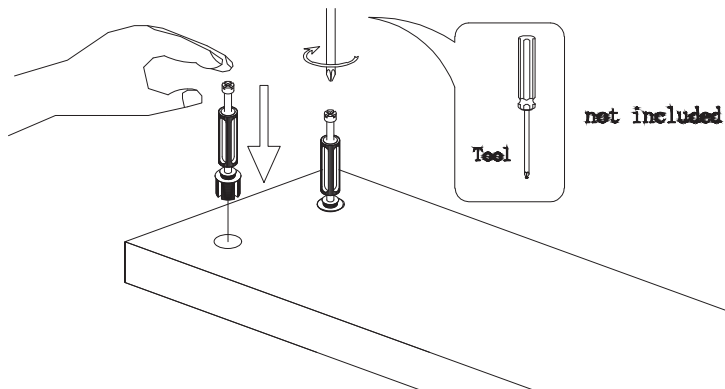



II

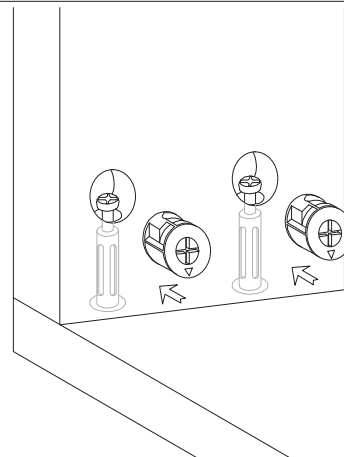


III

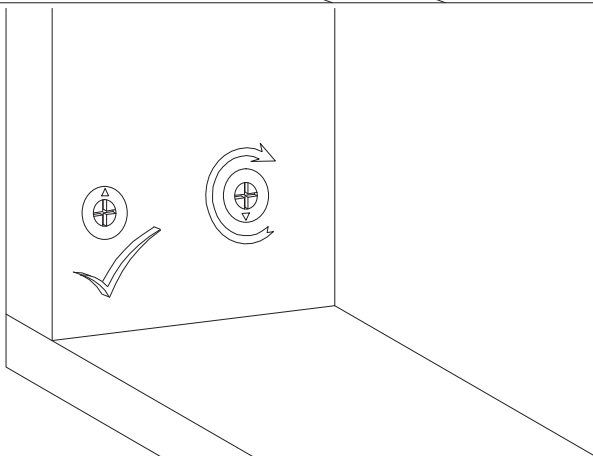
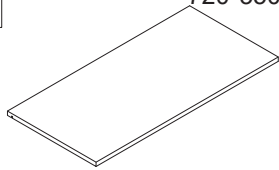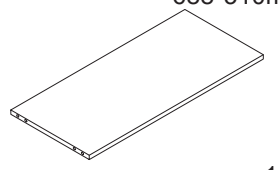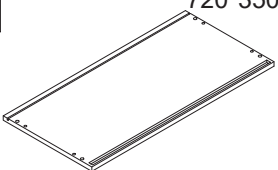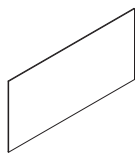
<p>1</p> <p>350*330mm</p>  <p>13.8*13"</p> <p>1pc</p>	<p>2</p> <p>350*330mm</p>  <p>13.8*13"</p> <p>1pc</p>	<p>3</p> <p>720*350mm</p>  <p>28.3*13.8"</p> <p>1pc</p>	<p>4</p> <p>688*310mm</p>  <p>27.1*12.2"</p> <p>1pc</p>
<p>5</p> <p>720*350mm</p>  <p>28.3*13.8"</p> <p>1pc</p>	<p>6</p> <p>698*340mm</p>  <p>27.5*13.4"</p> <p>1pc</p>	<p>7</p> <p>354*342mm</p>  <p>13.9*13.5"</p> <p>2pcs</p>	

1

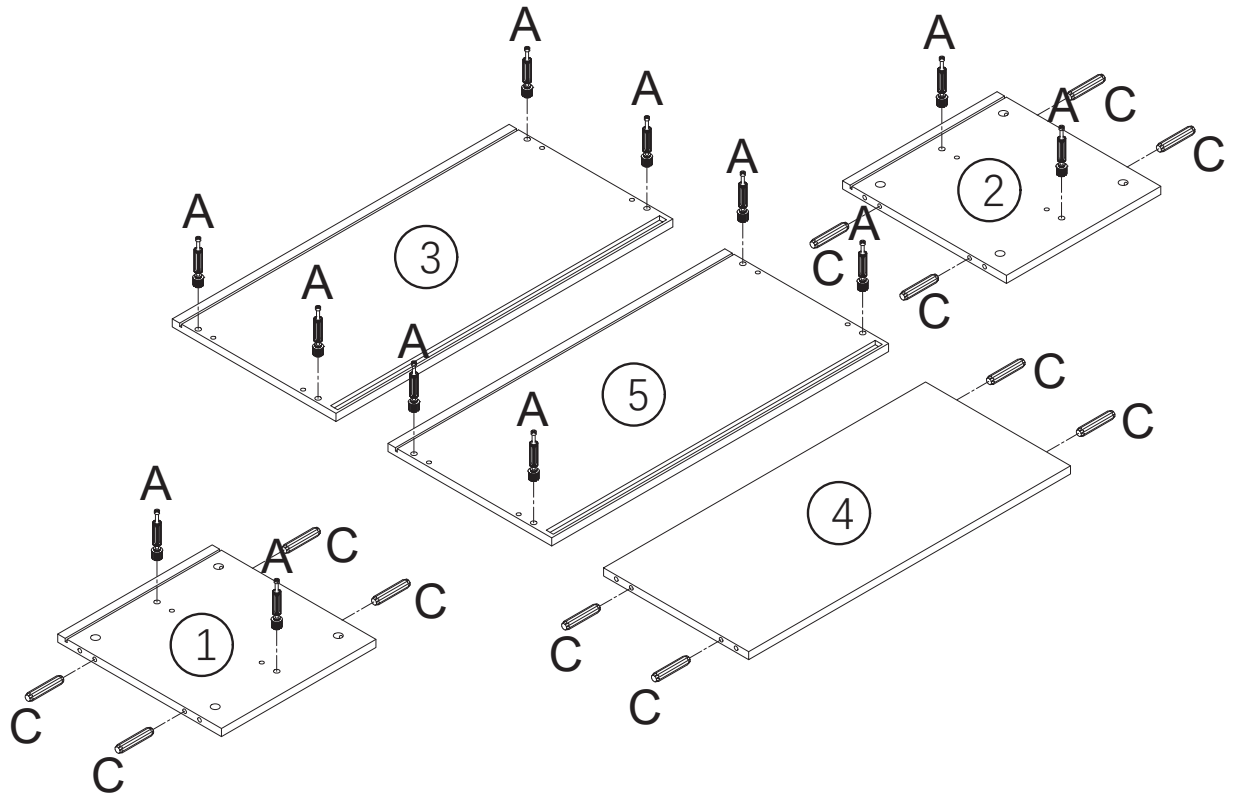


Put A on (1) (2) (3) (5)

Put C on (1) (2) (4)

A*12 C*12


2

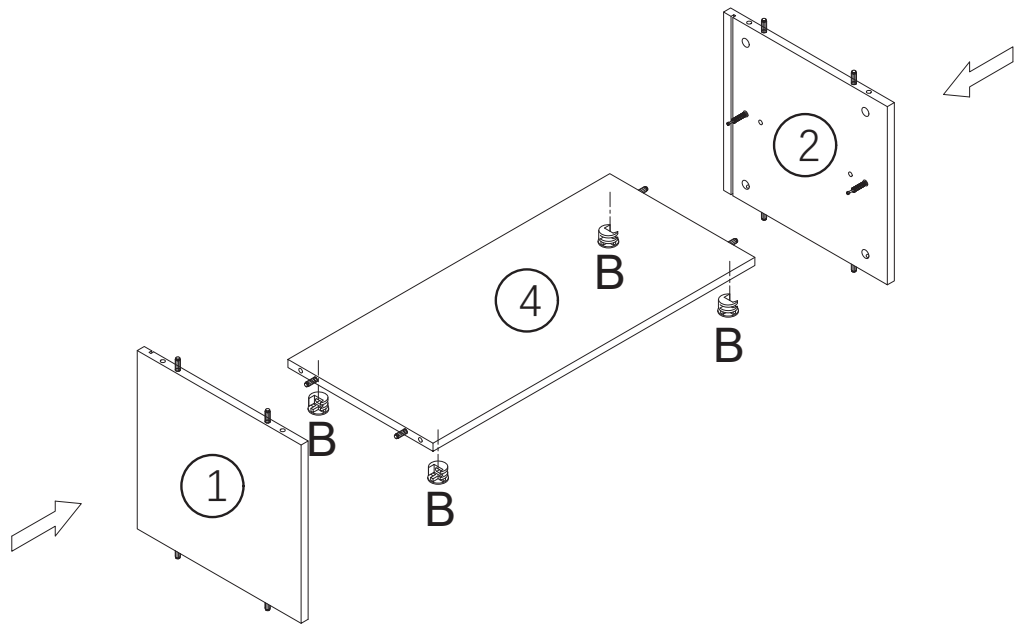

Put B on (4)

B*4


3

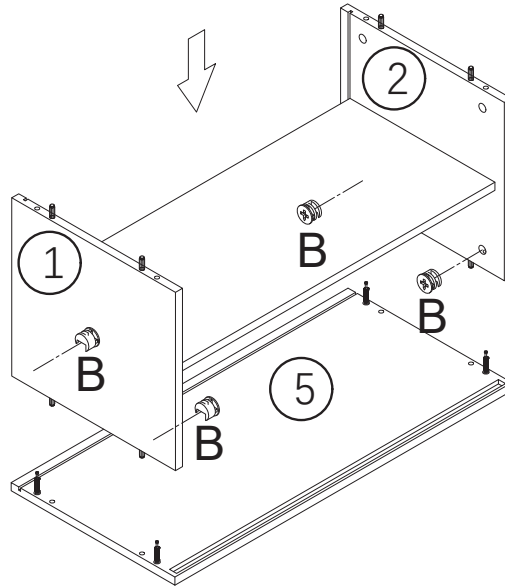


Put B on (1) (2)

B*4


4

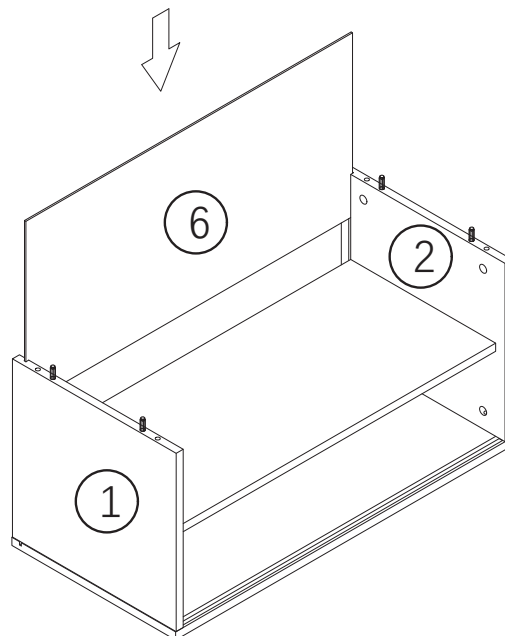

5

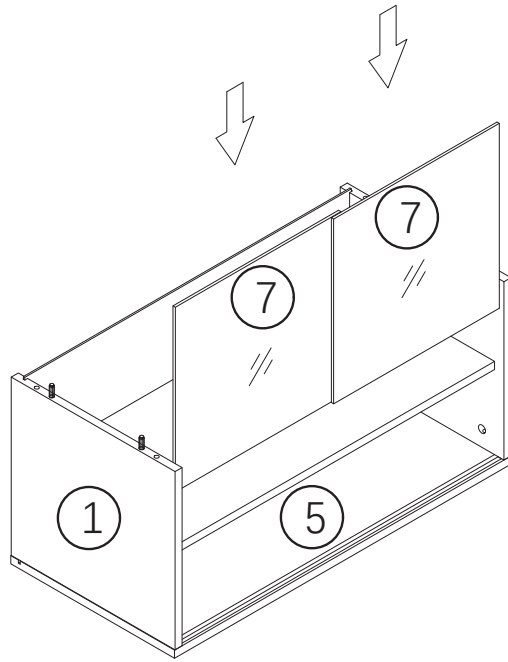


6

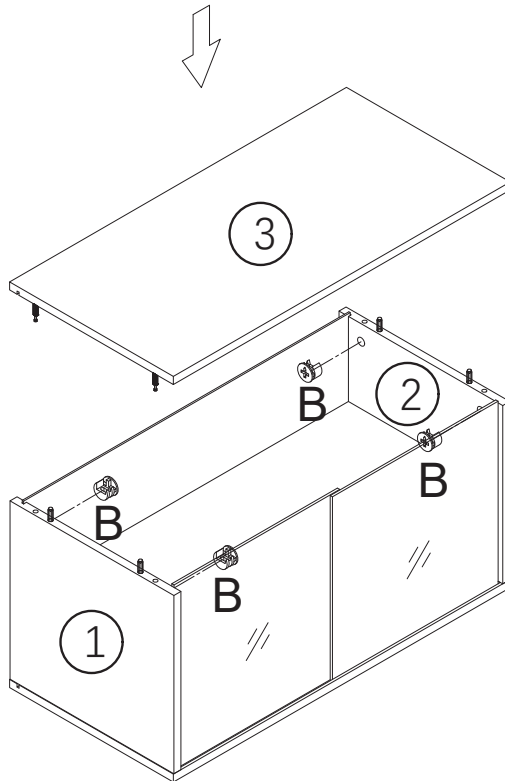

Put B on (1) (2)


B*4

7

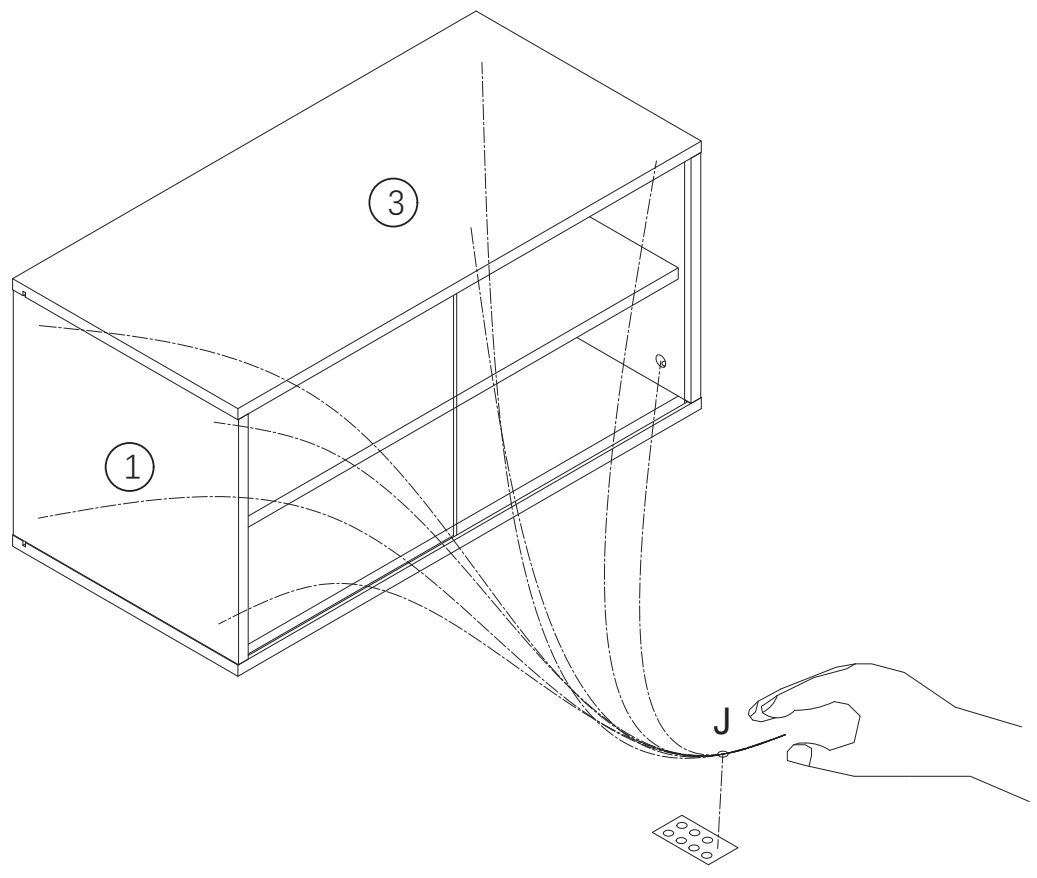






J*8

8

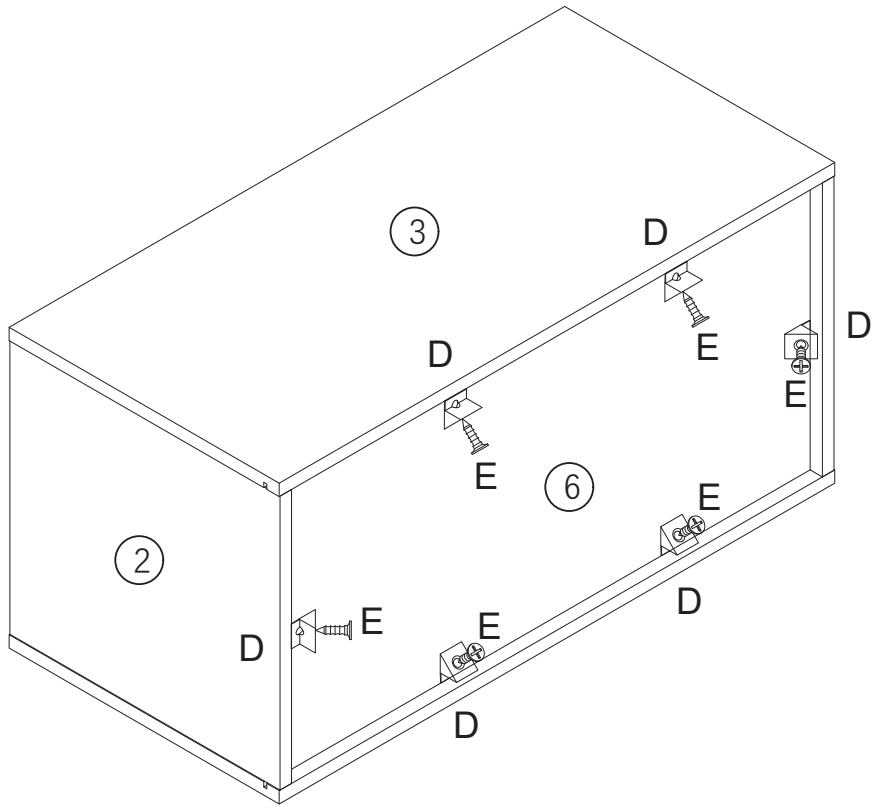

D*6 E*6

9

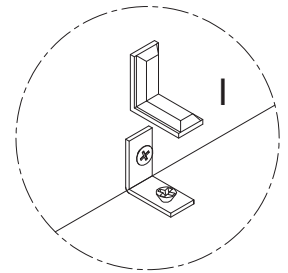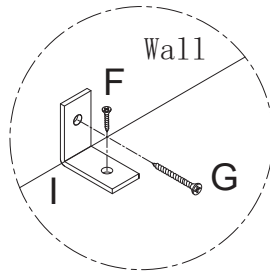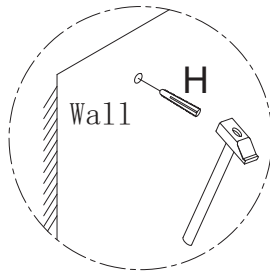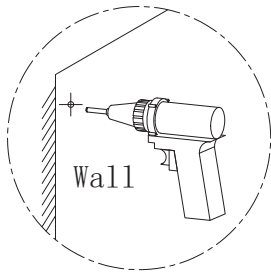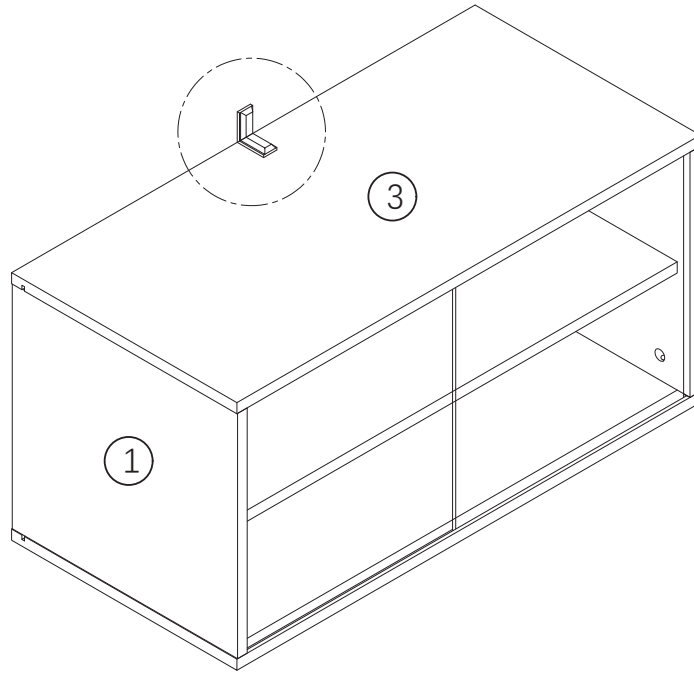

F*1 G*1 H*1 I*1

