


Shoe cabinet assembly instructions

(take three small models as an example)

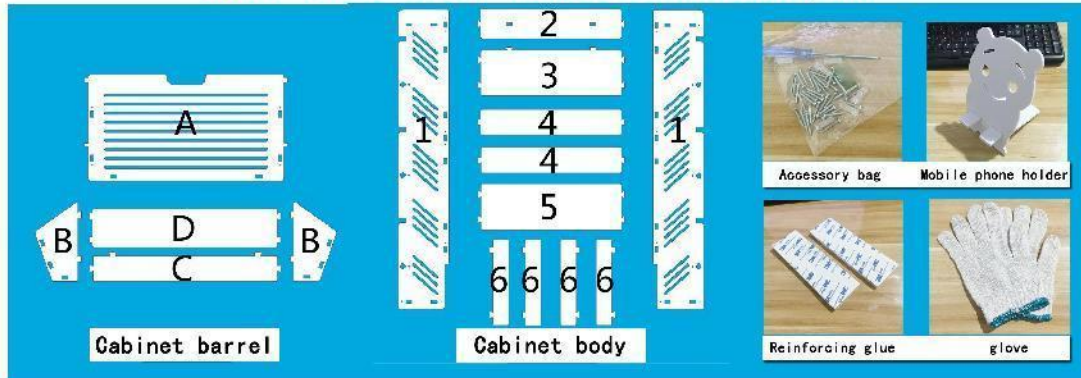

Cabinet barrel installation



1 Board C is stuck into board B



2 Board D is also stuck into board B



3 C/D/B combination is clamped into another B board




4 Clip the combination board into the a board

Cabinet assembly




5 No. 6 board is stuck into No. 1 side plate, leaving the hole marked with red

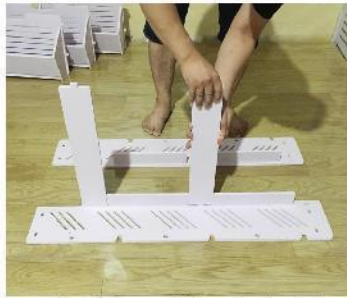

6 No. 4 board is stuck into the empty position of No. 1 board



7 Board 3 is stuck into board 2

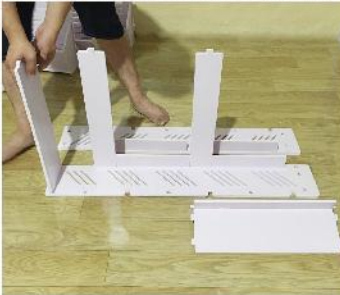

8 Board 5 to side plate 1



9 2 \ 3 combination board to 1 side plate




10 Put the assembled cabinet barrel in a good position for the hole position



11 Cover the No. 1 side plate align the holes one by one from top to bottom, and tap it in



12 Put the screw into the small hole next to the card hole and screw it to be level with the board surface

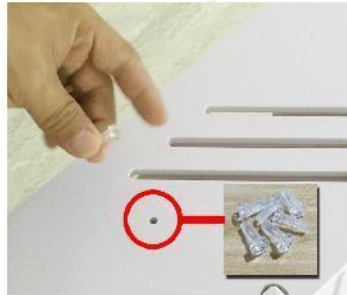

13 Put the transparent screw under the slash and tighten it in the round hole



14 Stick the double-sided tape on the back of the cabinet, and compact the other side against the wall



15 The mobile phone rack is stuck to the bottom



Assembly completed