



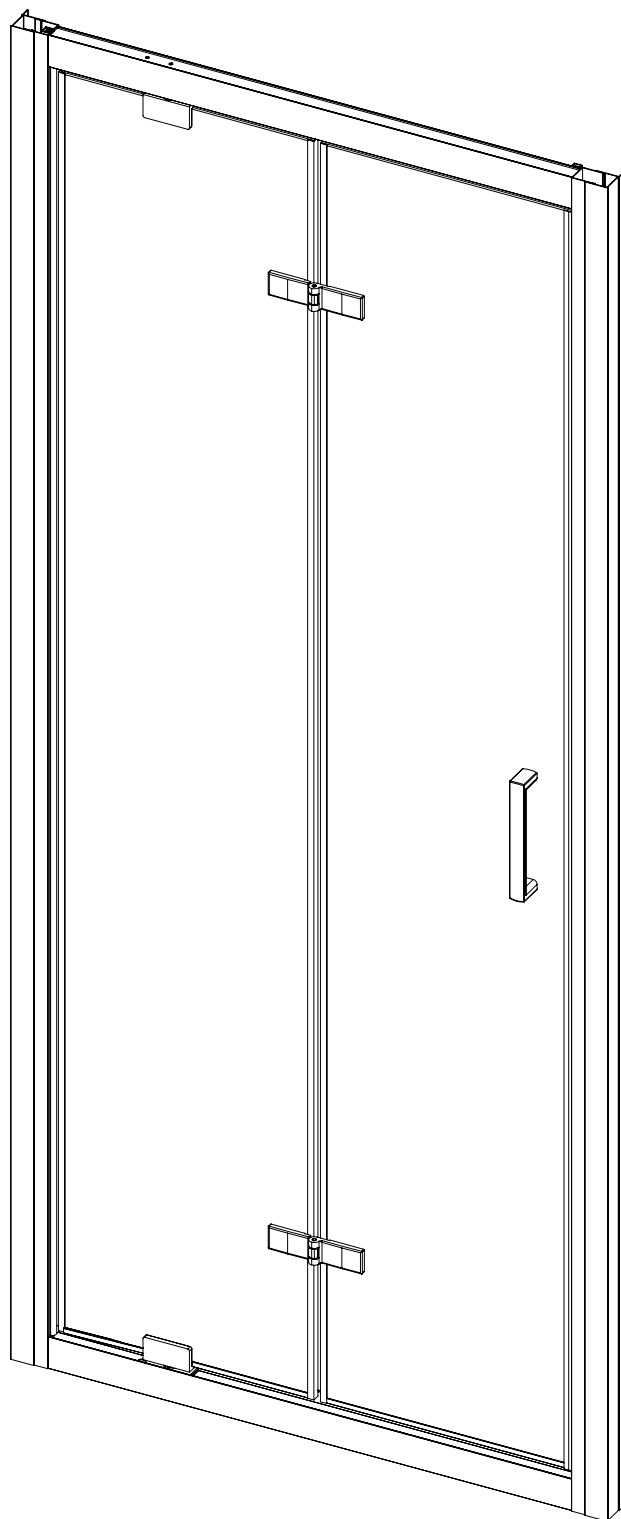
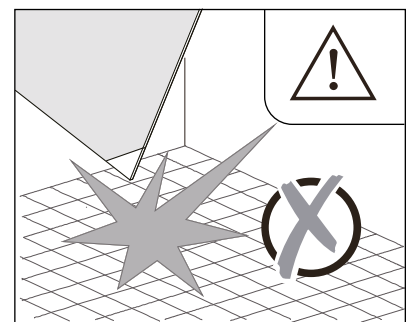
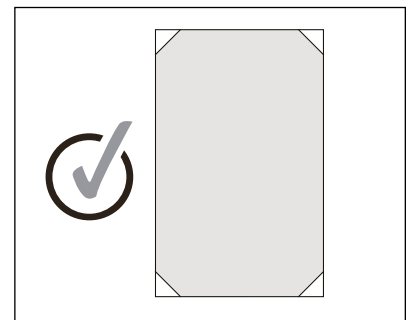
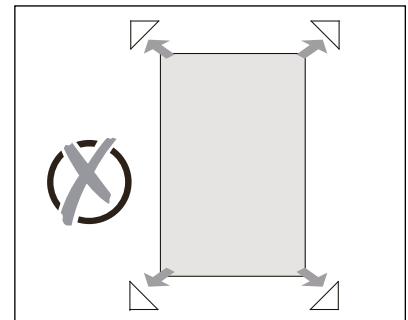
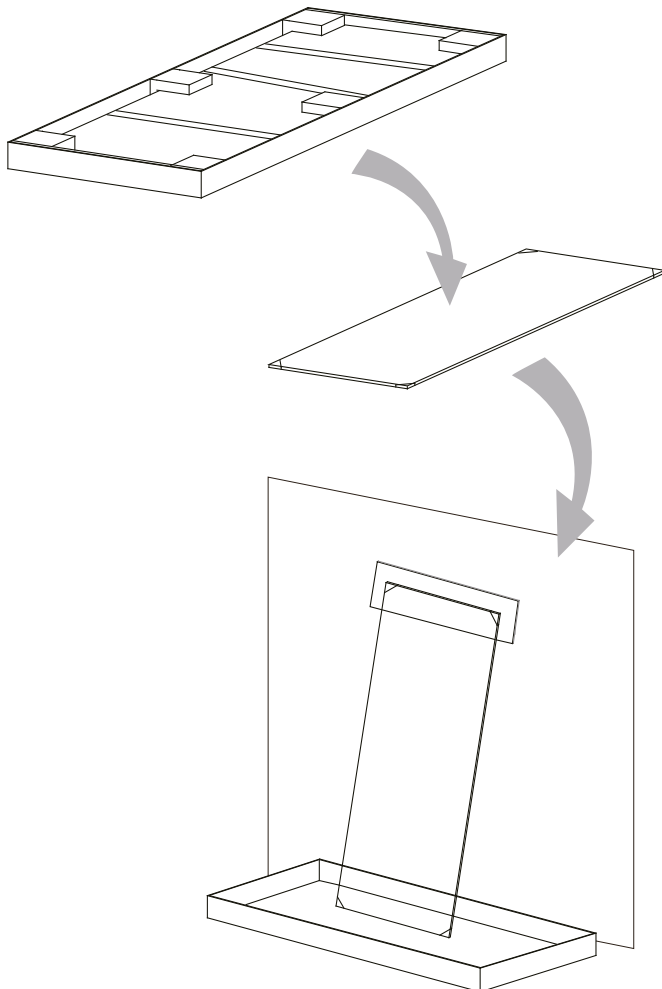
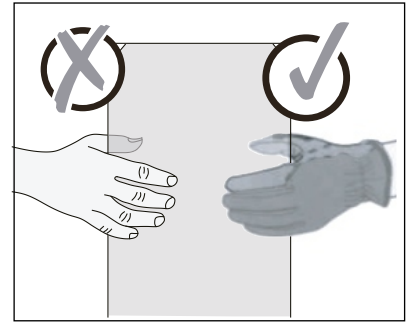
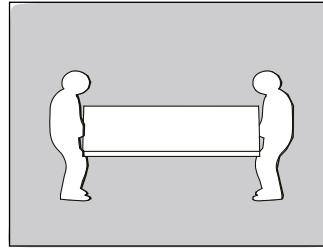
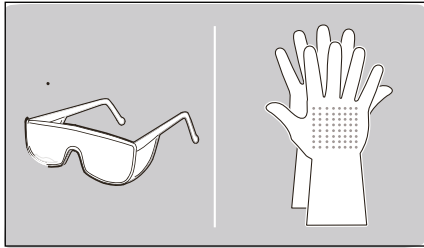
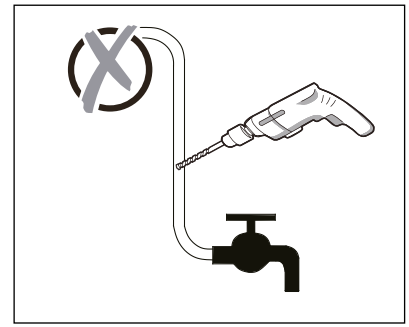


RDM53

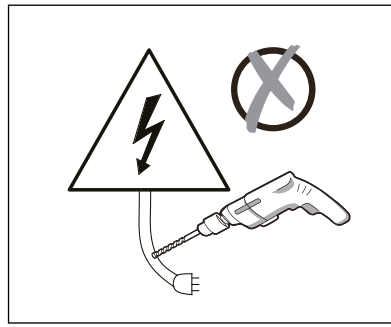

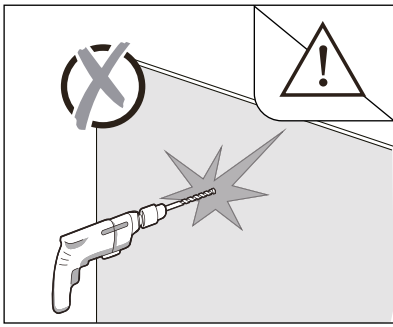


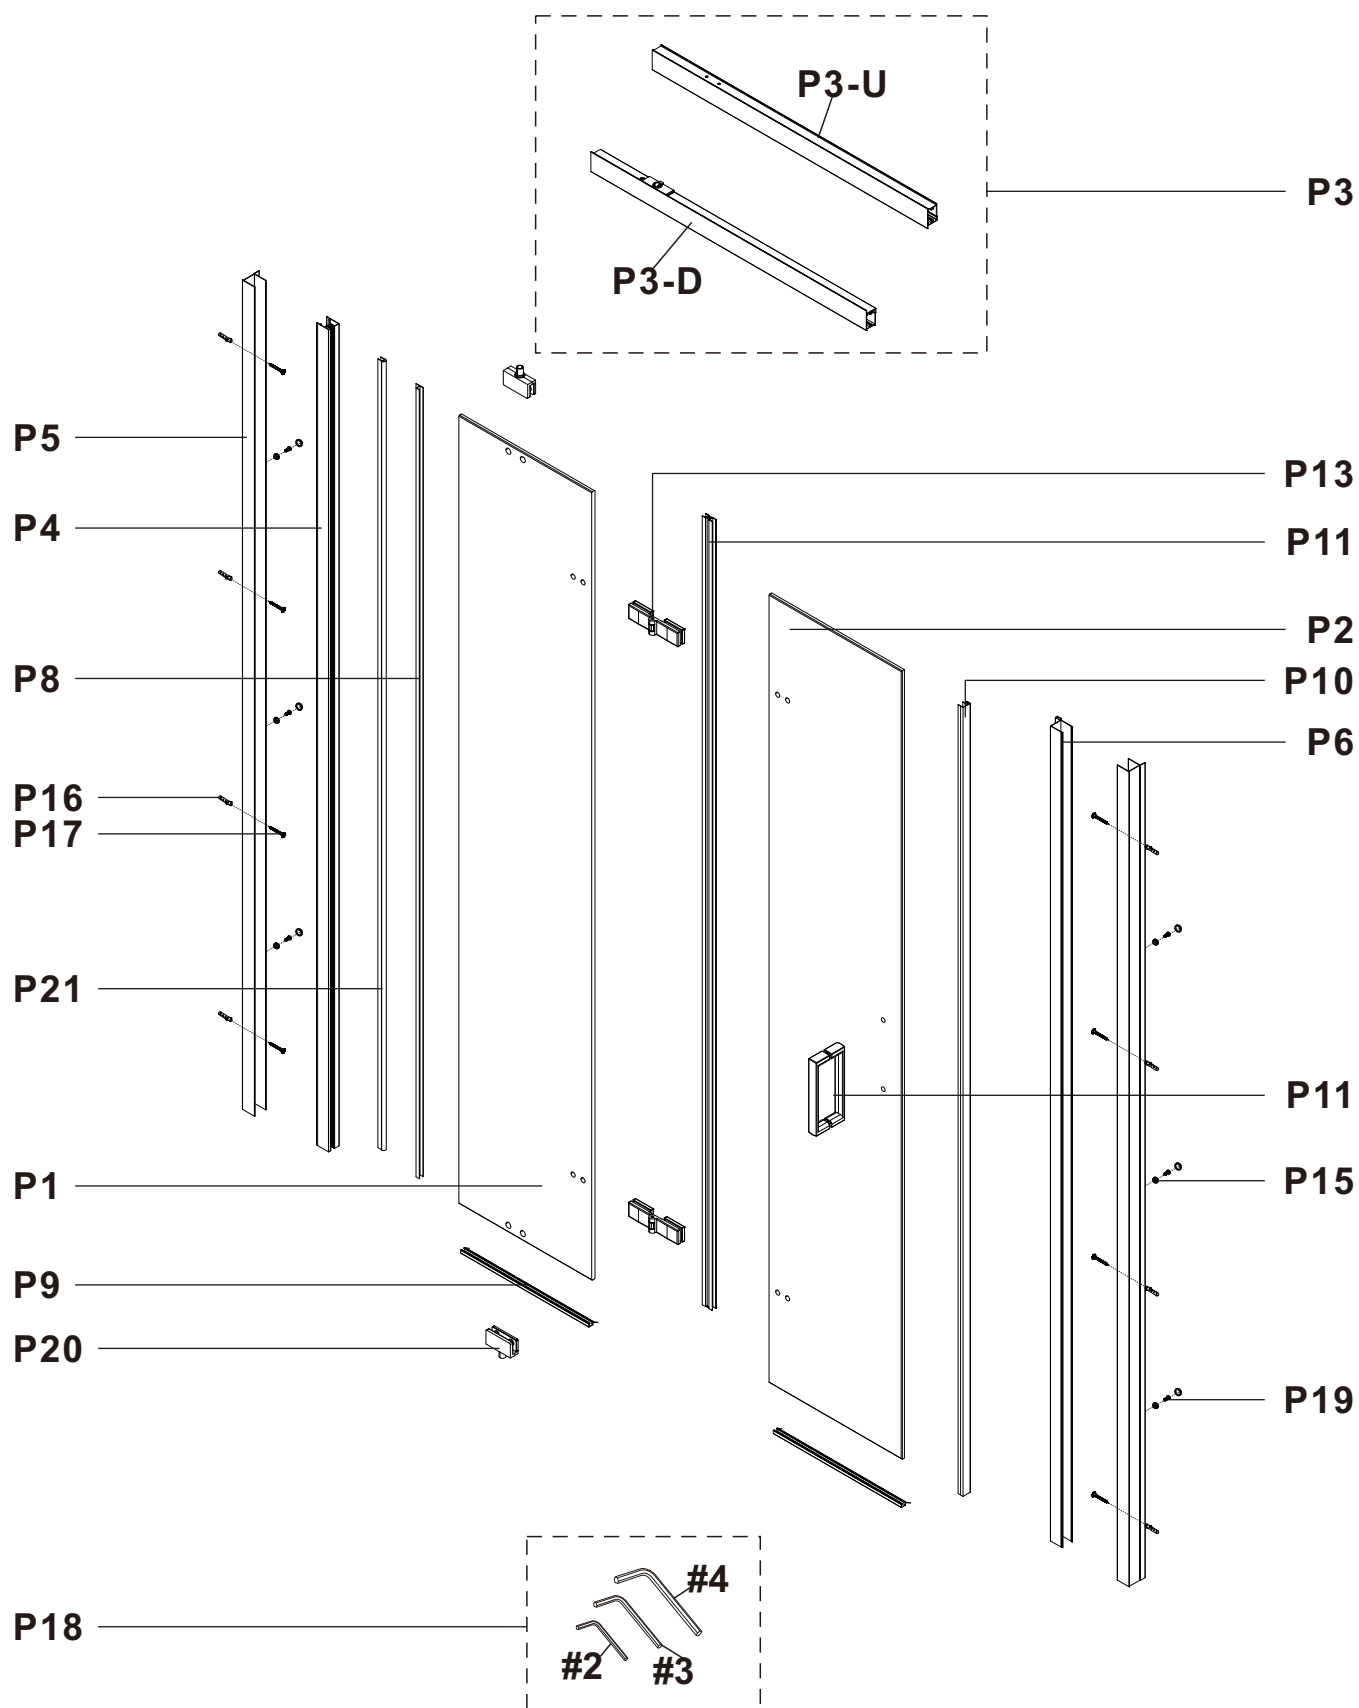




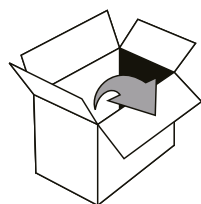


P1 X1	P2 X1	P3 X1	P4 X1
P5 X2	P6 X1	P8 X1	P9 X2
P10 X1	P11 X1	P12 X1	P13 X2
P15 X14	P16 X8	P17 ST4x30MM X16	P18 X1
P19 ST4x10MM X6	P20 X2	P21 X1	





 Ø 6mm	




1

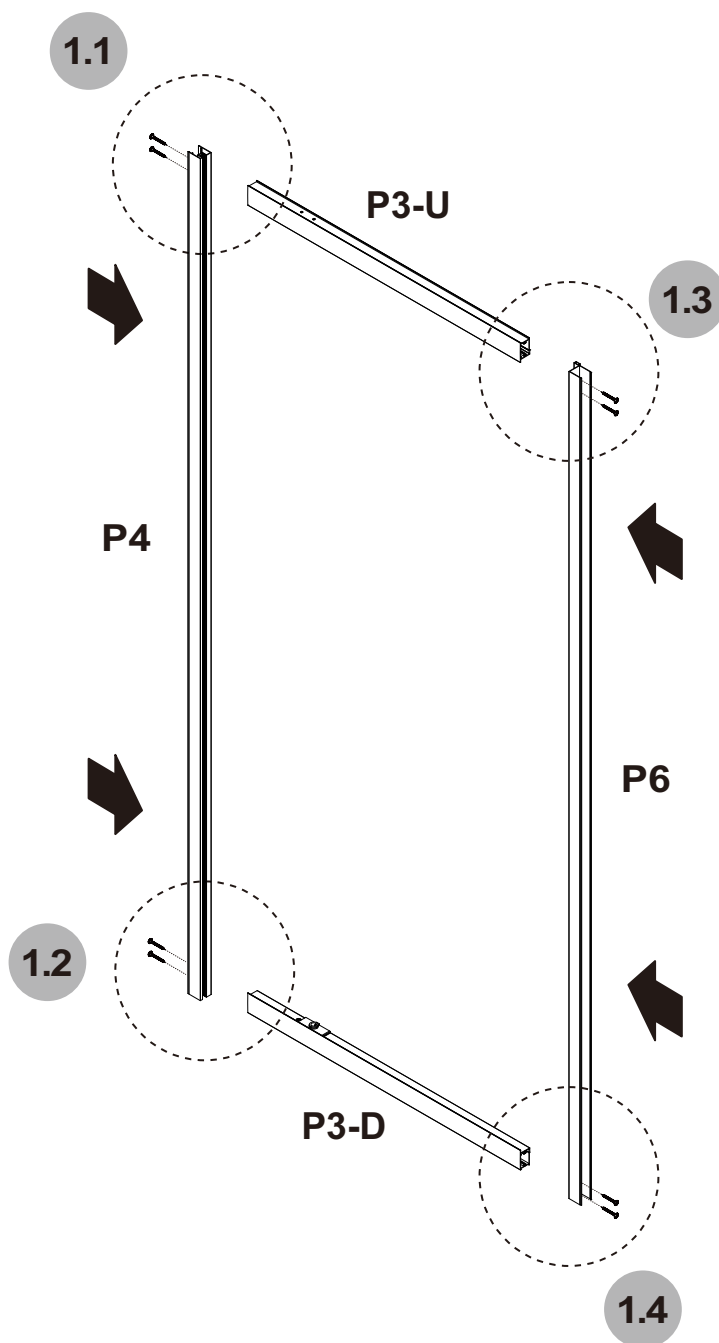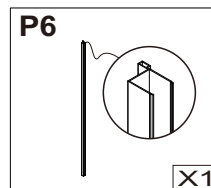
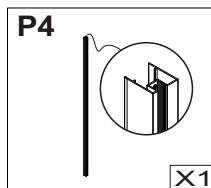
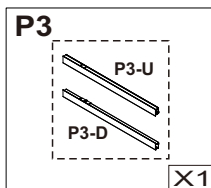


First, install the edge trim and track.

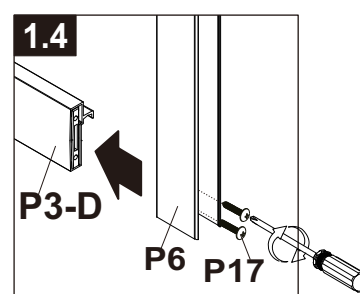
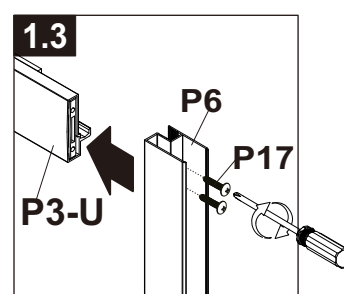
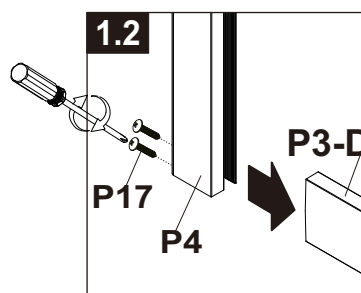
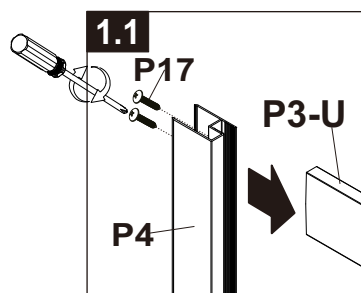


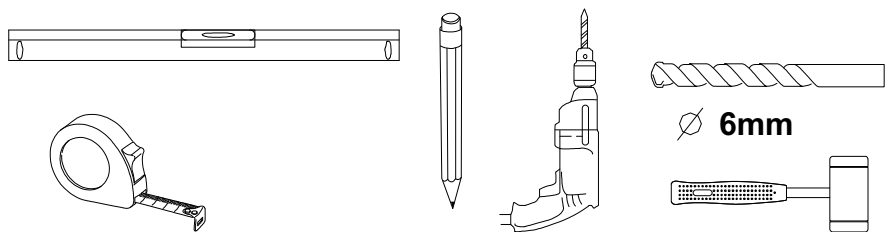



2

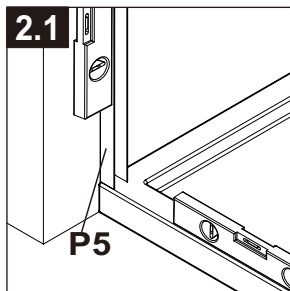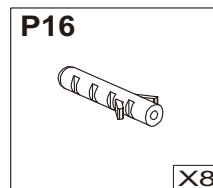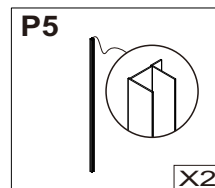







Assemble side strips to the frame without permanent installation. Verify positioning and mark drilling points prior to final mounting; use an electric drill to create holes at the marked positions; insert the expansion tubes into the drilled holes.

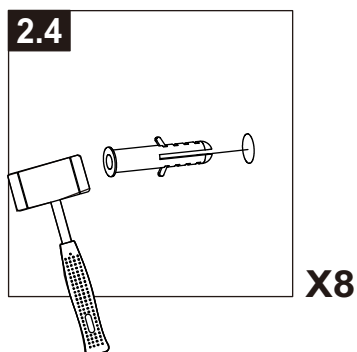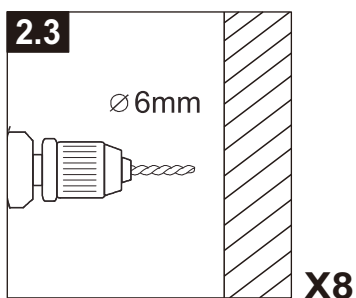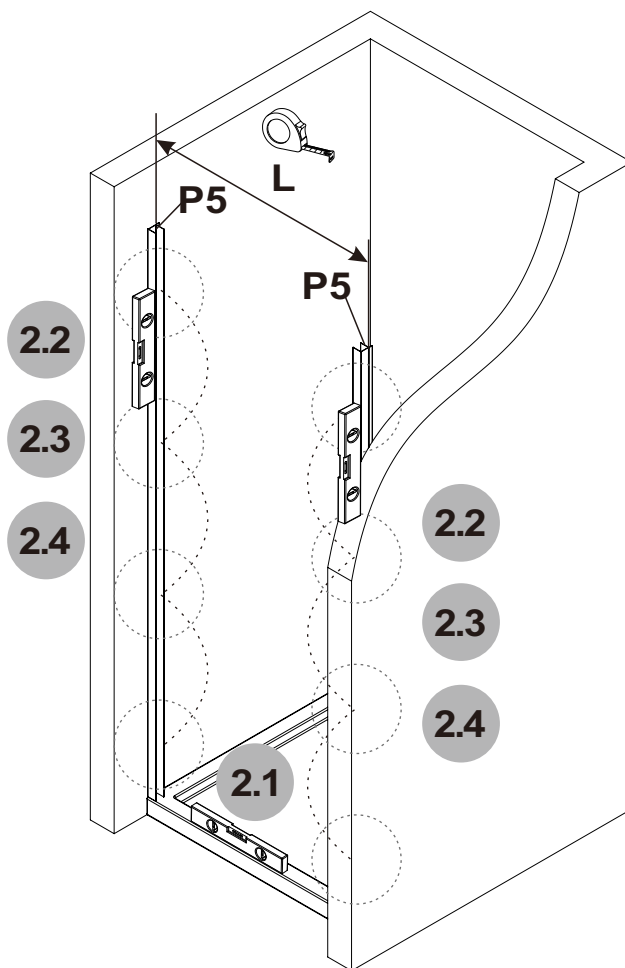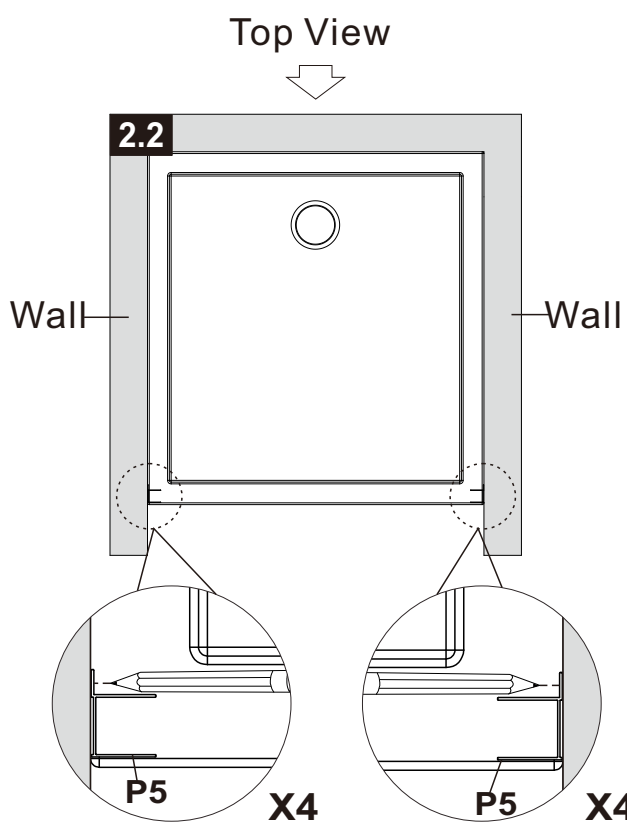



L	630-660mm
	690-720mm
	732-762mm
	790-820mm
	834-864mm



3



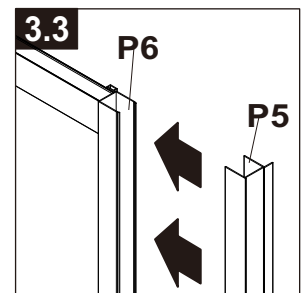
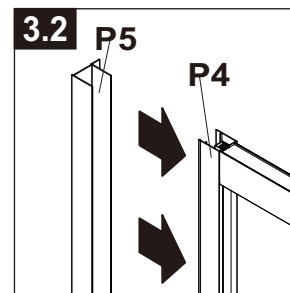
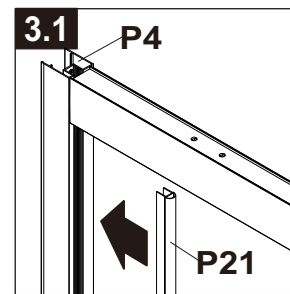
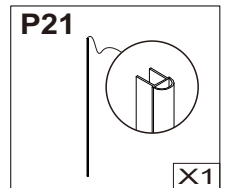
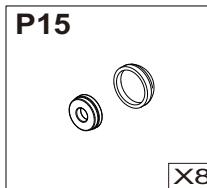
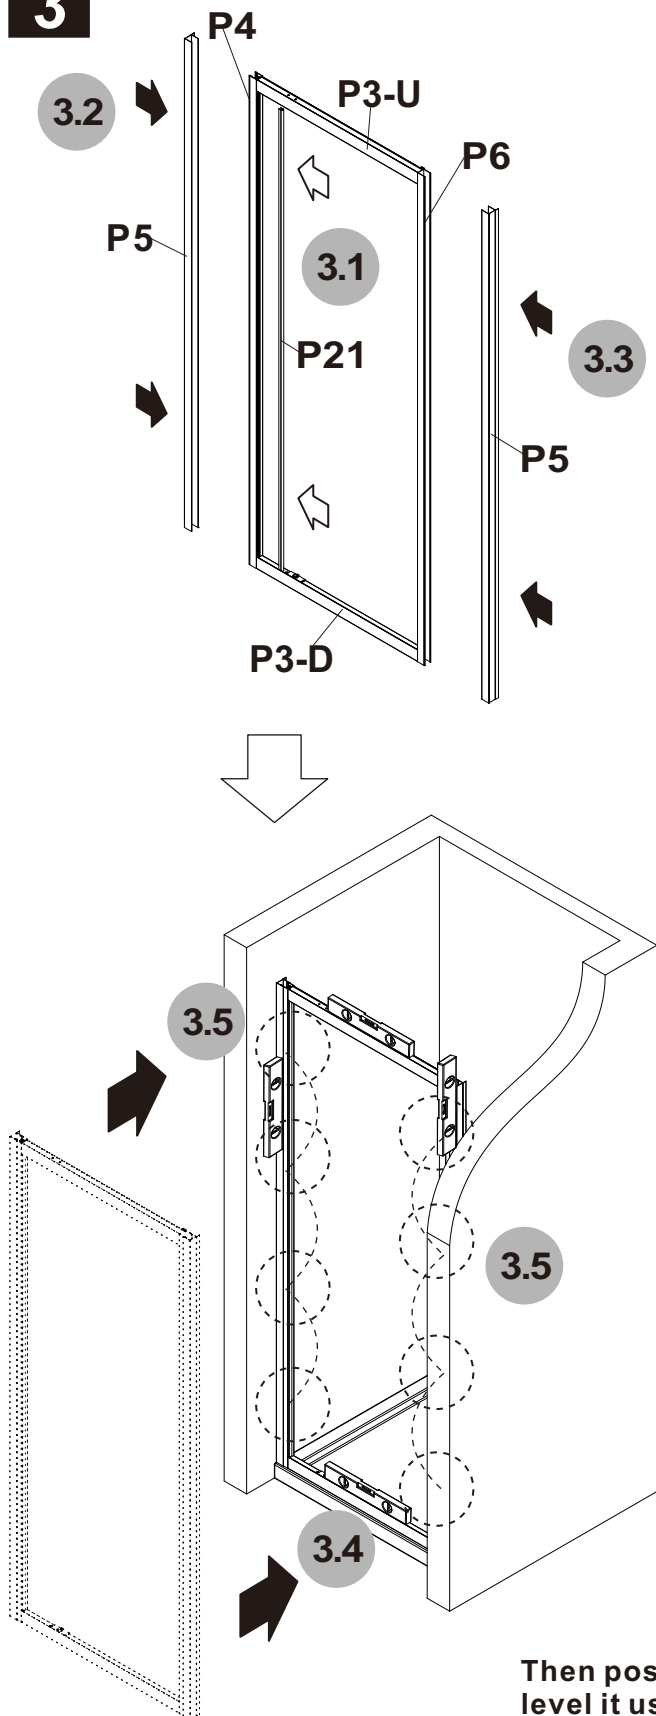


Install the round-hole waterstop into the side profile; then, Assemble side strips to the frame without permanent installation.




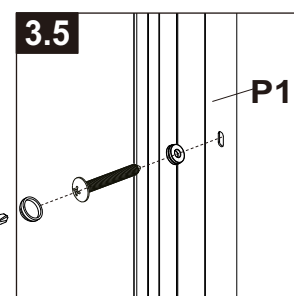
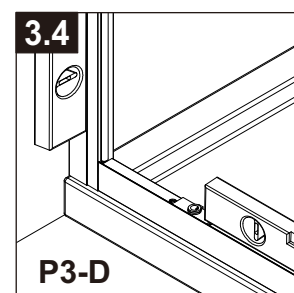


Then position the assembly at the pre-confirmed location, level it using a spirit level, and secure it to the wall using screws with caps and wall anchors.

4


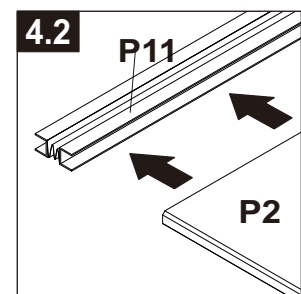
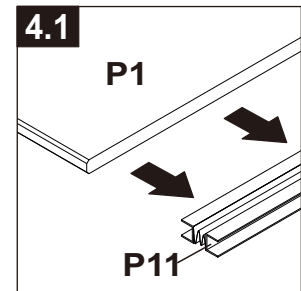
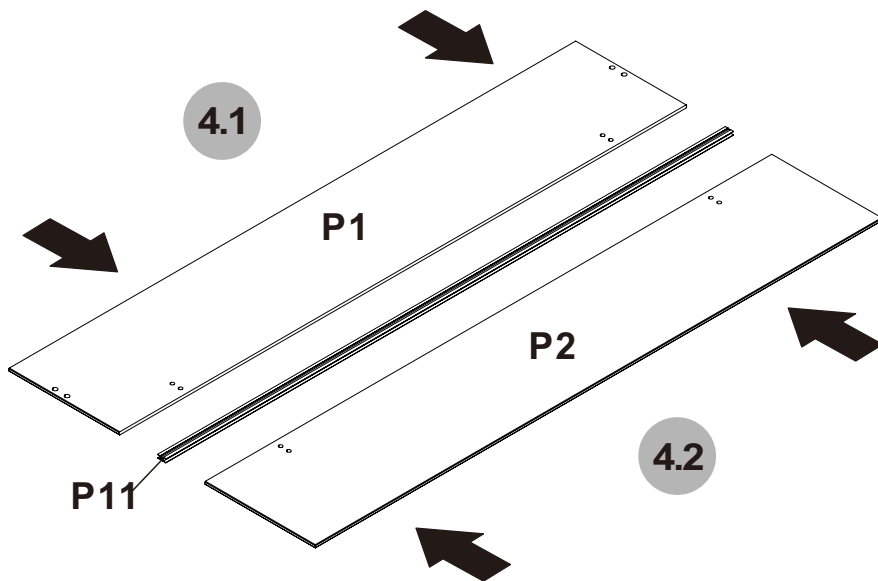
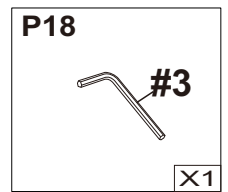
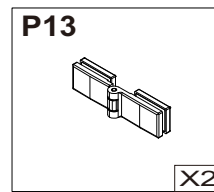
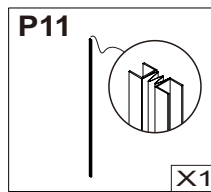
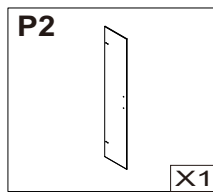
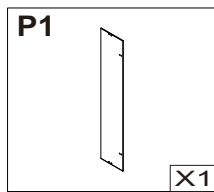


Assemble the glass panels with the edge trim.

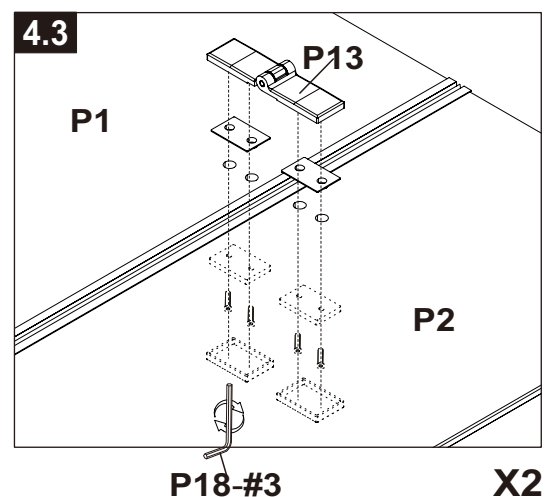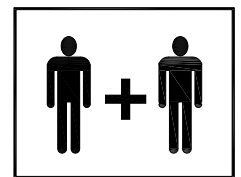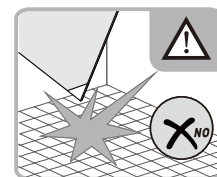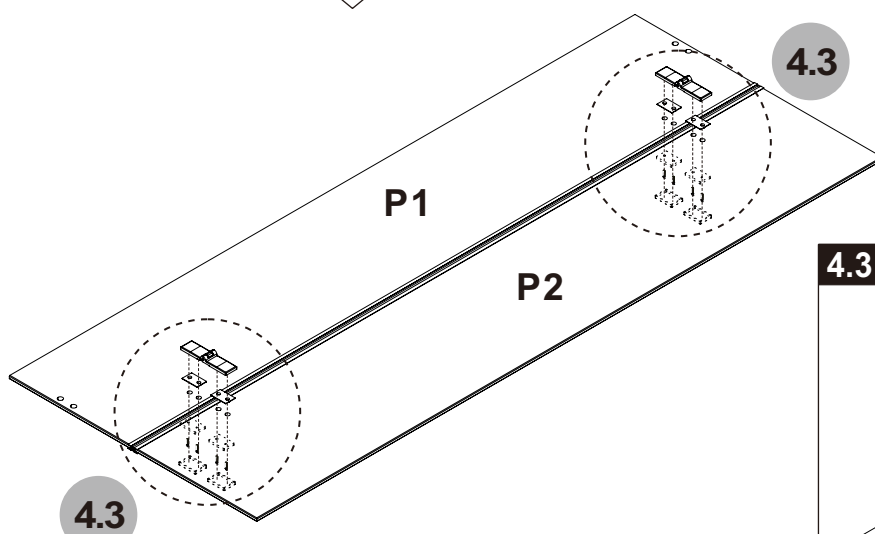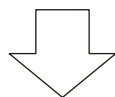

Next, install two zinc alloy slim hinges to the glass panels.






5

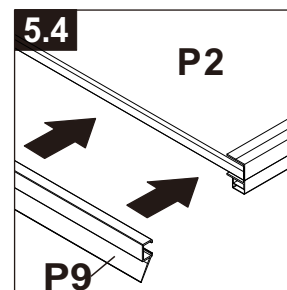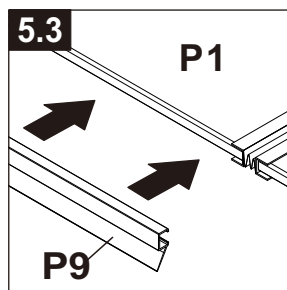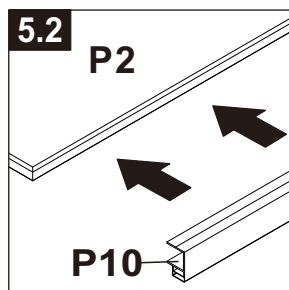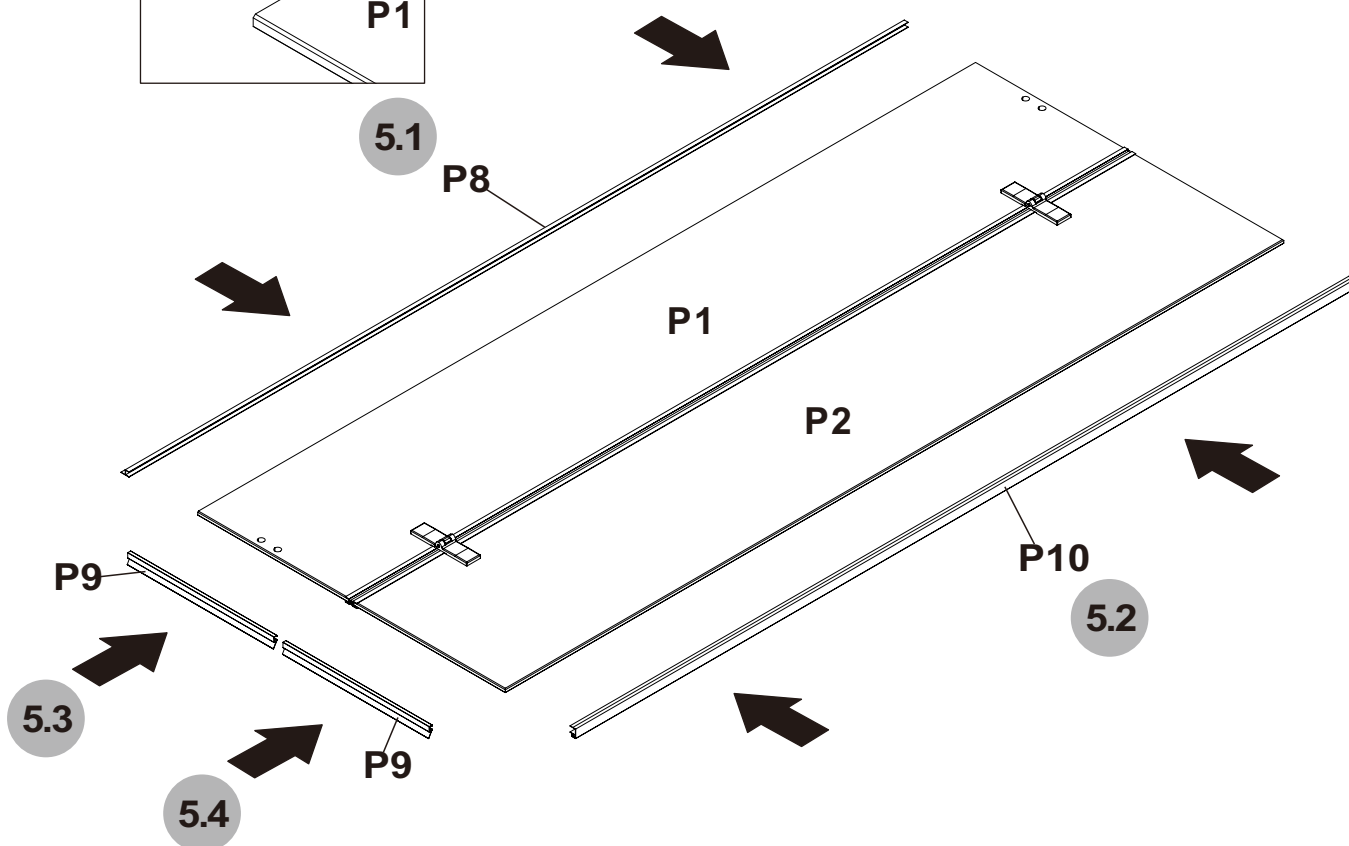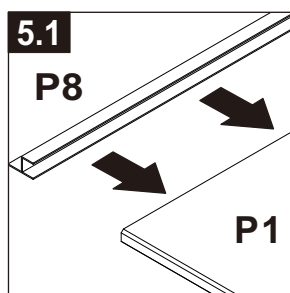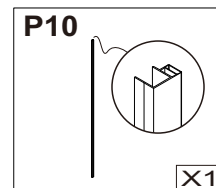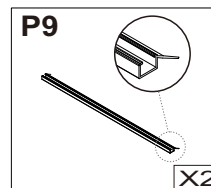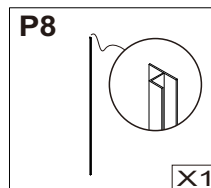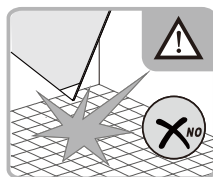



Install the water barrier strips and magnetic strips onto both sides of the glass assembly. Then attach the two bottom barrier strips, verifying correct placement by matching their numbered markings.

6



6.1

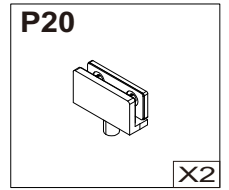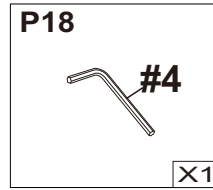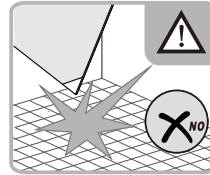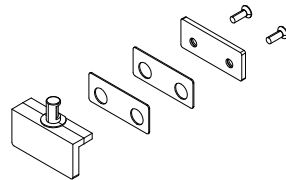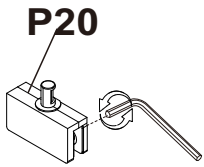

6.1

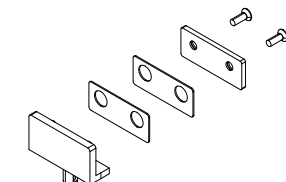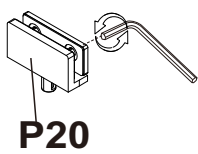


Disassemble both stainless steel hinges.

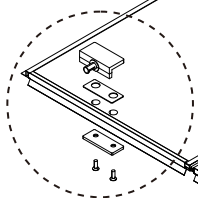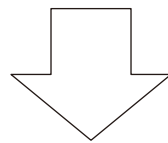

6.2




Install the lower stainless steel hinge.

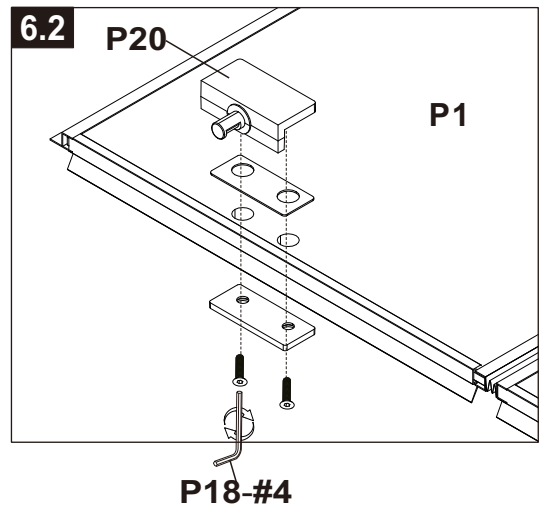

7**P18**





#2

X1


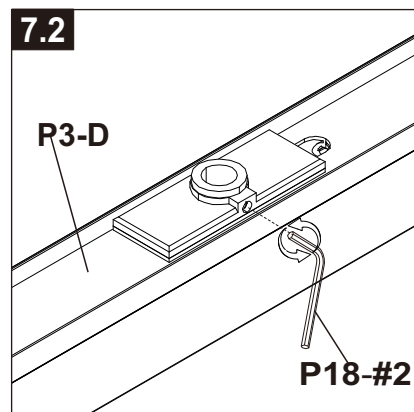
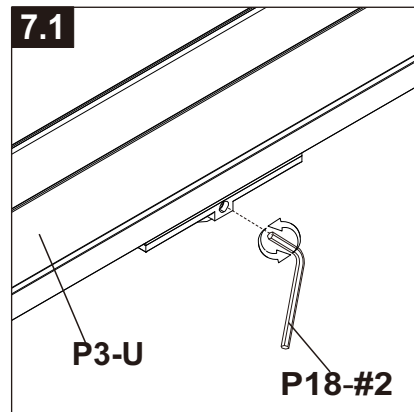
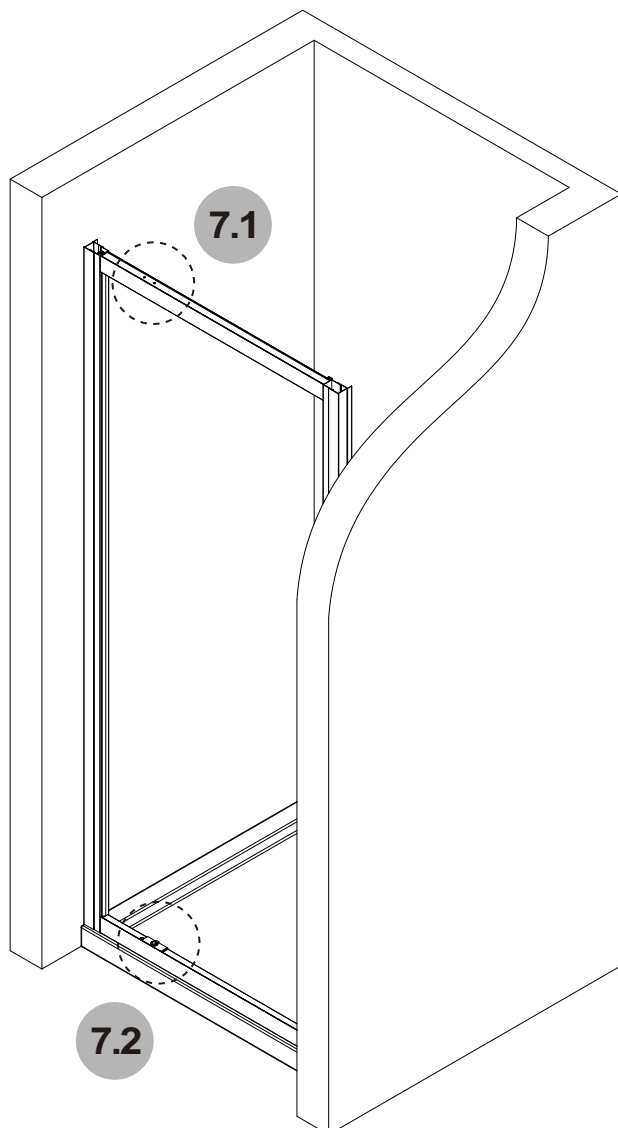


Loosen the small hex socket screws on the stainless steel hinge bases of the upper and lower tracks to allow hinge insertion.


8

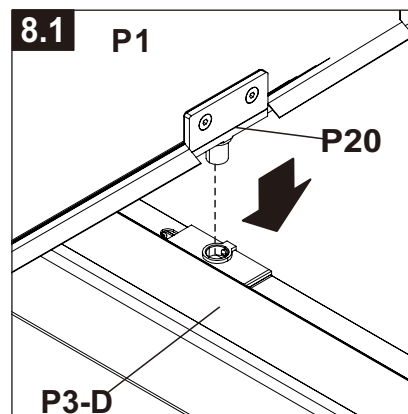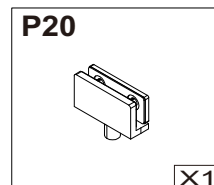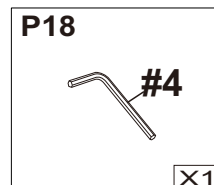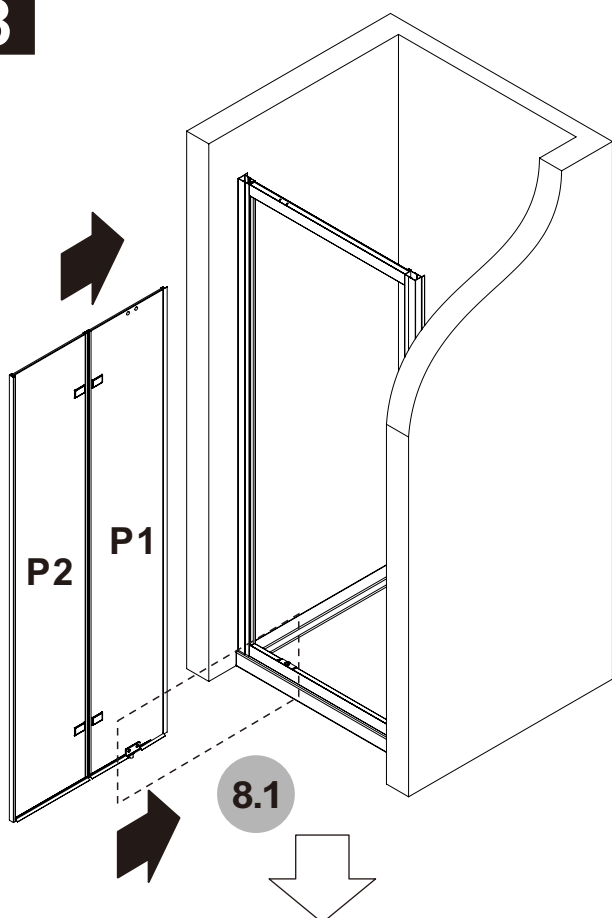







Install the glass assembly onto the frame. First, engage the lower stainless steel hinge into the groove on the bottom rail. It is recommended that two or more persons perform this step.

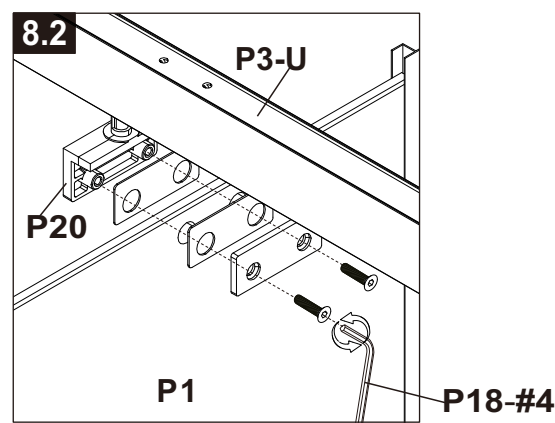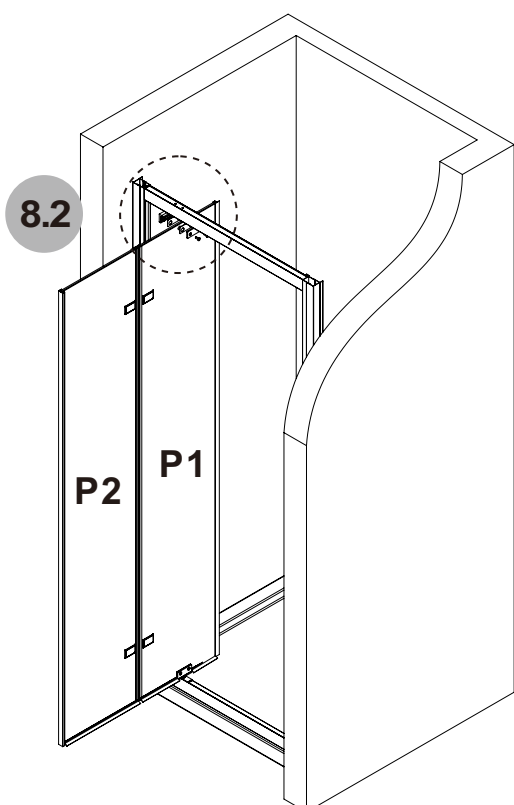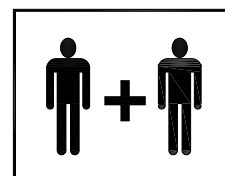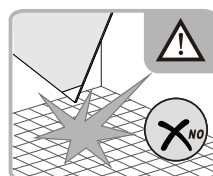


Install the top stainless steel hinge into the groove of the upper rail and secure it to glass P1.



9

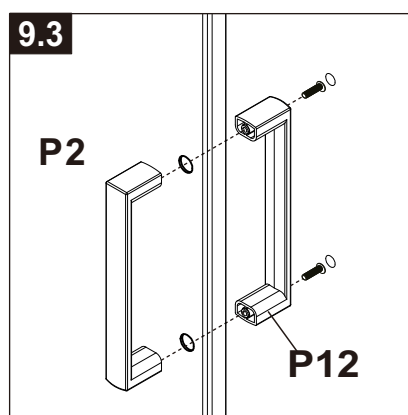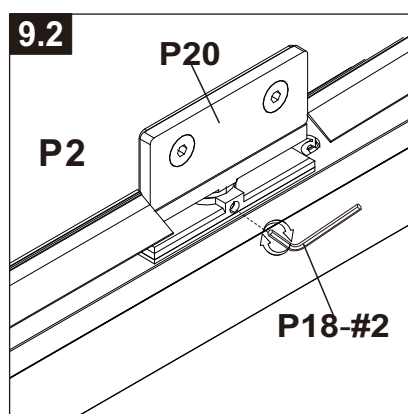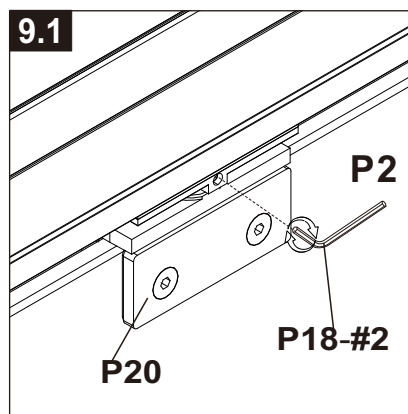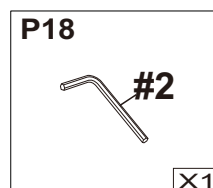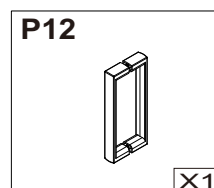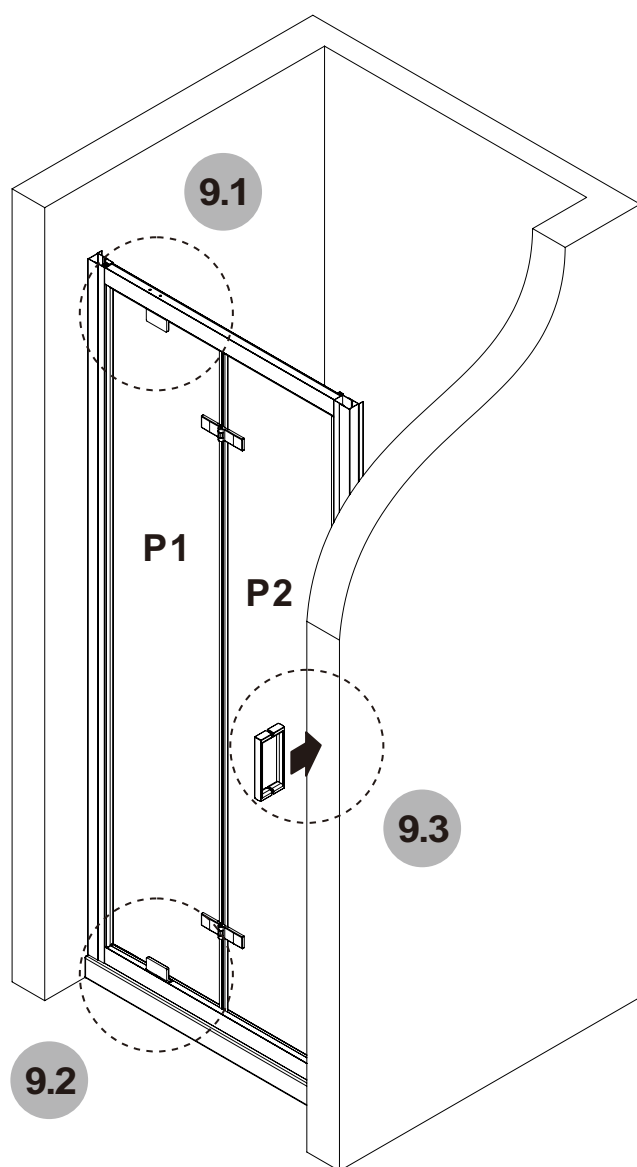

Tighten the small hex socket screws on the upper and lower stainless steel hinges, then install the handle.

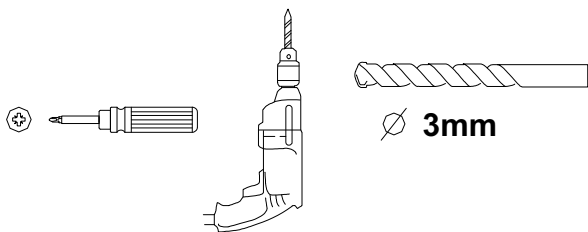

10

P18
ST4x10MM








X6

P19





X6

Position the frame strip and edge profile within their adjustable range;
drill holes at designated points on the shower-side profile and strip to the specified depth;
install screws with concealing caps.

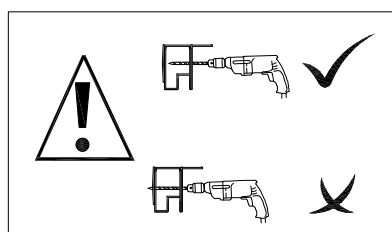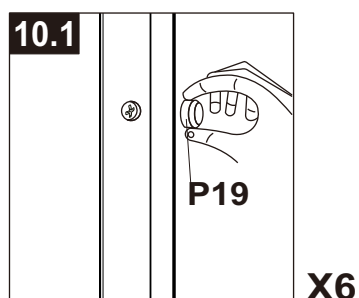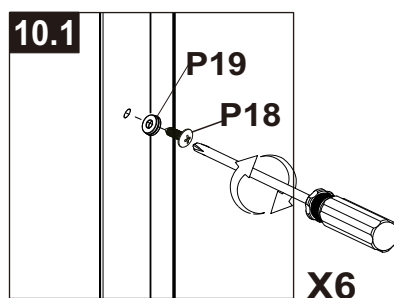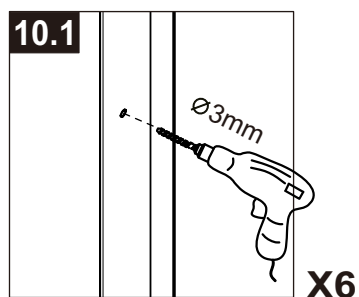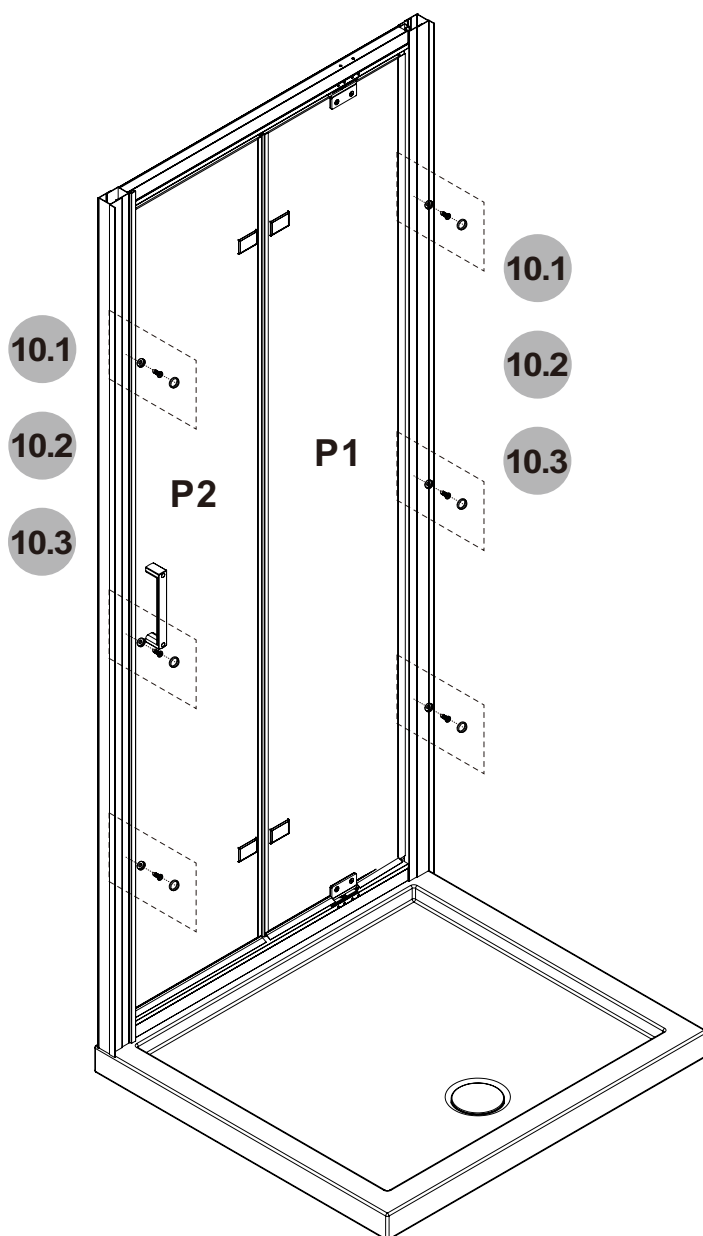



11

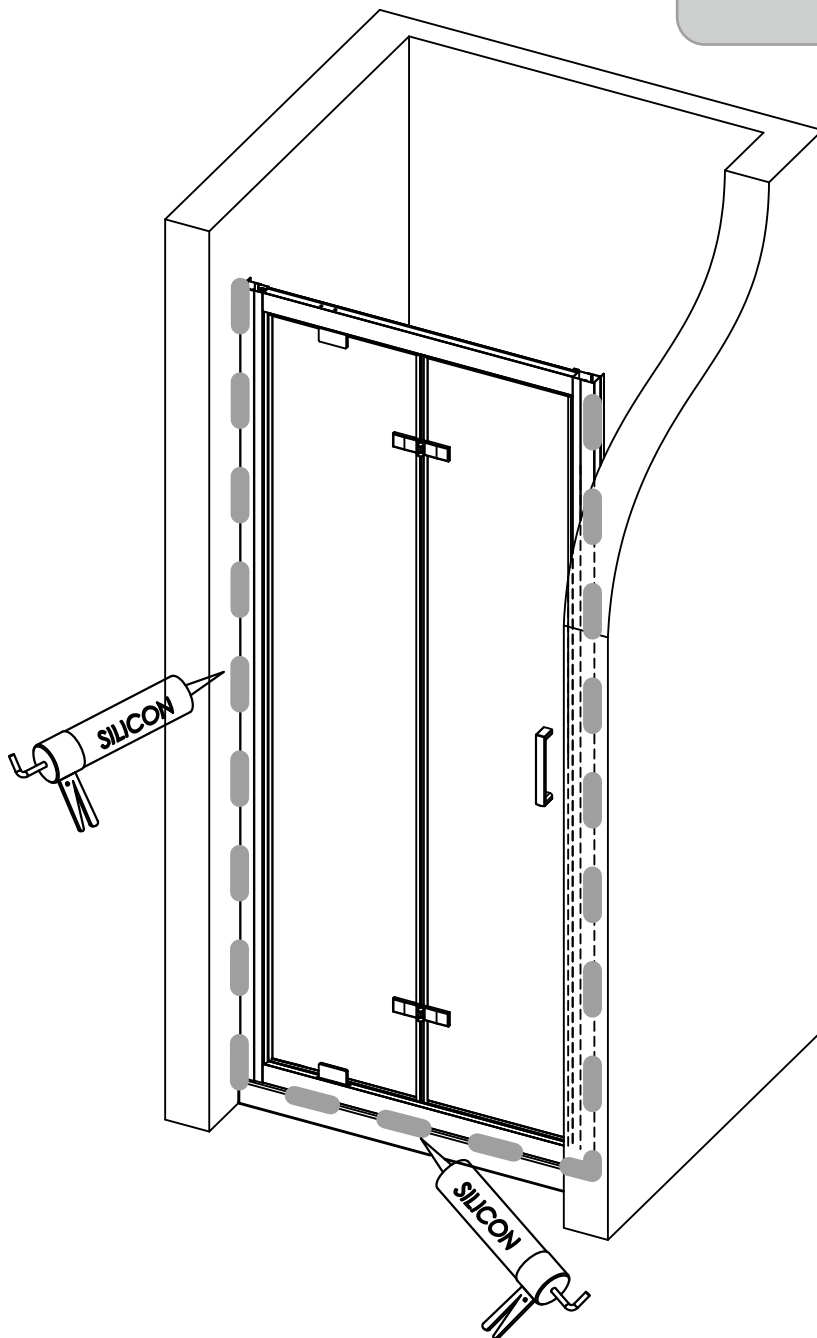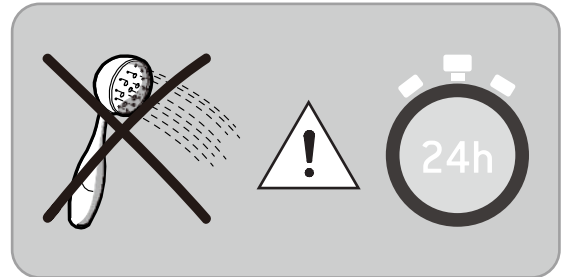

Apply silicone sealant to gaps between the outer frame, wall, and shower tray; allow 24 hours curing time before water exposure.