


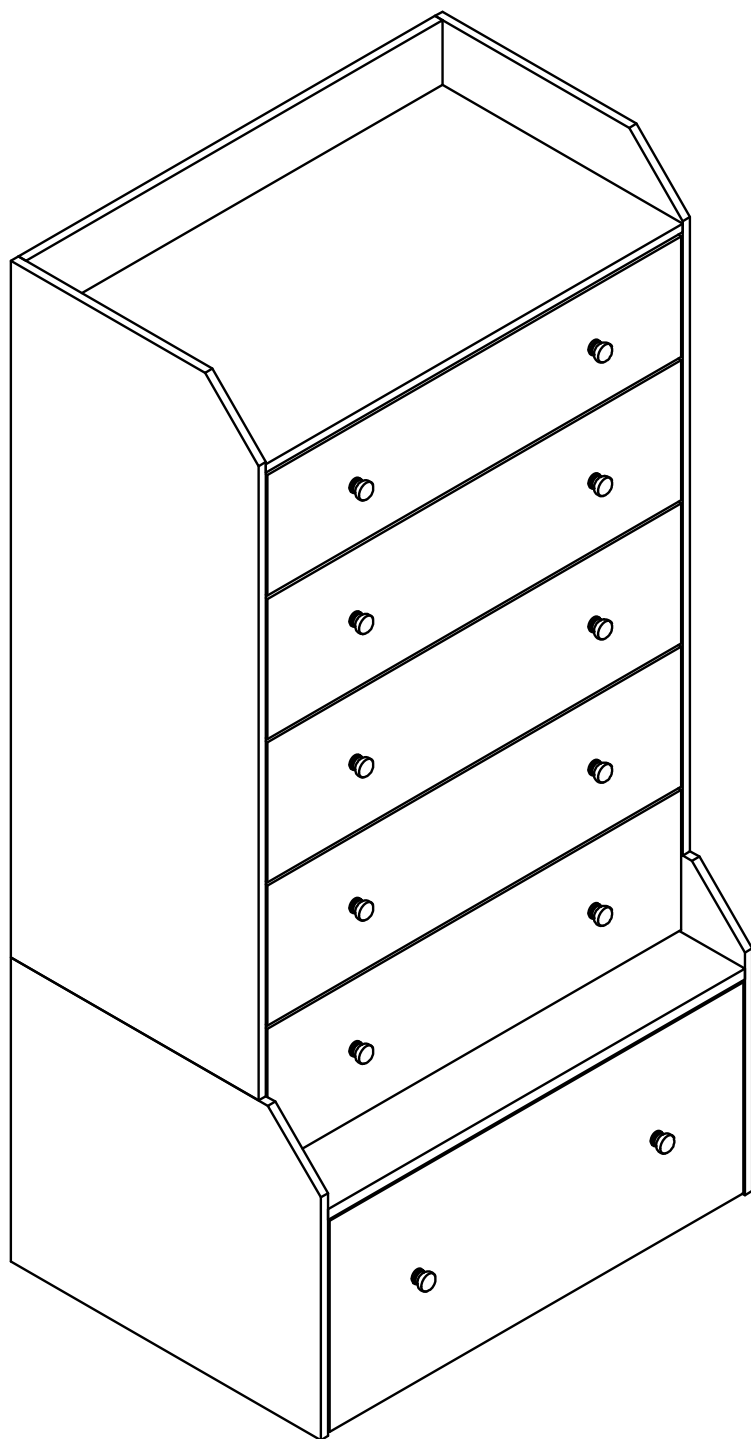
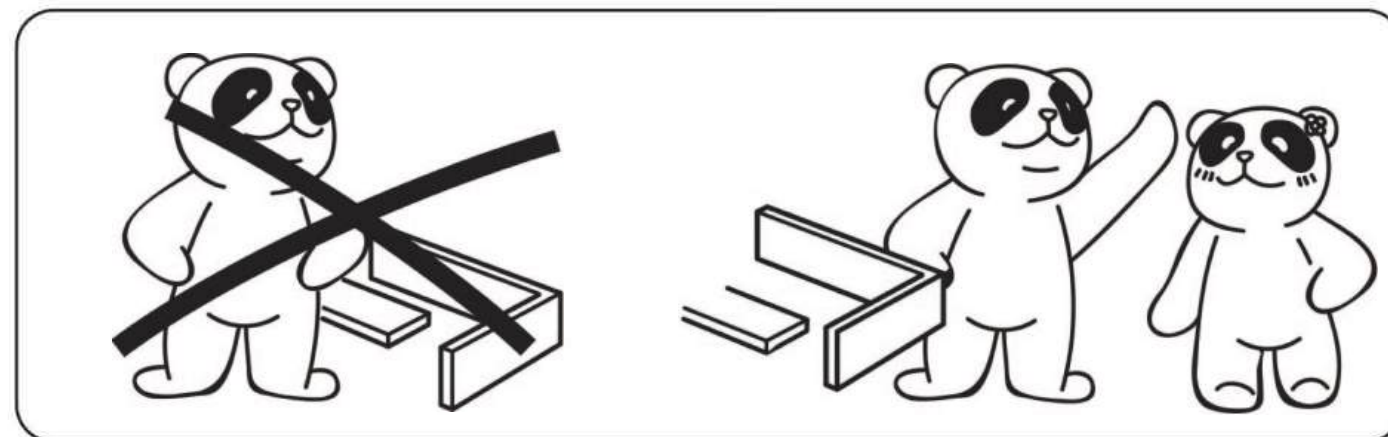


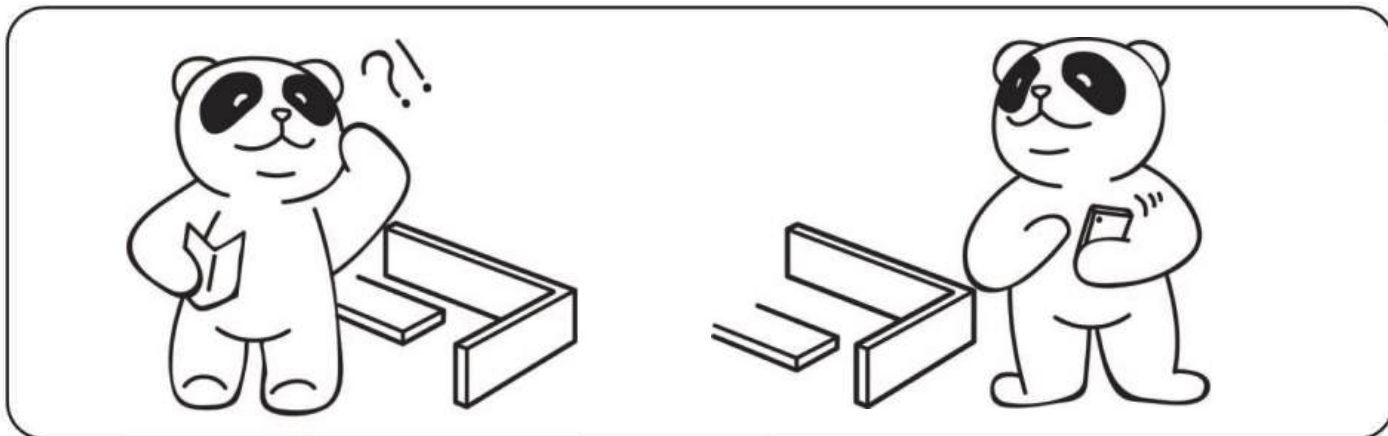

2 PERS.

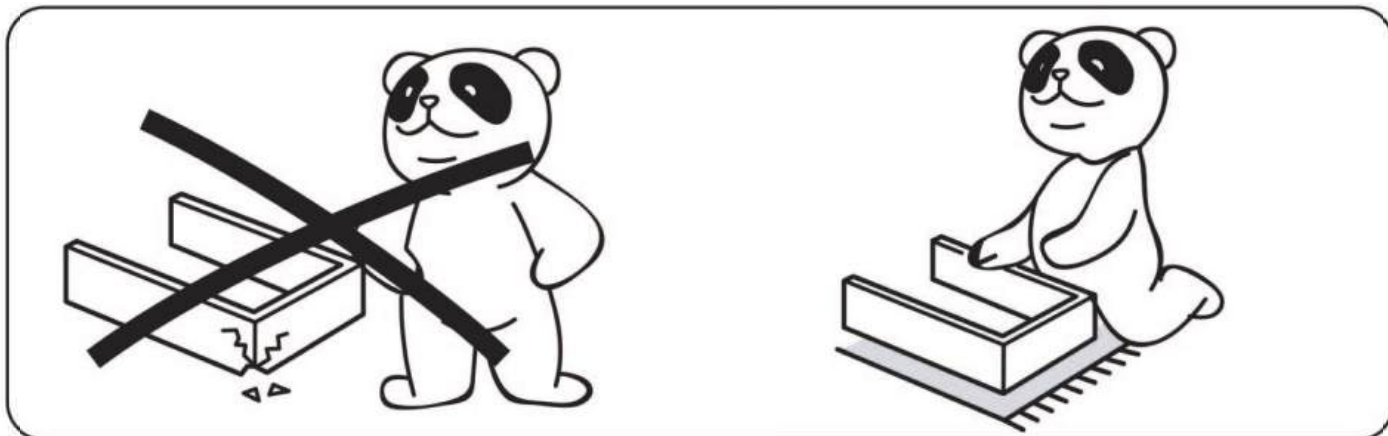

AJ-DJ504401

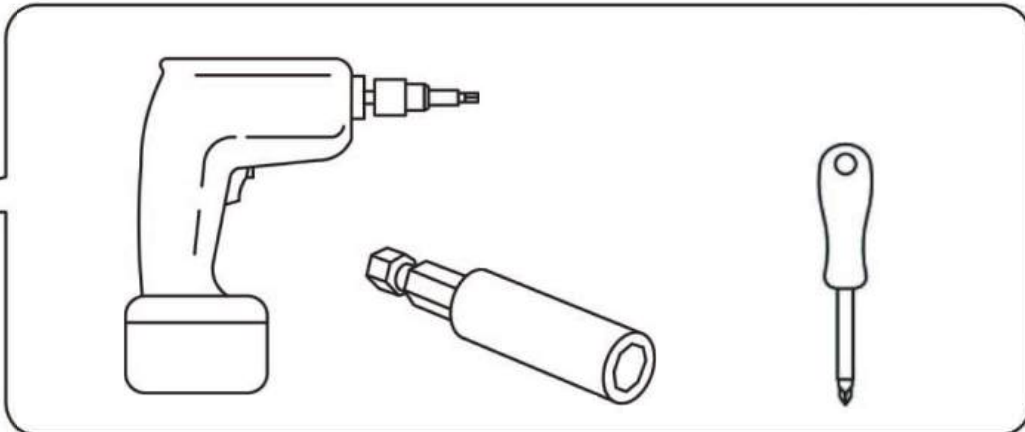


Installation Parts



A

x32(+3)
Ø6x35mm

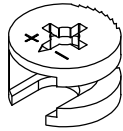


B

x38(+3)
Ø15x10mm



C

x40(+3)
Ø6x30mm



D

x68(+3)
Ø4x35mm



E

x60(+4)
Ø3.5x12mm




F

x6




G

x6




H

x12(+2)
Ø3x16mm



I

x2
Ø6x30mm




J

x12




K

x12
Ø4x16mm



L

x2




M

x4
Ø4x12mm




N

x32(+2)




O

x8
Ø4x12mm

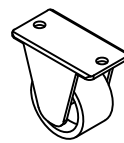


P

x4




CL

x5
L330mm




CR

x5
L330mm



DL


x5
L330mm




DR

x5
L330mm


Mounting frame

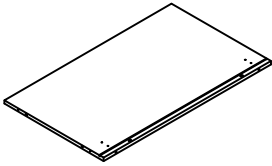


1
x1

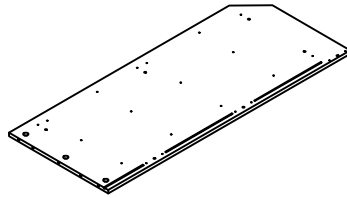


2
x1

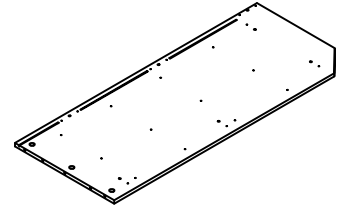


3
x1

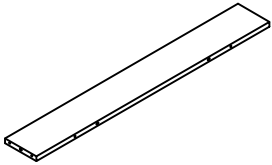


4
x1

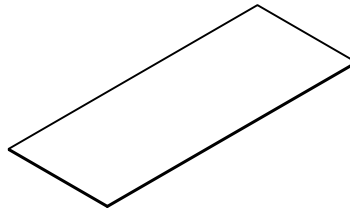


5
x2

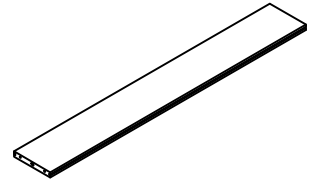


6
x2

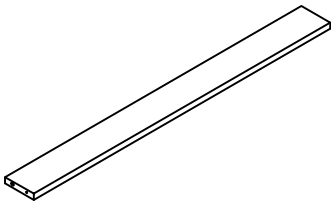


7
x2

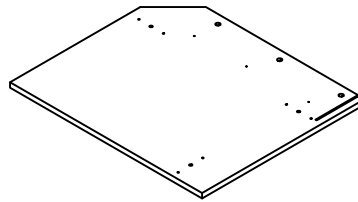


8
x1

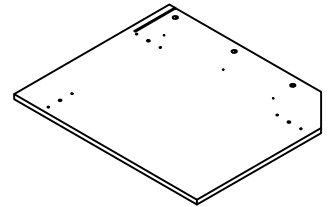


9
x1

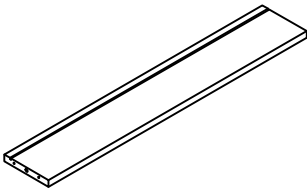


10
x1

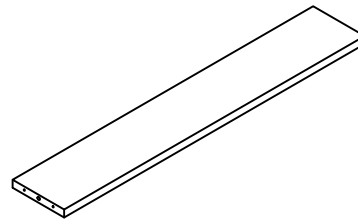


11
x1

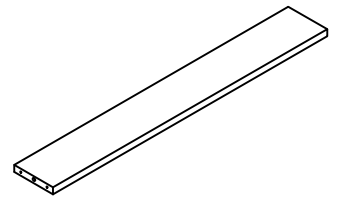


12
x1

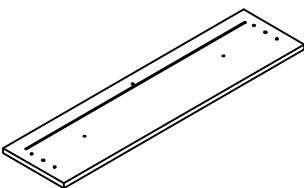

13
x1

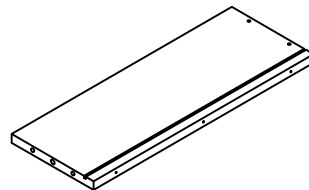


14
x1

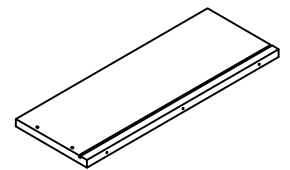


15
x1


Mounting frame

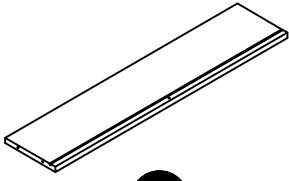


16
x1

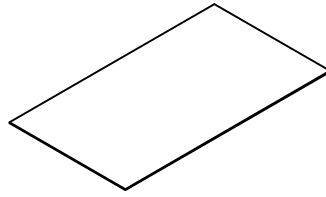


17
x5

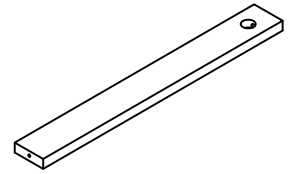


18
x5

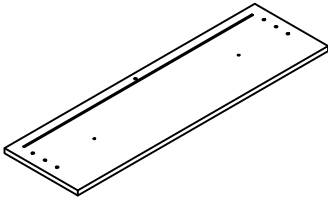


19
x4

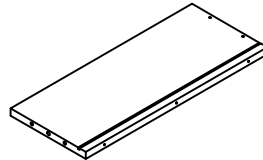


20
x4

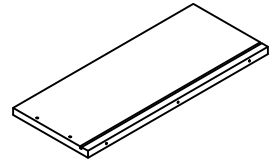


21
x4

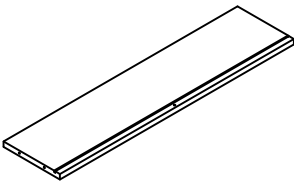


22
x4

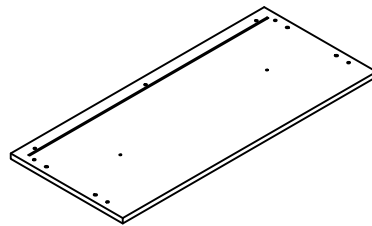


23
x1

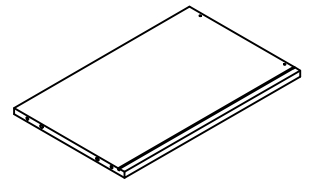


24
x1

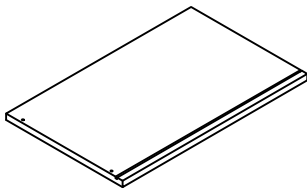


25
x1

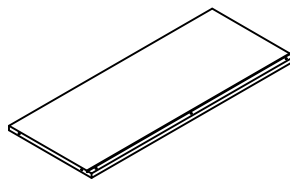


26
x1

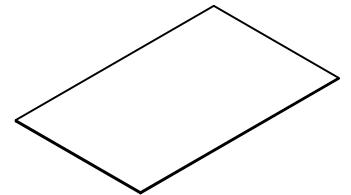


27
x1

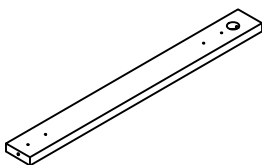





28
x2

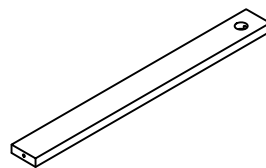

29
x1


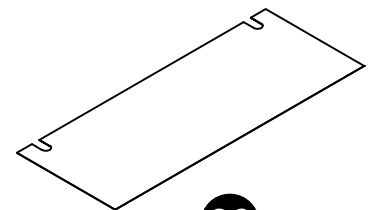


30
x1

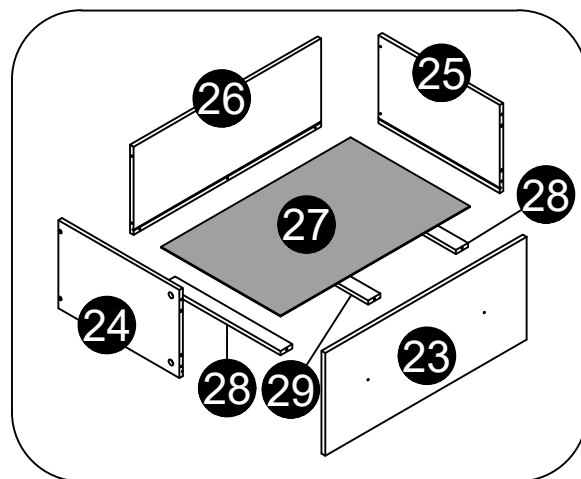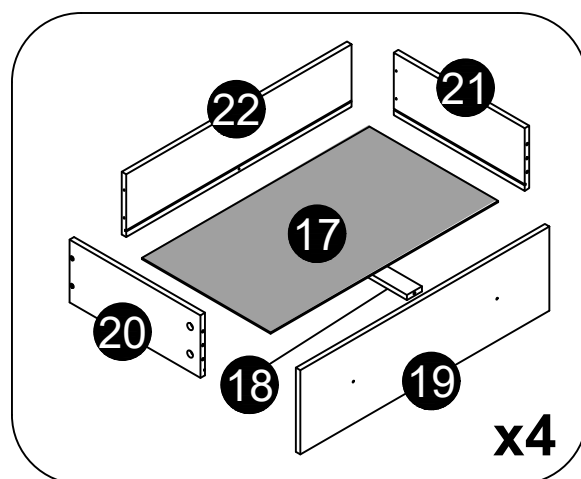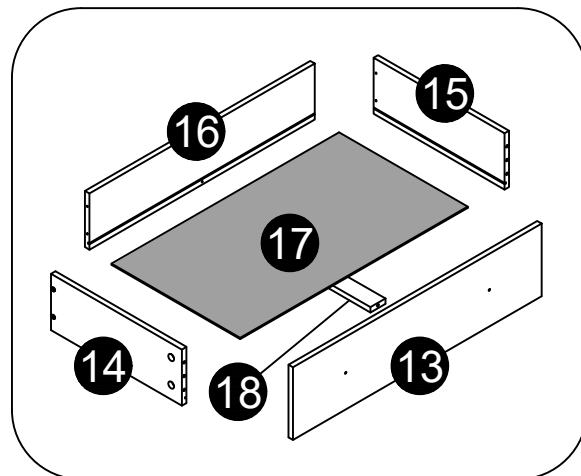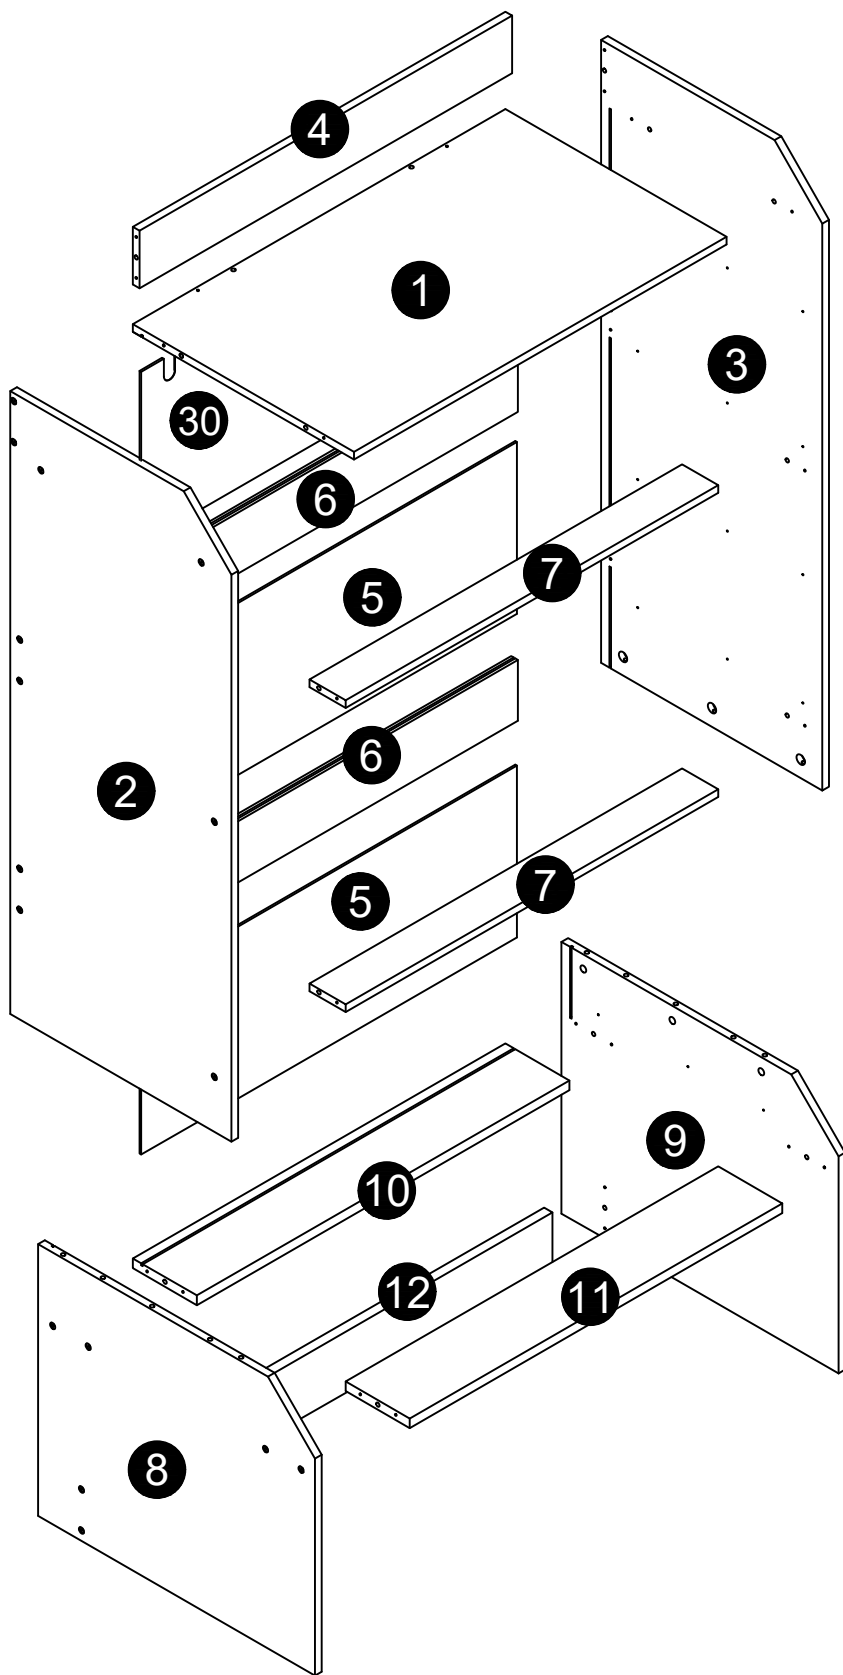


1

E		x6
CL		x1
CR		x1

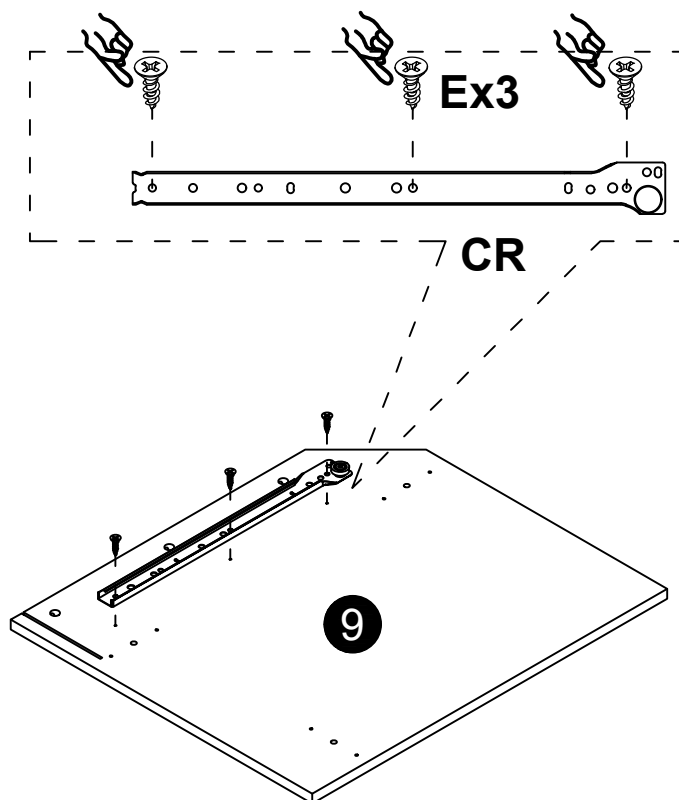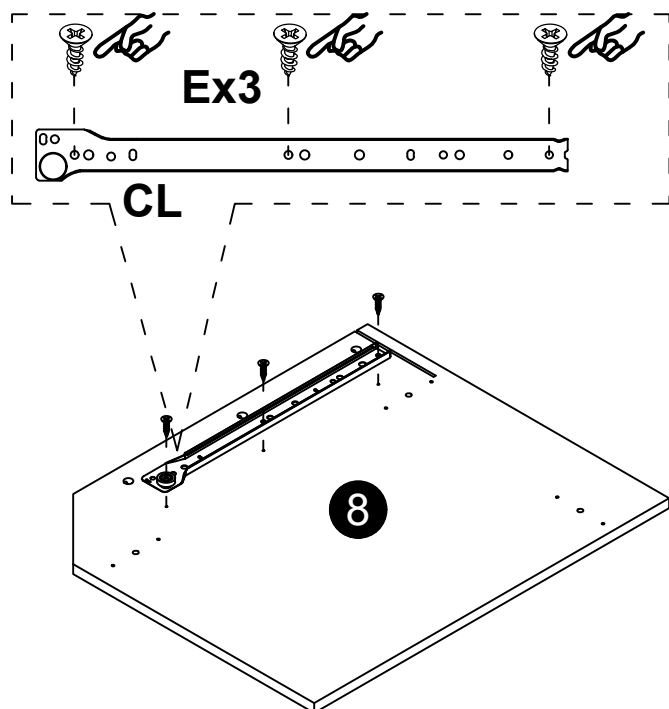


2

F		x6
G		x6

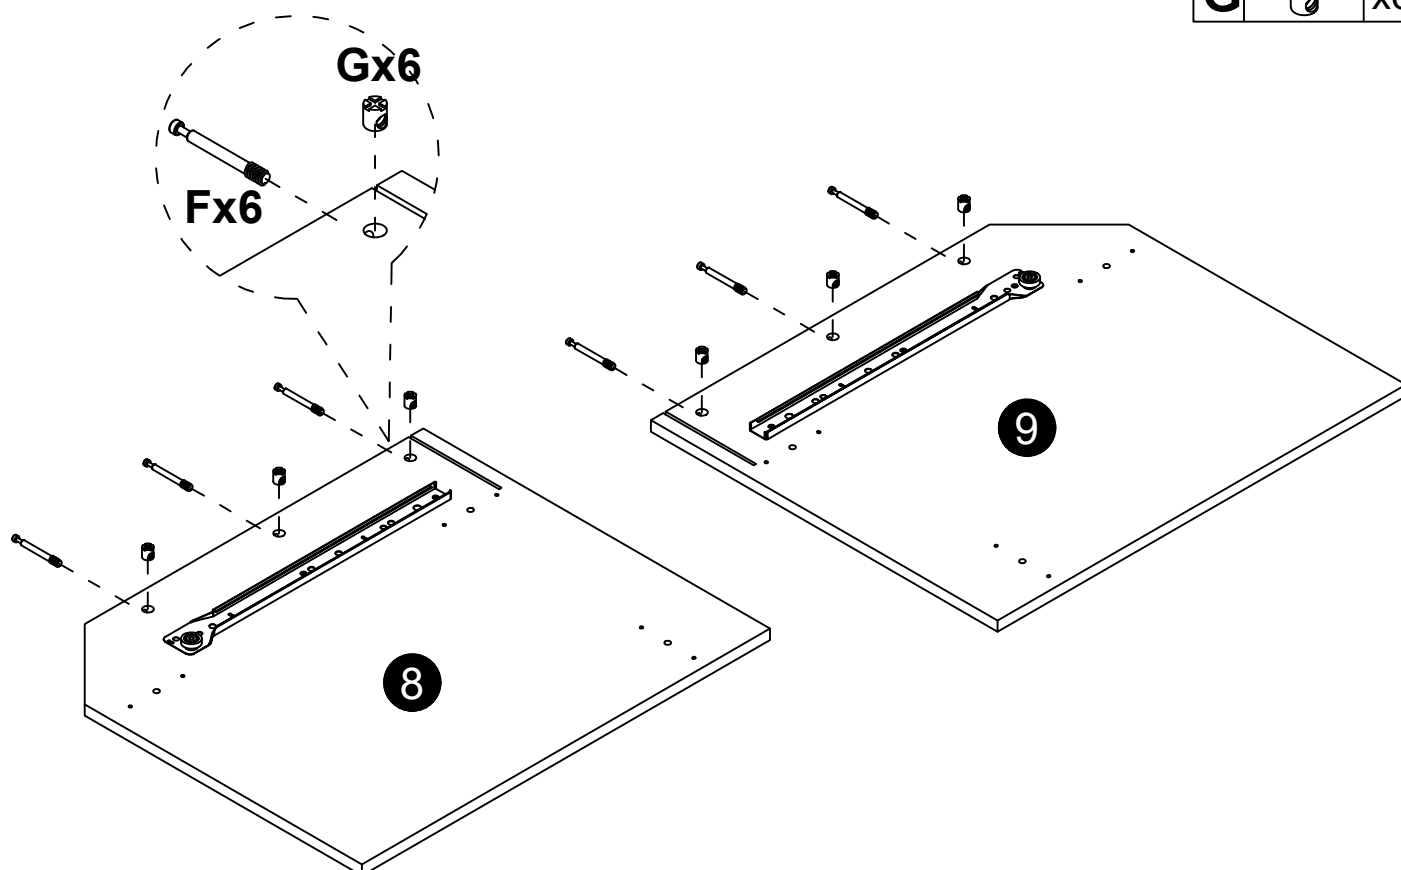


3

E		x12
CL		x4

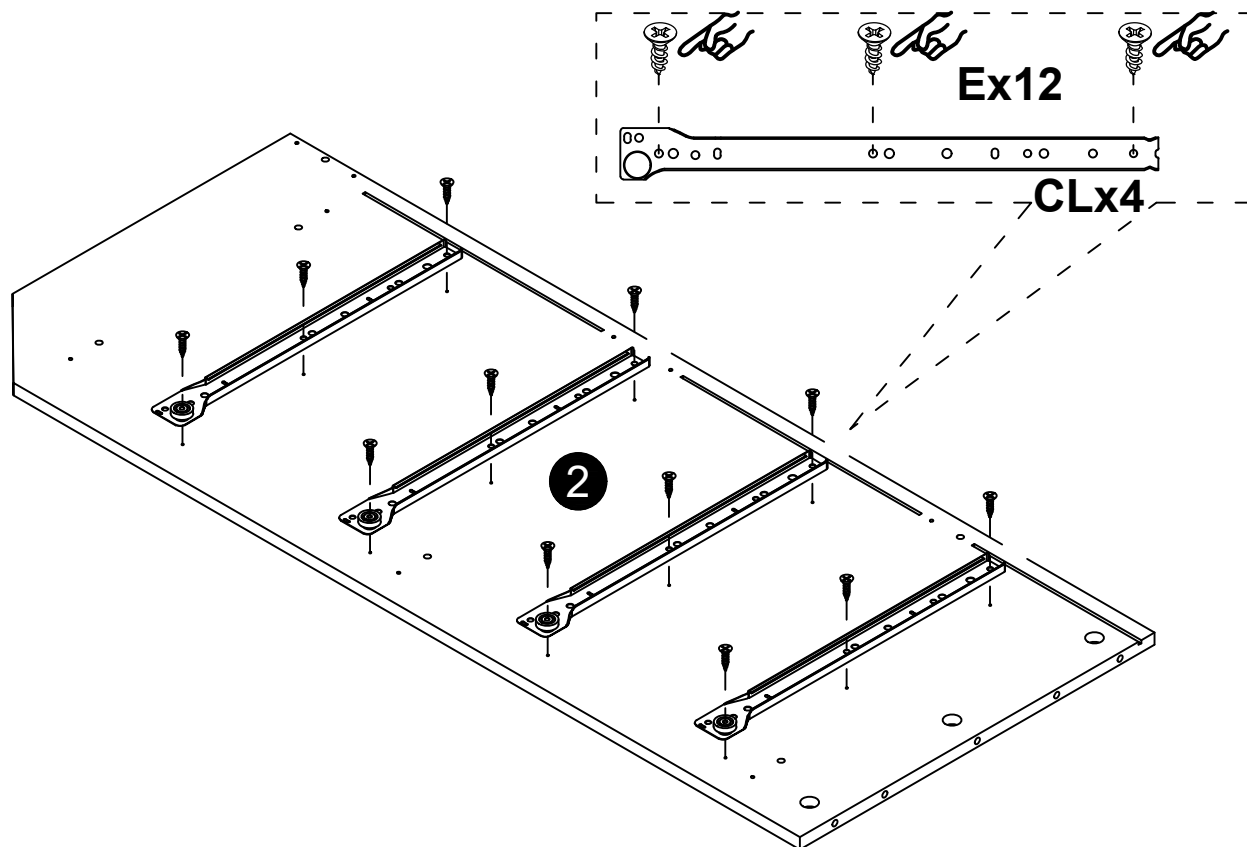


4

E		x12
CR		x4

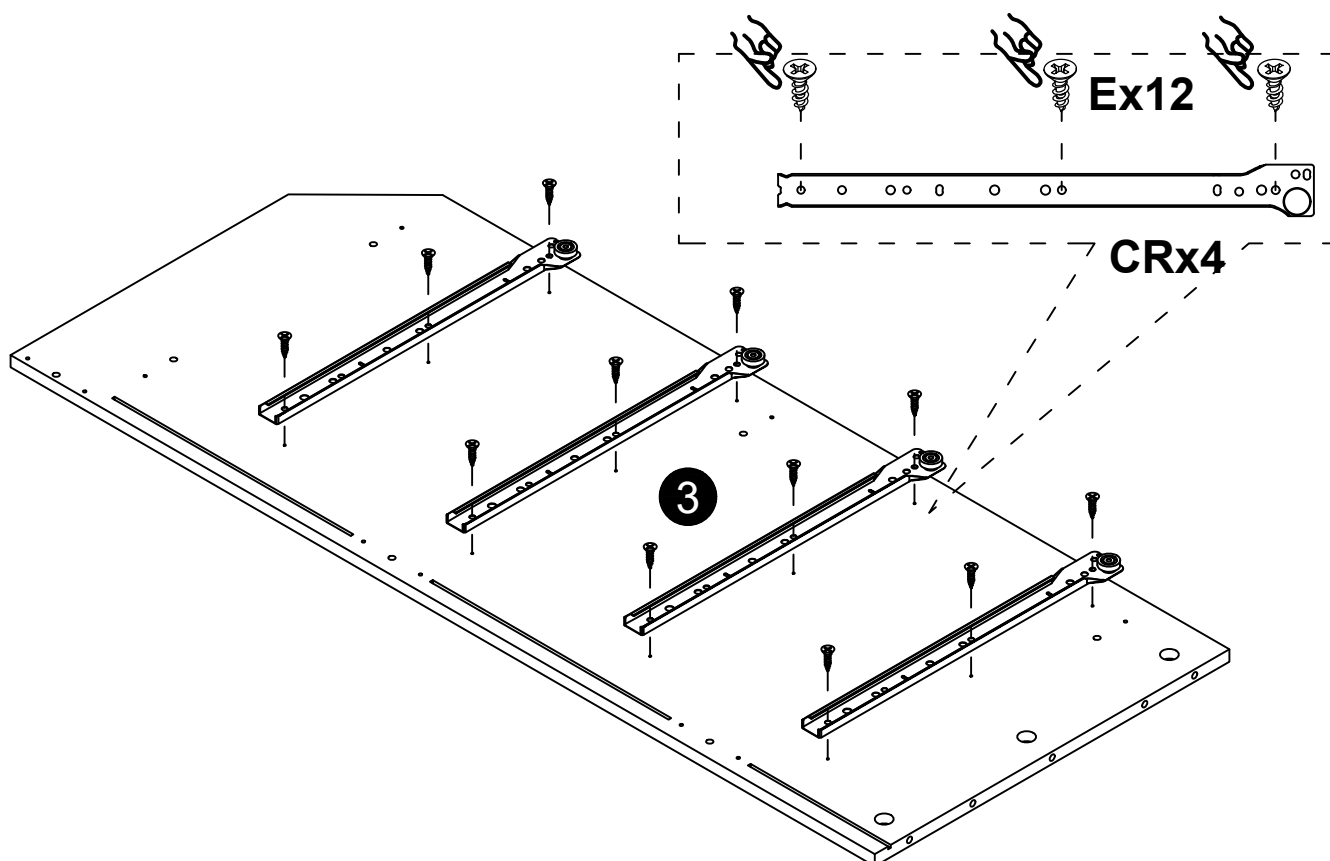

5


B		x3
C		x2

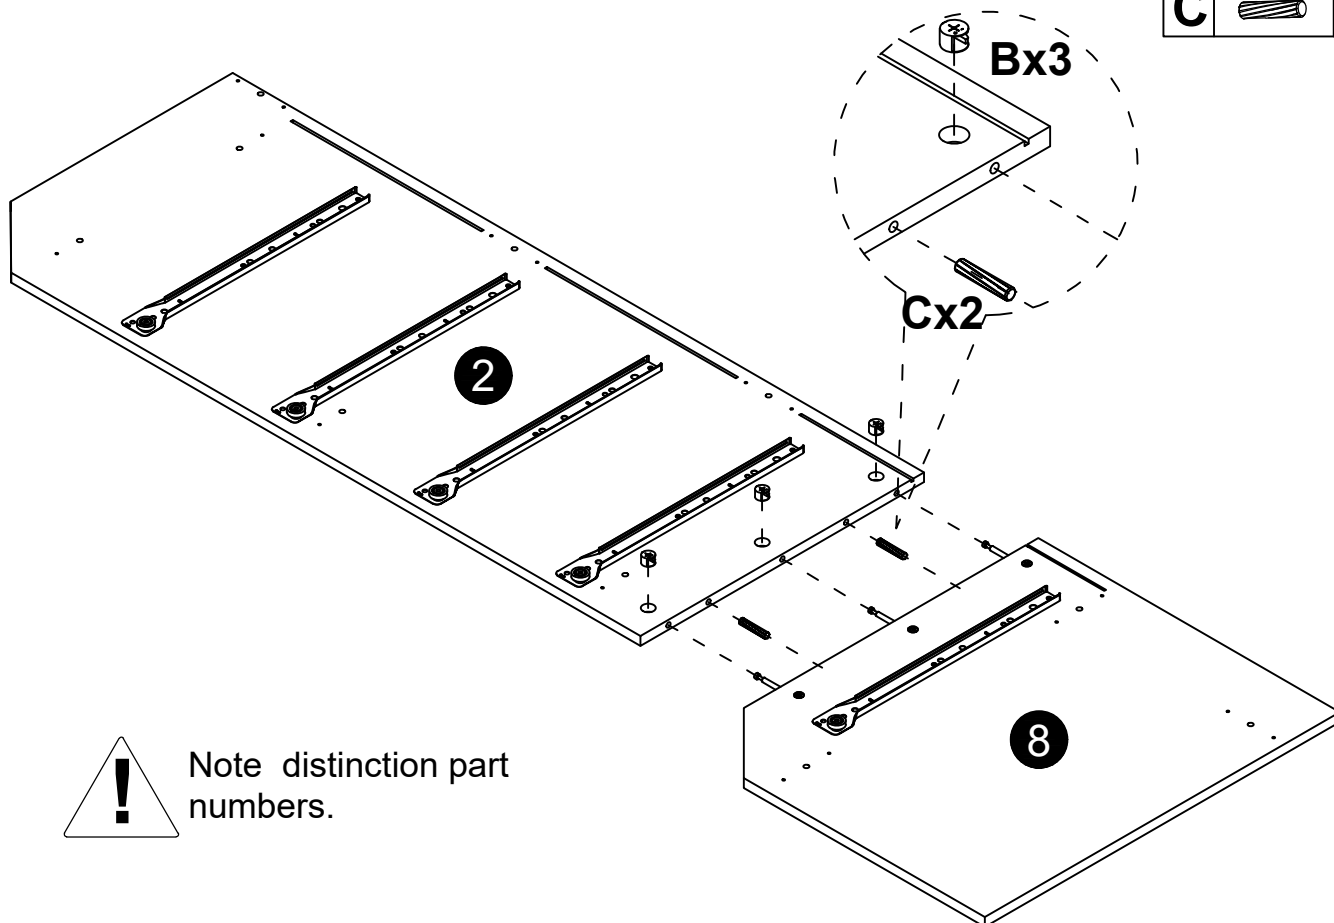

Note distinction part numbers.


6

B		x3
C		x2

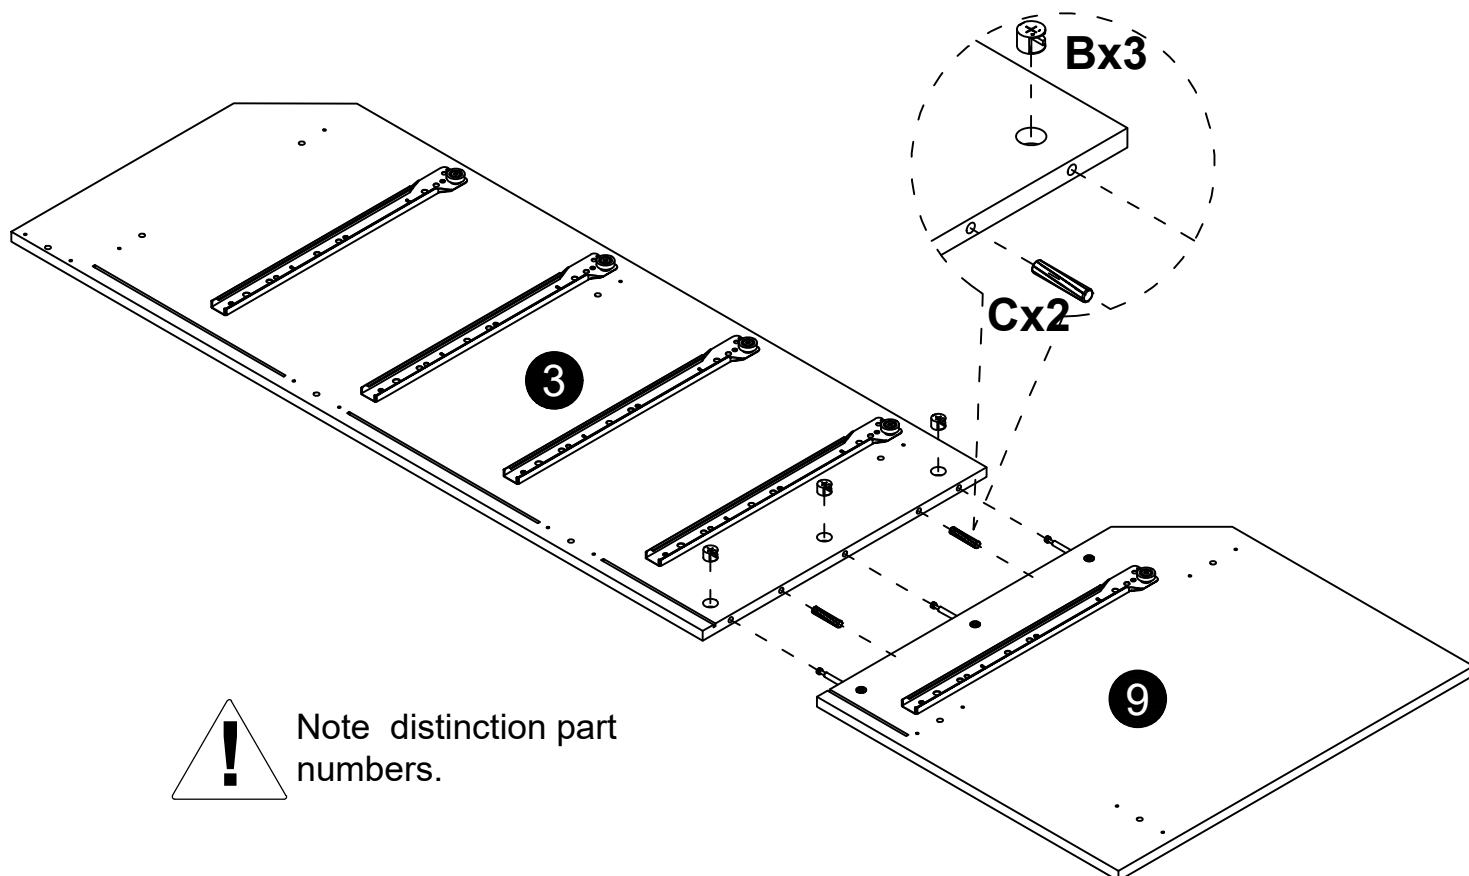



Note distinction part numbers.

7

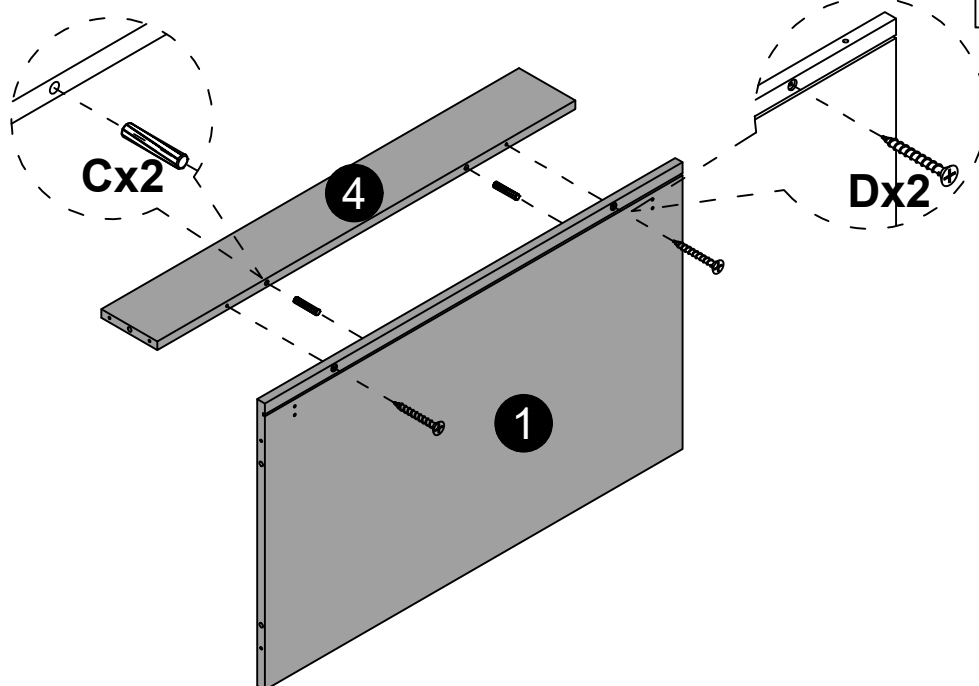


8

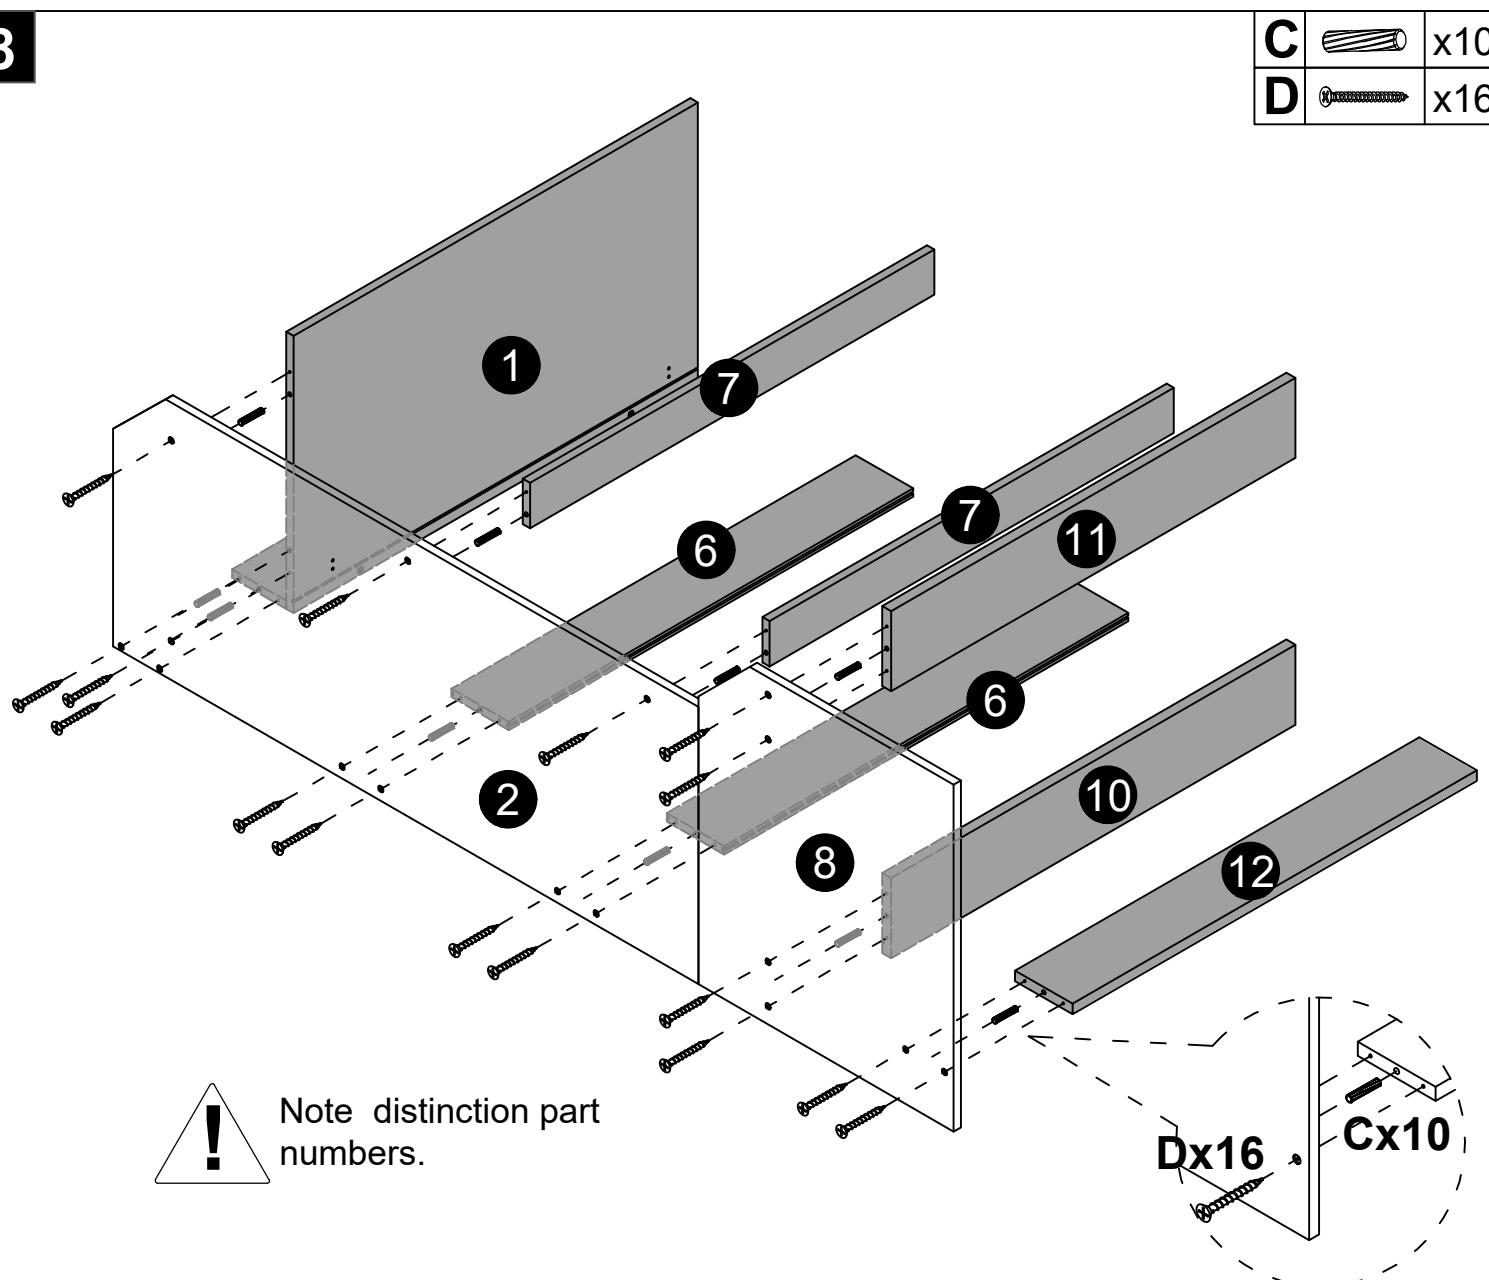

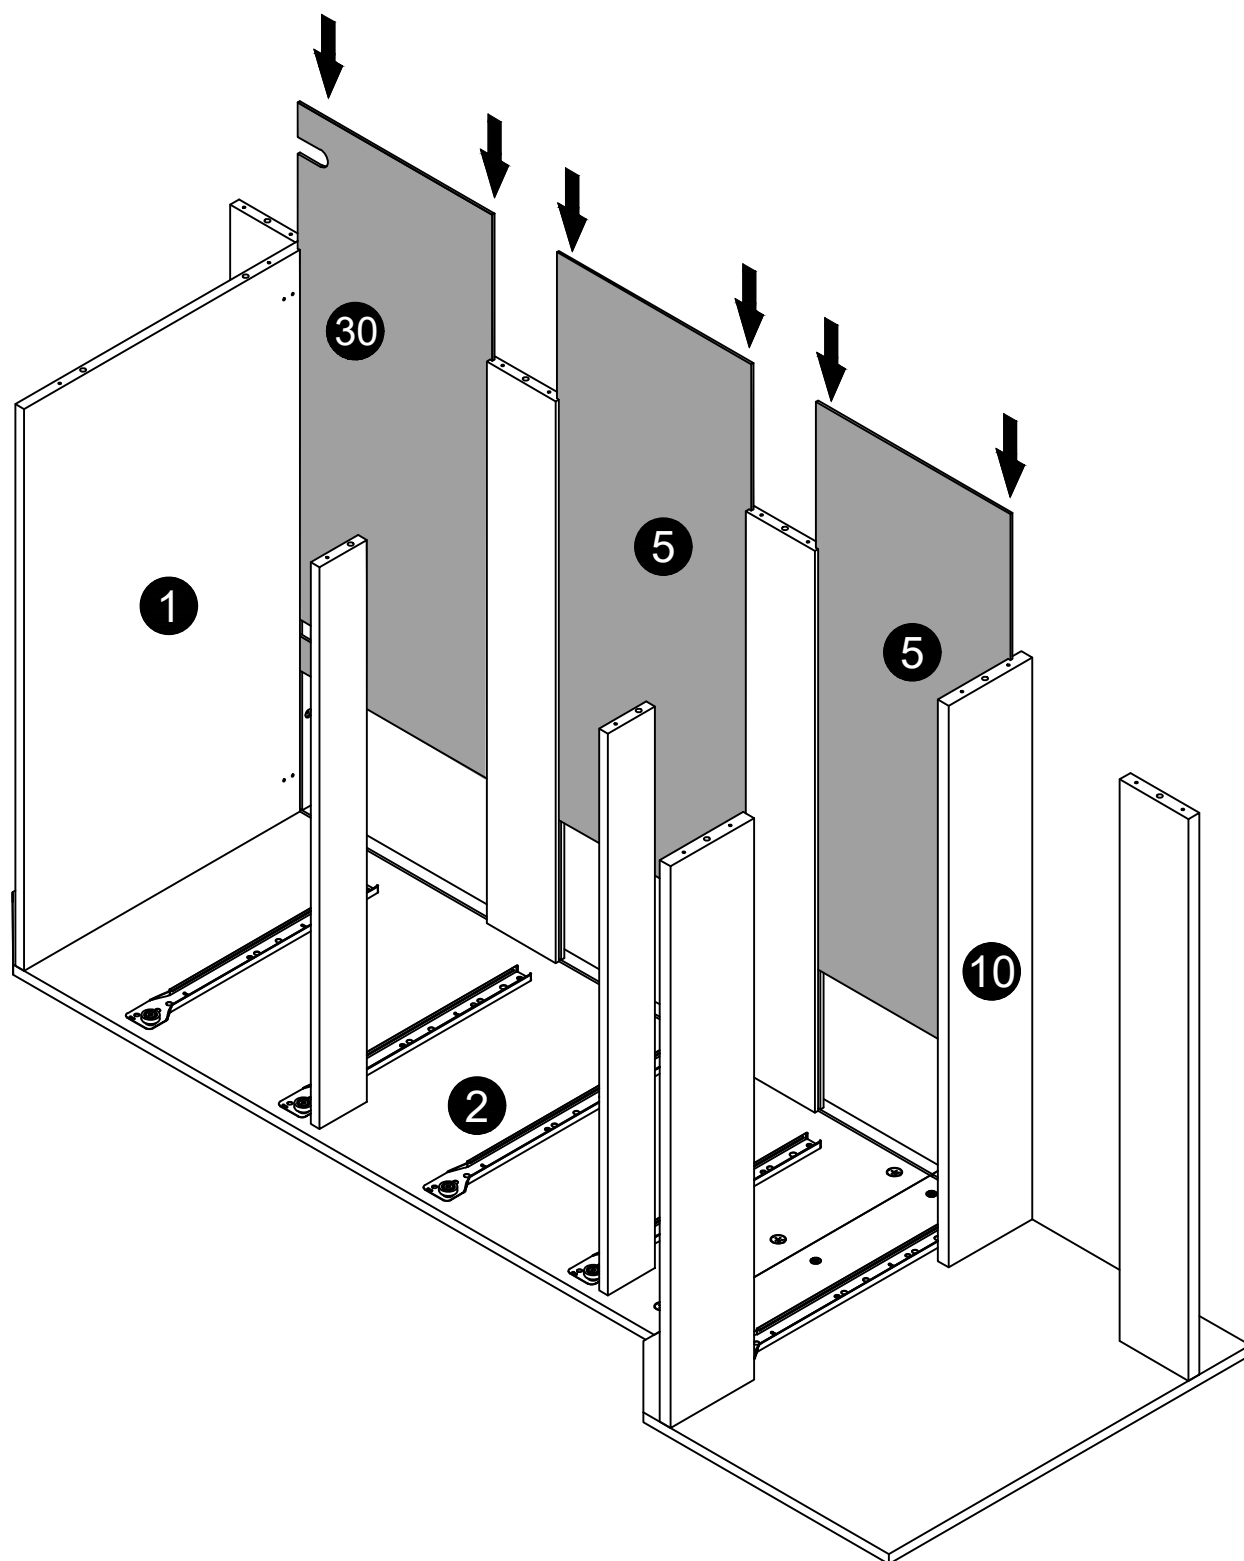





Please be careful
when handling.




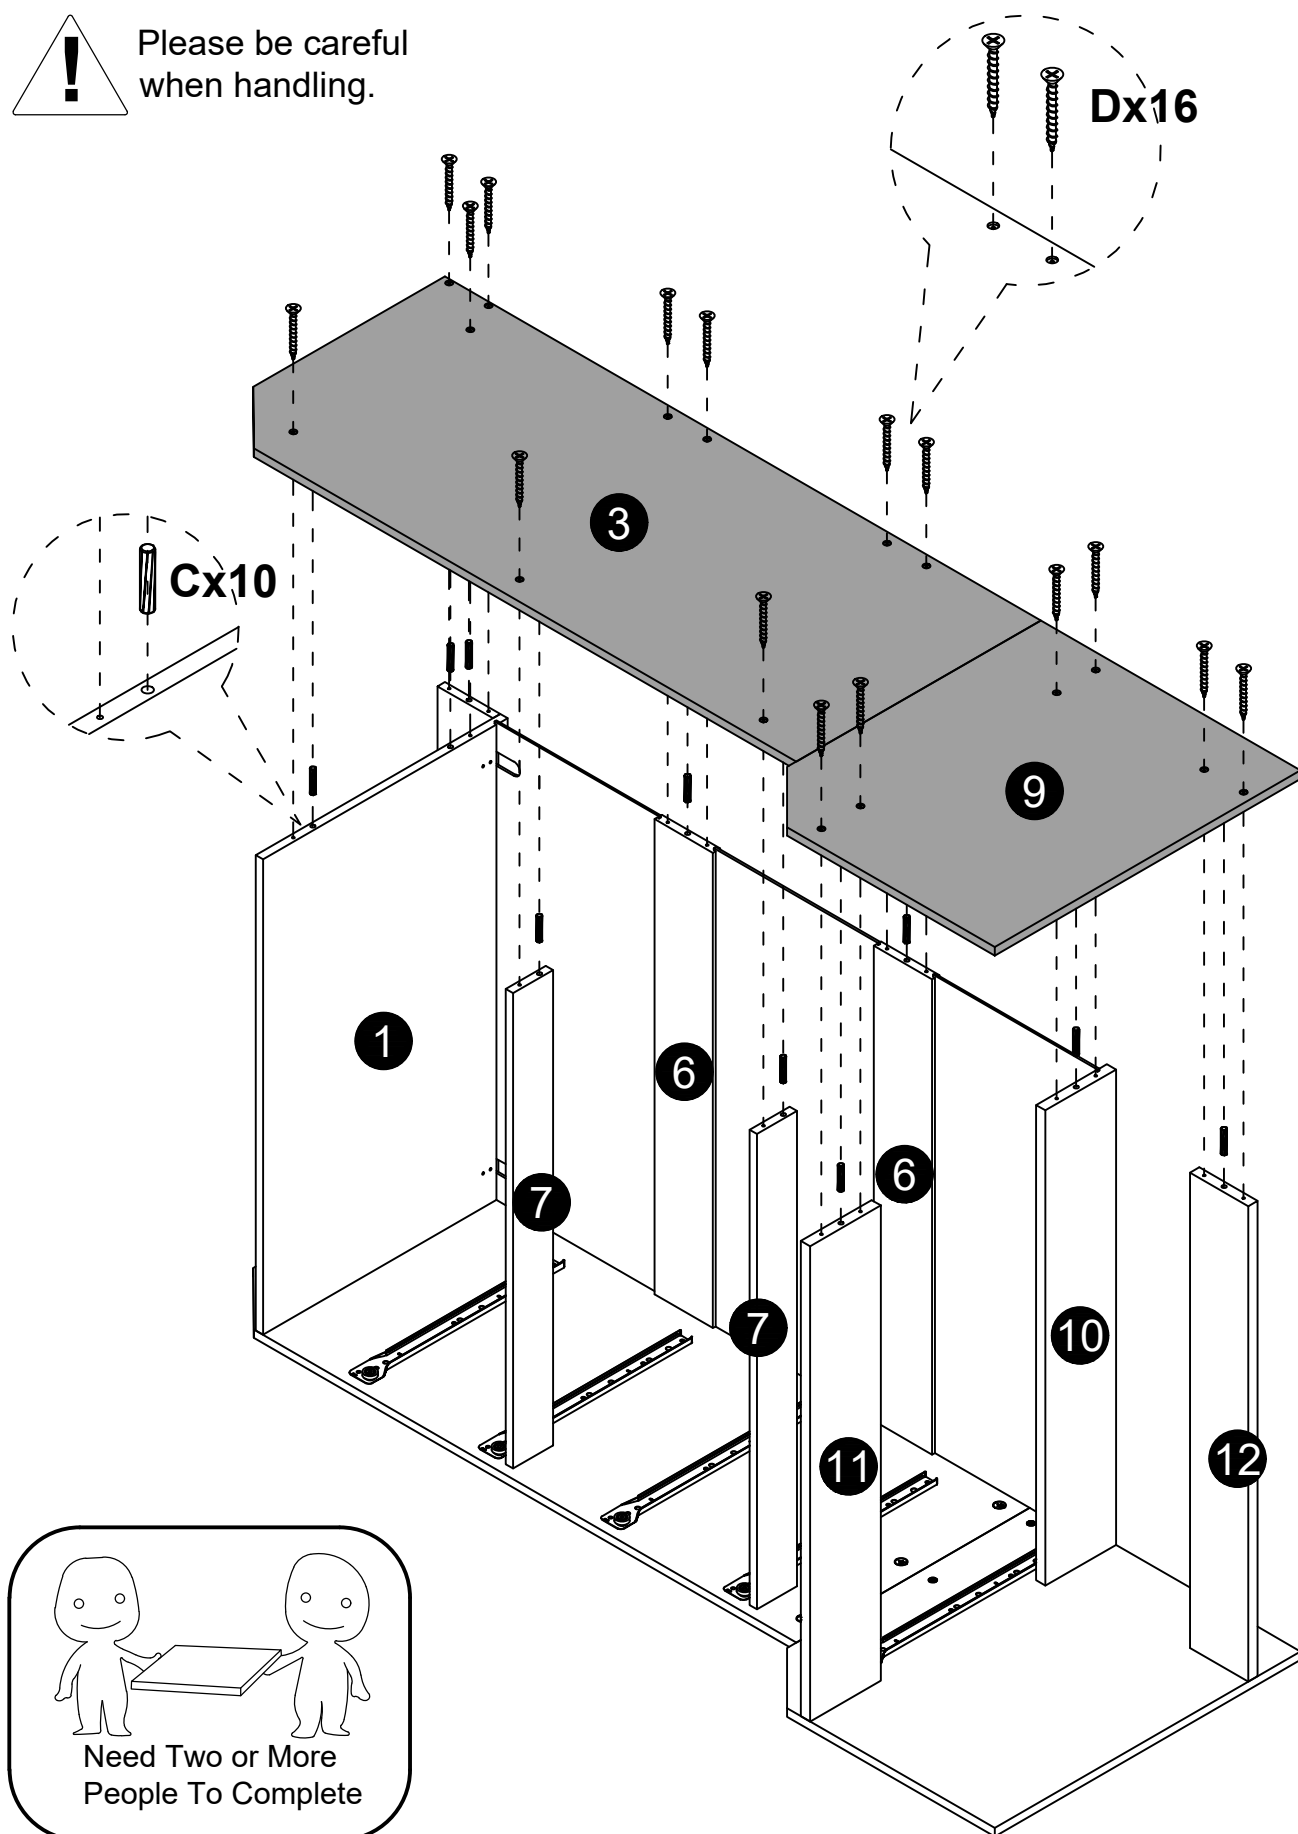


L		x2
M		x4

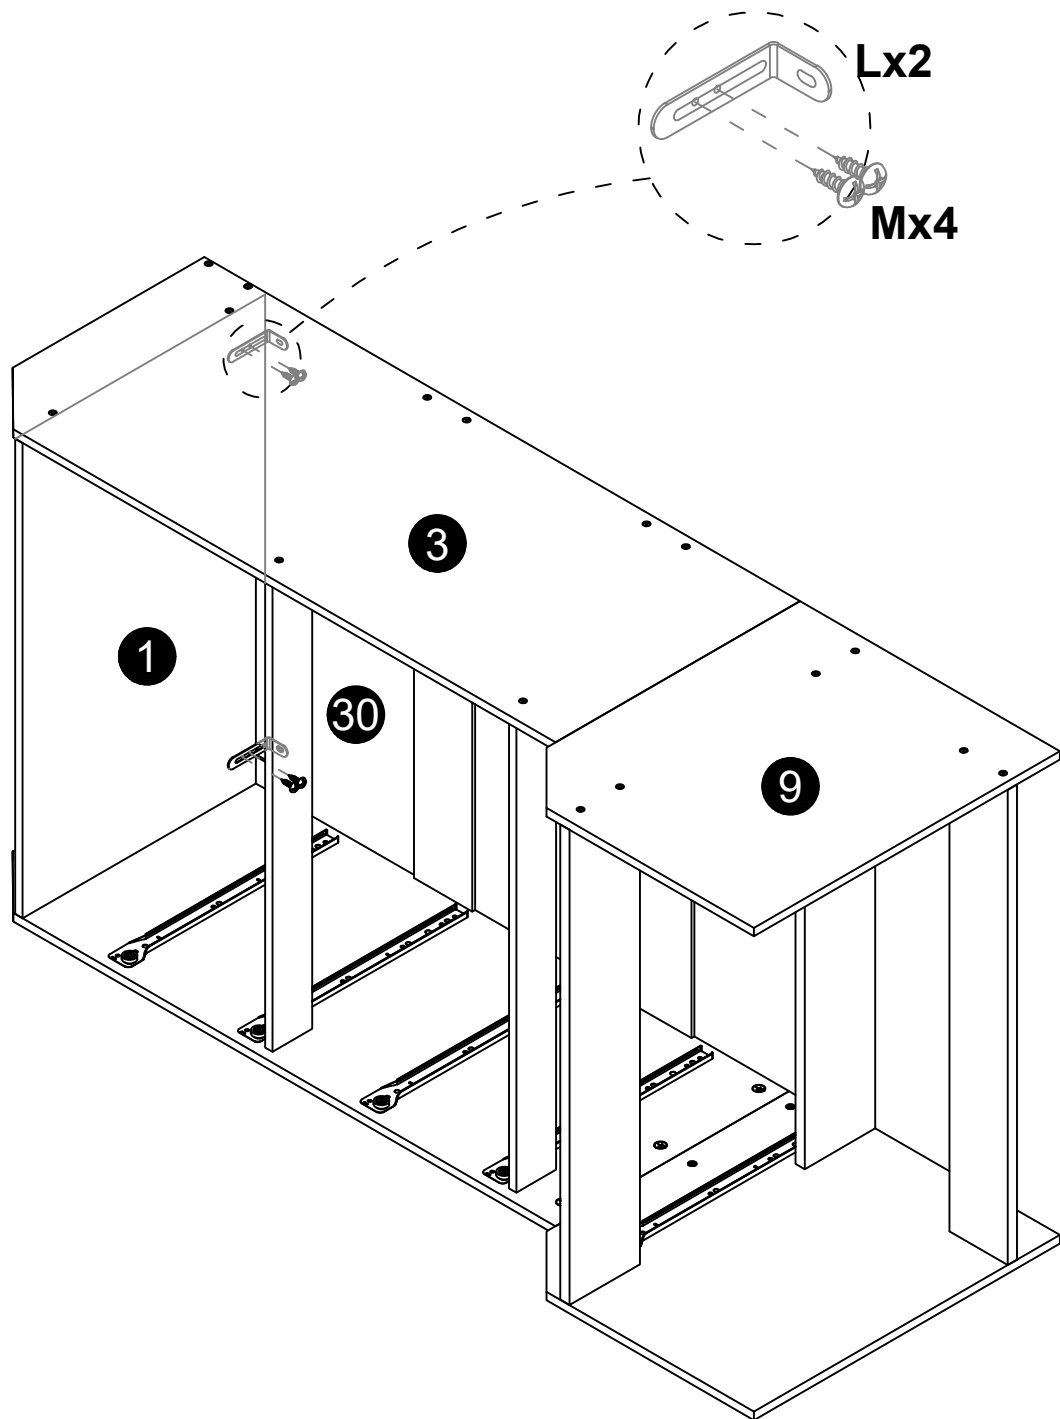


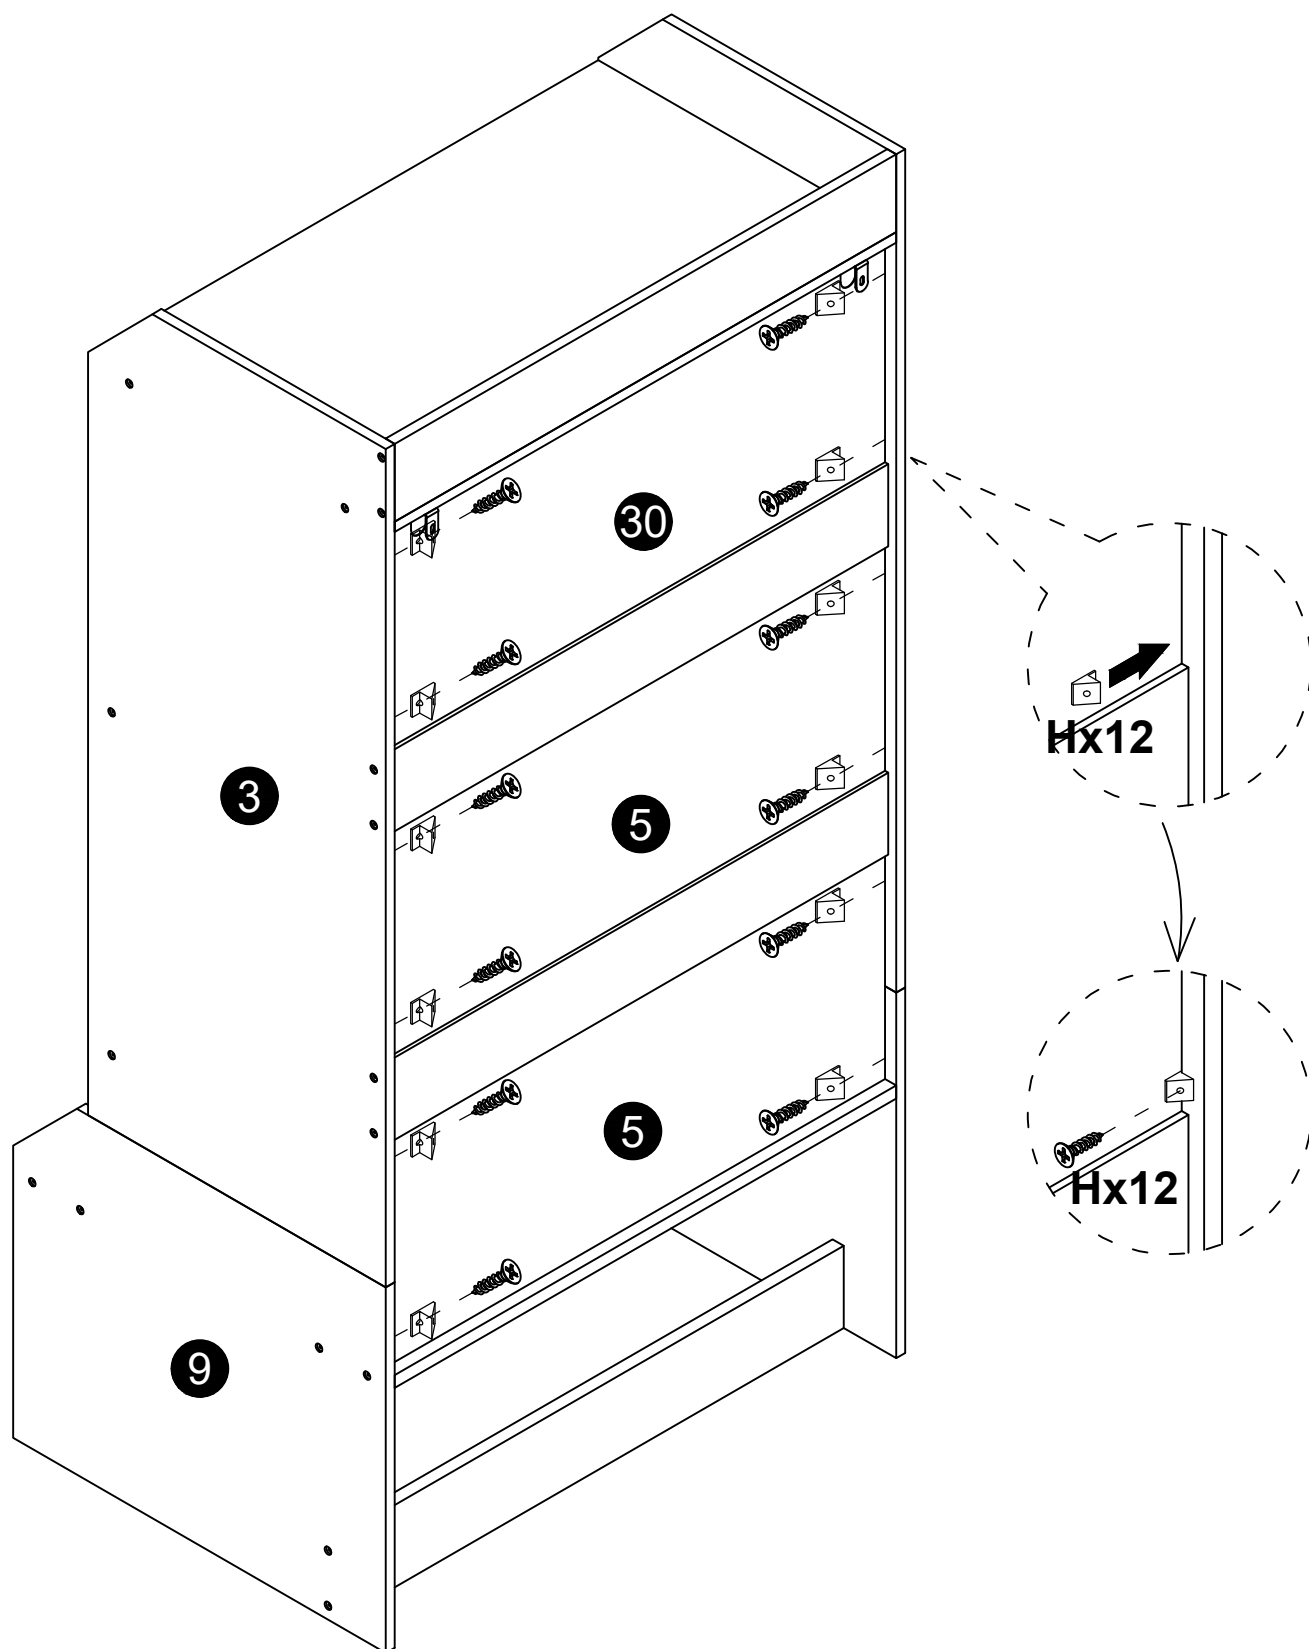


Drawer

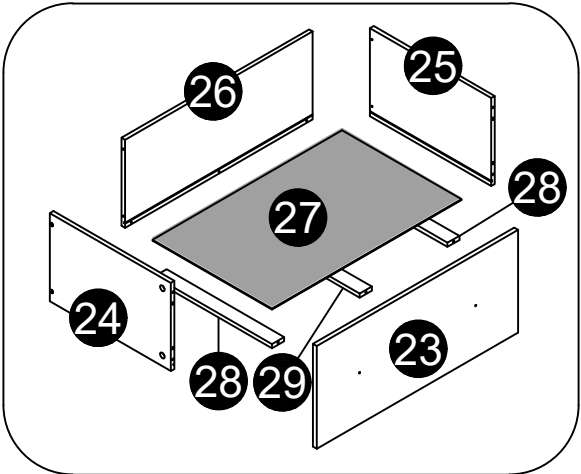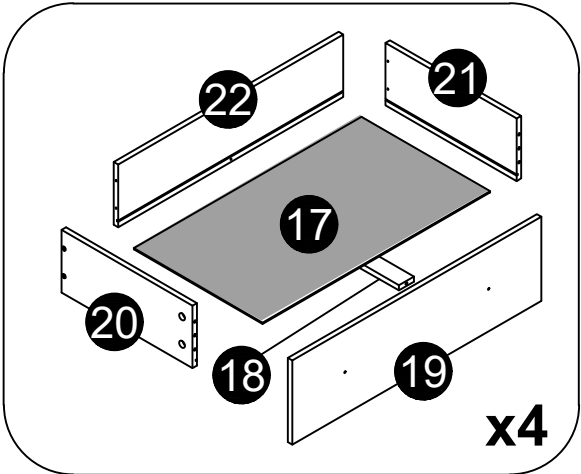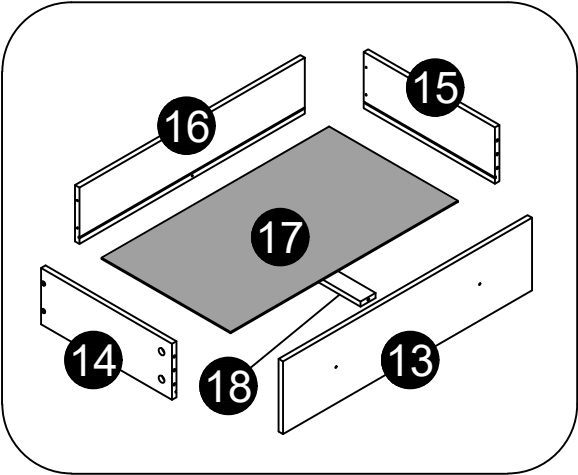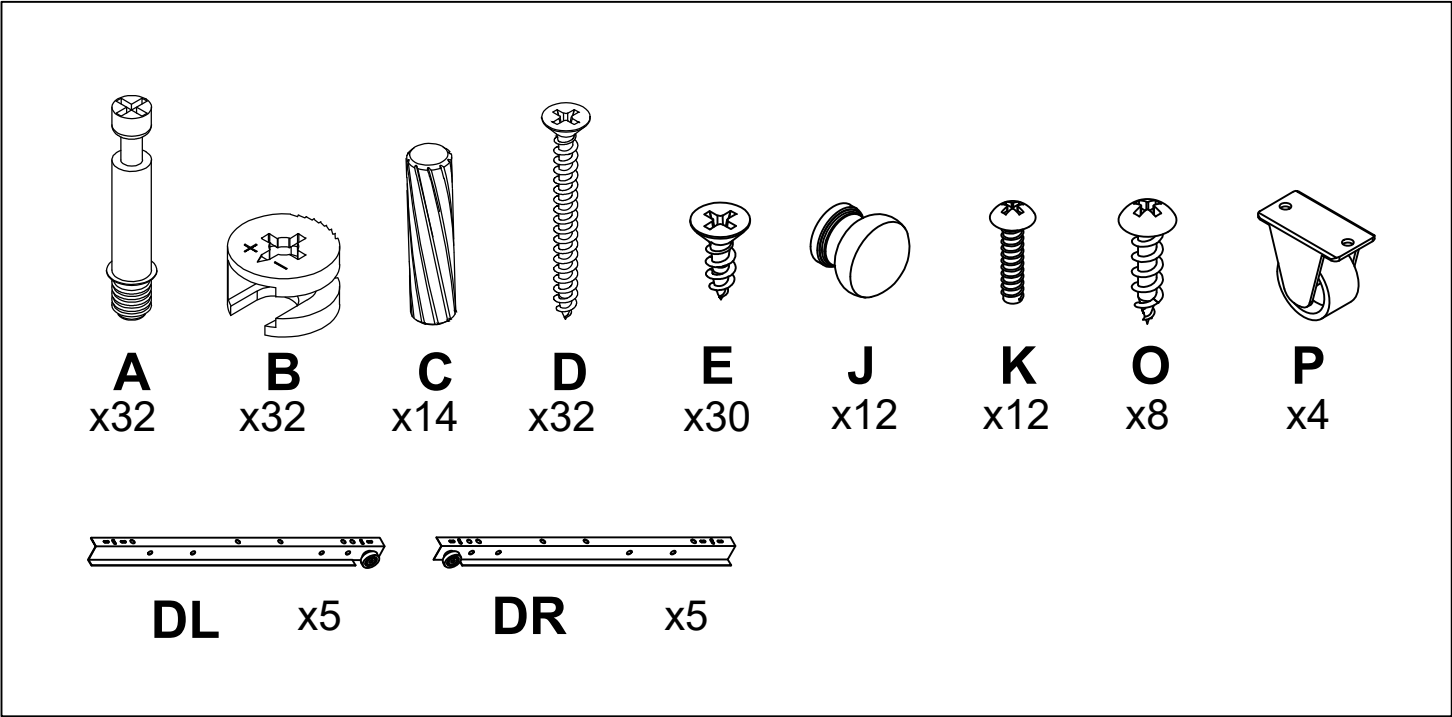

A		x5	B		x5
C		x2	D		x5
J		x2	K		x2

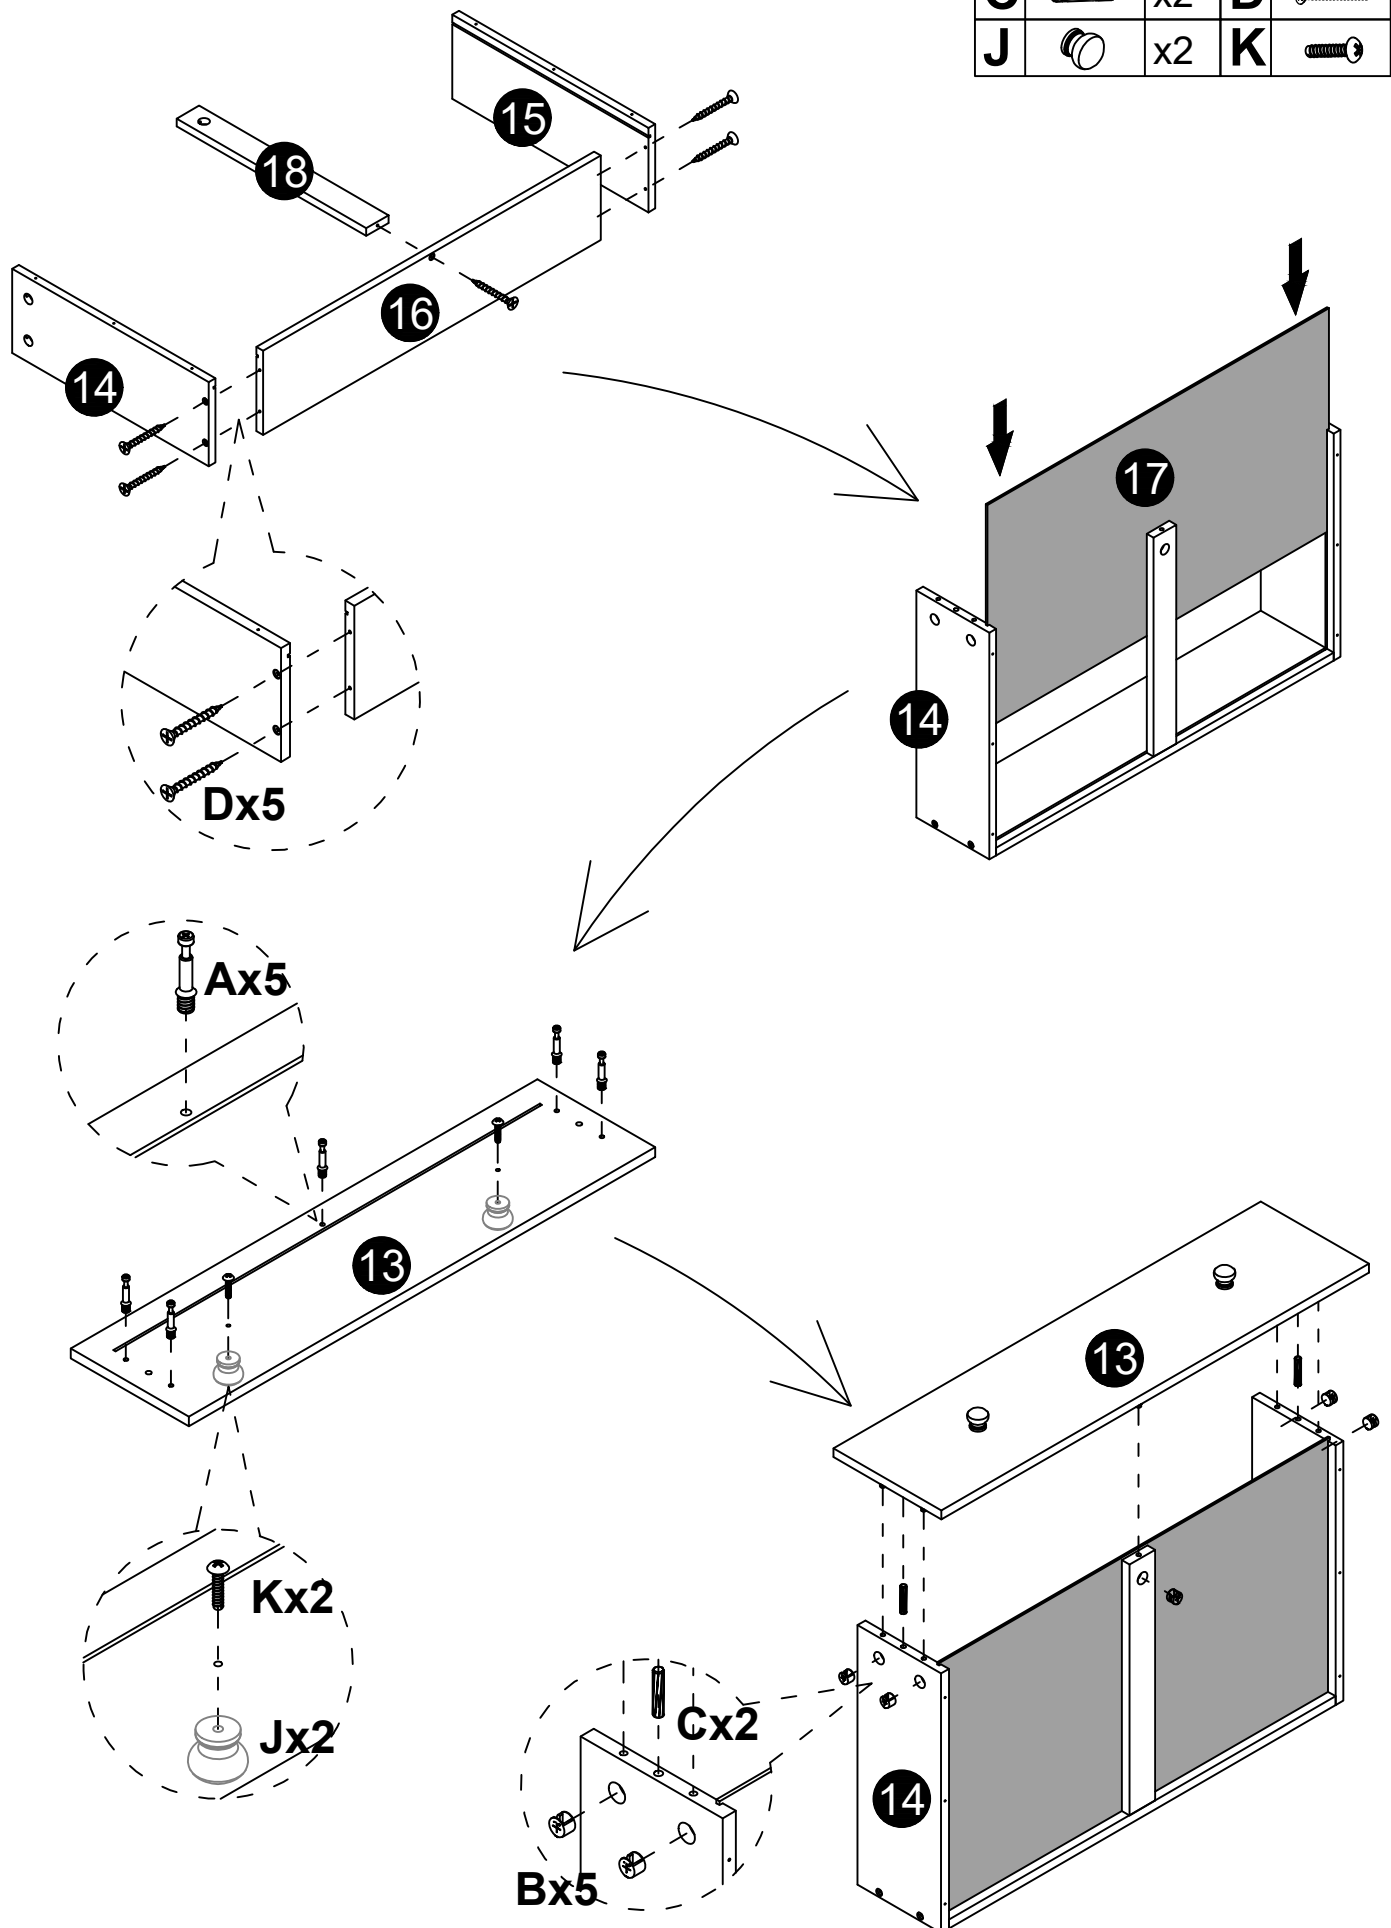


14

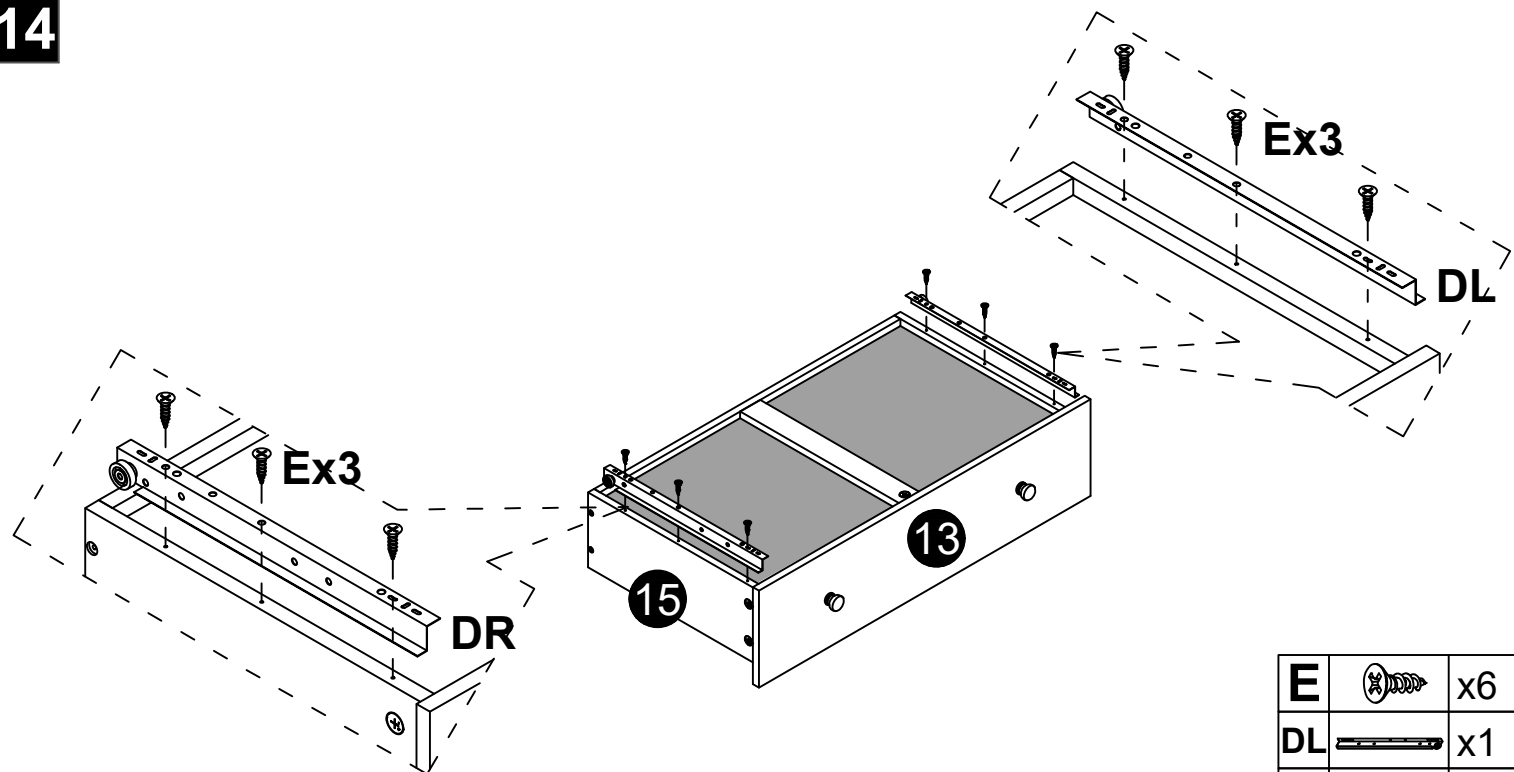


15

A		x20	D		x20
J		x8	K		x8

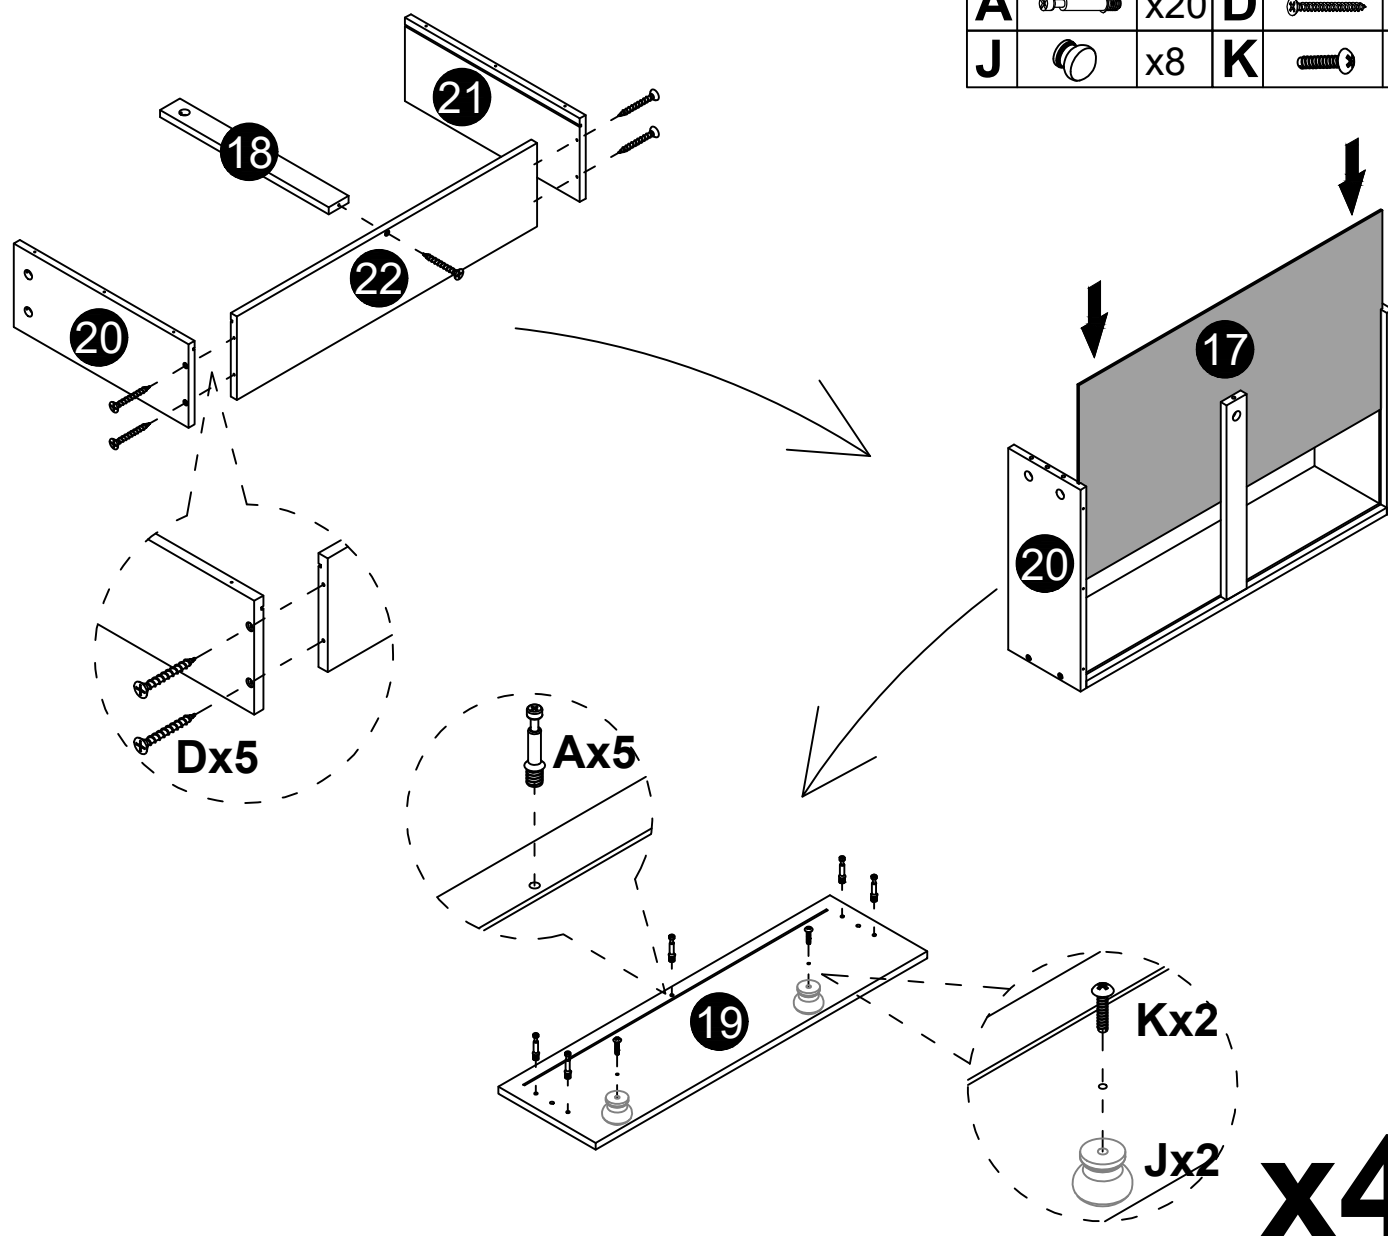

16


B		x20
C		x8
E		x24
DL		x4
DR		x4

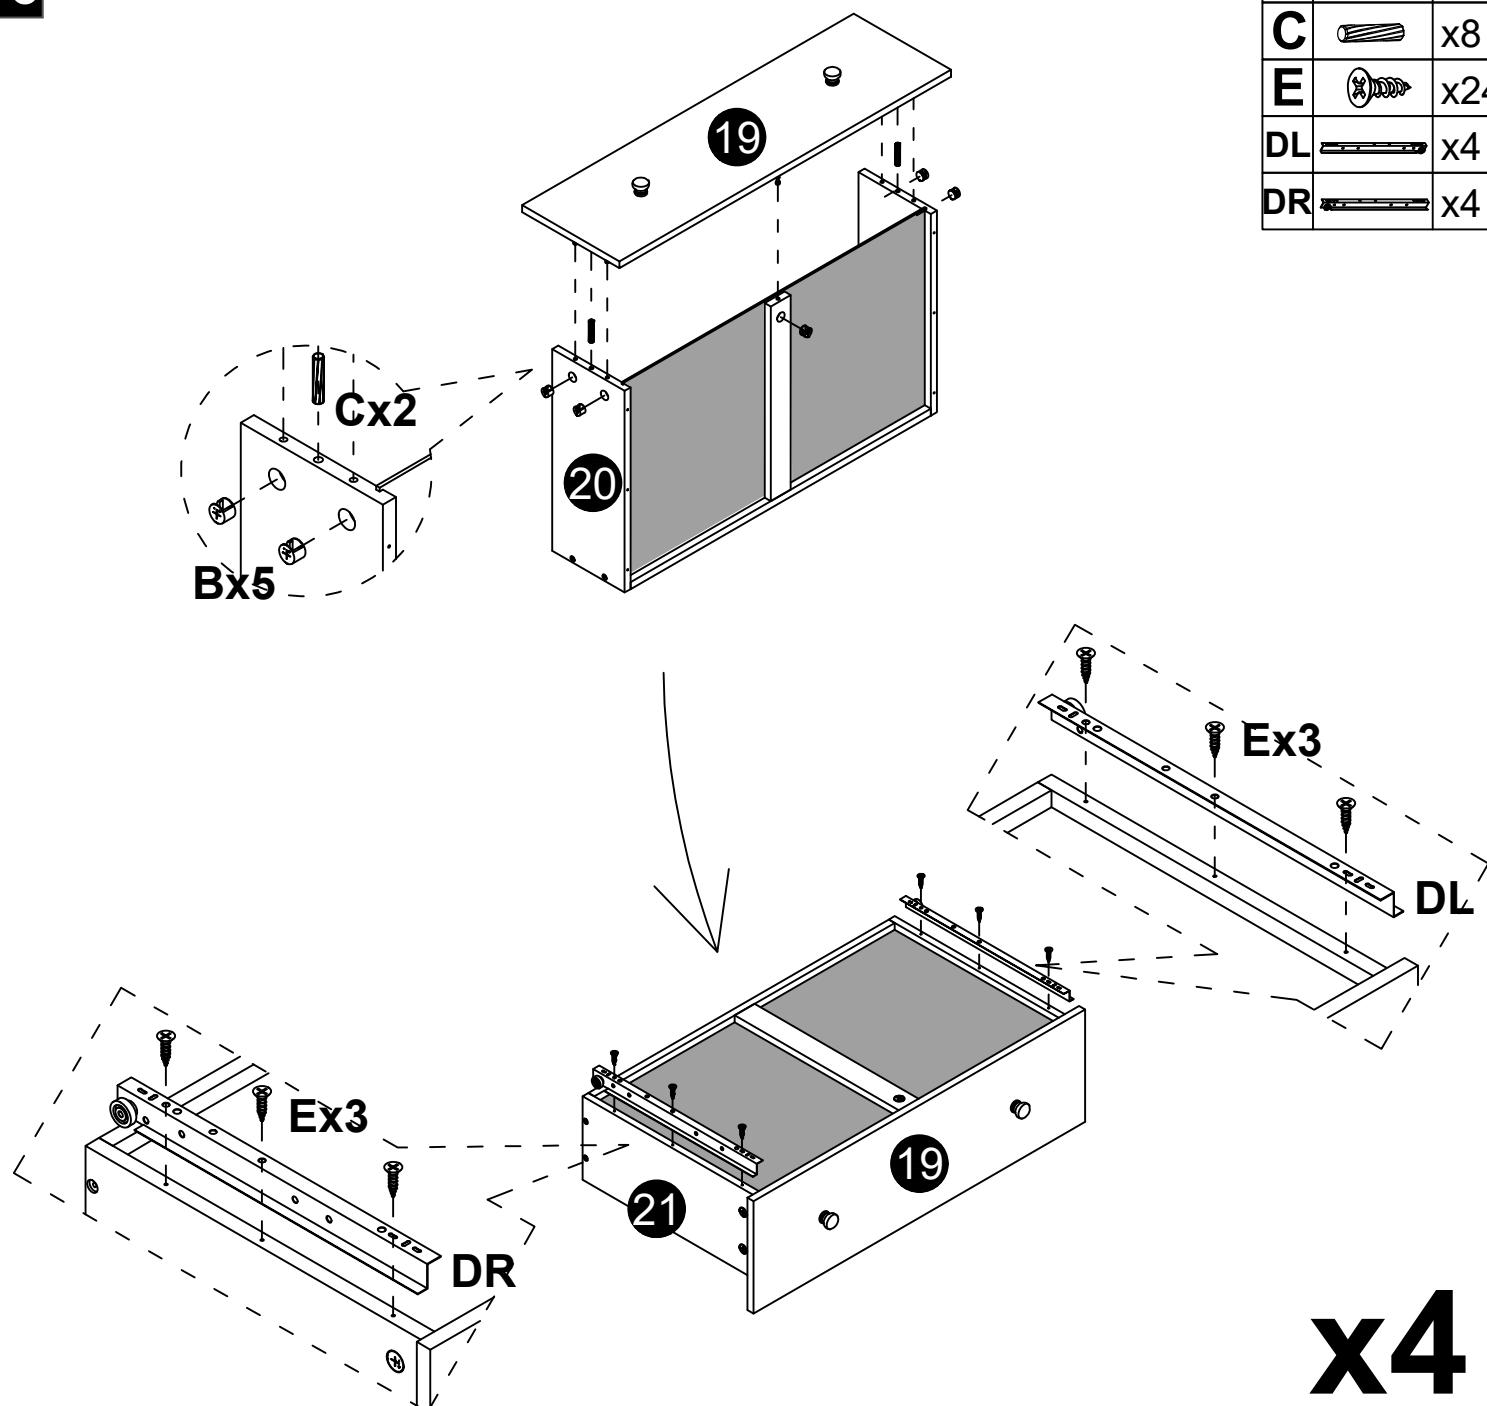

x4


17



O		x8
P		x4

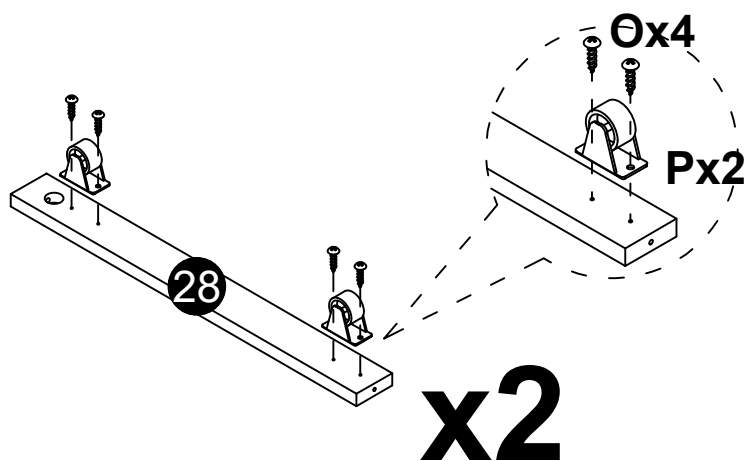



x2

A		x7	B		x7
C		x4	D		x7
J		x2	K		x2

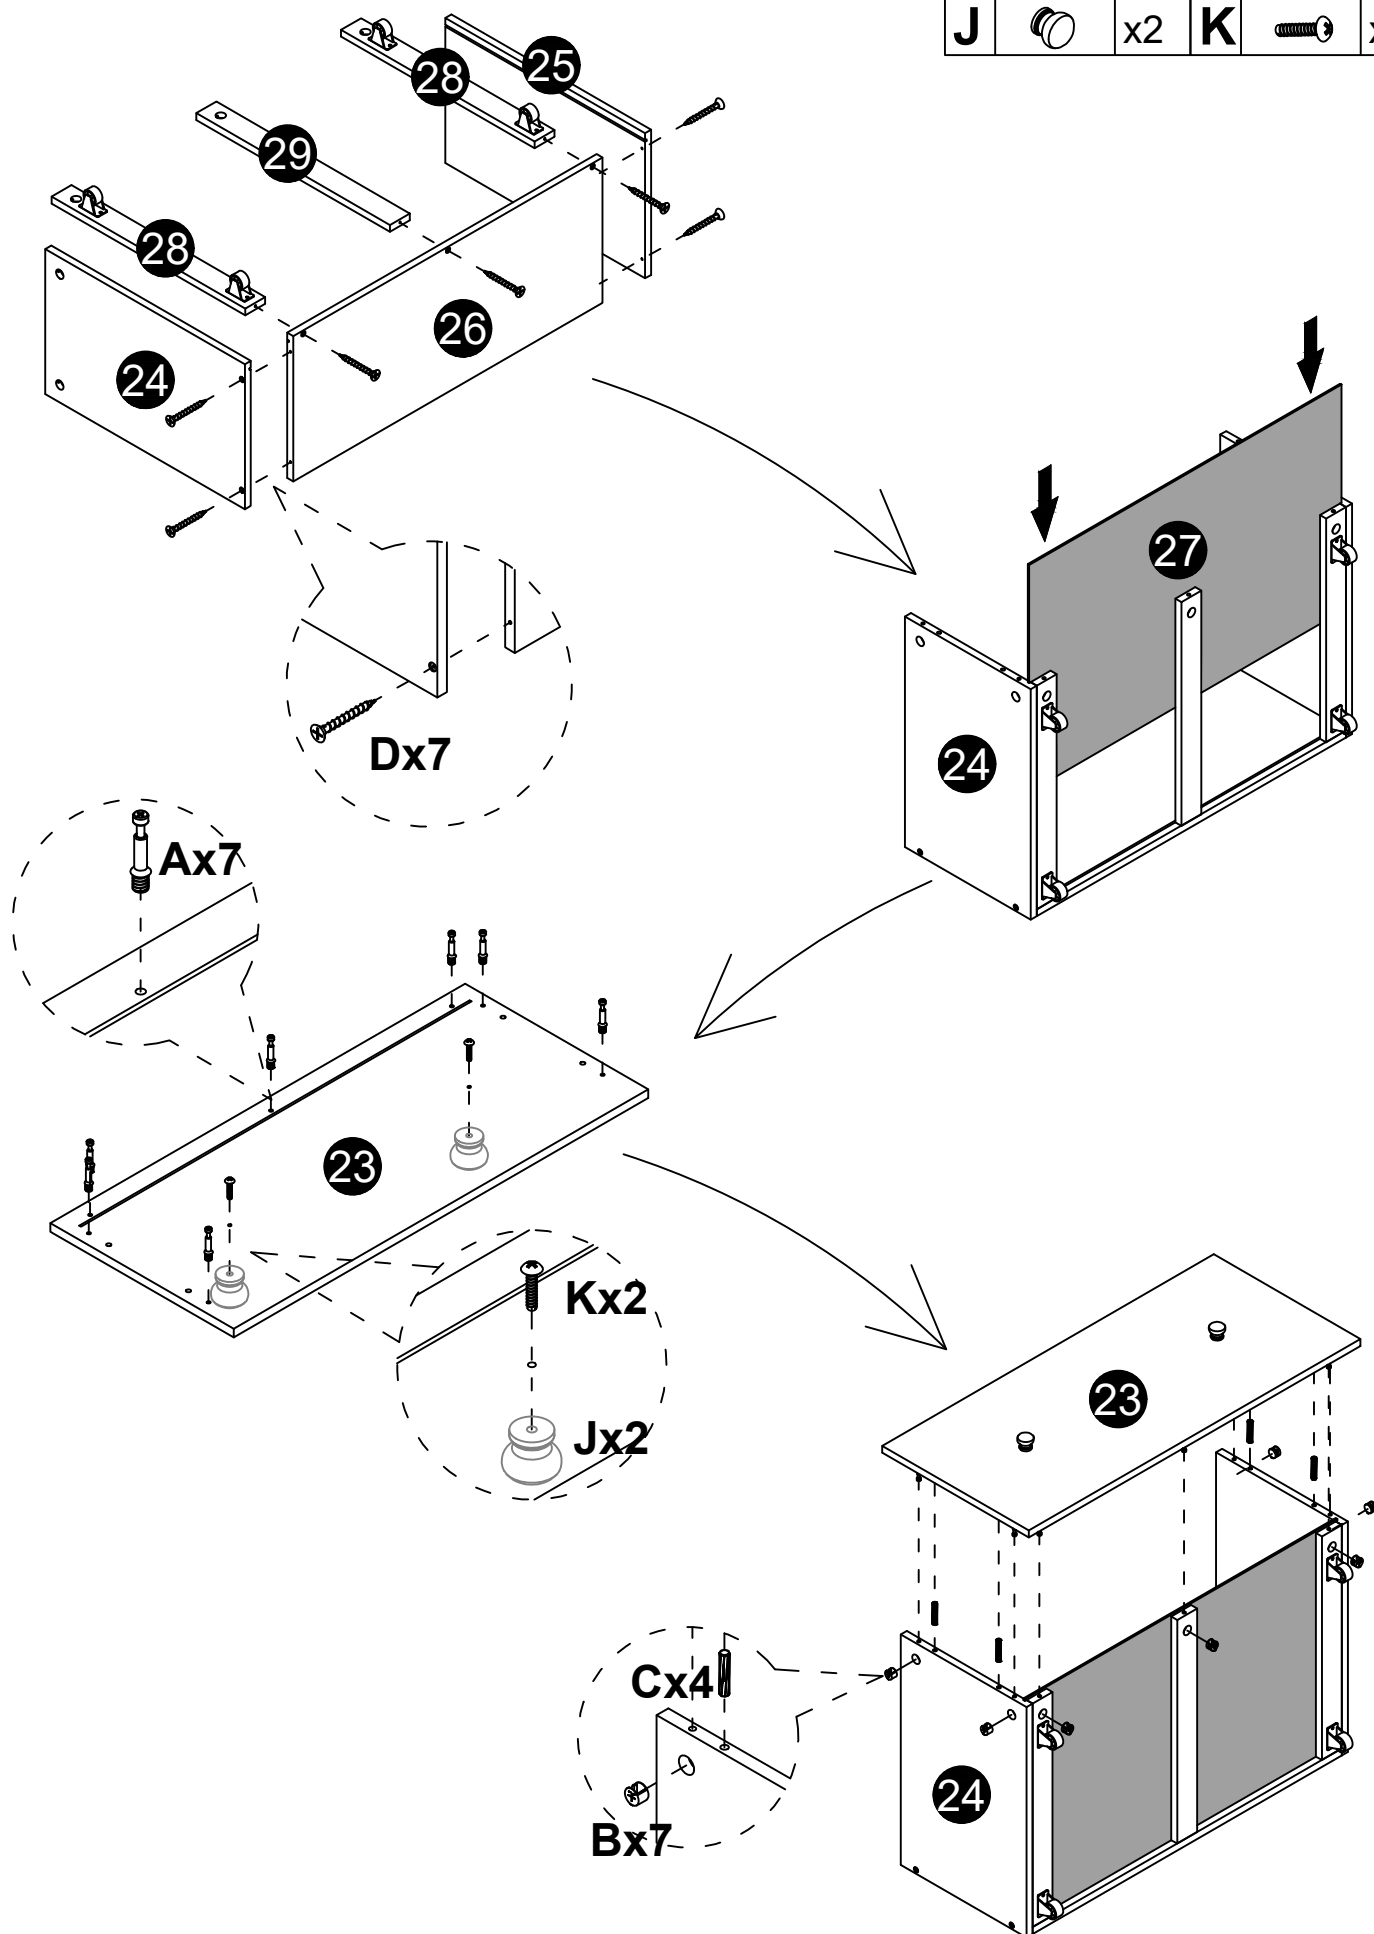

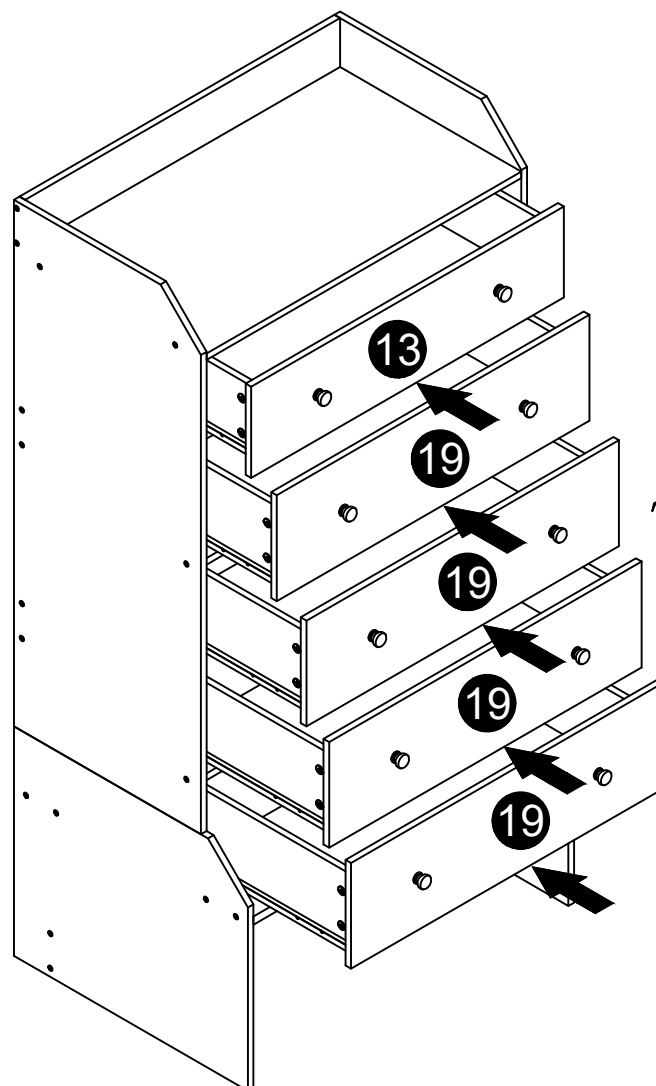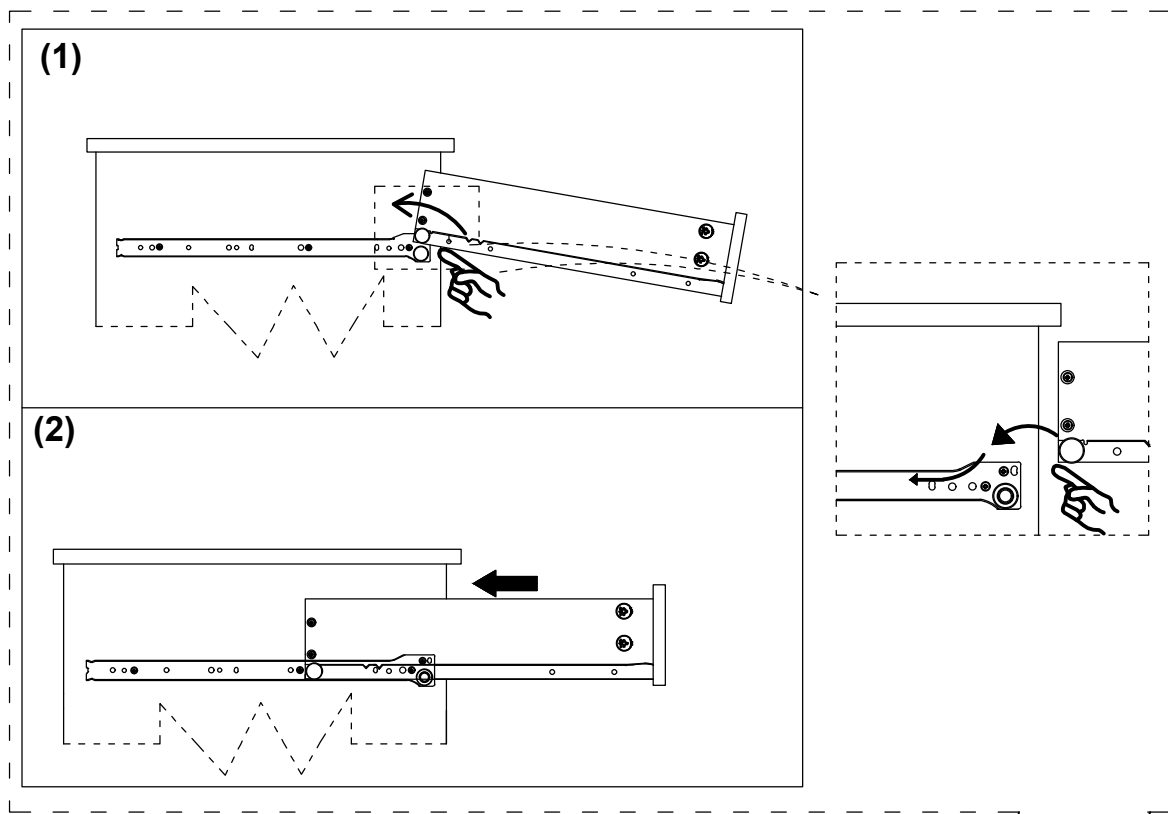

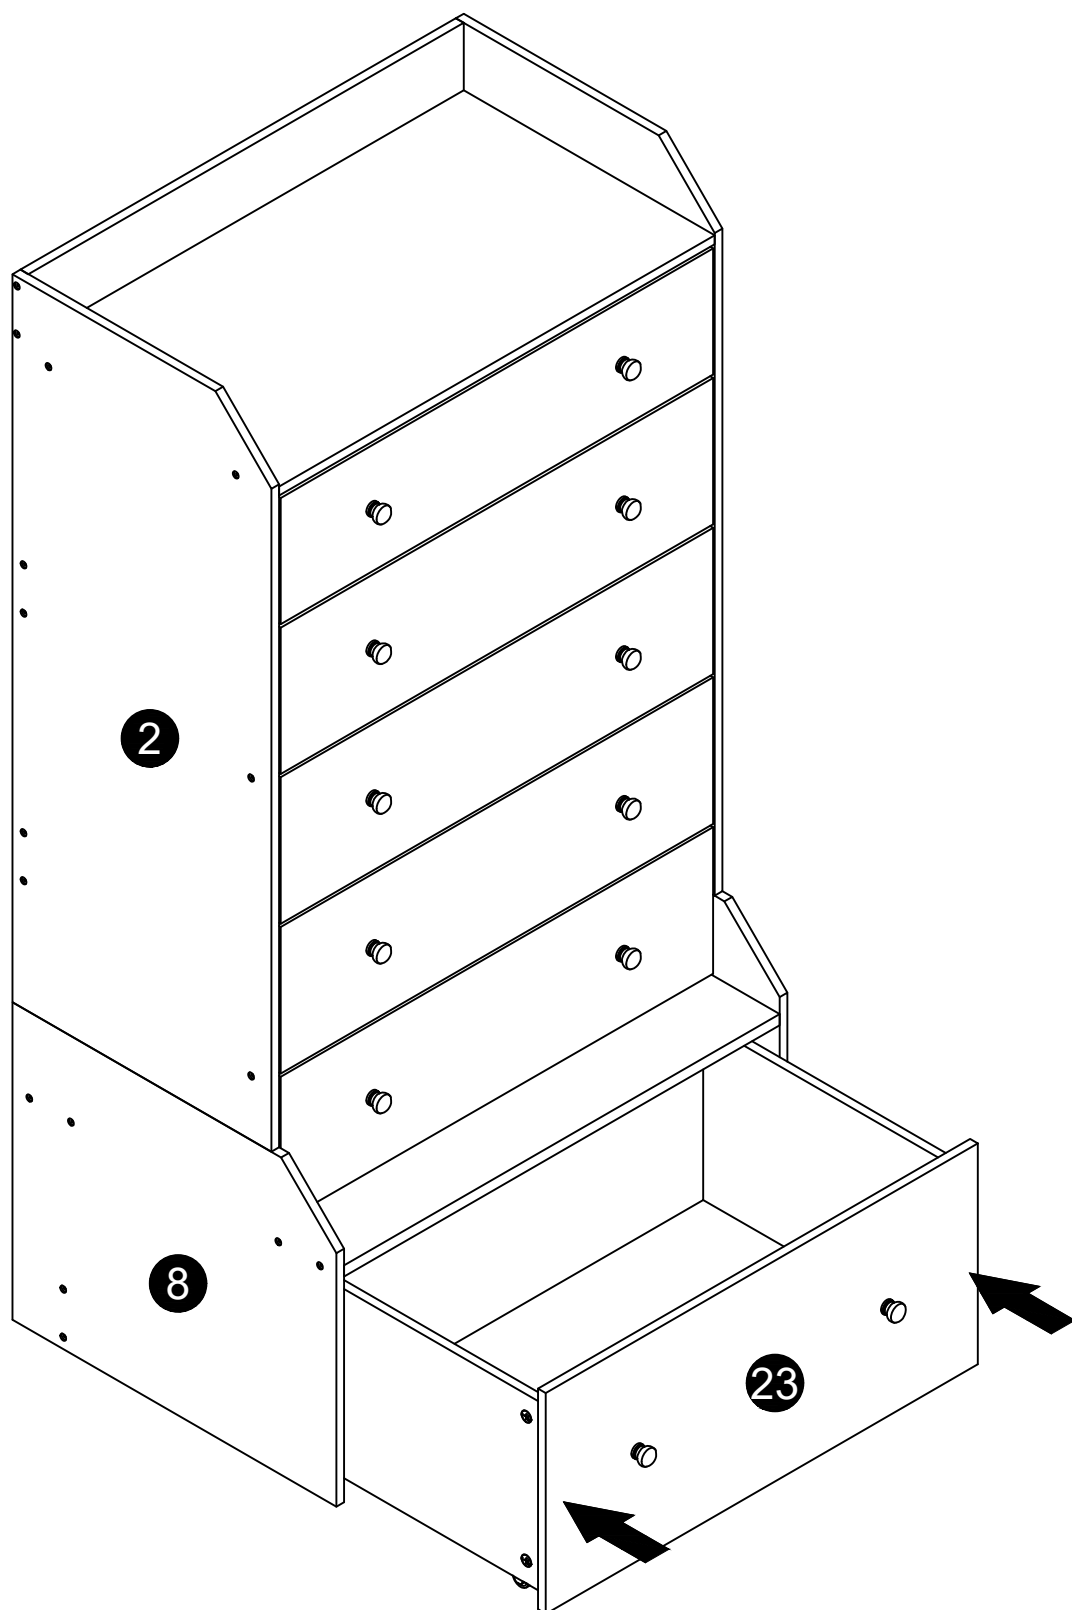


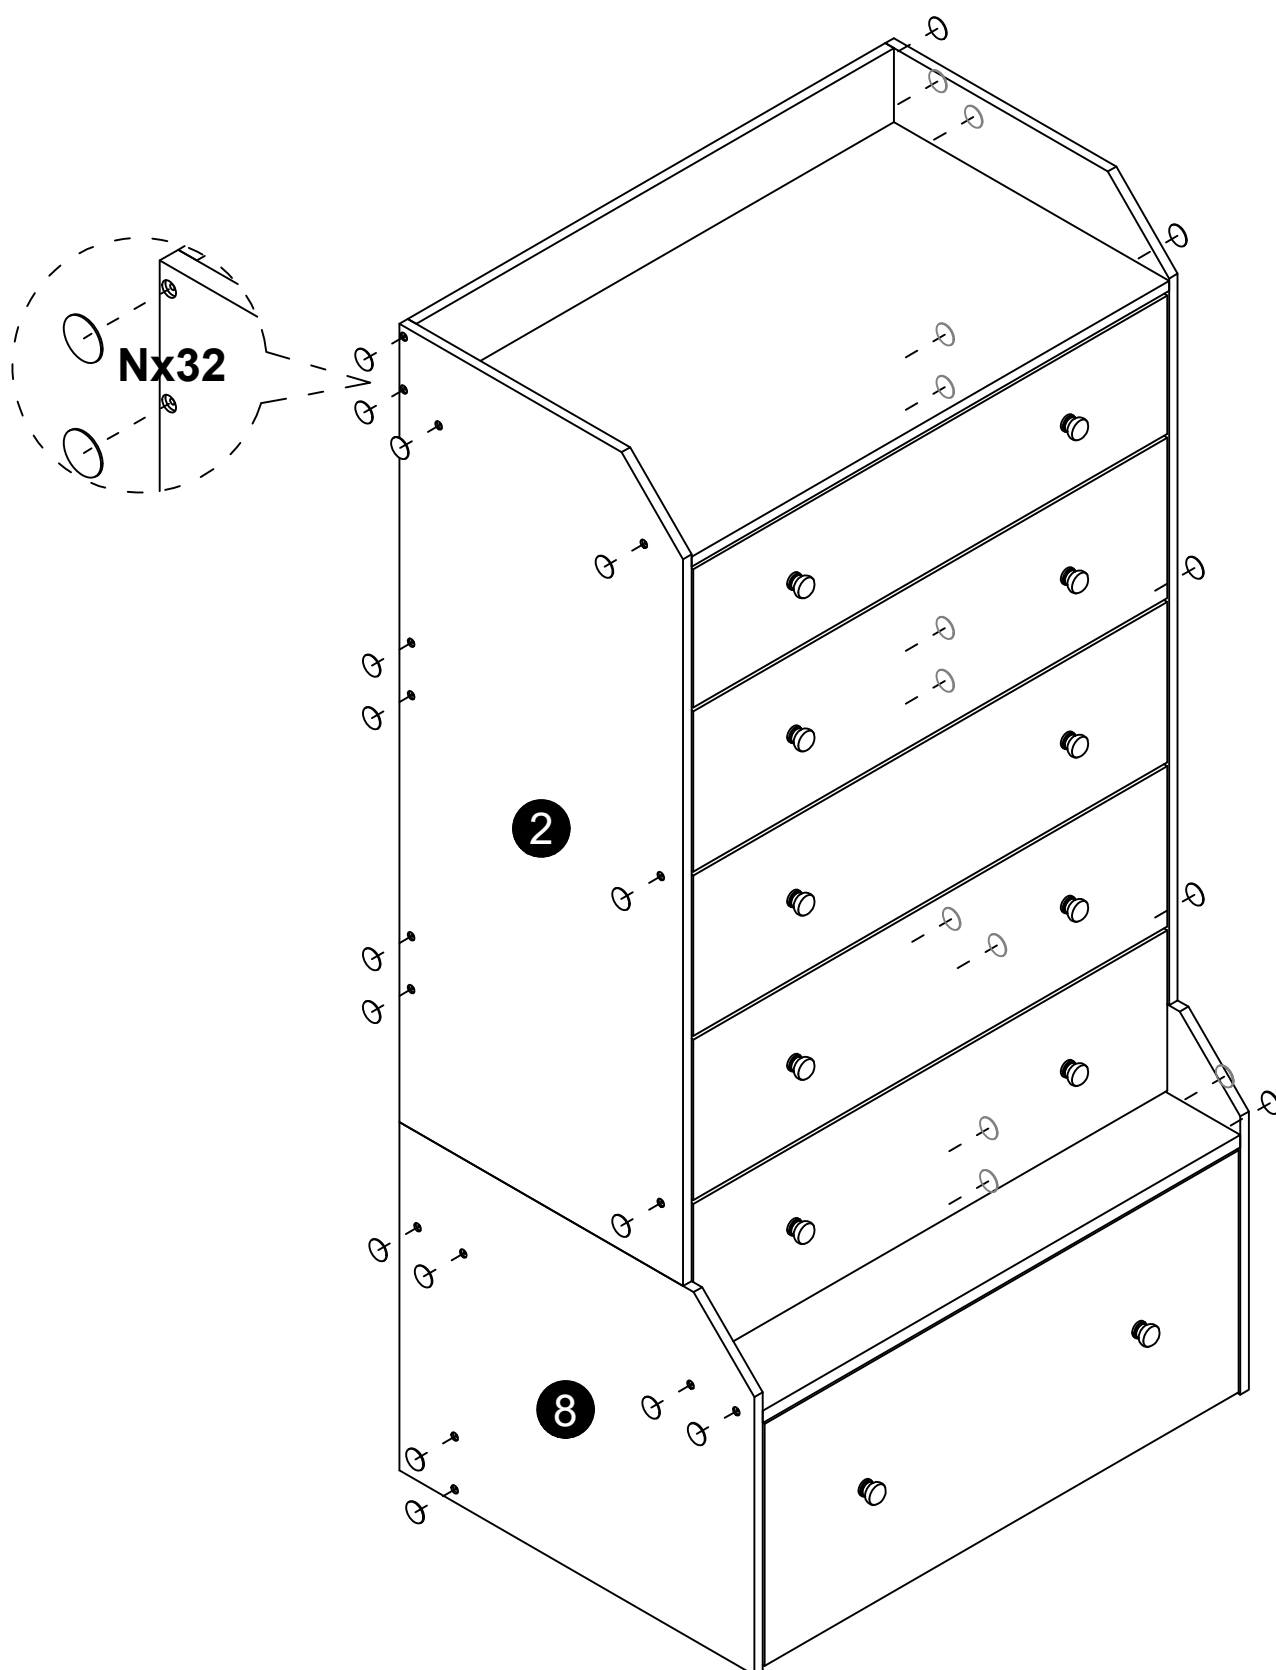

Step I: Mark the drilling positions on the wall with a pen.

WALL

I x2

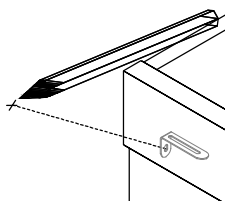

Step II: Drill holes using an electric drill for 6x30mm.

WALL


drilling hole
Ø6x30mm

II x2



Step III: Use a hammer to drive screw into the wall.

WALL

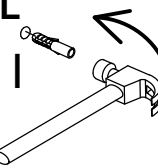

III x2

D		x2
I		x2

Finally, pass the matching screws through the anti-tipping iron sheet, tighten them and fix them on the wall.

