
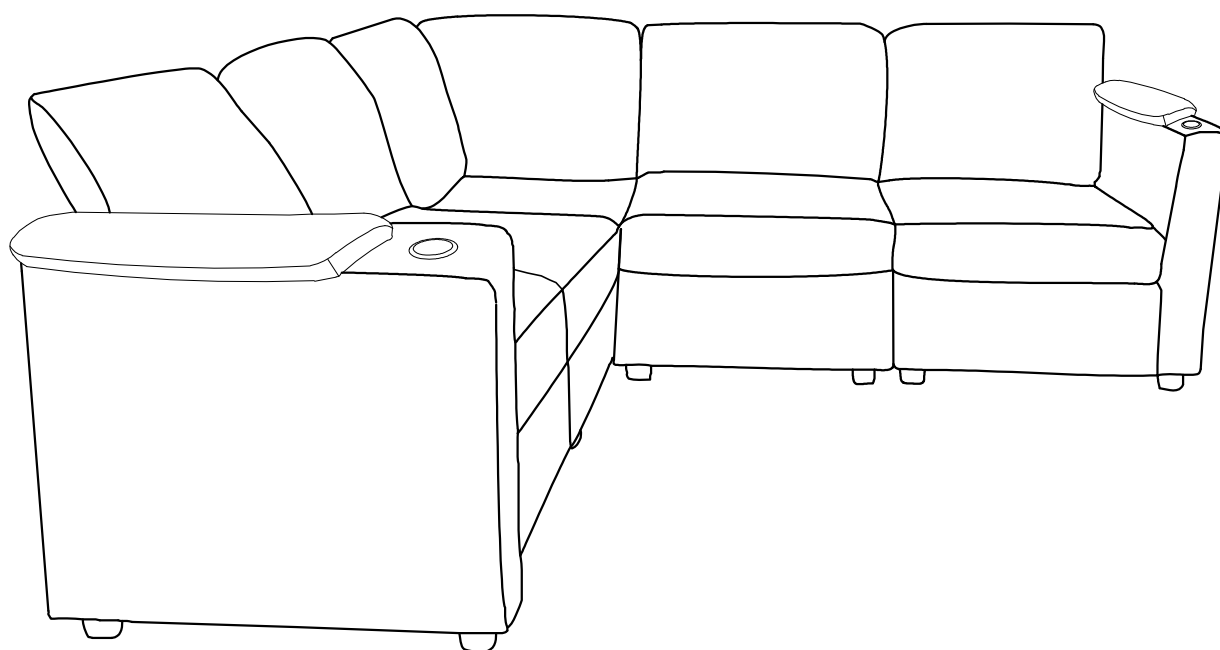
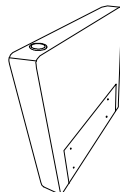
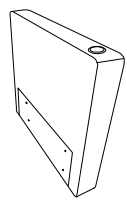
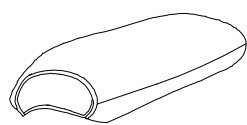
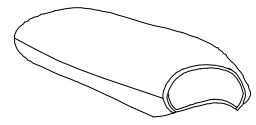



Assembly instructions









Modular Sofa



BOX A PARTS LIST


AL  1PC	AR  1PC	BL 	BR 	
C  4PCS	D  8PCS	E  8PCS	F  M8*55MM 8PCS	G  1PC

BOX B PARTS LIST

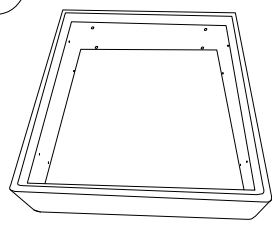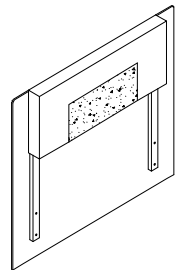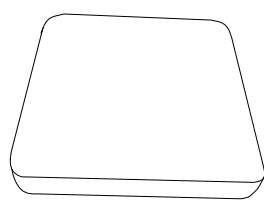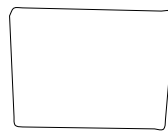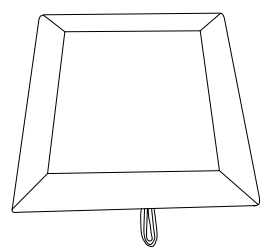H  1PC	I  1PC	C  4PCS	D  8PCS
E  14PCS	J  4PCS	F  M8*40MM 4PCS	G  1PC
K  M8*70MM 4PCS	L  1PC	M  1PC	N  1PC 2/8


BOX D PARTS LIST

O

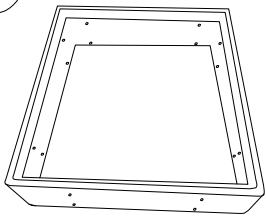

1PC

Q

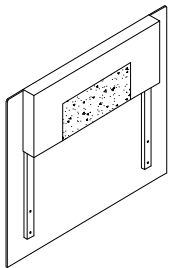


2PCS

C



4PCS

D



8PCS

E




20PCS

J



4PCS

F




M8*40MM
8PCS

G




1PC

K



M8*70MM
4PCS

P

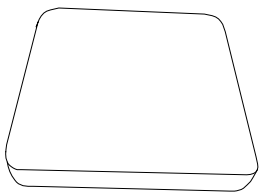


1PC

M




1PC

S

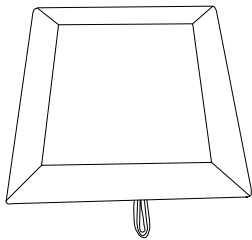

1PC

R


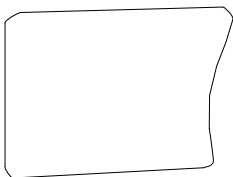


1PC

ASSEMBLY STEPS


STEP1 Unzip the zipper and remove the accessories placed at the bottom of the left armrest AL.

AL		1
----	---	---

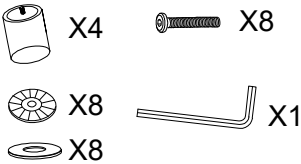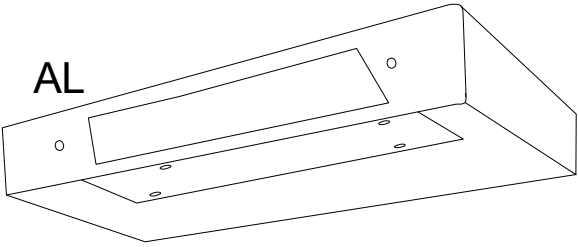


STEP2 Screw sofa leg C with plastic washer D into the armrest (AL/AR).

AL		1
AR		1
C		4
D		8

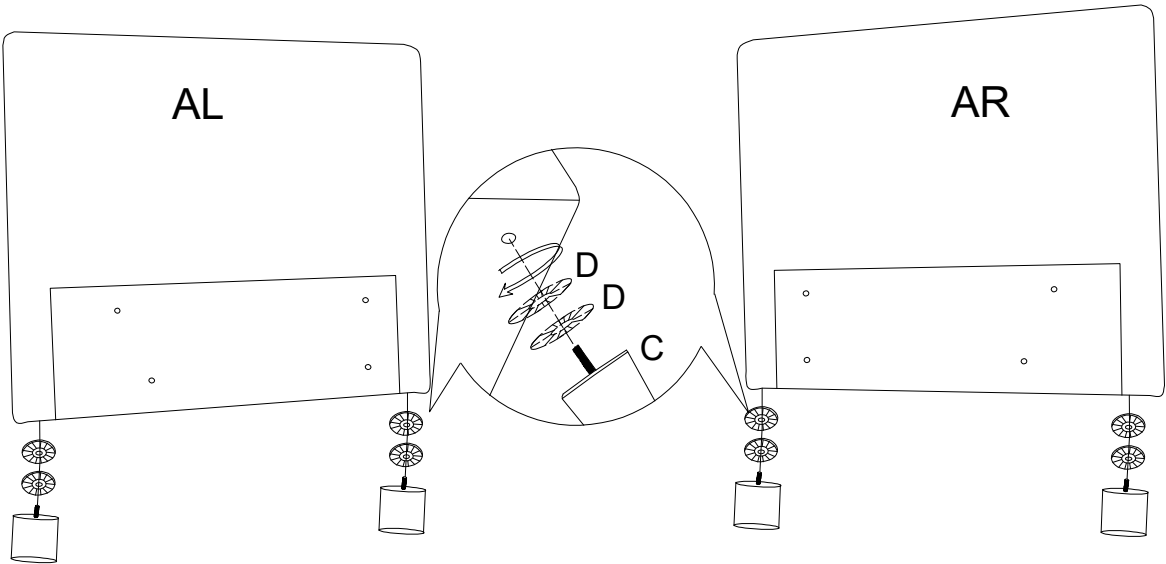


STEP3 Screw the sofa legs C with plastic washers D into the seat frame H.

H		1
C		4
D		8

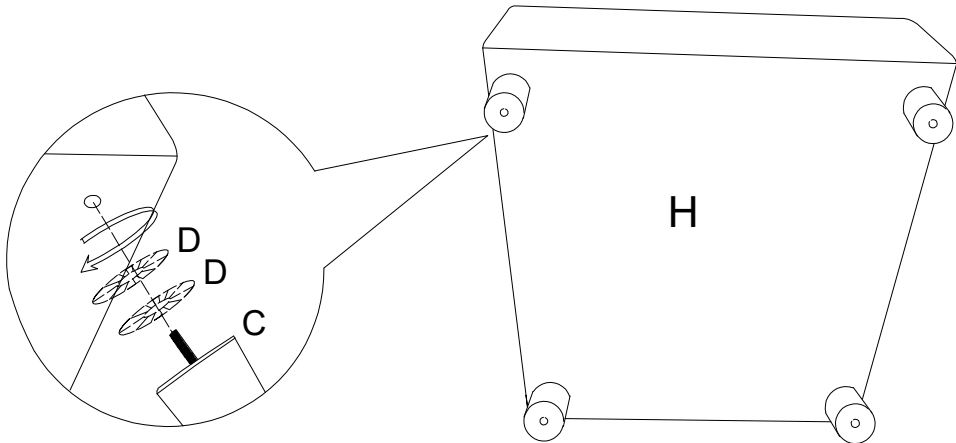


STEP4 Using an M6 hexagonal wrench, attach the seat frame H to the back plate I with screws F and washers E.

H		1
I		1
F		4
E		6
G		1

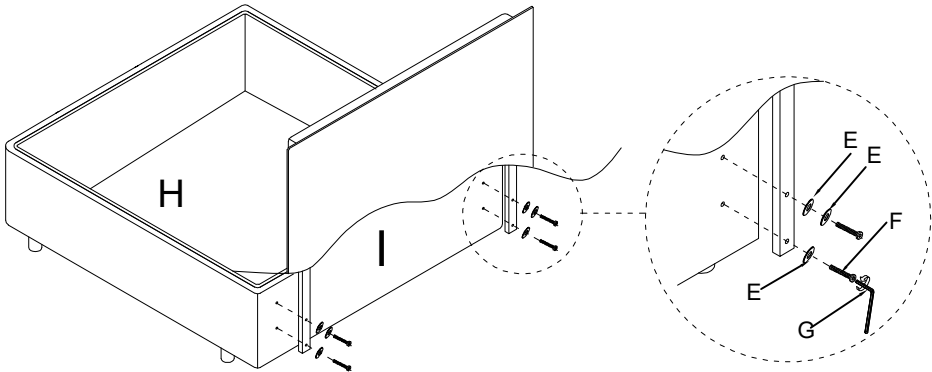


STEP5 Using an M6 Allen key, connect the armrest (AL/AR) to the center position with screw F and washer E.

AL		1
AR		1
H		2
I		2
F		8
E		12
G		1

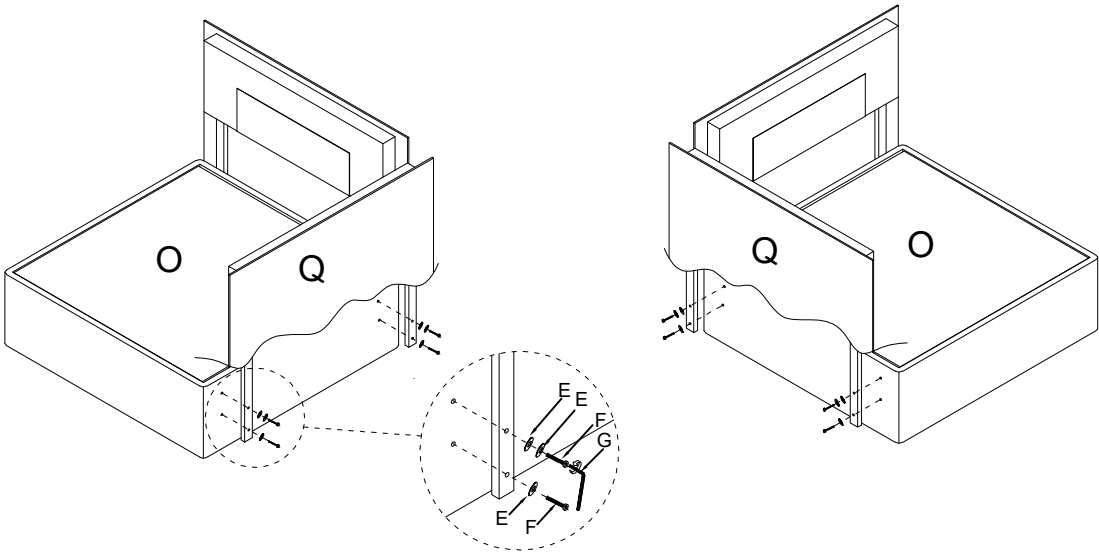

STEP6 Using an M6 Allen key, connect the armrest (AL/AR) to the center position with screw F and washer E.


AL		1
AR		1
H		2
I		2
F		8
E		8
G		1

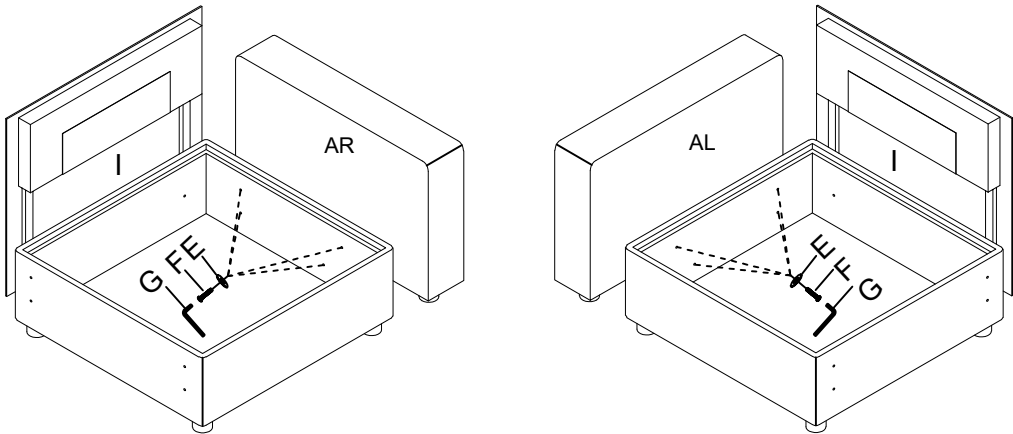

STEP7

The two sofa seats, screw K and spacer E are locked in place using a wrench against nut J and spacer E.

J		8
K		8
E		16
G		1


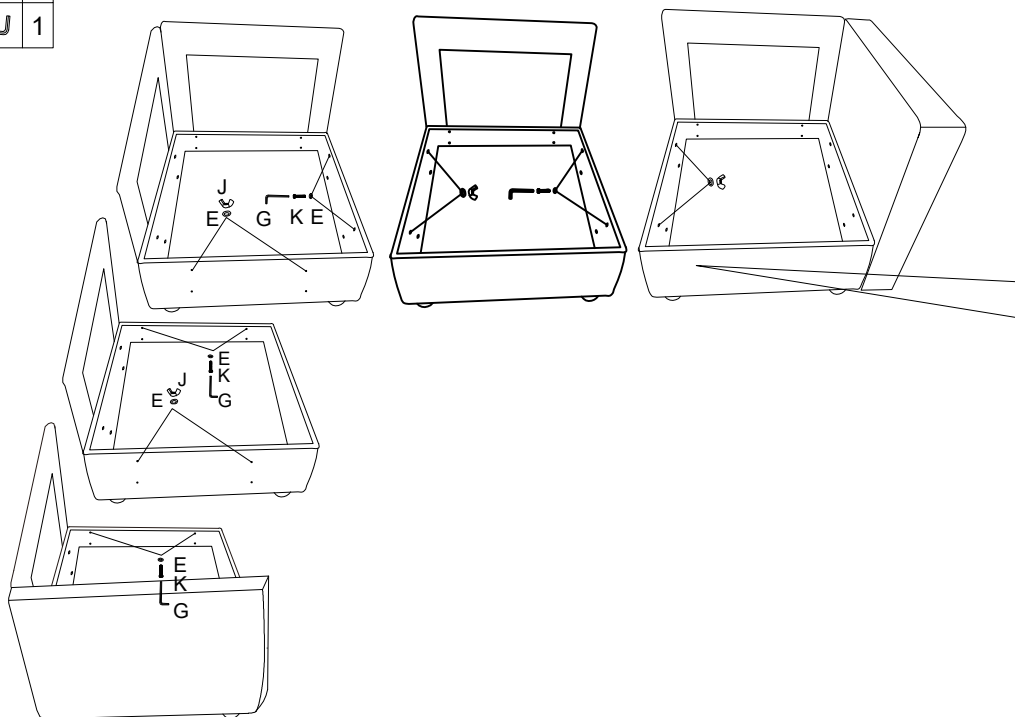


Locking two screws


STEP8

Install the armrest covers BL and BR on the corresponding armrests respectively as shown in the figure below.

BR		1
BL		1

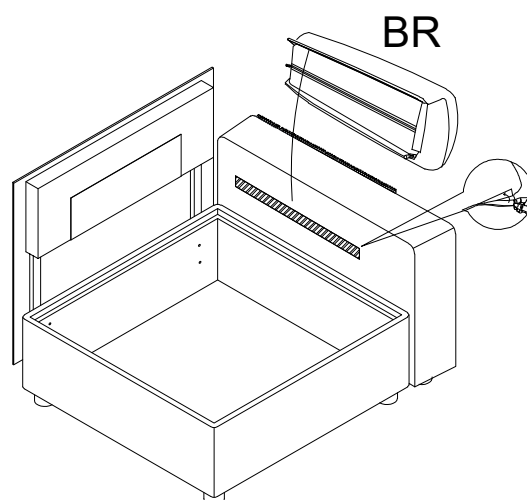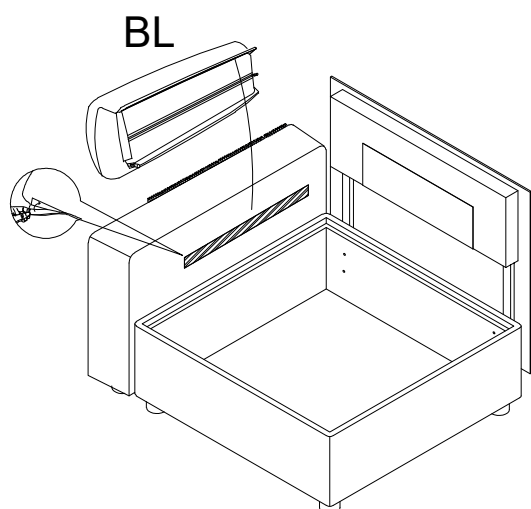


First attach the front armrest cushion to the armrest with the zipper.



Then attach the hook-and-loop fastener of the front armrest cushion to the armrest.


STEP9 Seat plate N is placed on the seat frame in order.

N		3
S		1


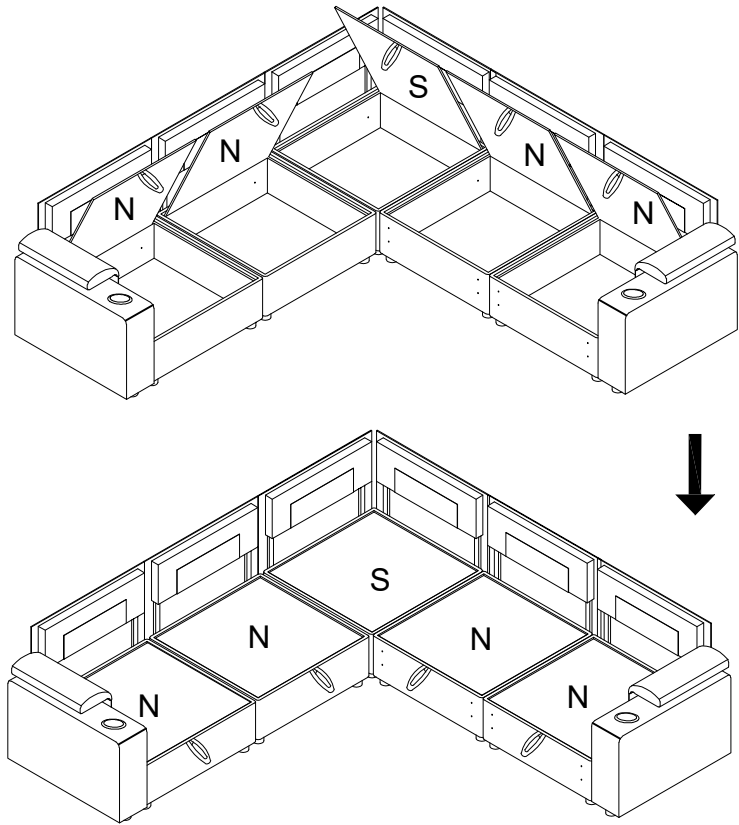


STEP10 Please unpack the item and steam it using a garment steamer


L/P		3
M/R		4

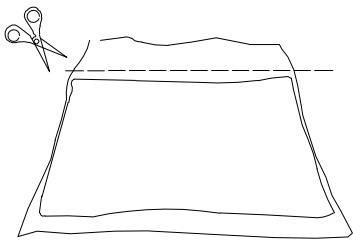

M/R

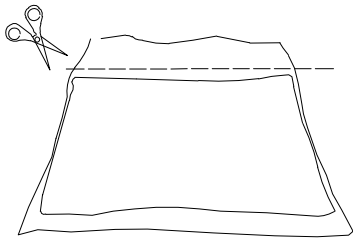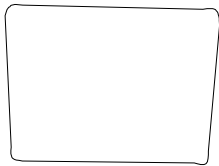

L/P

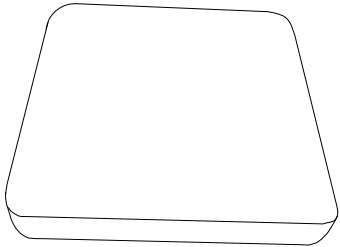

STEP11 Place the cushion on the sofa as shown and if the fabric is wrinkled, wait 72 hours for the cushion to fully spring back.

L/R		3
M/R		4

