


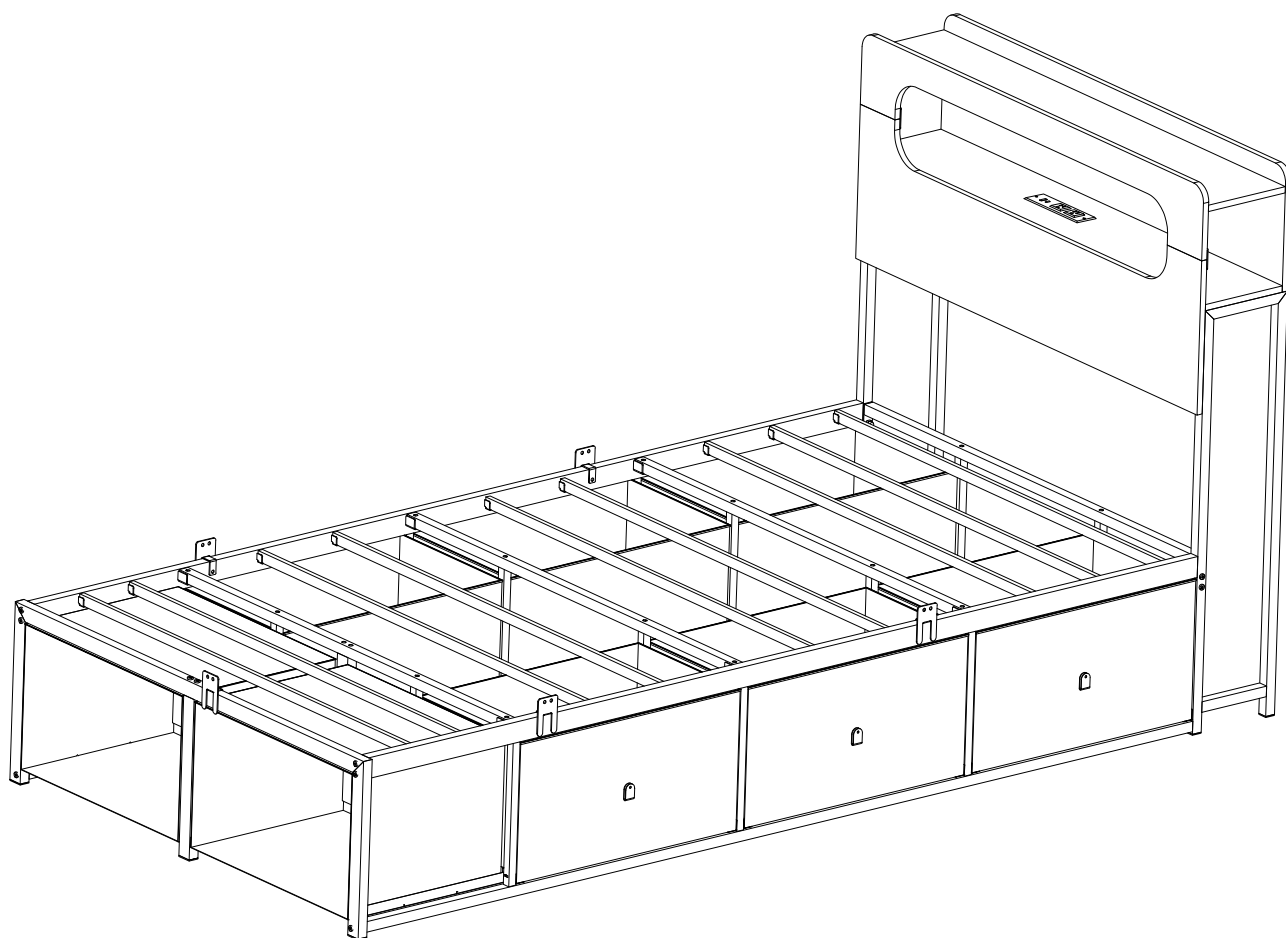


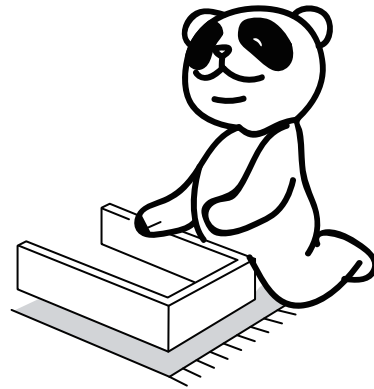



DJ504546

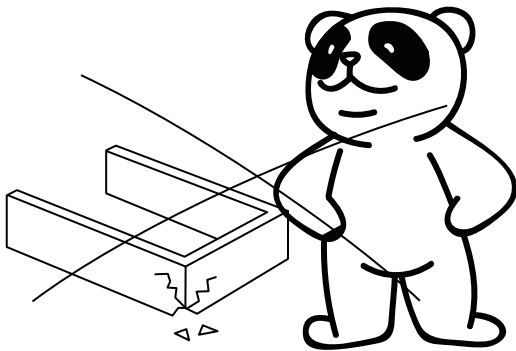



Version: 1.1

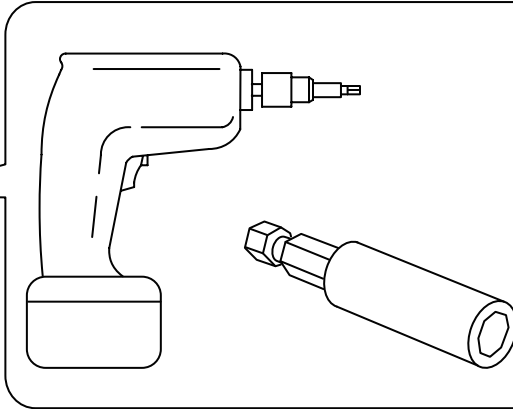

Violent installation is prohibited

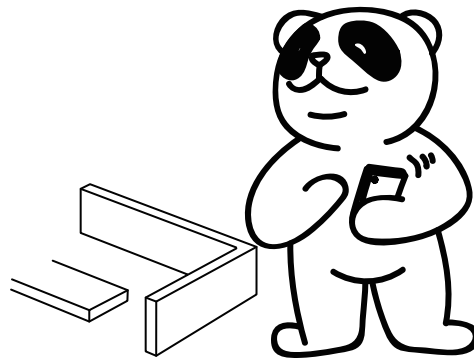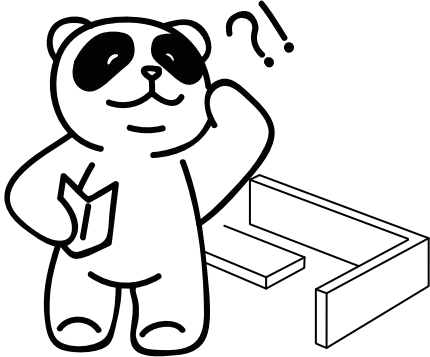


Please call if you need help

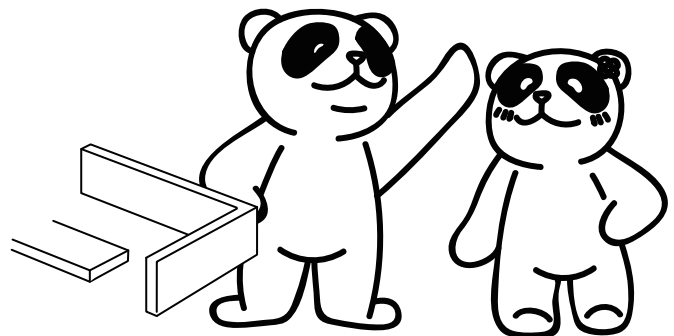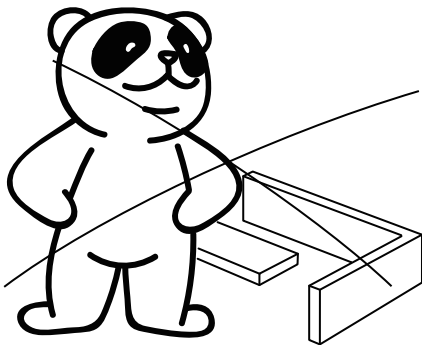


Multi-person cooperation is recommended

Assembly Instruction

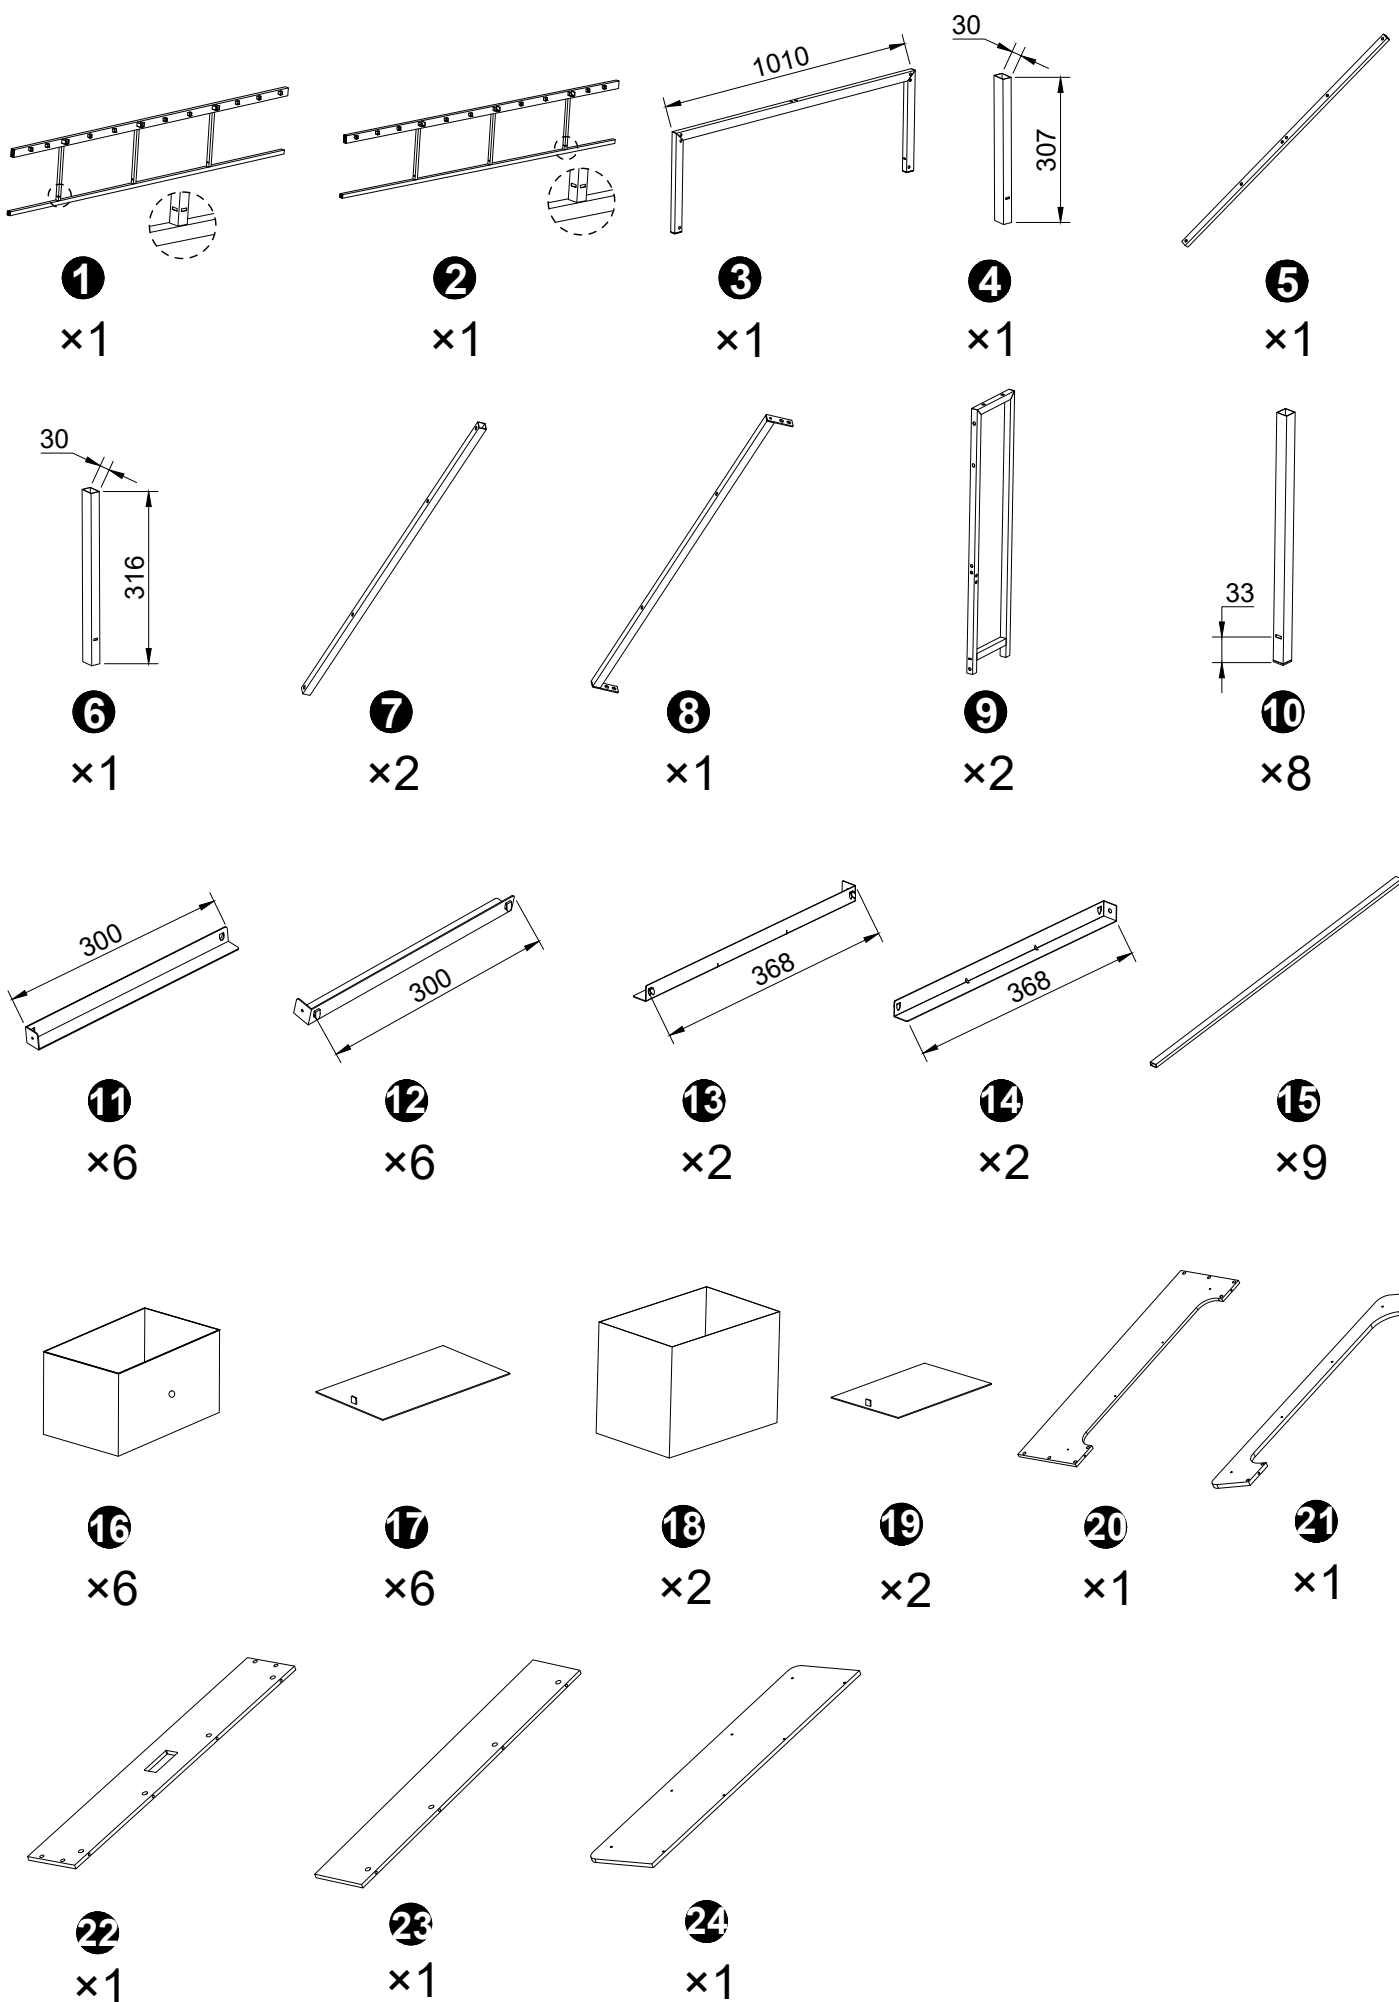


Assembly Instruction




A

M6X45
x2



B

M6X28
x26+2



C

M6X35
x14+1



D

M5X38
x8+1



E

Ø6X30
x2




F

Ø15X9
x8+1



G

M6X35
x8+1

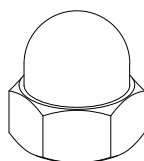


H

M6
x4




I

ST3.5X12
x2




J

100X40
x2




K

x5

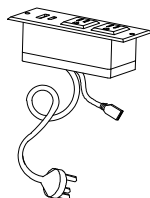


L

x1




M

x3

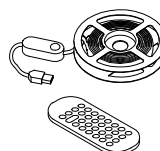

N

x1



O

x6



P


x6



M6X10

Q

x8+1



R

x6




S

x1


Note:

1. Should be assembled on flat ground to keep balance.


2. Before completing the installation, do not tighten the screws.

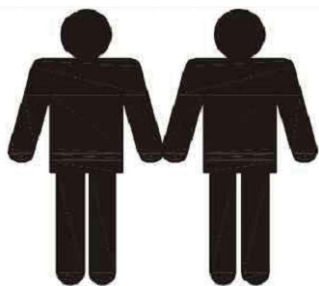

It needs at least
two people to install.

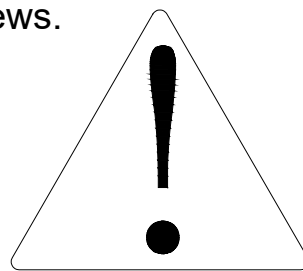


Before starting the assembly,
you must read the whole
manual and follow
the instructions

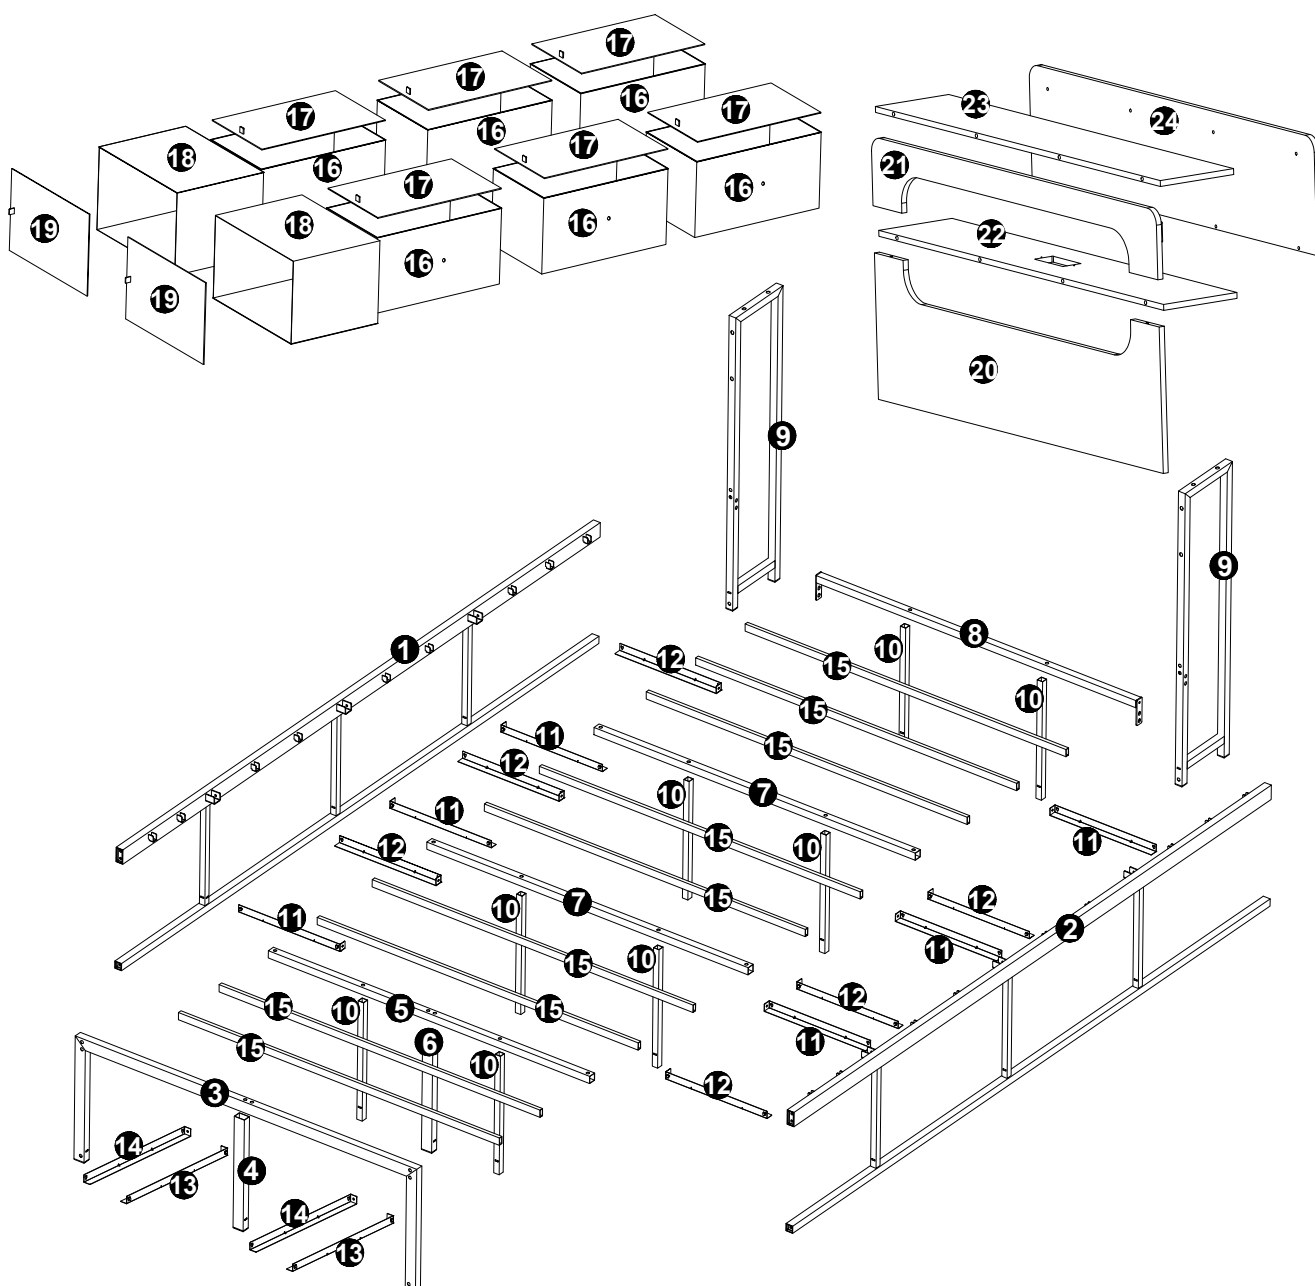

1

A M6X45


×2

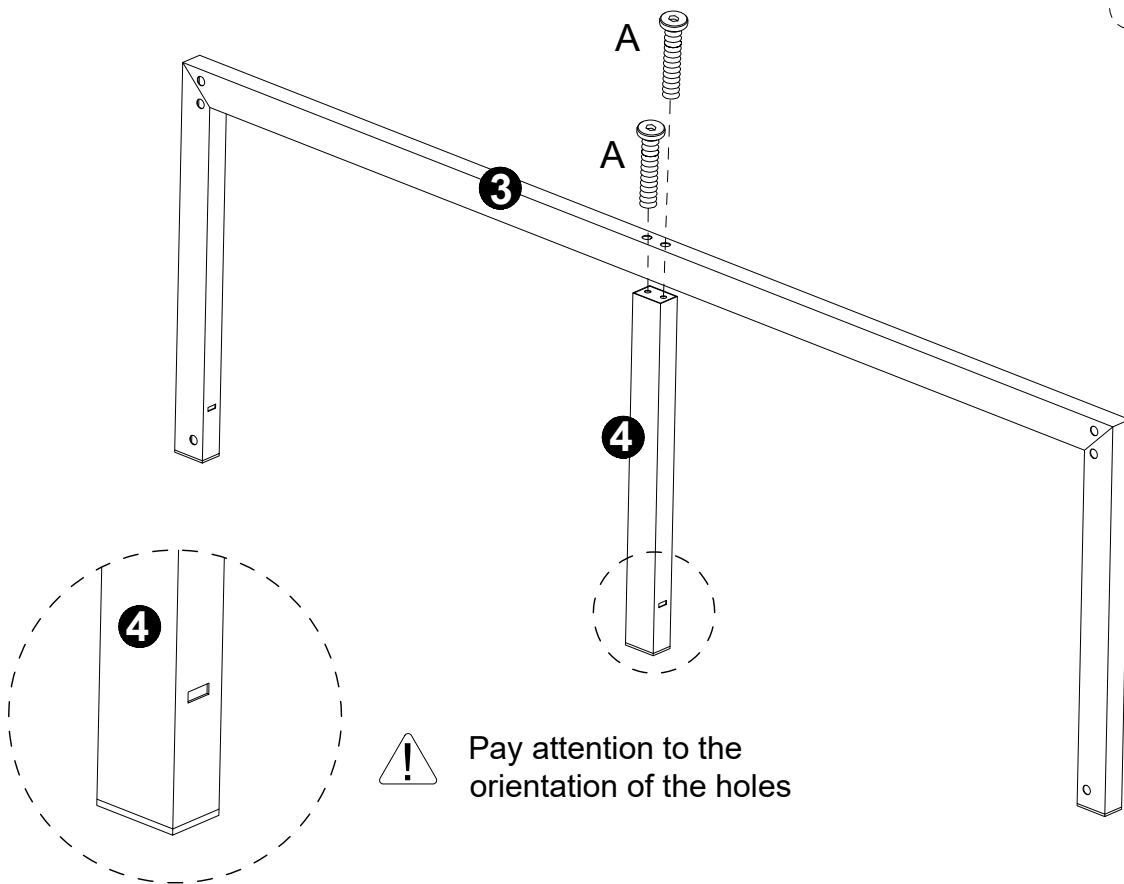


2

C M6X35


×6

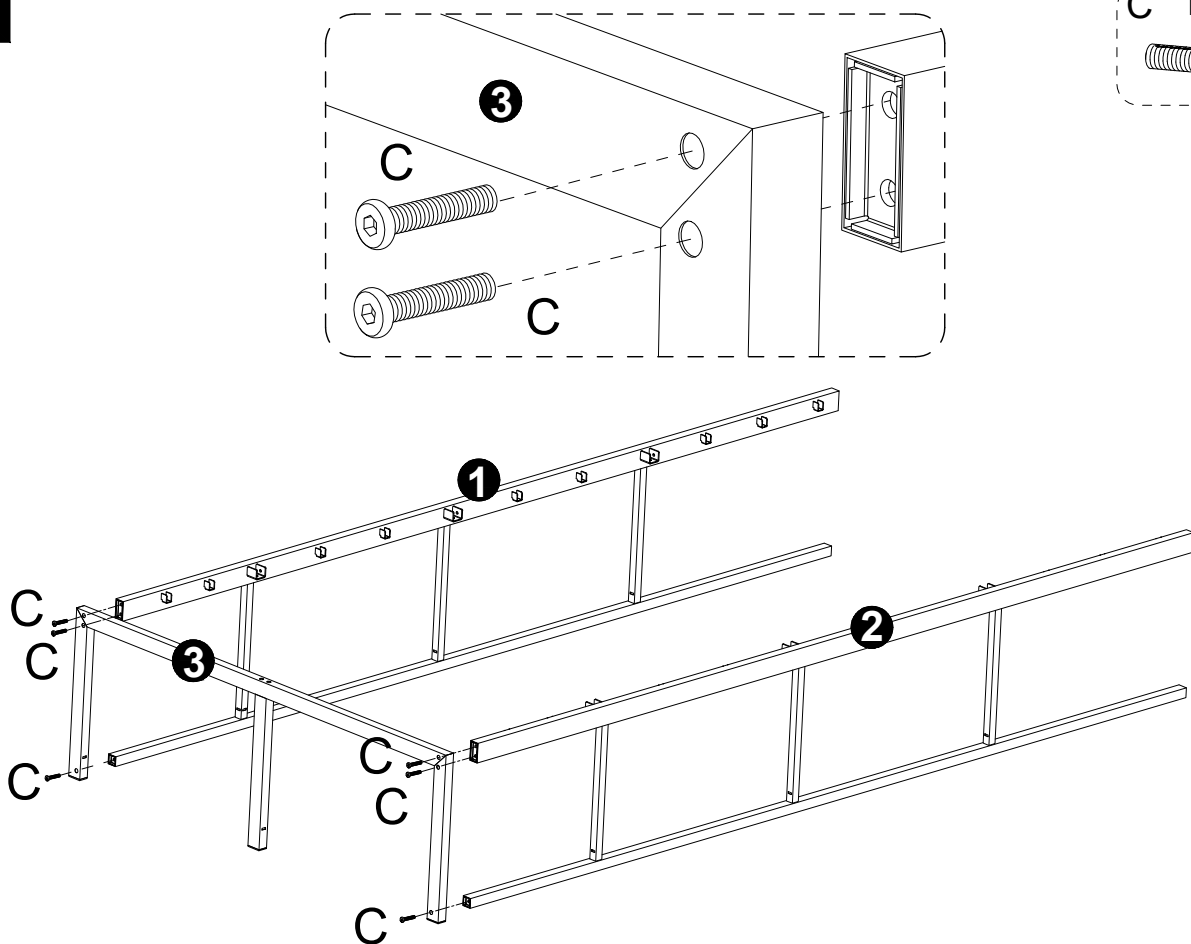


3

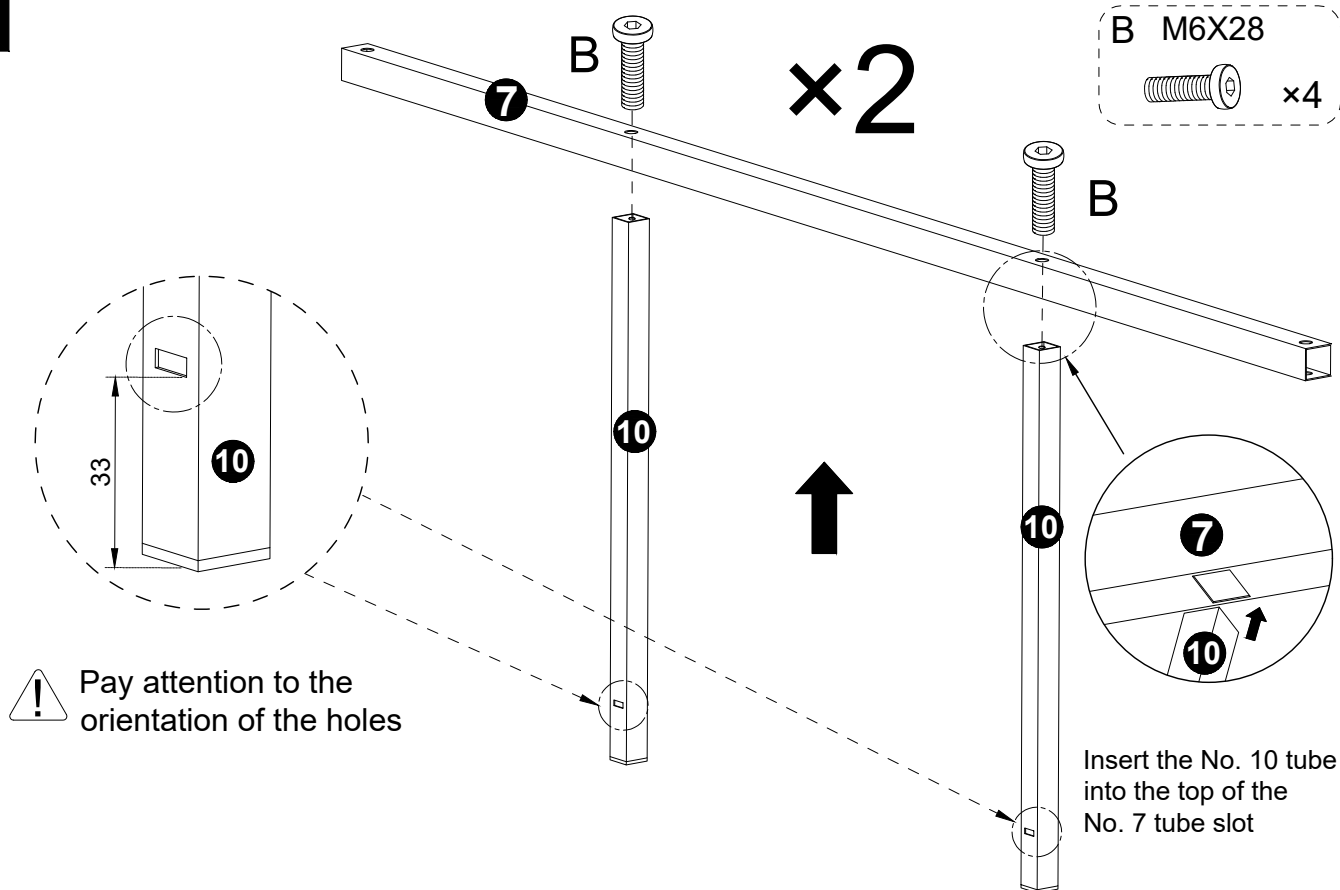


4

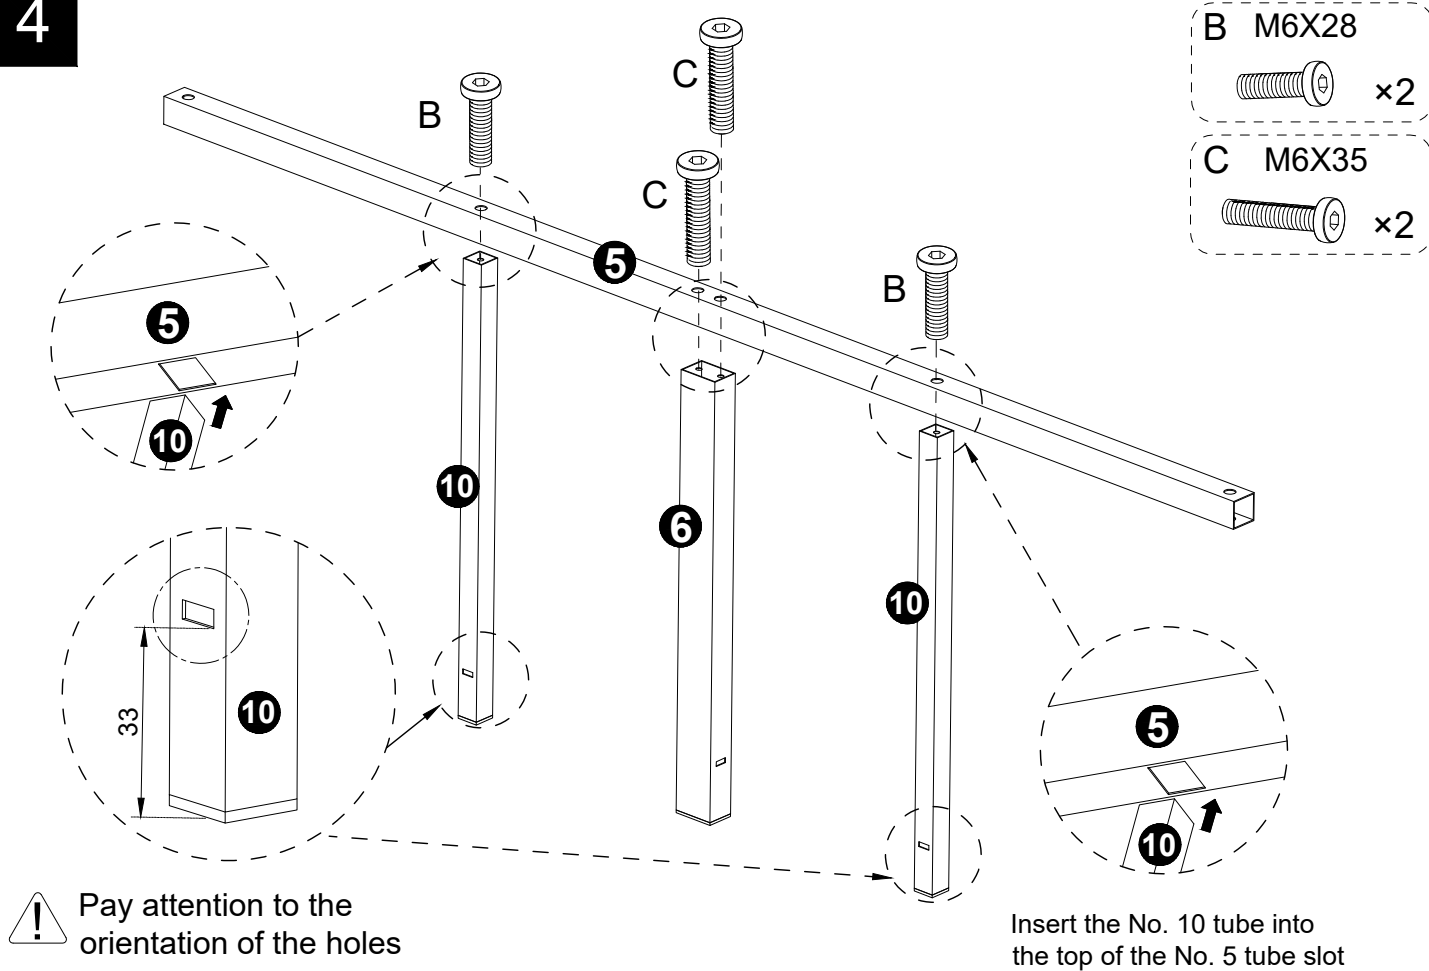



5

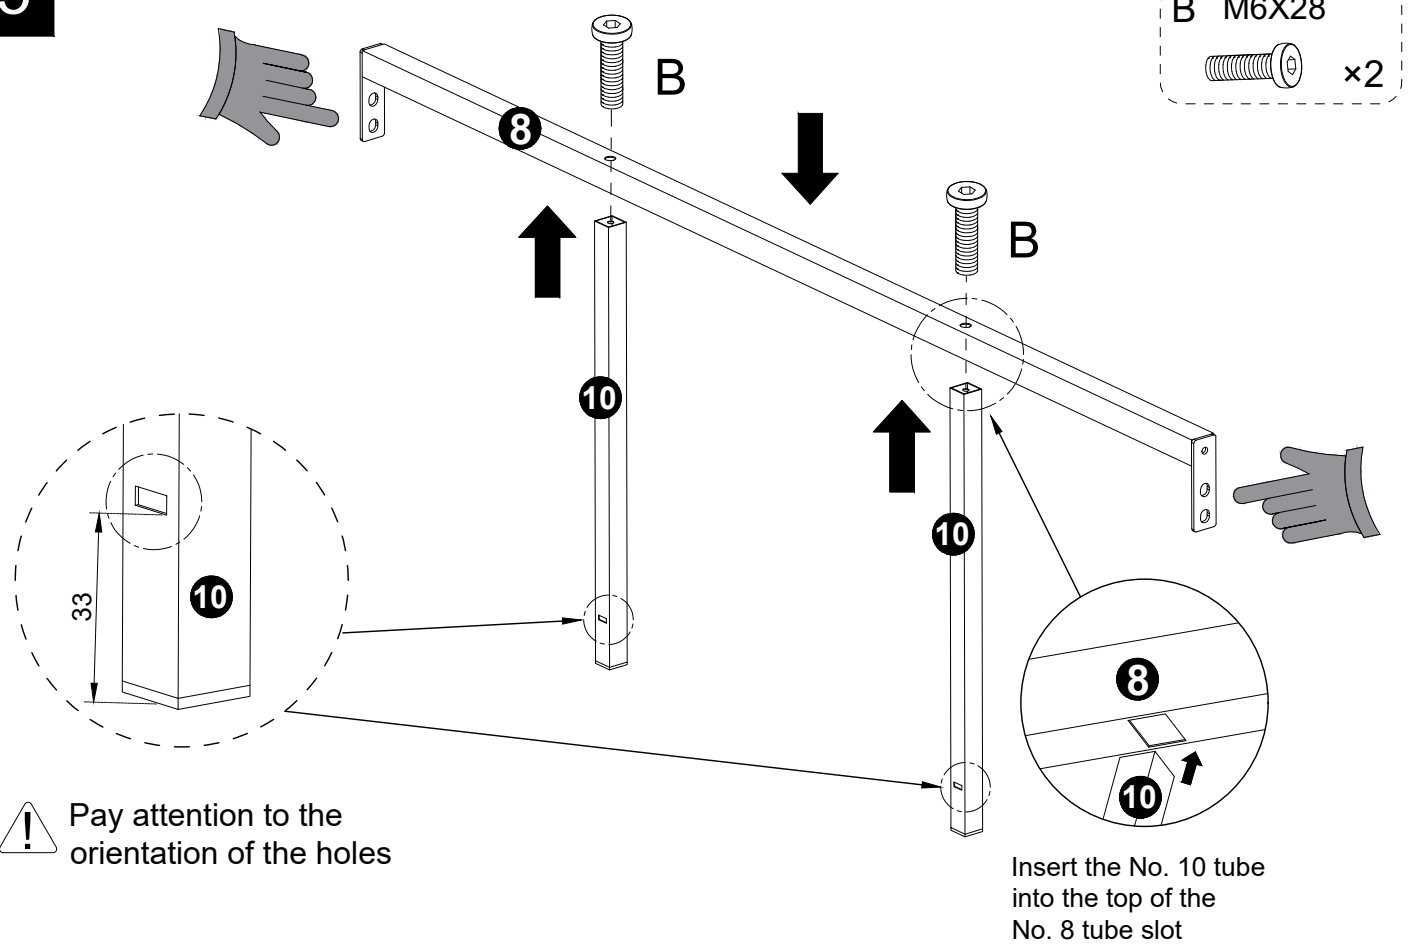




6

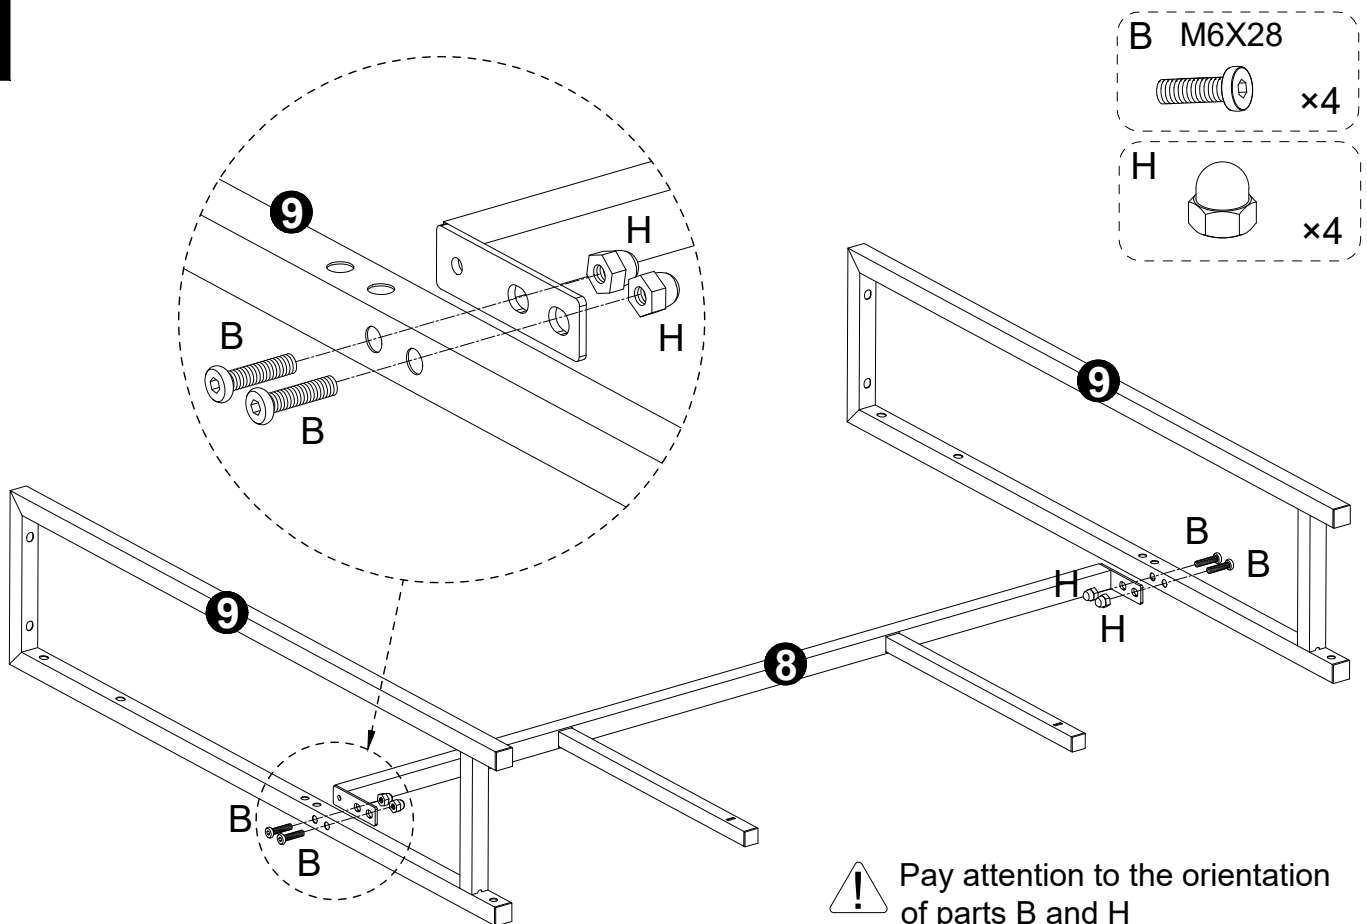


7

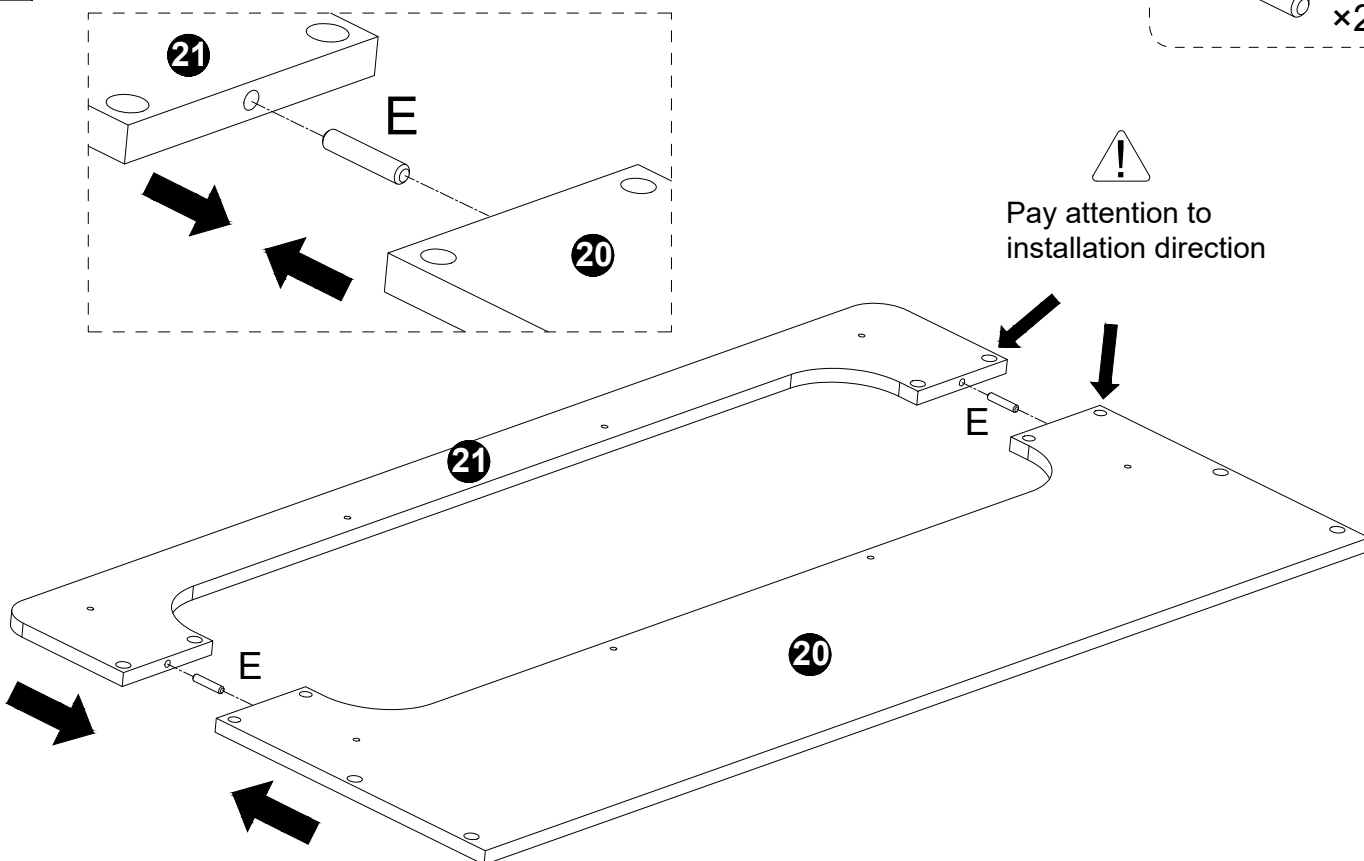


8

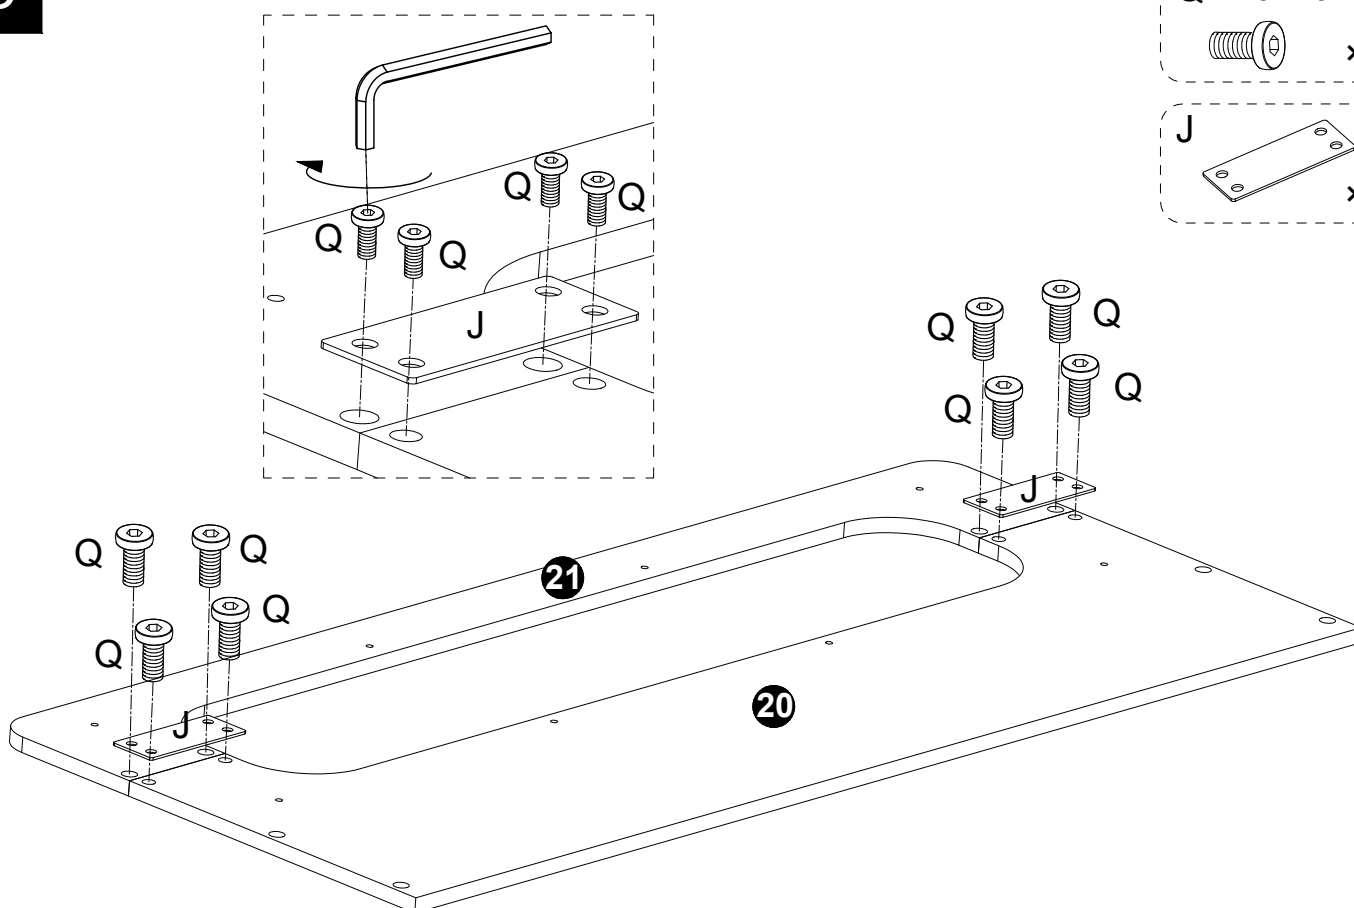


9

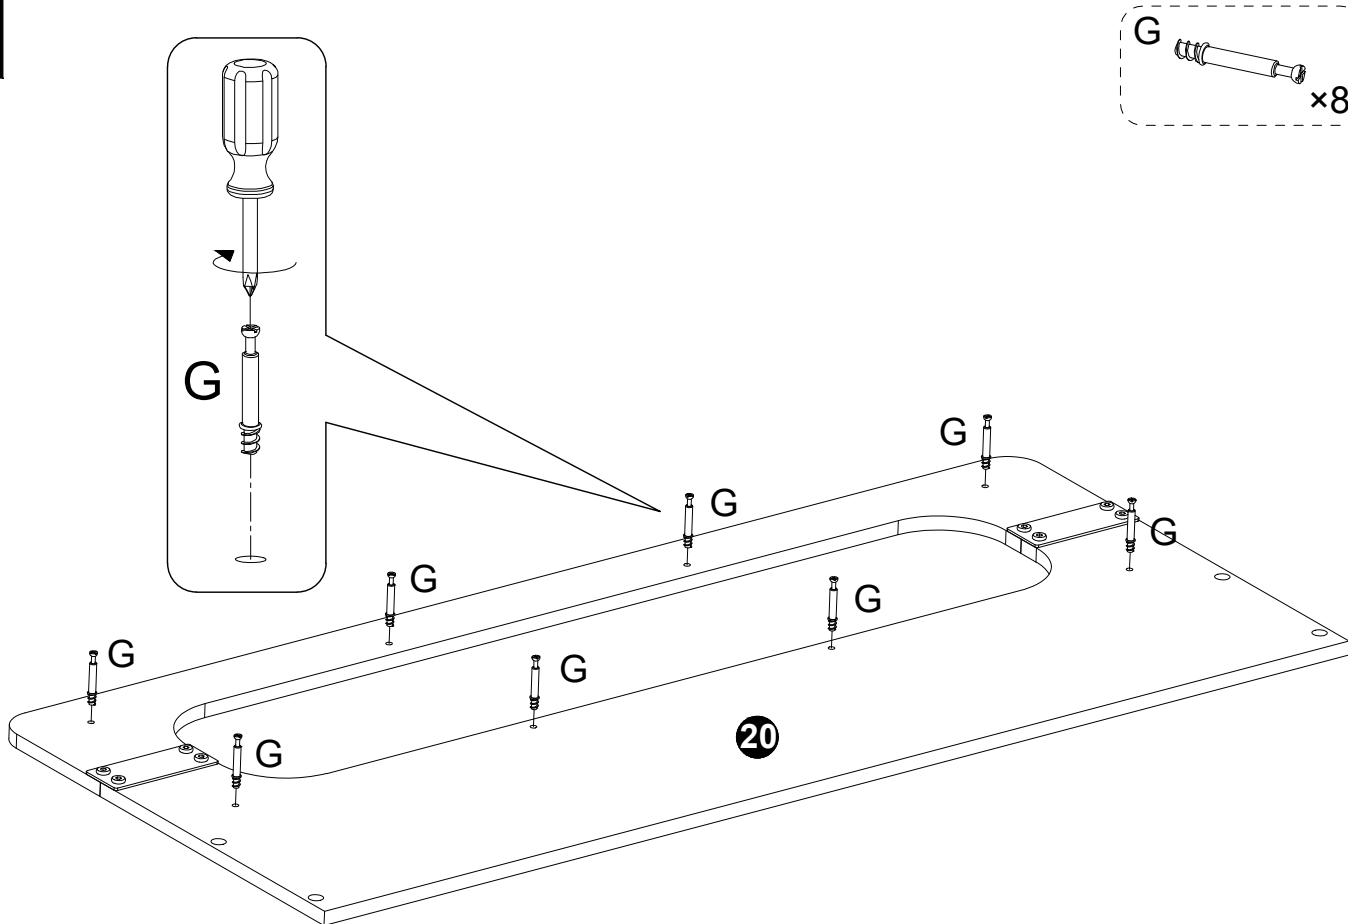



10

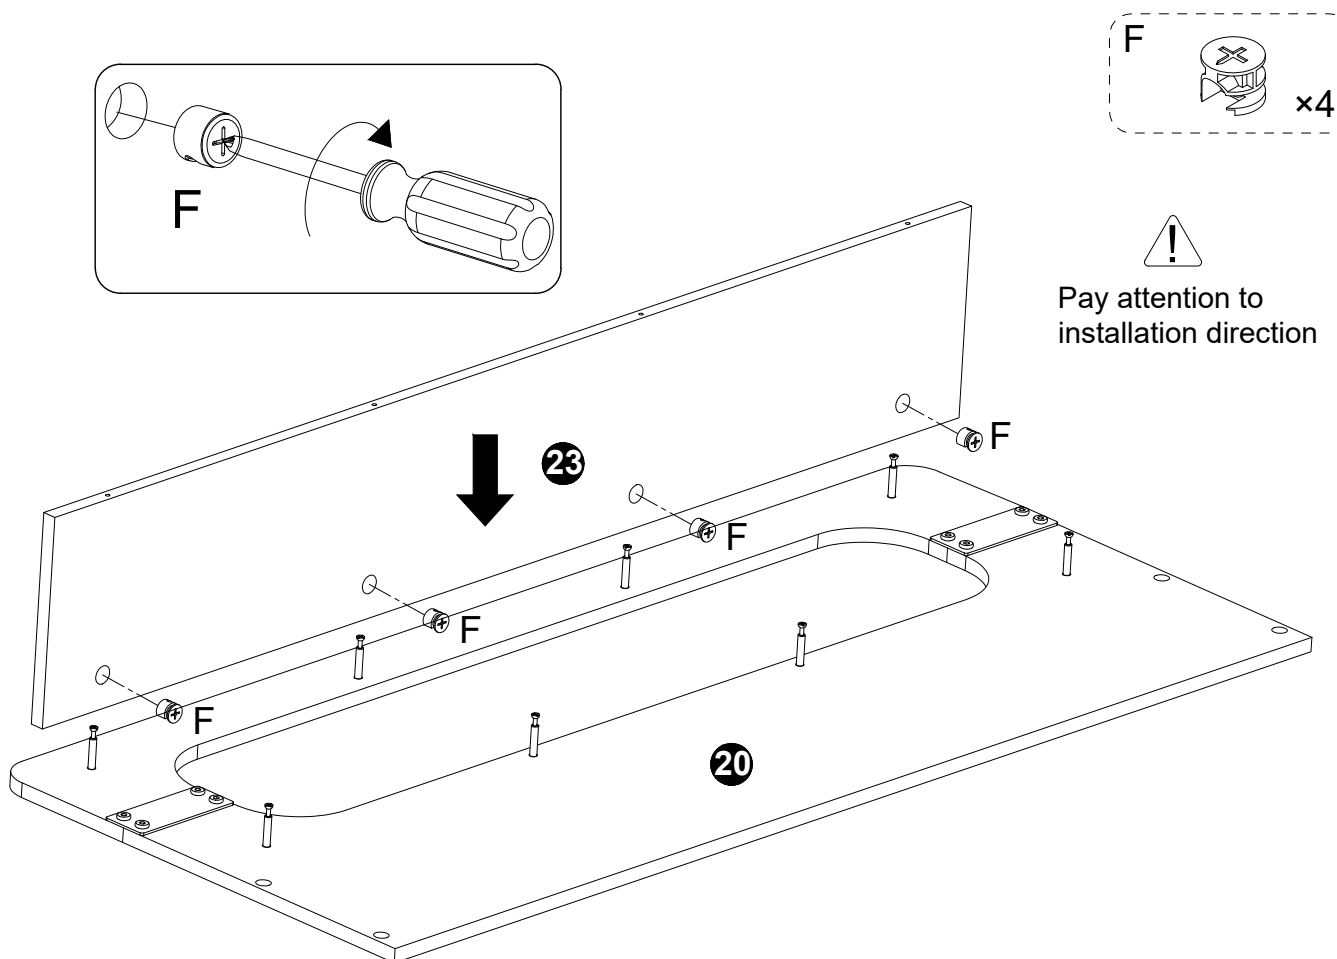

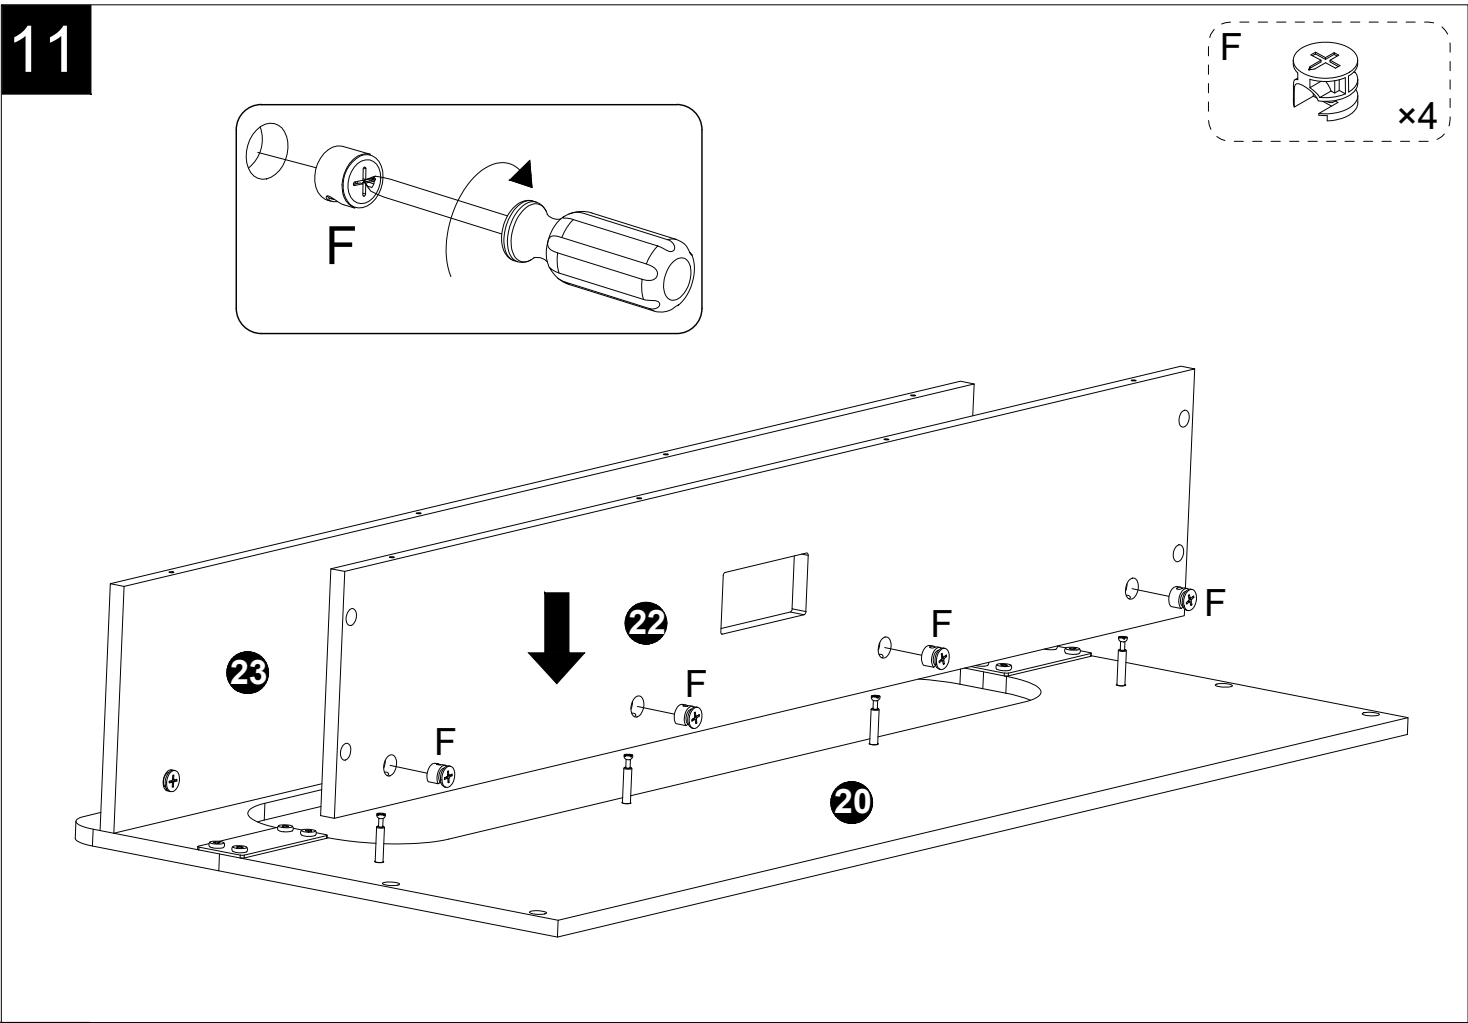


13

B M6X28
 x8

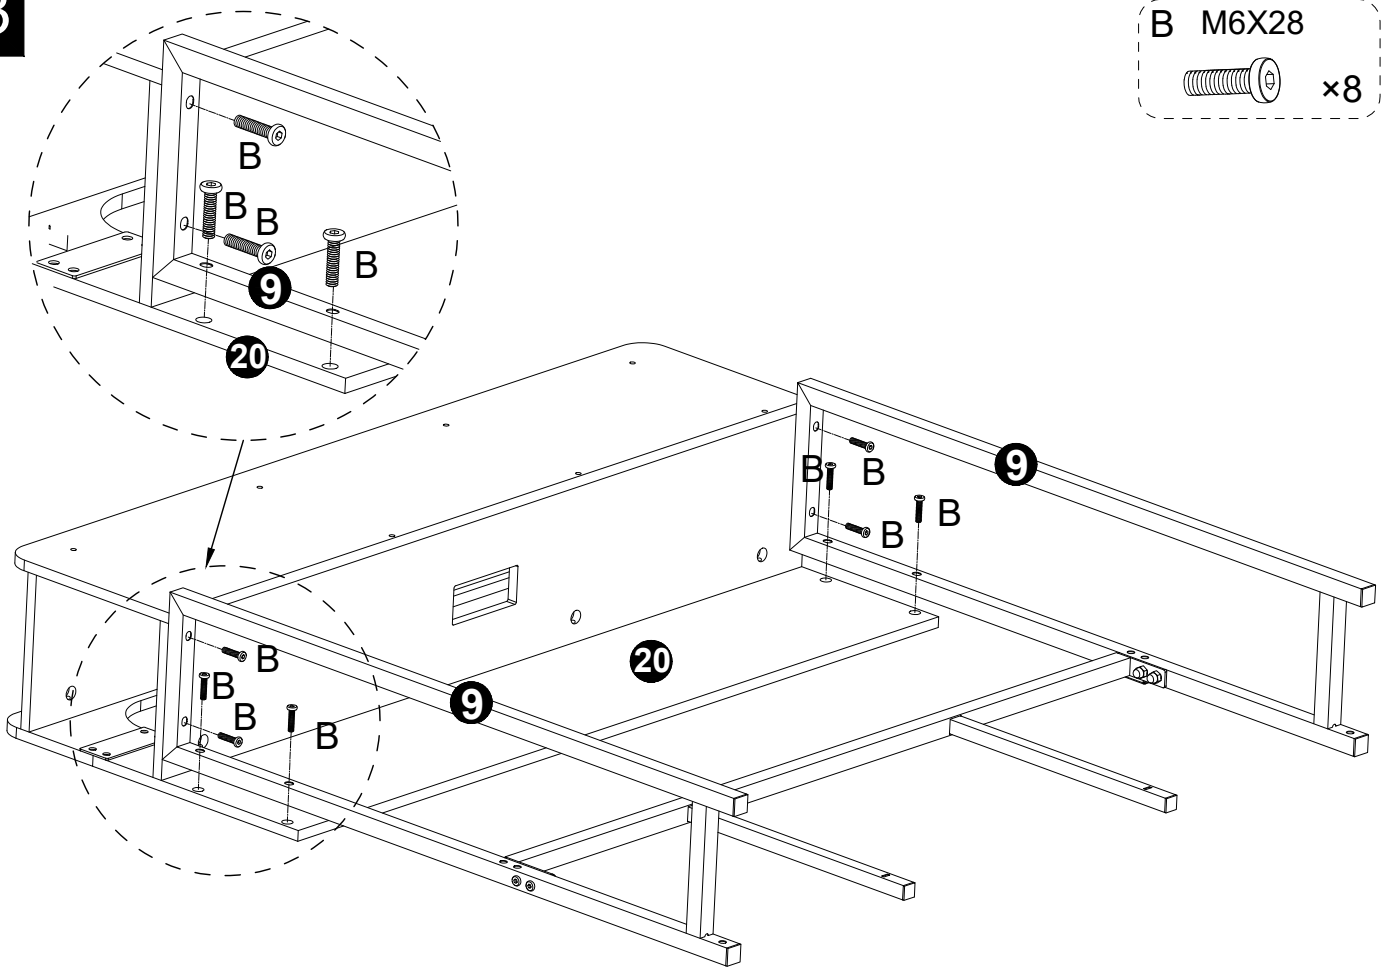


14

C M6X35
 x6


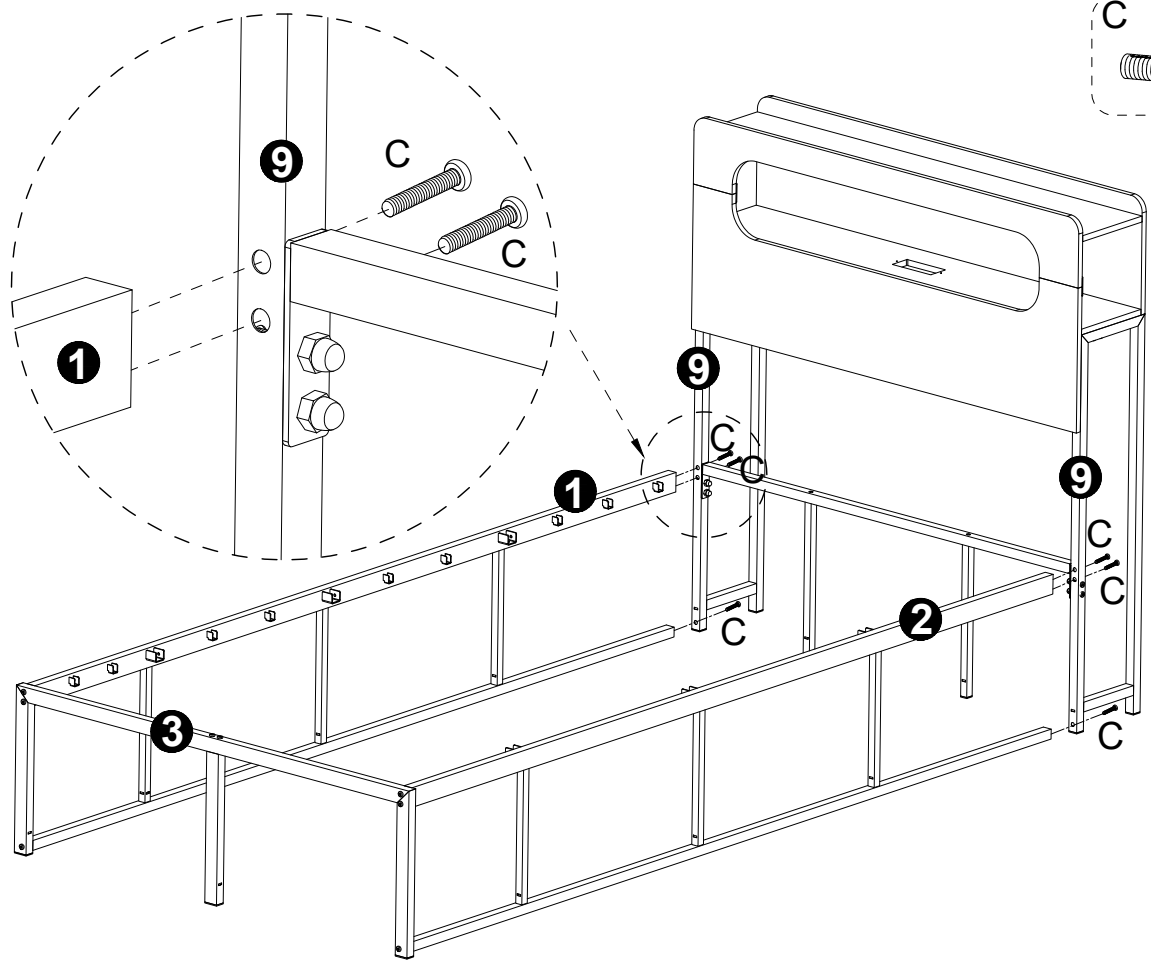


15


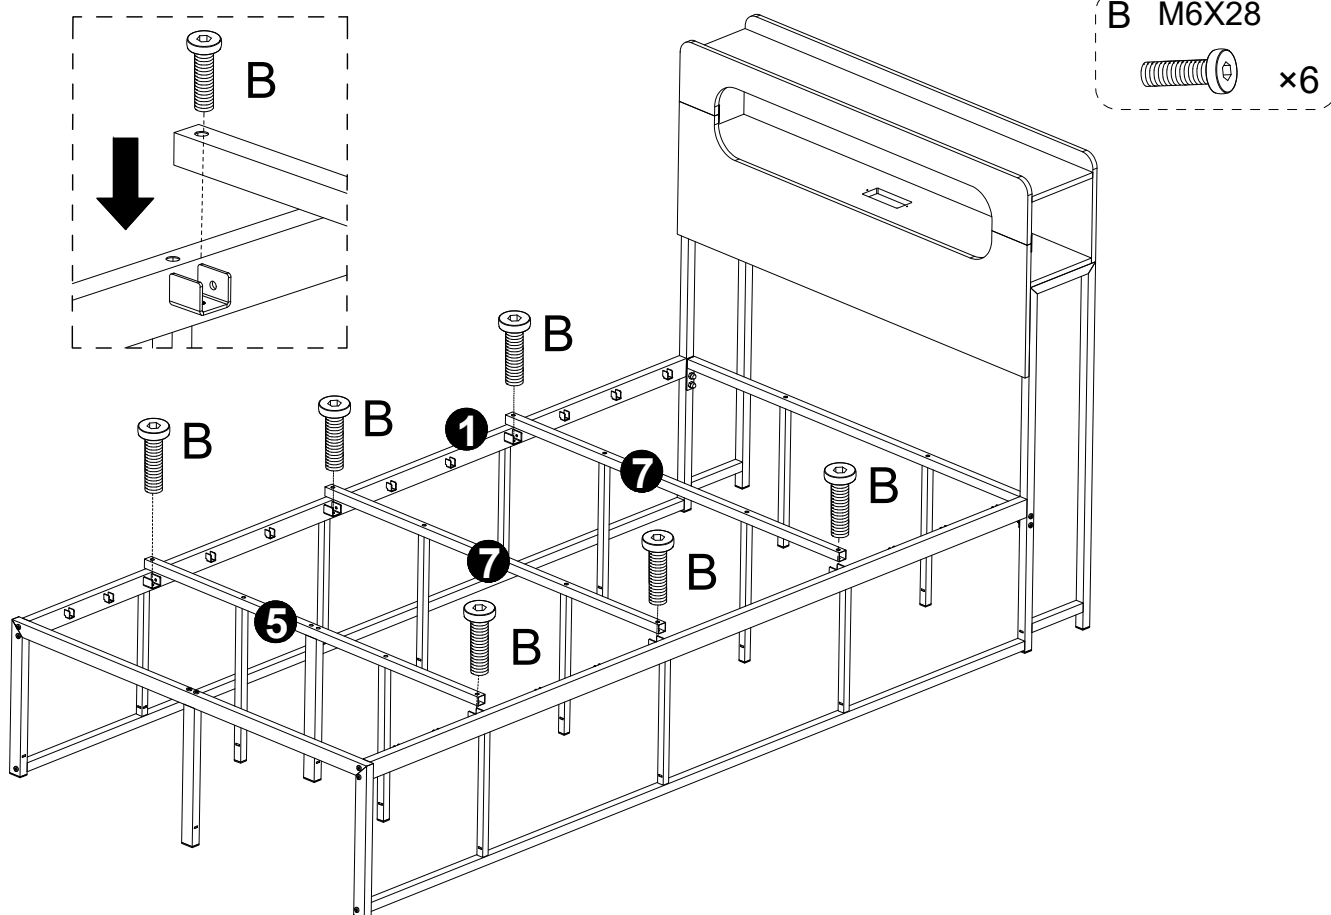


16

Accessory 11 and accessory 12 must be supported with a tool before installation.

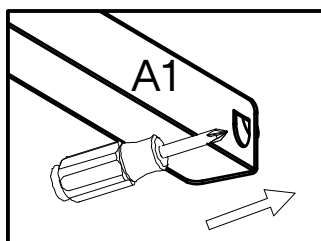
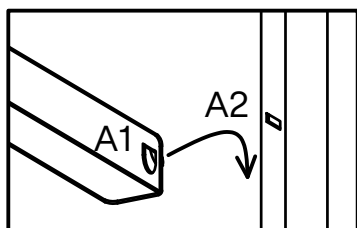


Note that the protruding part of A1 aligns with the squarehole of A2 and then press inward and downward.

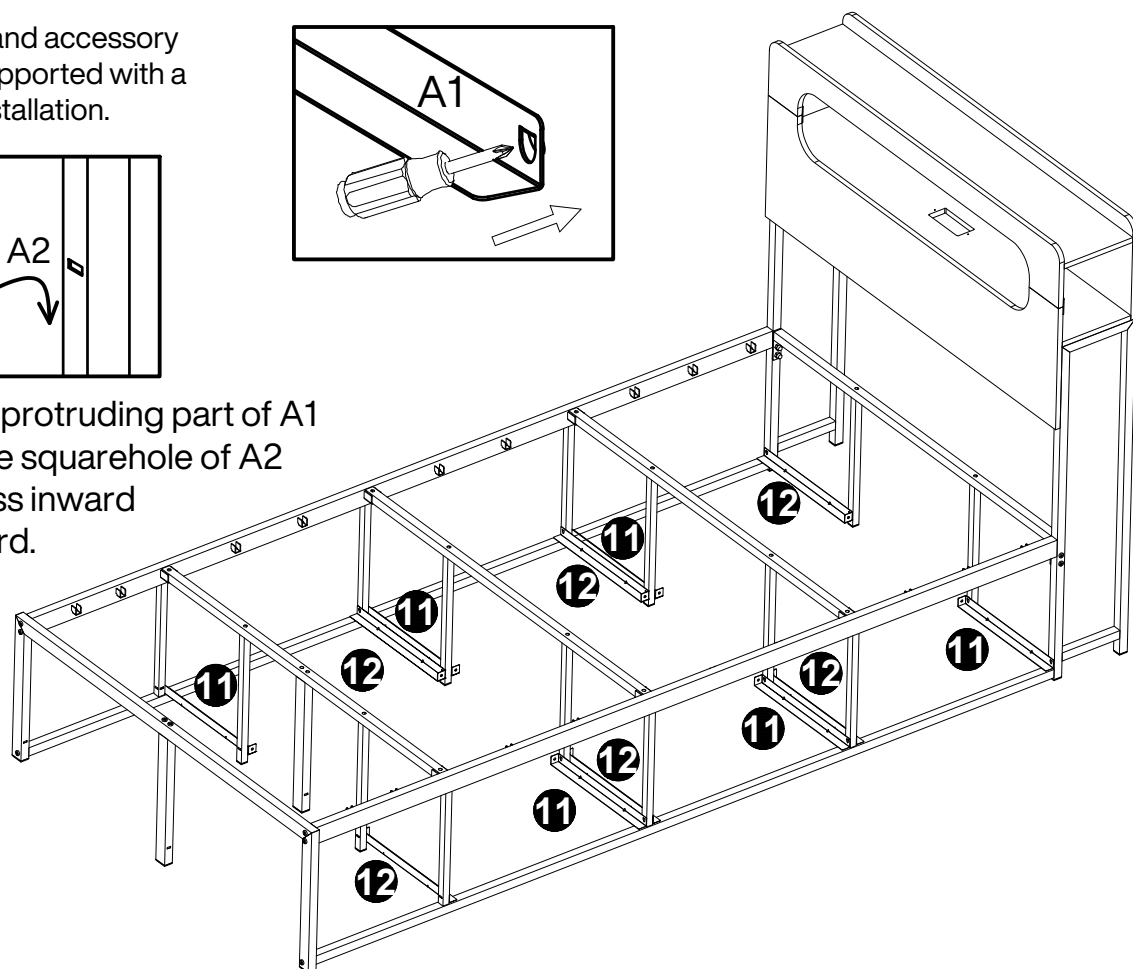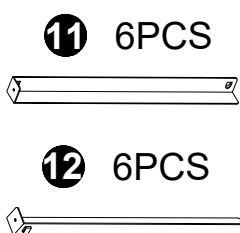


17

Accessory 13 and accessory 14 must be supported with a tool before installation.

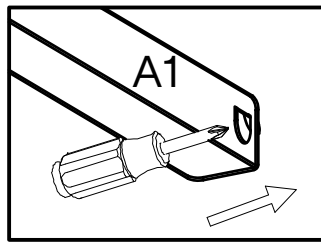
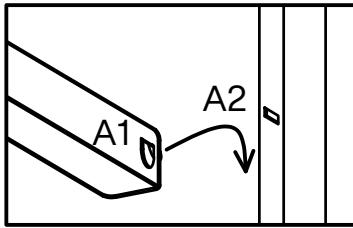


Note that the protruding part of A1 aligns with the squarehole of A2 and then press inward and downward.



14 2PCS





13 2PCS

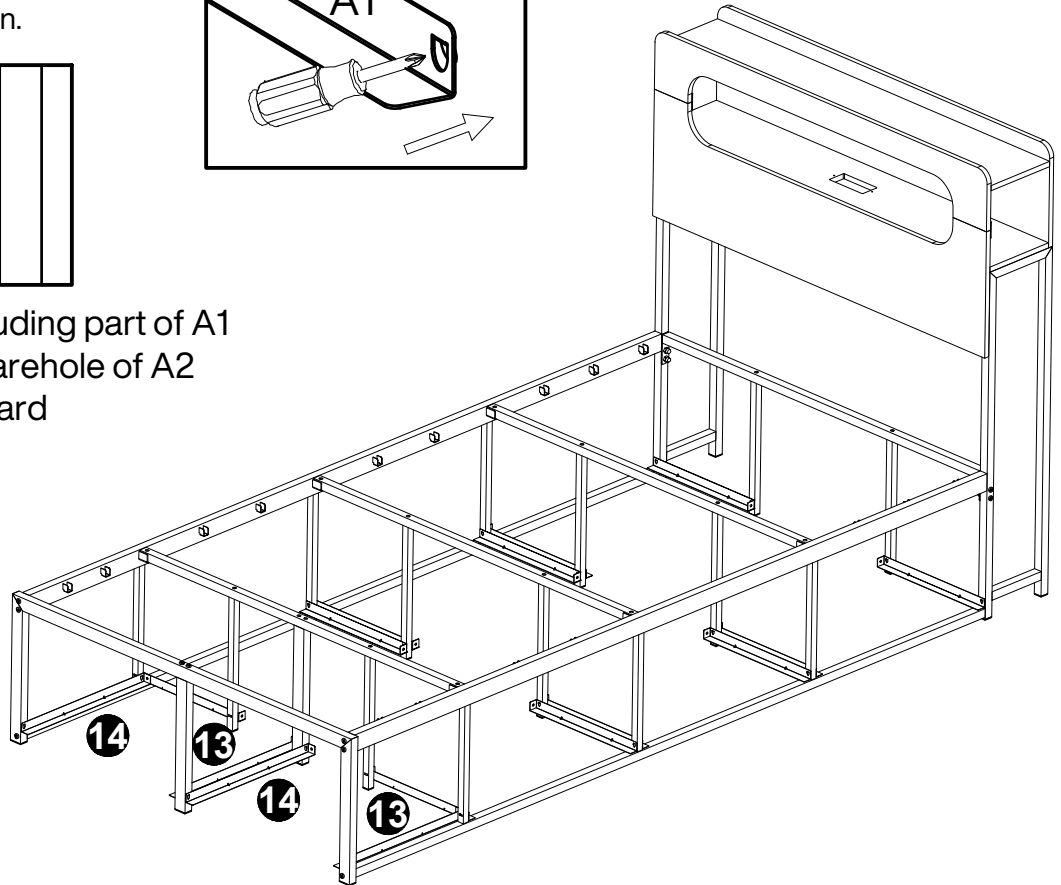

18

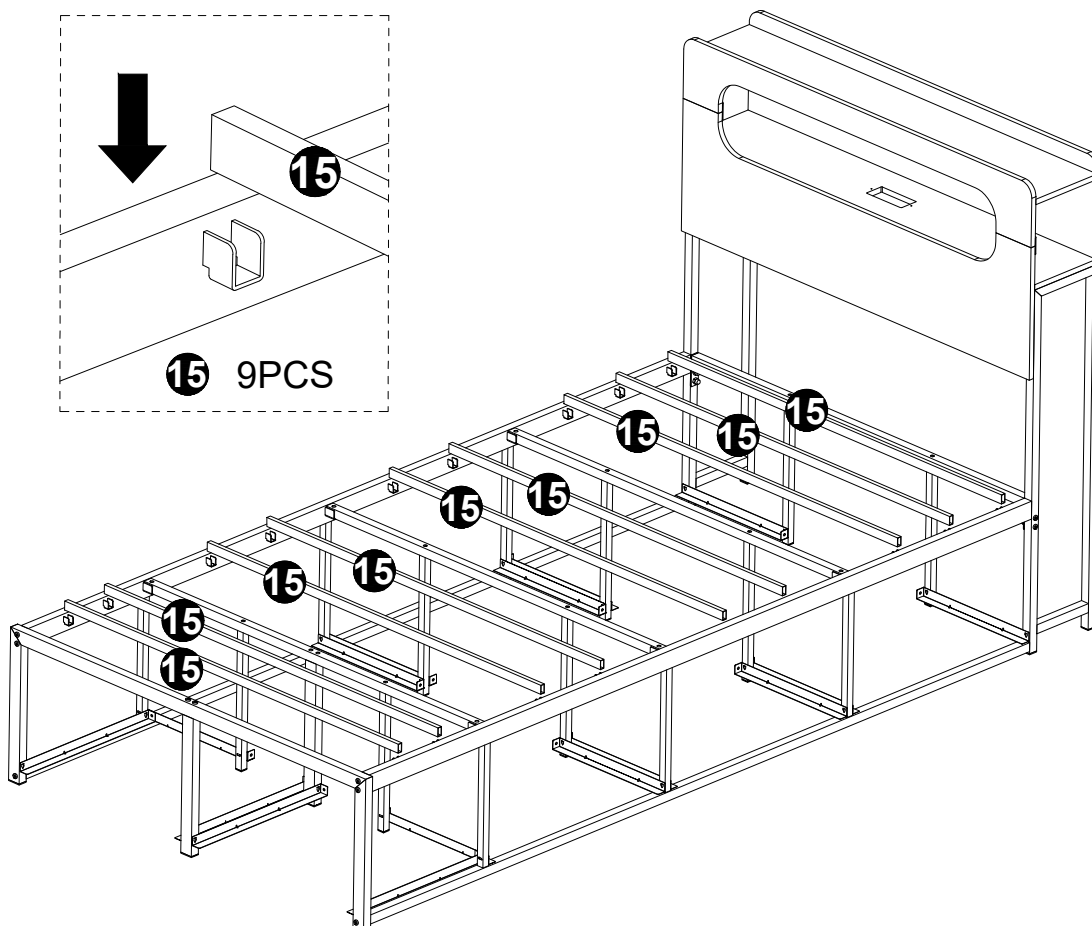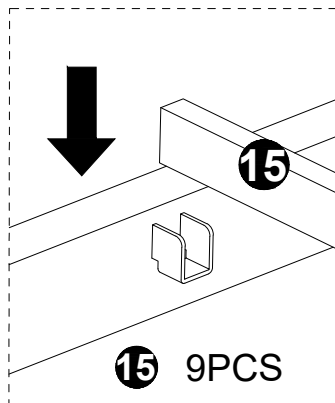

19

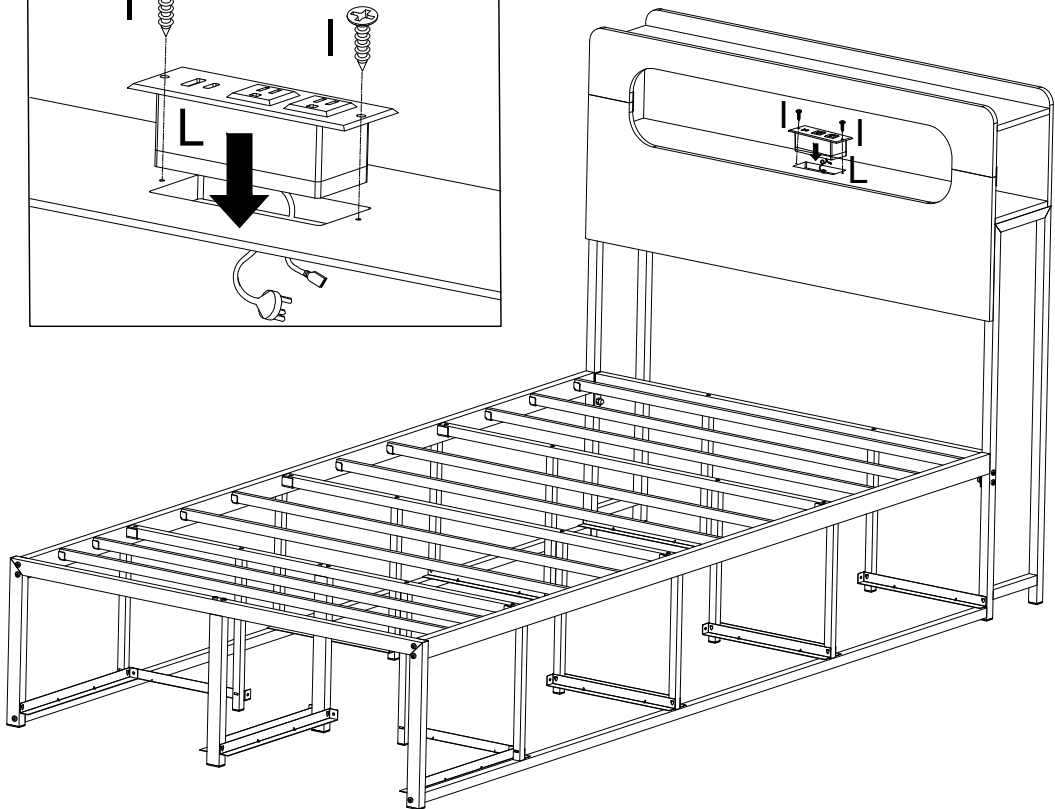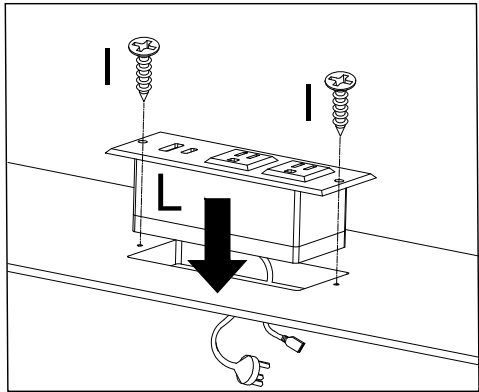


- L



×1
- I
ST3.5X12

×2

20

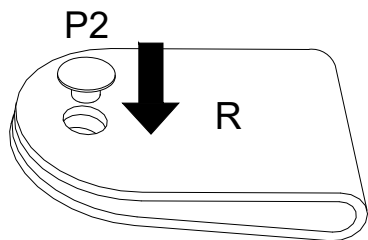

First, press component P2 into component R by hand

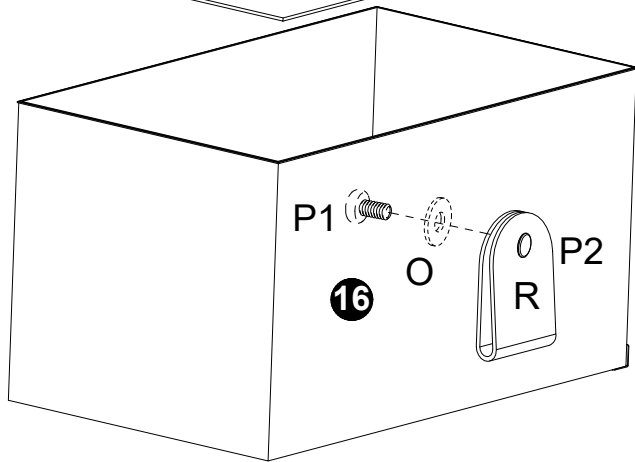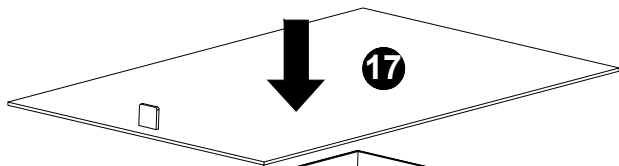

- P
P1

M4X6
P2


M4
×6
- O

×6
- R


×6

×6

21



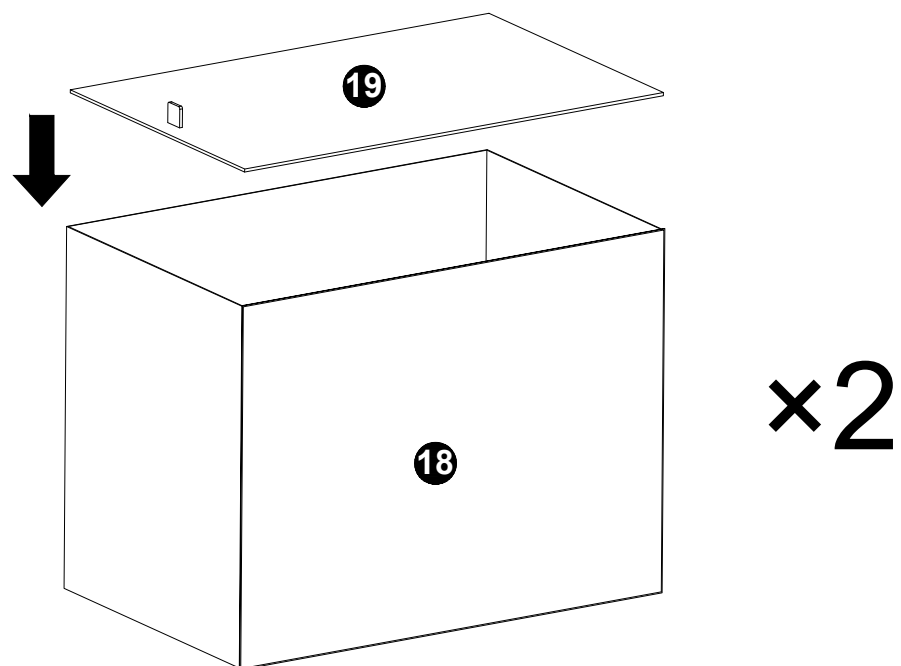


22

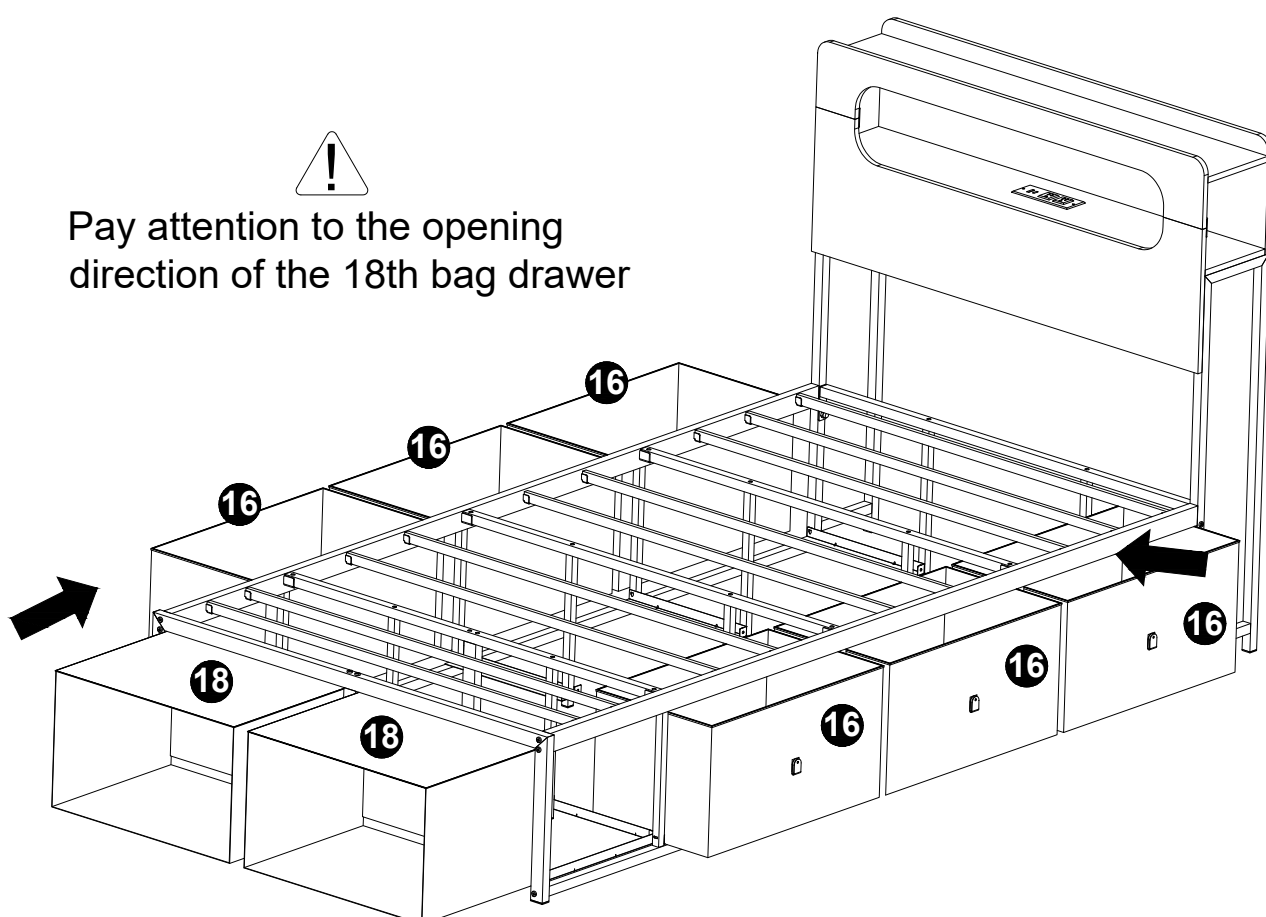





TIGHT ALL SCREW 100%

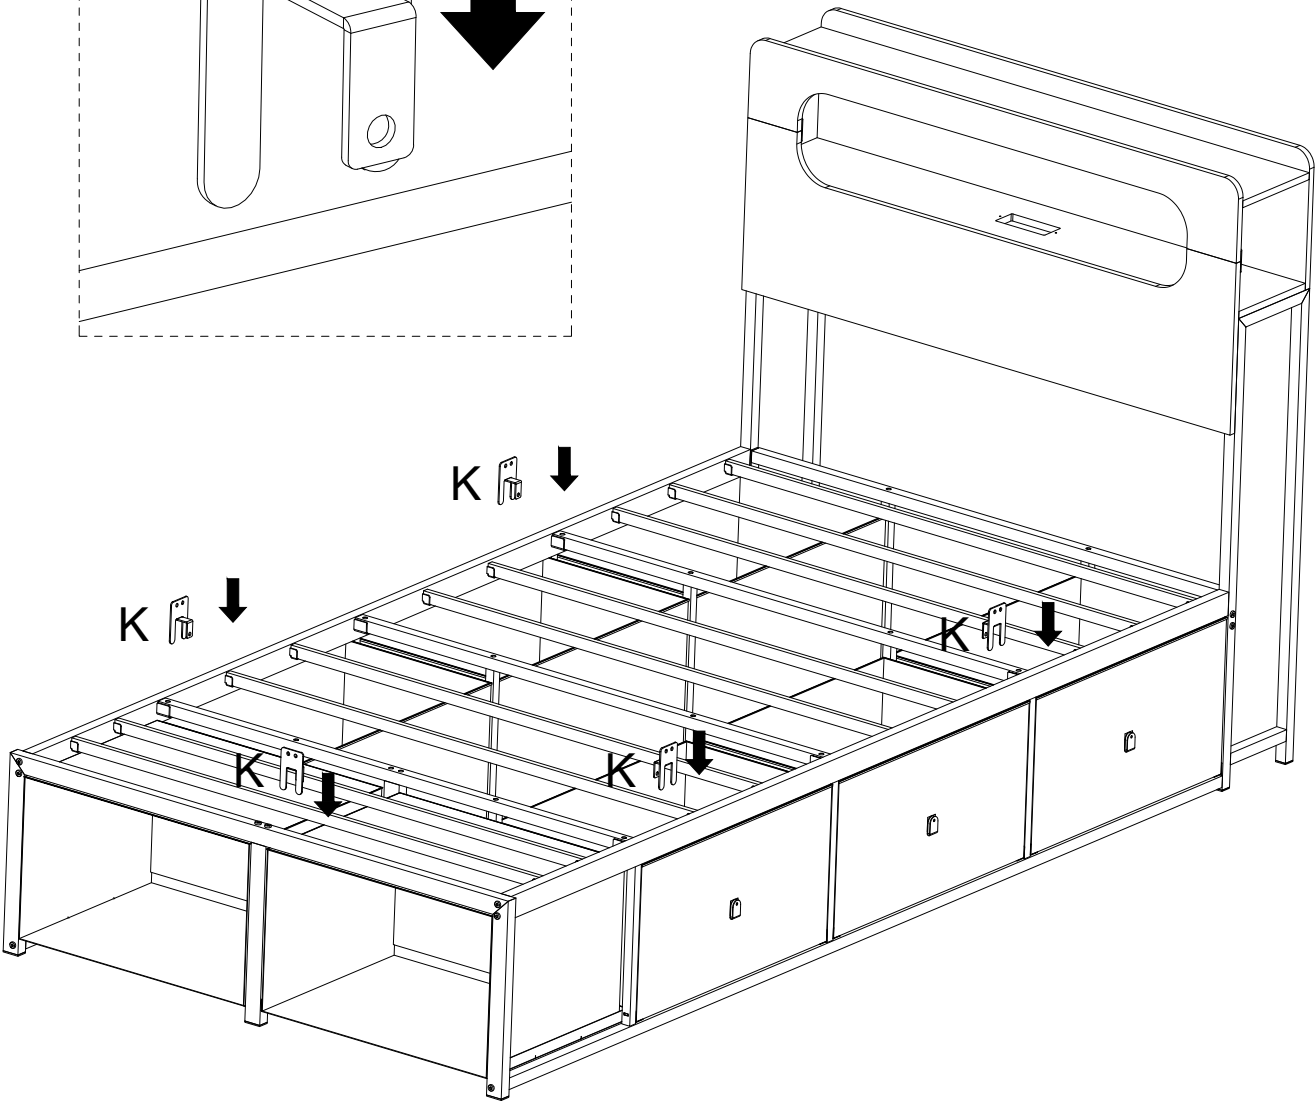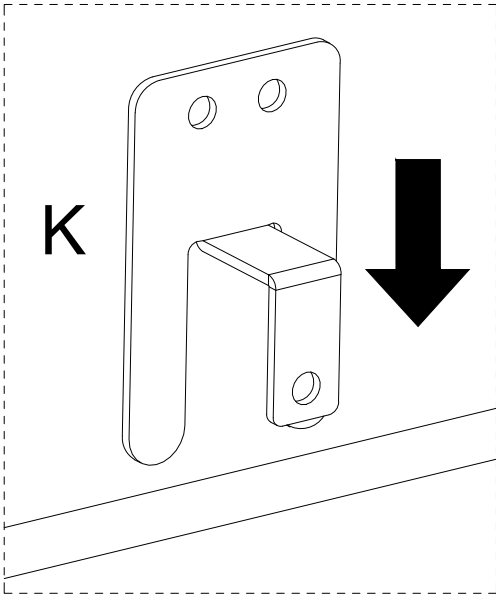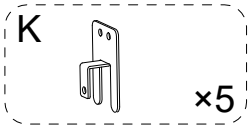

Be careful to tear off the paper on the back of the light strip, Then press it firmly with your hand

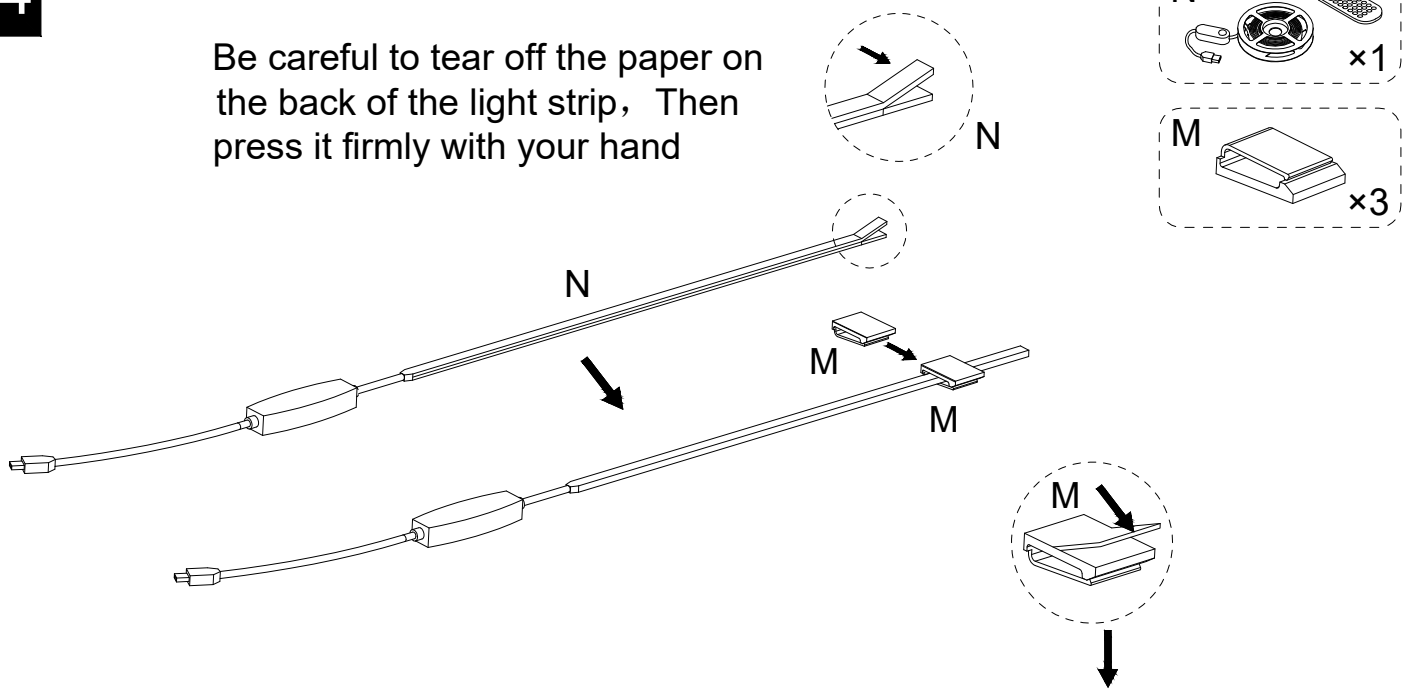

The slight strip can be pasted to the desired position according to your own needs

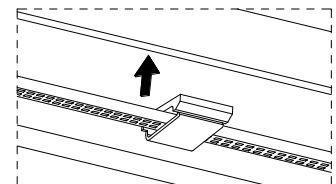

Light strip mounting position:
Under Wood Board No.23

