BARBER CHAIR INSTRUCTION



OPERATING THE CHAIR

How to lift this chair: Step down on the Foot Bar repeatedly to raise the chair to the desired height.Do not over-extend the chair,creating the risk of falls or tipping the chair and its occupant over,resulting in injury,step down and hold the Foot Bar to allow chair to lower.

How to reclining this chair:push the lever backwards (35-40 degree) and push the backrest to back.The backrest will tilt backwards;loosen the lever to get the tilt degree of backrest;Turn the lever again backwards (35-40 degree),the backrest can back to the original position,Don't push lever too hard,It's break lever.


How to pull out the pillow of this chair: Press the button on the chrome plate of the top of backrest and pull up to raise the headrest or push down to lower it.

Step 1: Check all parts you receive


Part List

			
Backrest.(1pc)	left and right armrest.(1pc)	left and right plank	Leg-rest.(1pc)
			
Footrest.(1pc)	Base.(1pc)	Pump.(1pc)	Stabilizer bar.(2pcs)
			
Nut.(4pcs)	Short screws.(8pcs)	Short bolts.(4pcs)	Short bolts.(1pcs)
			
Footrest support.(2pcs)	Plastic cover.(1pc)	Seat cushion.(1pc)	Foot bar.(1pc)
			
Long bolts.(4pcs)	Long screws.(4pcs)	screws.(2pcs)	

Step 2: Insert threaded bolts on bottom of pump into holes on top of base.Tighten and locking 4 nuts onto threaded bolts.

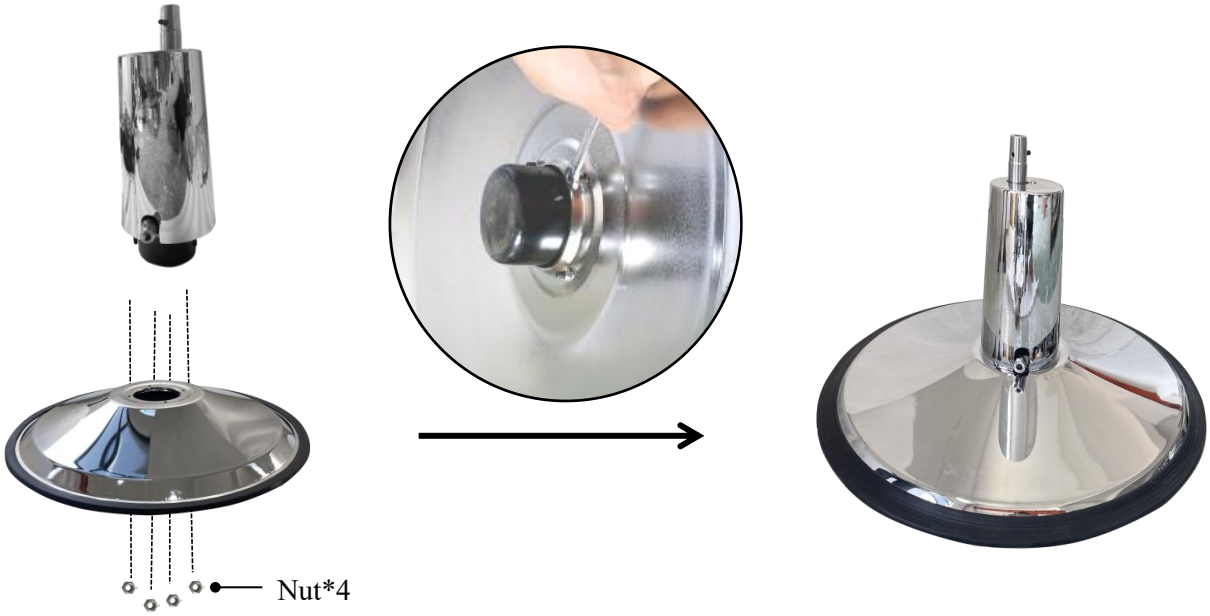

Step 3: Assembled foot bar and hydraulic pump,tighten the set screws to firmly hold the foot bar in place.(pay attention to the direction of foot bar)

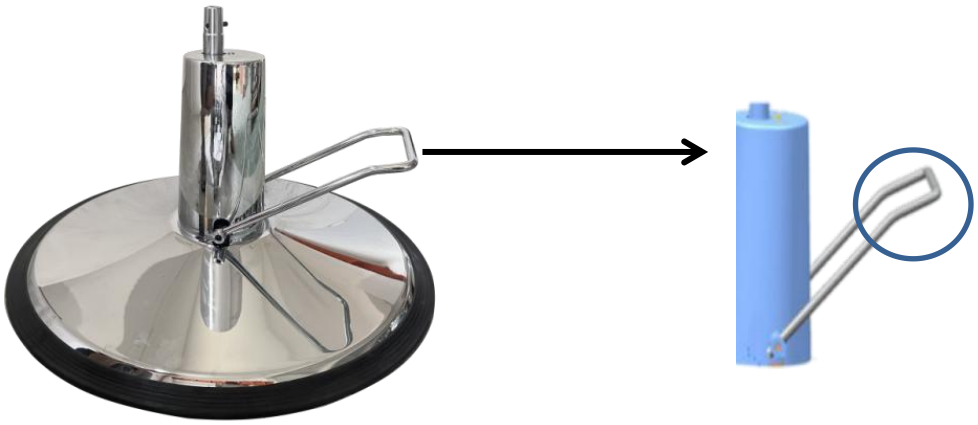


Step 4: First:Place the right armrest on the seat cushion, align it, insert the screw and tighten it. Do the same for the left side.



Step 5: As shown in the picture, find the boards and screws on both sides of the handrail, which correspond to the left and right handrails respectively, and tighten them.



Step 6: Set seat onto assembled hydraulic pump and base,fix the pump by the fixing bolt of pump.

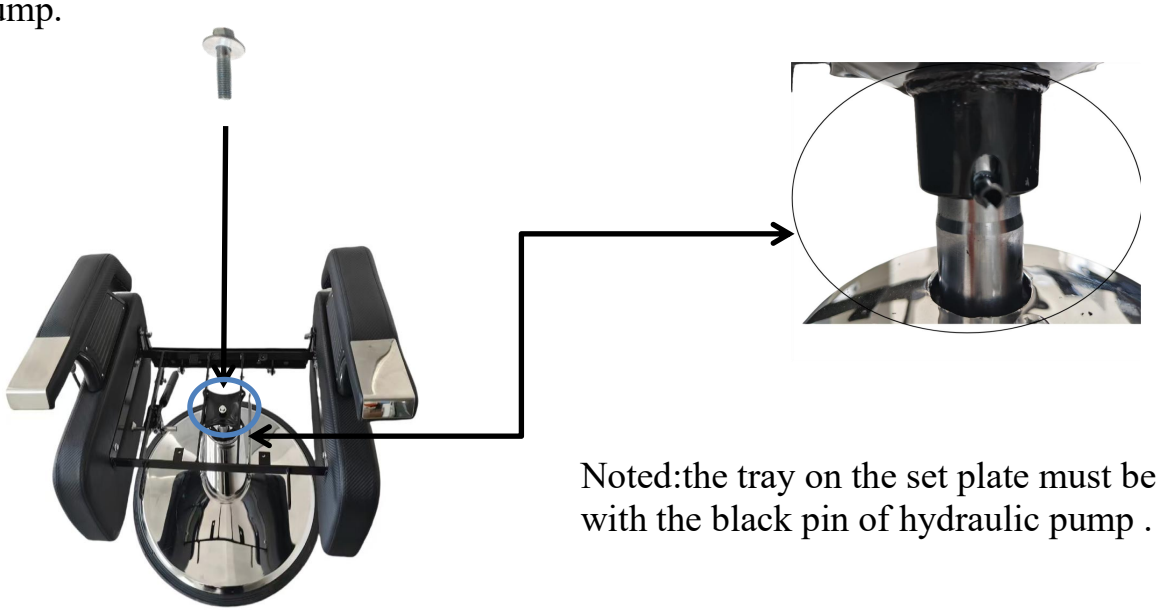

Noted:the tray on the set plate must be aligned with the black pin of hydraulic pump .

Step 7: Attach 2 stabilizer bar to leg-rest.Noted:Remove all pre-fitted bolts of footrest and leg-rest



Step 8:.Assemble backrest to the seat by 4 long bolts as picture**,Please adjust the angle of chair,make sure the backrest and footrest is not tilt,then we have to tighten all screws.**





Step 9: Loose screws in the footrest attach footrest to the chair by those screws,tighten.





Loosen screws on the metal of backrest,link the holes of the 2 stabilizer bar to the holes of black backrest iron by those screws.Tighten.

Step 10: Attach footrest supports to footrest**.**



Step 11: Remove all pre-fitted bolts of footrest,attach footrest to leg-rest ,put the seat cushion on the seat plate.



Step 12: Install long black plastic cover to backrest by 2 screws.

