



# ASSEMBLY INSTRUCTION

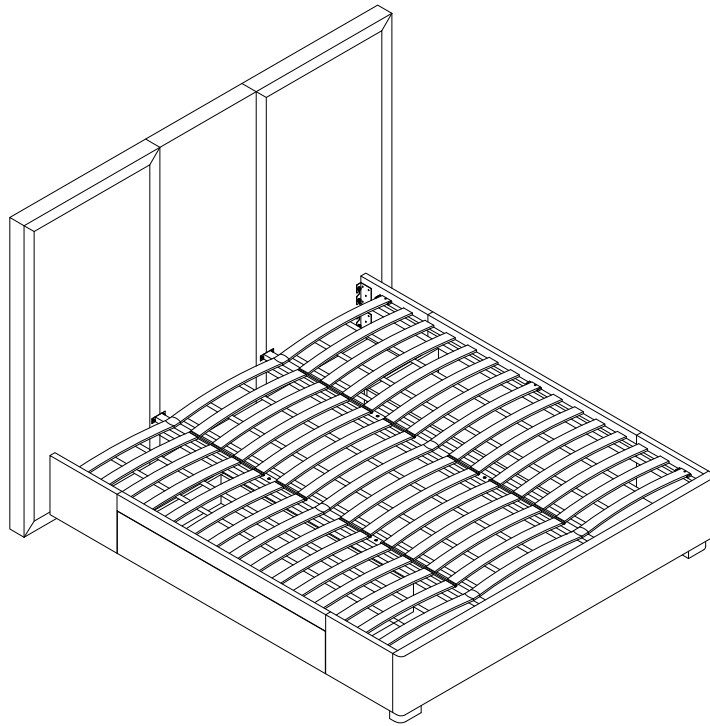


## IMPORTANT NOTE



- 1. The bed comes in two packages. Please carefully check the box quantity, When you receive the package. if you receive missing or the same two packages, please contact WAYFAIR customer.**
2. FOR THE PROTECTION OF YOUR FURNITURE, PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE TO PREVENT ANY DAMAGE.
3. DO NOT USE POWER TOOLS TO ASSEMBLE THE BED.
4. PLEASE PERIODICALLY CHECK ALL FITTINGS AND RE-TIGHTEN AS NECESSARY.
5. DO NOT USE THE BED UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.
6. NEED PARTS OR ASSISTANCE? EMAIL US
7. YOU CAN ASSEMBLE IT WITH OUR PACKAGING TOOLS OR WITH A.

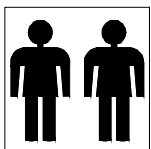

Minimum two  
person assembly

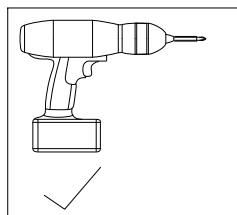


# PART LIST

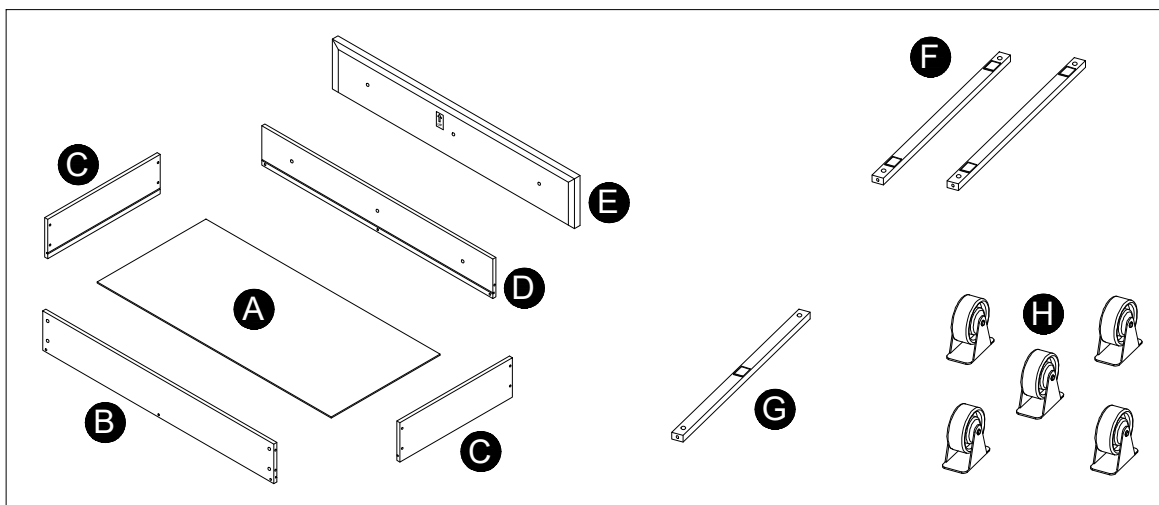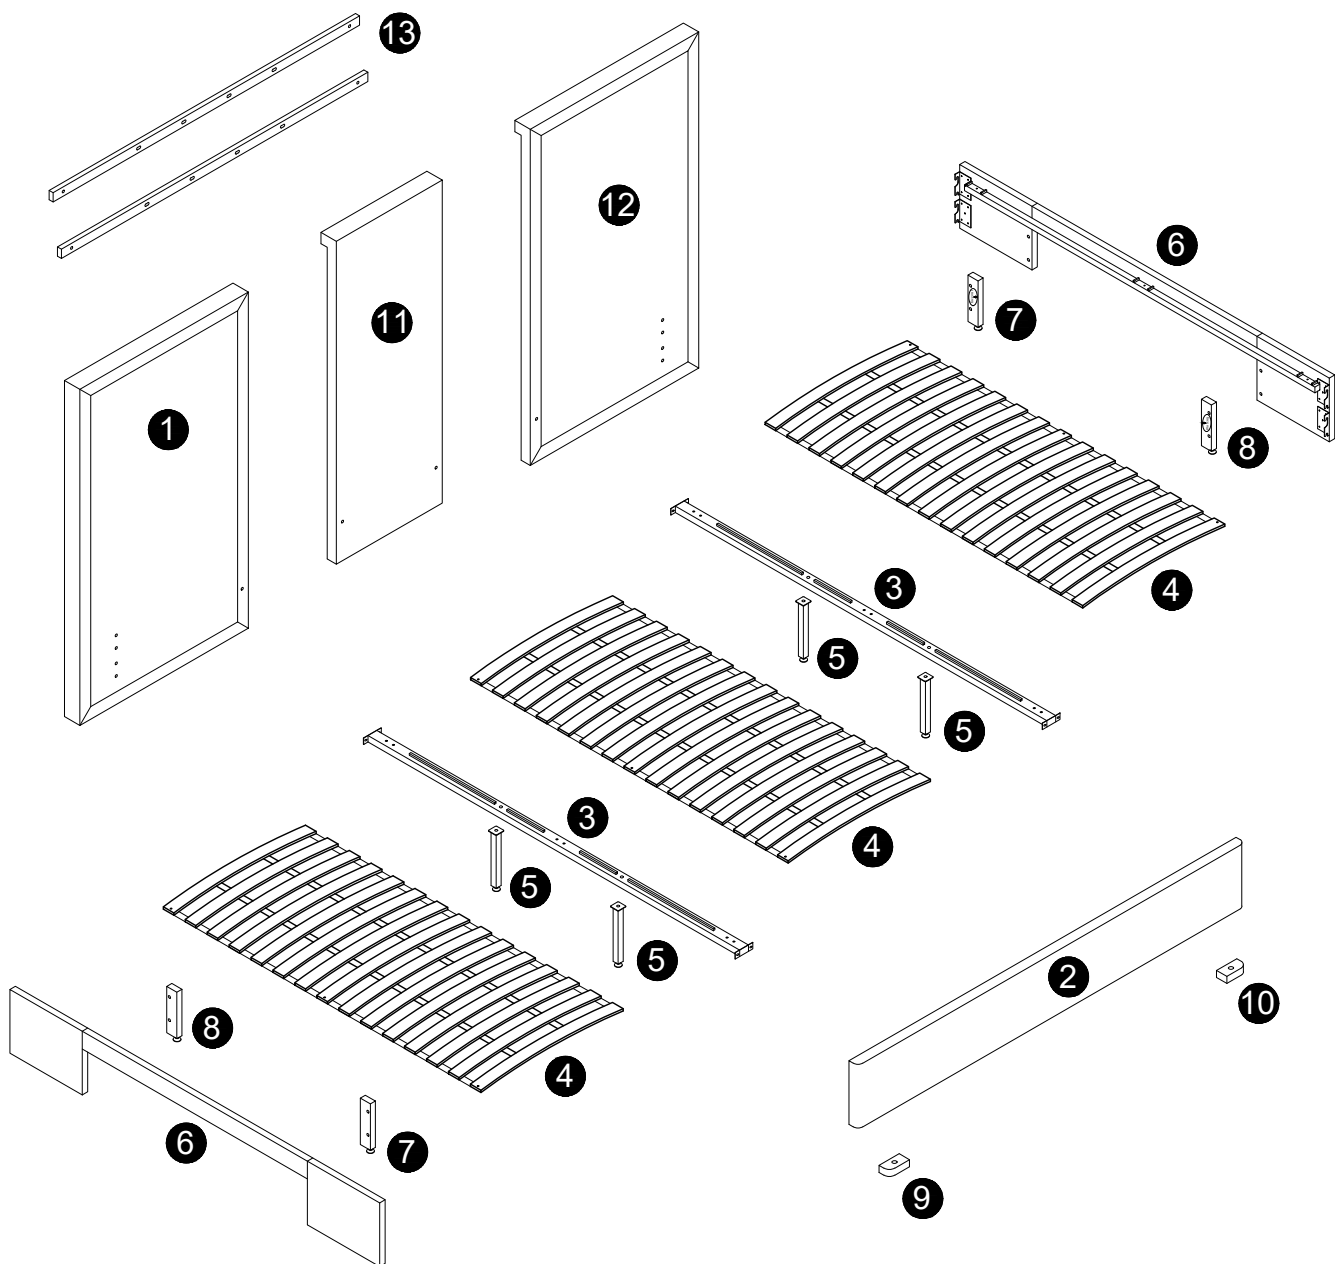


x2

# PART LIST


1 x 1pc




2 x 1pc

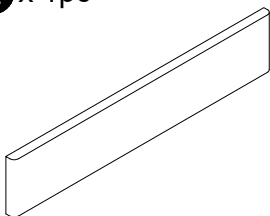


3 x 2pcs

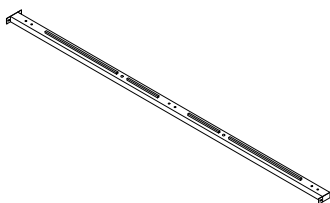


4 x 3pcs

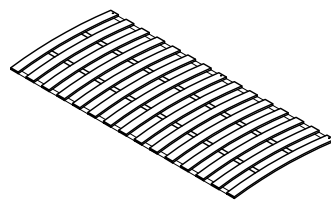


5 x 4pcs




6 x 2pcs

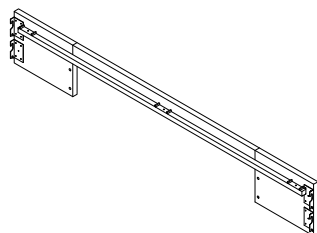

7 x 2pcs



8 x 2pcs



9 x 1pc




10 x 1pc




11 x 1pc




12 x 1pc




13 x 2pcs

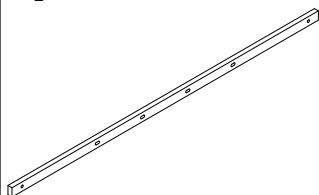


A x 2pcs

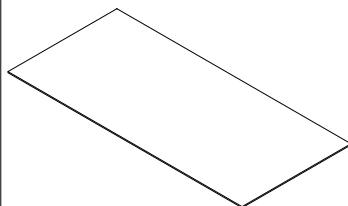


B x 2pcs

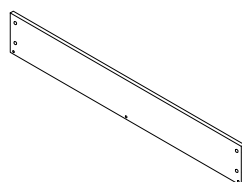


C x 4pcs




D x 2pcs

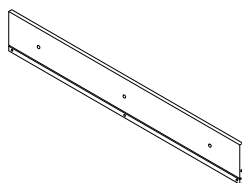


E x 2pcs

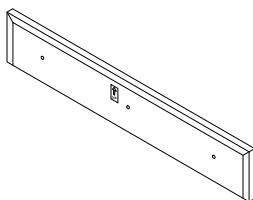

F x 4pcs

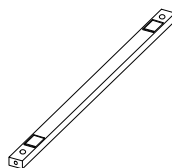


G x 2pcs

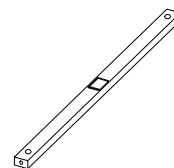

H x 10pcs



## HARDWARE LIST



**H1** M5 x 1pc



**H2** M8x25mm x 12pcs



**H3** M8x50mm x 34pcs



**H4** M8x35mm x 10pcs



**H5** M8 x 44pcs



**H6** M8x17mm x 44pcs



**H7** M8x22mm x 12pcs




**H8** x 6pcs



**H9** x 6pcs





**H10** x 28pcs






**H11** 5x50mm x 28pcs


**1**

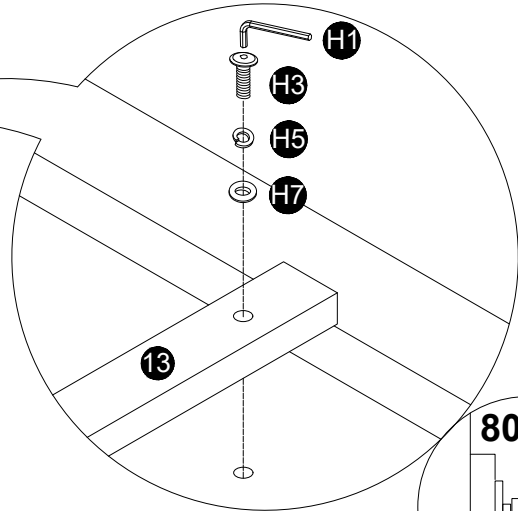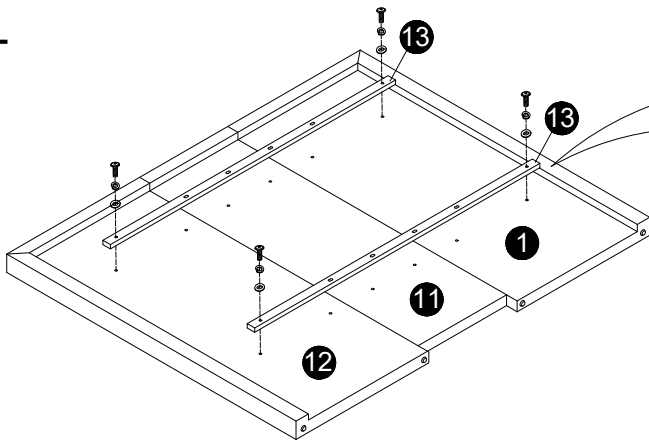

**80%**

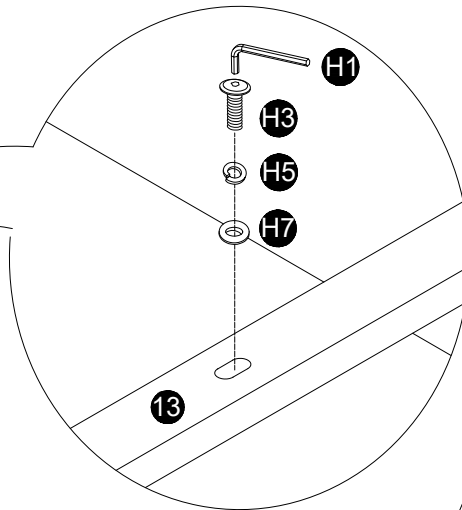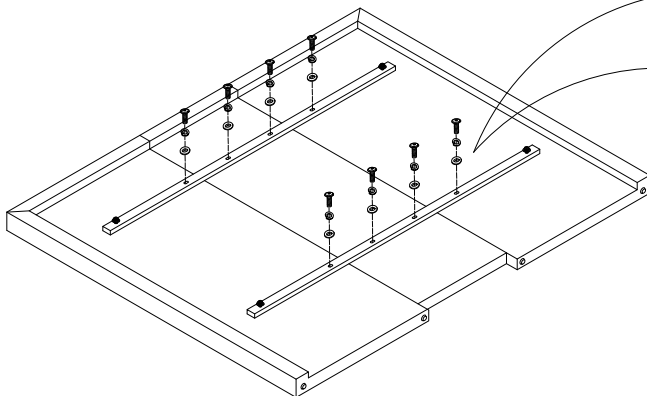


**100%**




**Fully tighten all fixings.**


2

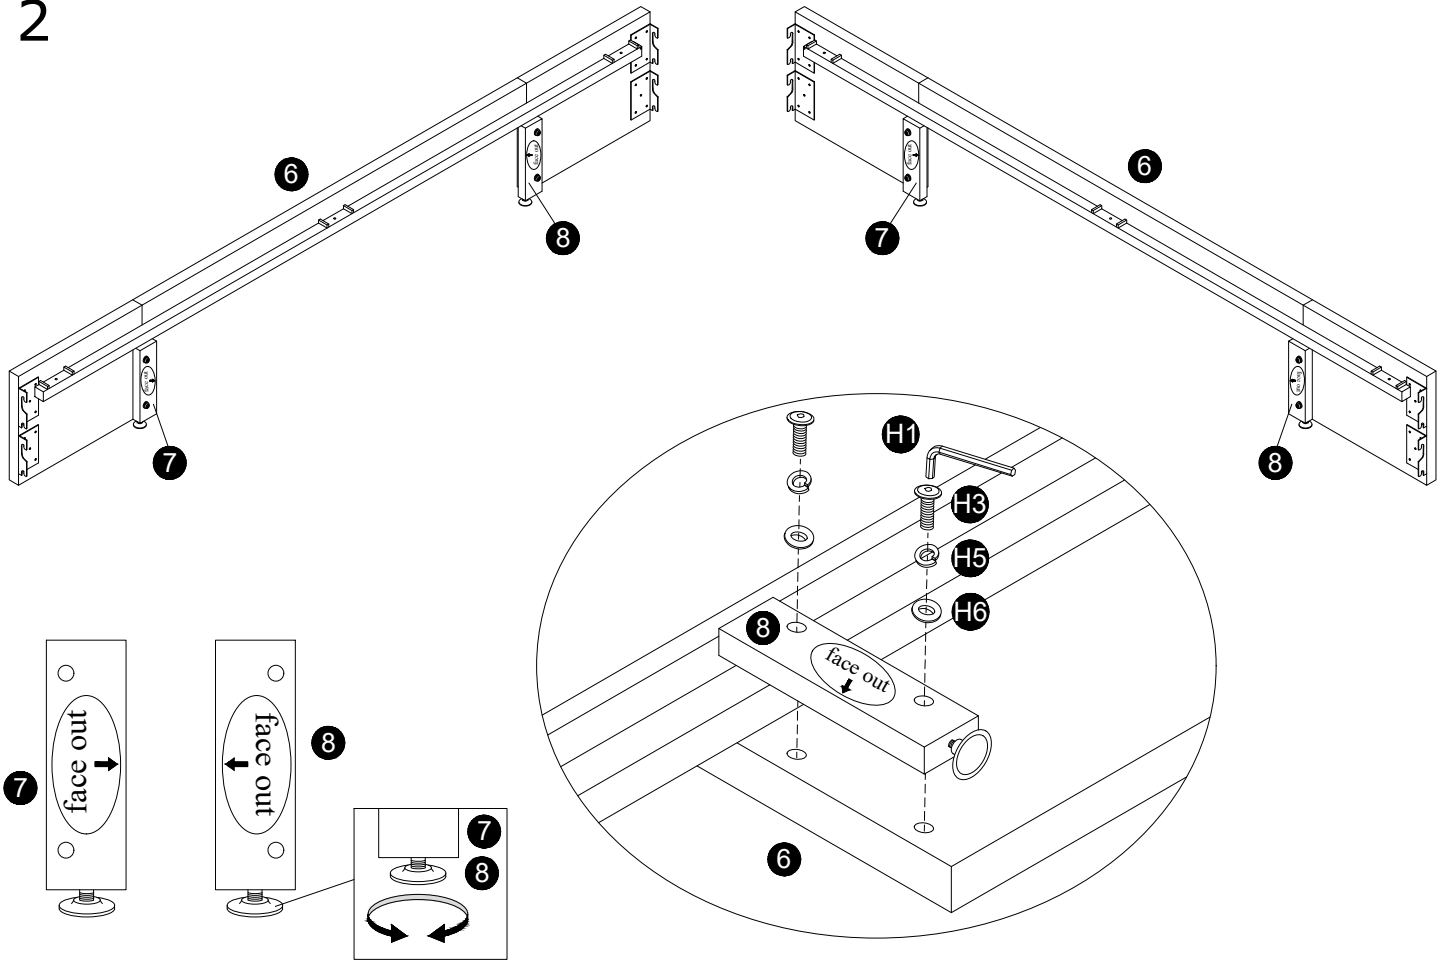


3

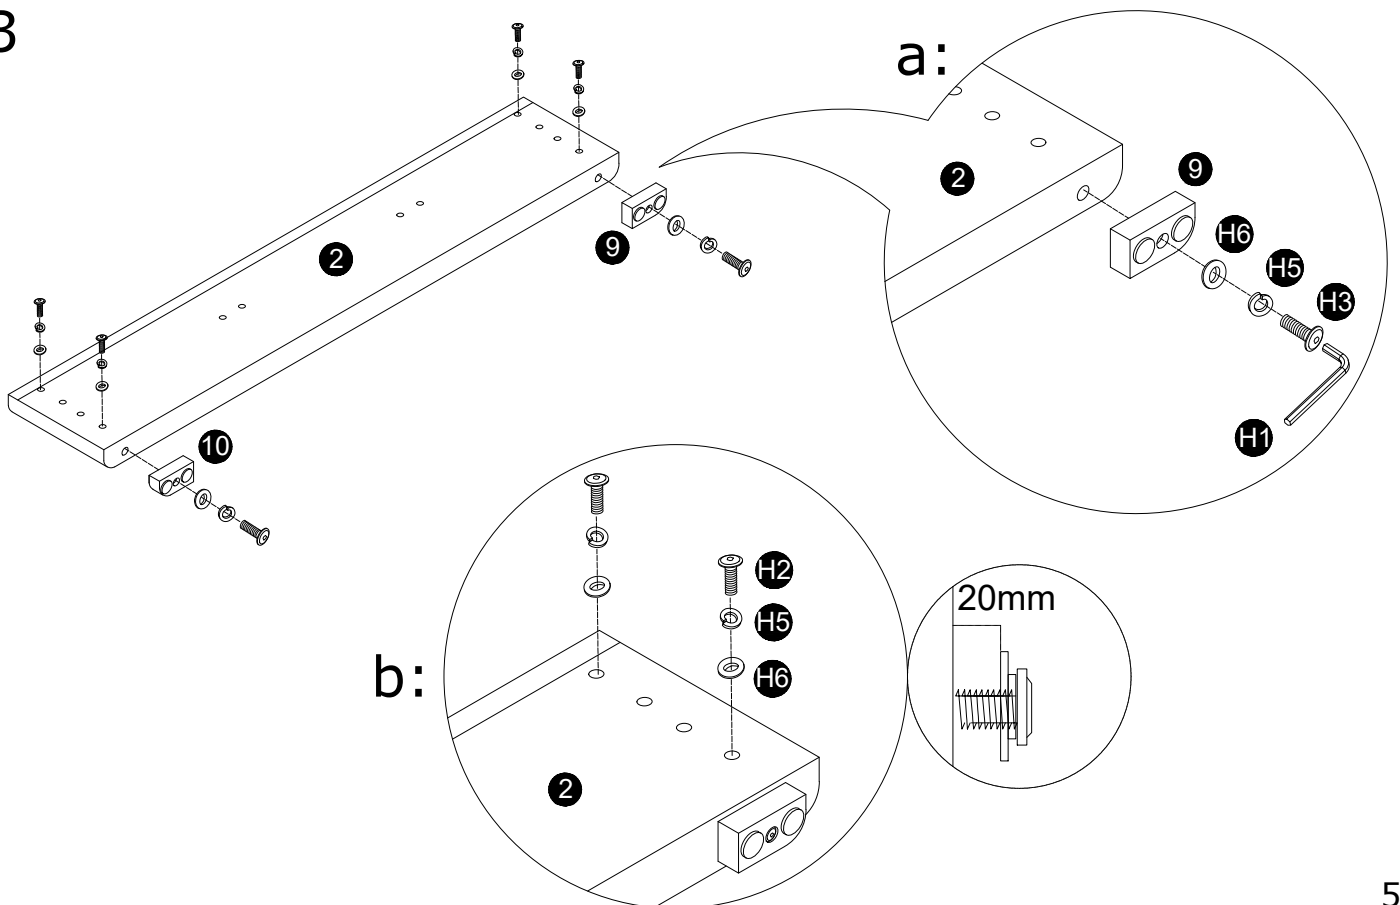


4

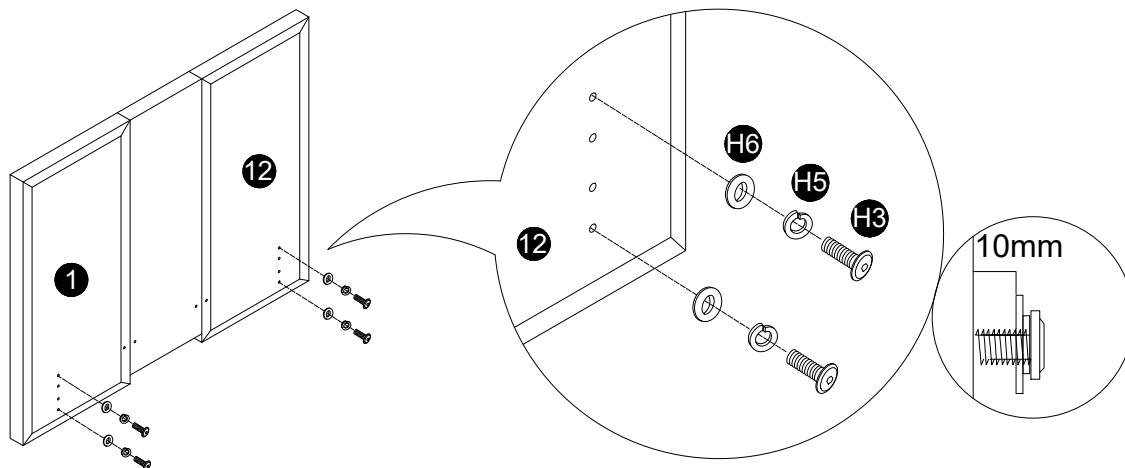


5





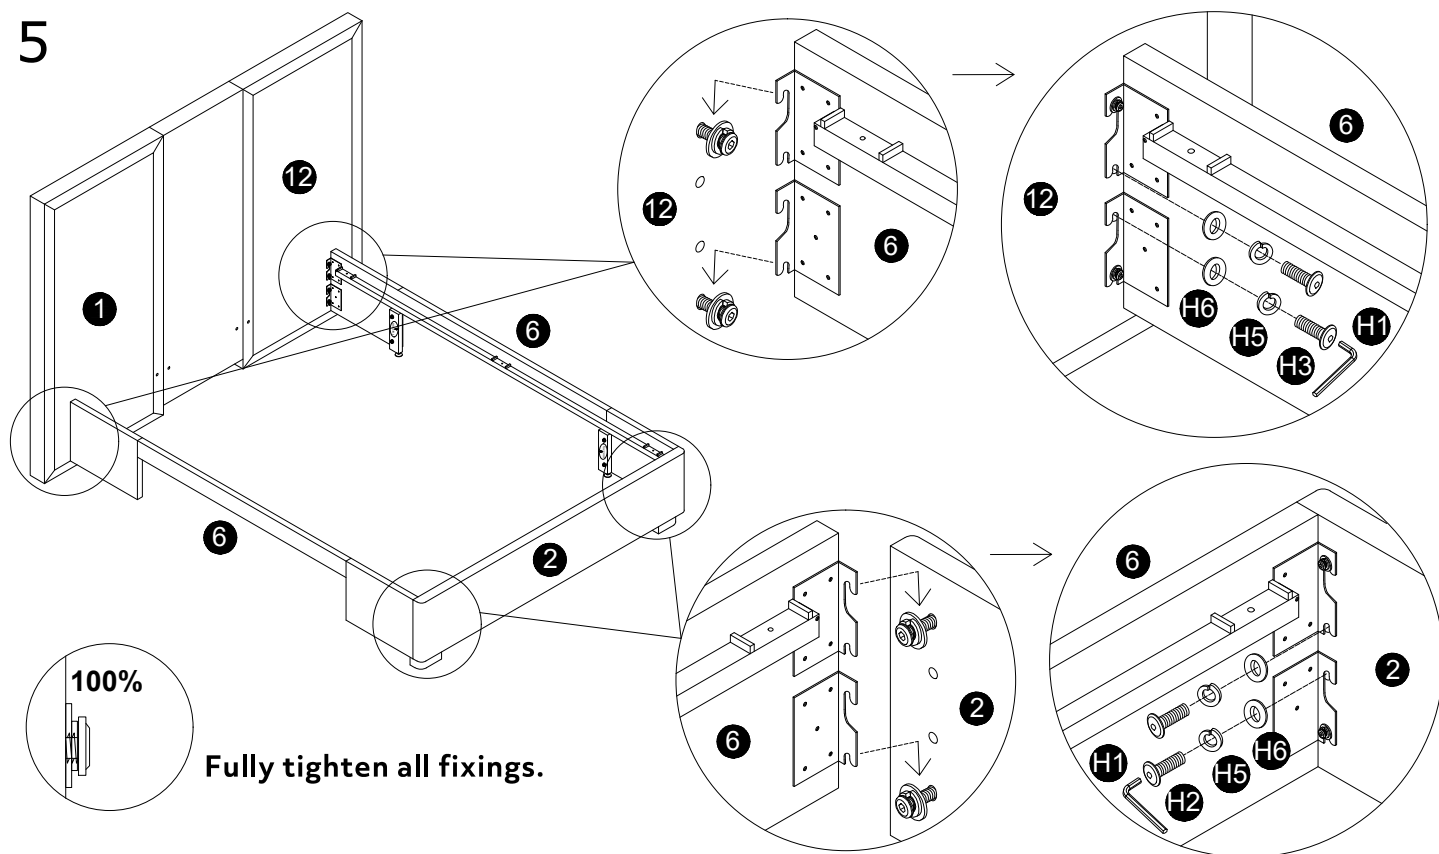


6

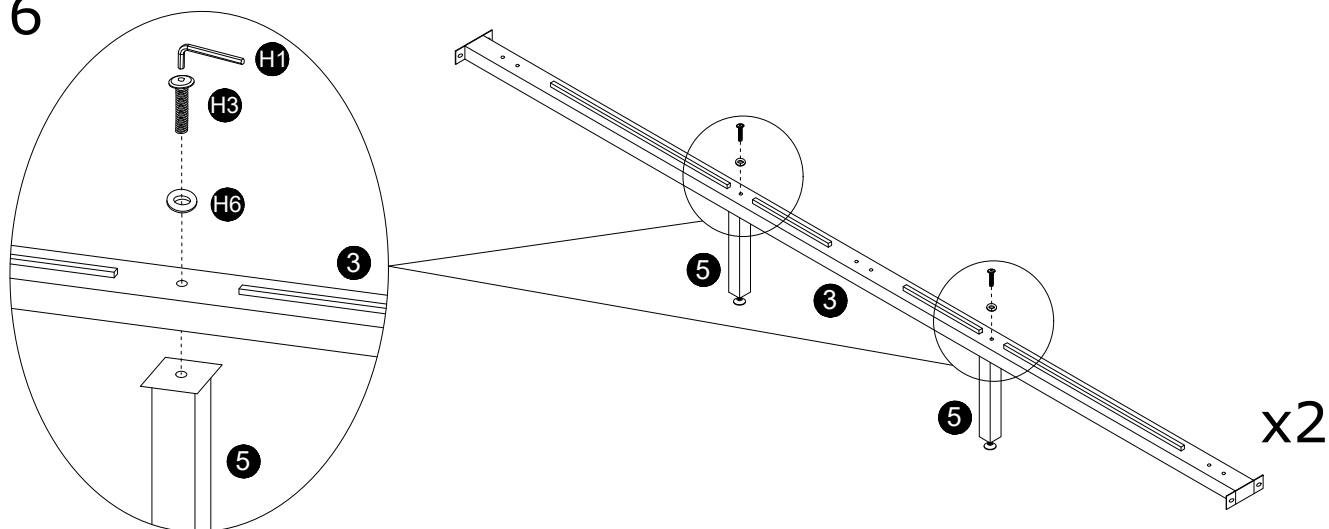


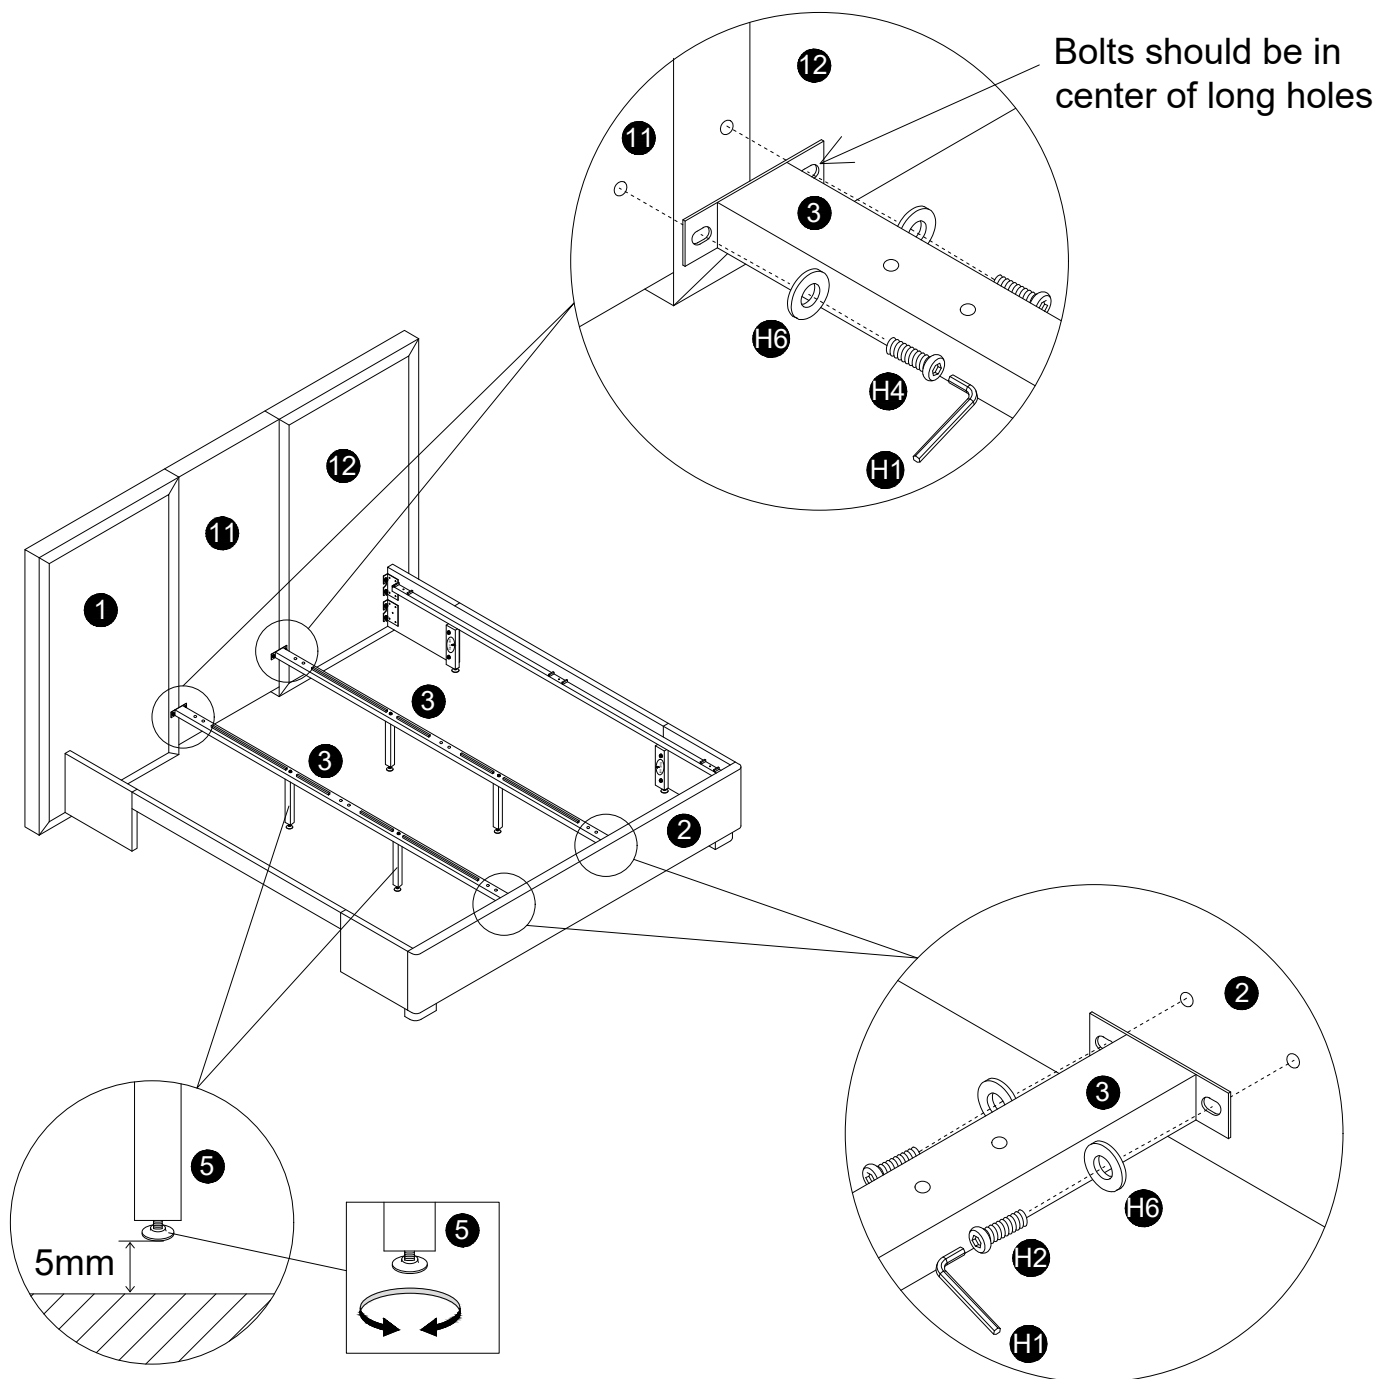


8

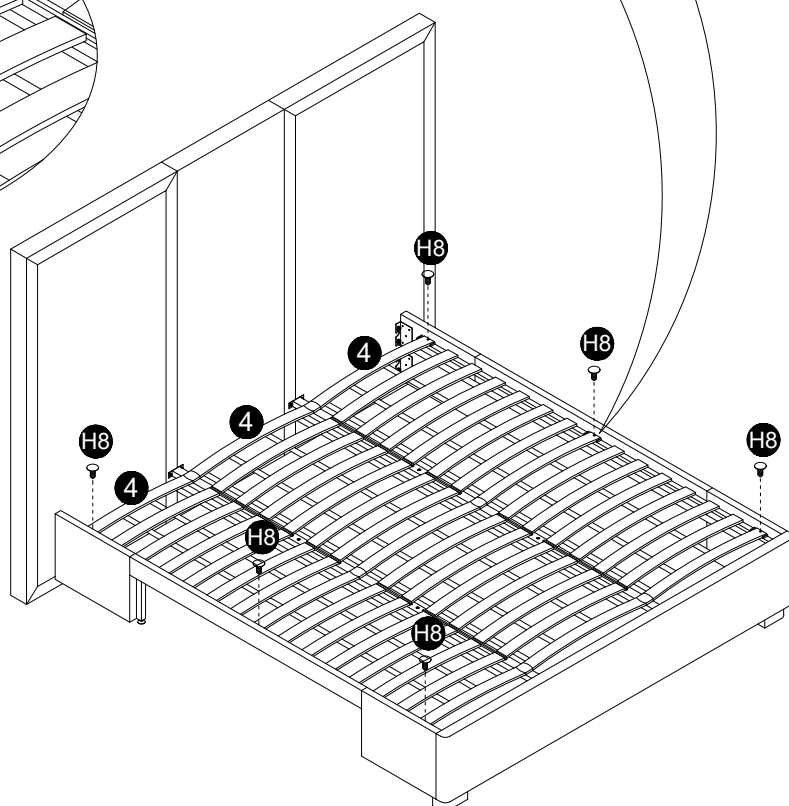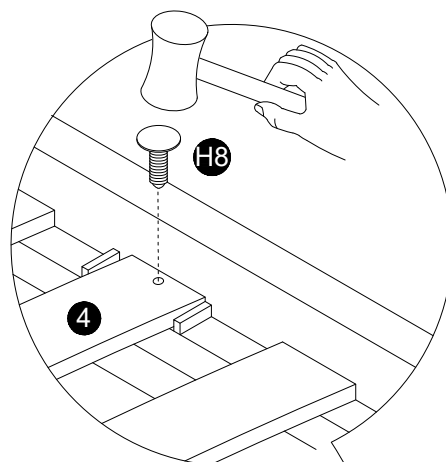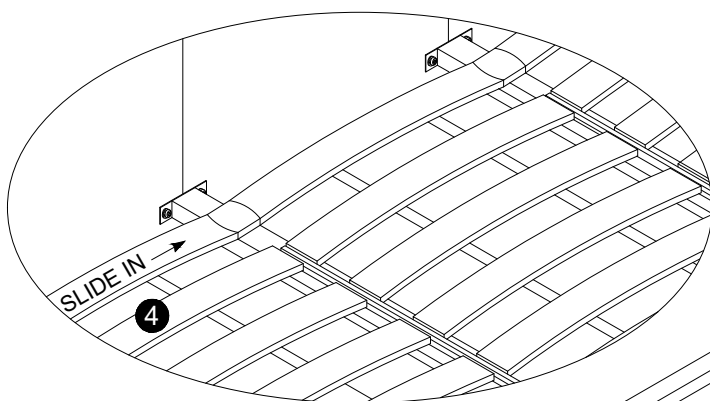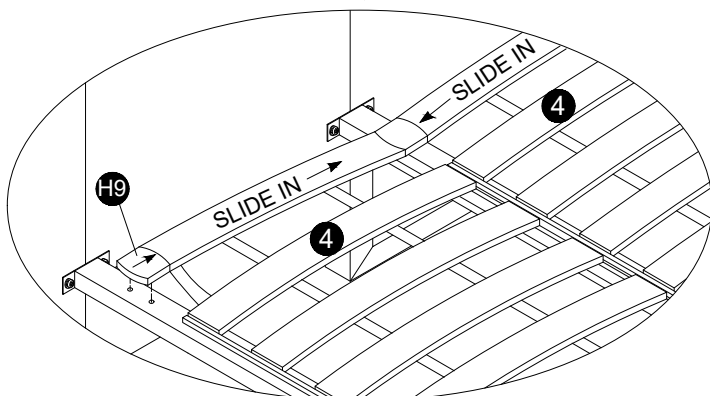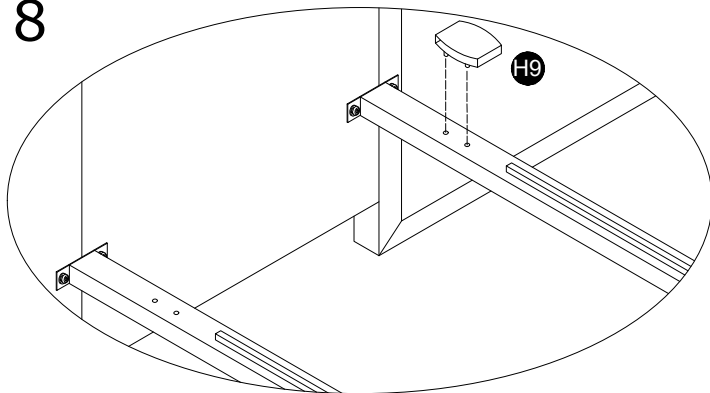





9

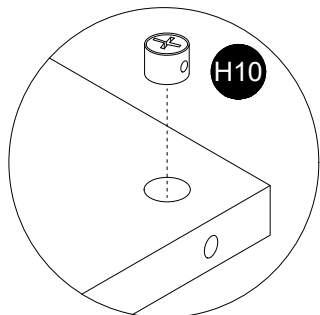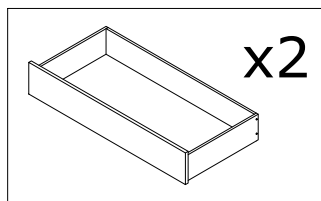**IMPORTANT:**


Make sure when fitting the nuts that the hole is in correct alignment with the hole in the panel edge.

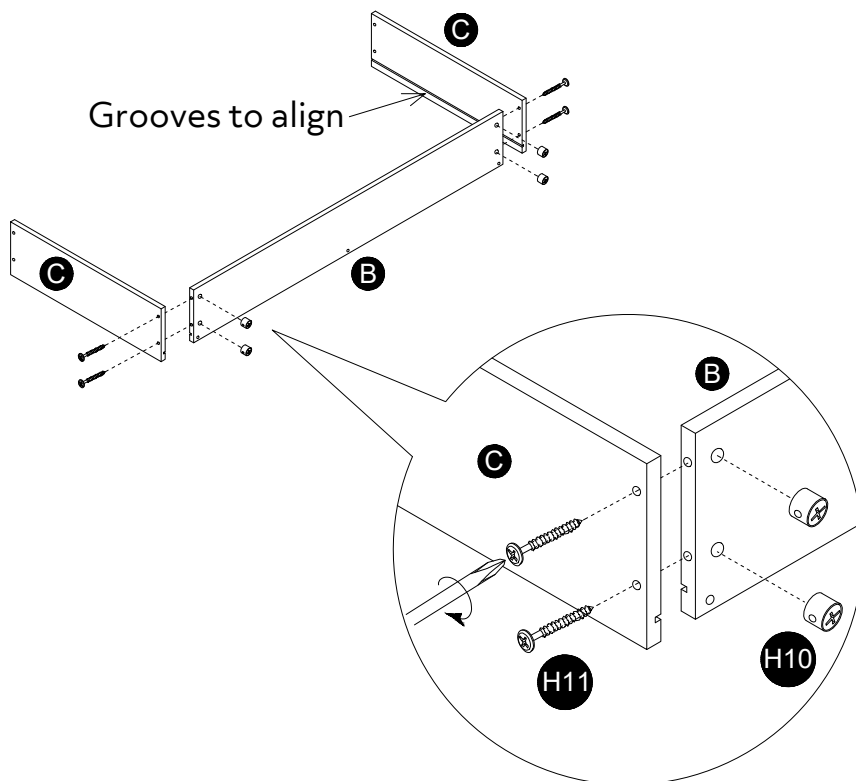



10

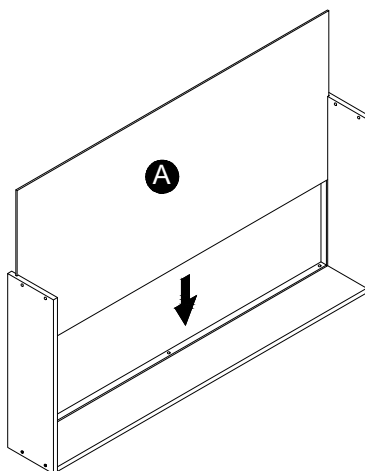



11

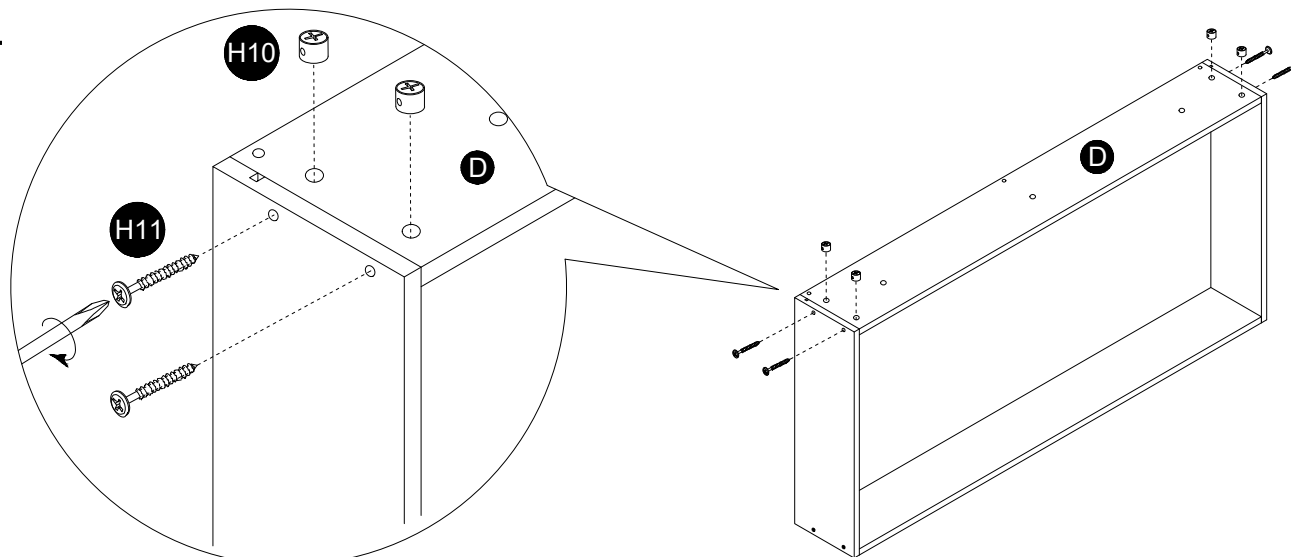



12

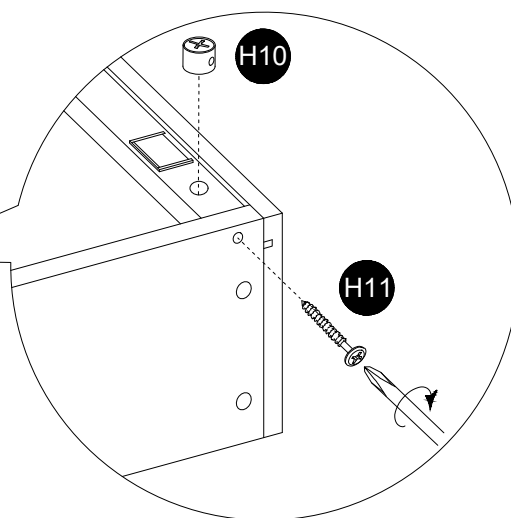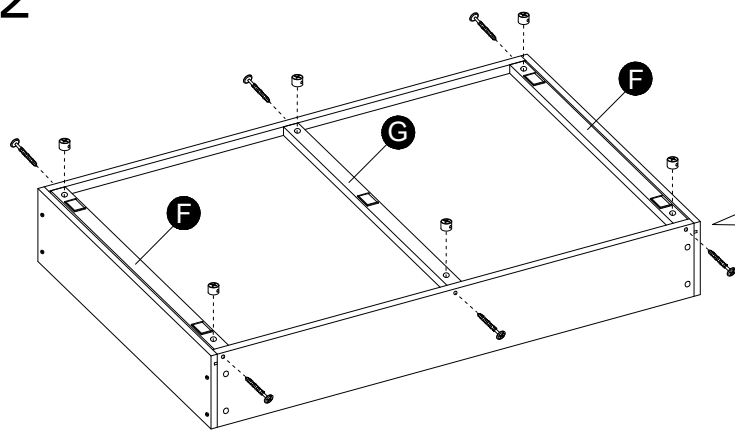

13

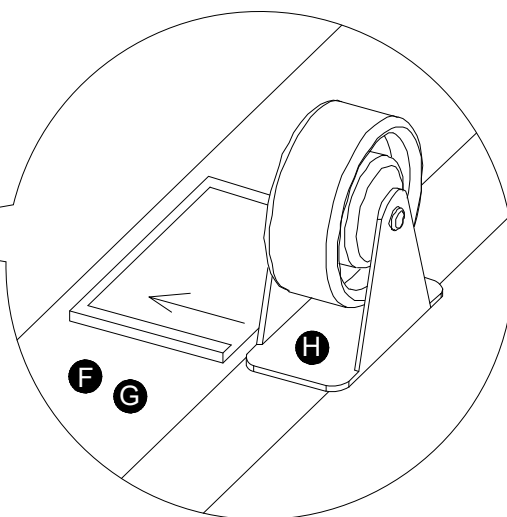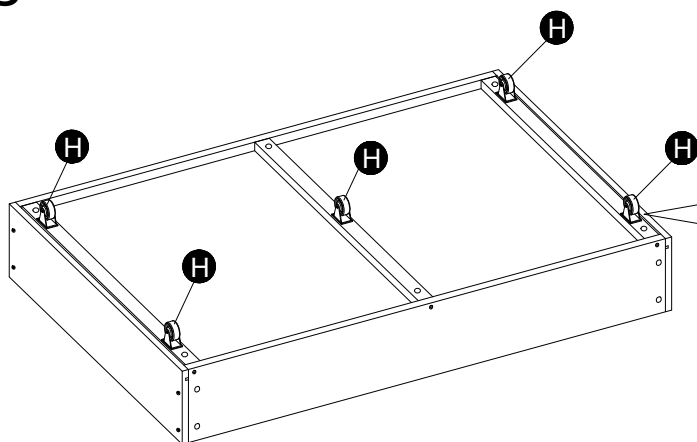

14

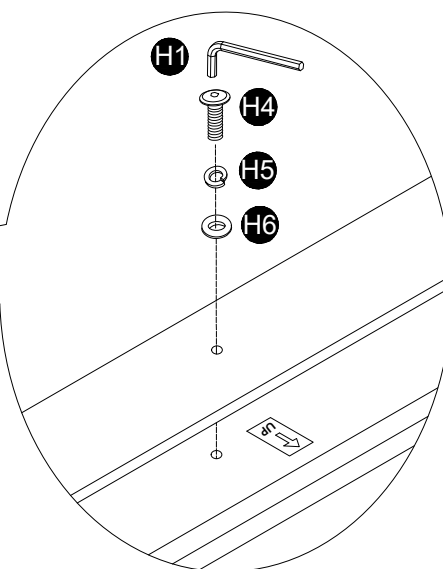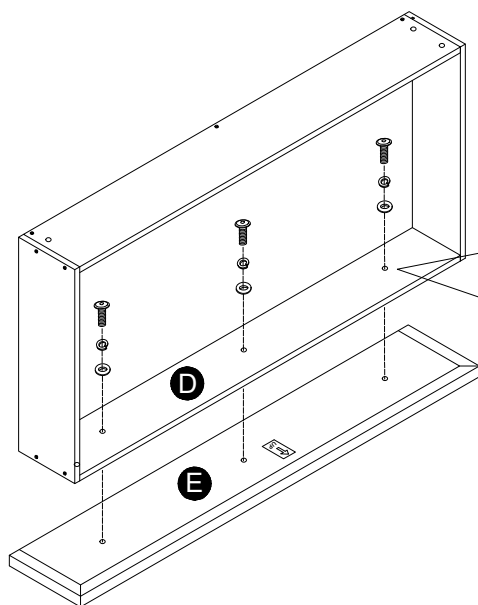

**Job Complete !**

*In the interest of our environment please dispose of all packaging thoughtfully.*