
Vanity Table

Assembly Instructions -Please keep for future reference

N844P543239

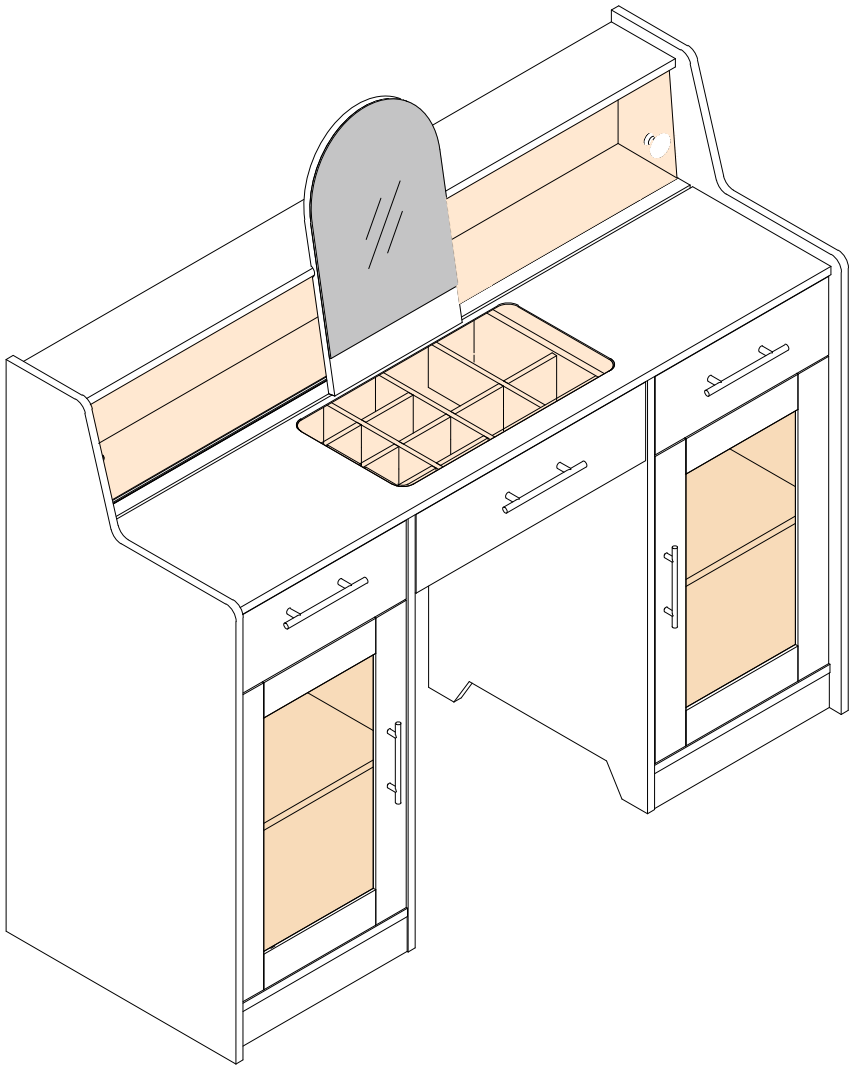

WARNING



This product is NOT a Clothing Storage Unit (CSU).

DO NOT use it for clothing storage.

Improper use may cause furniture tipover.


Important - Please read these Instructions fully before starting assembly

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

. Check you have all the components and tools listed on the following pages.
. Remove all fittings from the plastic bags and separate them into their groups.
. Keep children and animals away from the work area, small parts could choke if swallowed.
. Make sure you have enough space to layout the parts before starting.

. During assembly do not stand or put weight on the product, this could cause damage.
. Assemble the item as close to its final position (in the same room) as possible.
. Assemble on a soft level surface to avoid damaging the unit or your floor.
. Parts of the assembly will be easier with 2 people.

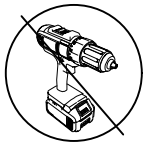

. To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and malntenance

. Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

. From time to time check that there are no loose screws on this unit.

.This product should not be discarded with household waste. Take to your local authorlty waste disposal centre.

Handy Hints

. Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.

. Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning -
please follow these Instructlons

To help prevent product toppling over please follow the below steps:-









Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type


Components -Fittings

Please check you have all the panels llsted below

Note:The quantities below are the correct amount to complete the assembly. in some cases, more fittings may be supplied than are required.

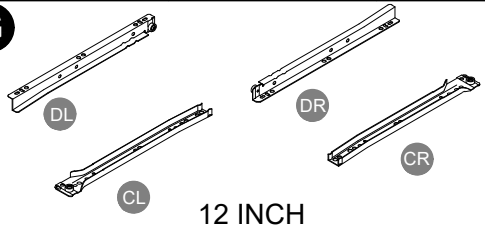A  Cam bolt x 74+2	B  Cam lock x 74+2	C  M5*45mm Screw x 8+1	D  Ø6*30mm Dowel x 32+3	E  M4*35mm Screw x 12+1	F  Hinge x 4
G  12 INCH x3			H  M3.5*12mm Screw x 56+2	I  M3.5*14mm Screw x 4+1	J  x 1
K  x 2	L  Nail x 12+1	M  M3*16mm Screw x 12+1	N  Nail Leg x8+2+1	O  Handle screw x 12	P  Handle x 2
Q  Handle x 5	R  Shelf Support Pin x 8	S  S1 L Bracket x 2  S2 M4*12mm Screw x 2  S3 Wall plug x 2  S4 M4*35mm Screw x 2			T  Allen key M3 x1
U  Small Phillips screwdriver x 1					


Tools required

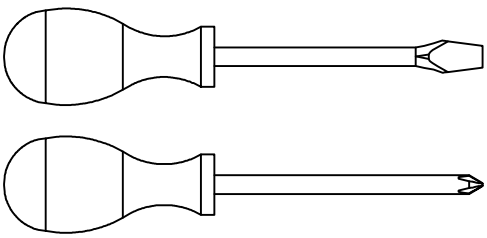


Not included in package
medium and large
Phillips screwdriver

Using Camlocks


Step 1
Connect the male camlockas diected in the assemblyinstructions using a scewdriver.

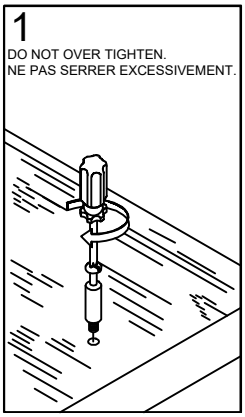


Step 2
Push the male camlockinto the entry hole.

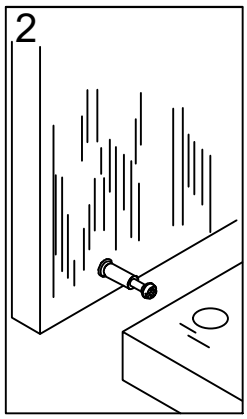

Step 3
Insert the female camlock asshown in the instruction. Note:ensure that the arowon the top of the camlock points towards the entry holefor the male camlock.

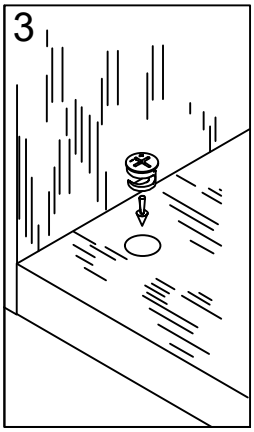
















Step 4
Turn the female camlock clockwise with a screwdriver. You should feel a click when the camlock is locked in place The joint is now secure

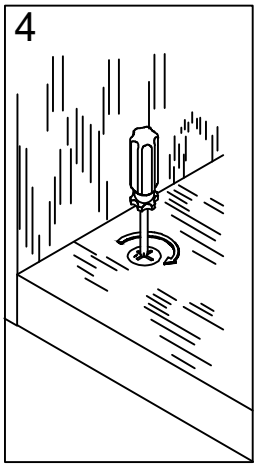

Components - Parts

Please check you have all the panels listed below.Please note that there are 1 boxes of this product.
















N844P543239

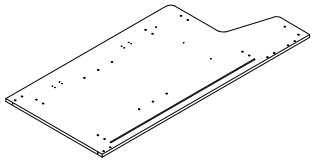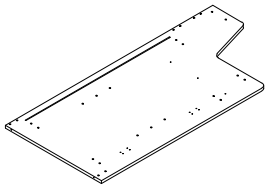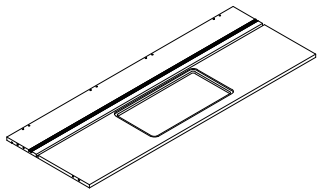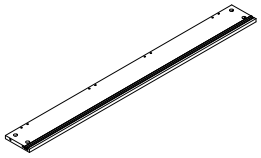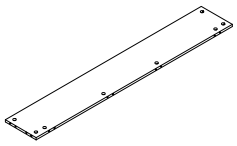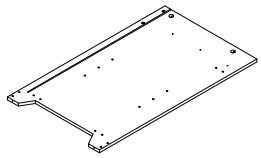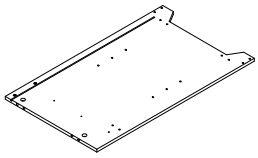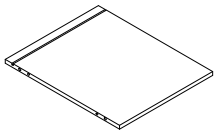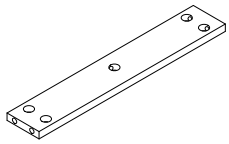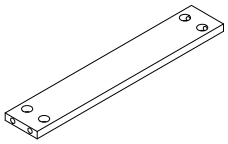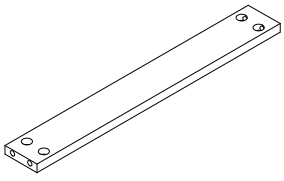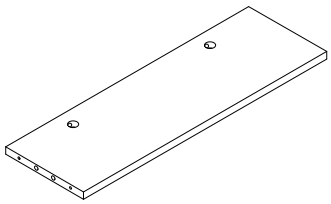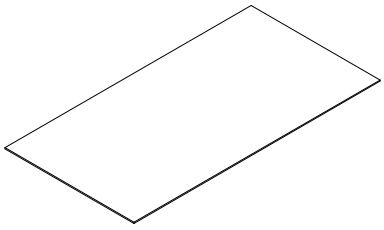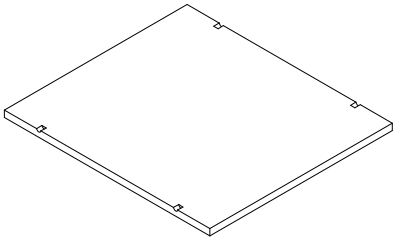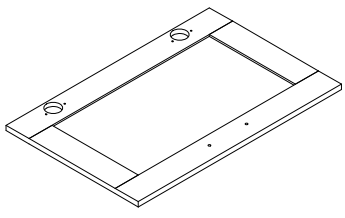1  1PC	2  1PC	3  1PC
4  1PC	5  1PC	6  1PC
7  1PC	8  2PCS	9  4PCS
10  2PCS	11  1PC	12  1PC
13  2PCS	14  2PCS	15  2PCS


Components - Parts

Please check you have all the panels listed below.Please note that there are 1 boxes of this product.


N844P543239

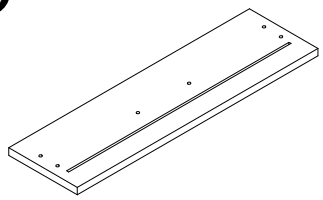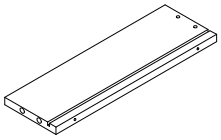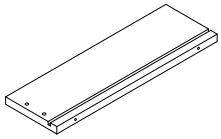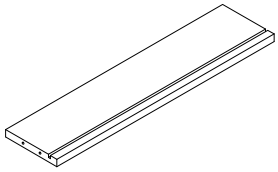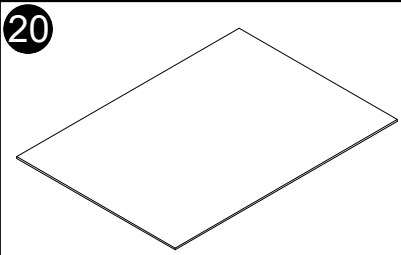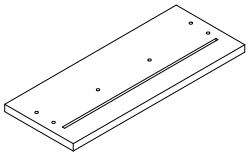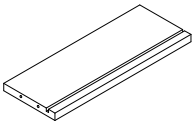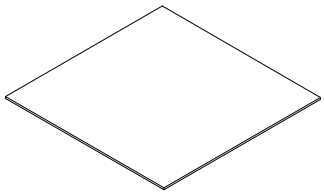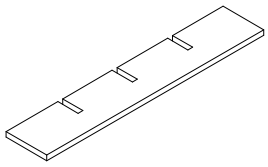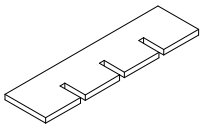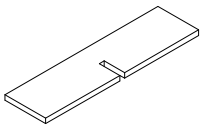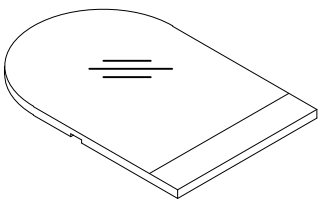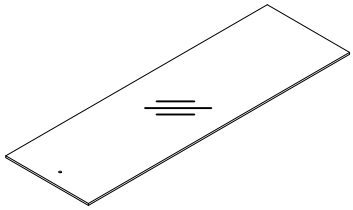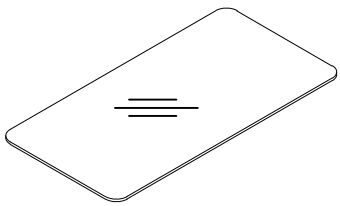
16  1PC	17  3PCS	18  3PCS
19  1PC	20  1PC	21  2PCS
22  2PCS	23  2PCS	24  1PC
25  2PCS	26  2PCS	27  1PC
28  1PC	29  2PCS	30  1PC


Assembly Instructions

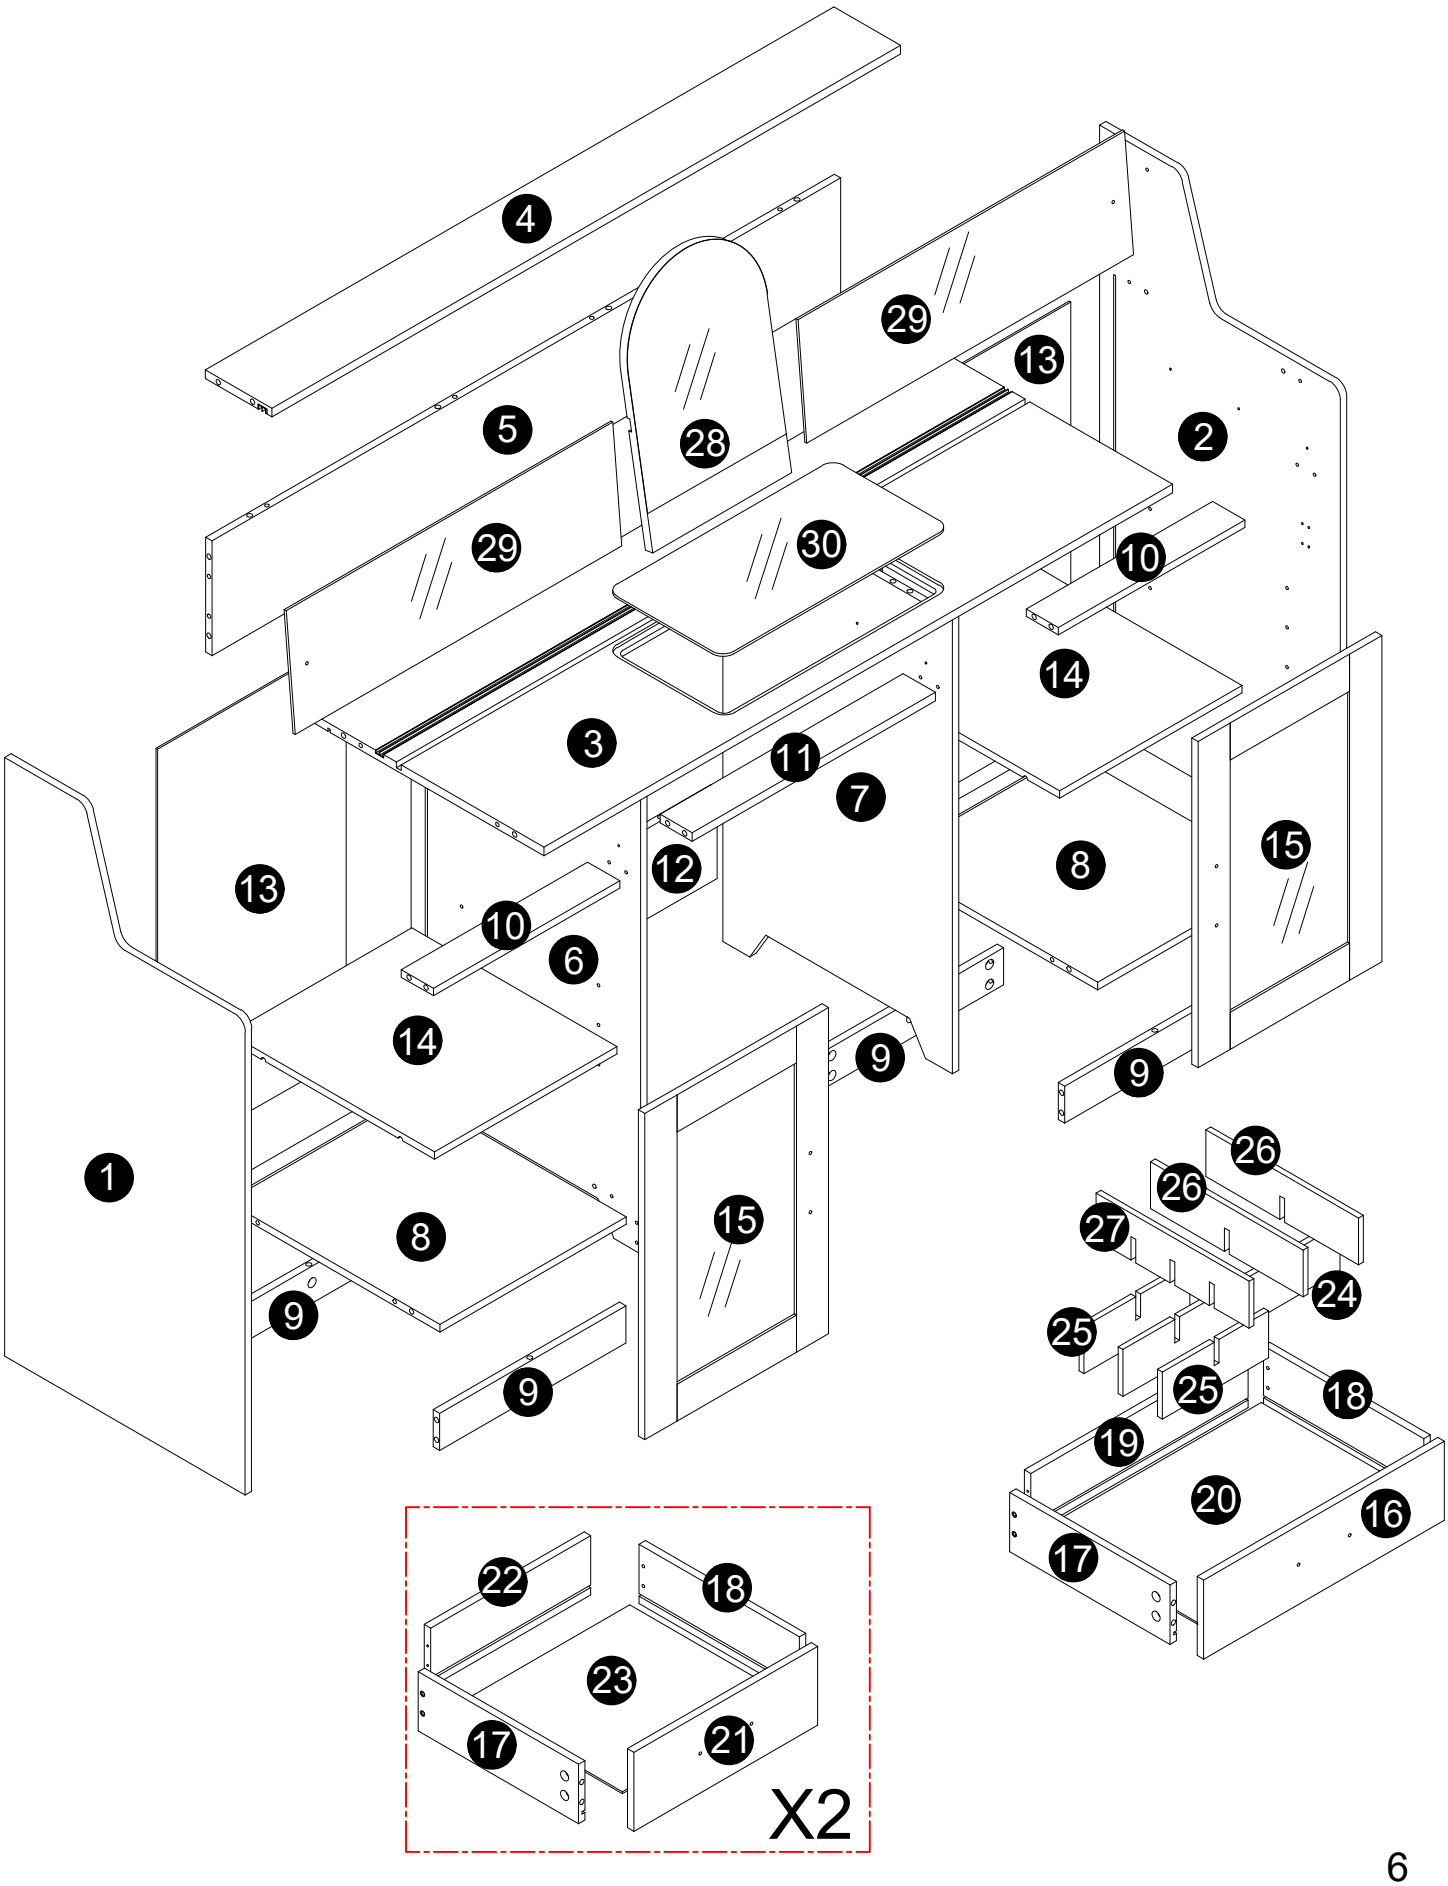

Step 1

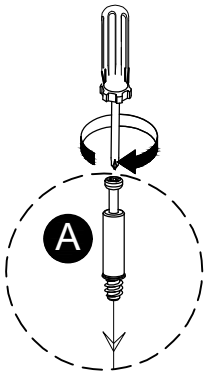


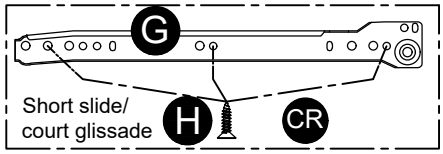




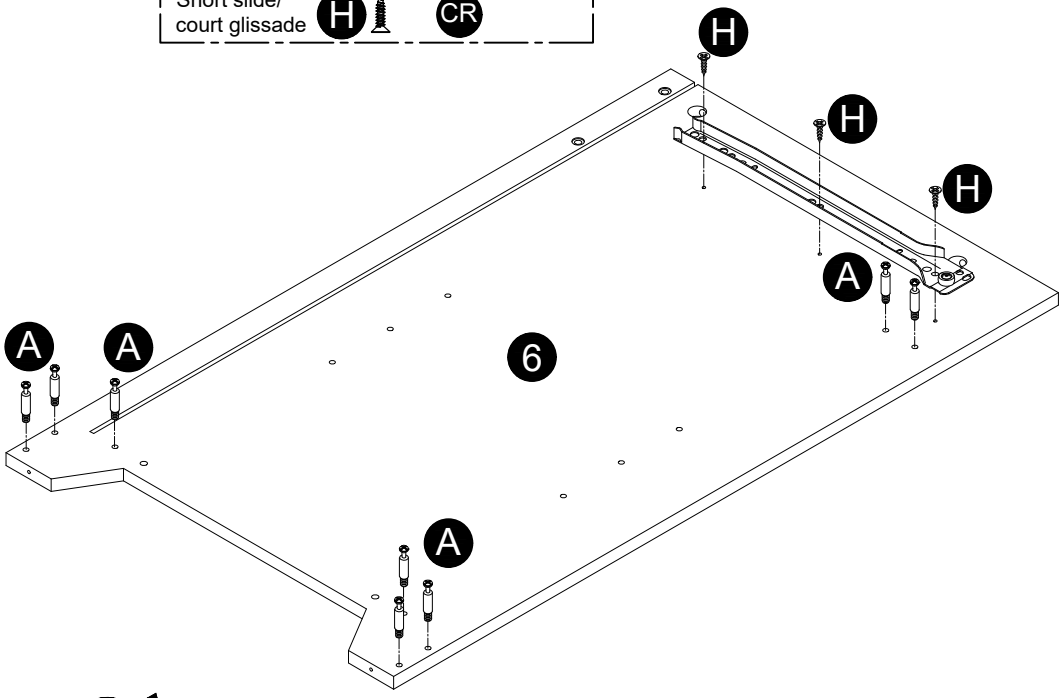





Turn over 180°
Need to install on both side

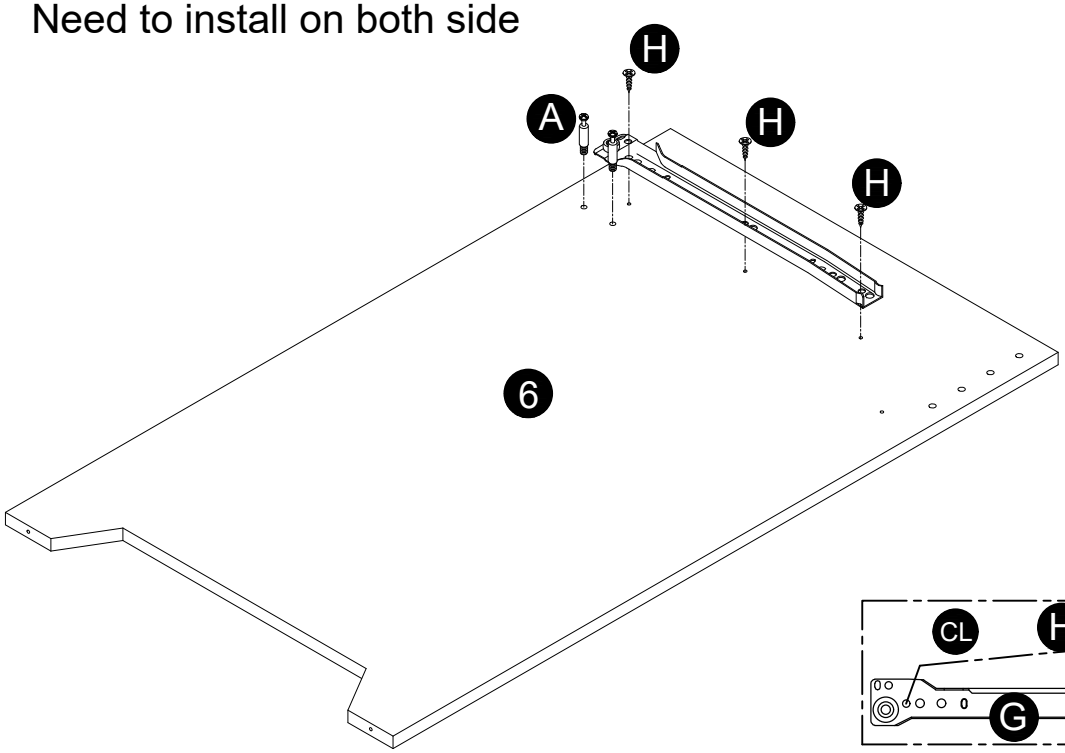


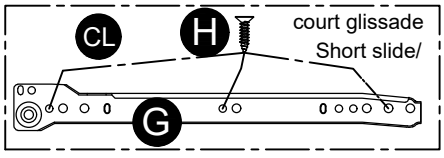

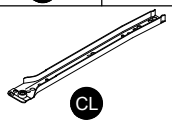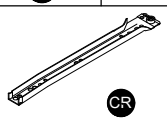A	x10	G	x1	G	x1	H	x6
							


Step 2



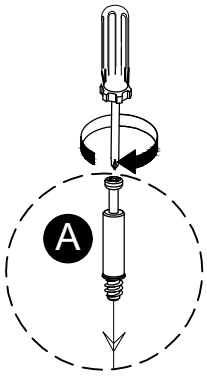


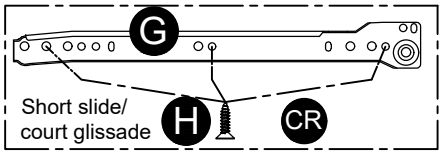





Turn over 180°
Need to install on both side

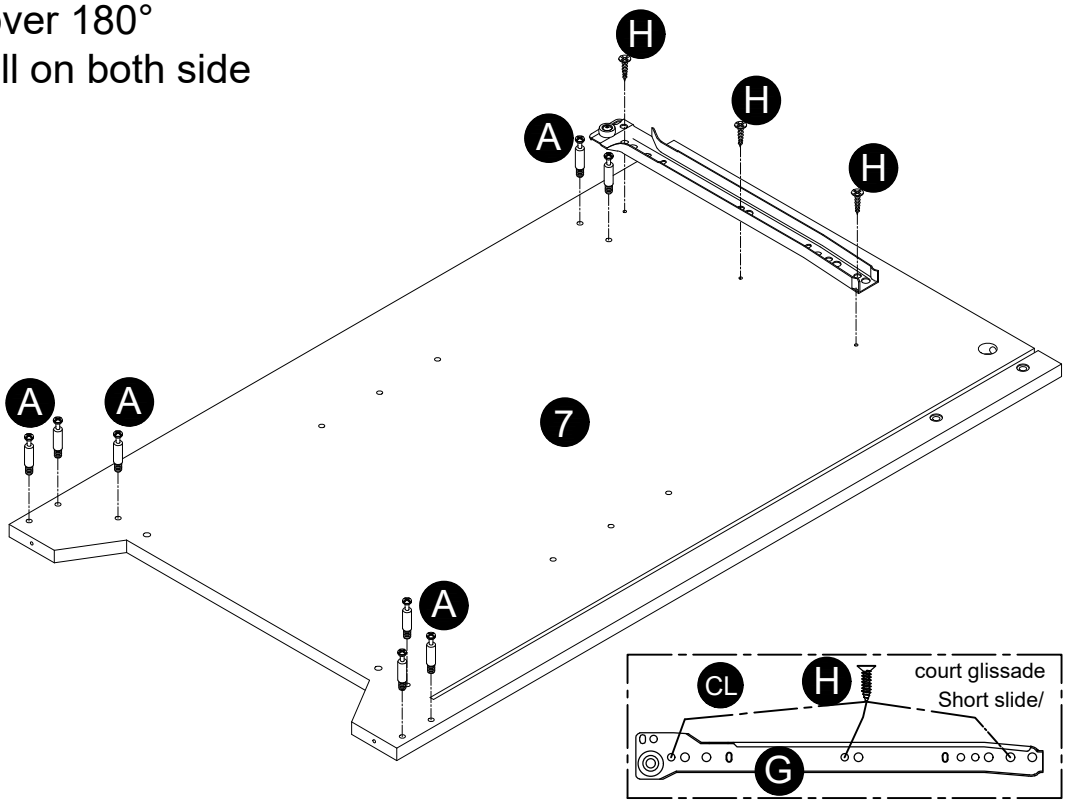

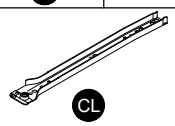A	x10	G	x1	G	x1	H	x6
							


Step 3

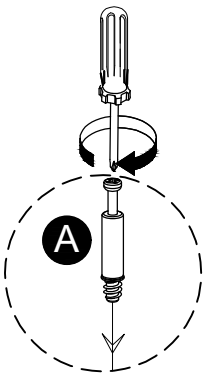

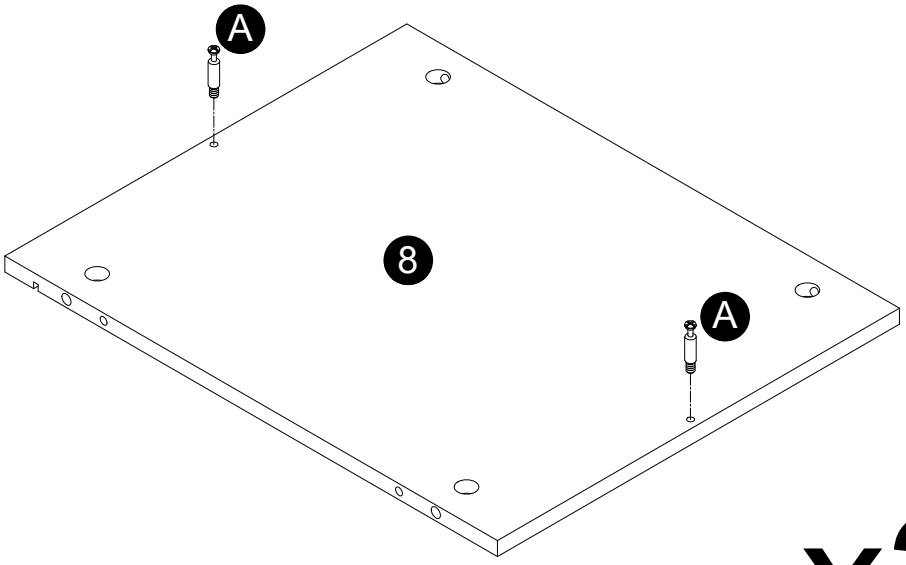


x2


A	x4



Step 4

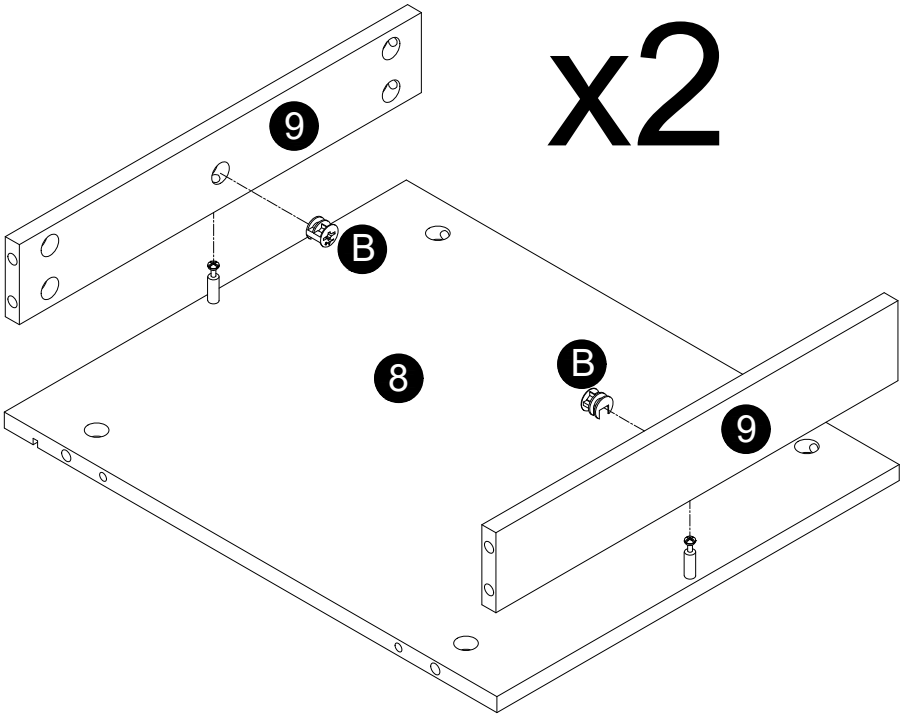


x2

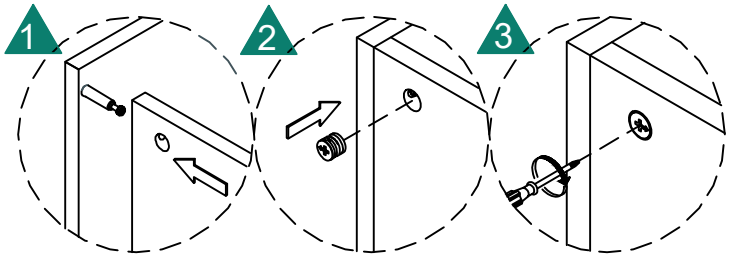

B	x4




Step 5

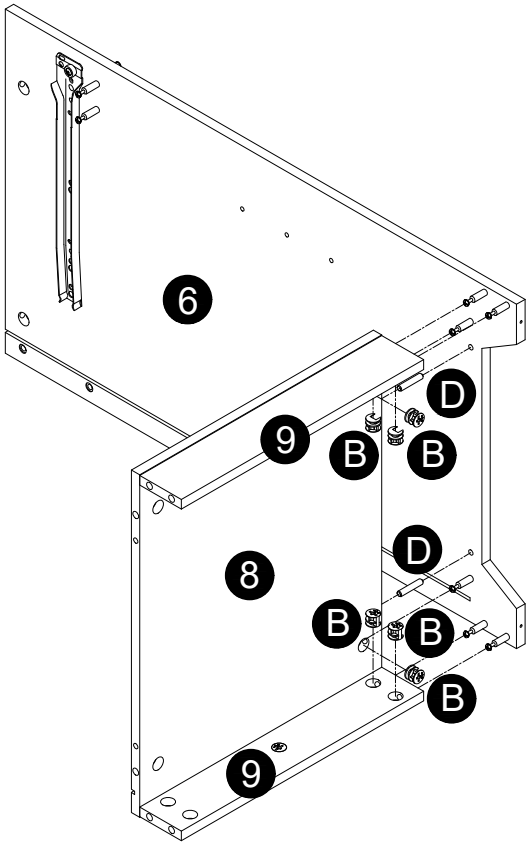


B	x6	D	x2
			

Step 6

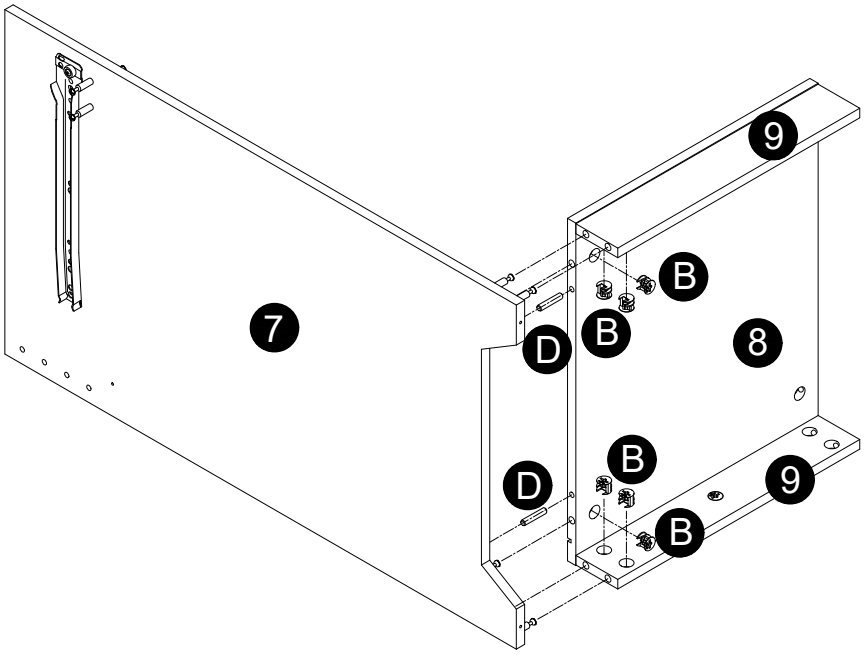


B	x6	D	x2
			


Step 7

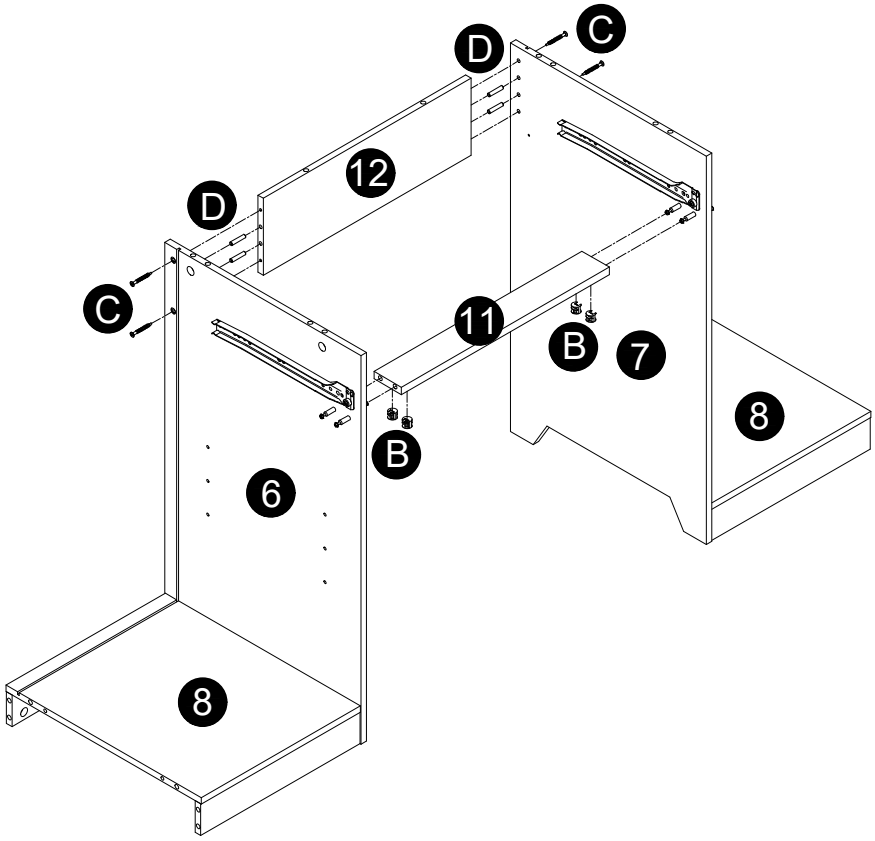


B	x4	D	x4	C	x4
					


Step 8

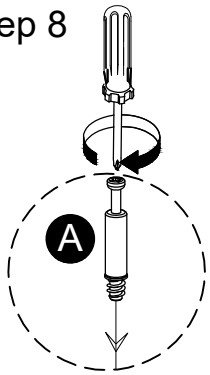

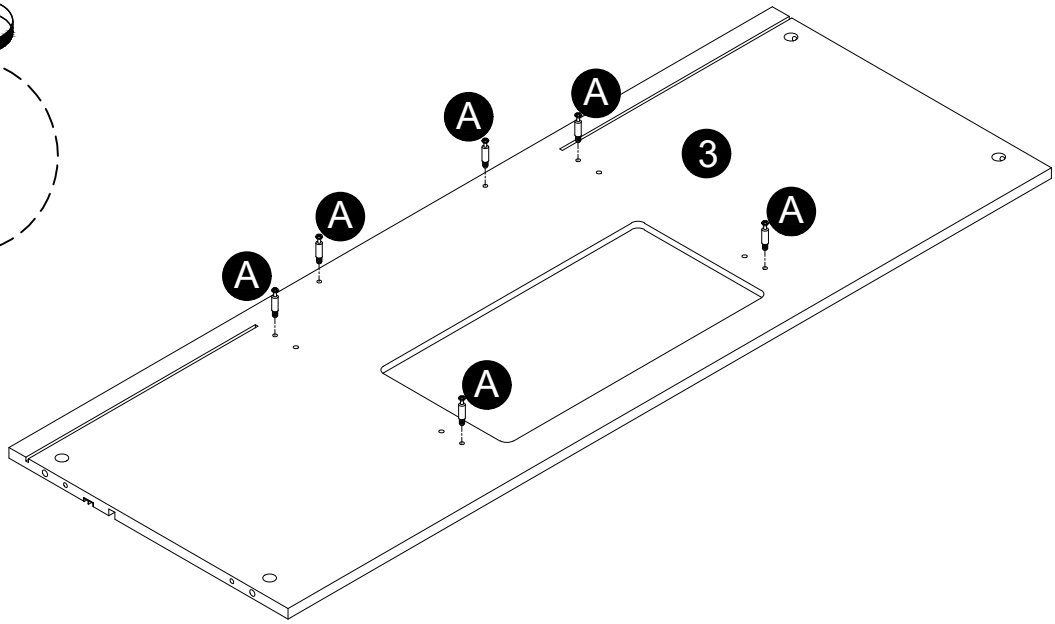


A	x6
	


Step 9

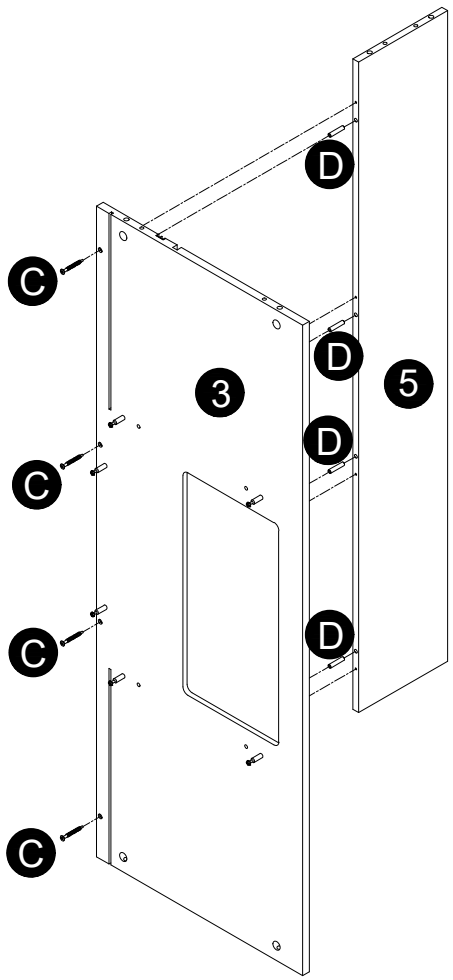


D	x4	C	x4
			

Step 10

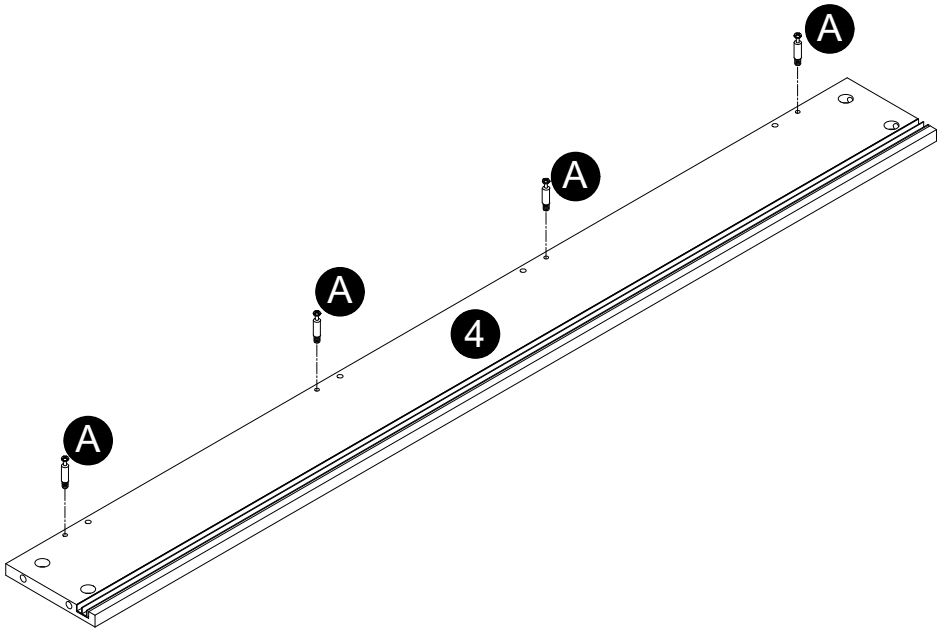


A	x4
	

Step 11

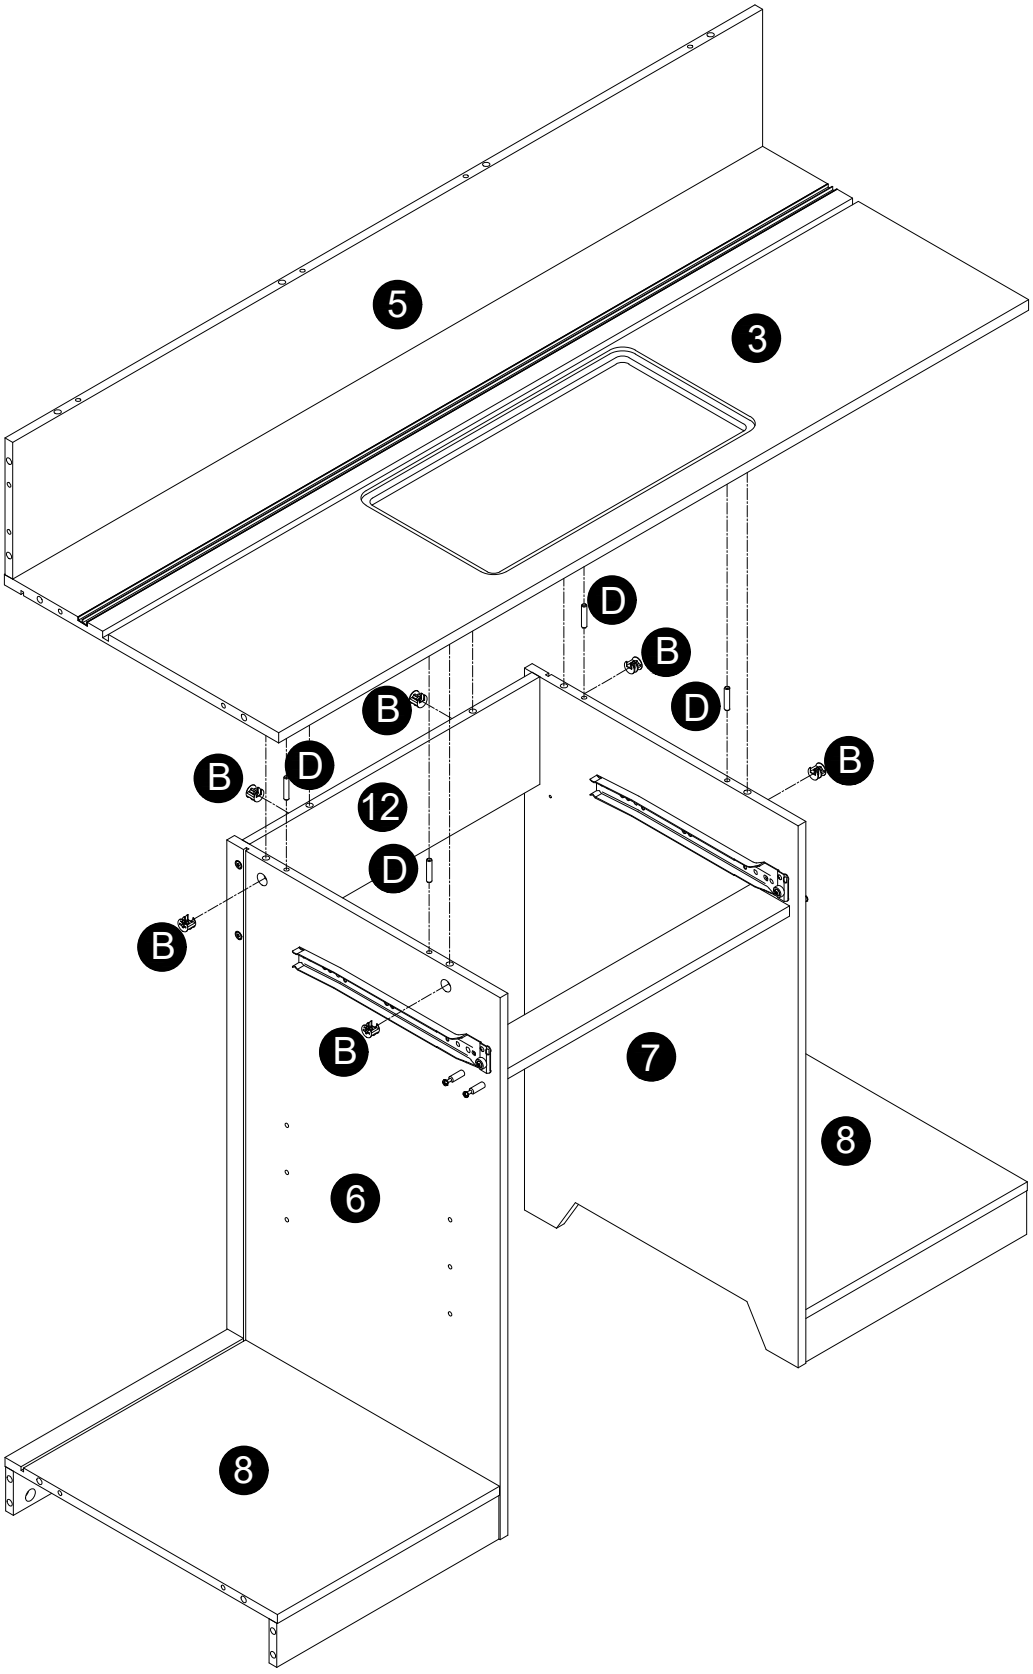


B	x6	D	x4
			

Step 12

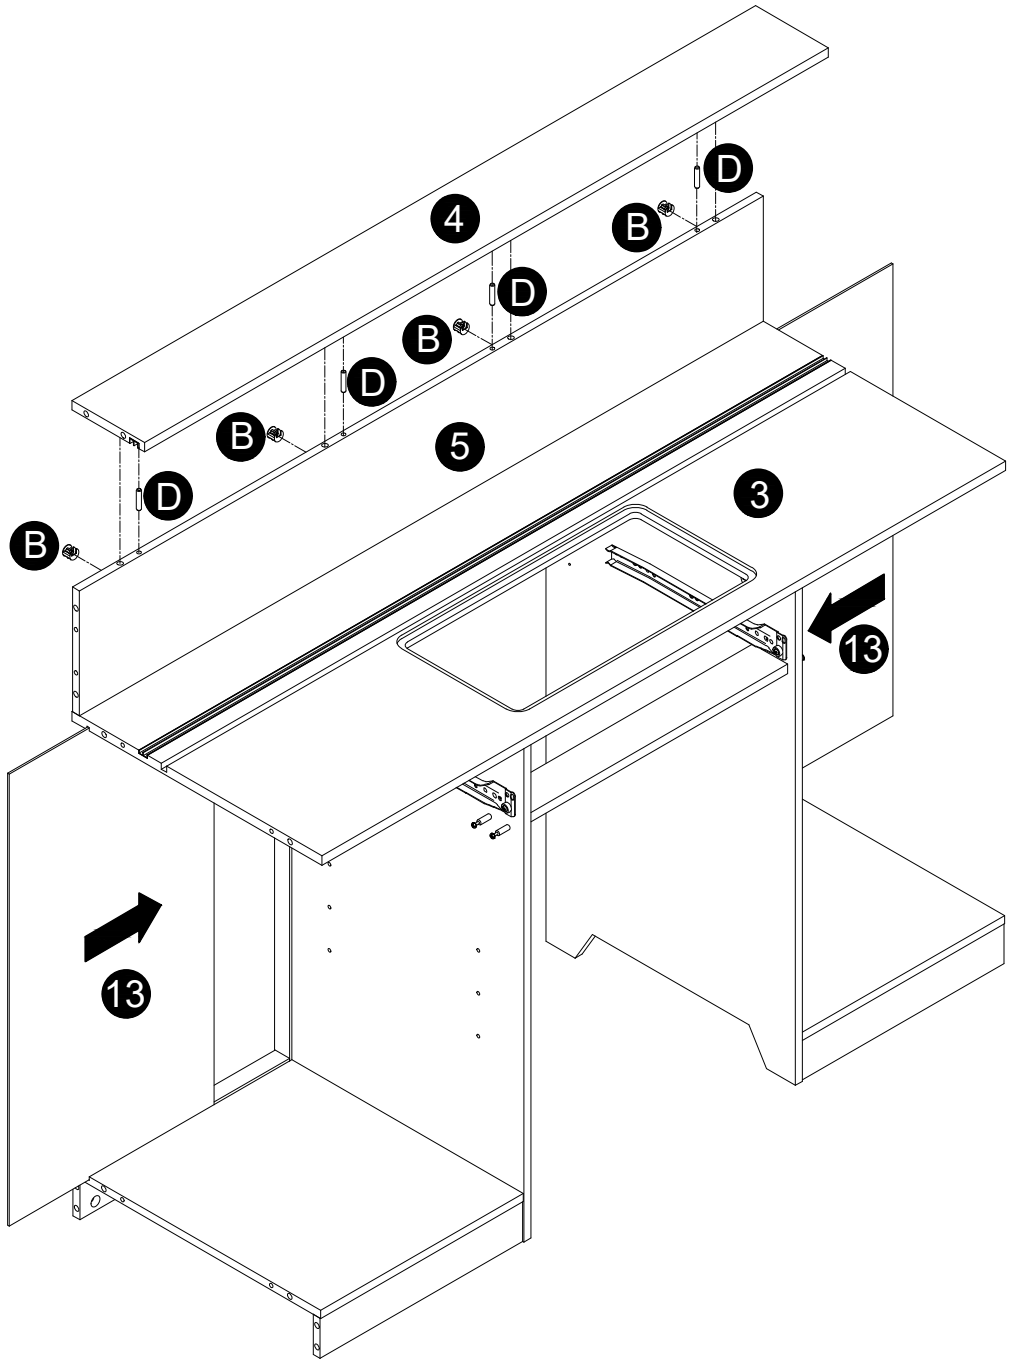

B	x4	D	x4
			


Step 13


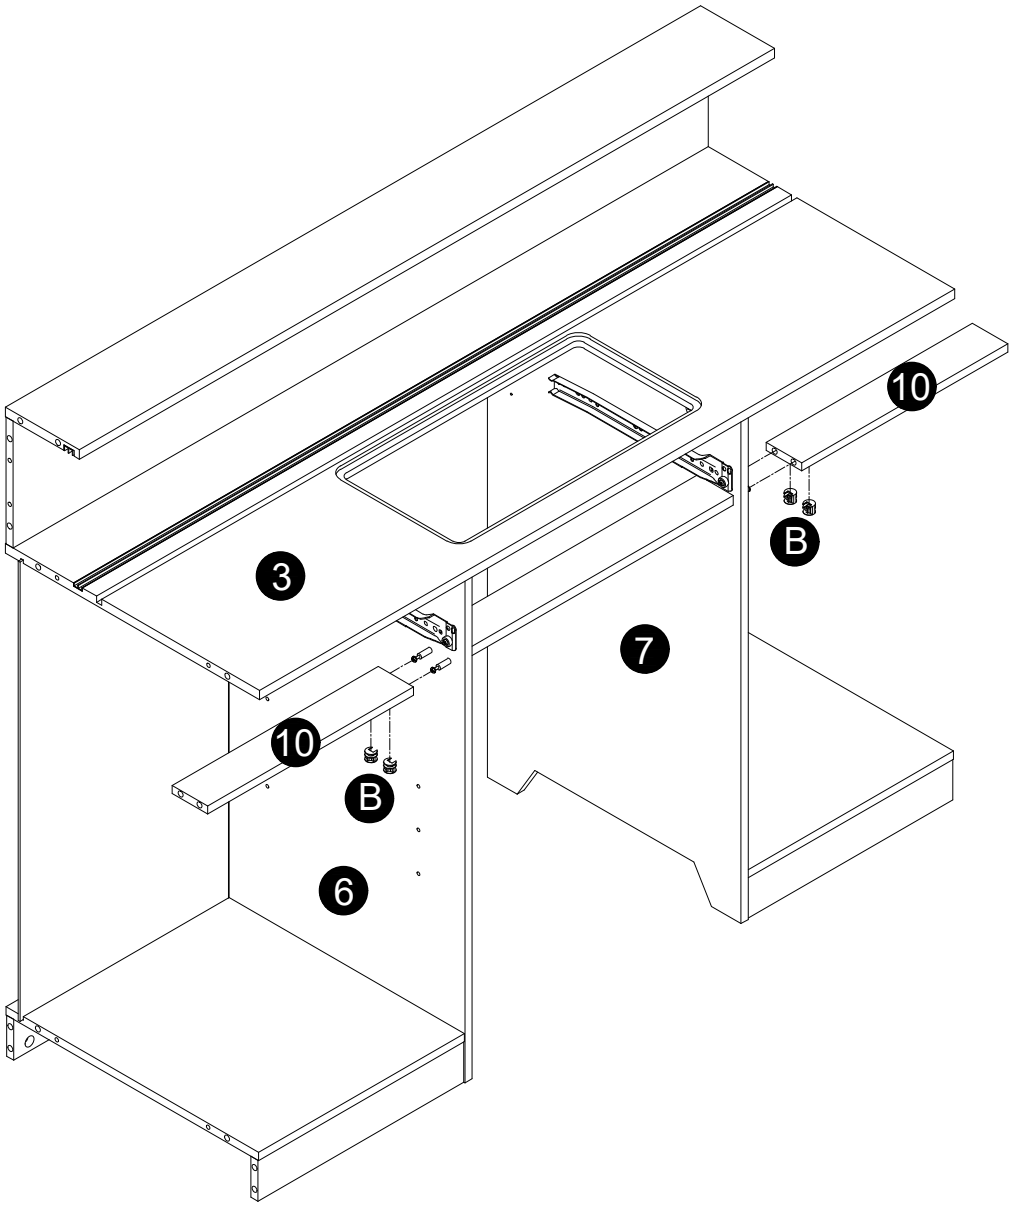


B	x4






Step 14

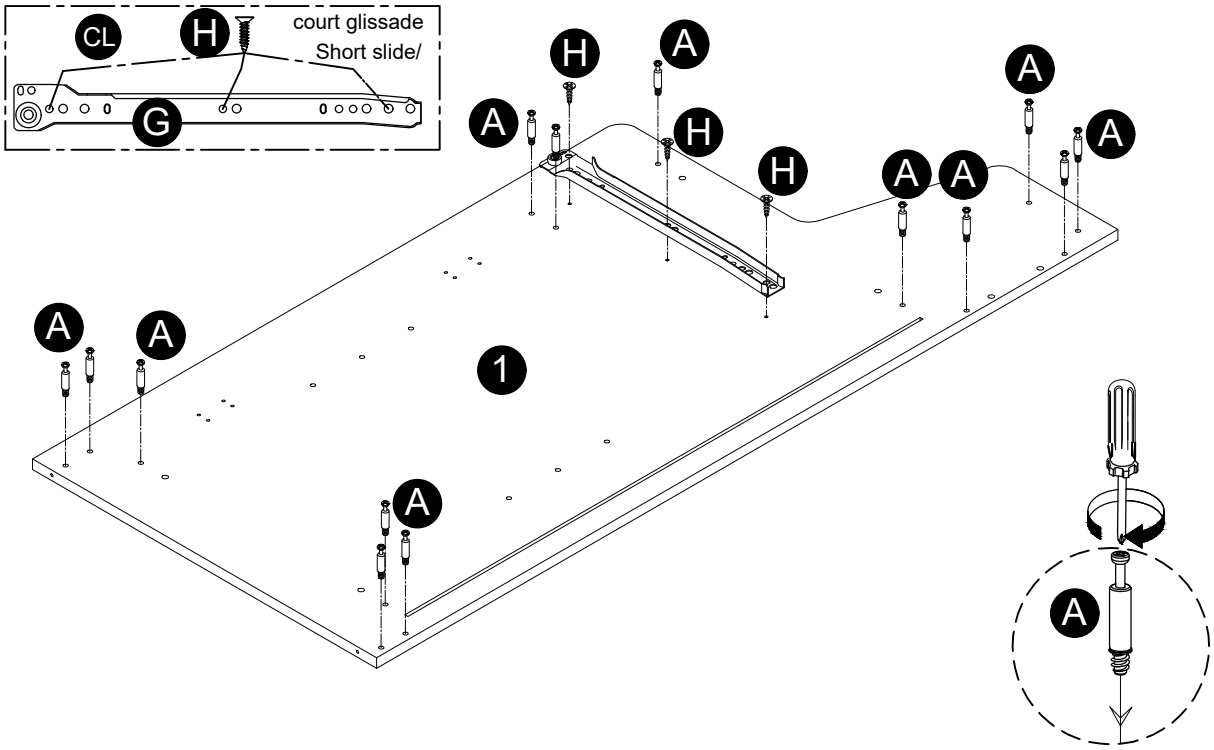

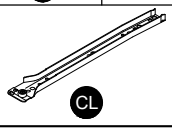
A	x14	G	x1	H	x3
					

Step 15

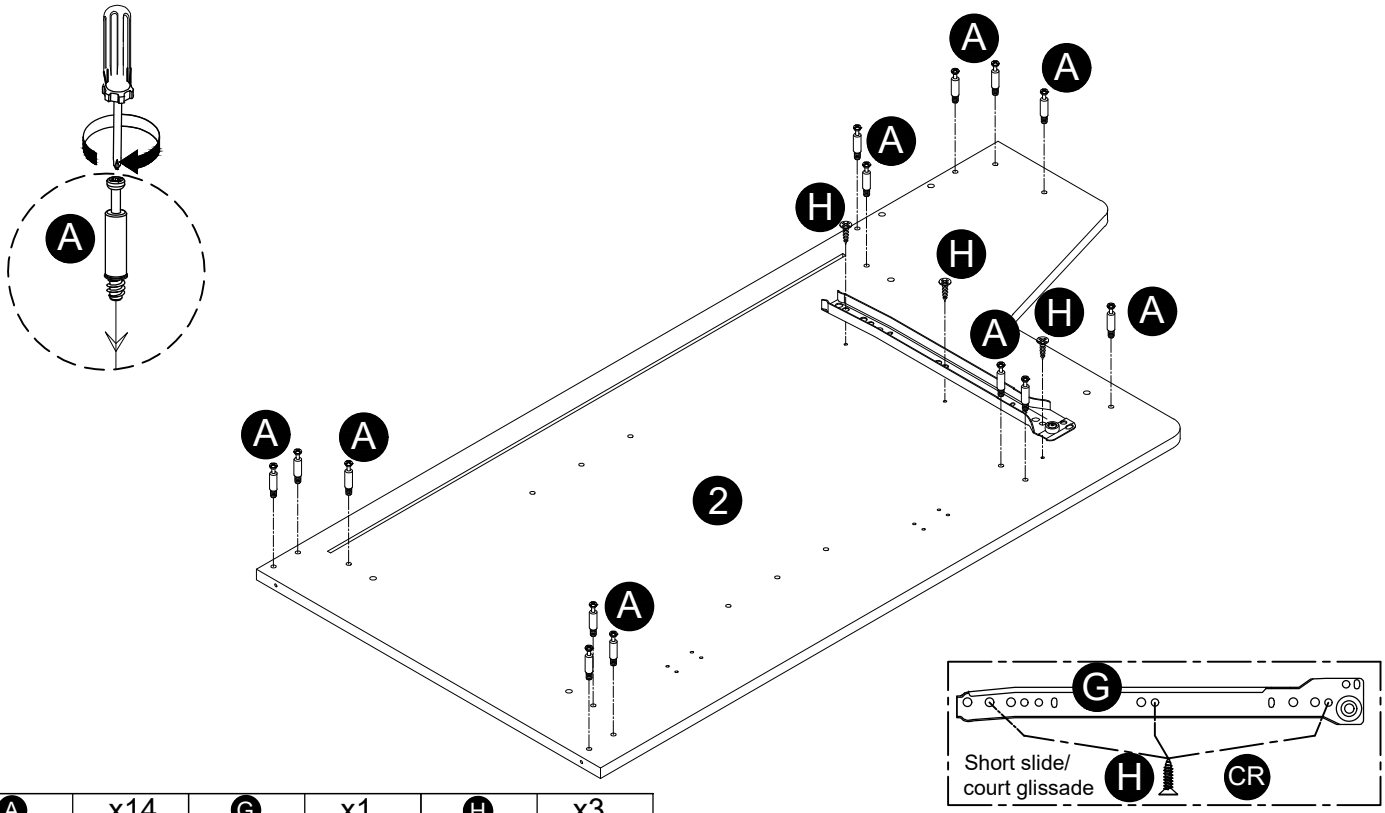

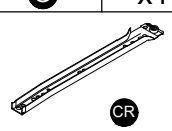
A	x14	G	x1	H	x3
					

Step 16

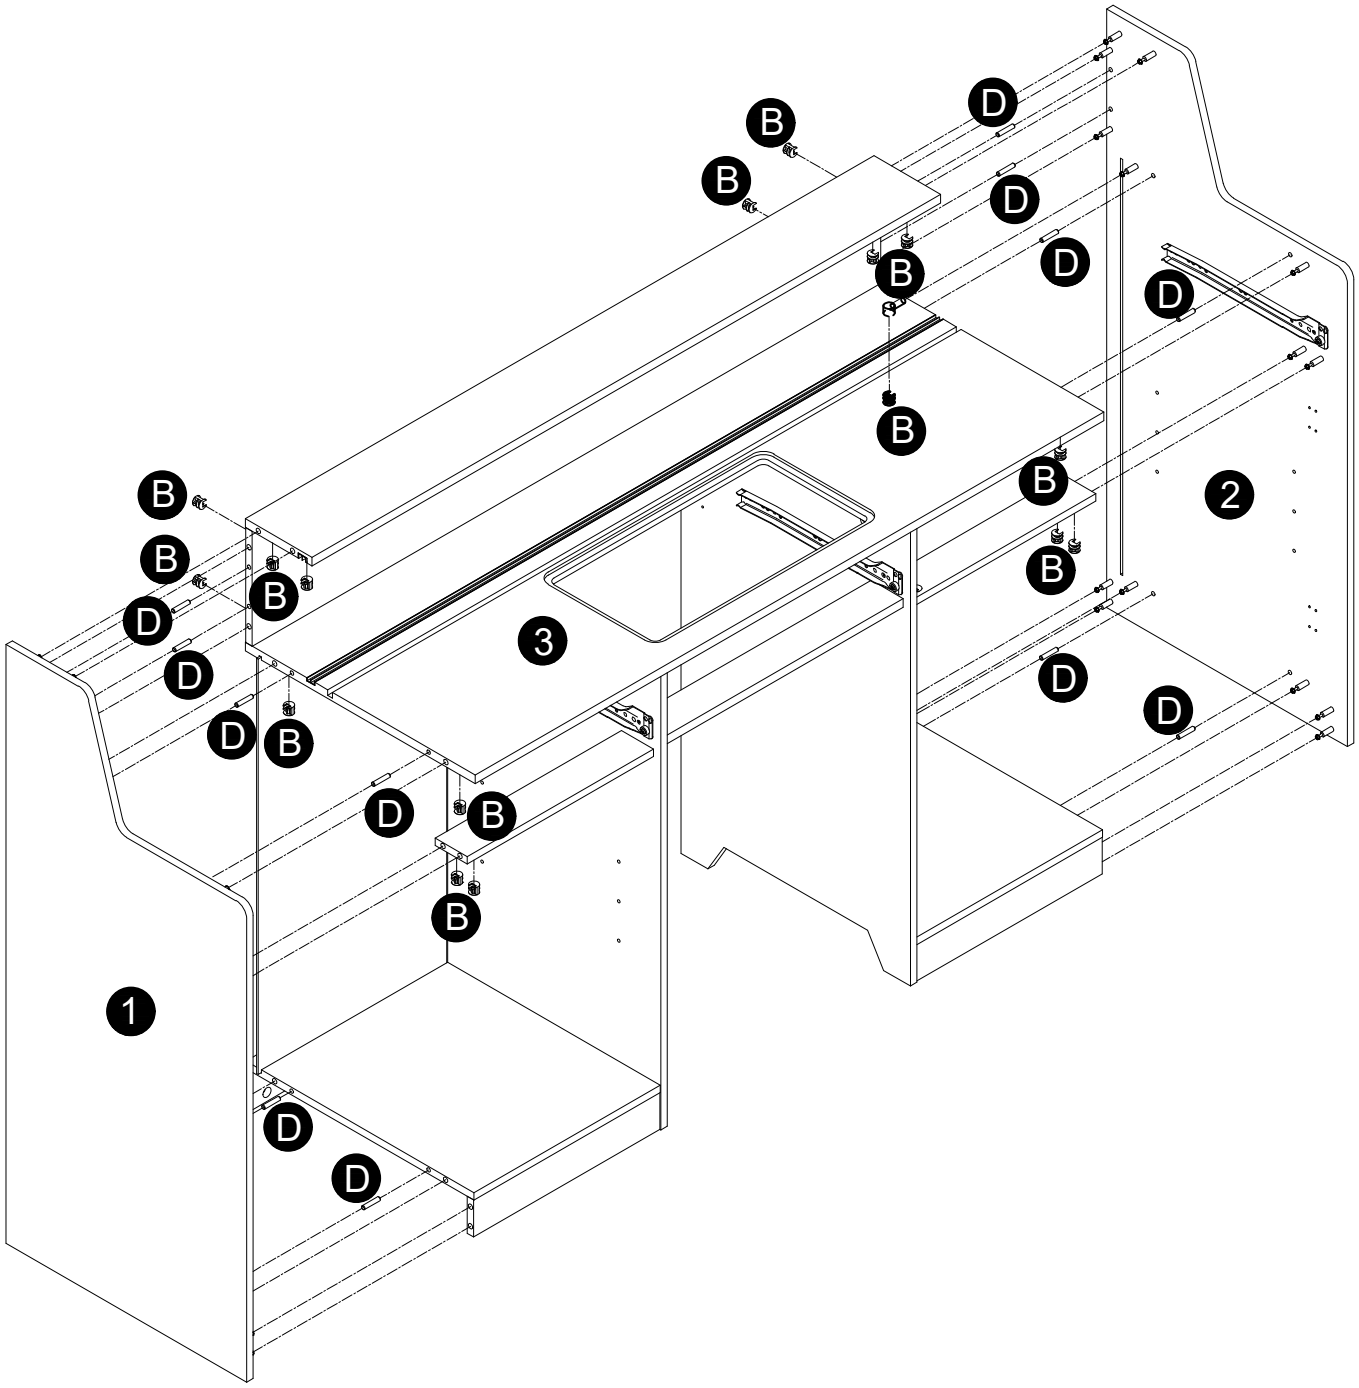


B	x16	D	x12
			

Step 17

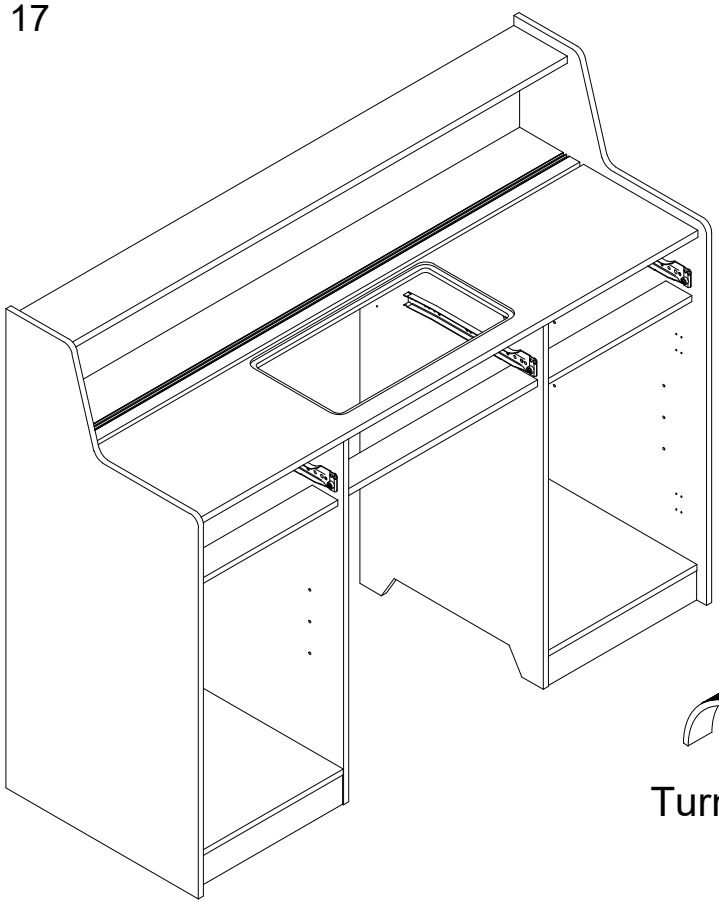


Turn over 90°

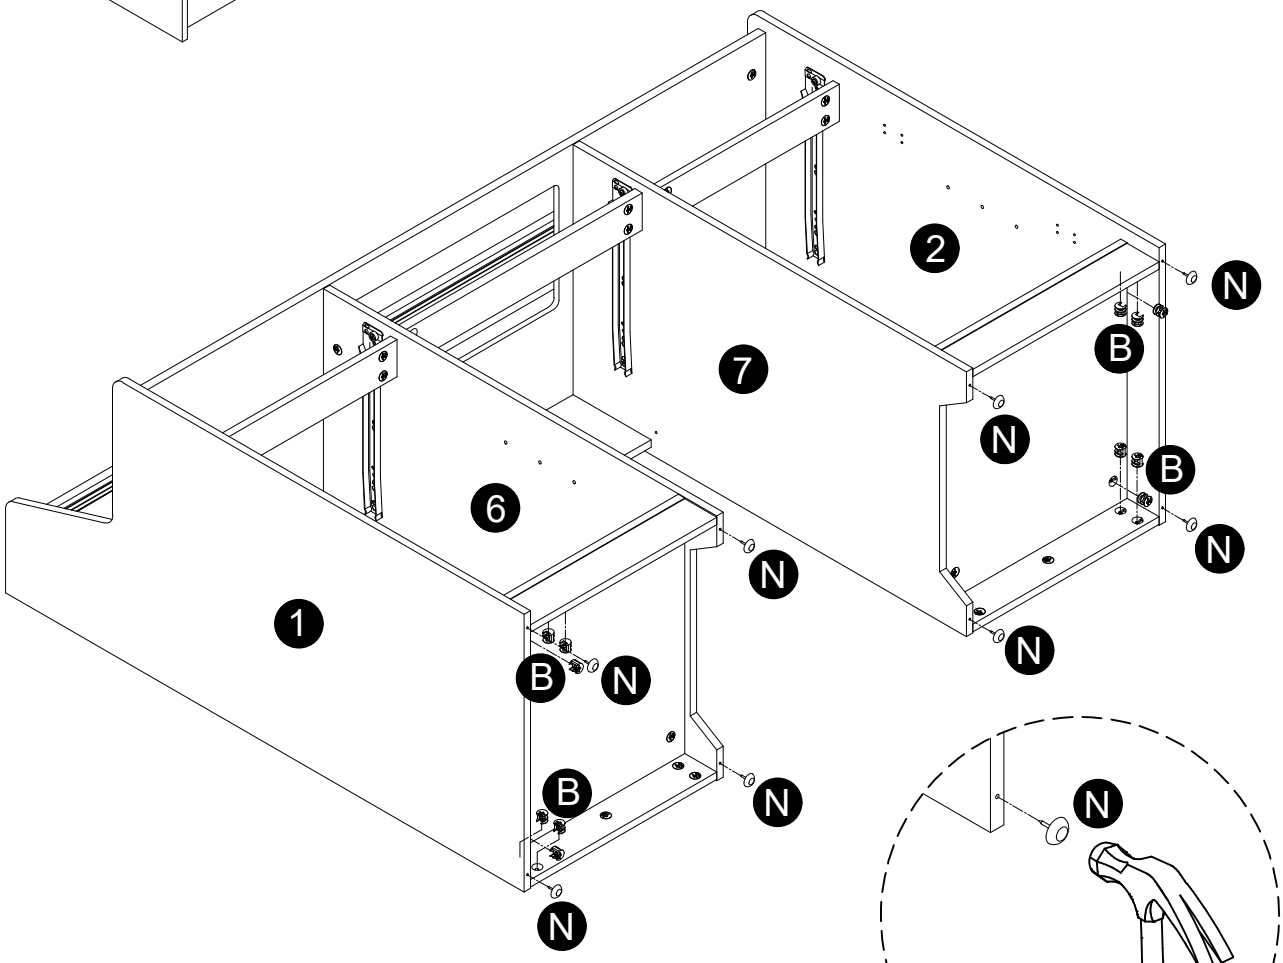



B	x12	N	x6
			

Step 18

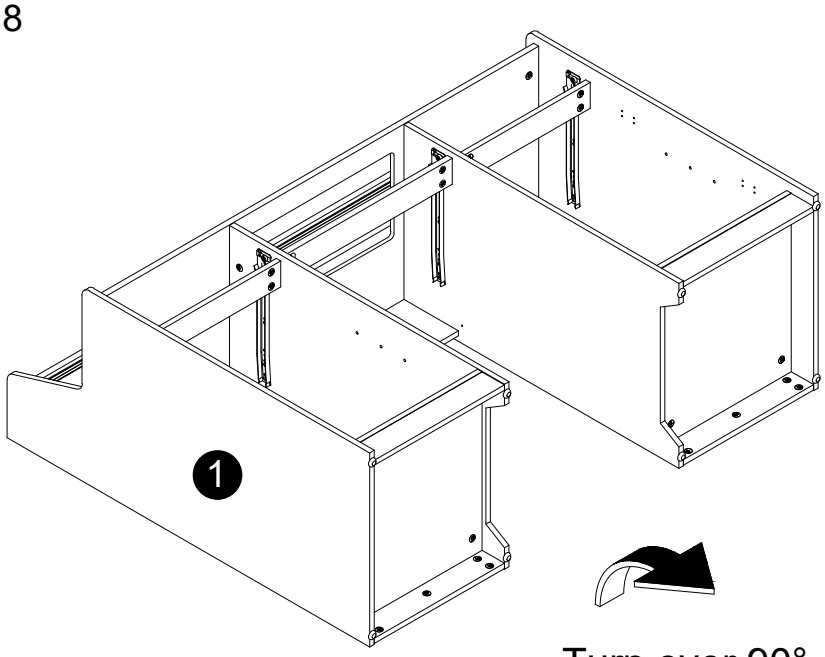



Turn over 90°

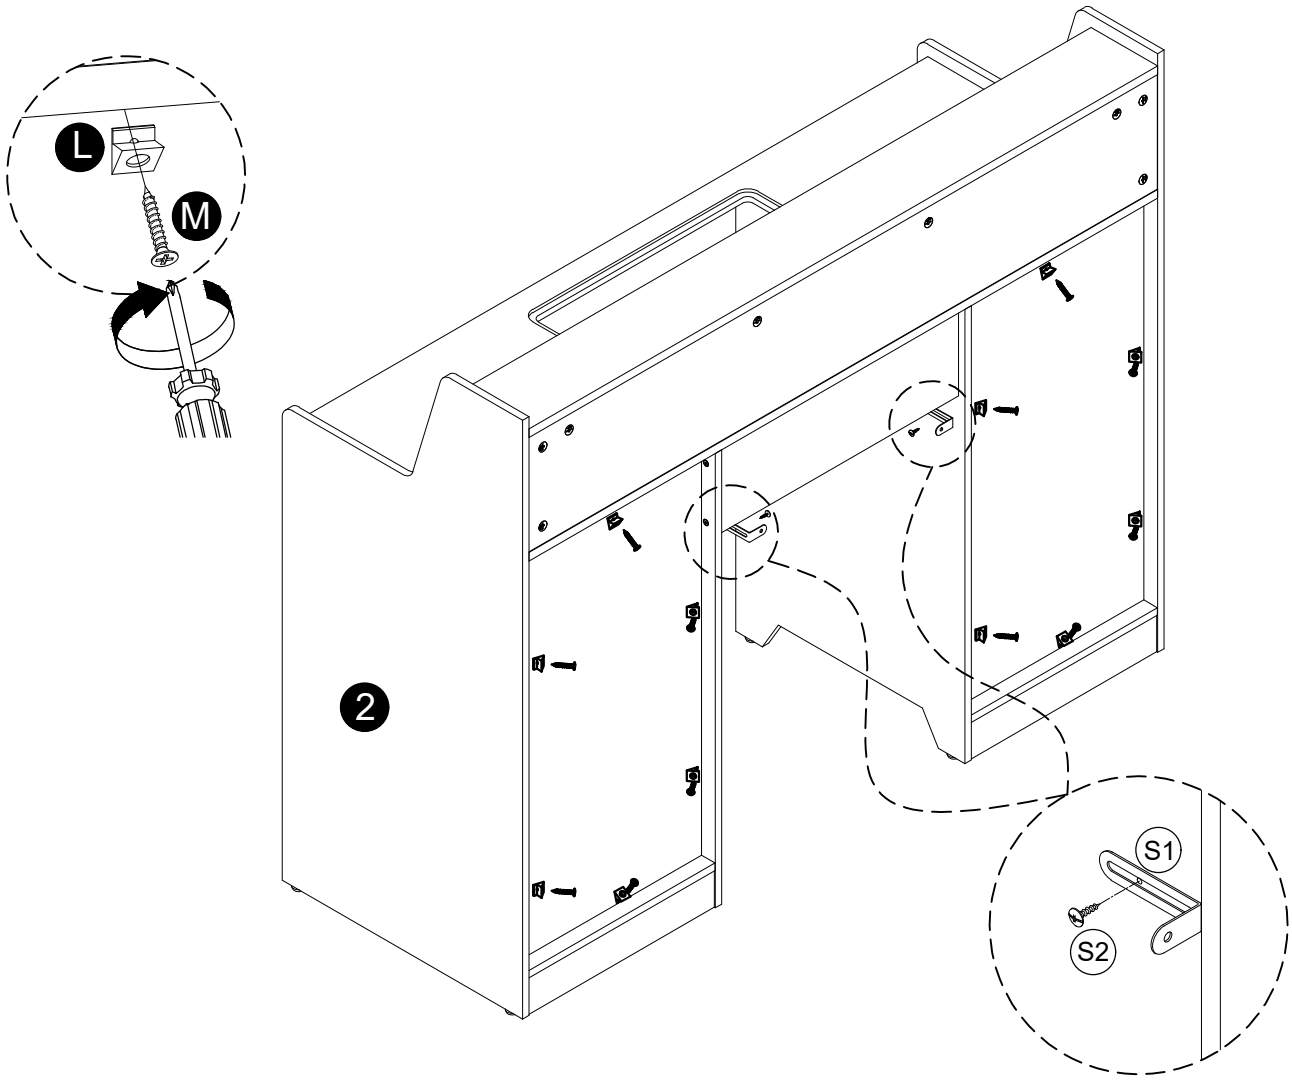


L	x12	M	x12	S1	x2	S2	x2
							

Step 19

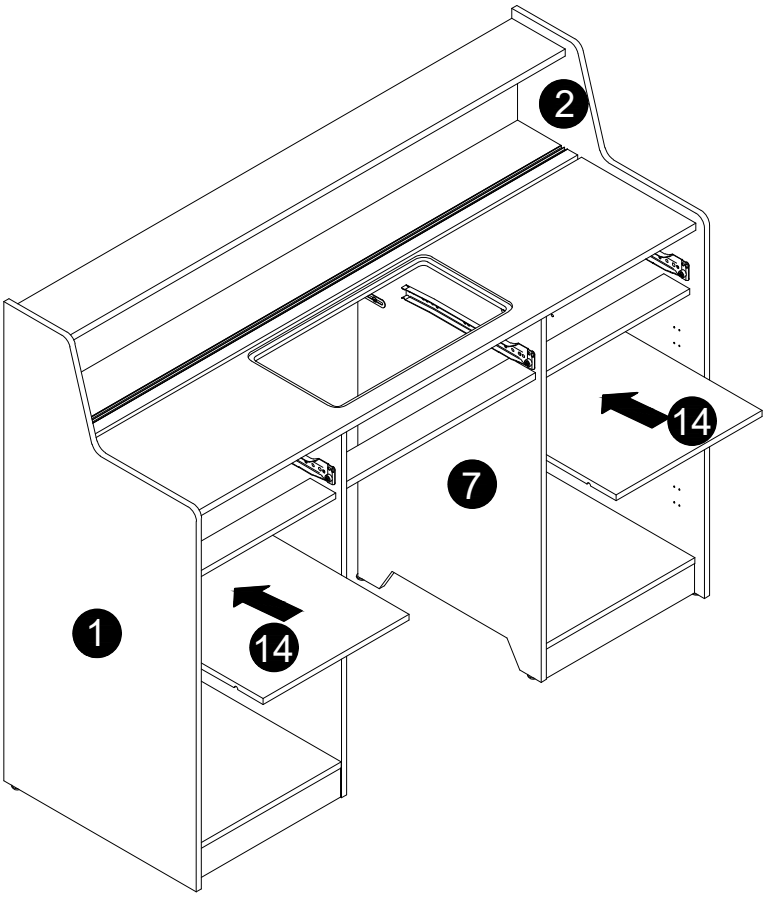

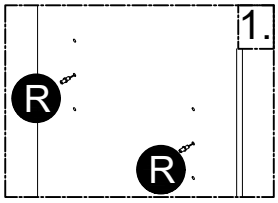


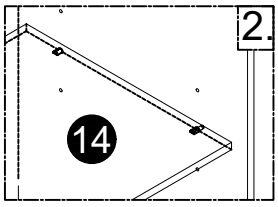


R	x8
	


Step 20


x2

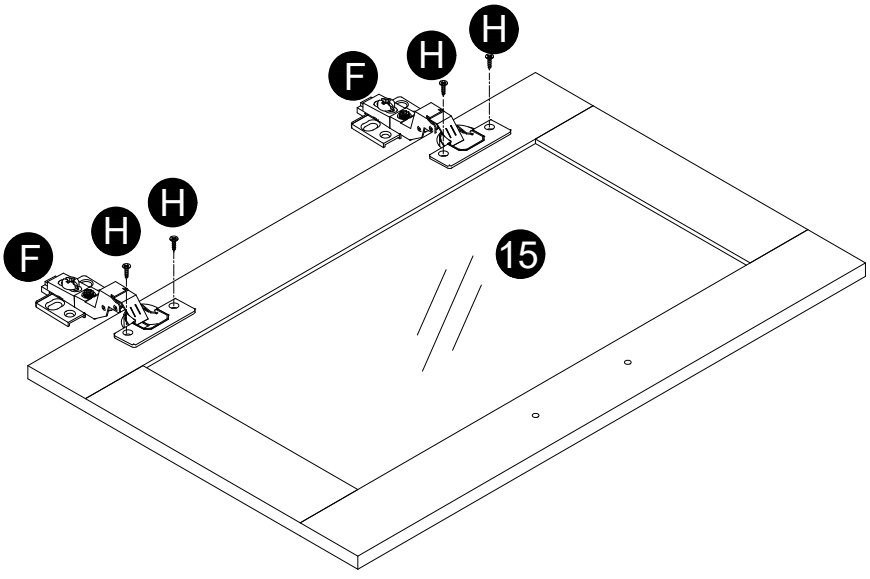

F	x4	H	x8
			


Step 21

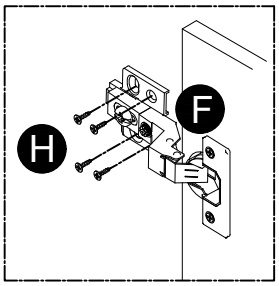


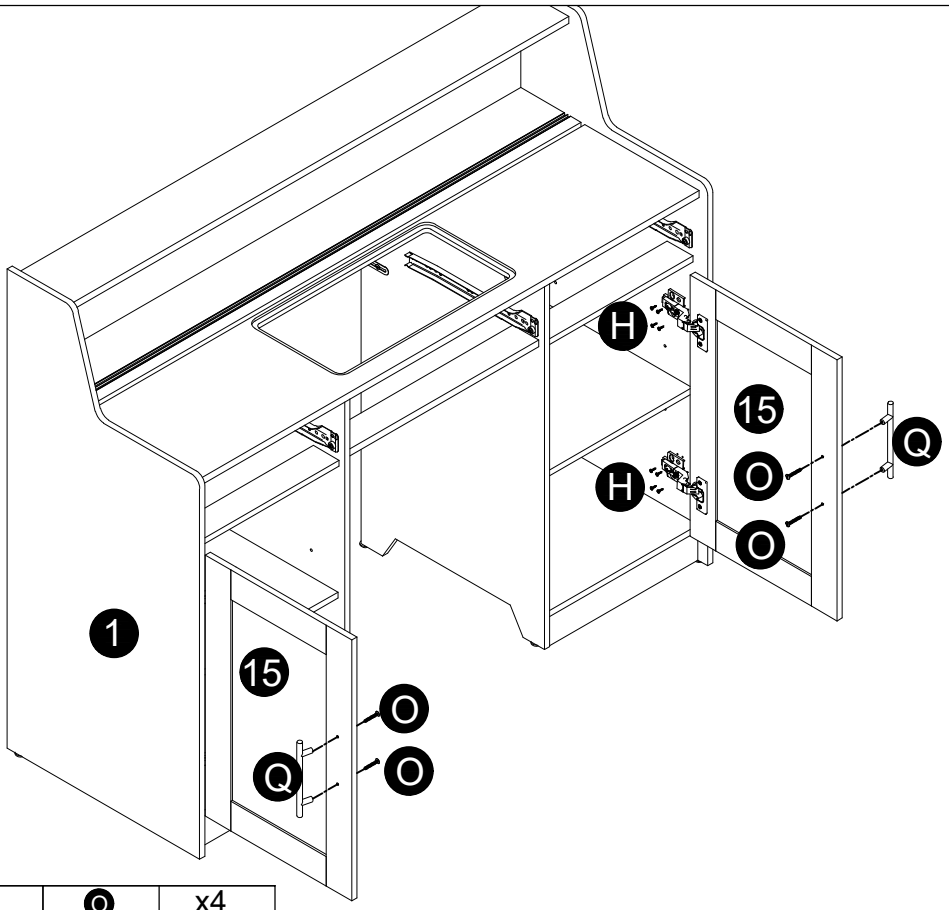

H	x16	Q	x2	O	x4
					


Step 22

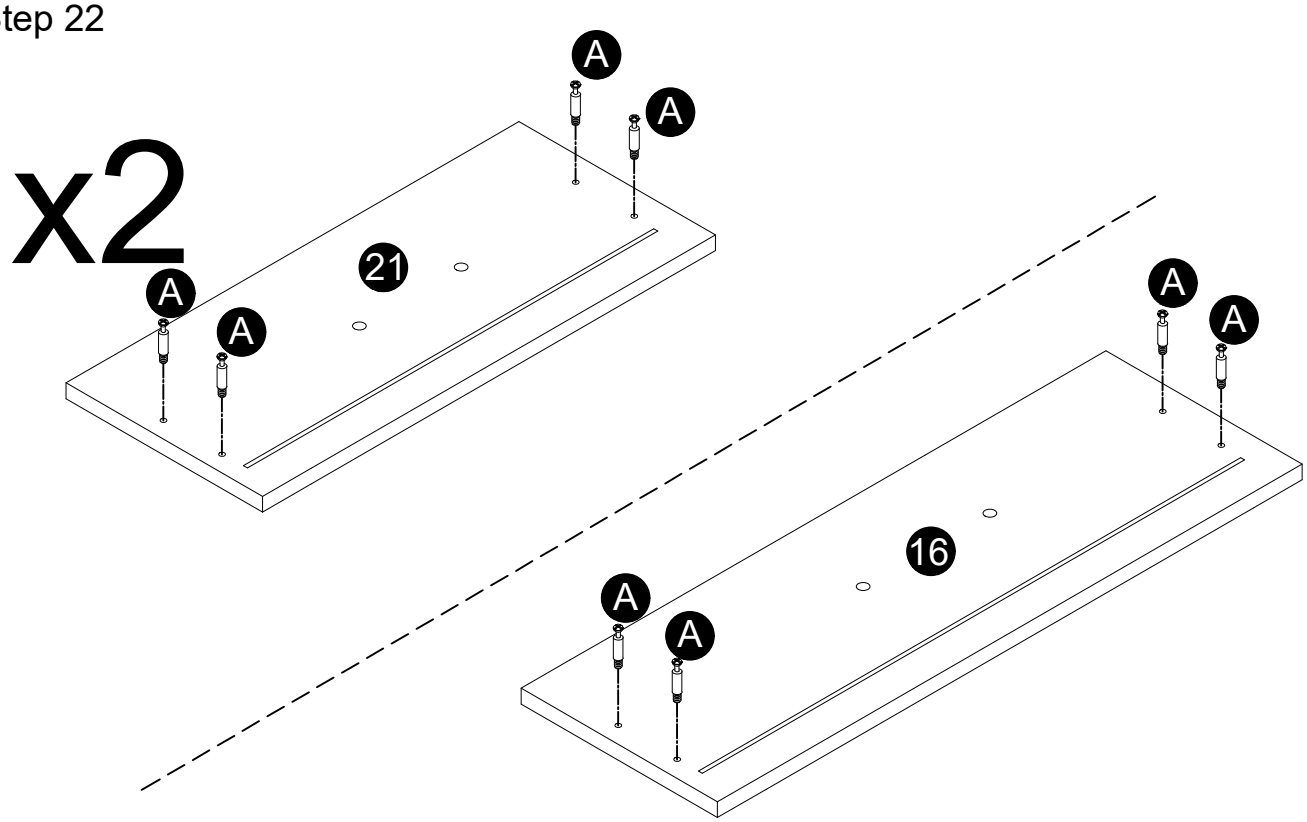


A	x12
	

Step 23


x2

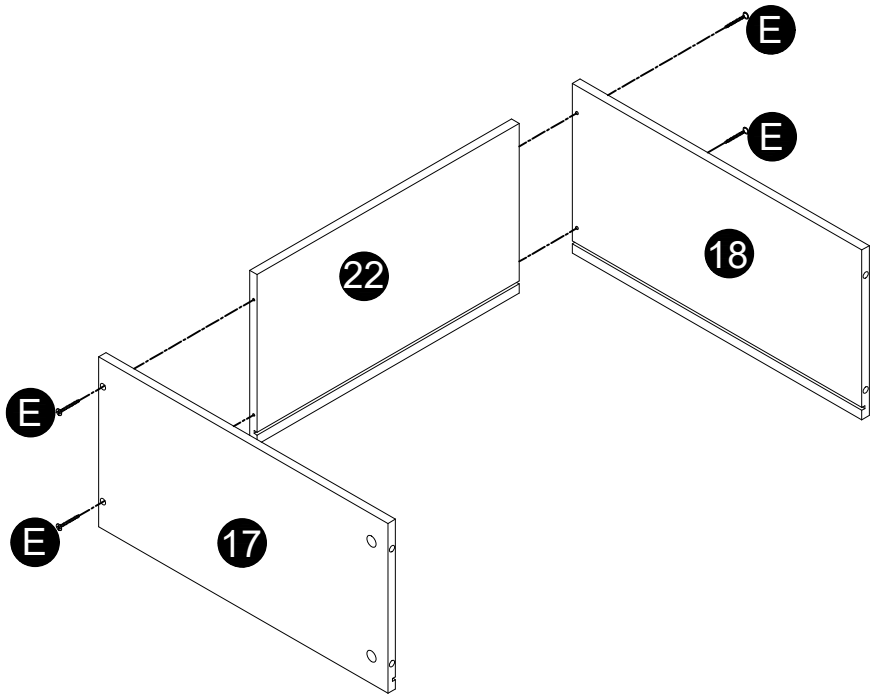

E	x8
	


Step 24

x2

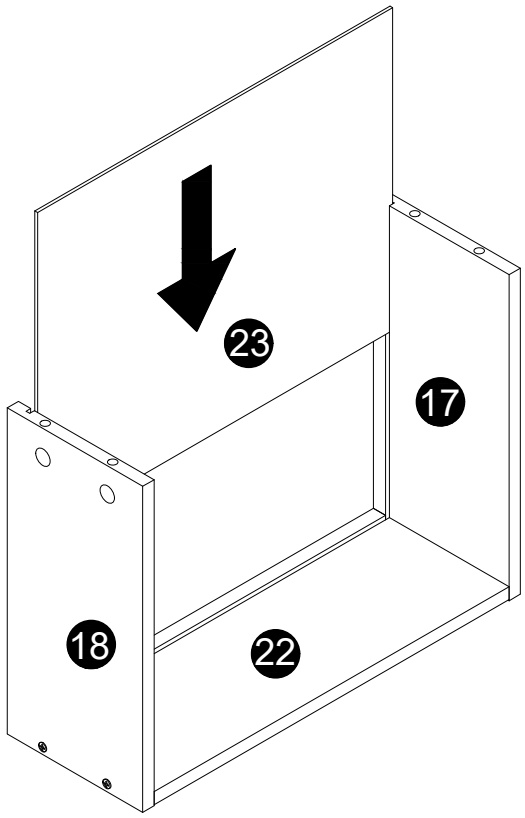

Step 25


x2

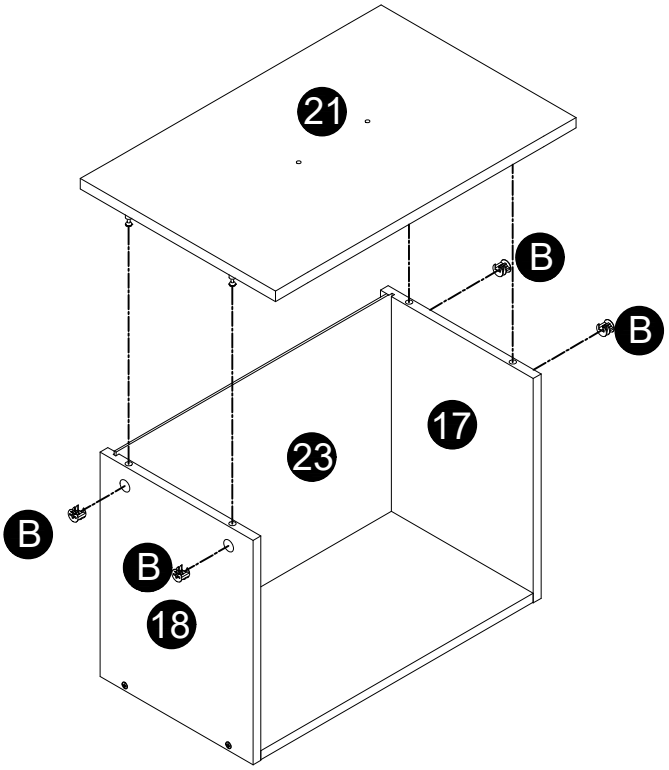


B	x8




Step 26

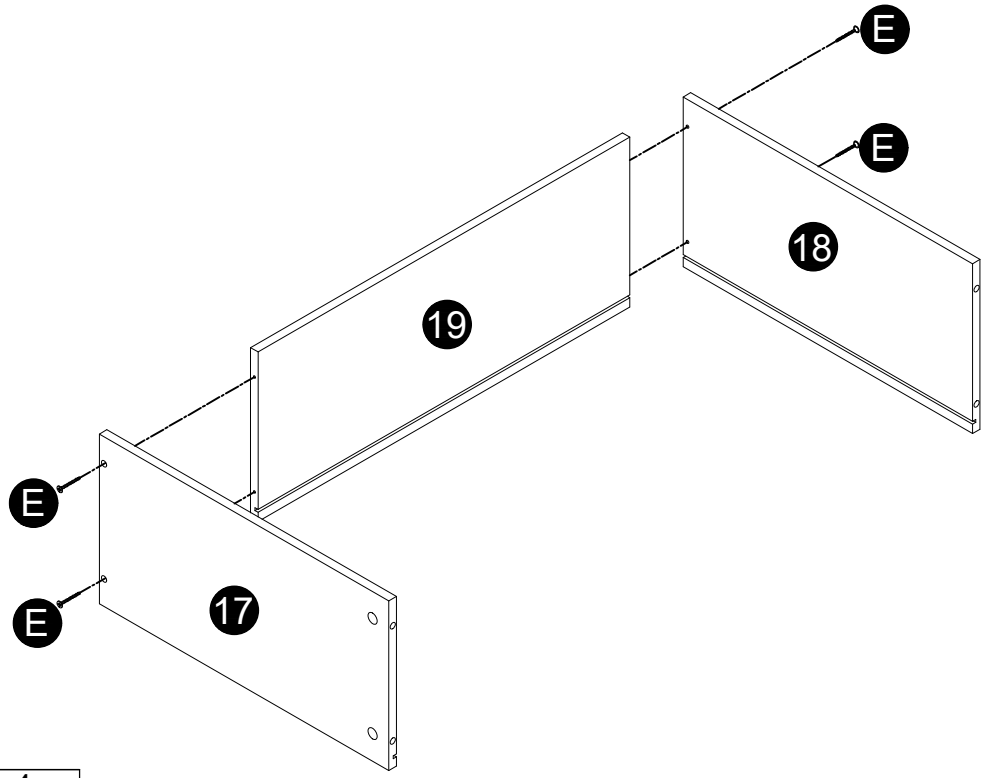


E	x4



Step 27

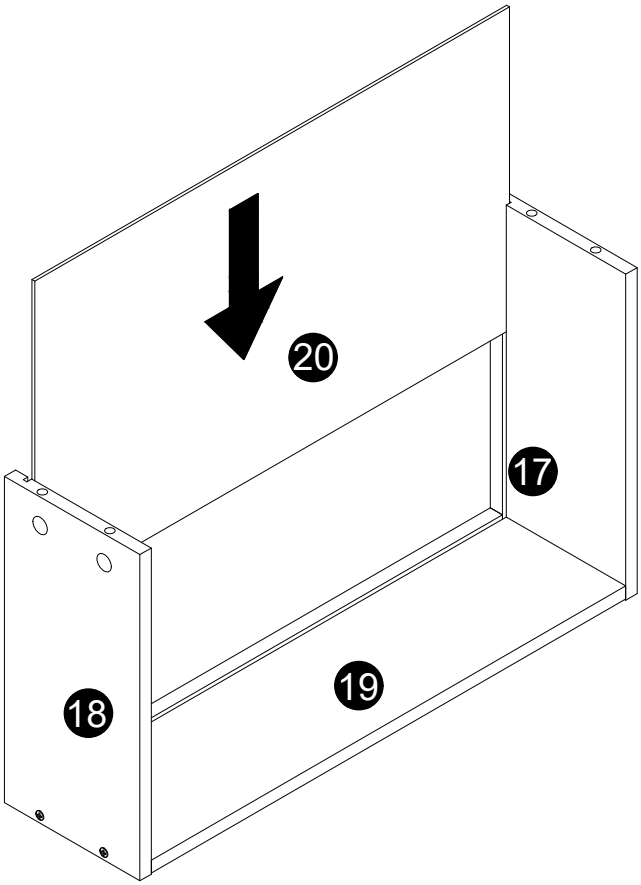


Step 28


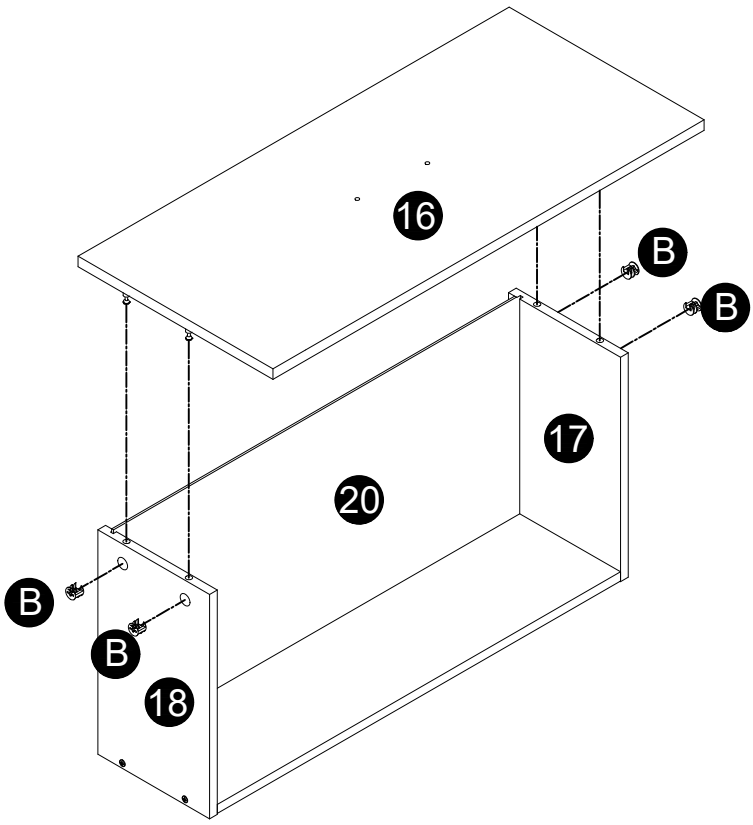


B	x4




Step 29

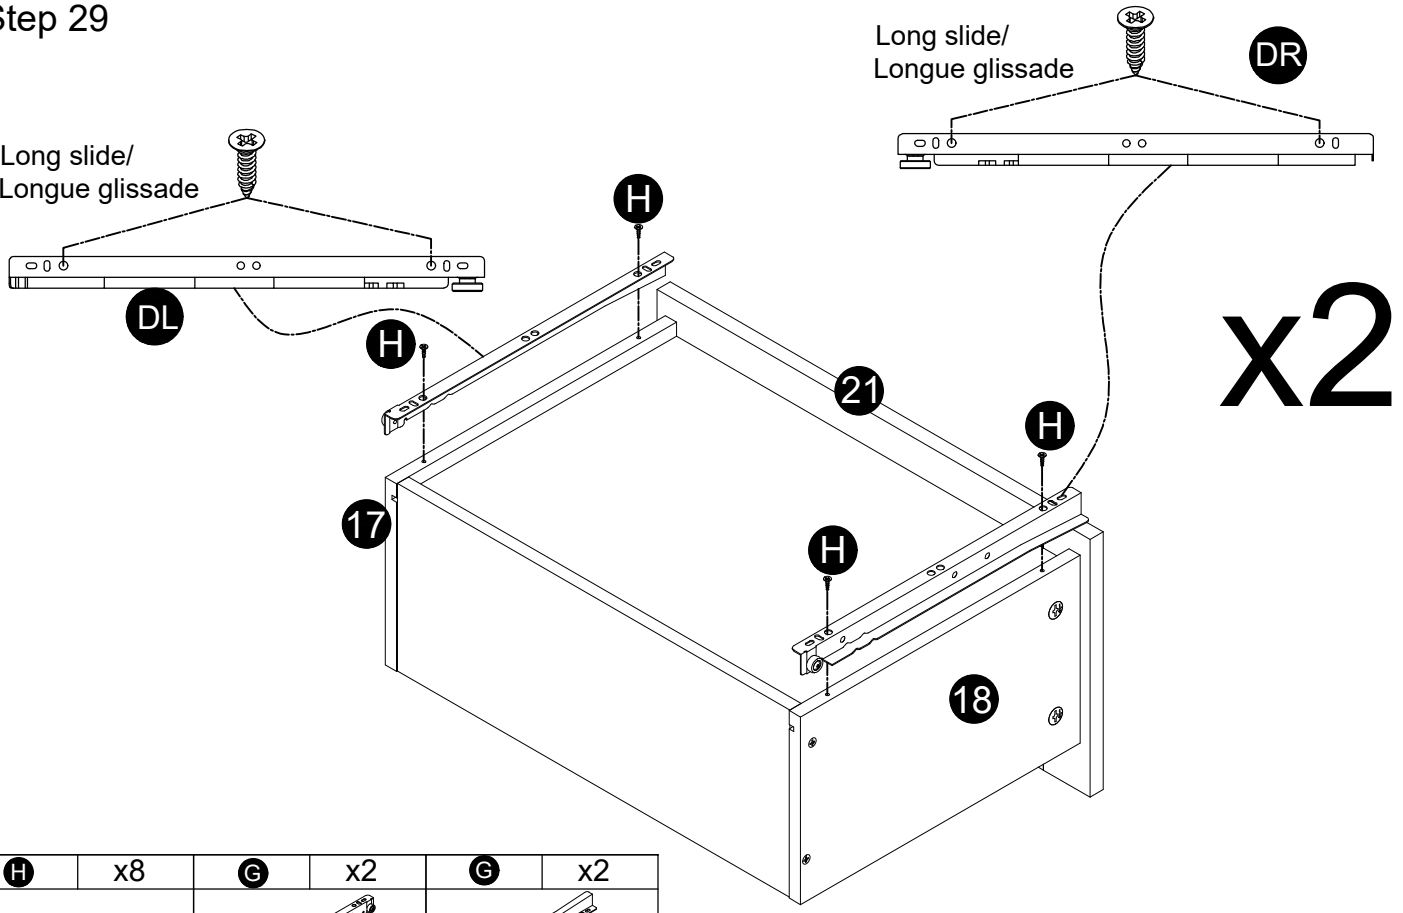


H	x8	G	x2	G	x2
		 DL		 DR	

Step 30

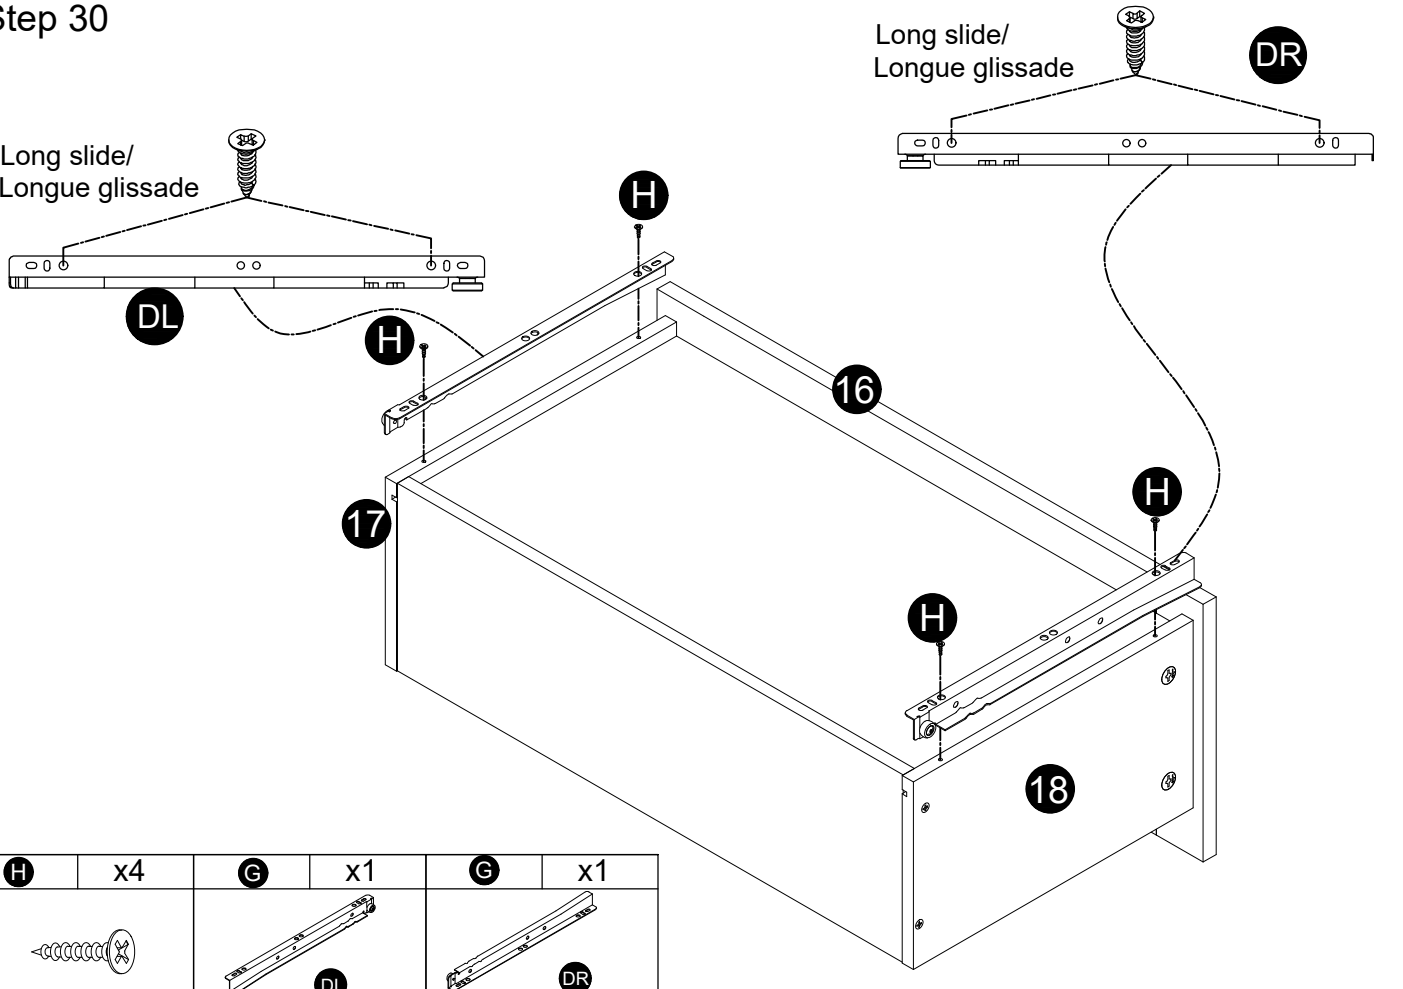

H	x4	G	x1	G	x1
		DL		DR	


Step 31

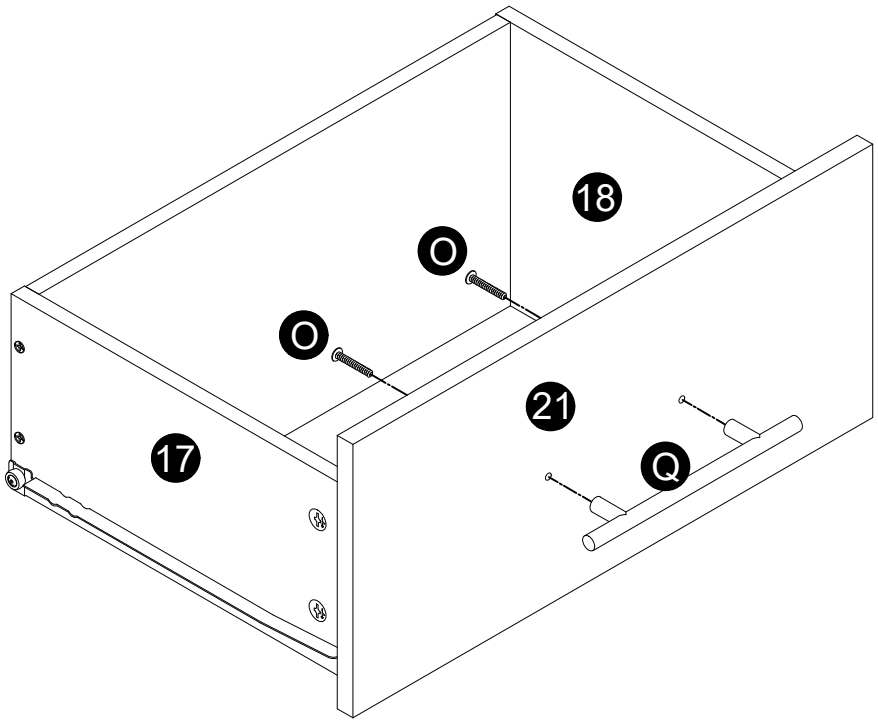

x2


Q	x2	O	x4
			

Step 32

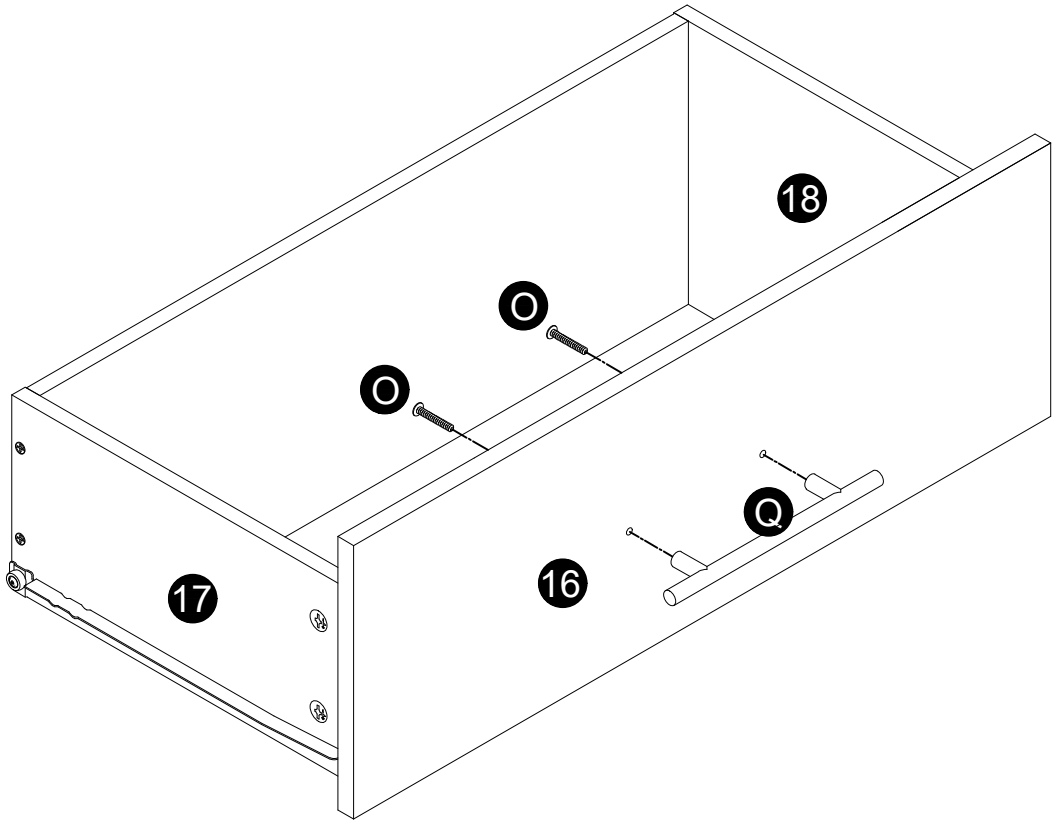



Q	x1	O	x2
			

Step 33

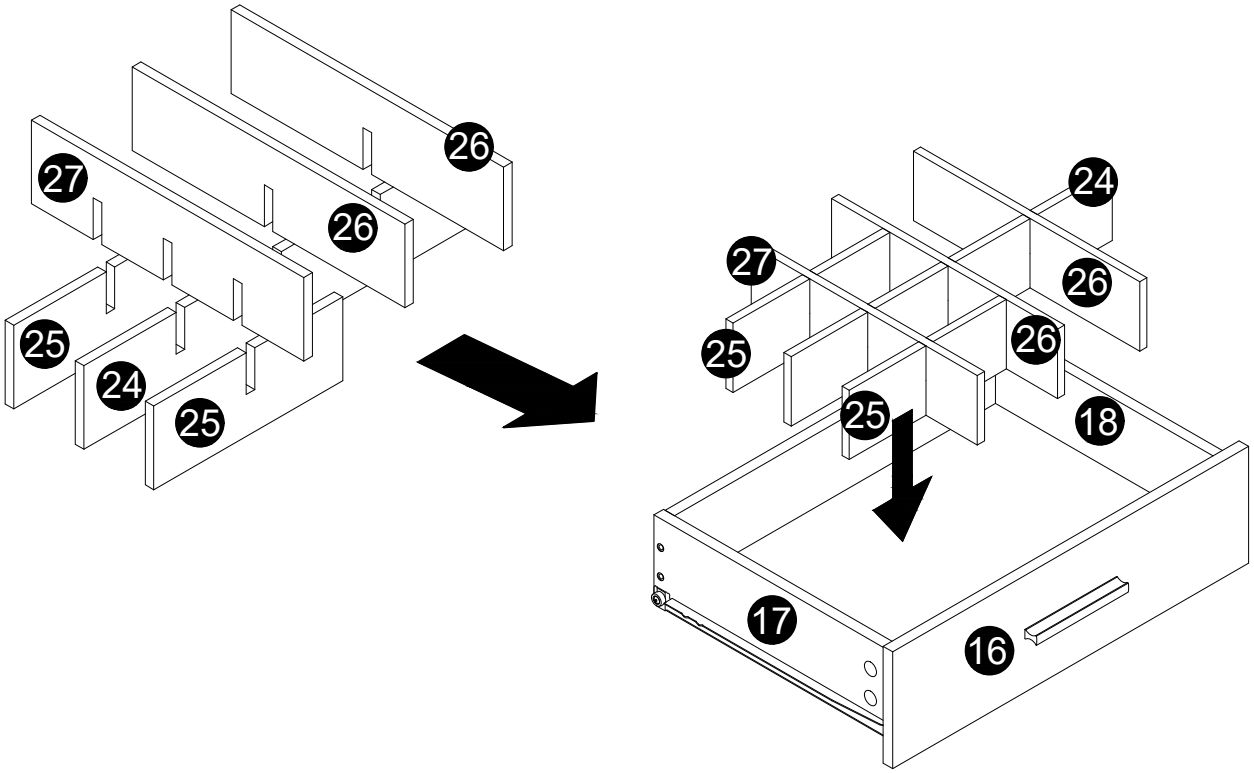


Step 34

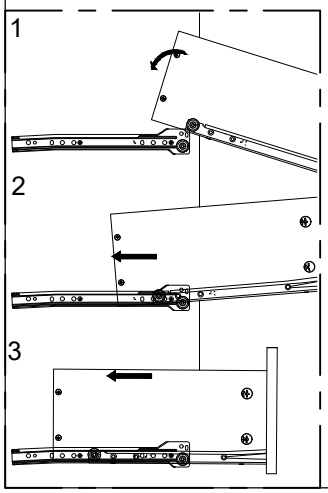

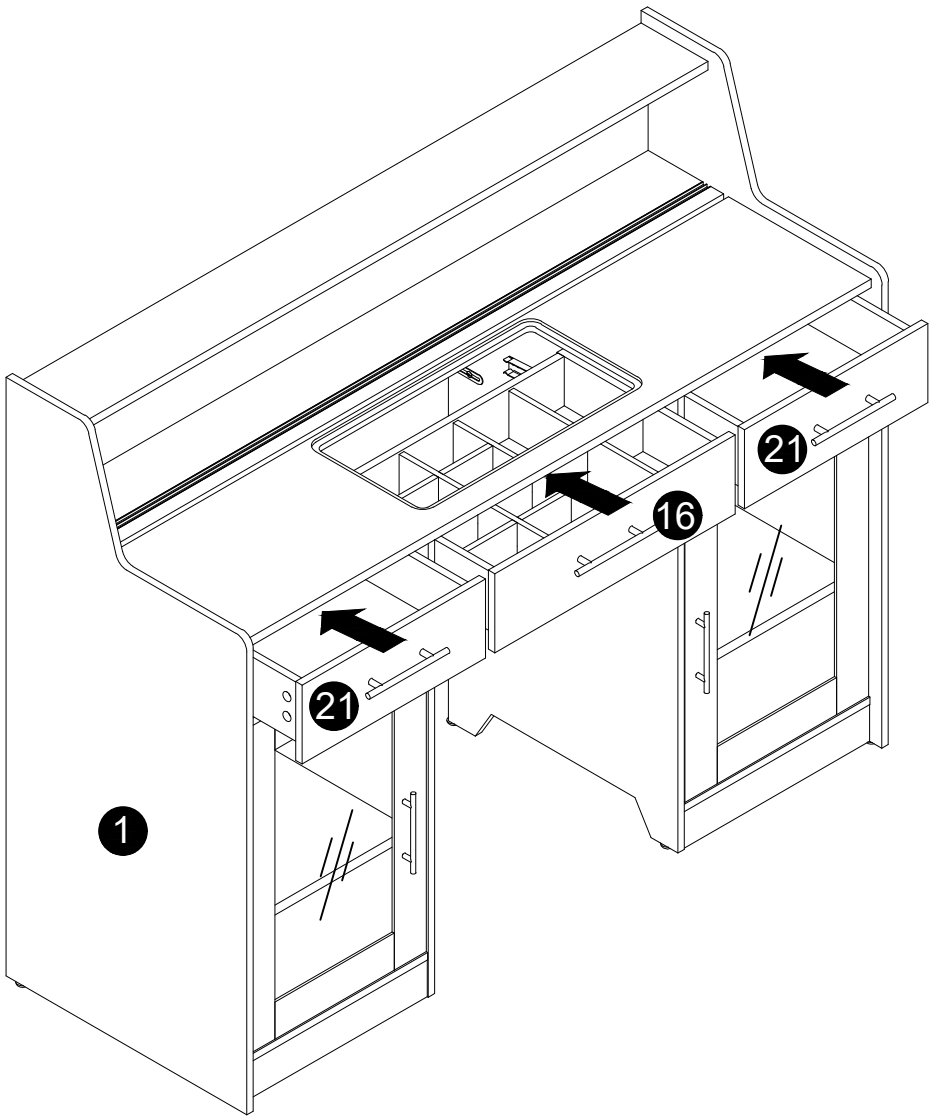


Step 35

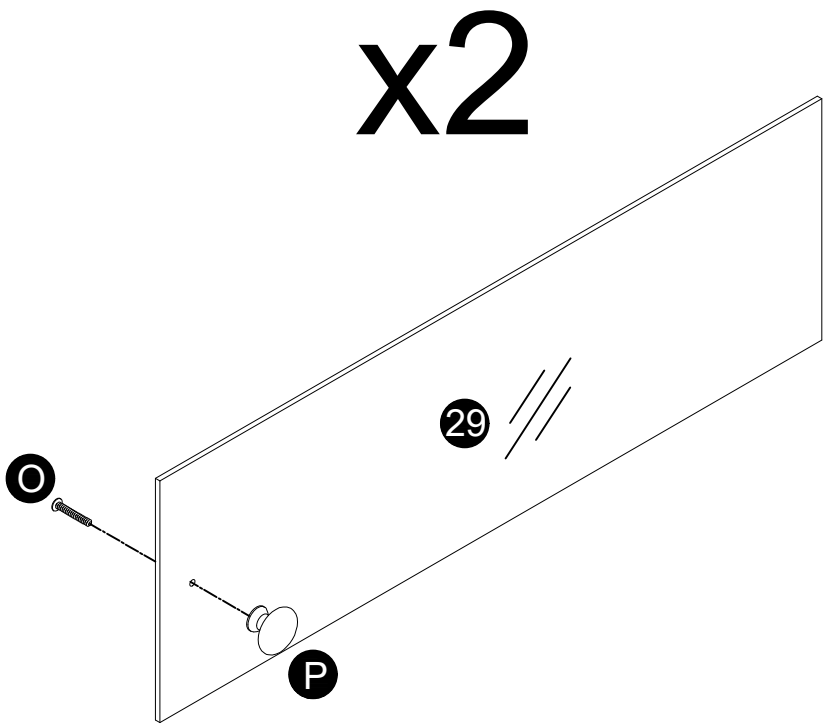


P	x2	O	x2
			


Step 36

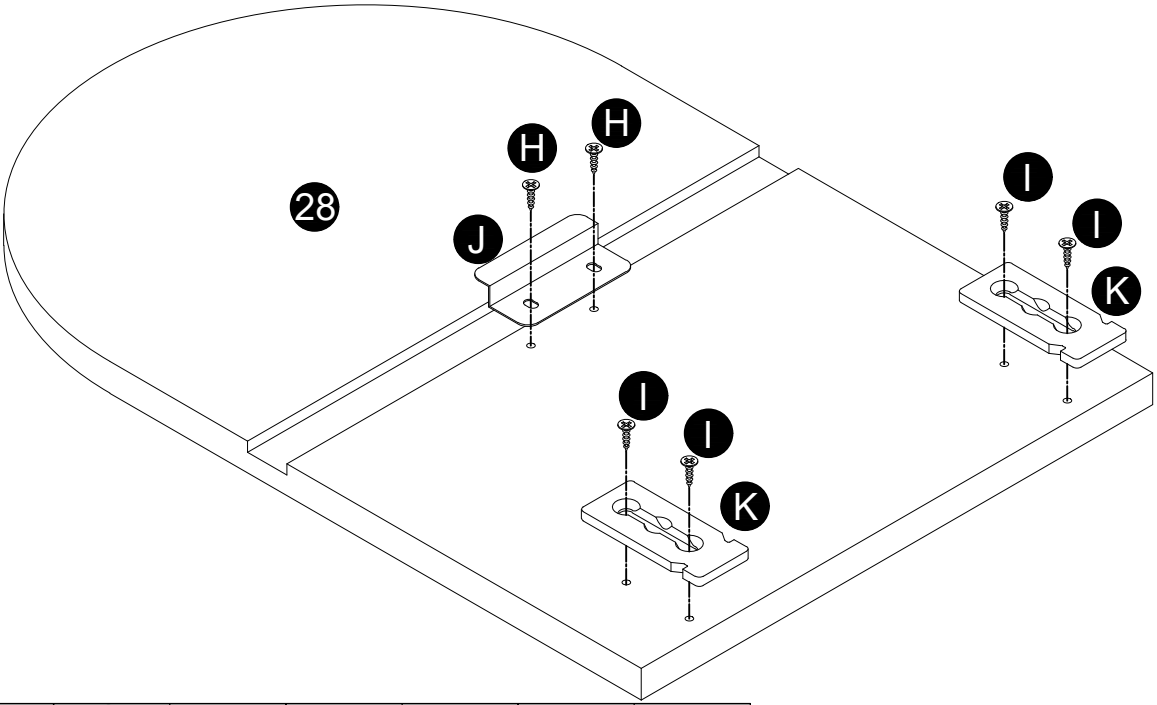


J	x1	K	x2	H	x2	I	x4
					M3.5*12mm		M3.5*14mm


Step 37

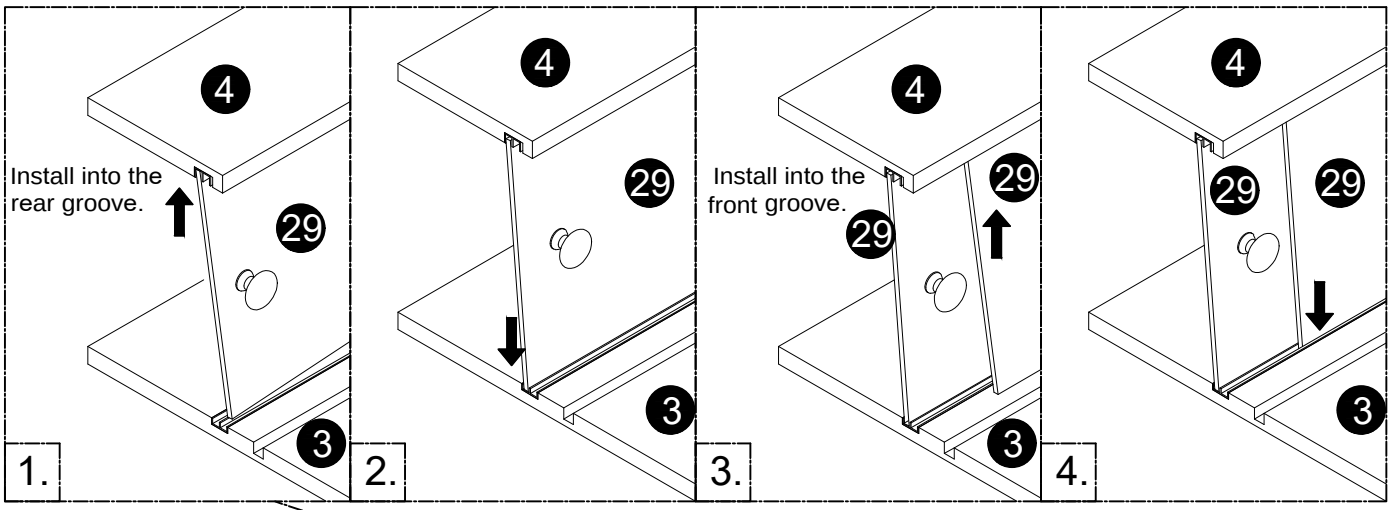
4
Install into the rear groove.
29
3
1.
2.
Install into the front groove.
3.
4.

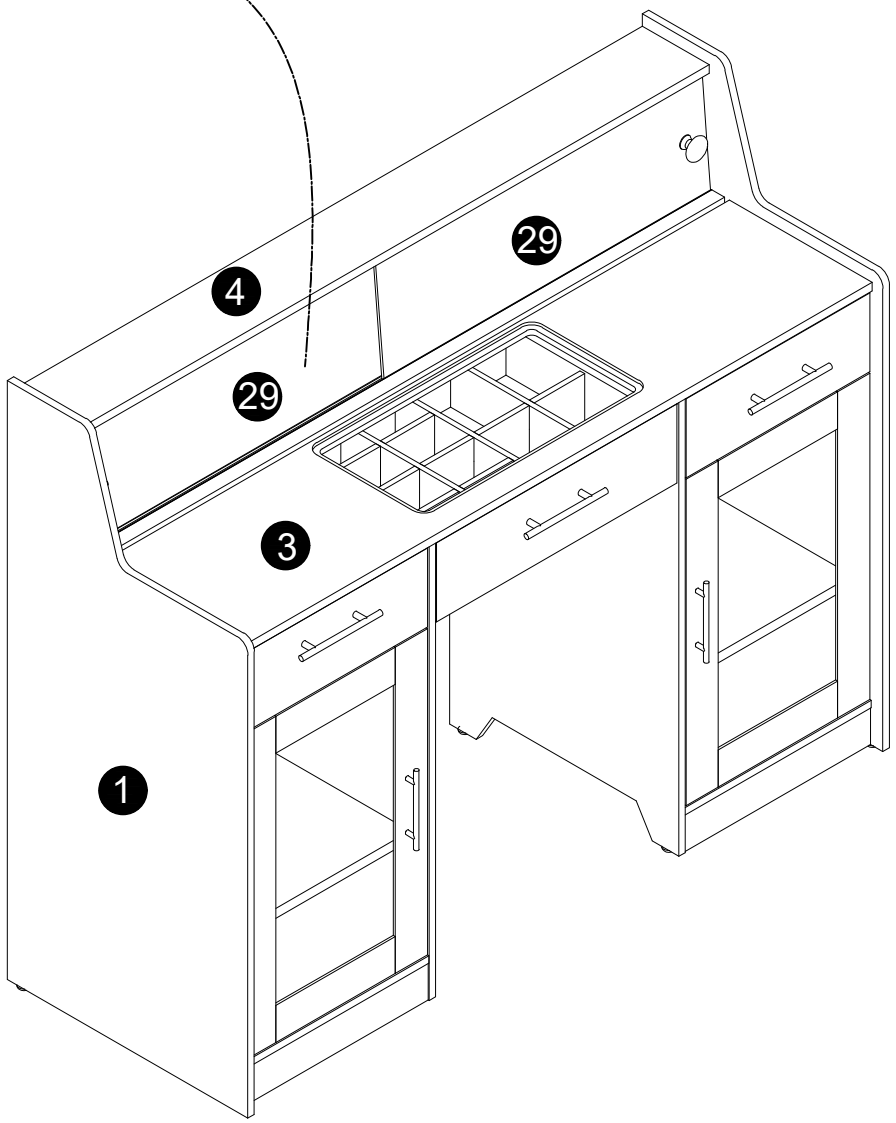

29
4
29
3
1

Step 38

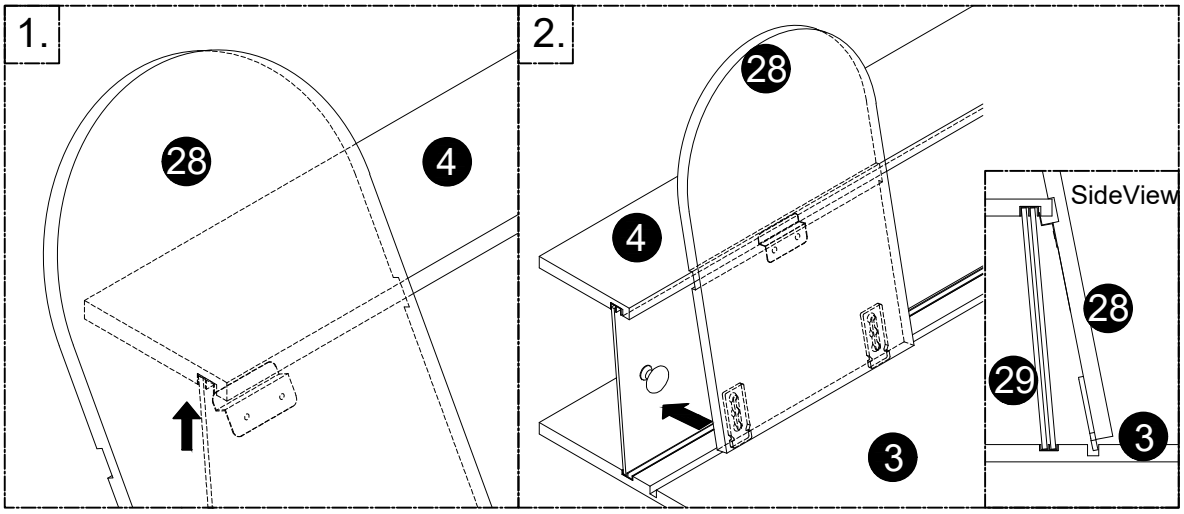


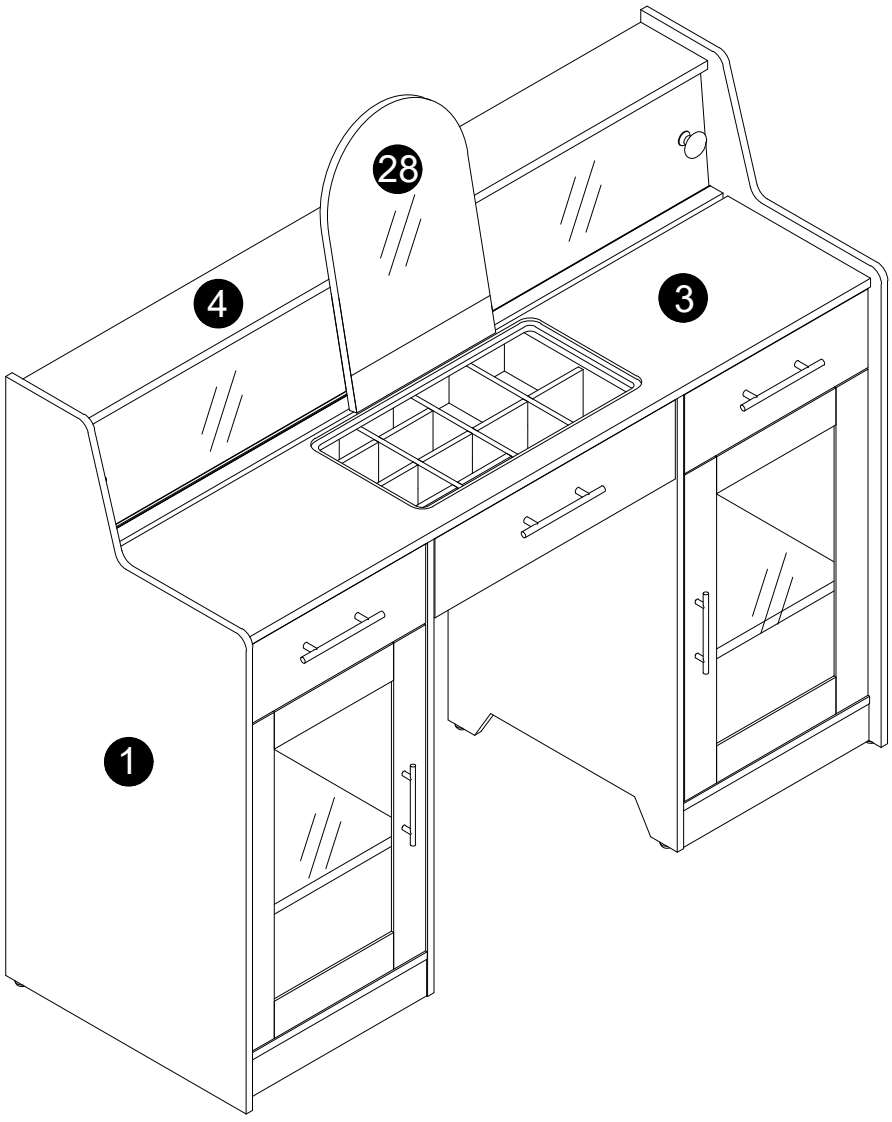

Step 39

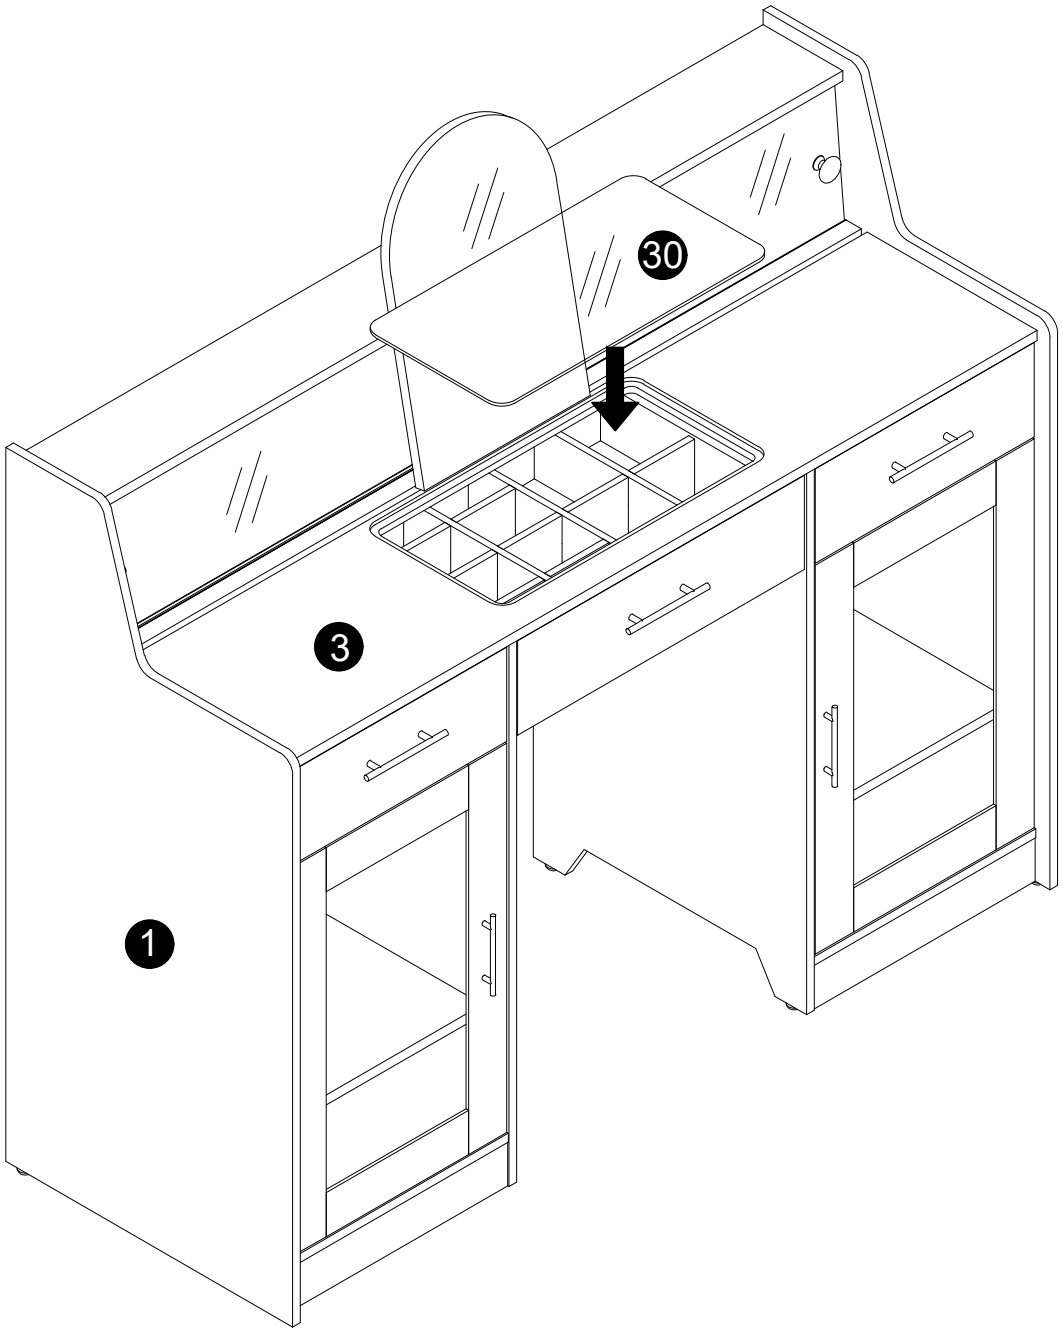


Step 40

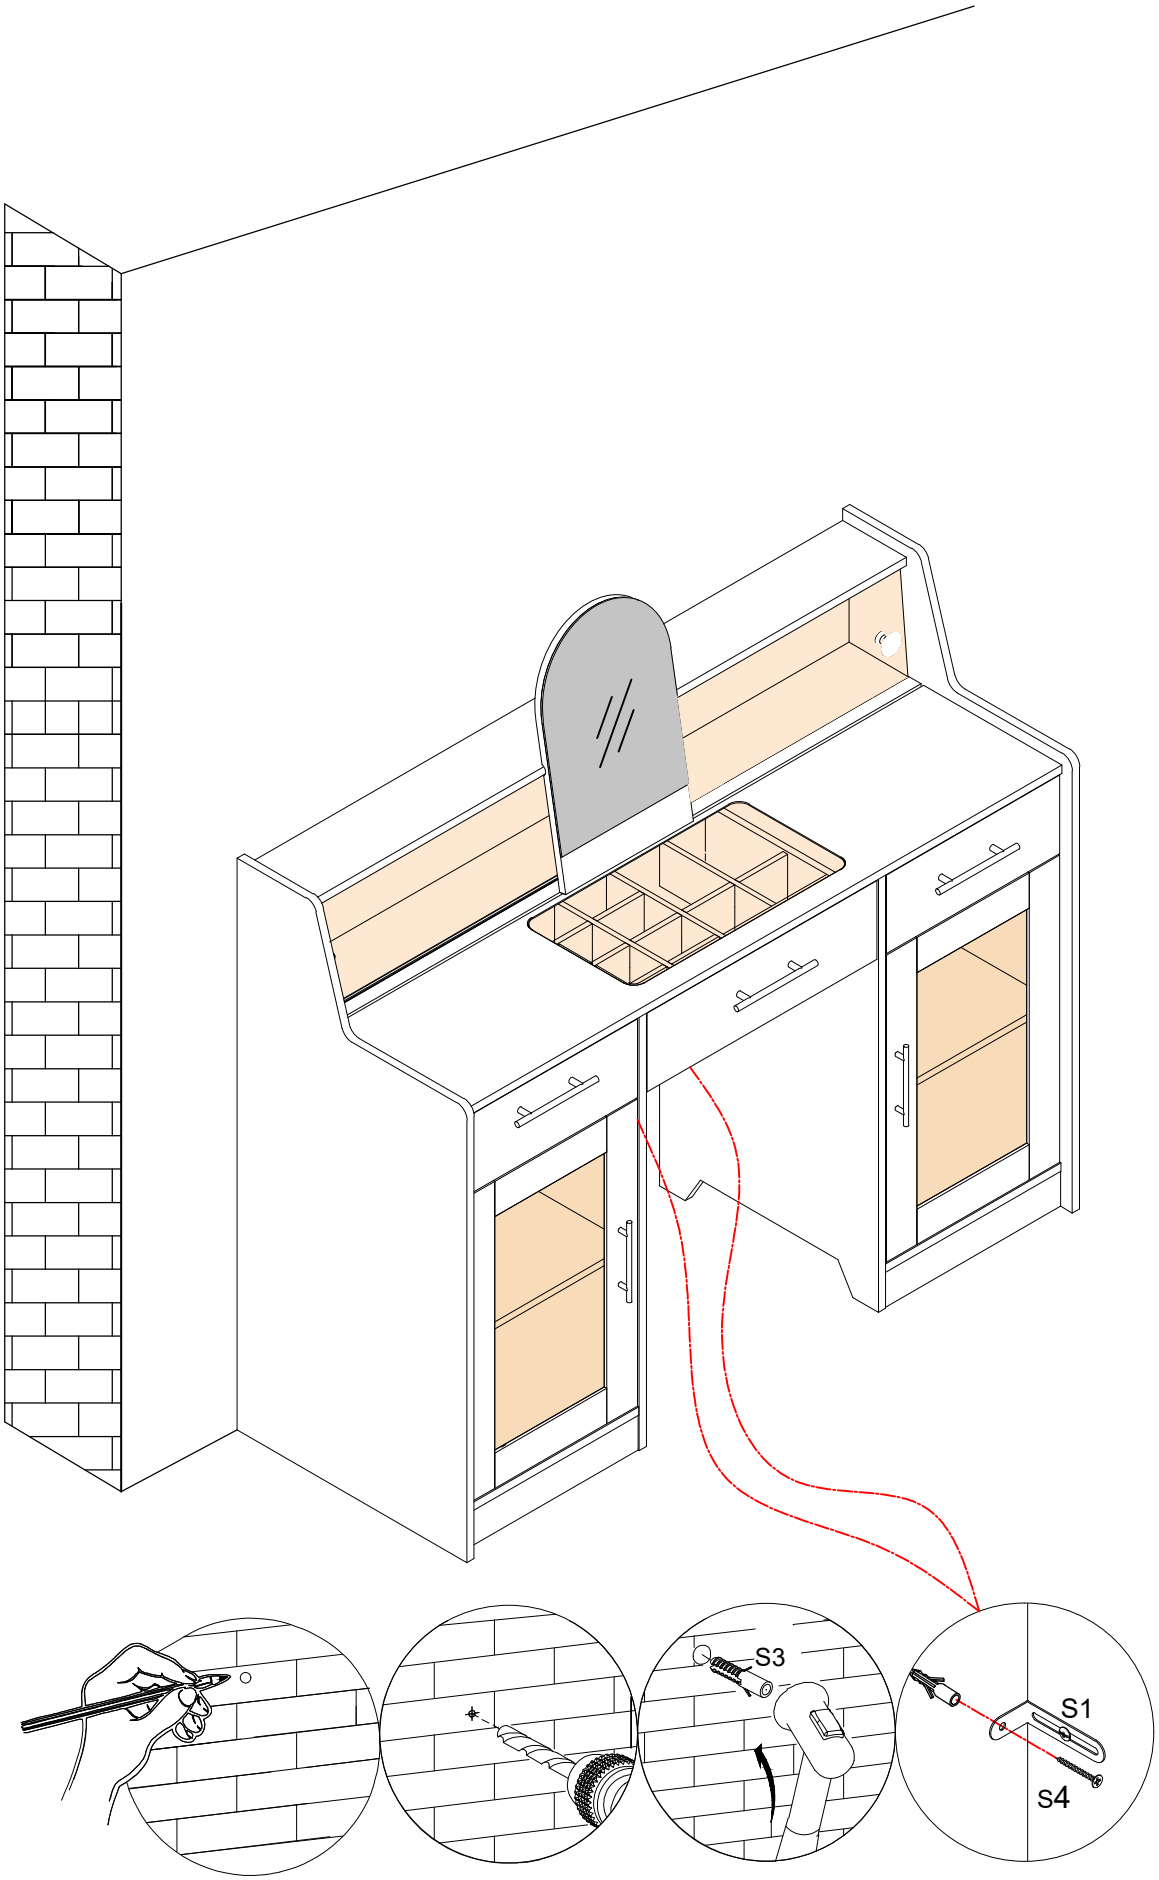

S	x2	S	x2
 S3 Wall plug x 2		 S4 M4*35mm x 2	

Step 41

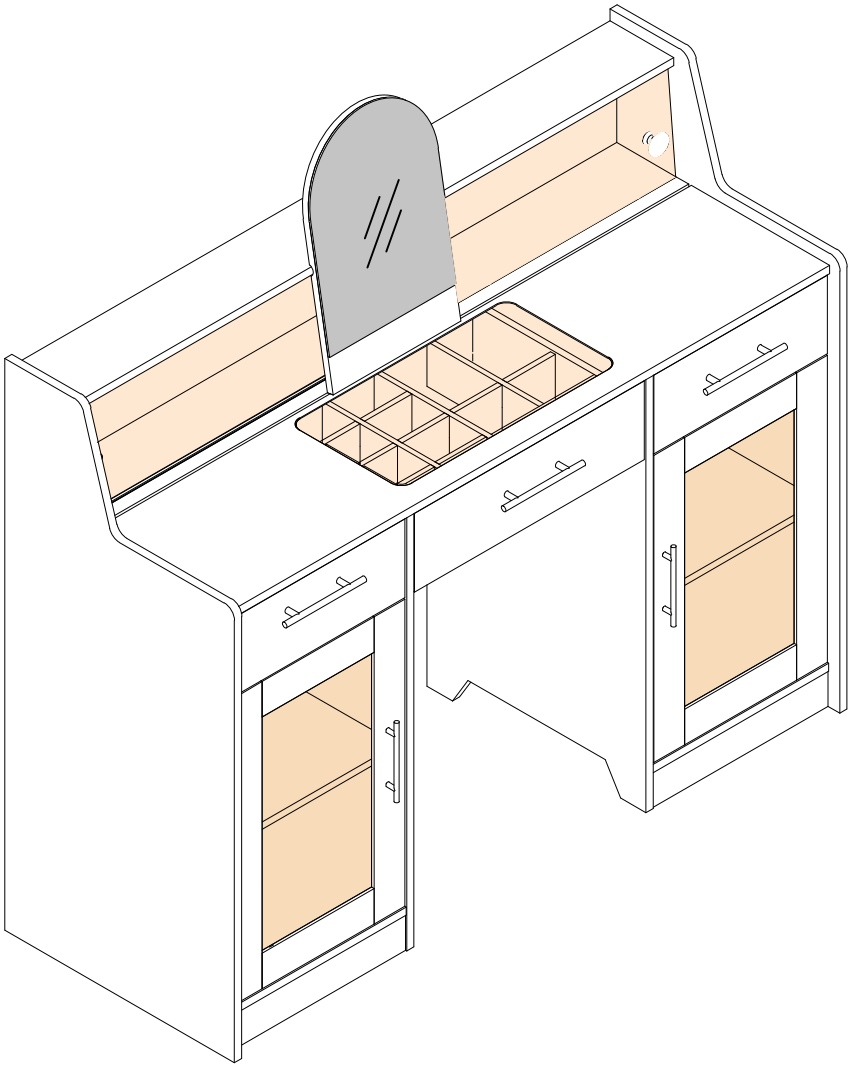

FINISH

Made in Viet Nam