


ASSEMBLY INSTRUCTIONS

BATH VANITY-CABINET

SKU - N729P517638



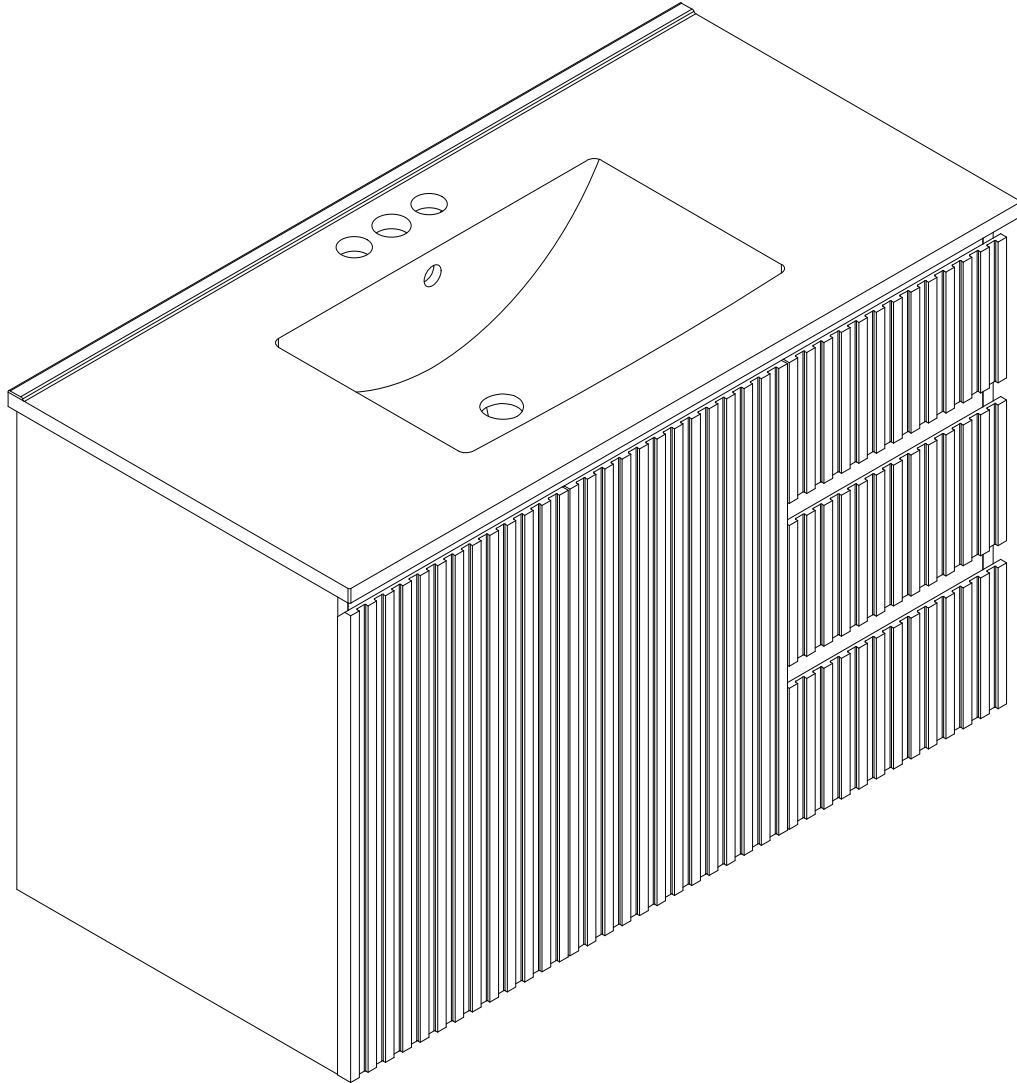


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED



* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

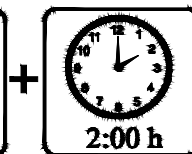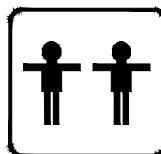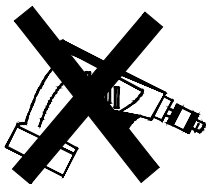

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.







Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions











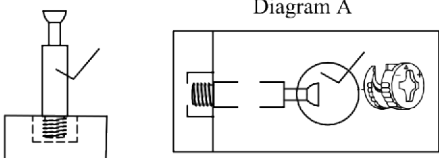
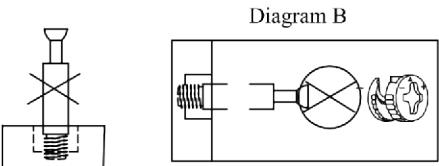
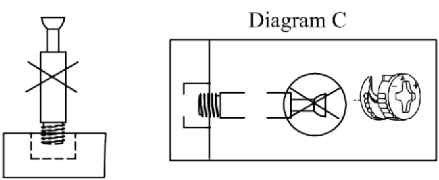

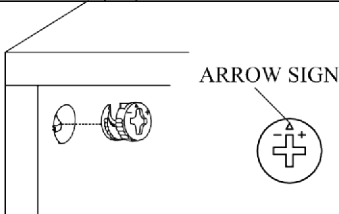
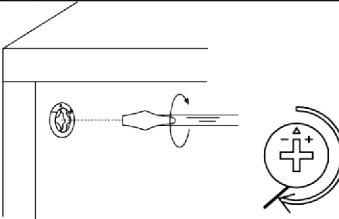
	Insert Cam Bolt into hole as shown in diagram A.
	Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

Detail View












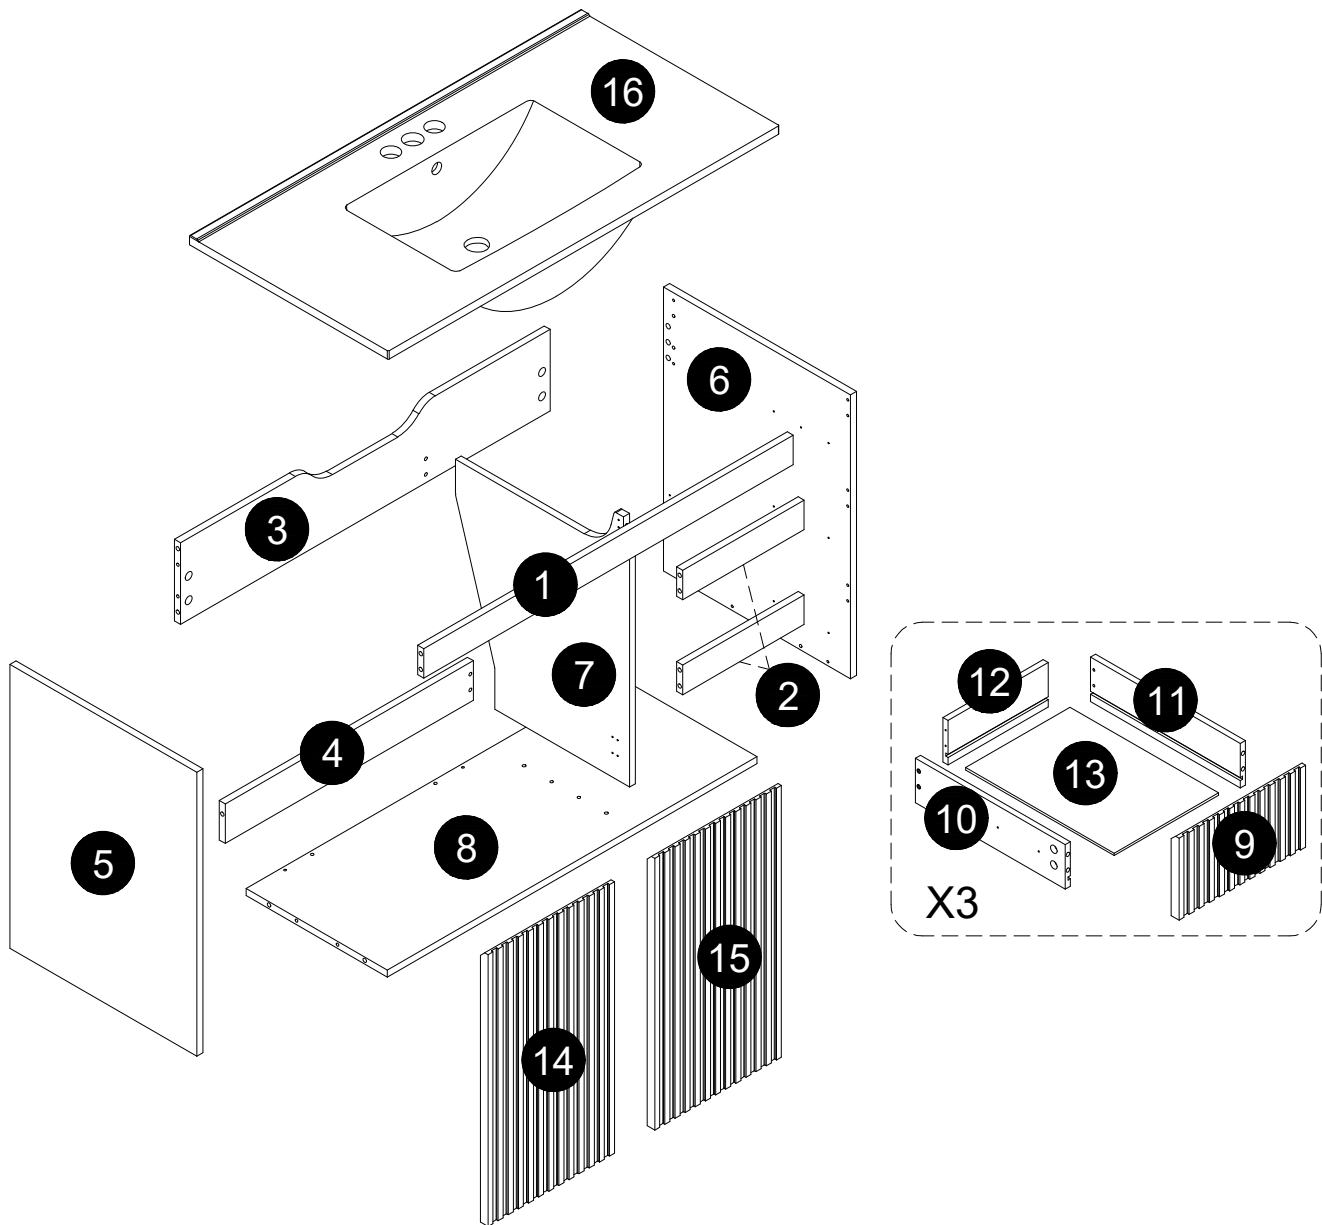


Note: Don't tighten all screws during installation.

Part Lists: N729P517638

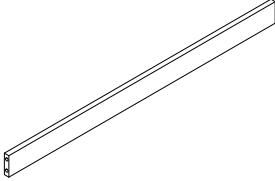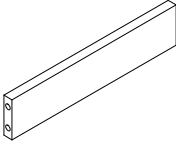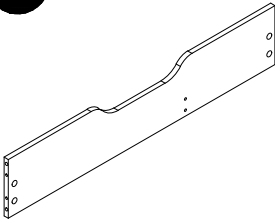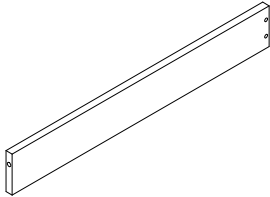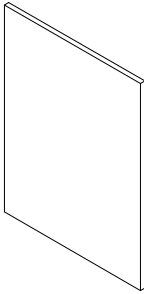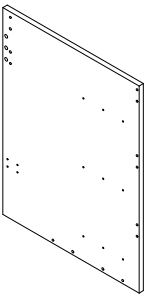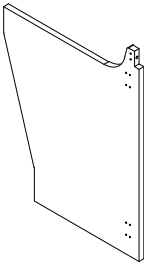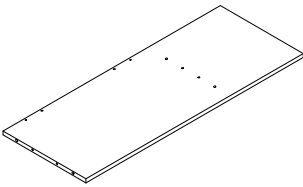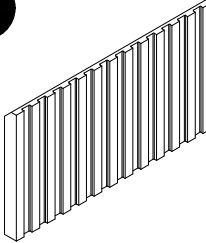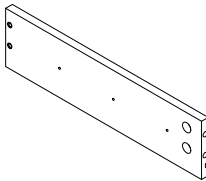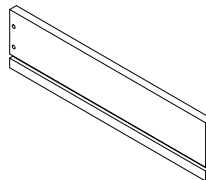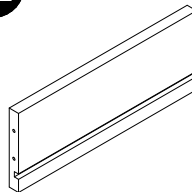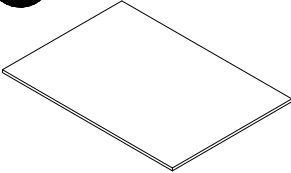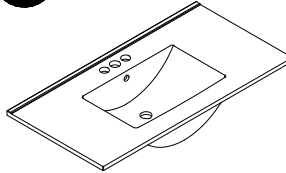1  1PC	2  2PCS	3  1PC	4  1PC
5  1PC	6  1PC	7  1PC	8  1PC
9  3PCS	10  3PCS	11  3PCS	12  3PCS
13  3PCS	14  1PC	15  1PC	16  1PC

Hardware Lists: N729P517638

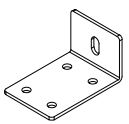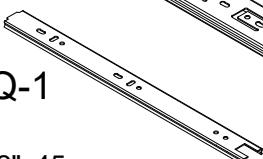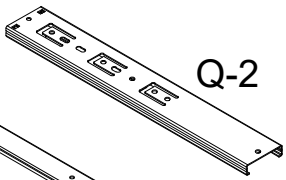A X35+1  Ø6x34mm	B X35+1  Ø15x9.5mm	C X13+1  Ø6x30mm	D X4  Ø35mm
E X24+1  Ø8x15mm	F X6  Ø6x40mm	G X1 	H X2 
I X1SET Rx1pc Lx1pc  l.1 x 2pcs l.2 x 4pcs	J X34+1  Ø4x12mm	K X18  Ø4x10mm	L X12  Ø8x35mm
M X8  Ø5x40mm	N X8  Ø8*40mm	O X1  4mm	P X1 
Q X 3SET  Q-1 12"x45mm  Q-2 Accessories			


Step 1

INSTALLATION STEPS


Press the plastic part in the indicated direction to separate drawer runner Q-1 and Q-2 before assembling.

REMARK:





Please grip the Q-1 part while sliding the Q-2 part

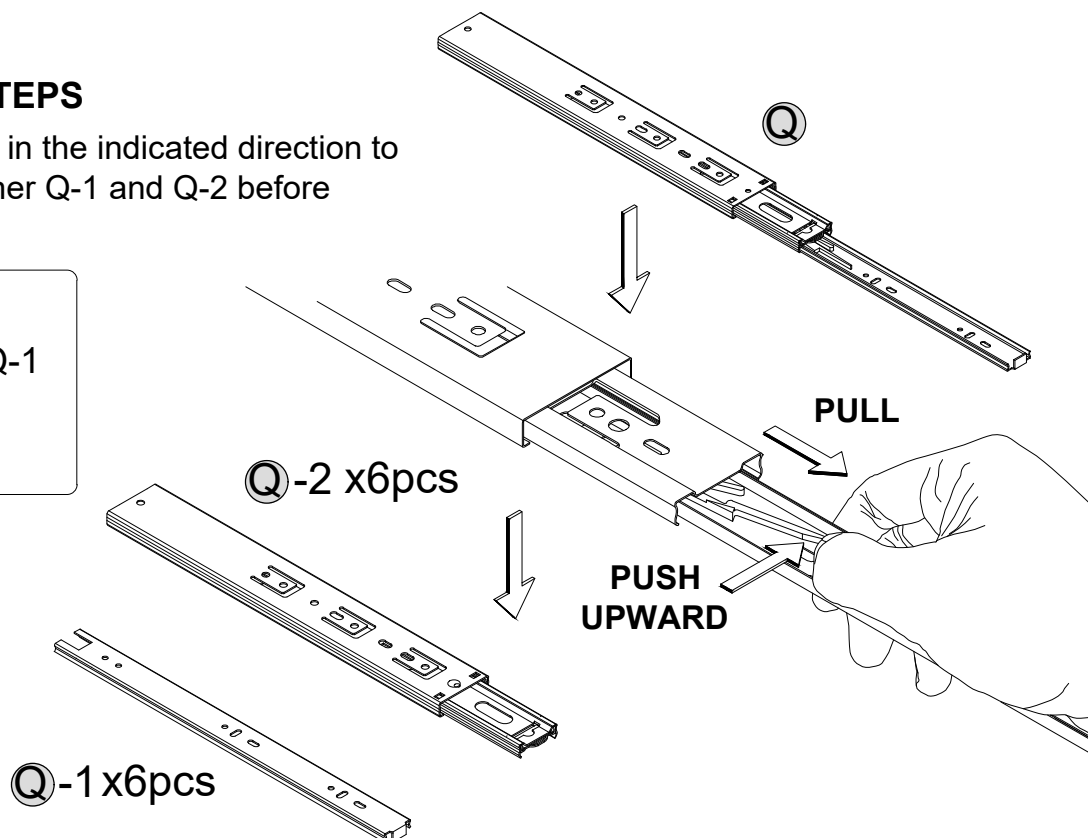




Step 2

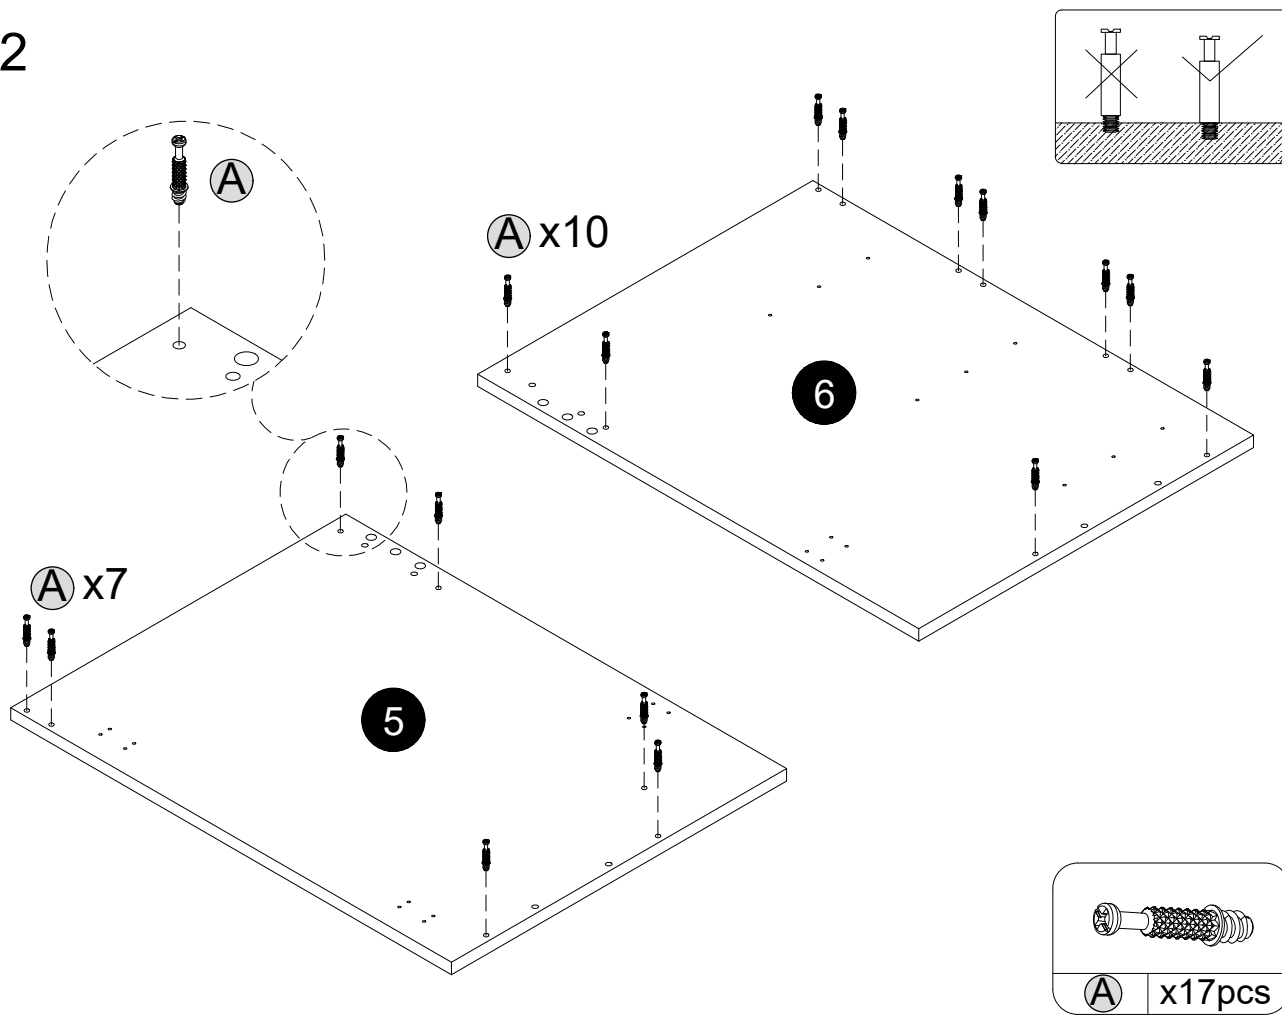




Step 3

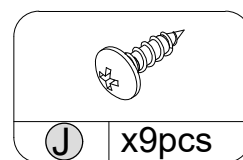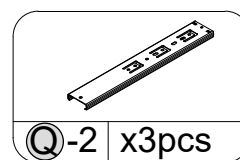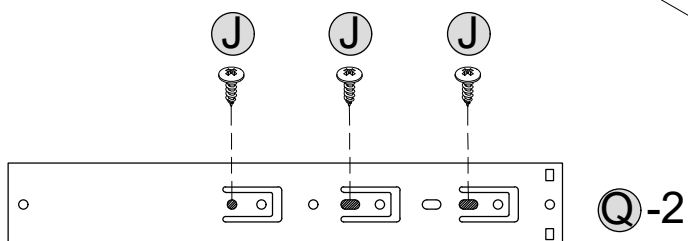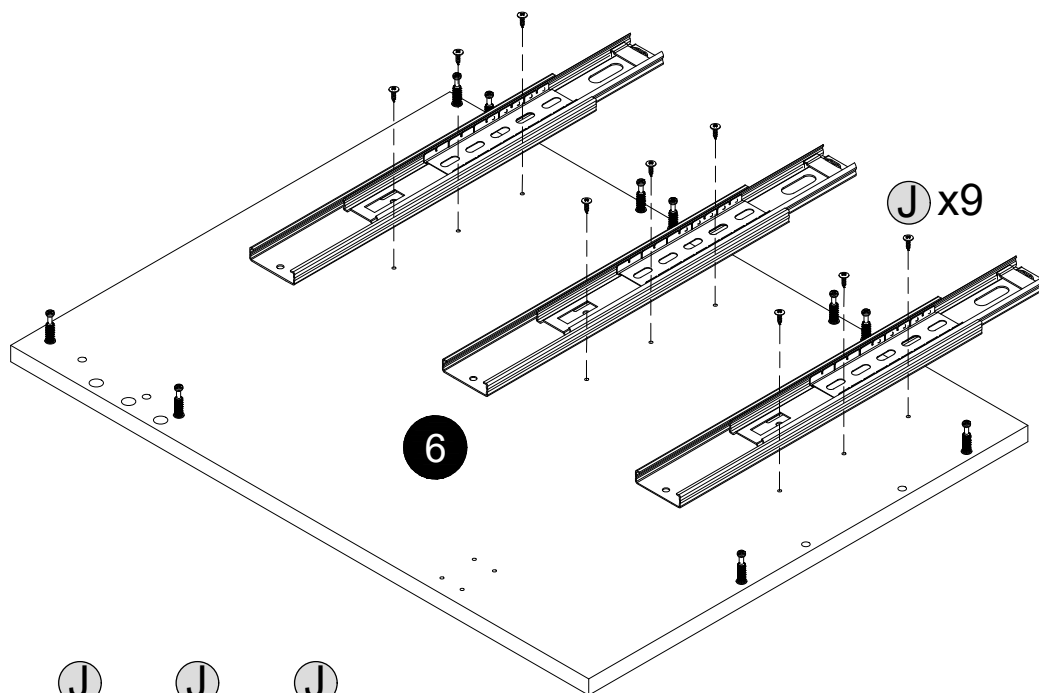



Step 4

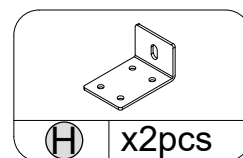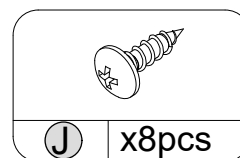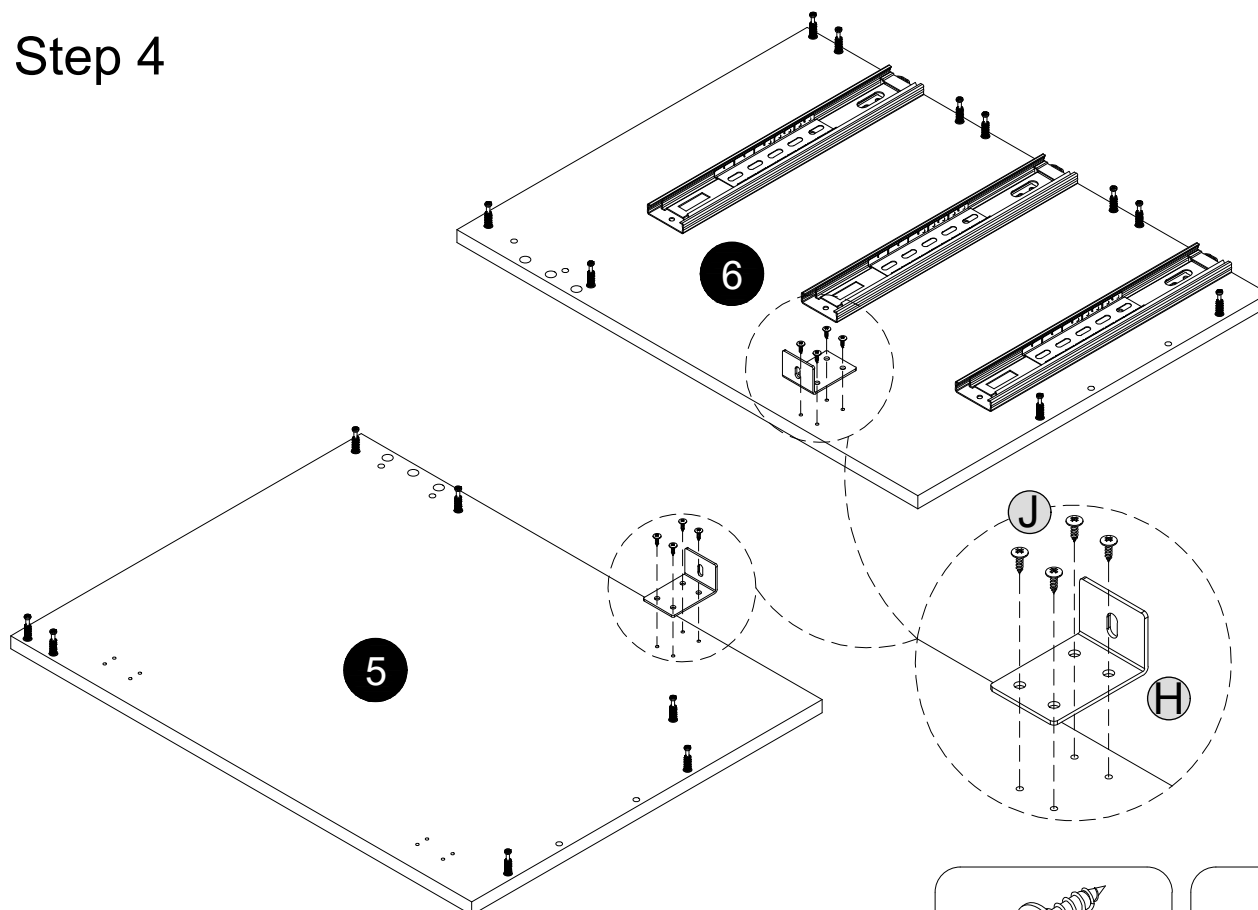



Step 5

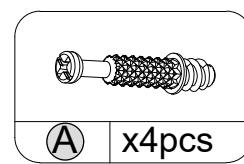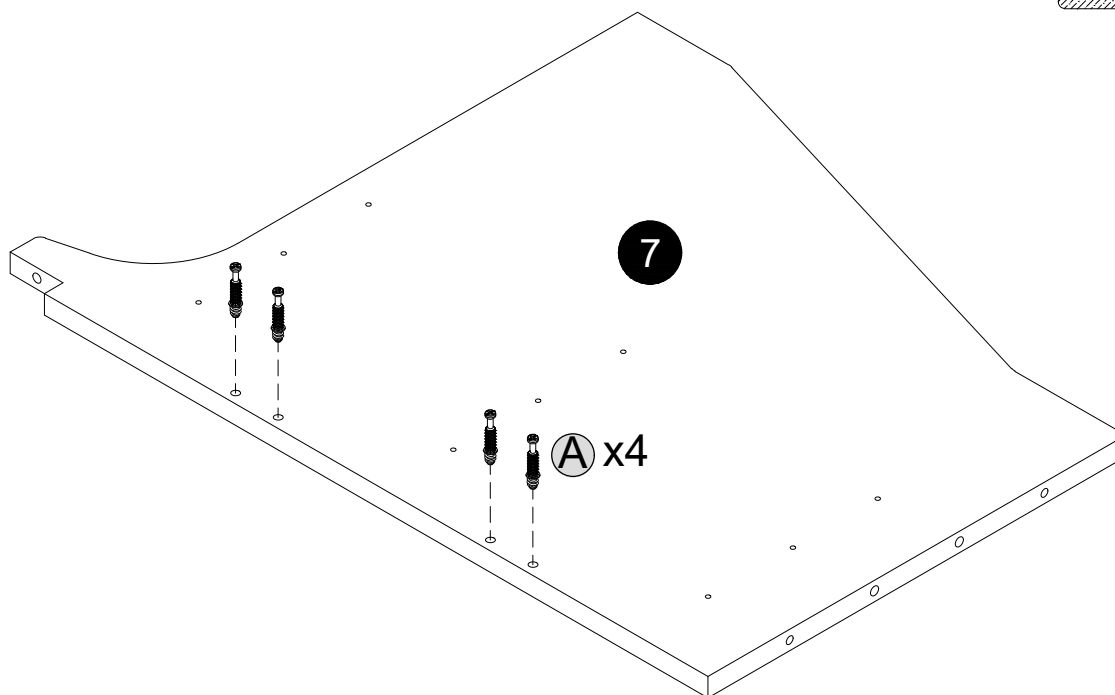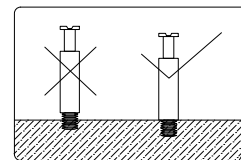




Step 6

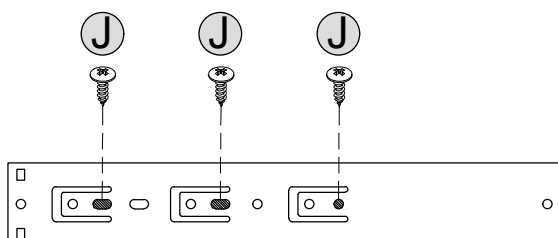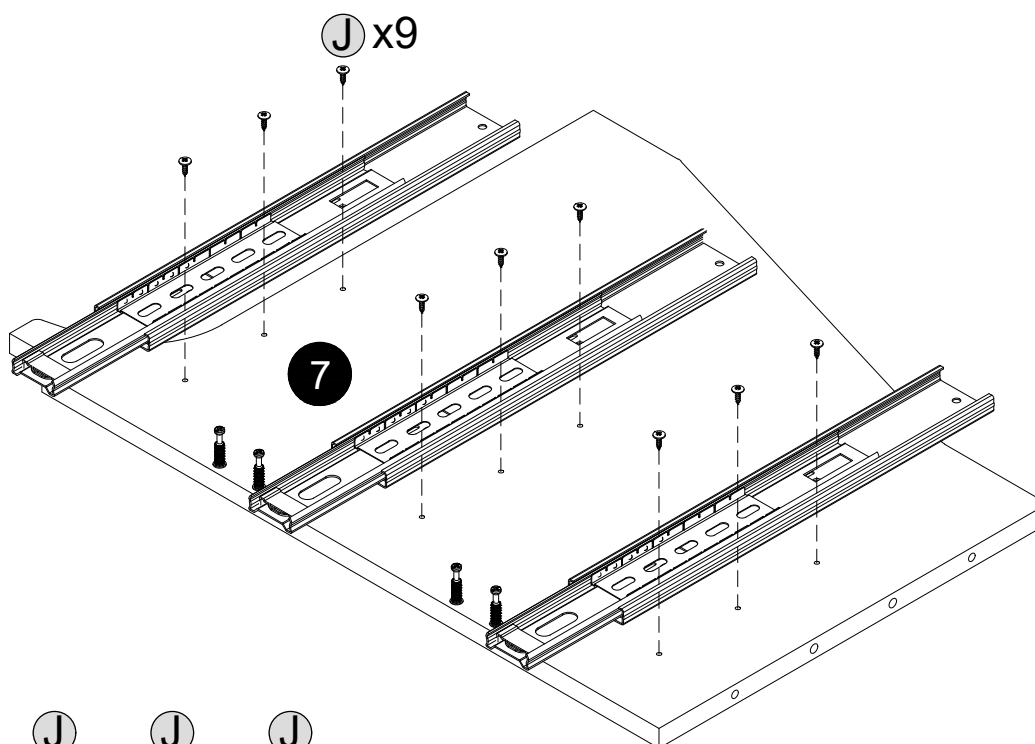




Q-2

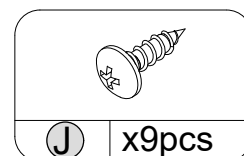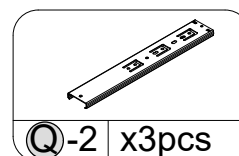


Step 7

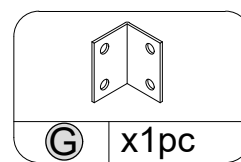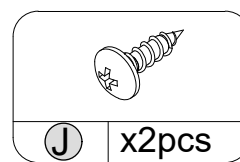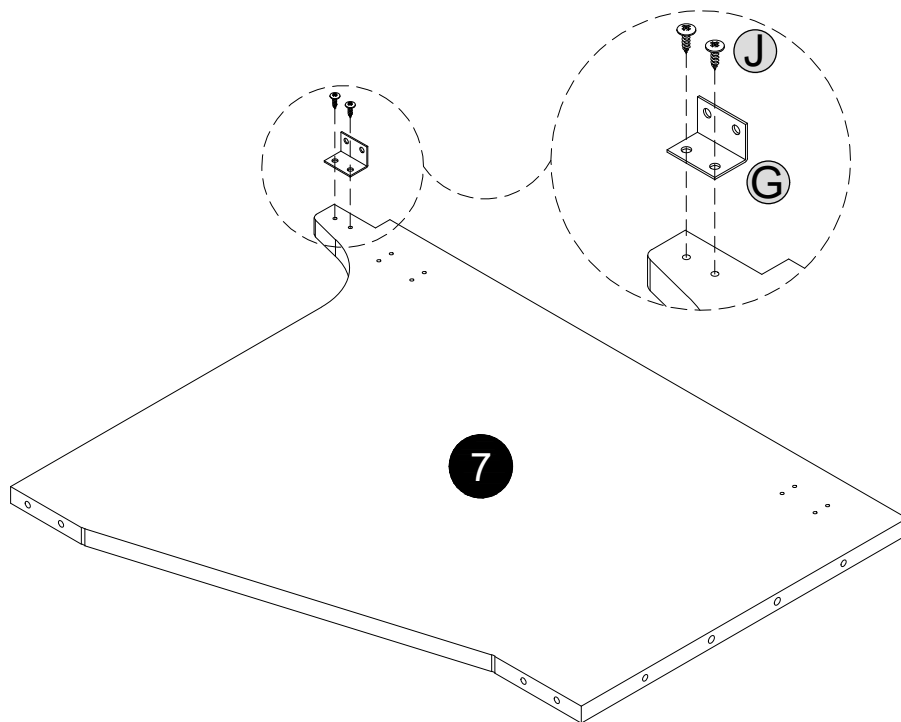


Step 8

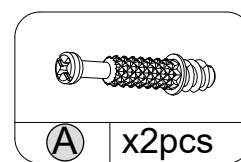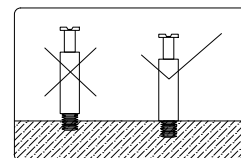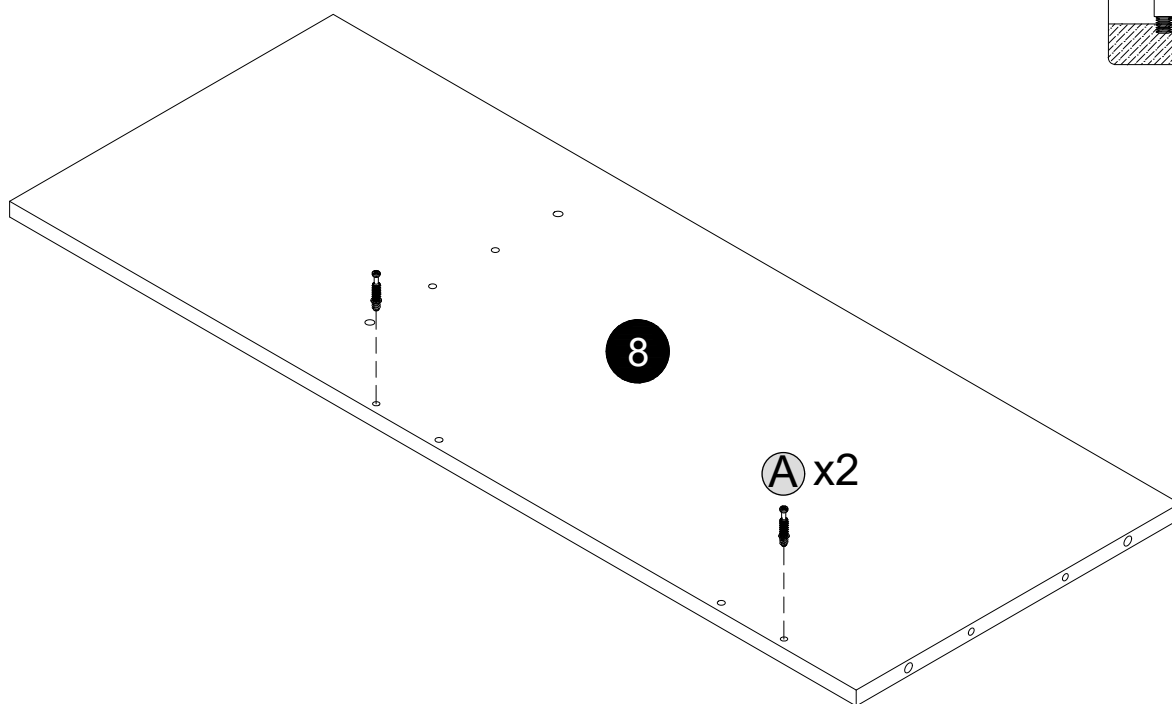





Step 9

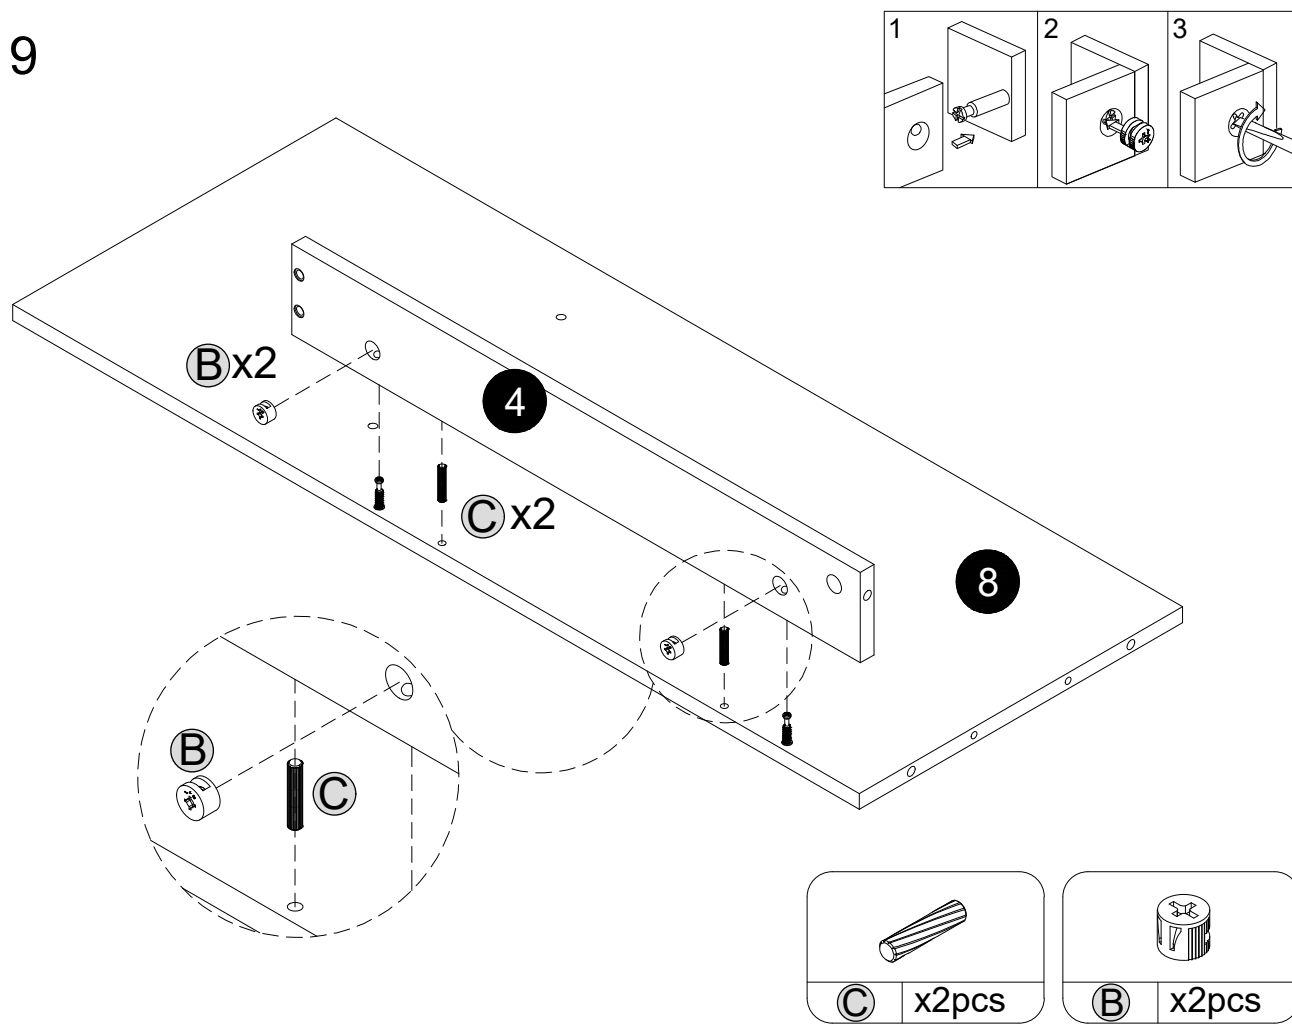




Step 10

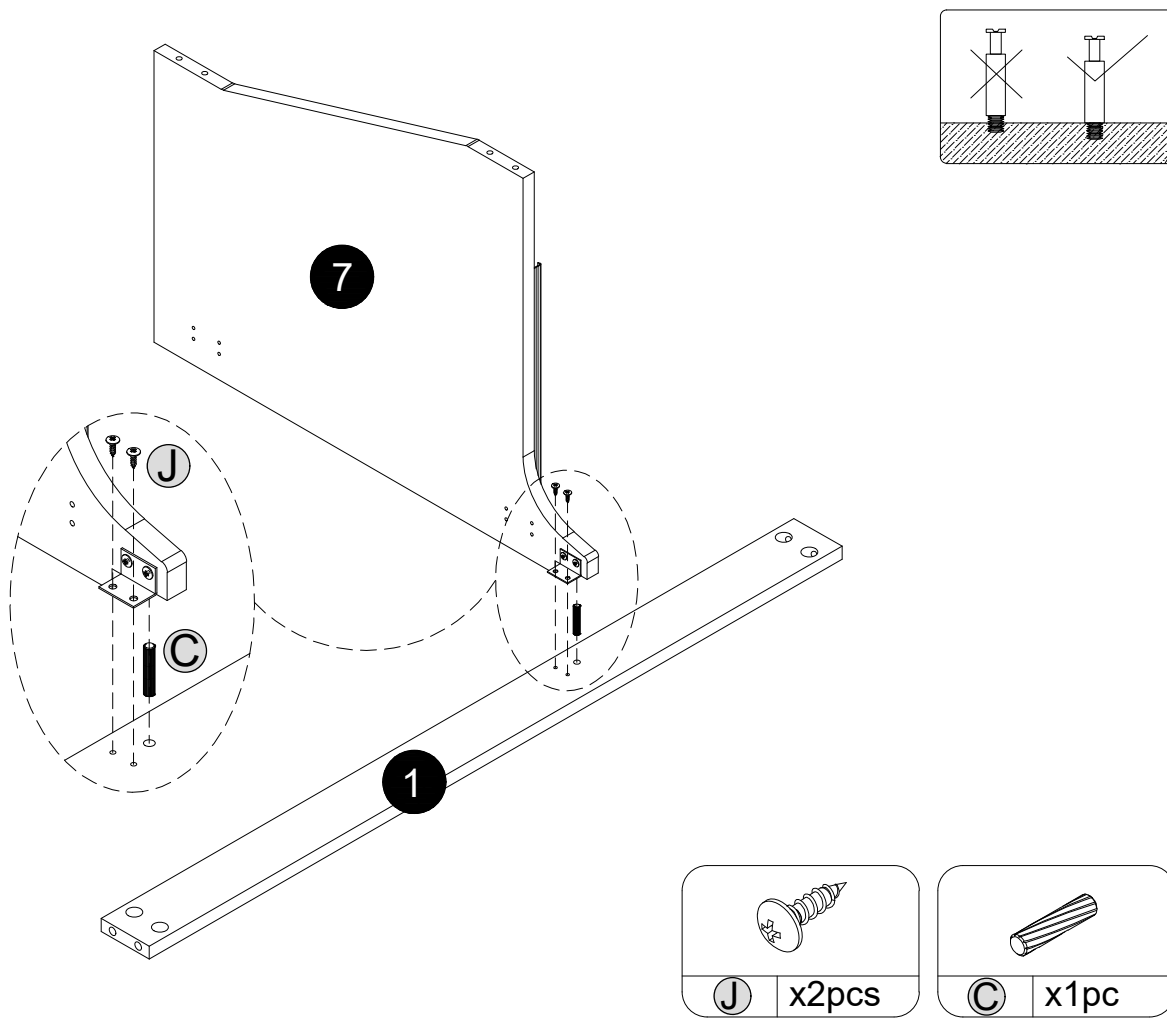




Step 11

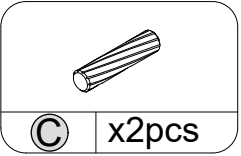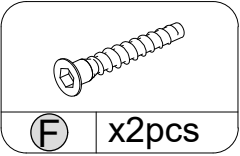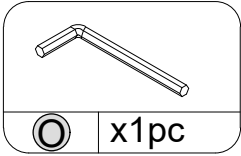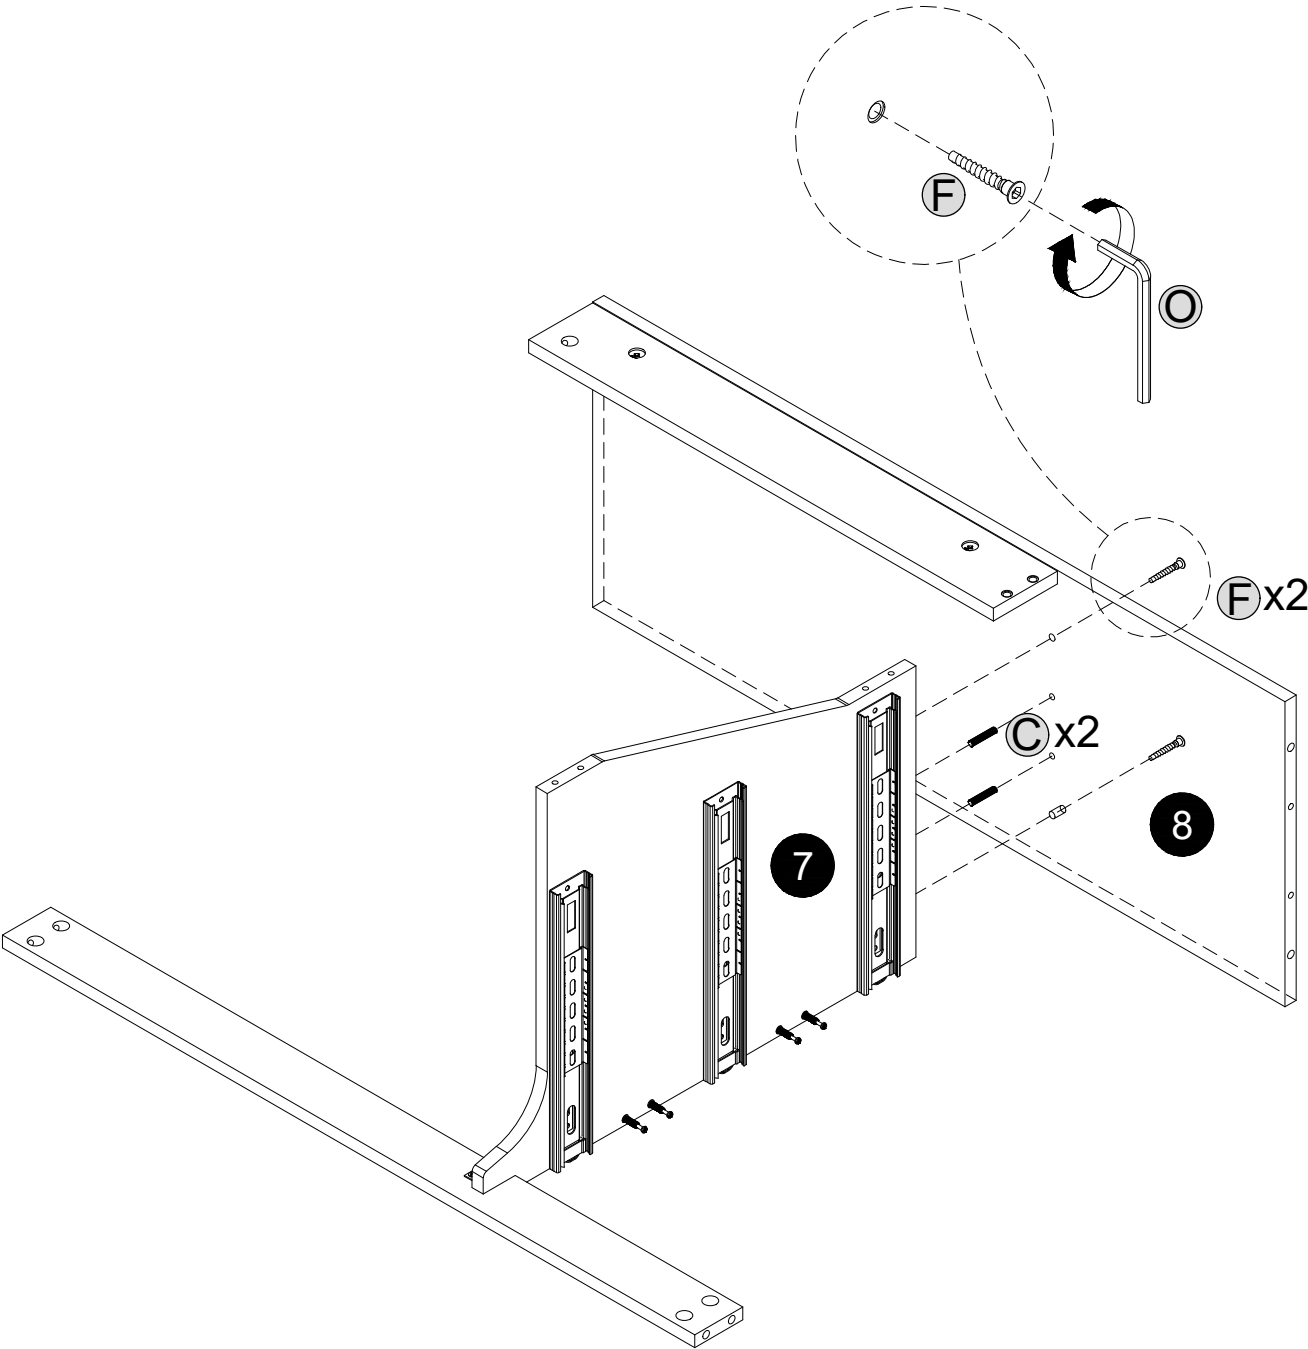




Step 12

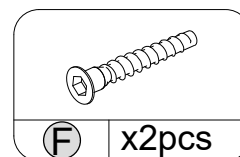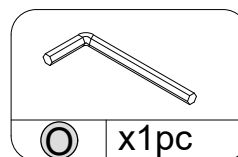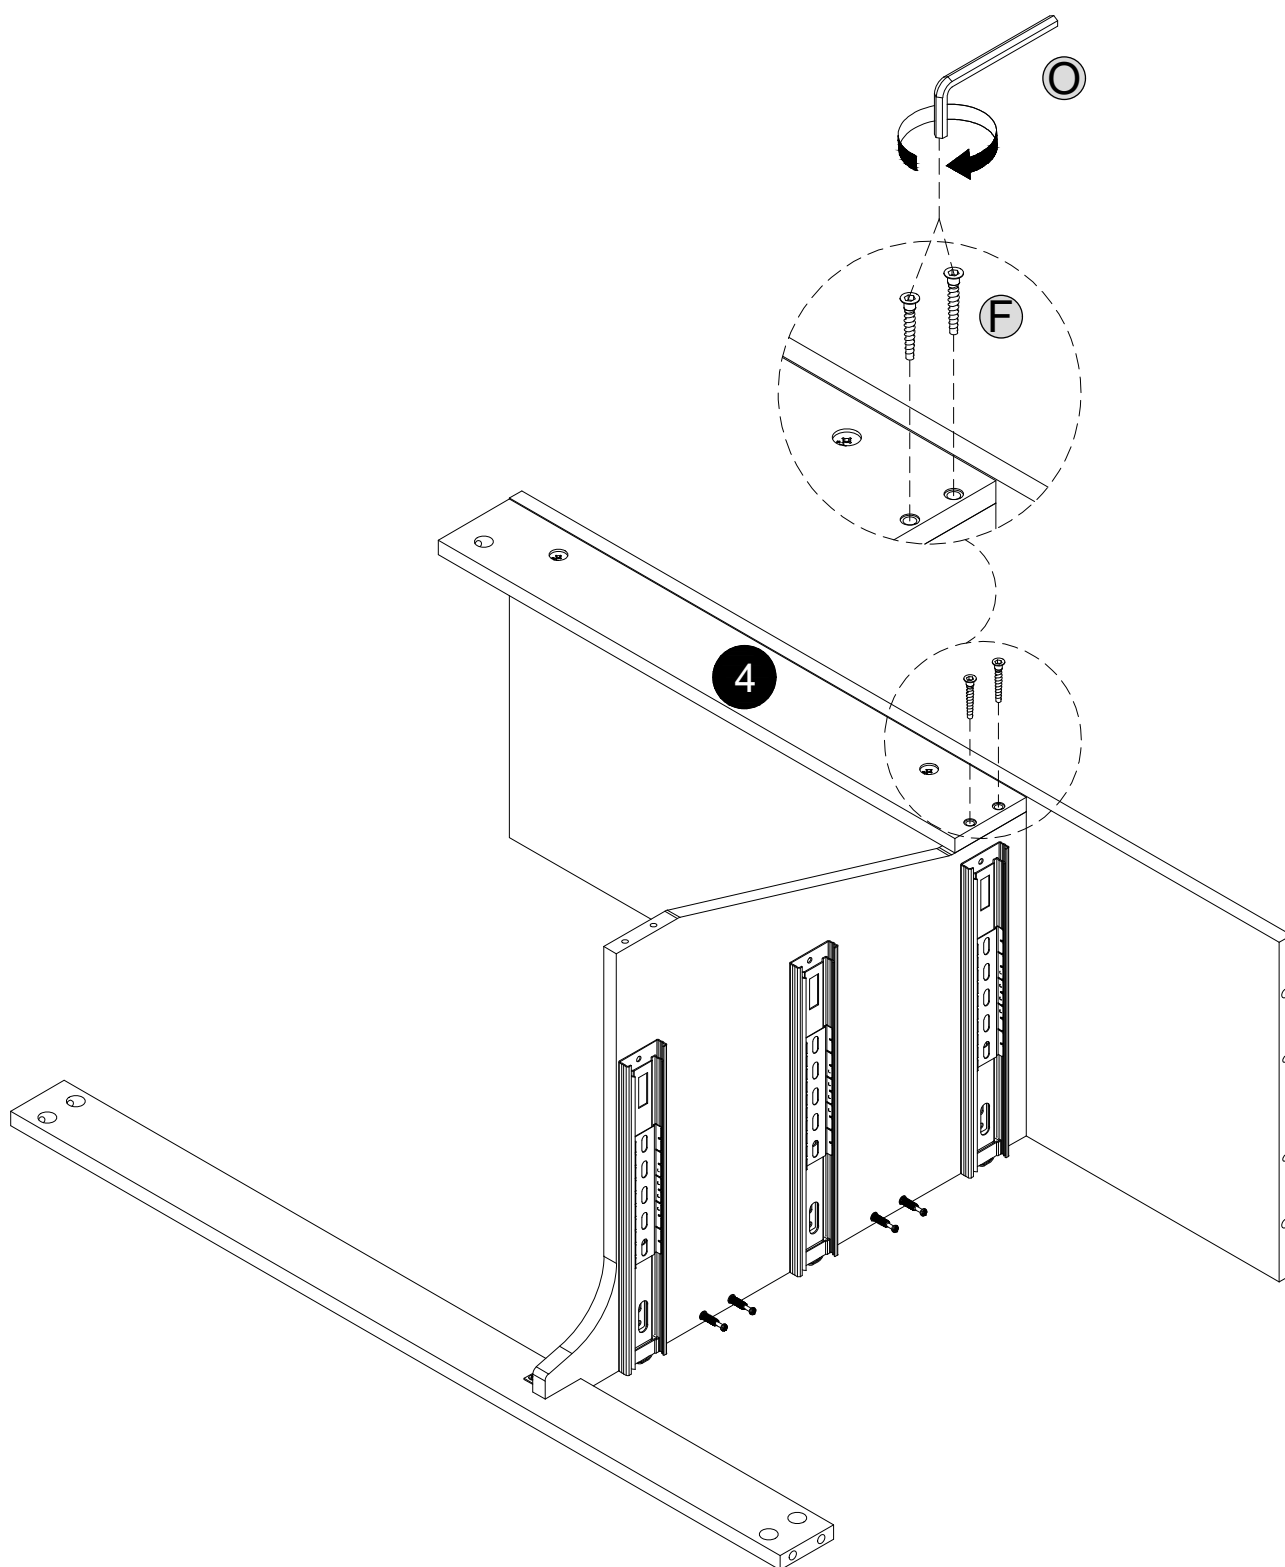



Step 13

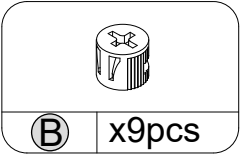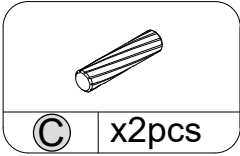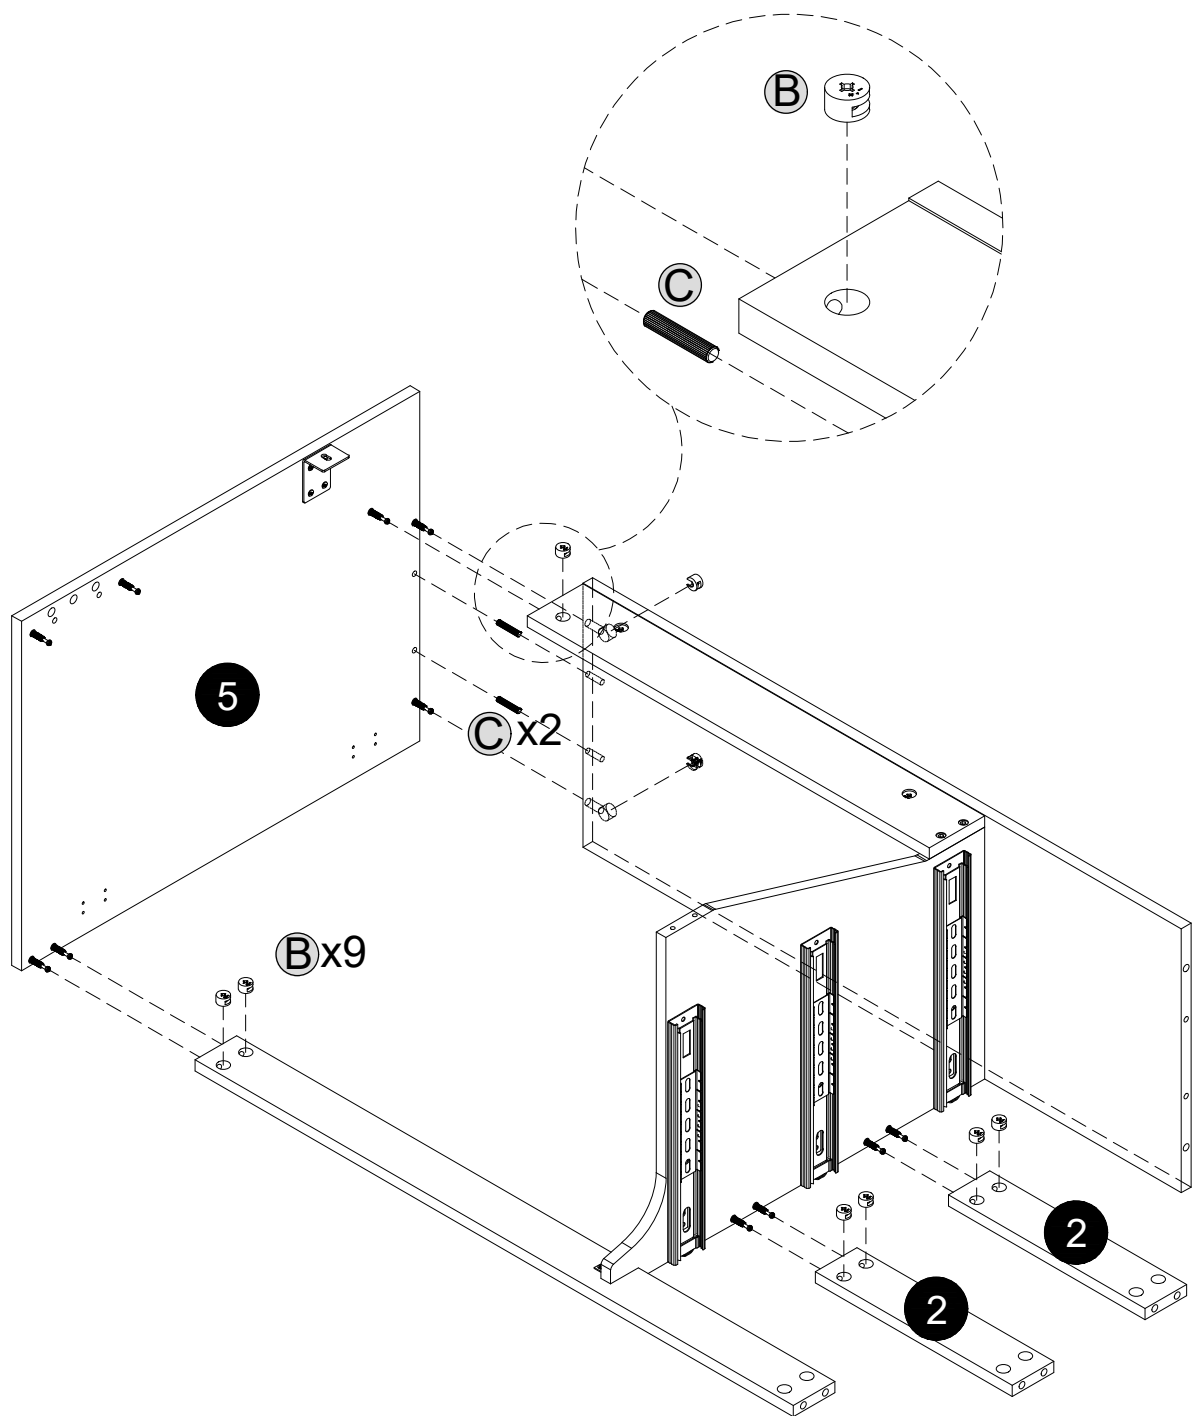


Step 14

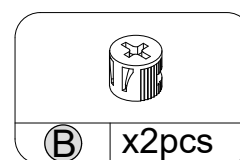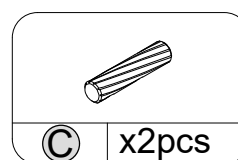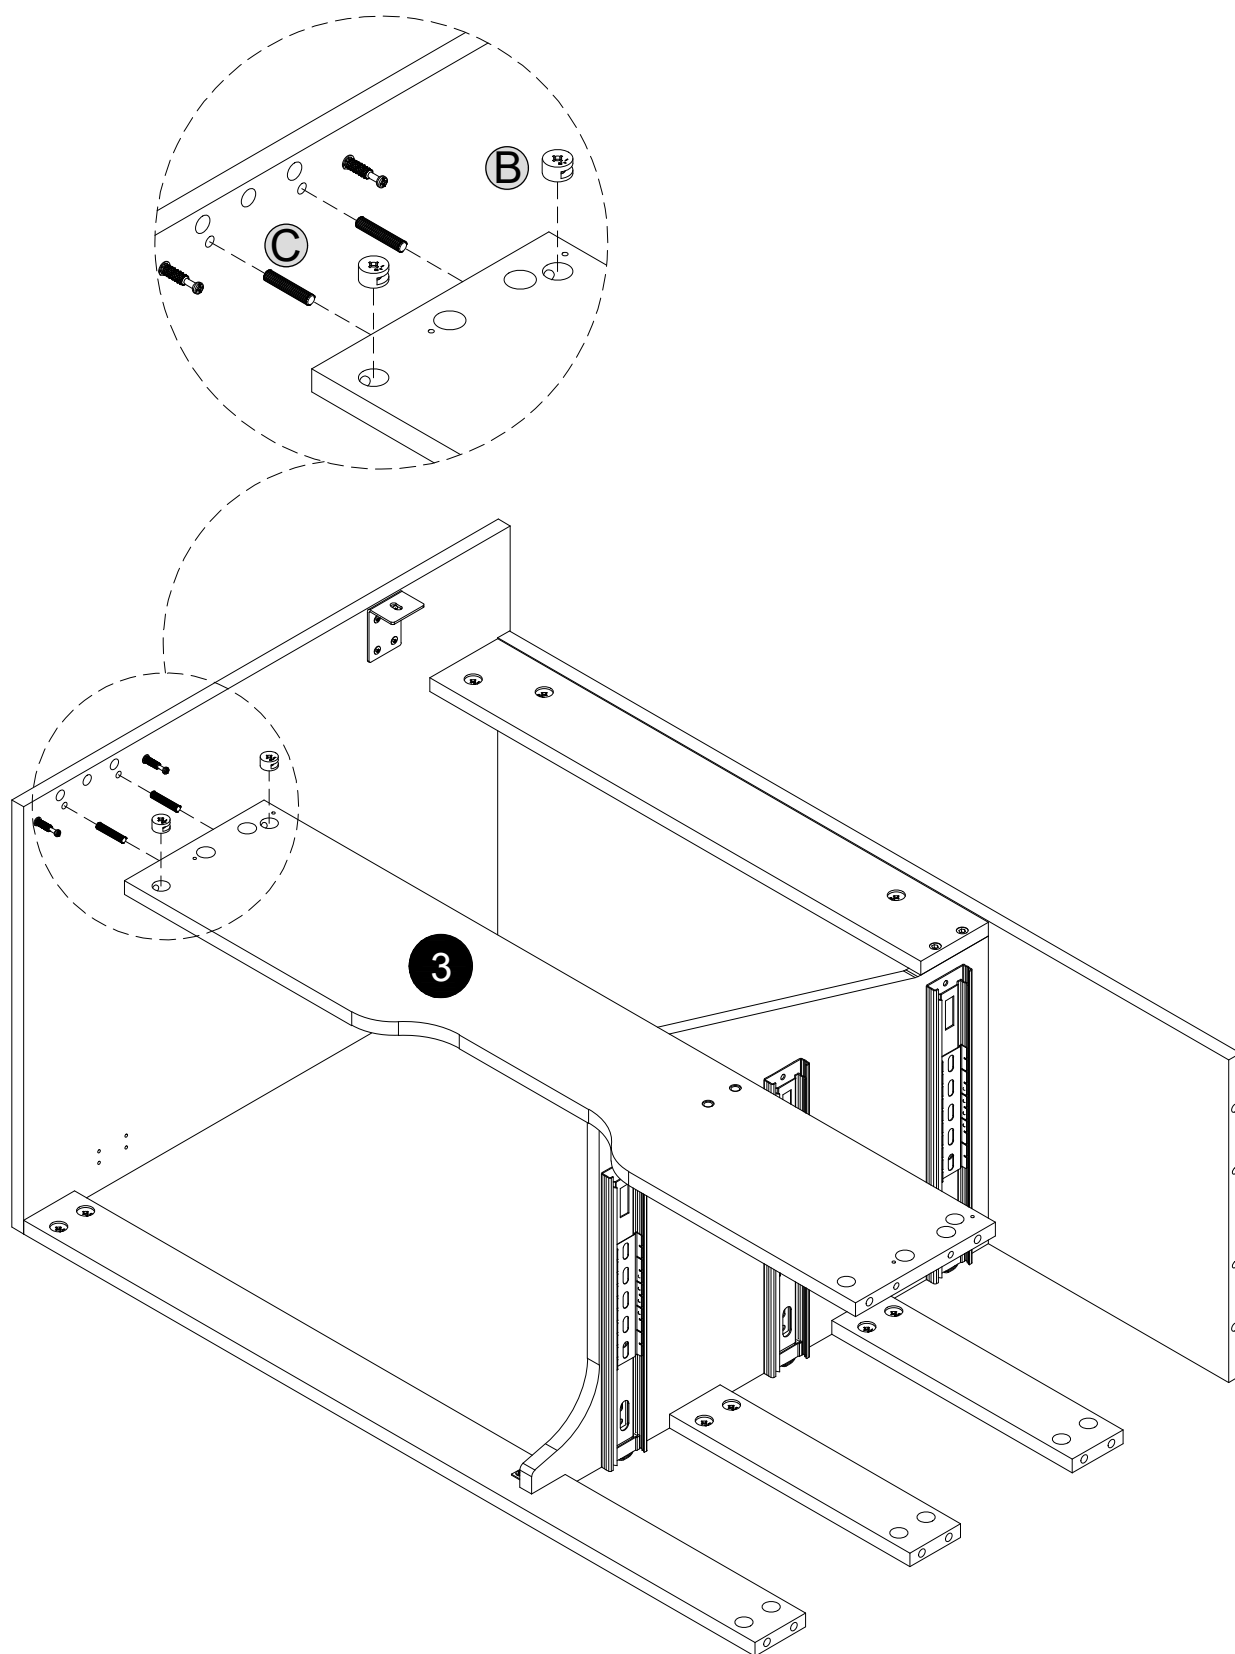

Step 15


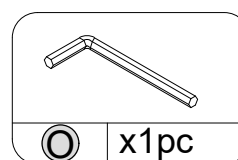
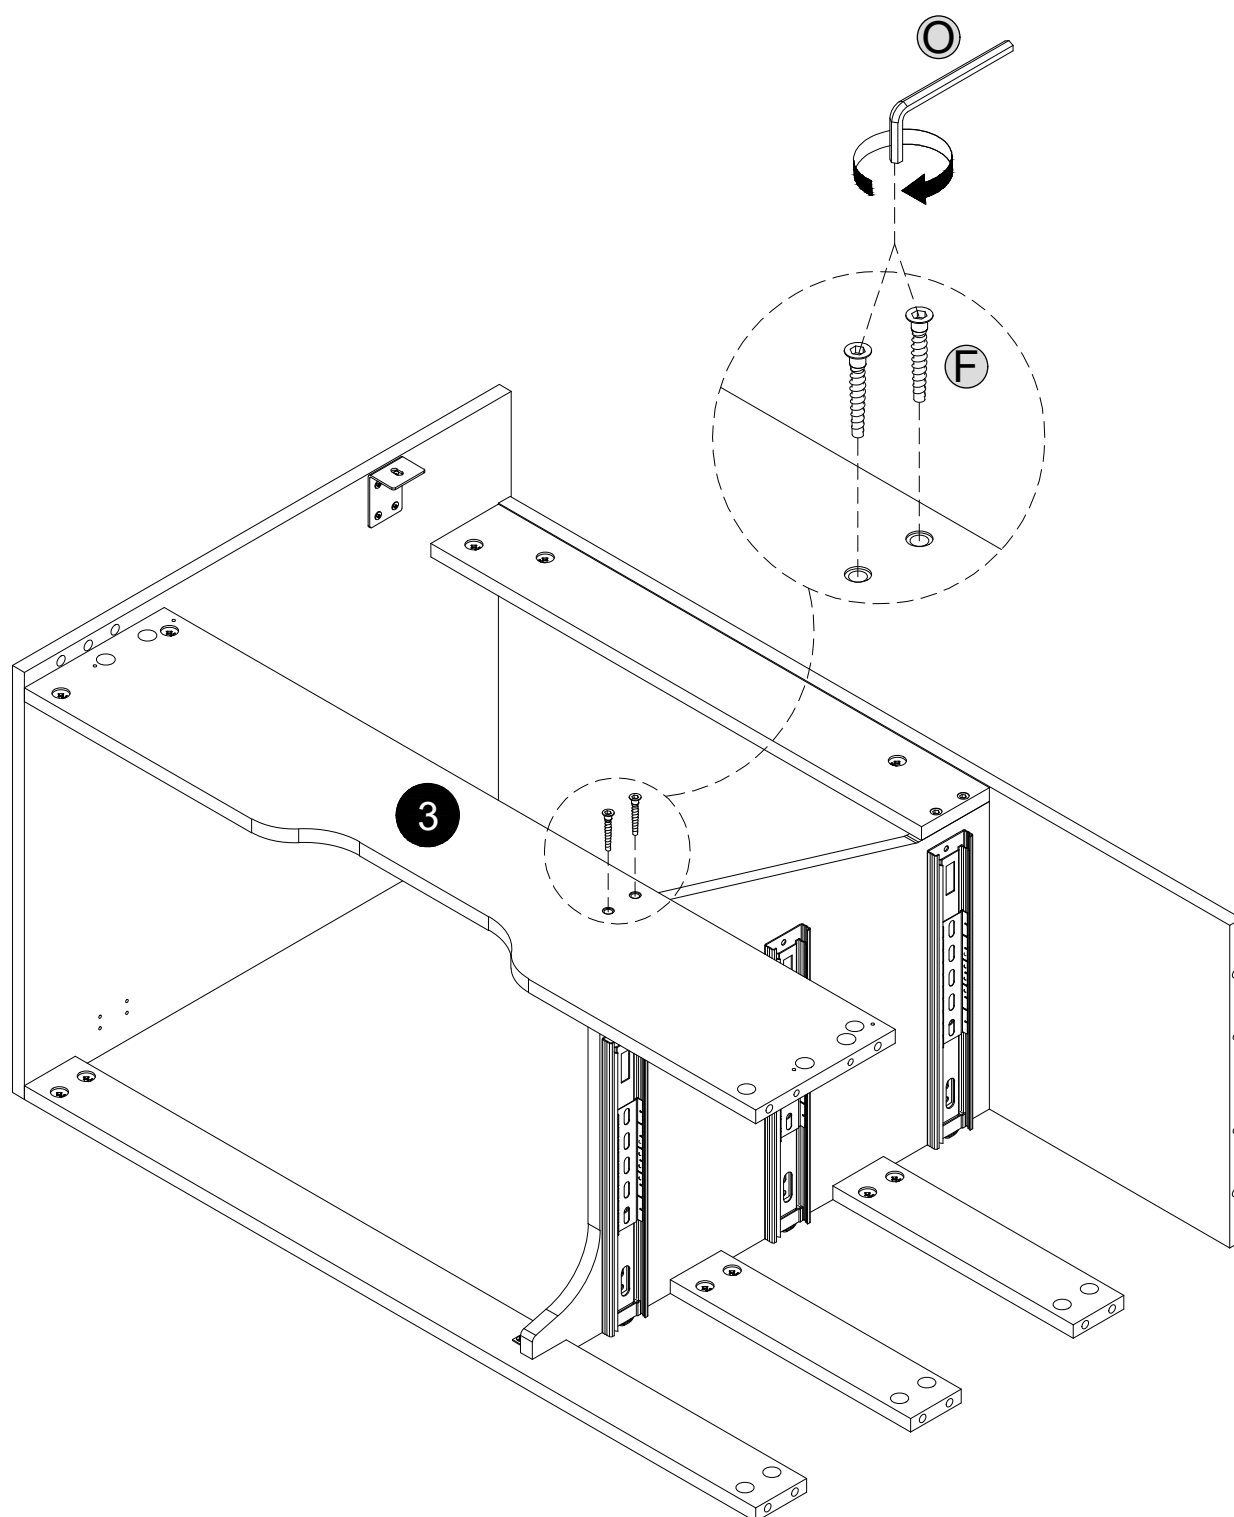


x1pc



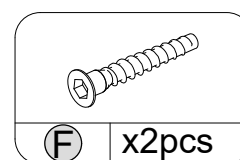


x2pcs



Step 16

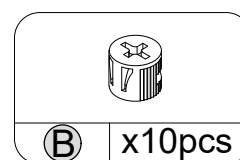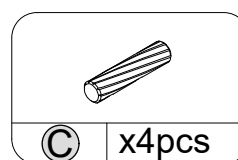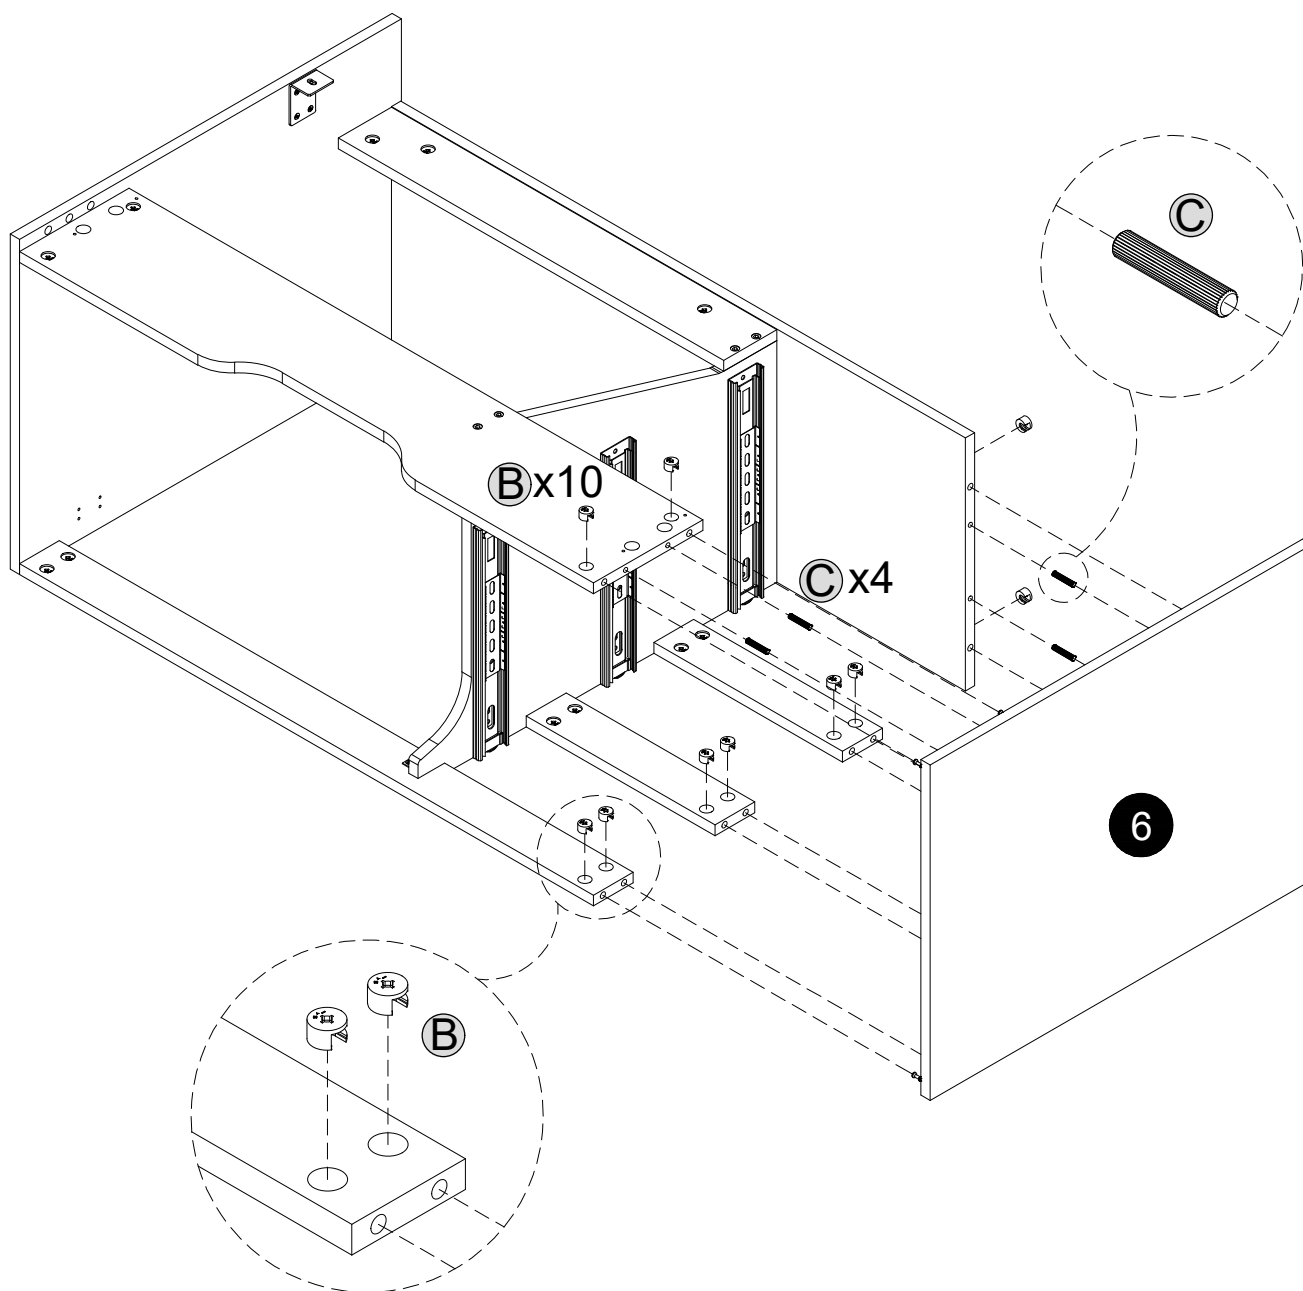


Step 17

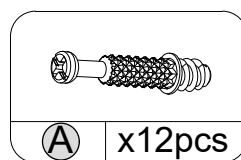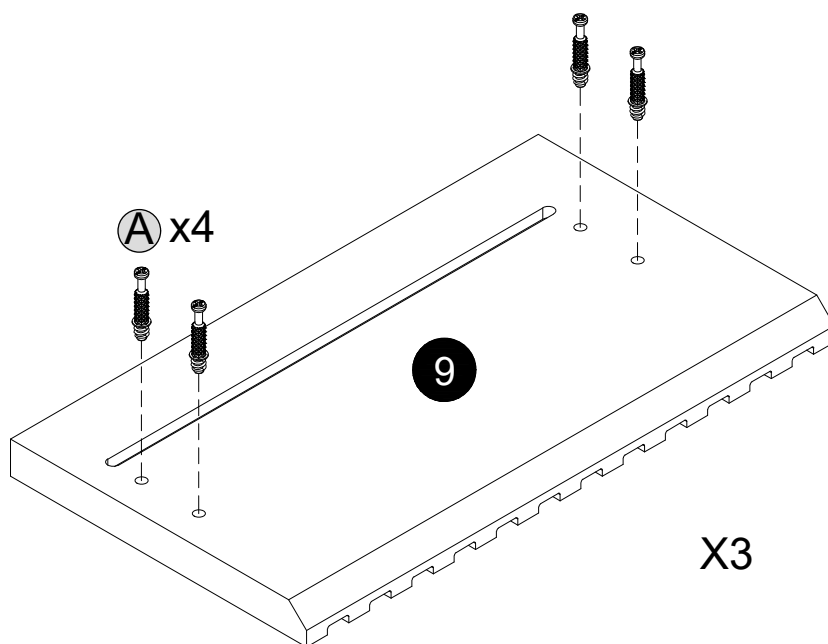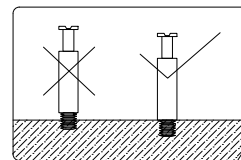



Step 18

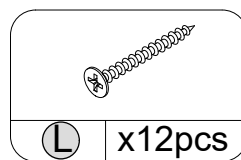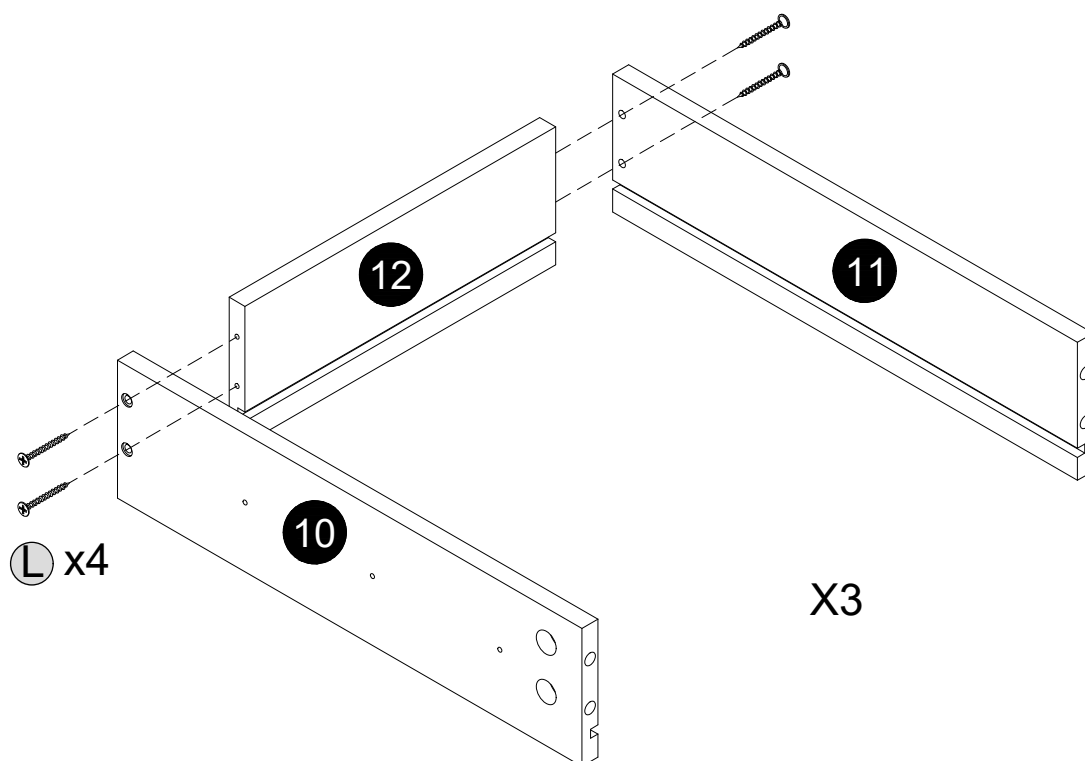


Step 19

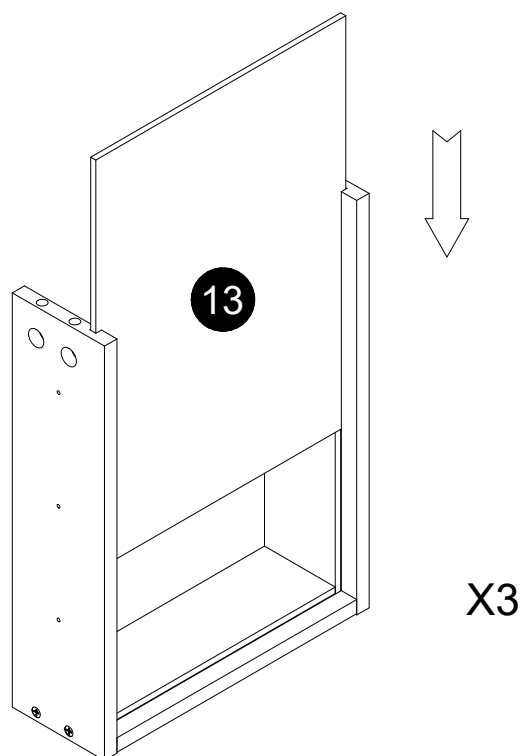


Step 20

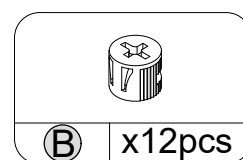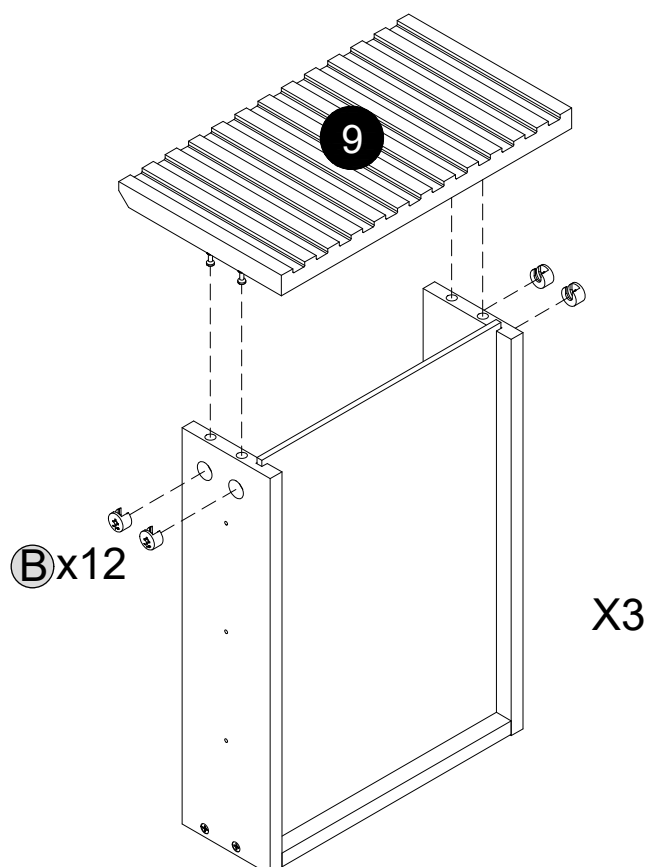



Step 21

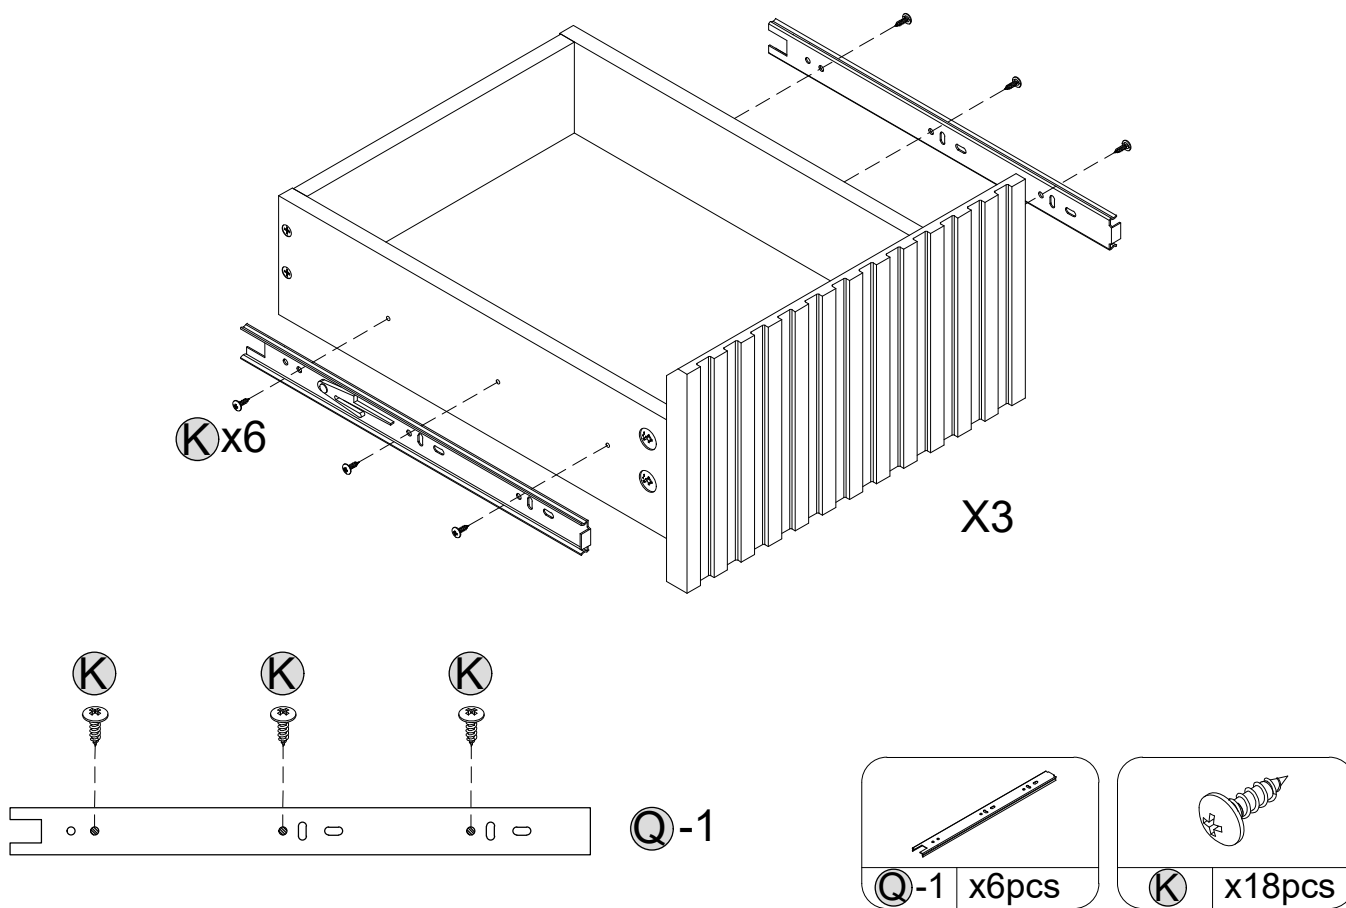


Step 22

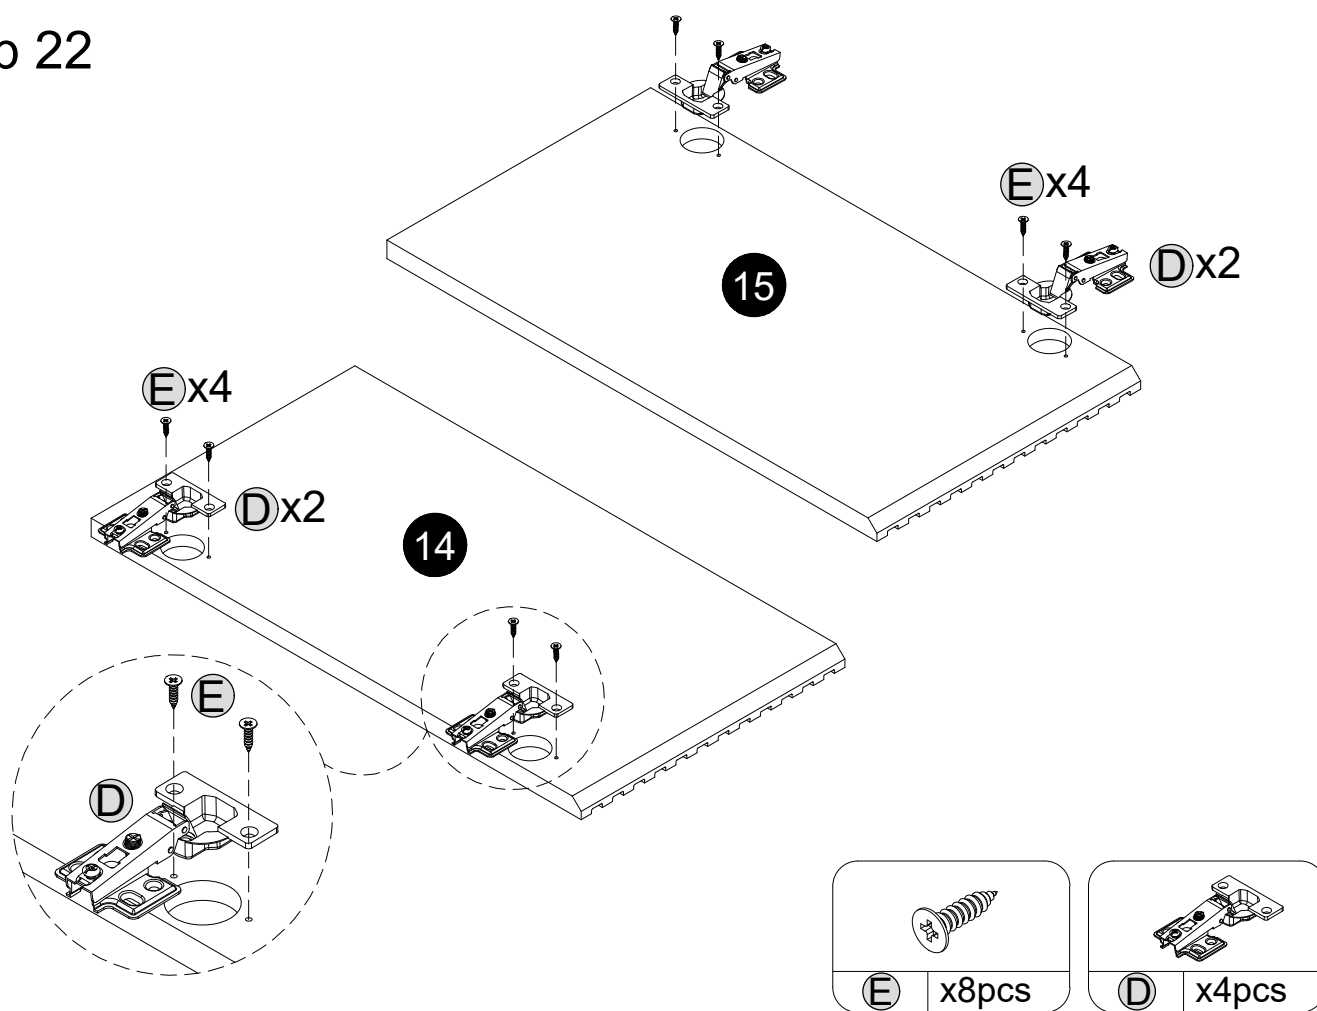

Step 23


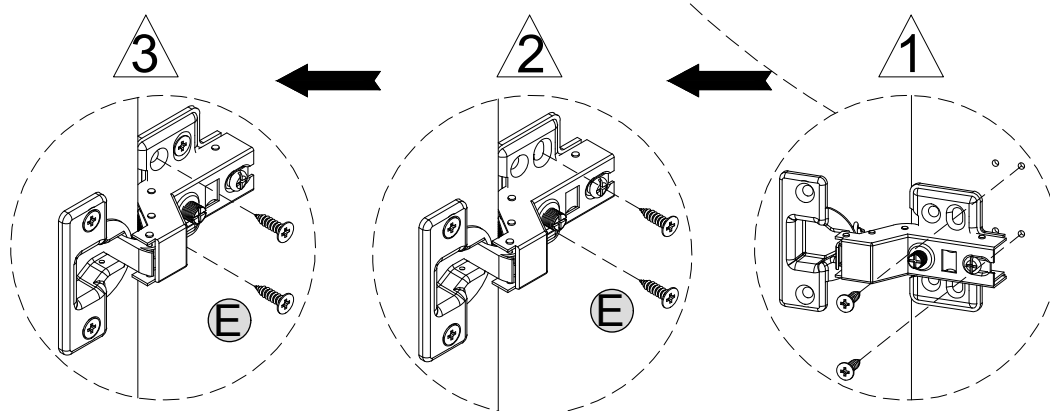
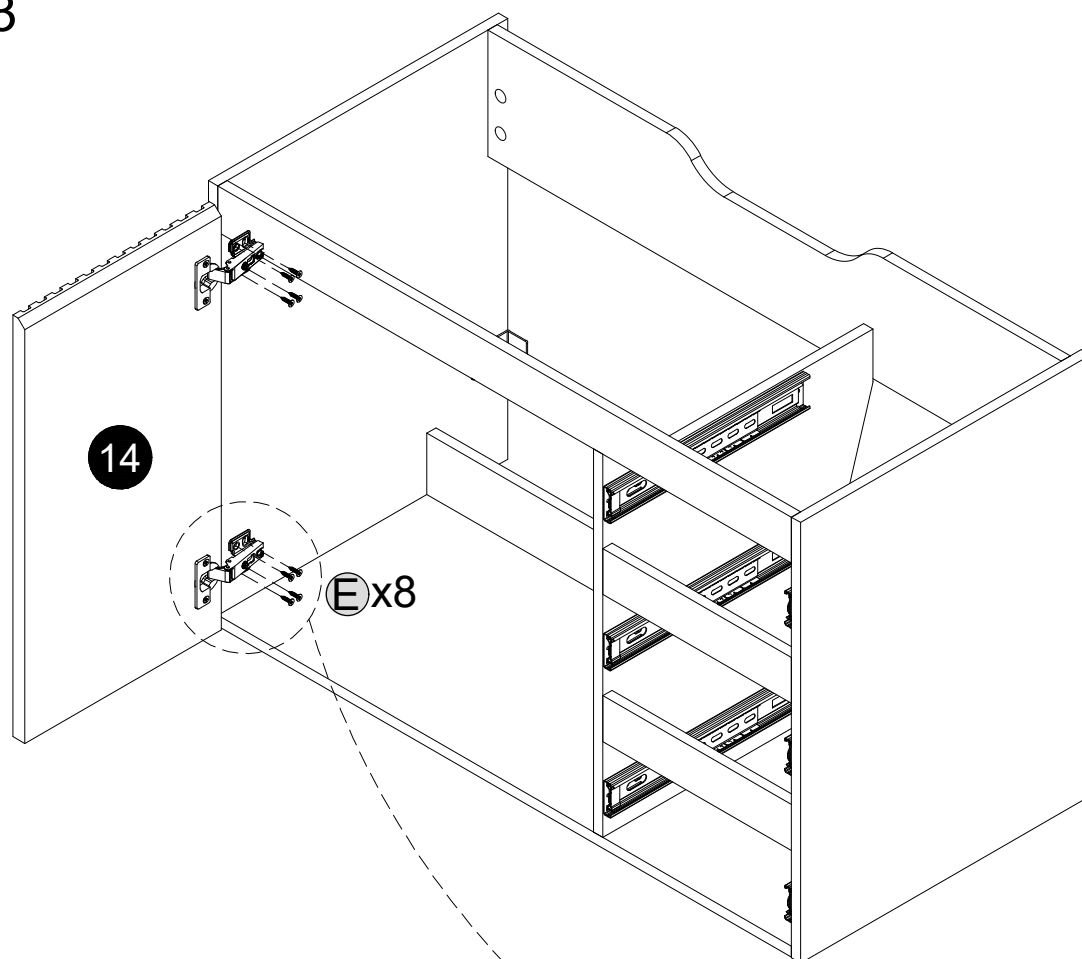


When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect




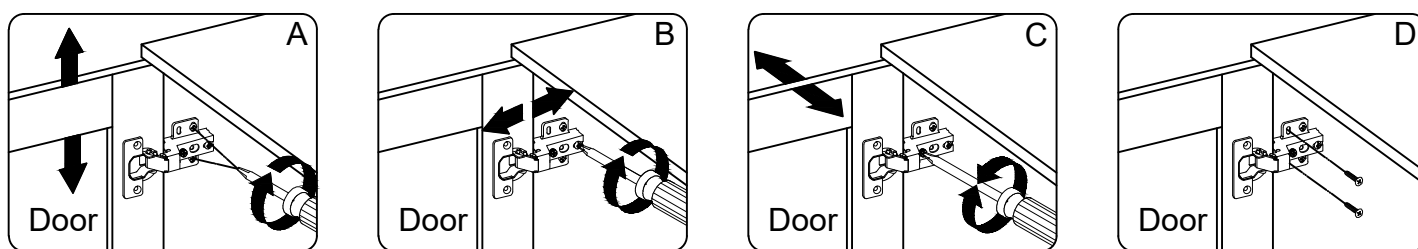


1. To adjust the doors up and down, please refer to step (A)
2. To adjust the distance between the doors and side panels, please refer to (B)
3. To adjust the gap between two doors, please refer to step (C)
4. After the adjustment finished, please tight the screws, refer to step (D)

Step 24

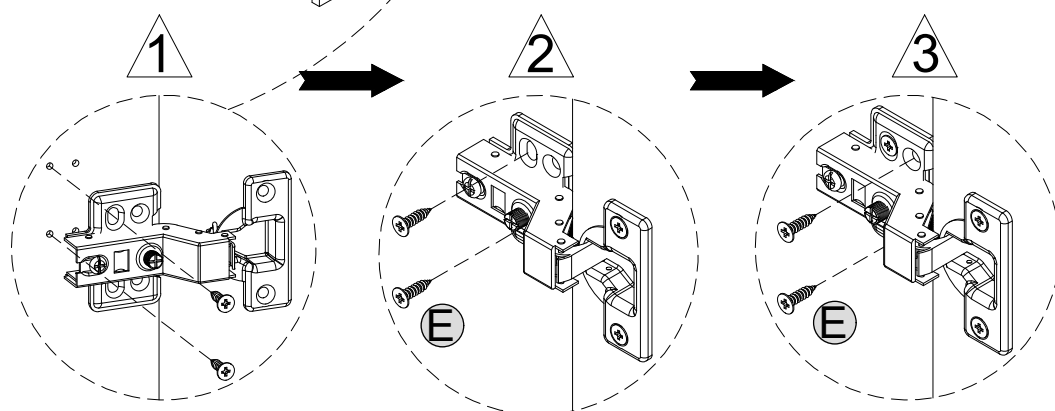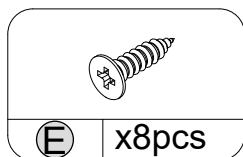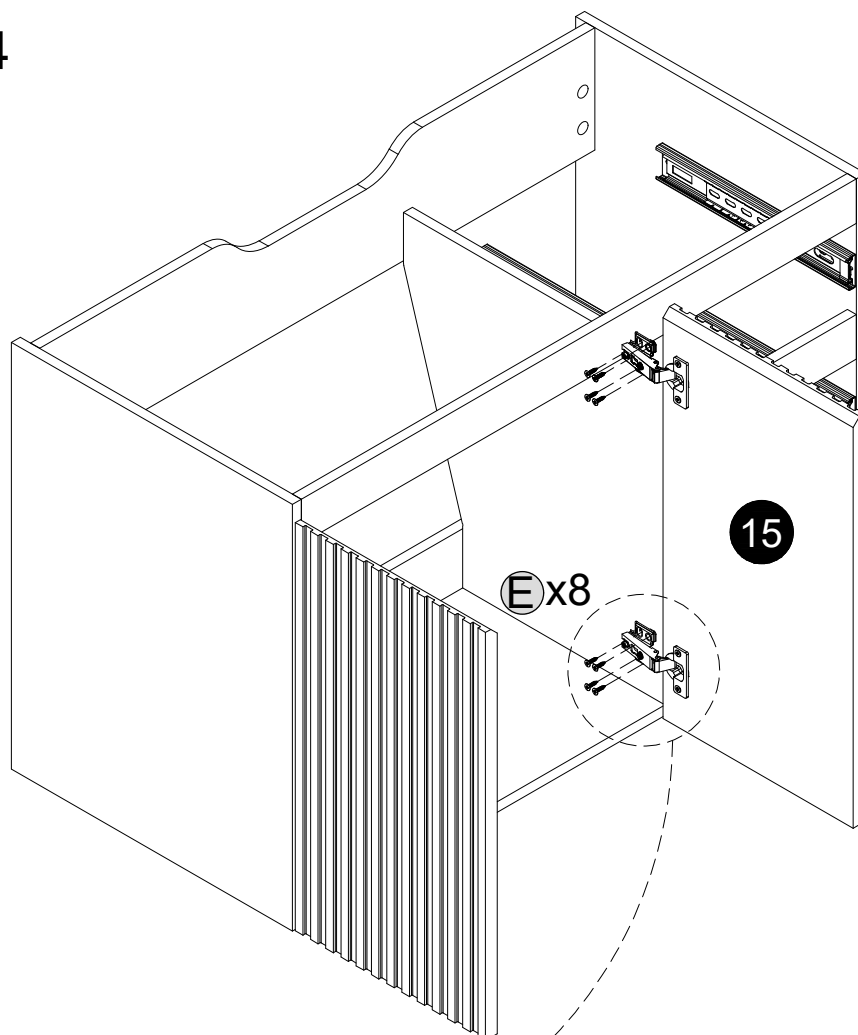


When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect

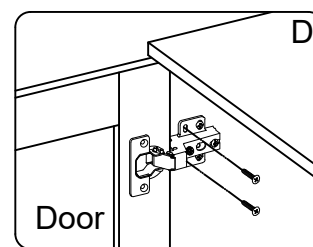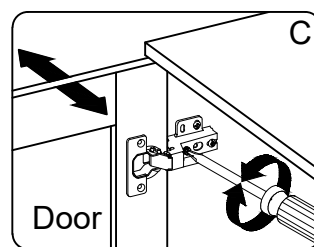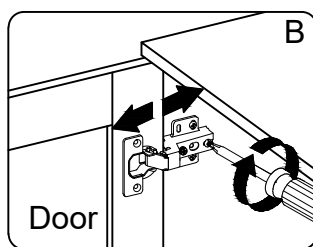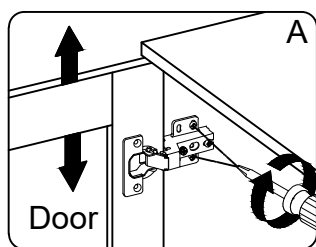


1. To adjust the doors up and down, please refer to step (A)
2. To adjust the distance between the doors and side panels, please refer to (B)
3. To adjust the gap between two doors, please refer to step (C)
4. After the adjustment finished, please tight the screws, refer to step (D)

Step 25

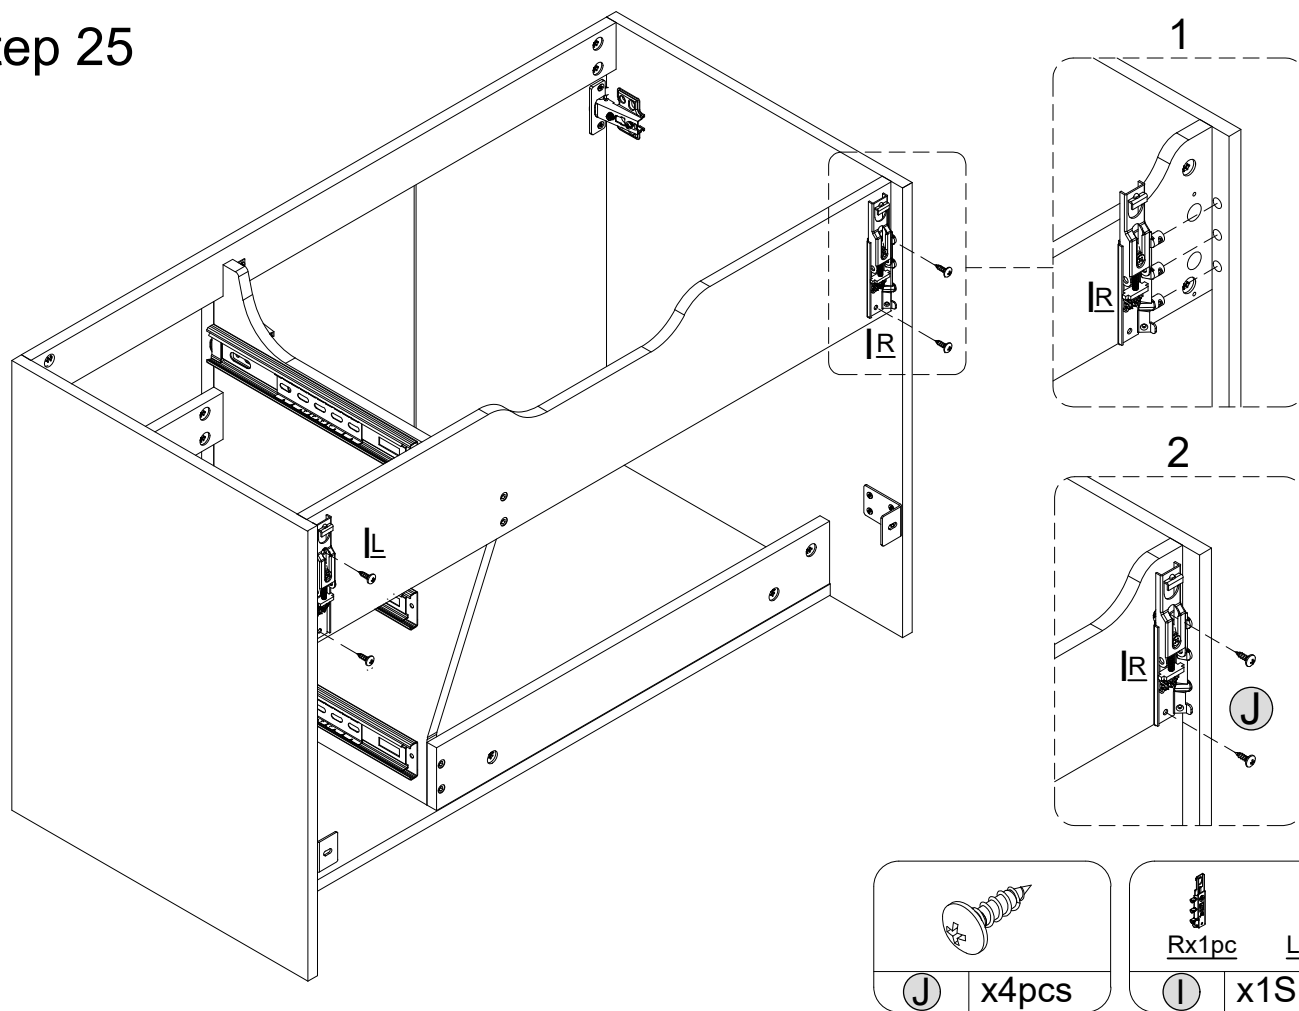


Step 26

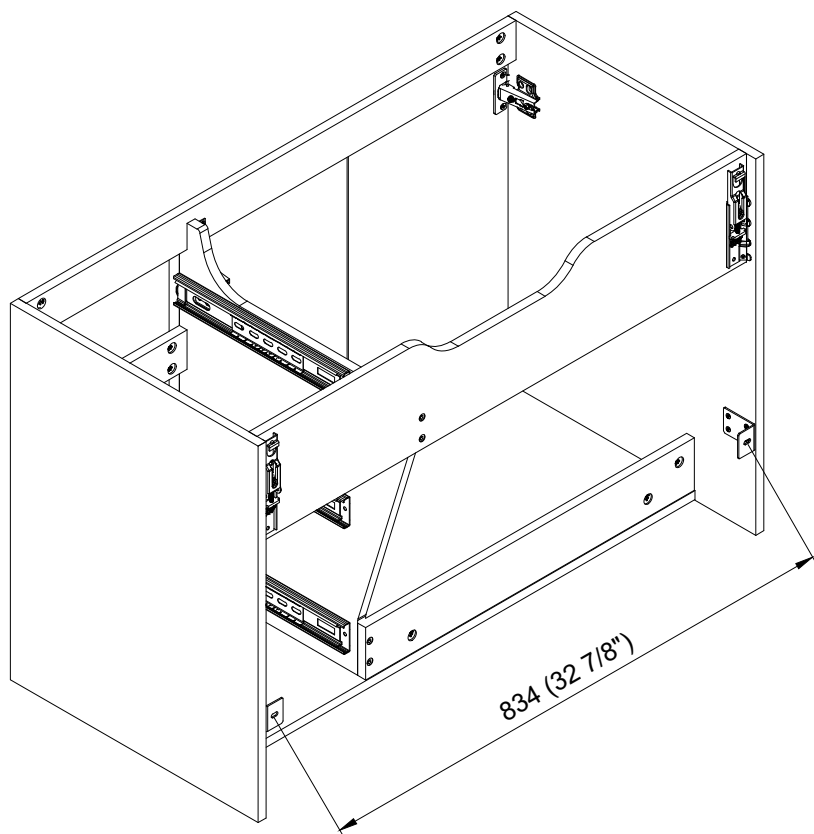





Step 27

WALL

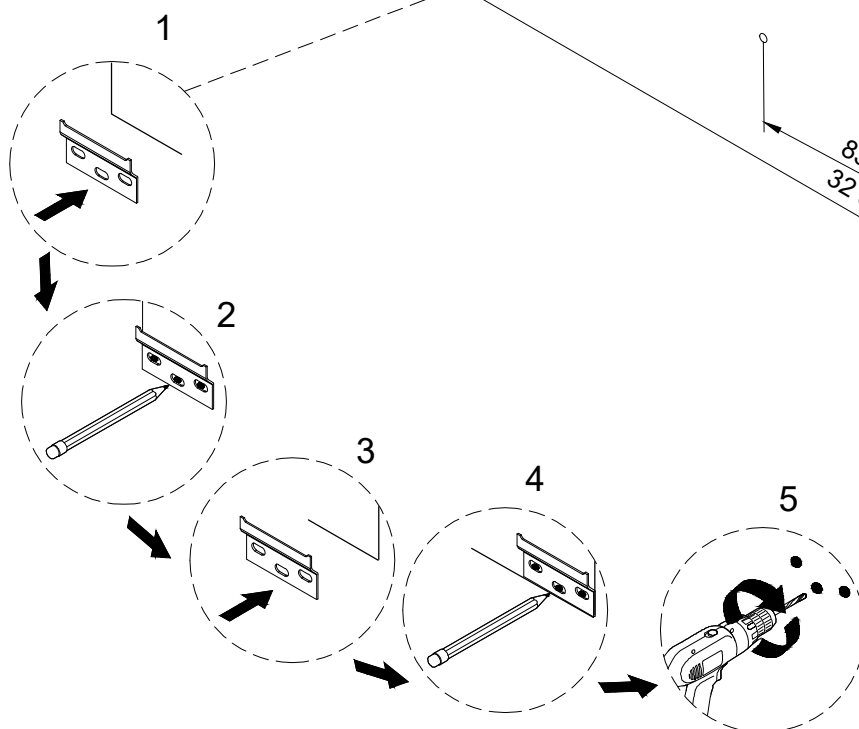


Step 28


WALL

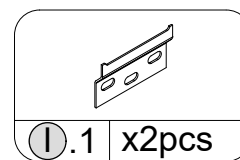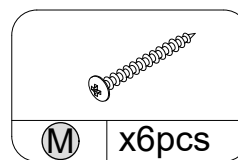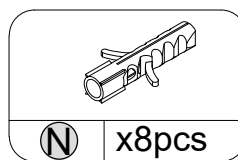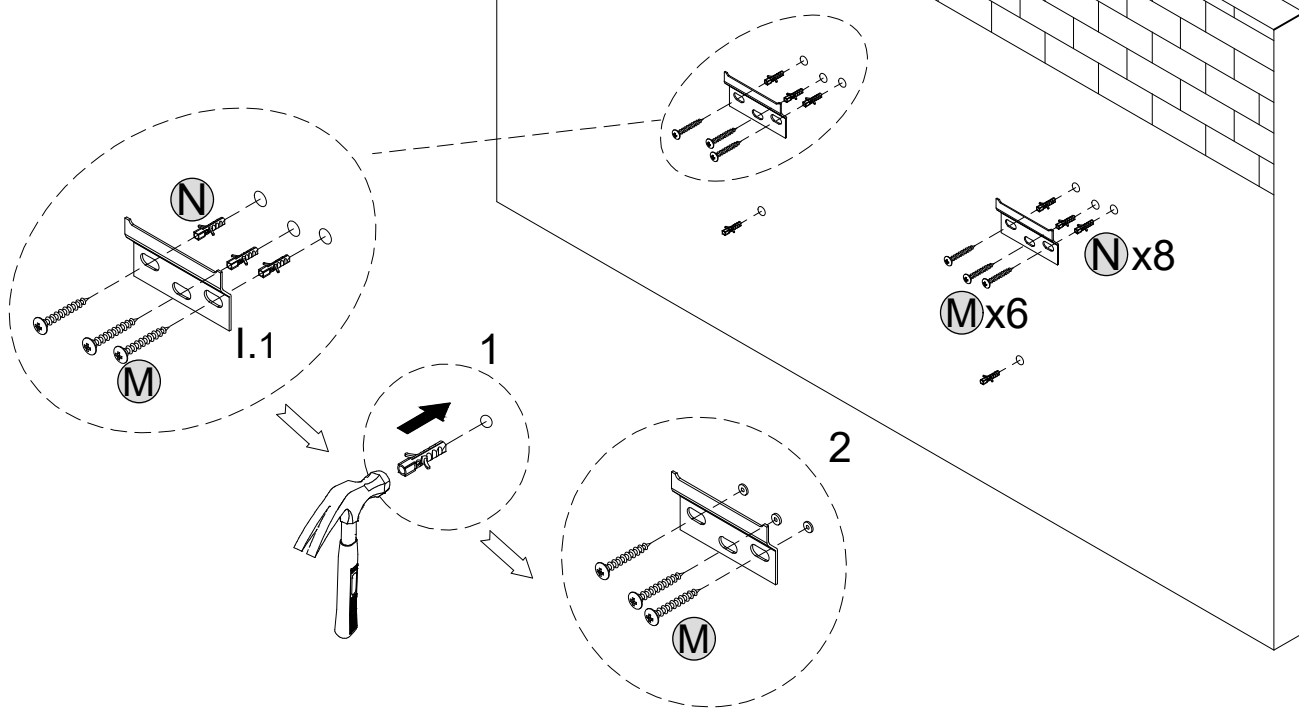

Step 29

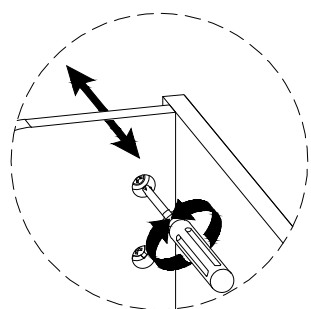


To adjust in or out

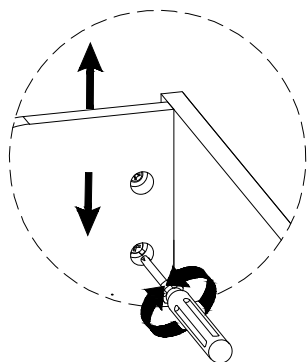



To adjust up or down

WALL

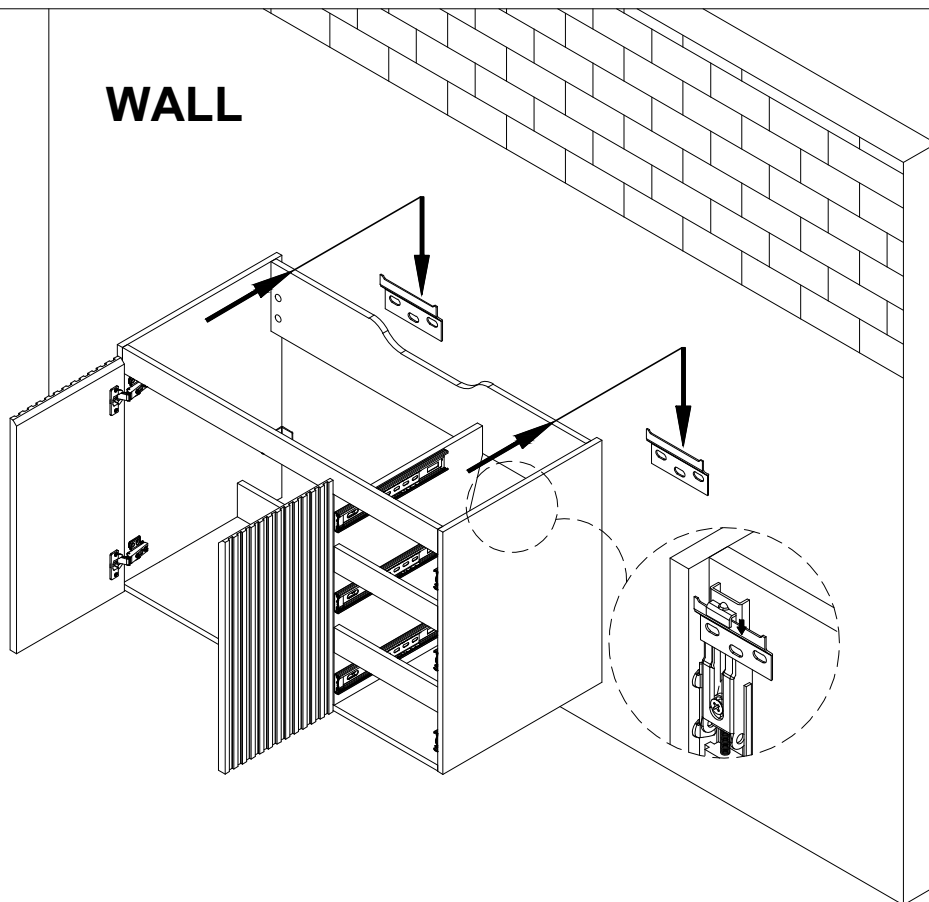


Step 30

WALL

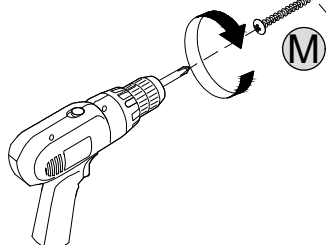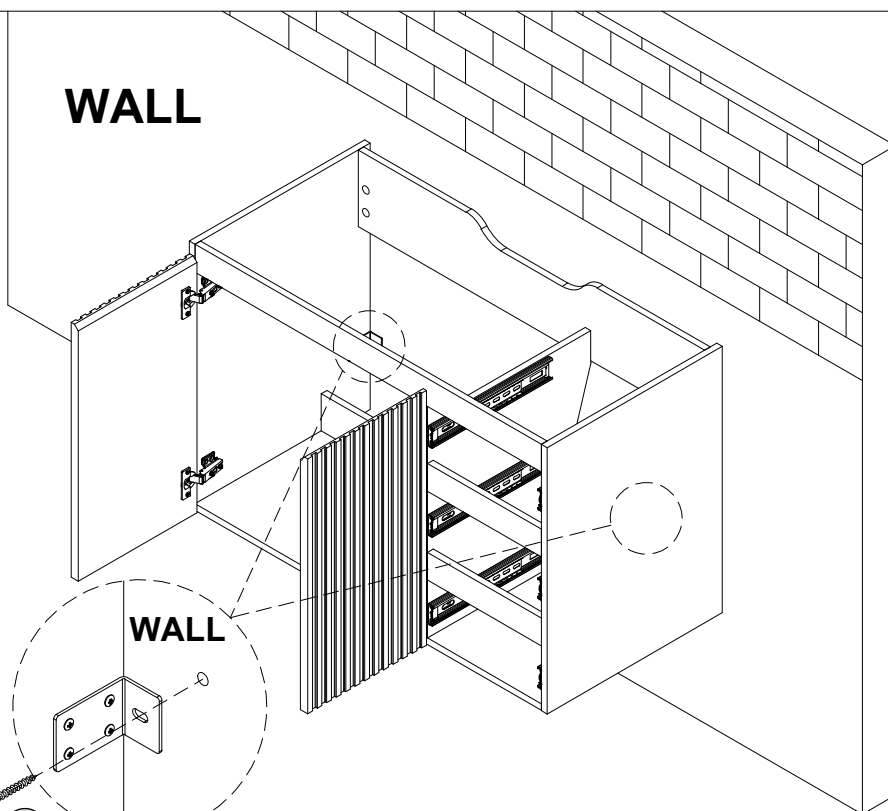

(M)




(M)

x2pcs


Step 31

WALL

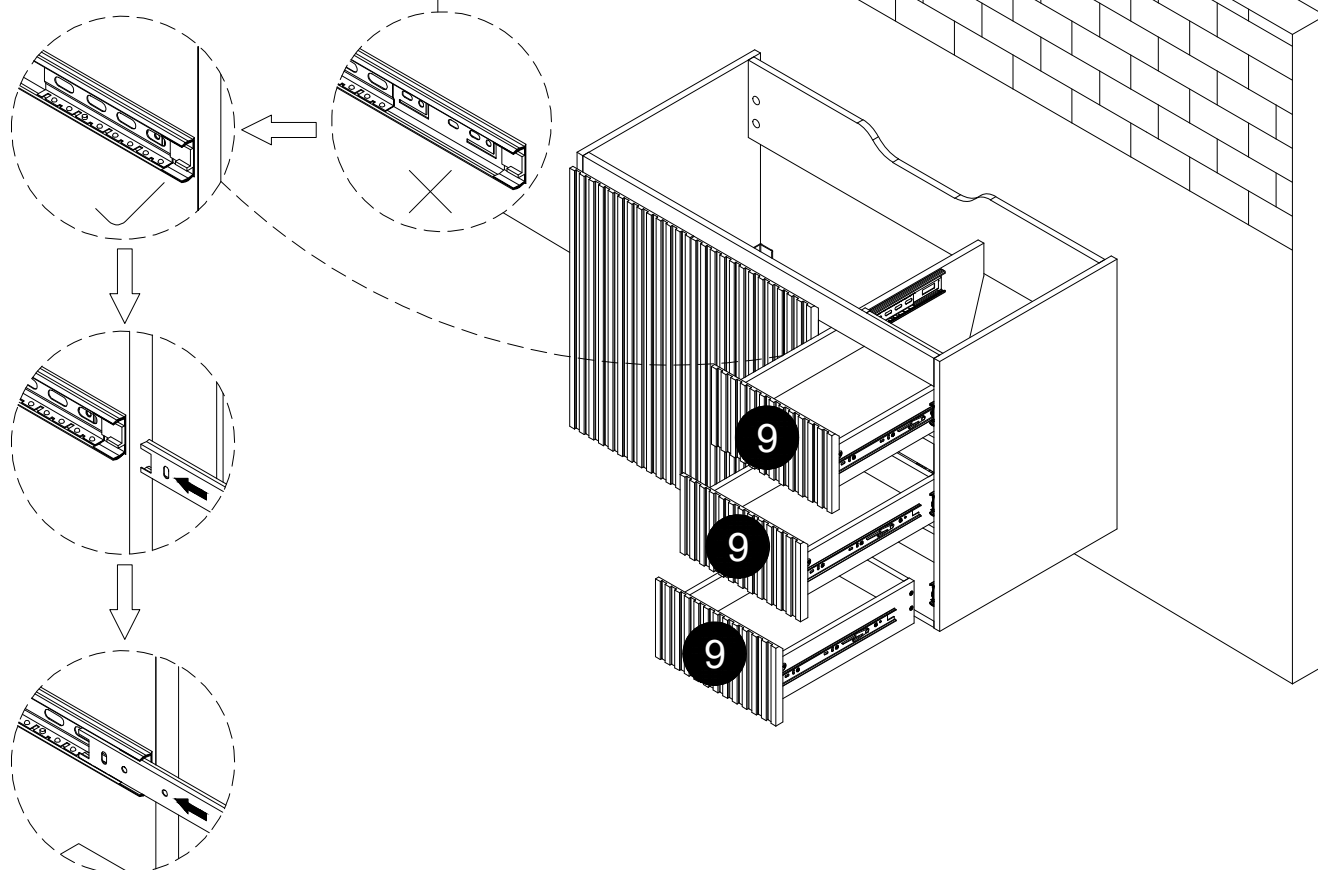



Step 32

WALL

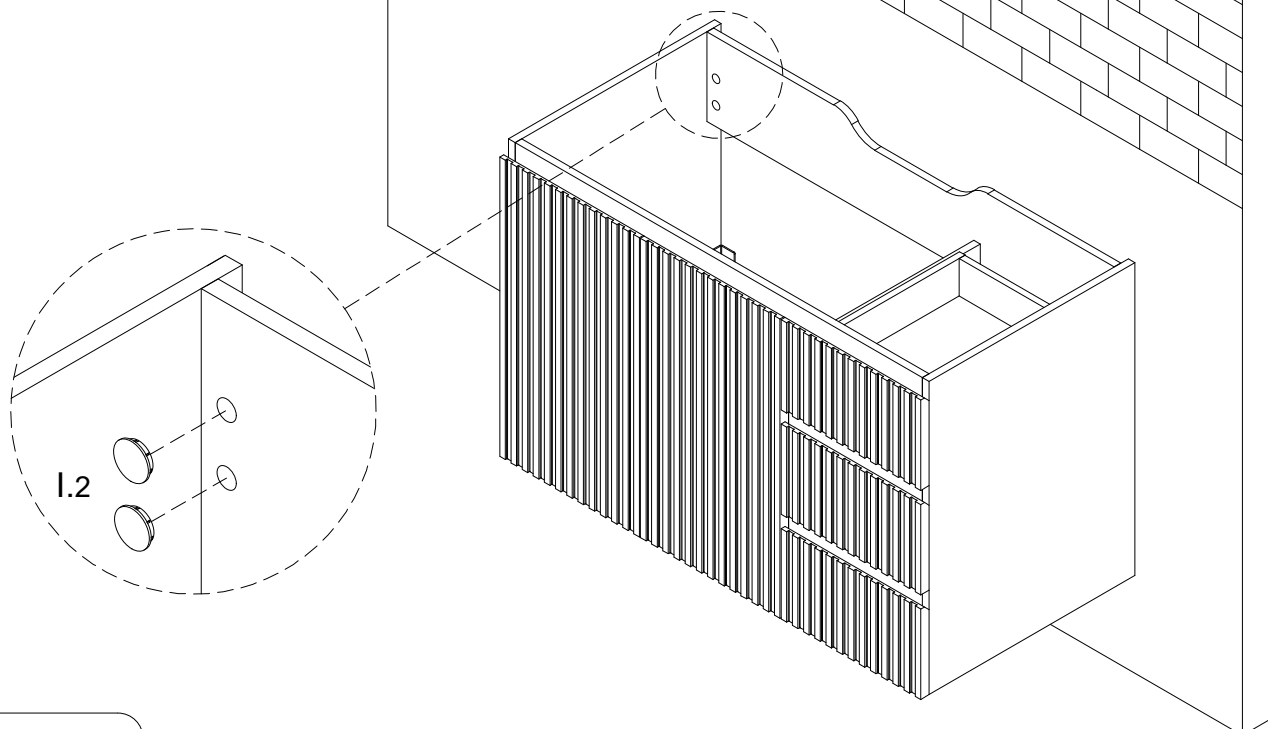

1.2 x4pcs


Step 33

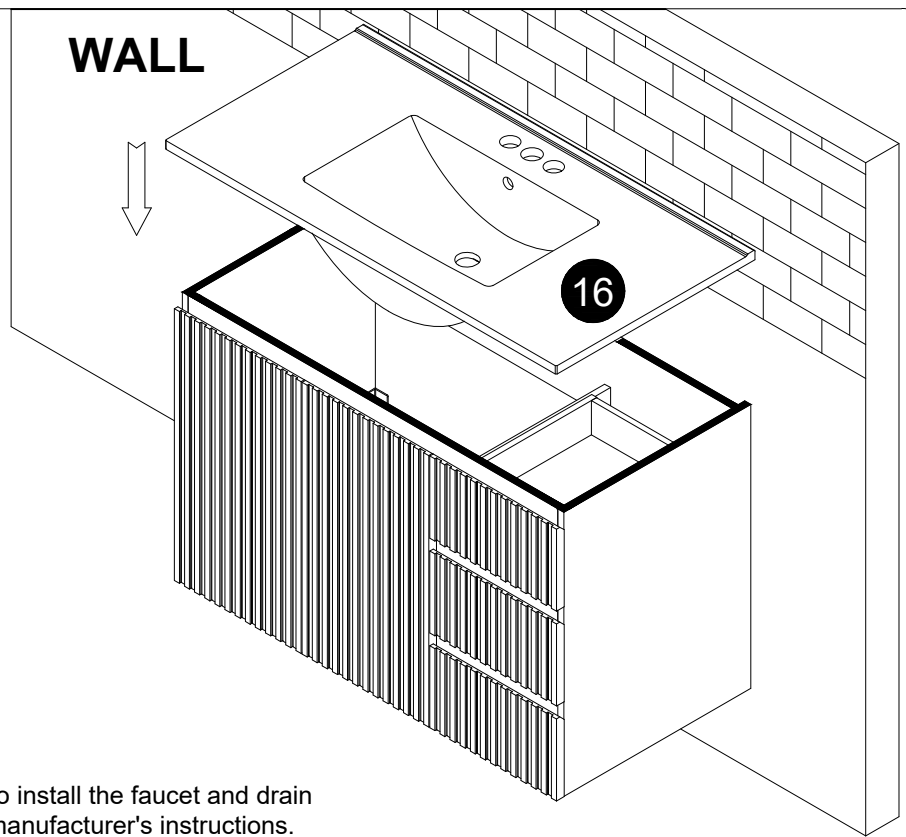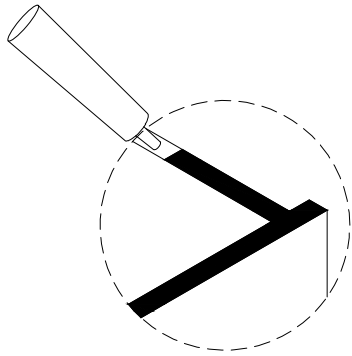


Note: At this stage it may be easier to install the faucet and drain kit (not included) to top (16) per the manufacturer's instructions.
* Apply stain free silicone or latex silicone caulk (not included) to the top edge of vanity. With the help of another adult, gently lower top (16) onto the vanity. Wipe away any excess caulk with a soft cloth, and wait approximately 24 hours for it to dry.

Step 34

WALL

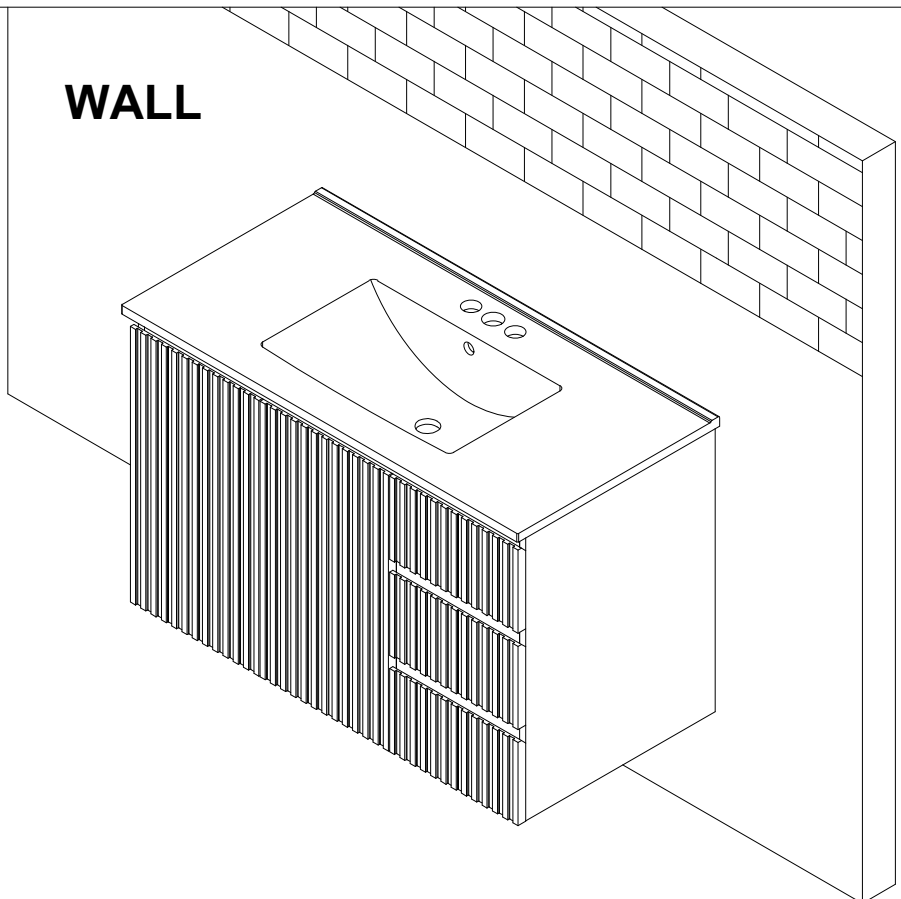


HINGE ADJUSTMENTS

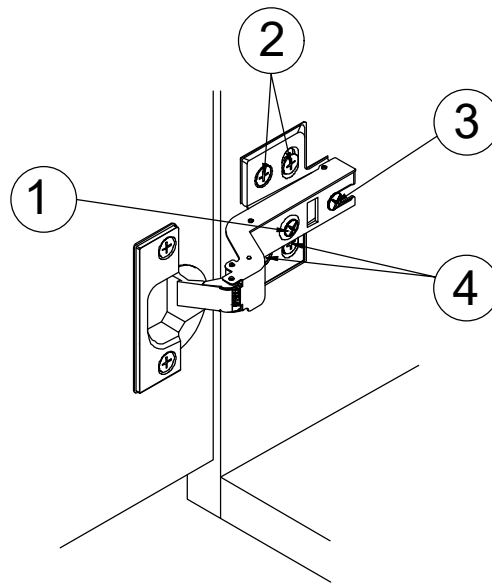


① Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

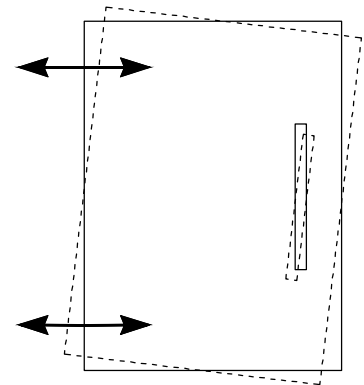

② ④ Height adjustment

While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

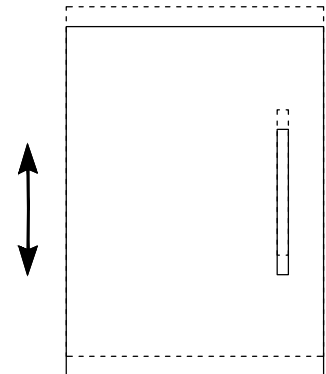

③ Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

