


ASSEMBLY INSTRUCTION


DINNING CHAIR

DO NOT FULLY TIGHTEN BOLTS UNTIL THE ENTIRE ITEM IS COMPLETELY ASSEMBLED


A=1 PC

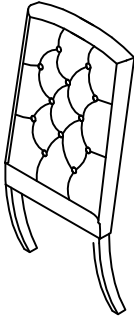

B=1 PC

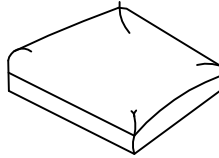


C=2 PCS




No.	Description		Q.TY
1	BOLT Ø 5/16" X75mm		4 PCS
2	BOLT Ø 5/16" X60 mm		4 PCS
3	BOLT Ø 5/16" X38 mm		2 PCS
4	FLAT WASHER		10 PCS
5	SPRING WASHER		10 PCS
6	ALLEN KEY		1 PC

STEP 1

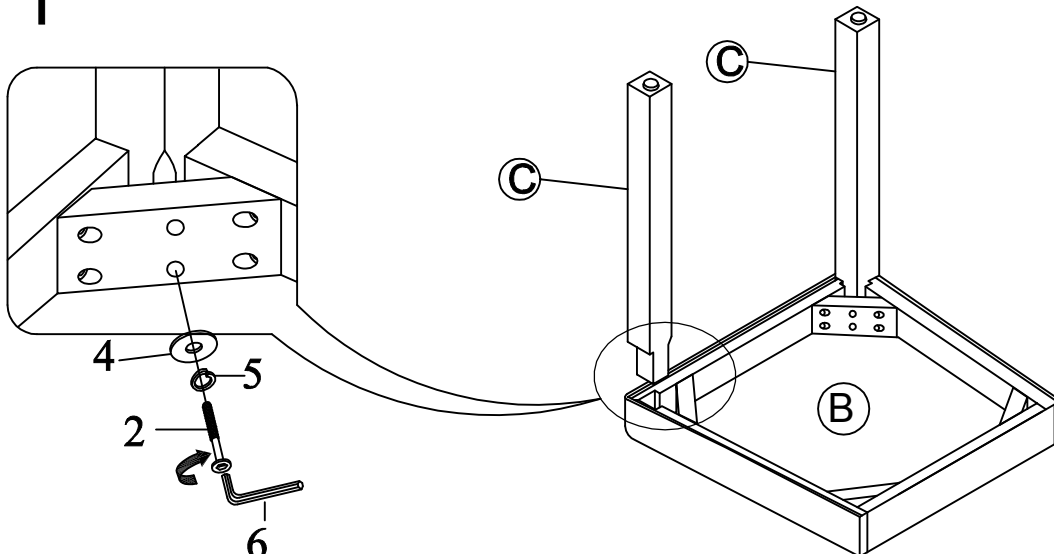

STEP 2

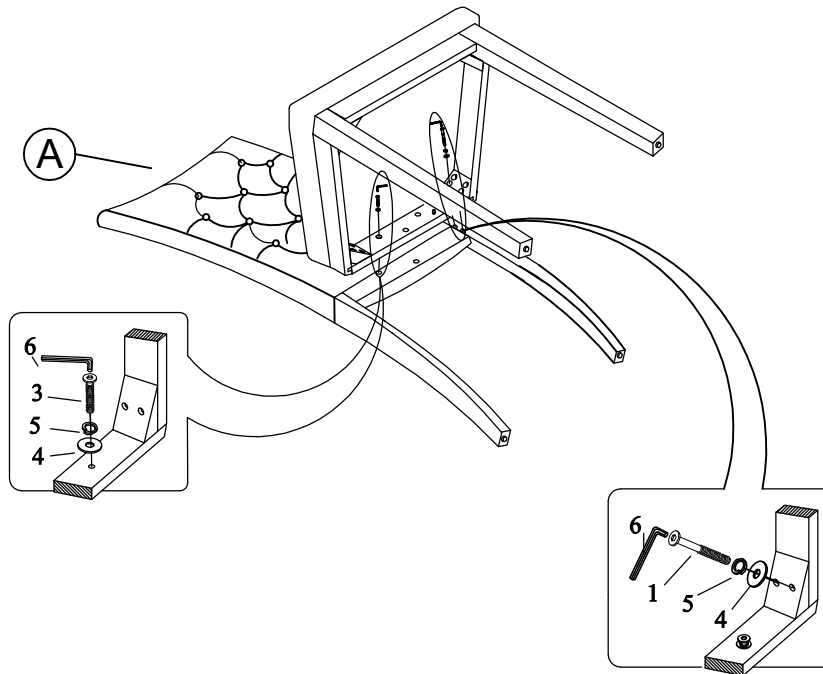

STEP 3

