


Assembly Instructions

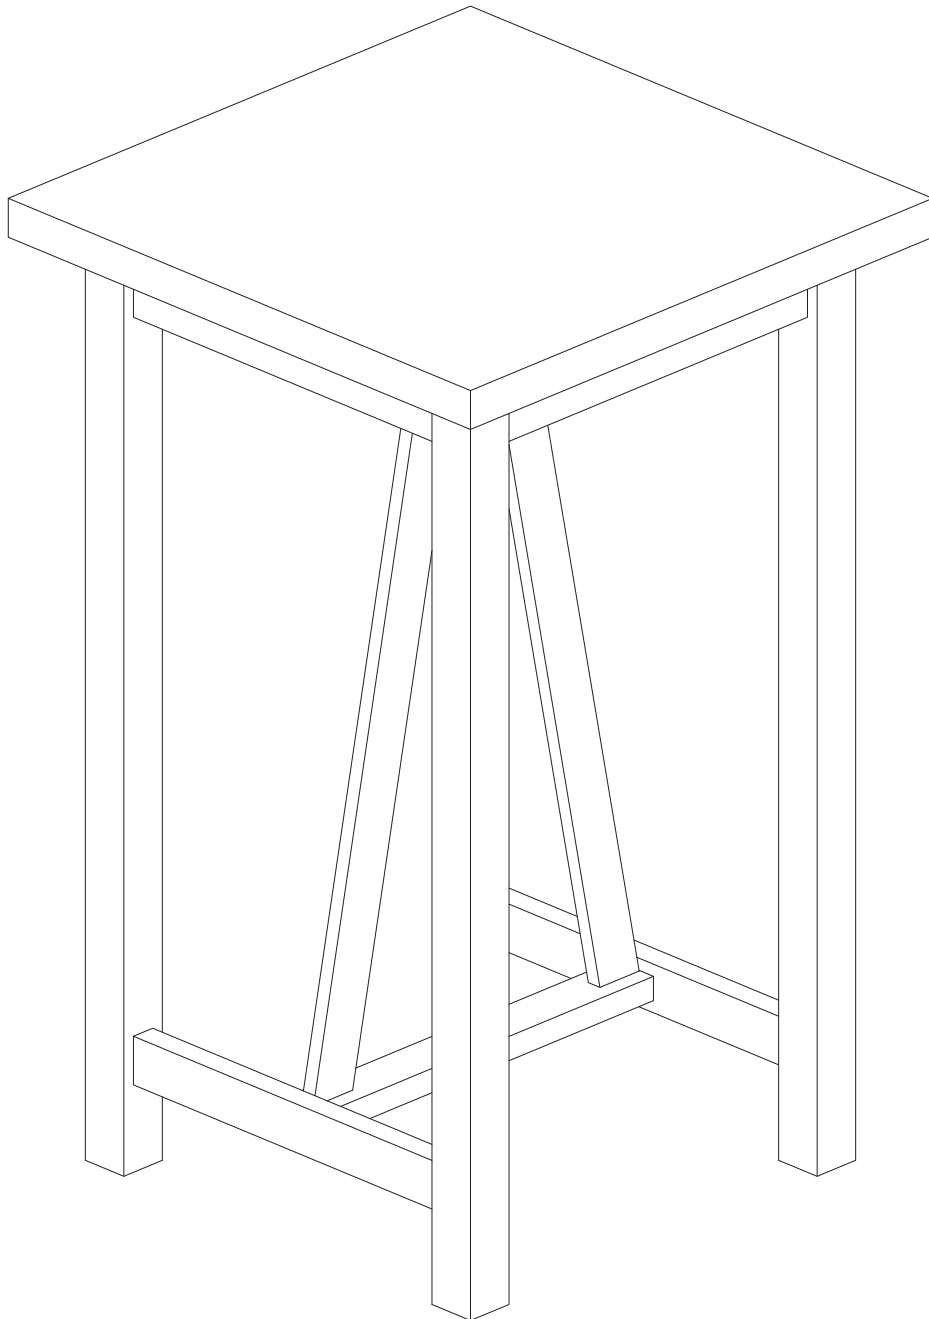


Bar Table

Model No.
HOGA-JW1117

Contact Us




We're here to help you.

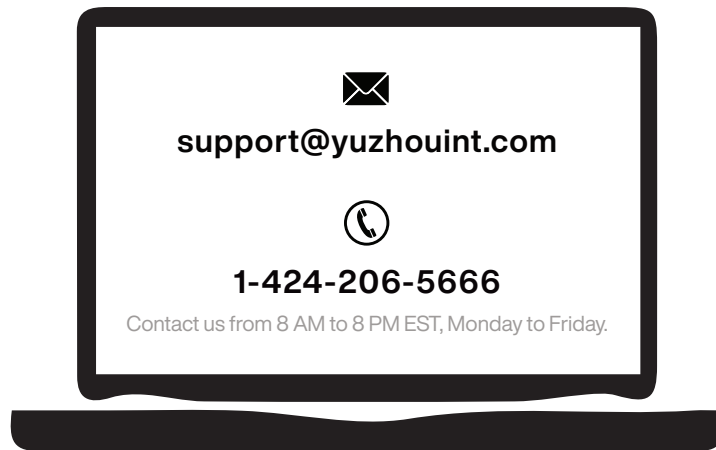

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

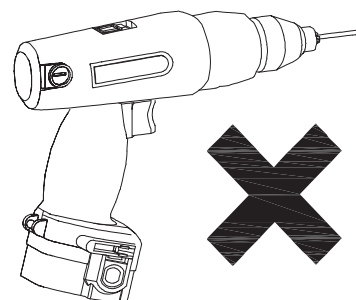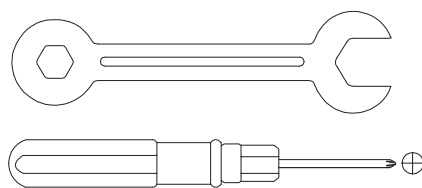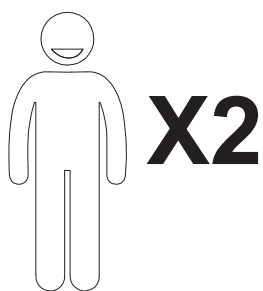



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

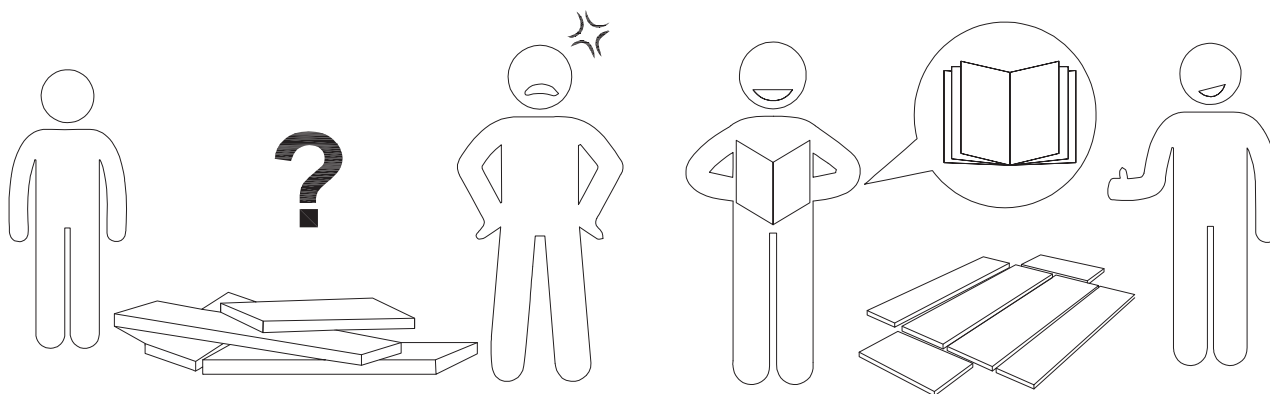

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.







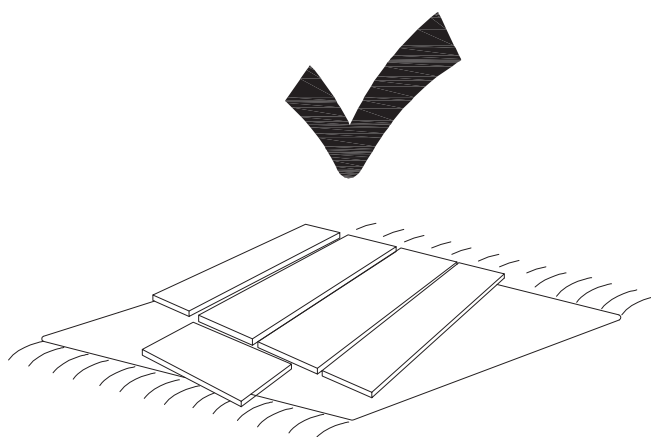
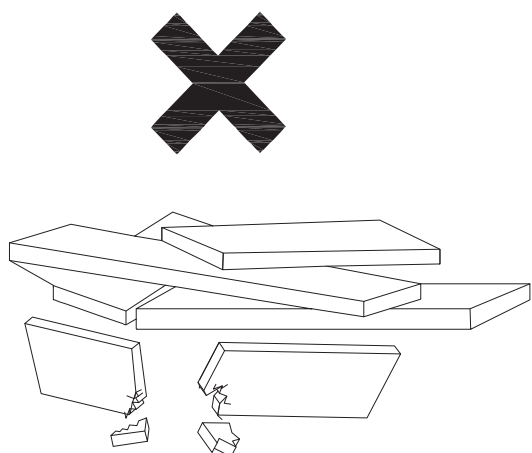


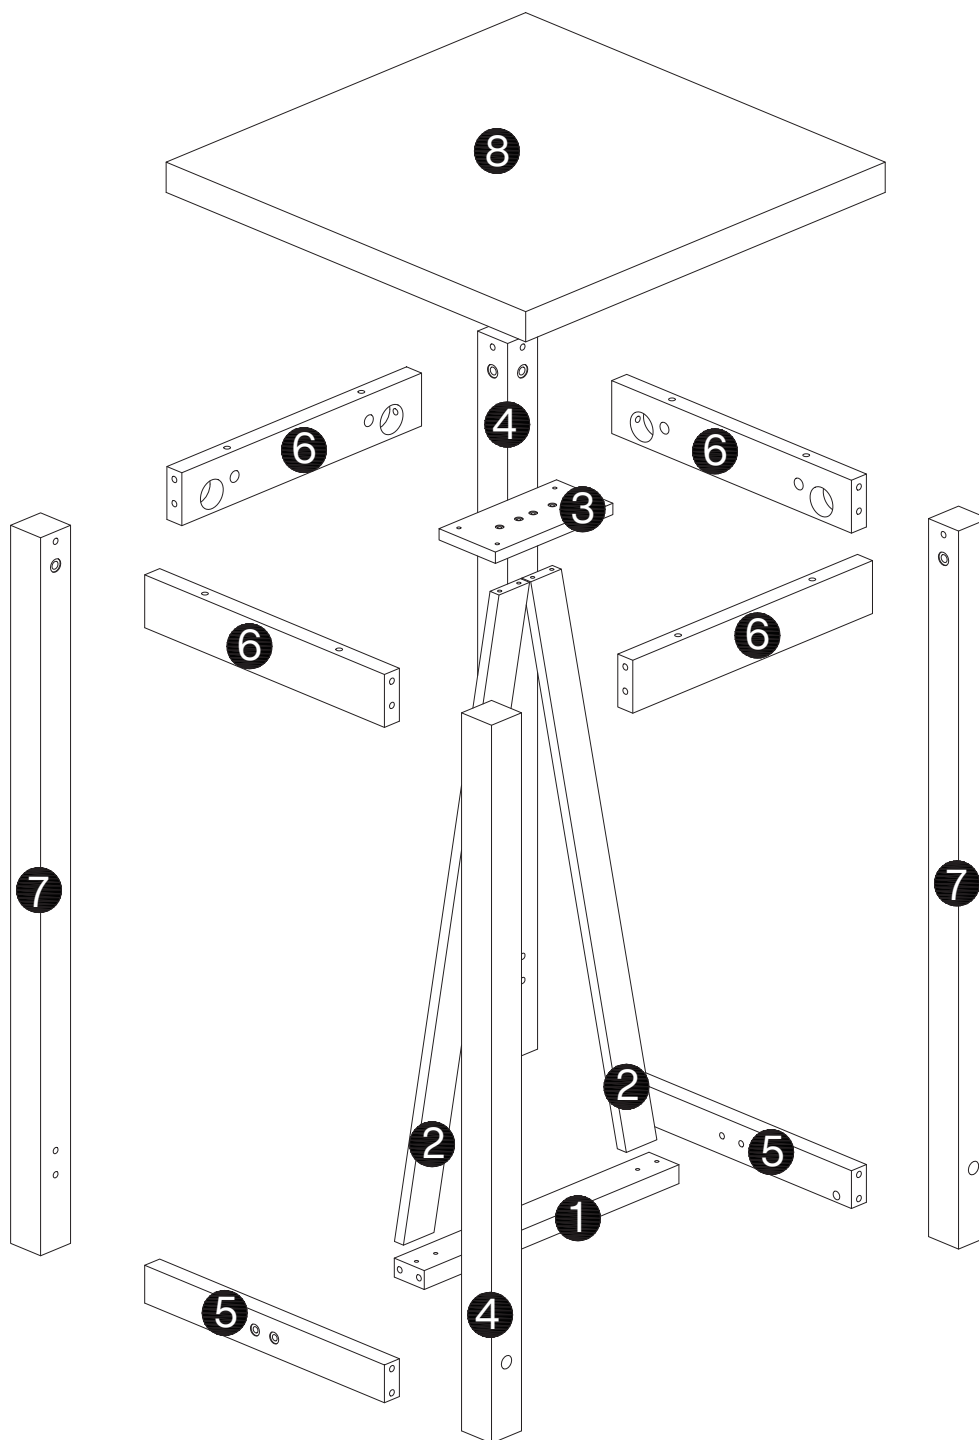






Caution





Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.



Parts List

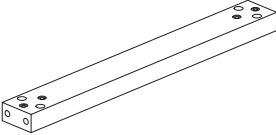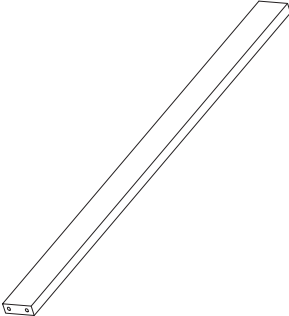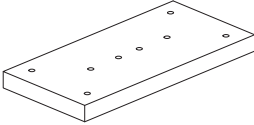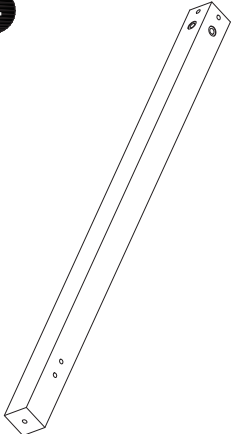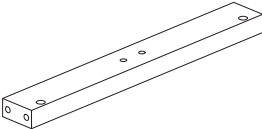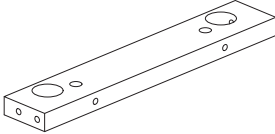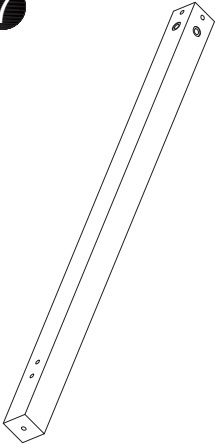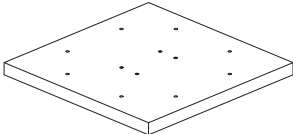1  1pc	2  2pcs	3  1pc	4  2 pcs
5  2 pcs	6  4 pcs	7  2 pcs	8  1pc

Hardware List

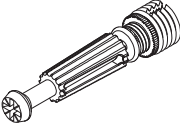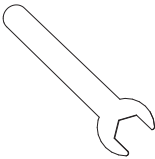A	B	C	D	E	F
					
M6x40mm	Ø15x12mm	M8x30mm	M6x15mm		
8pcs	8 pcs	12 pcs	4 pcs	1 pc	8 pcs

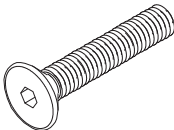
G	H	I	J	K	L
					
	M8x70mm	M8x5mm	M6x25mm	M6x50mm	M6mm
8 pcs	8 pcs	8 pcs	4 pcs	8 pcs	8 pcs

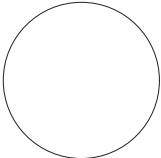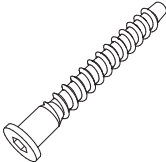M	N	O	P	Q	R
					
Ø22mm	Ø43mm	M5x38mm	M4mm	M3mm	
12 pcs	8 pcs	8 pcs	1 pc	1 pc	1 pc


Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.


Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

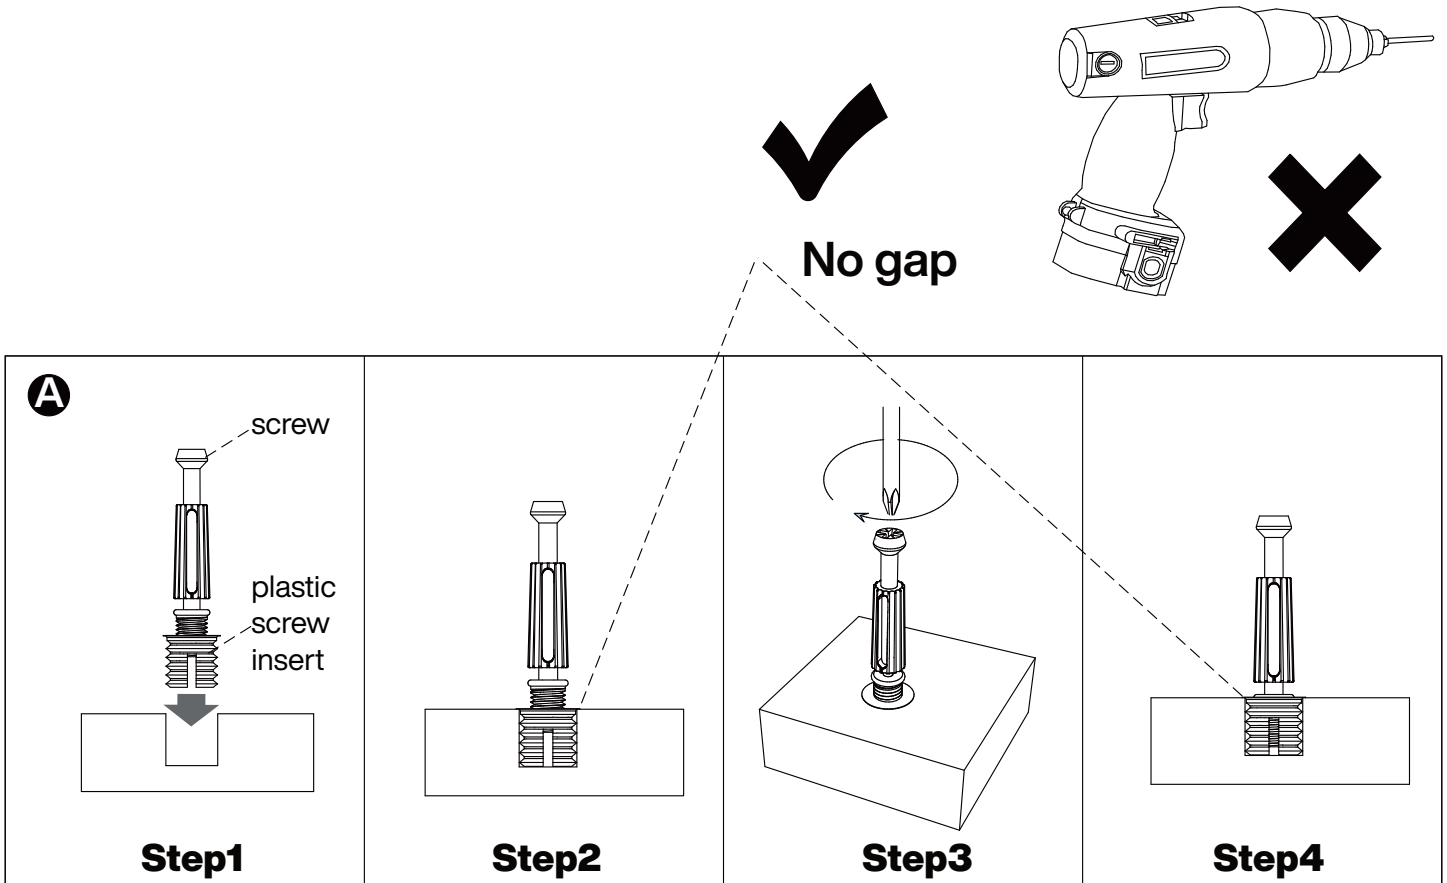


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

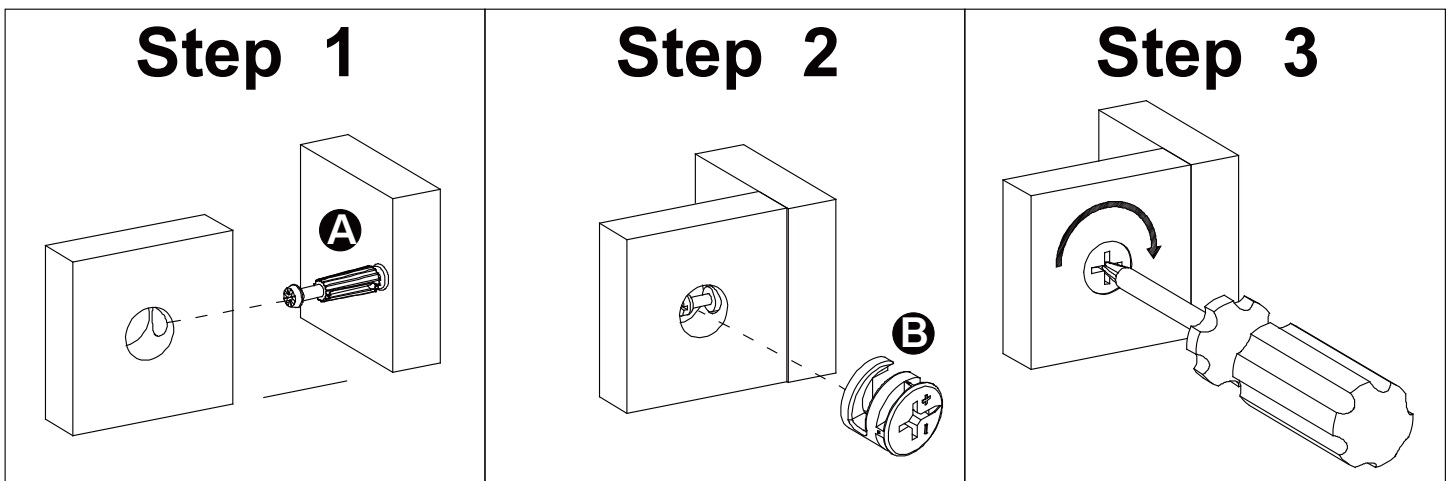


1

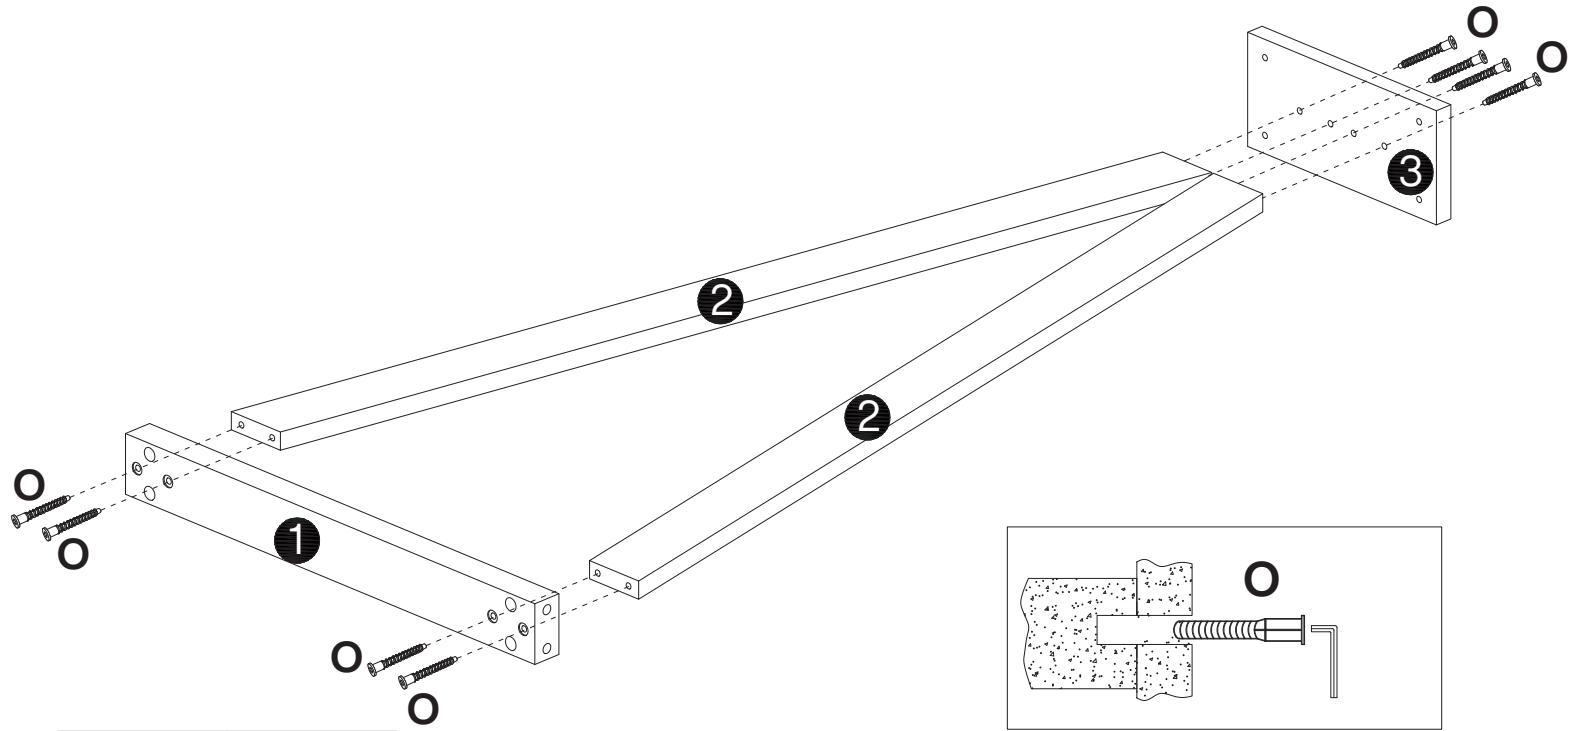

O	Q
	
M5x38mm 8 pcs	8 pcs


2

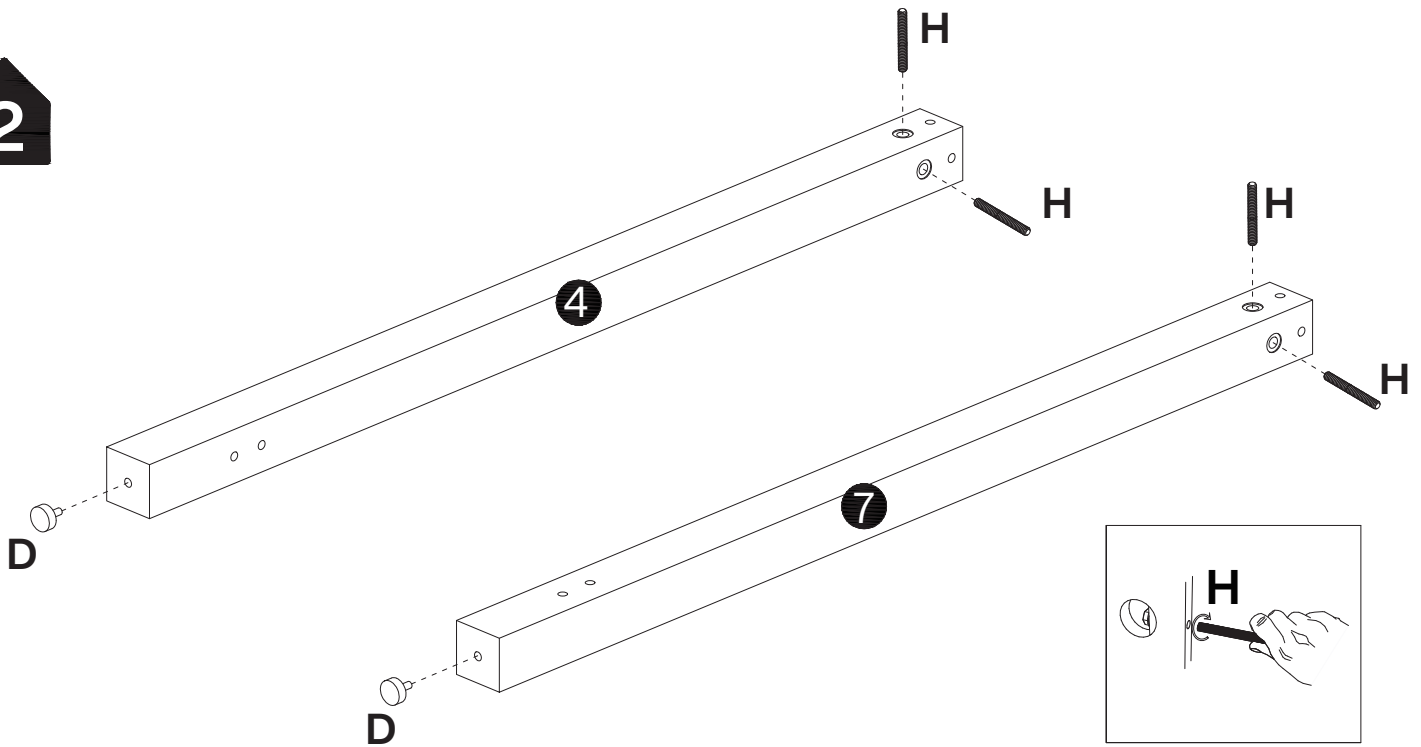

H	D
	
M8x70mm 8 pcs	M6x15mm 4 pcs

x2


3

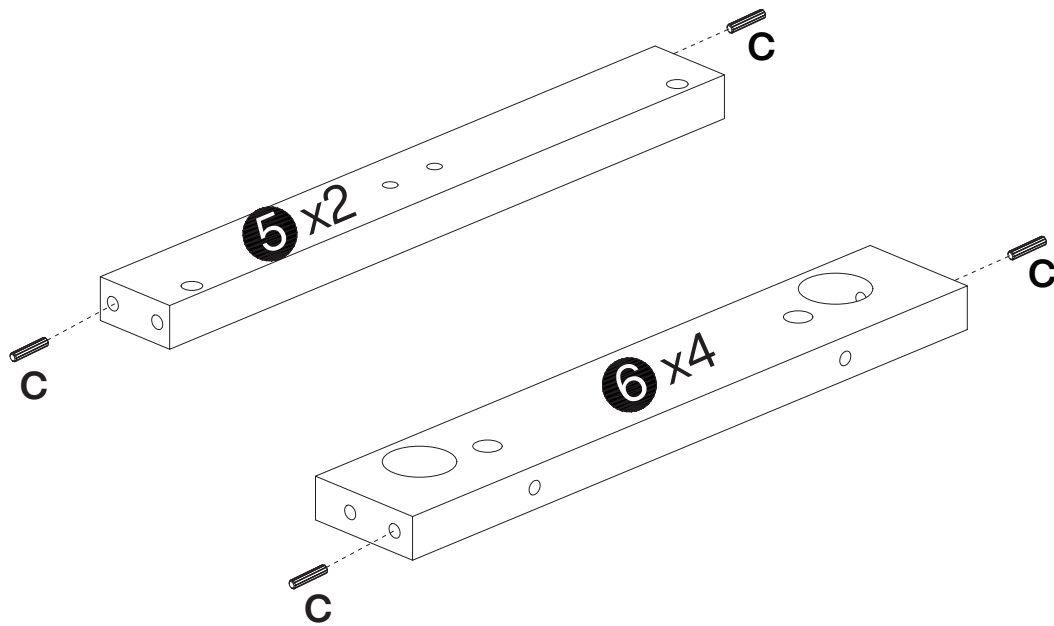



C

M8x30mm 12 pcs

4

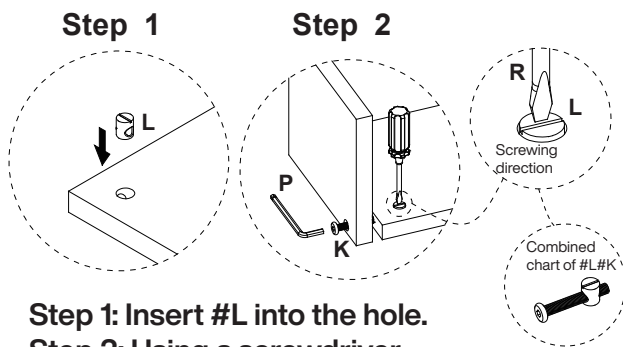



Step 1: Insert #L into the hole.
Step 2: Using a screwdriver, rotate #L until its groove aligns with #K. Lock in place by turning #K clockwise.

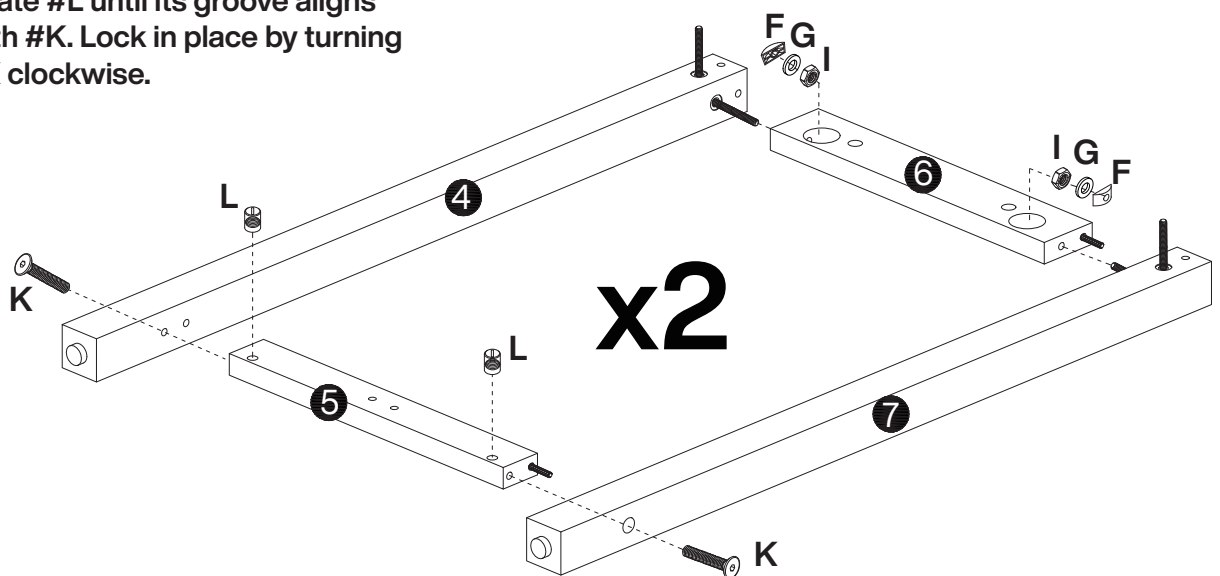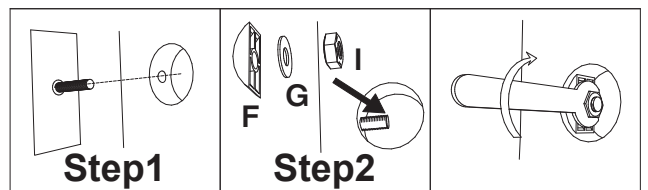

E	F	G	I	K	L	P
						
1pc	4 pcs	4 pcs	4pcs	M6x50mm 4 pcs	M6mm 4 pcs	1pc

5




E	F	G	I
			
1pc	4 pcs	4 pcs	4pcs

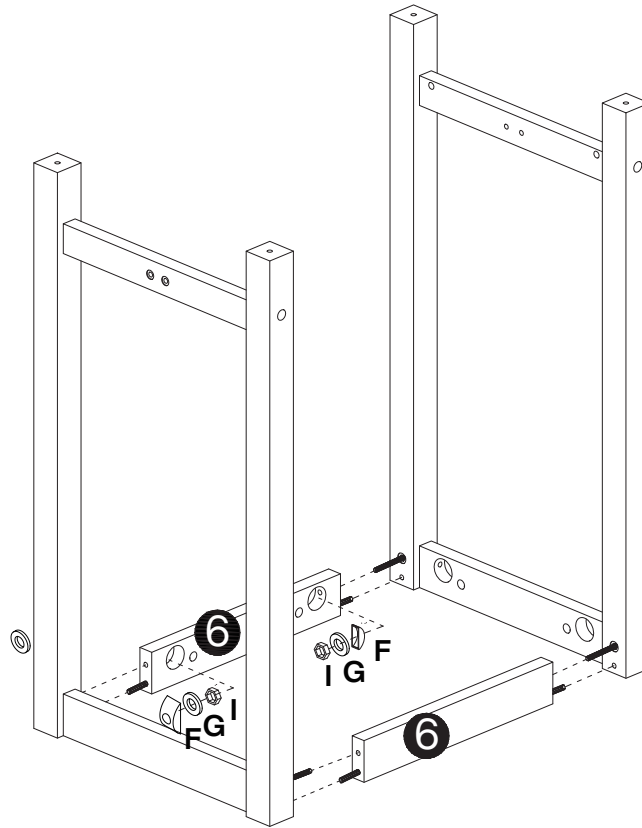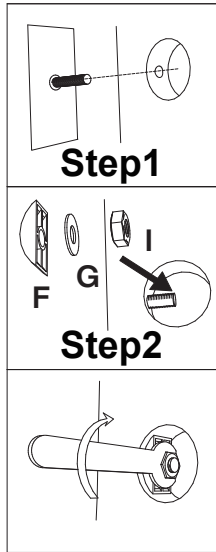


6

Step 1

Step 2

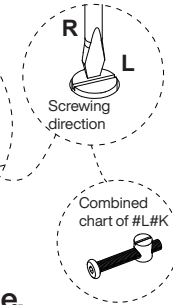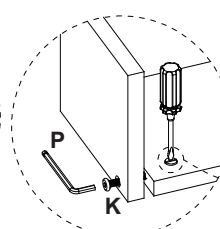
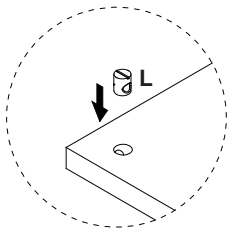


Step 1: Insert #L into the hole.
Step 2: Using a screwdriver, rotate #L until its groove aligns with #K. Lock in place by turning #K clockwise.

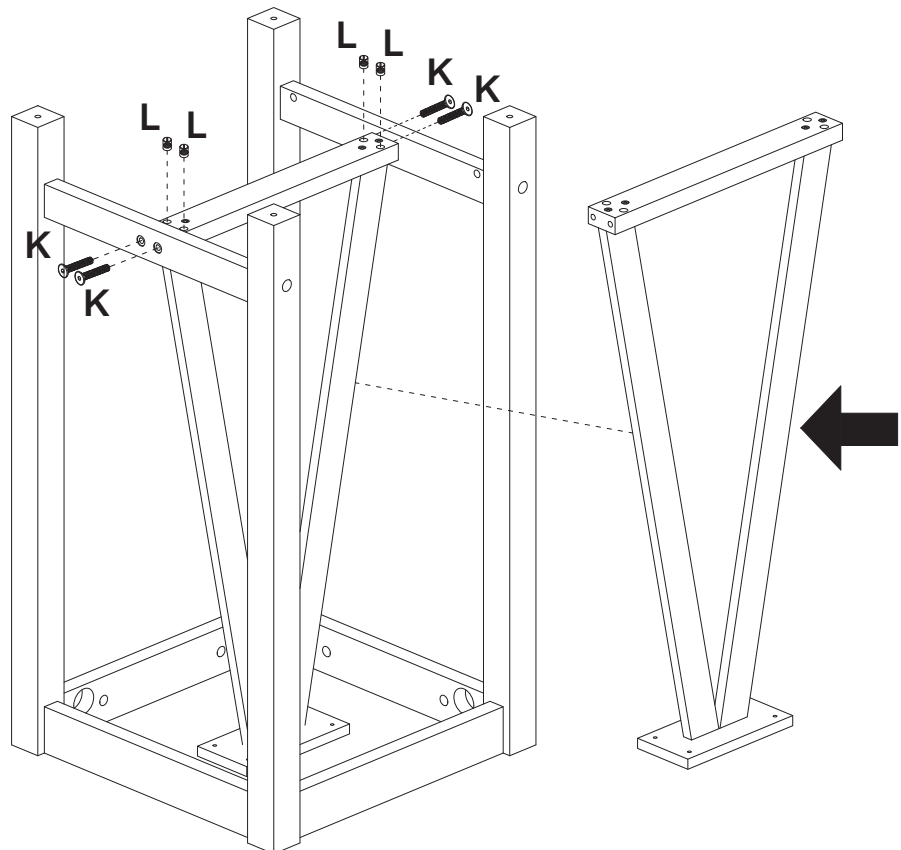



K	L	P
		
M6x50mm 4 pcs	M6mm 4 pcs	1pc

7

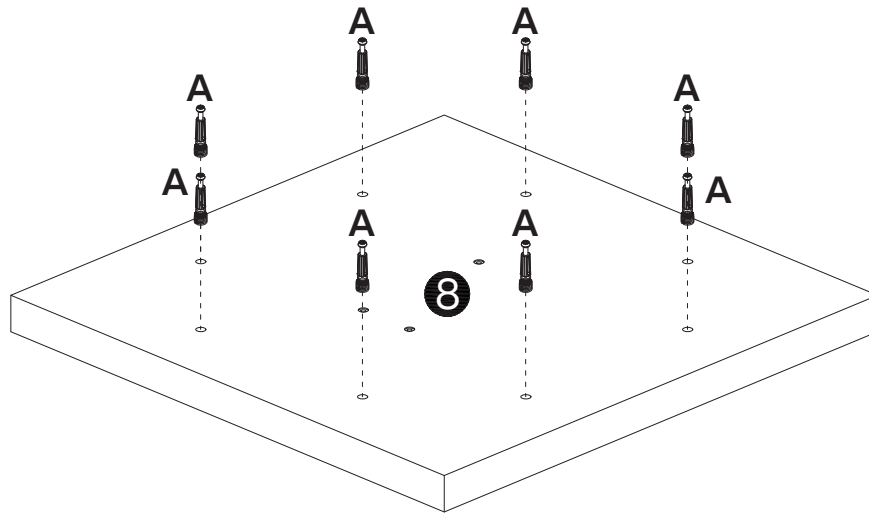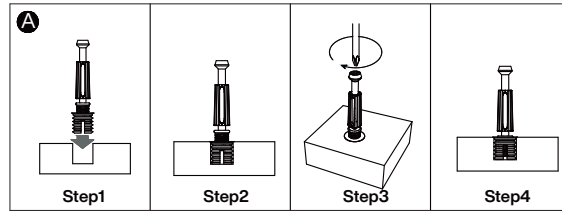




A
M6x40mm
8 pcs

8

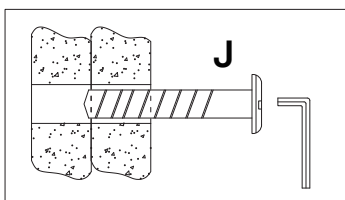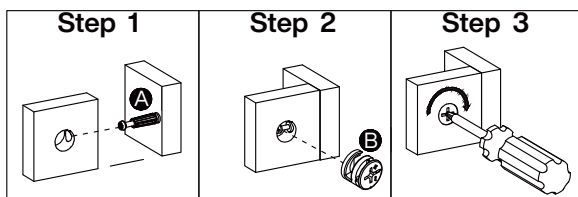

B	J	P
Ø15x12mm	M6x25mm	
8 pcs	4 pcs	1 pc

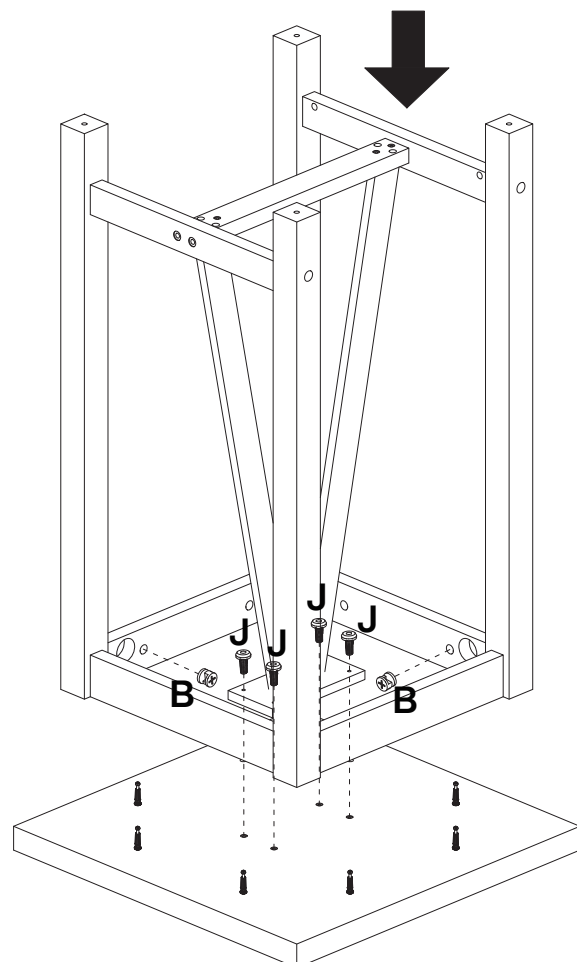

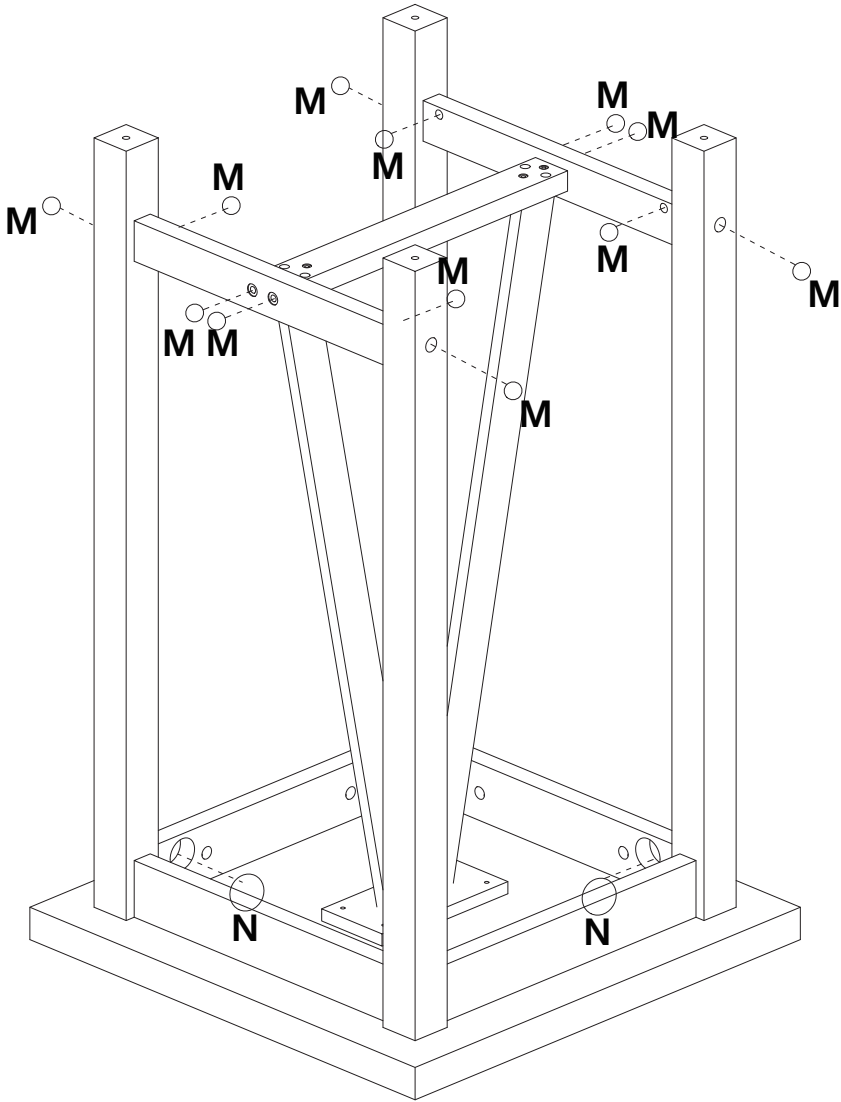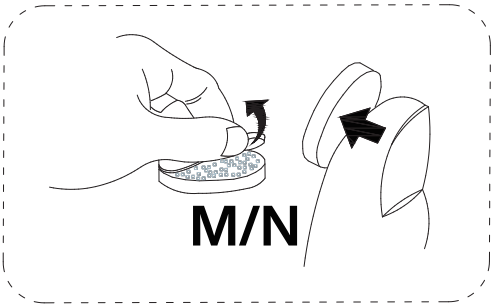

M	N
Ø22mm	Ø43mm
12 pcS	8 pcs

Thank you for your support!

