


ASSEMBLY INSTRUCTIONS

WF303339

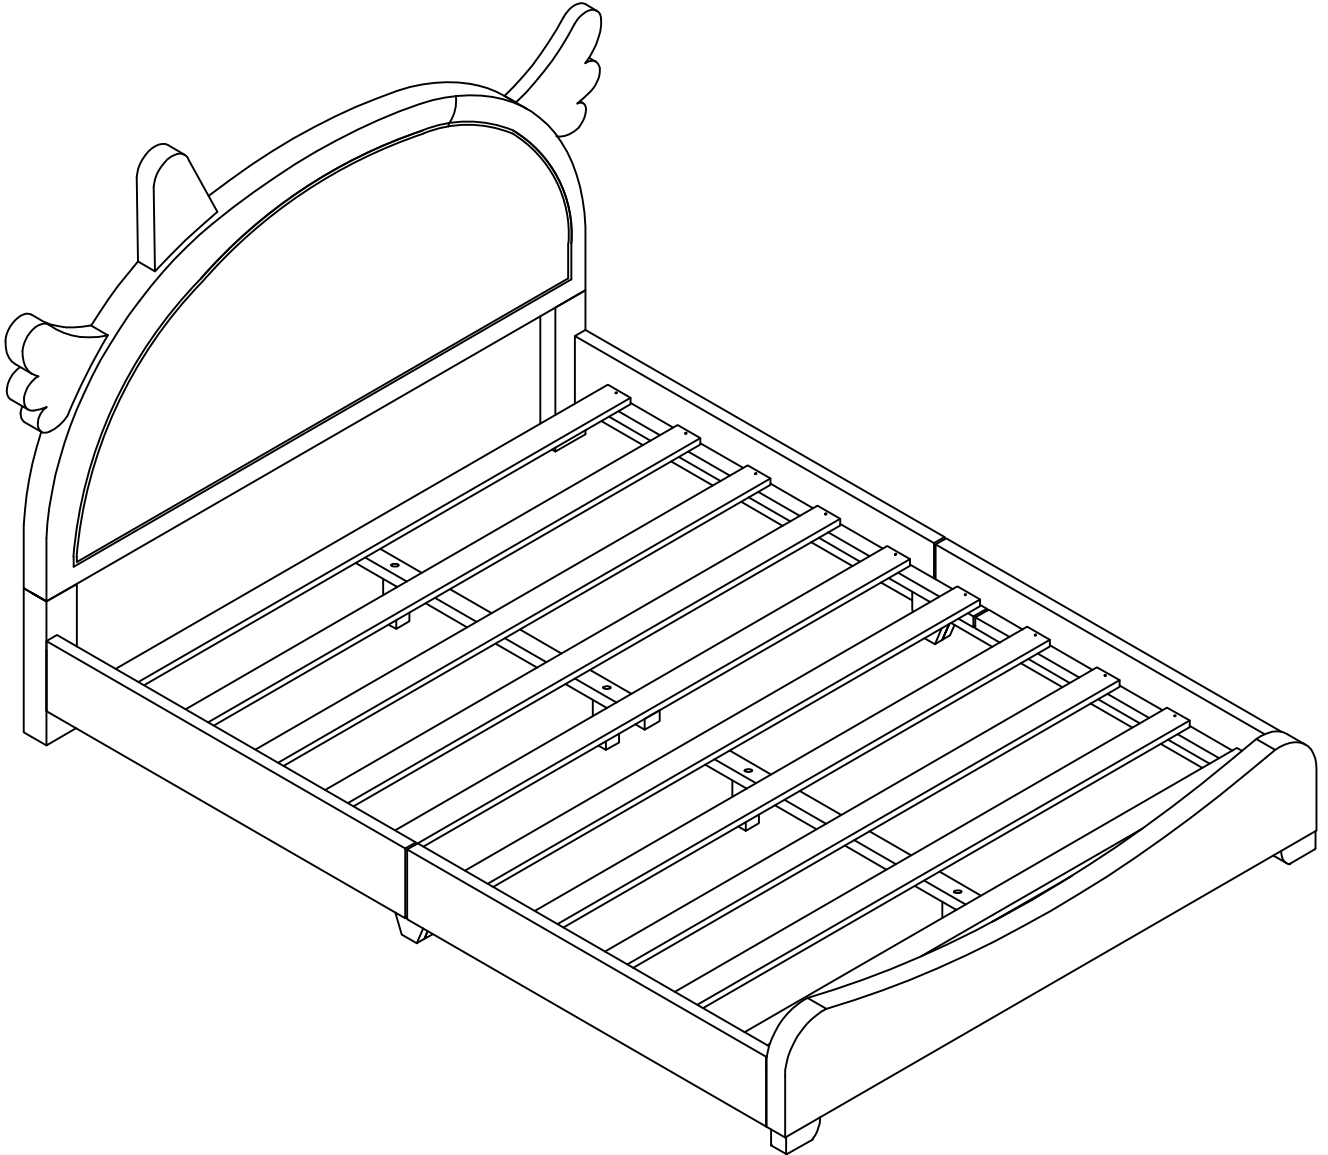

IMPORTANT NOTE


****PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED**

**** BEFORE YOU BEGIN , KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP**

****DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP**

ASSEMBLY INSTRUCTIONS





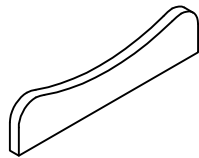

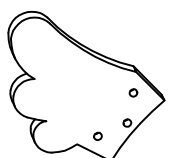
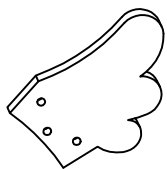
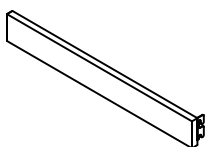
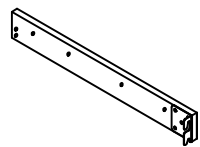

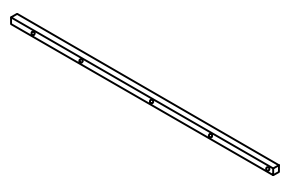
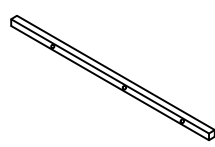

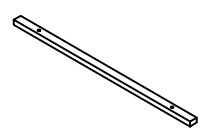

WF303339

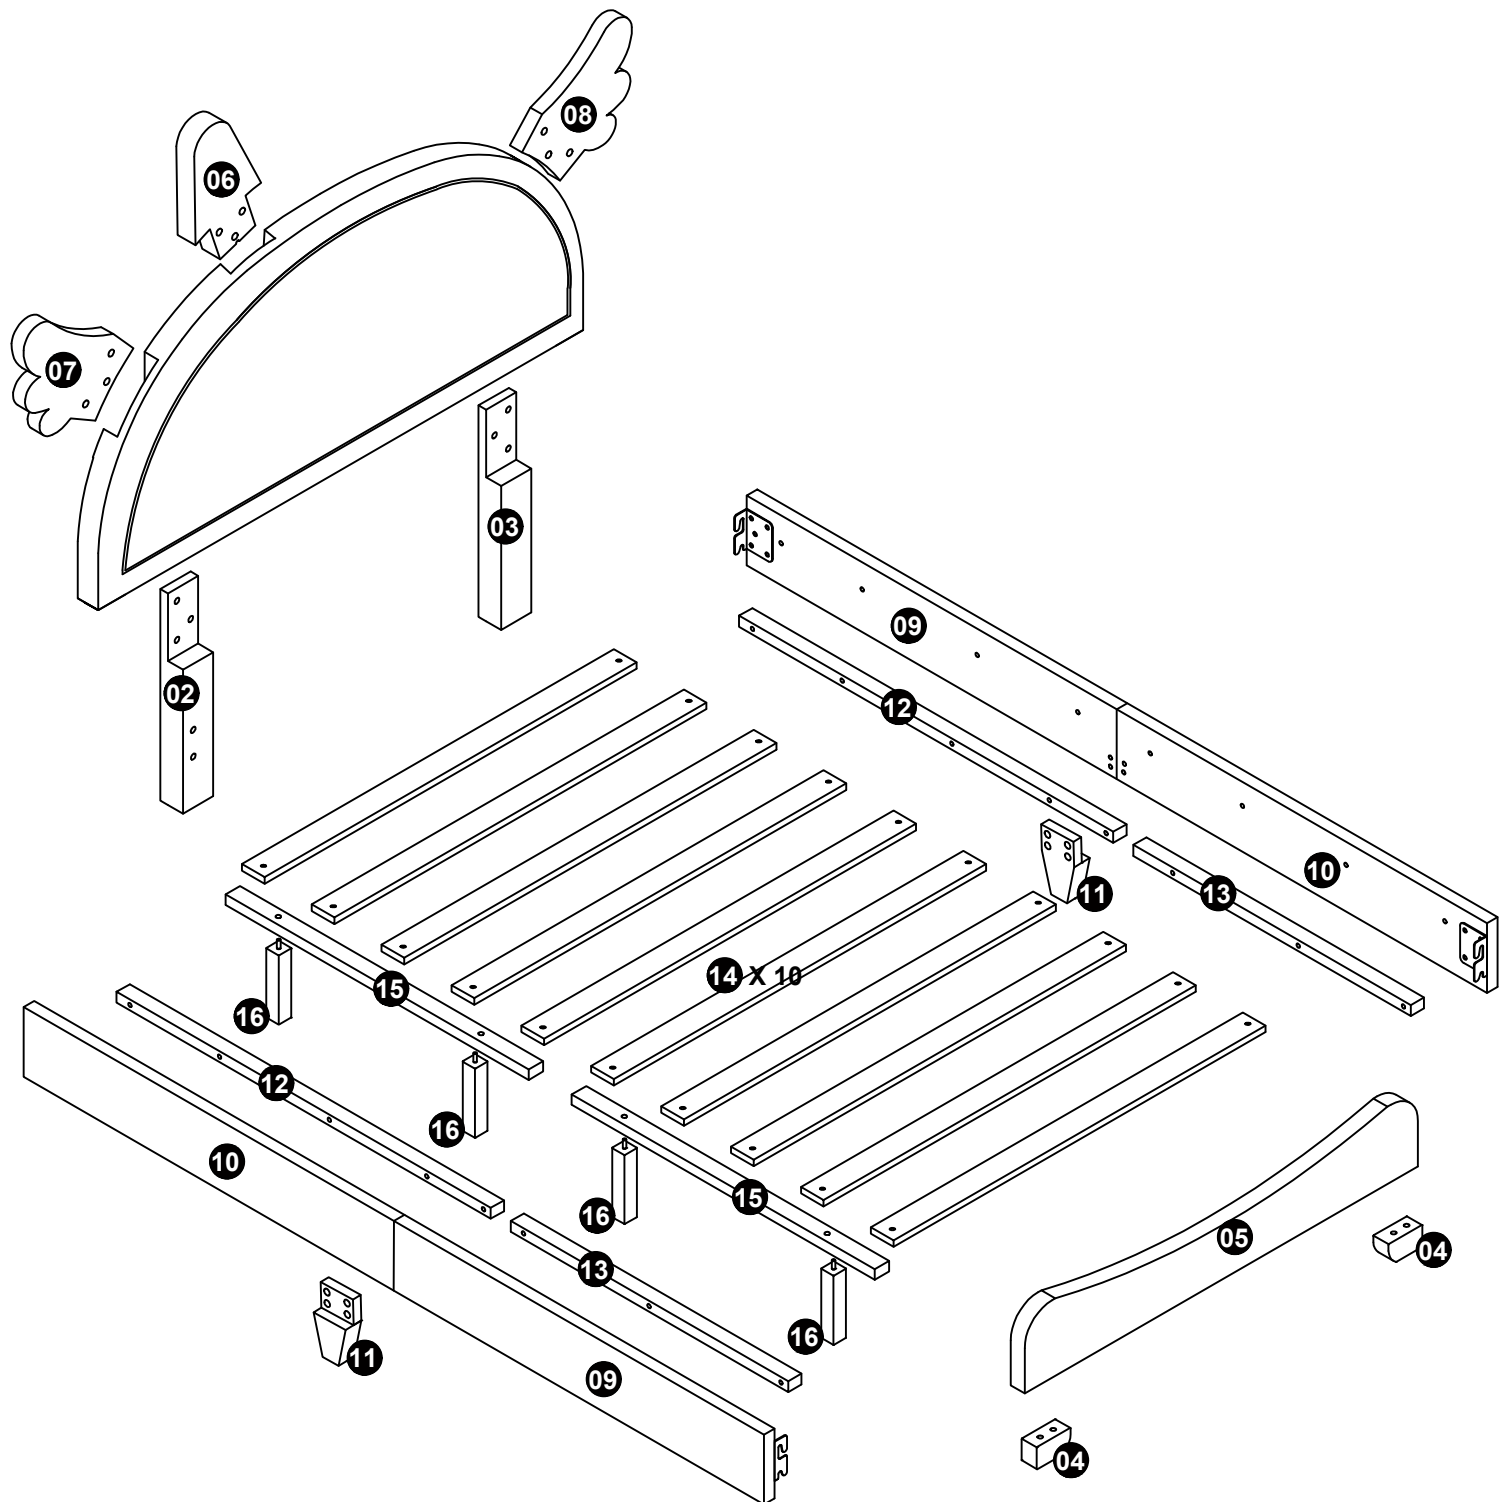

ASSEMBLY INSTRUCTIONS

WF303339

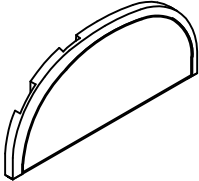








PART LIST BOX 1: 303339

<p>1</p>  <p>Headboard Panel (1 pc)</p>	<p>2</p>  <p>Left Headboard leg(1 pc)</p>	<p>3</p>  <p>Right Headboard Leg(1 pc)</p>
<p>4</p>  <p>Leg (2 pcs)</p>	<p>5</p>  <p>Footboard Panel (1 pc)</p>	<p>6</p>  <p>Unicorn horns (1 pc)</p>
<p>7</p>  <p>Left Headboard Ear (1 pc)</p>	<p>8</p>  <p>Right Headboard Ear (1 pc)</p>	<p>9</p>  <p>Left Lower Rail (2 pcs)</p>
<p>10</p>  <p>Right Lower Rail (2pcs)</p>	<p>11</p>  <p>Rail support legs (2pcs)</p>	<p>12</p>  <p>Bed Support Bar (2 pcs)</p>
<p>13</p>  <p>Bed Support Bar (2 pcs)</p>	<p>14</p>  <p>Roll Slat (10 pcs)</p>	<p>15</p>  <p>Center Rail(2 pcs)</p>
<p>16</p>  <p>Support leg (4pcs)</p>		

ASSEMBLY INSTRUCTIONS


WF303339





HARDWARE LIST IN : 303339

<div data-bbox="36 257 79 302">A</div>  <p>Short Bolt (8pcs) (Ø 5/16 "X25mm)</p>	<div data-bbox="541 257 584 302">B</div>  <p>Long Bolt (9 pcs) (Ø 5/16 "X32mm)</p>	<div data-bbox="1045 257 1088 302">C</div>  <p>Long Bolt (14 pcs) (Ø 5/16 "X38mm)</p>
<div data-bbox="36 629 79 674">D</div>  <p>Long Bolt (16pcs) (Ø 5/16 "X45mm)</p>	<div data-bbox="541 629 584 674">E</div>  <p>Long Bolt (2pcs) (Ø 5/16 "X50mm)</p>	<div data-bbox="1045 629 1088 674">F</div>  <p>Allen Wrench (1 pc) (M4x75mm x32mm)</p>
<div data-bbox="36 1001 79 1046">G</div>  <p>Flat Washer (49 pcs) (Ø 5/16 "-RBW)</p>	<div data-bbox="541 1001 584 1046">H</div>  <p>Spring Washer (49 pcs) (Ø 5/16 "-RBW)</p>	<div data-bbox="1045 1001 1088 1046">I</div>  <p>Flat Head Screw (24 pcs) (m4x30mm-RBW)</p>

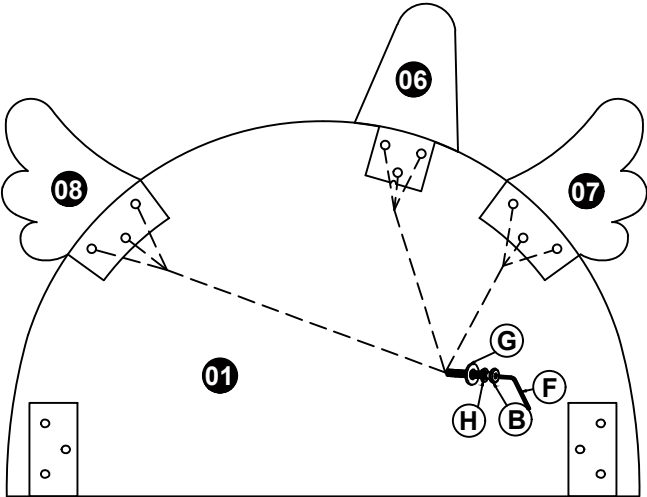
ASSEMBLY INSTRUCTIONS





STEP 1



B	Bolt (Ø 5/16 "X32mm)		9pcs	G	Flat Washer (Ø 5/16 "-RBW)		9pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		9pcs

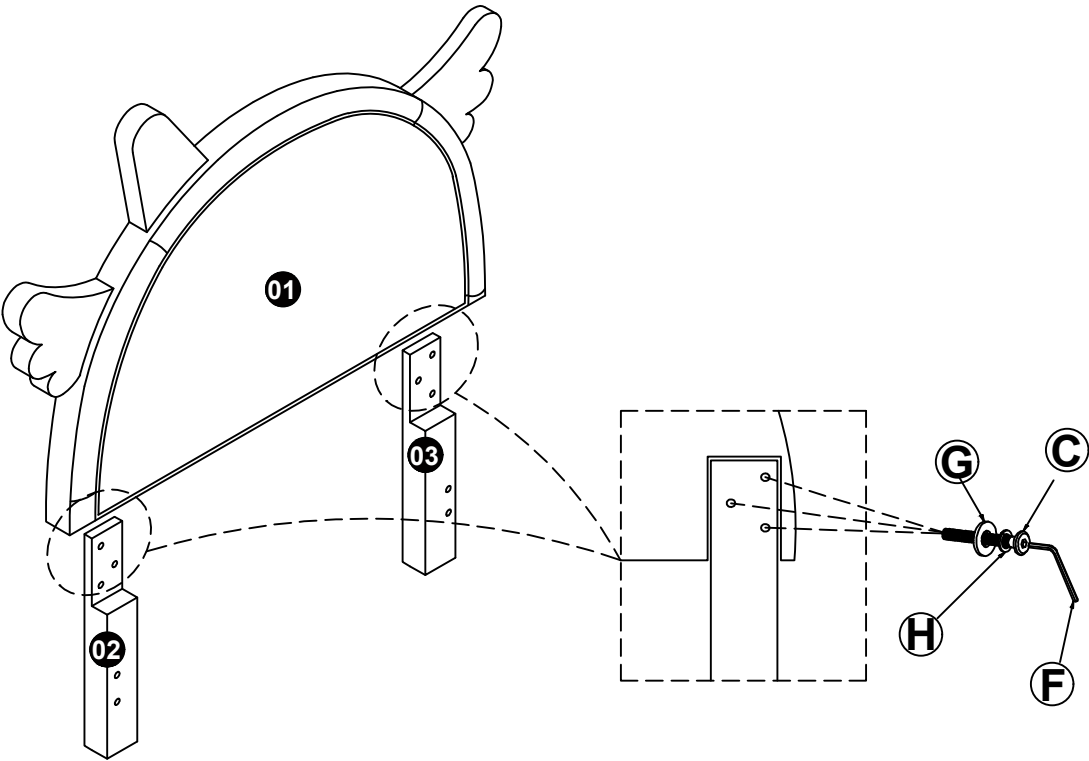
STEP 2







C	Bolt (Ø 5/16 "X38mm)		6pcs	G	 (Ø 5/16 "-RBW)	6pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	 (Ø 5/16 "-RBW)	6pcs

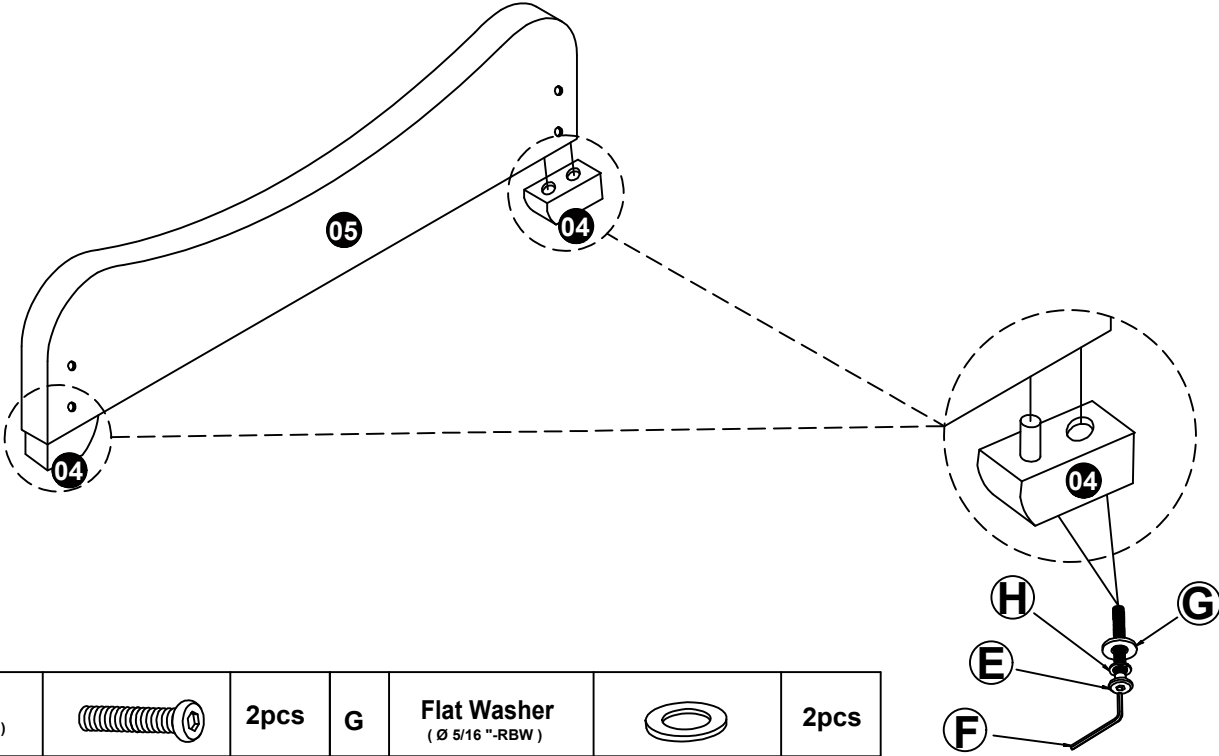
ASSEMBLY INSTRUCTIONS





STEP 3

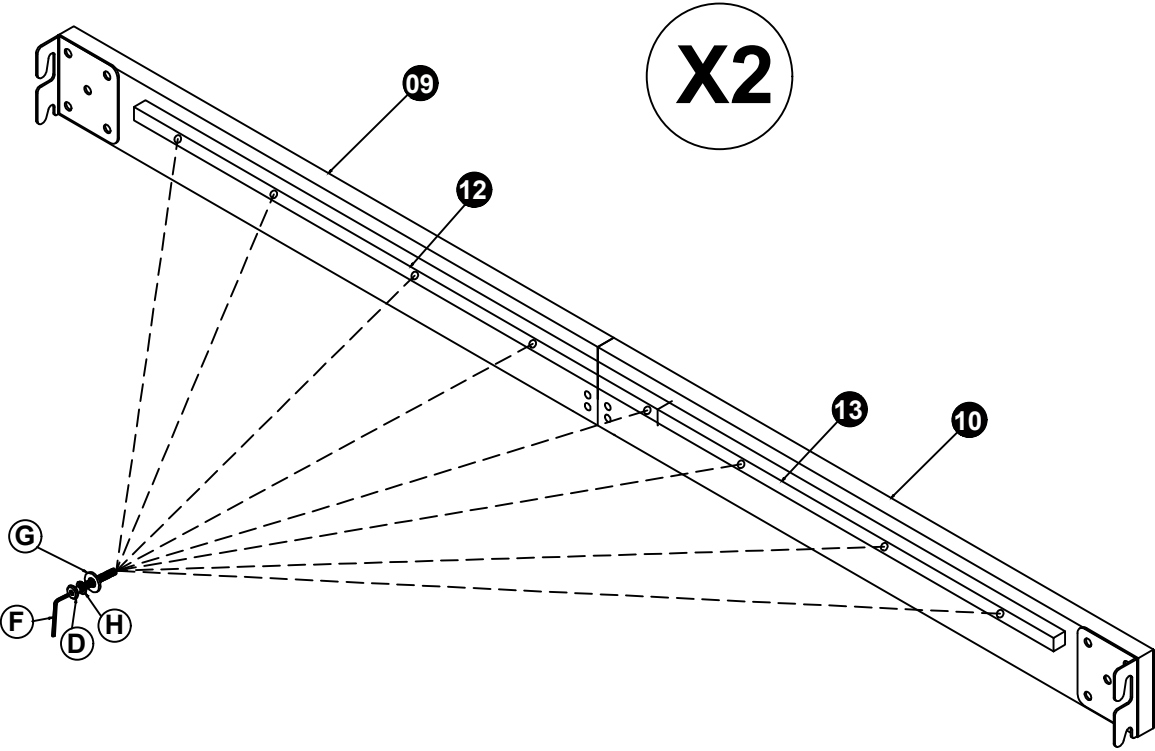

E	Bolt (Ø 5/16 "X50mm)		2pcs	G	Flat Washer (Ø 5/16 "-RBW)		2pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		2pcs


STEP 4







D	Bolt (Ø 5/16 "X45mm)		16pcs	G	Flat Washer (Ø 5/16 "-RBW)		16pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		16pcs

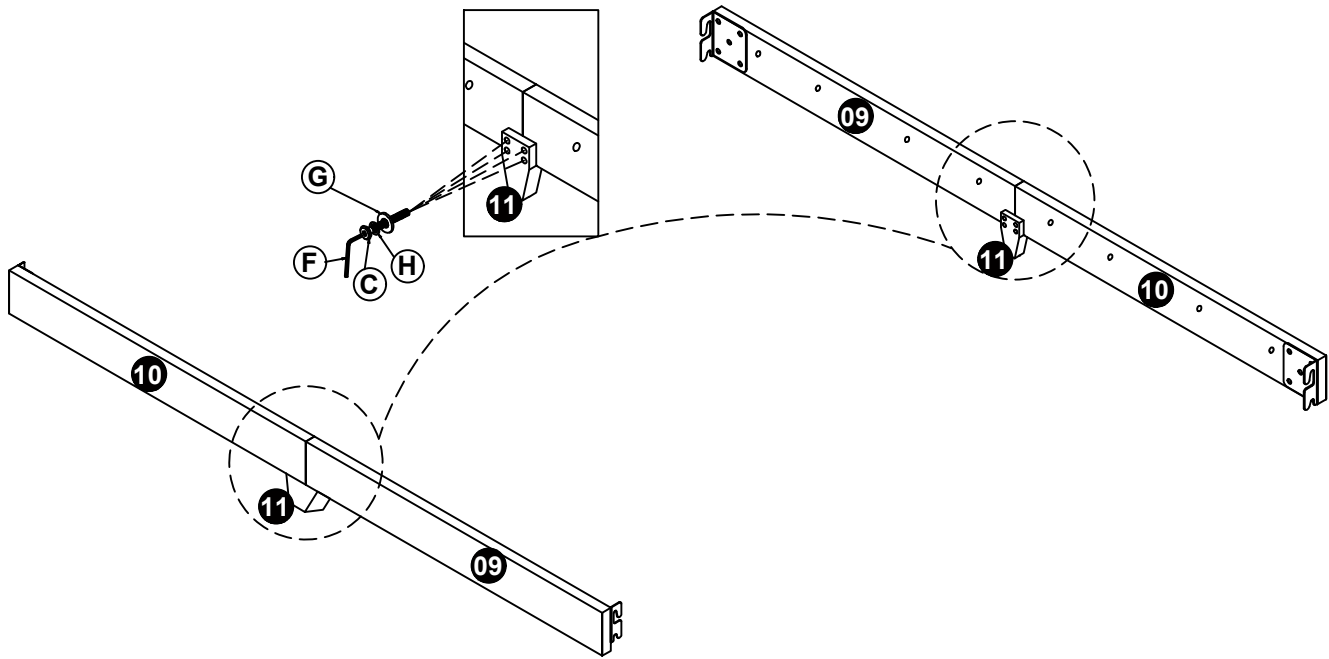
ASSEMBLY INSTRUCTIONS





STEP 5

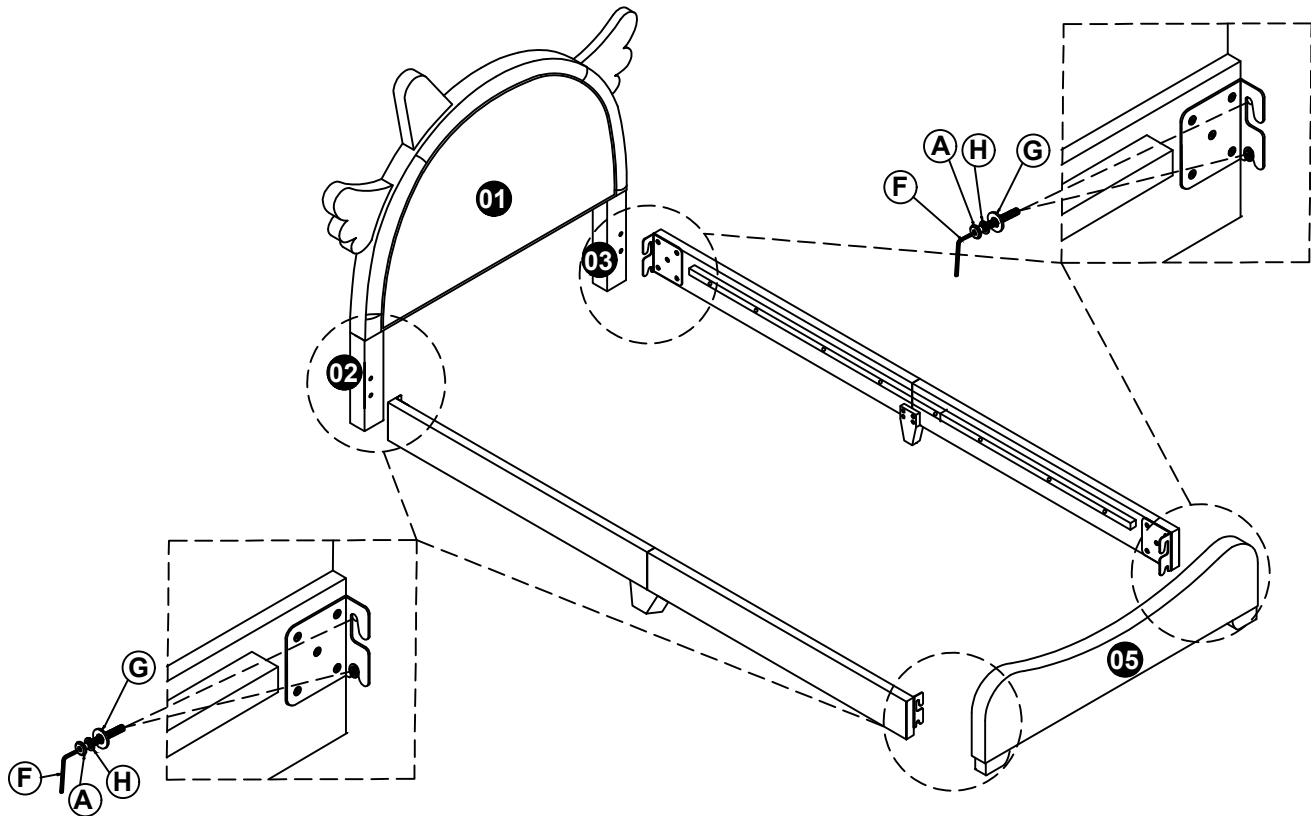

C	Bolt (Ø 5/16 "X38mm)		8pcs	G	Flat Washer (Ø 5/16 "-RBW)		8pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		8pcs


STEP 6




A	Bolt (Ø 5/16 "X25mm)		8pcs	G	Flat Washer (Ø 5/16 "-RBW)		8pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		8pcs


ASSEMBLY INSTRUCTIONS

STEP 7

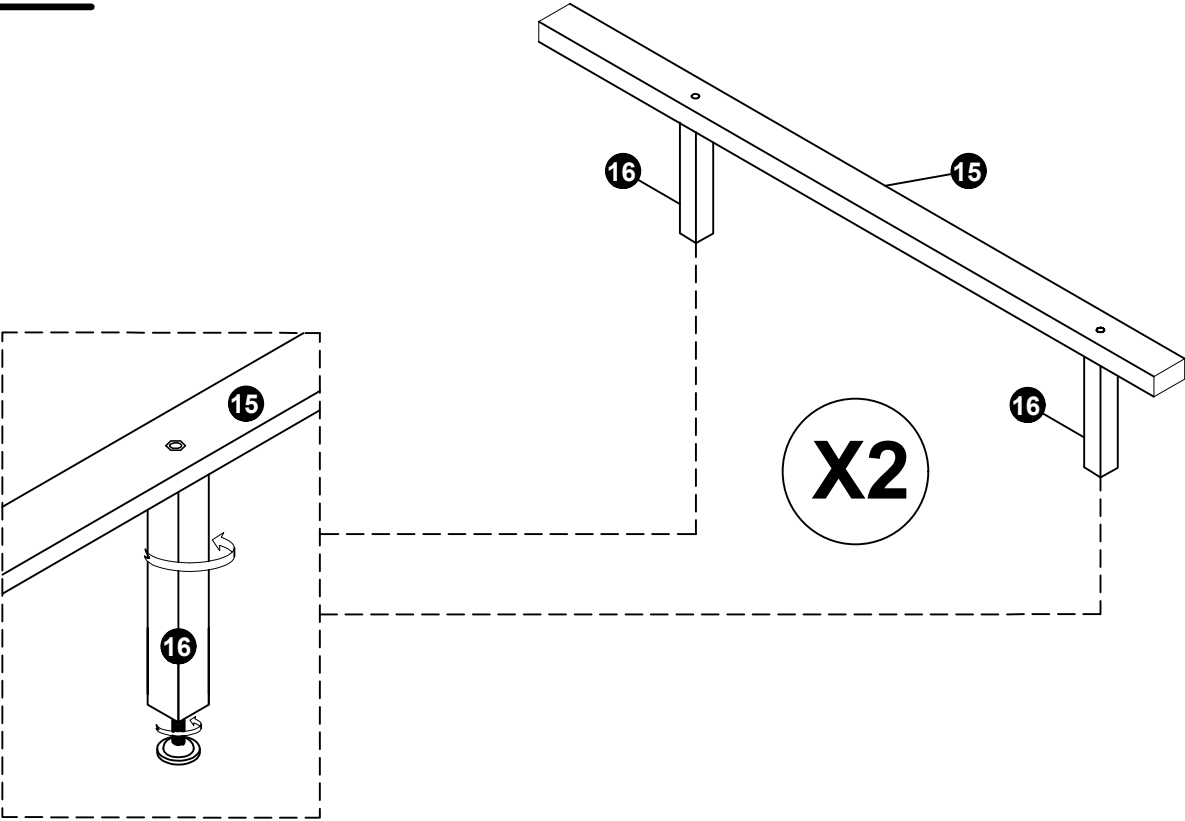


STEP 8

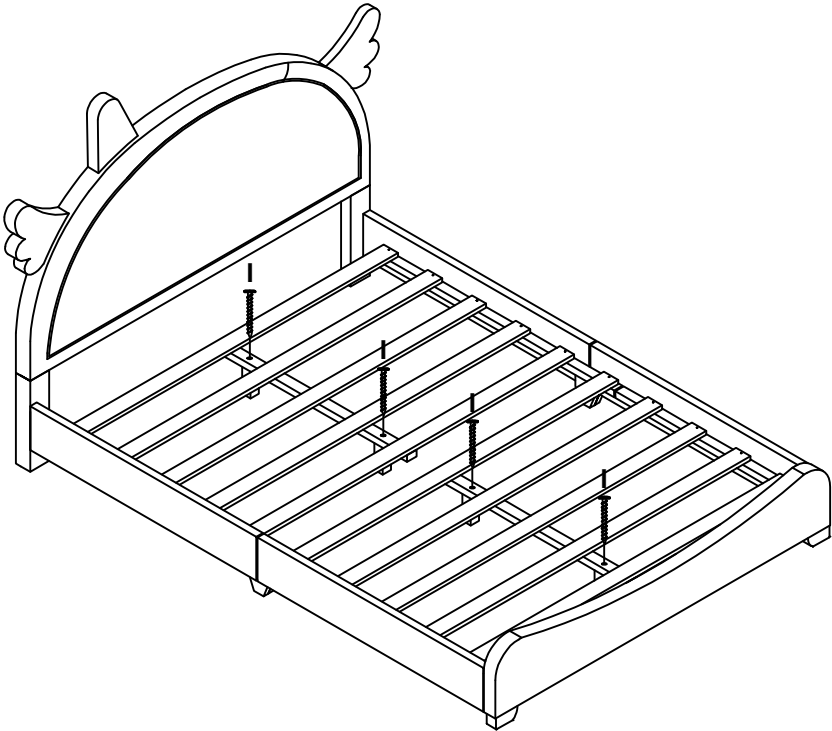


I		(m4x30mm-RBW)	4pcs
---	---	----------------	------

ASSEMBLY INSTRUCTIONS

STEP 9

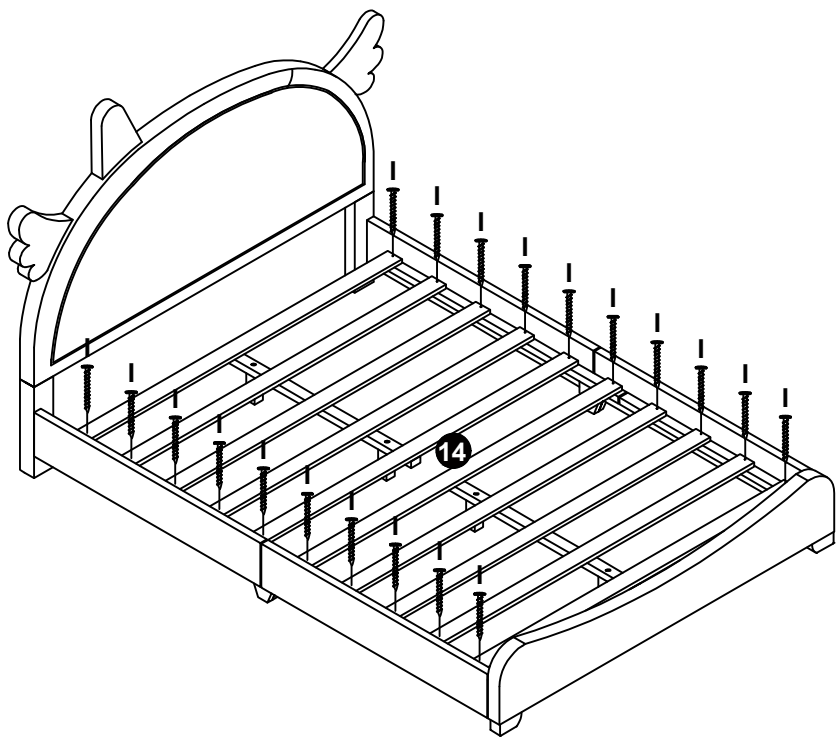

I		(m4x30mm-RBW)	20pcs
---	--	----------------	-------

STEP 10 COMPLETE

