Assembly Instructions

Poly Plastic Folding Adirondack Chair



CAUTION: This Adirondack is NOT a TOY.

Keep your child / children at bay during the assembly process.

For moving the Adirondack and to prevent damages, two adults are needed to execute this action.

Please keep this instruction manual for future reference.

Care Maintenace

- Please keep away from extreme heat and strong oxidizing agents.
- Do not clean chair with harsh cleansers or polish.
- Children should not climb or jump on the chair.
- Stains may be removed with mild soap solution and damp cloth.
- To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. When possible cover the product or place under the patio or awnings.

Pre-Assembly

TOOLS REQUIRED (not included)




Phillips screwdriver


Dort liet								
Part list								
Lable	Description		Qty		Lable	Description		Qty
А		Seat panel	1 pc		1		Screw M4*35MM	8 pcs
В		Front left leg	1 pc		2		Bolt M6*48MM	4 pcs
С		Front right leg	1 pc		3		Bolt M6*57MM	2 pcs
D		Left armrest	1 pc		4		Bolt M8*55MM	2 pcs
E		Right armrest	1 pc		⑤		Bolt M8*79MM	2 pcs
F		Backrest	1 pc		6		Washer M6	6 pcs
G		Front leg Cross Beam	1 pc		7	0	Washer M8	4 pcs
Н		Rear Seat Slat	1 pc		8	9	Self-locking nut M8	4 pcs
I		Gliders	2 pcs		9	9	Self-locking nut M6	6 pcs
• Read instructions, cover to cover-					10		Safety lock	1 pc
Do not assemble on flooring or carpet-					111		Spanner M6	1 pc
Assemble on a clean non-marring surface (packing foam)- Save all packaging until finished-					12		Spanner M8	1 pc

Before assembling, please check if you have all the parts on the assembly instructions.

Assembly Steps

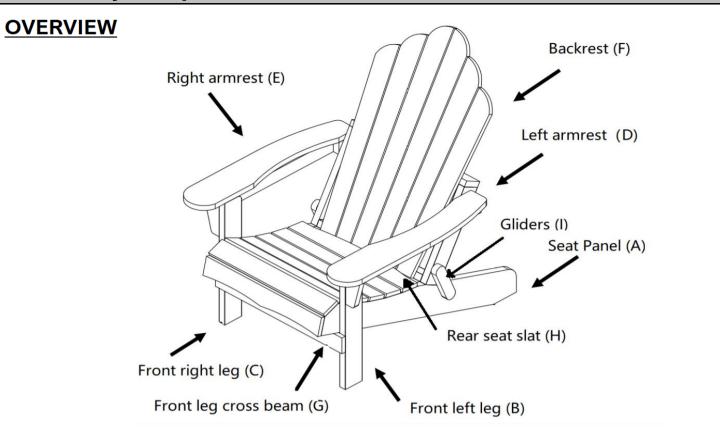


This Adirondack has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Adirondack parts, above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarize yourself with the parts and steps before assembly.

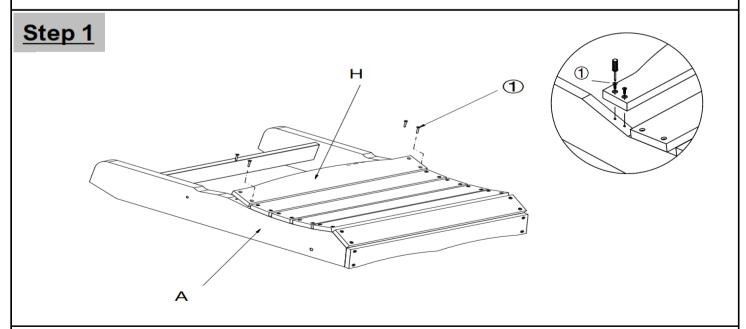


Place the Seat Panel(A) onto a clean, non-marring surface.

Position Rear seat slat(H) onto the Seat Panel(A) and attach using 4 screws(1) and phillips screwdriver.

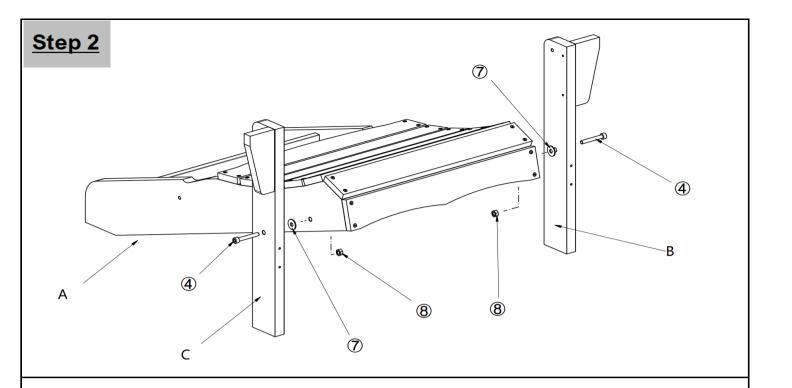


Attach the Front left Leg(B) and Front right leg(C)to Seat Panel (A) using Bolts(4), Washers(7), and Self-locking nuts (8) with M8 spanner(1)

Note: The Washer should be placed between the Seat Panel and Front Leg.

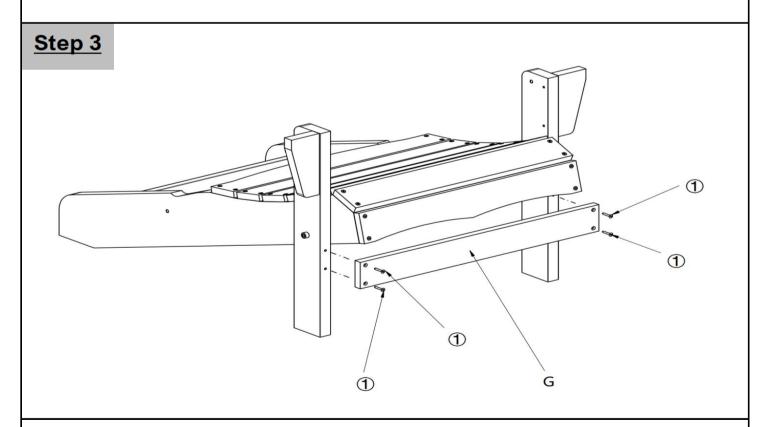

Attach the Front cross beam (G) to the front legs as picture with screws (1) and using the Phillips screwdriver.

Step 4

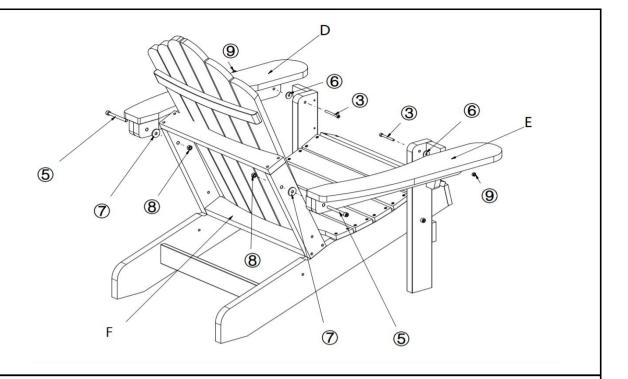


Attach the Armrest (D & E) to the Front Legs (B & C) using Bolts (③), Washers(⑥) and Self locking nut (⑨) with M6 spanner (⑪).

Attach the Armrest (C & D) to the Backrest using using Bolts(\mathfrak{D}), Washers(\mathfrak{T}), and Self-locking nuts (\mathfrak{B}) with M8 spanner(\mathfrak{D}).


Note: The Washer should be placed between the Armrest and Front Leg or Backrest.

Step 5

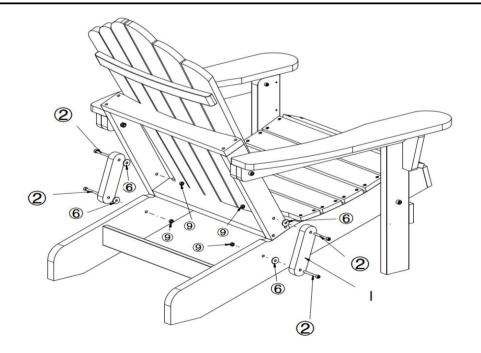


Attach the Backrest(F) to the Gliders(I) using Bolts(2), Washers(6) and Self locking nut(9) with M6 spanner(11).

Note: The Washer should be placed between the Backrest and Glider.

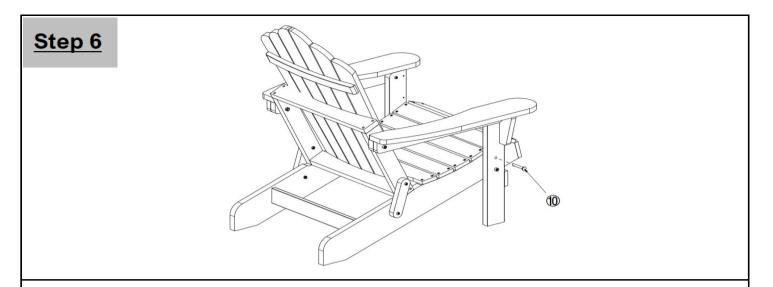

Insert the Safety lock(⑩) into Front leg as pictured Then your Adirondack chair is ready for use.

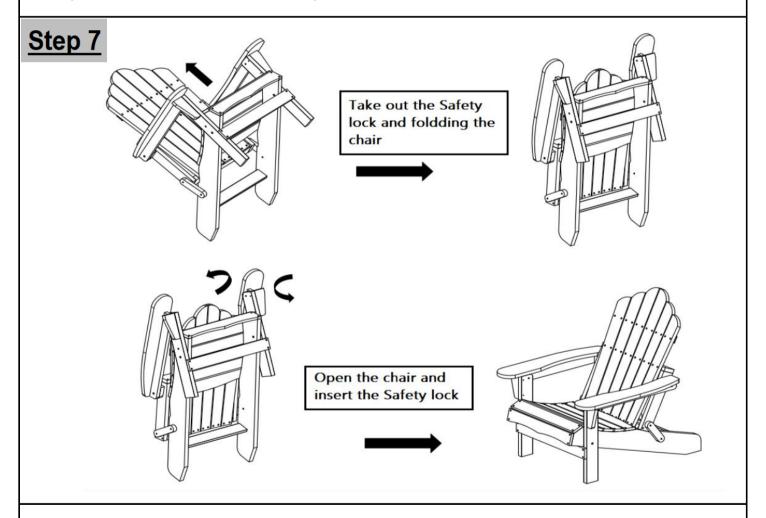

This Adirondack can be folded shut.

To fold this Adirondack, please take out the safety lock first, then raise up Backrest and fold Seat with Leg Frame as indicated by the arrows, by hand, until the Adirondack folds shut.

To open this Adirondack, open Backrest and Seat as indicated by the arrows, by hand until the Adirondack folds out and locks into position, then insert the the safety lock as Step 6.

Note: This Adirondack is slightly heavy, do exercise caution to avoid injury.