






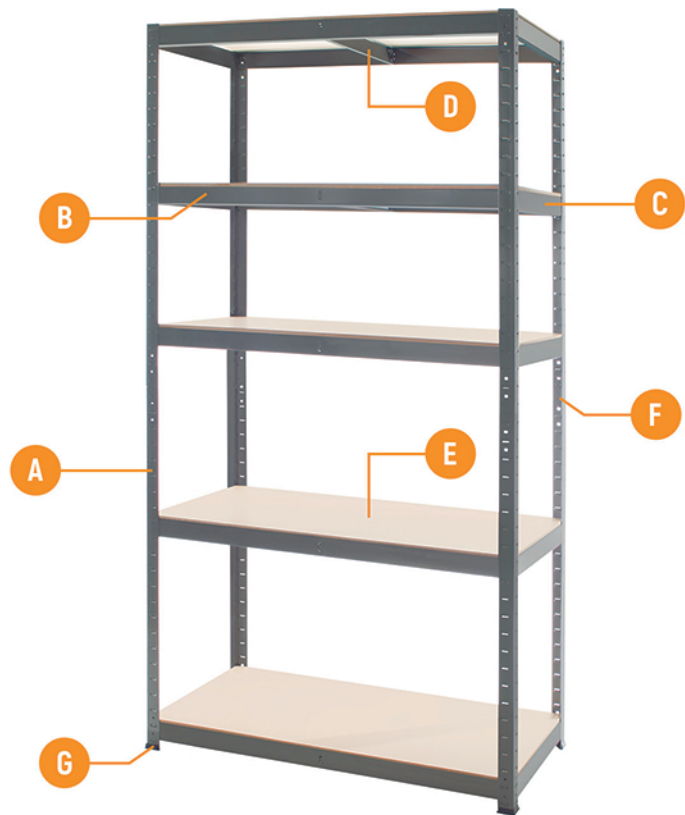


# Guide to Assembly & Usage

## Heavy-Duty Boltless Shelving Unit

### COMPONENT CHECK LIST

Component	Quantity
<b>A</b> Half Upright 	8
<b>B</b> Front/Back Bar 	2 per level
<b>C</b> Side Bar 	2 per level
<b>D</b> Support Bar 	1 per level
<b>E</b> Deck 	1 per level
<b>F</b> Upright Connector 	4
<b>G</b> Foot 	8



### INFORMATION

If in doubt, contact the supplier



Read this guide thoroughly before commencing assembly and retain for future reference



Before commencing assembly, unpack carefully and check that all components ordered are included



Tools – Small rubber mallet, standard screwdriver



We recommend products over 2000mm high are fixed to the wall where possible



### CAUTION

During assembly, ensure to:



Take care during assembly and in use, particularly when lifting or stretching and when using tools



Wear protective gloves during assembly



Build on a suitable level floor, which is strong enough to support the load and allow adequate working space



### WARNING

Rules for the safe use of shelving:



Never climb on the structure or stand on the shelving



Do not lean or support ladders, steps, or other objects against shelving



Always use safety steps to reach high shelves



Do not use in wet or damp conditions



Load heavy items on the lower shelves and lighter items on the higher shelves




This product is designed for hand loading only




Ensure that the maximum load carrying capacities are not exceeded

# Assembly - 175kg Shelving Unit


- 1 Fit foot **G** onto the bottom of two half uprights **A**

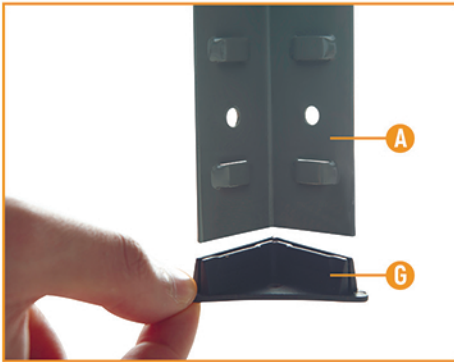


- 2 Push the tabs of the side bar **C** into the bottom slots of the upright **A**. Using a rubber mallet knock fully into place

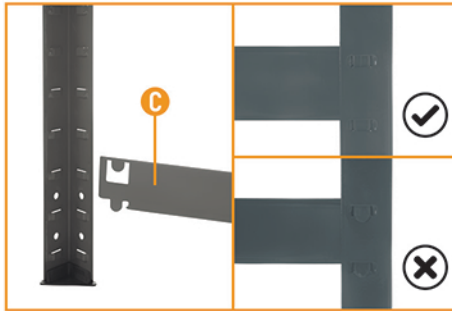


- 3 Repeat for the opposite side

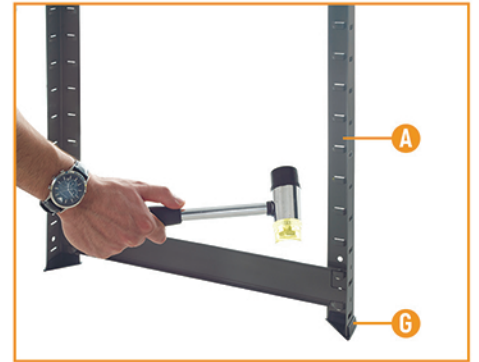

- 4 Add a second side bar **C** at the preferred height for the next tier

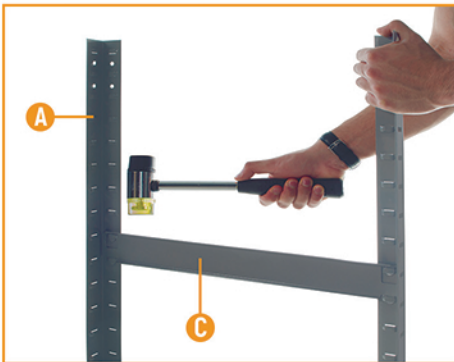

- 5 Insert the upright connectors **F** into the top of the uprights **A**

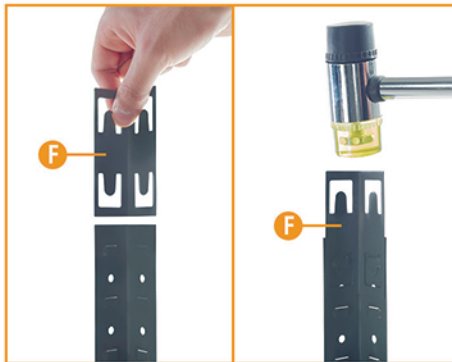


- 6 Repeat steps 1-5




- 7 Join the two side frames using the front/back bars **B**



- 8 Insert the support bar **D** into the front/back bar **B**. Use a standard screwdriver to bend the tabs back

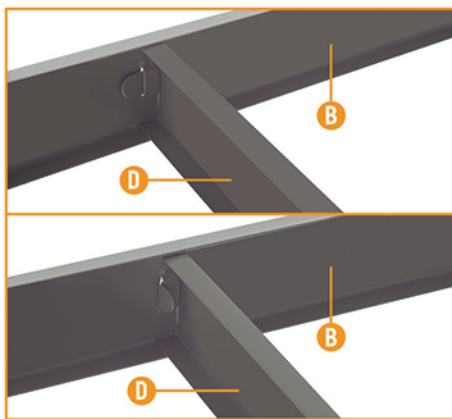

- 9 Add the remaining uprights **A** to the top of the uprights connectors **F**

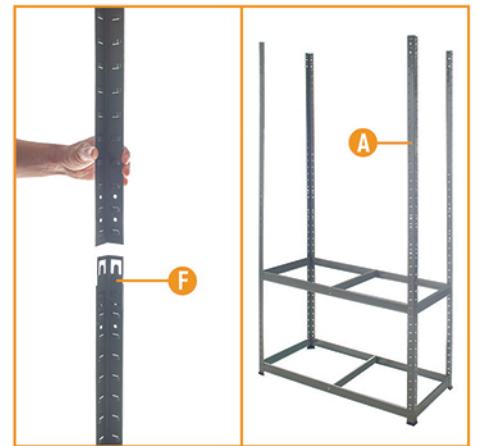

- 10 Create the remaining tiers



- 11 Add the decks **E** onto each level



- 12 Your shelving unit is now complete

