



ASSEMBLY INSTRUCTIONS

267 T

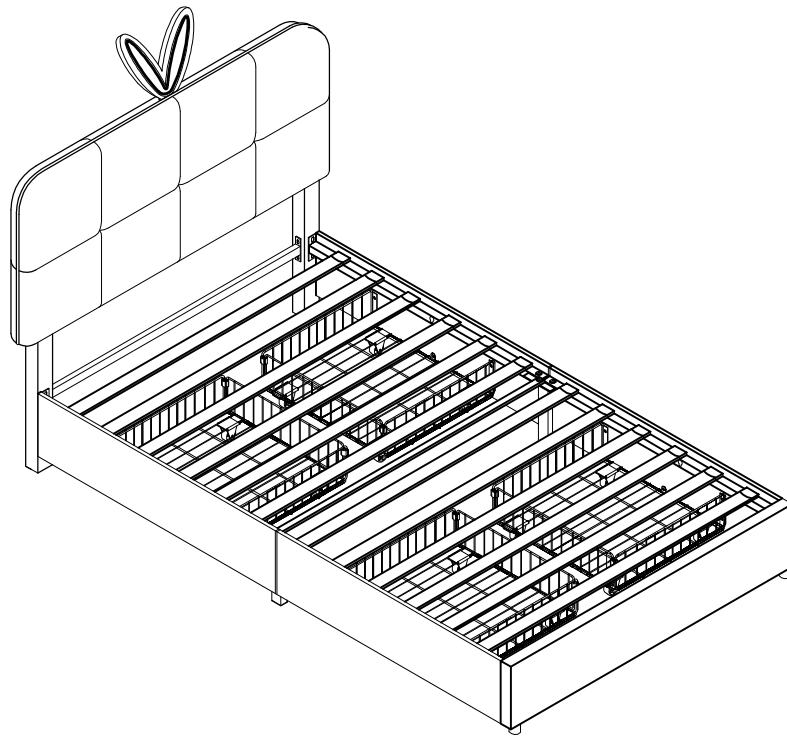


PARTS AND HARDWARE

① Headboard

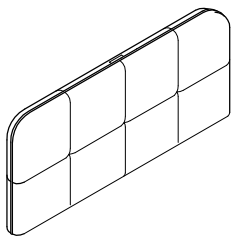


1PC

② Footboard

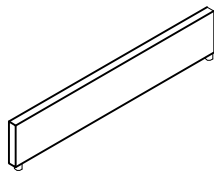


1PC

③ HB Leg

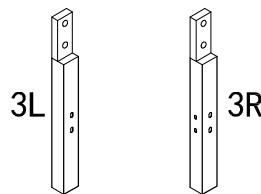


2PCS

④ HB Support Rail

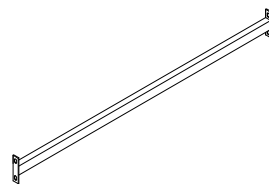


1PC

⑤ Side Rail Support

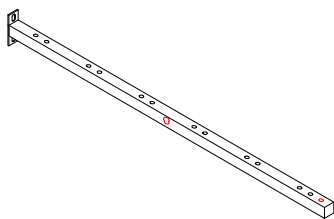


4PCS

⑥ Side Rail Feet




2PCS

⑦ Leg




2PCS

⑧ Drawer

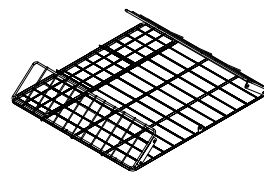


4PCS

⑨ Drawer panel

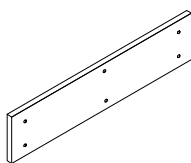


4PCS

⑩ Drawer connector




16PCS

⑪ Drawer wheel

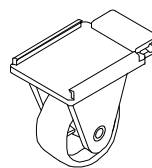


16PCS

⑫ Single Sided Plastic cap




24PCS

⑬ Slat

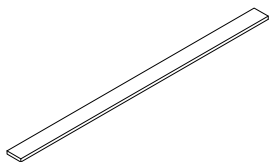


12PCS

⑭ HB

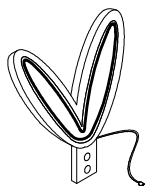

1PC

⑮ REMOTE CONTROL




1PC

⑯ POWER



1PC










⑰ Center cross bar

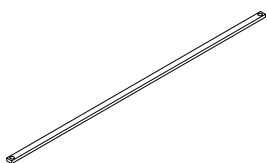


1PC

PARTS AND HARDWARE

HARDWARE LIST:


A  m8*30mm 12PCS	B  m8*50mm 10PCS	C  m6*20mm 24PCS	D  m8 22PCS
E  m8*19mm 22PCS	F  m6*16mm 22PCS	G  M8 2PCS	H  m8 1PC
I  m6 1PC	J  1PC	K  m6*30mm 2PCS	

STEP :Packing Details

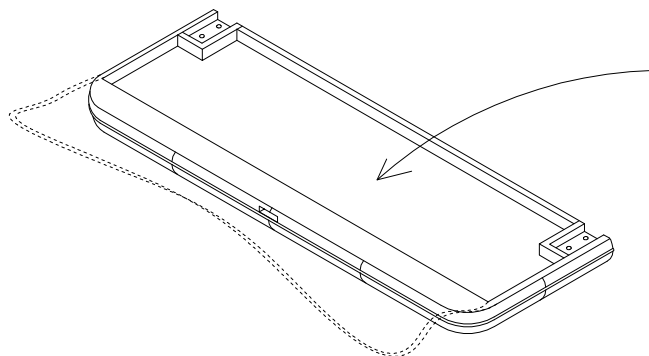


Components inside

STEP 1

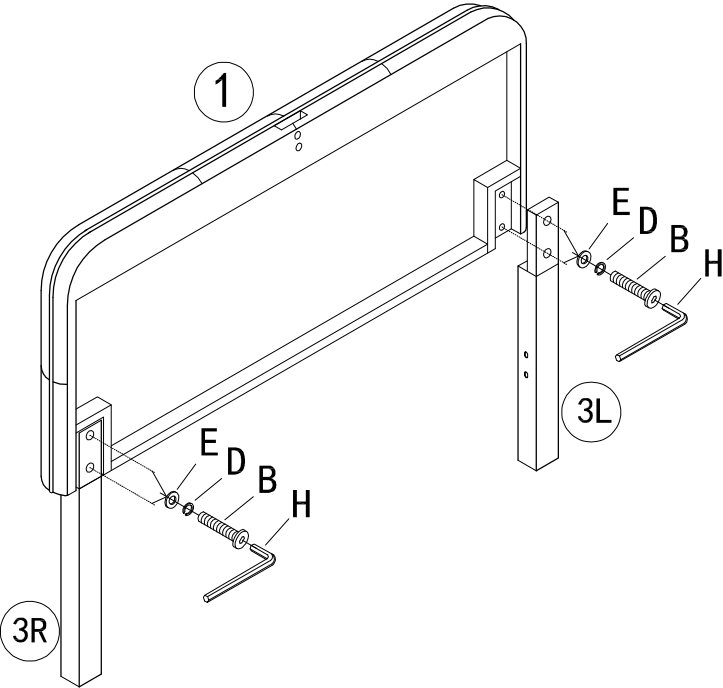


	B x 4PCS
	E x 4PCS
	D x 4PCS
	H x 1PC

STEP 2

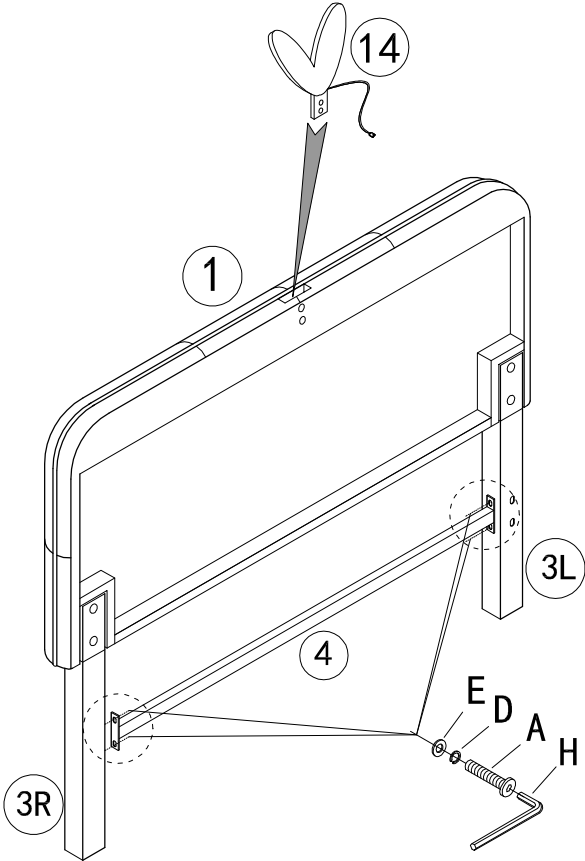

	A x 4PCS
	E x 4PCS
	D x 4PCS
	H x 1PC


STEP 3

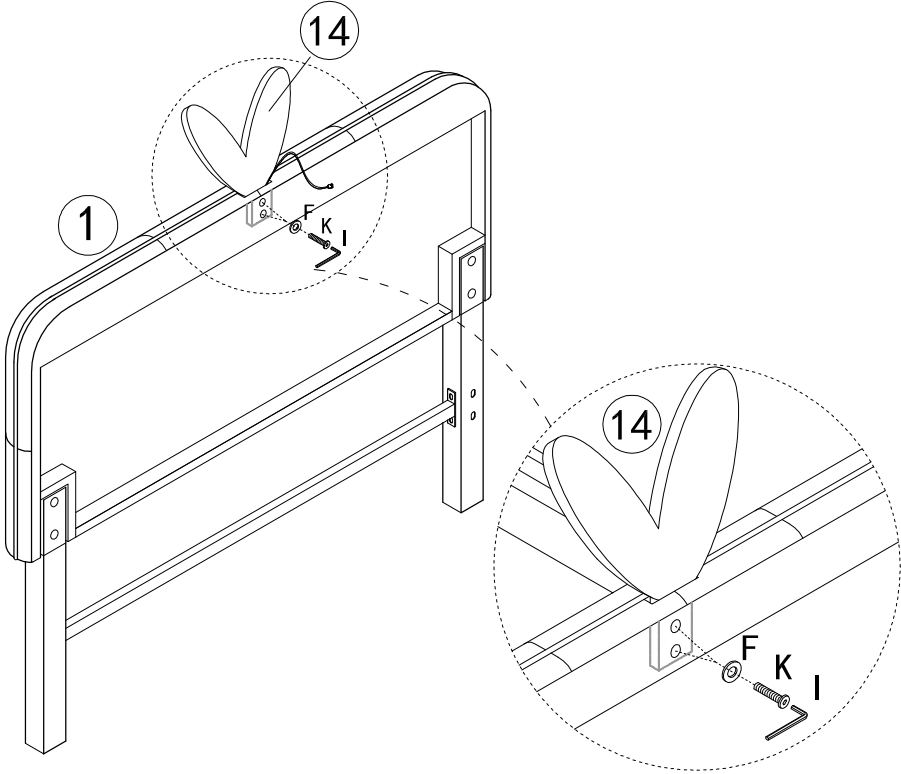

m6*30mm


	K x 2PCS
	F x 2PCS
	I x 1PC

STEP 4


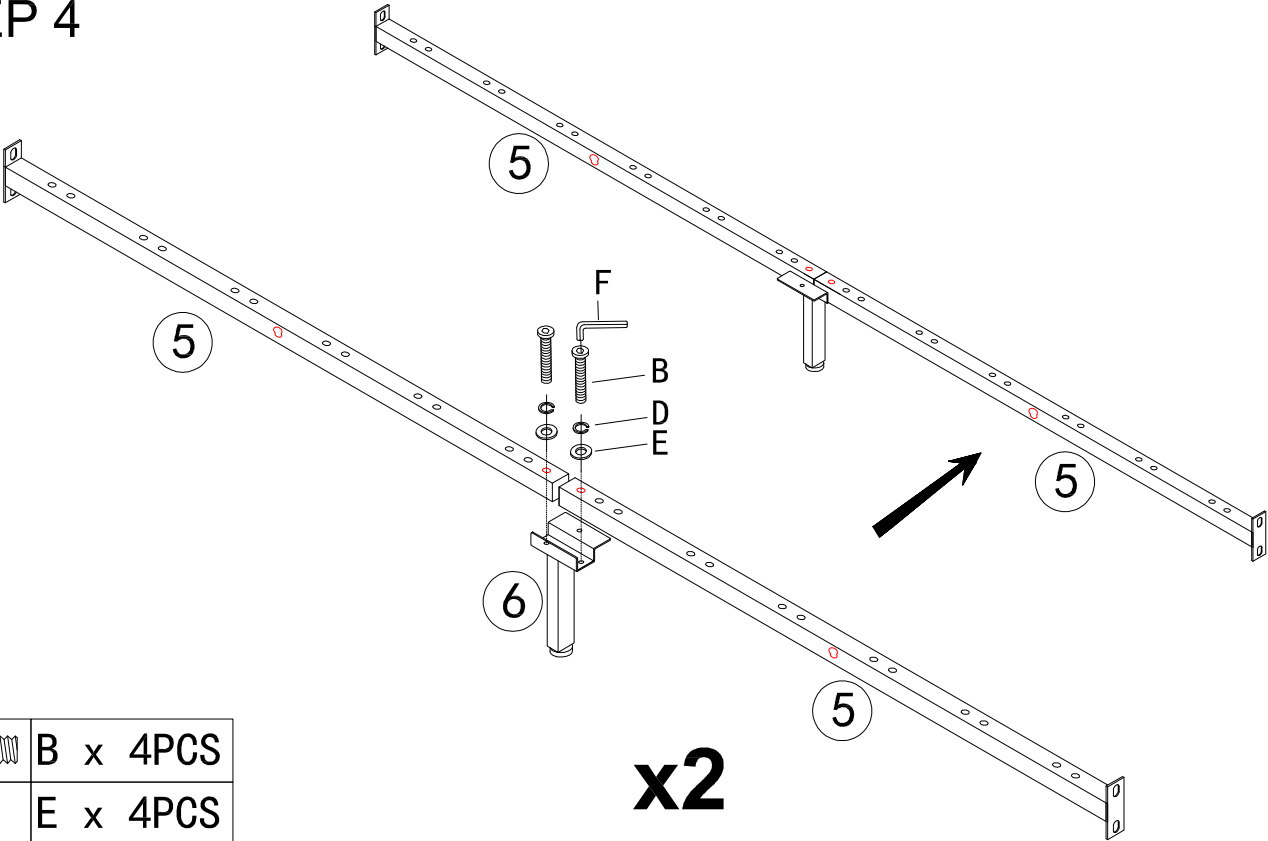


	B x 4PCS
	E x 4PCS
	D x 4PCS
	H x 1PC


STEP 5

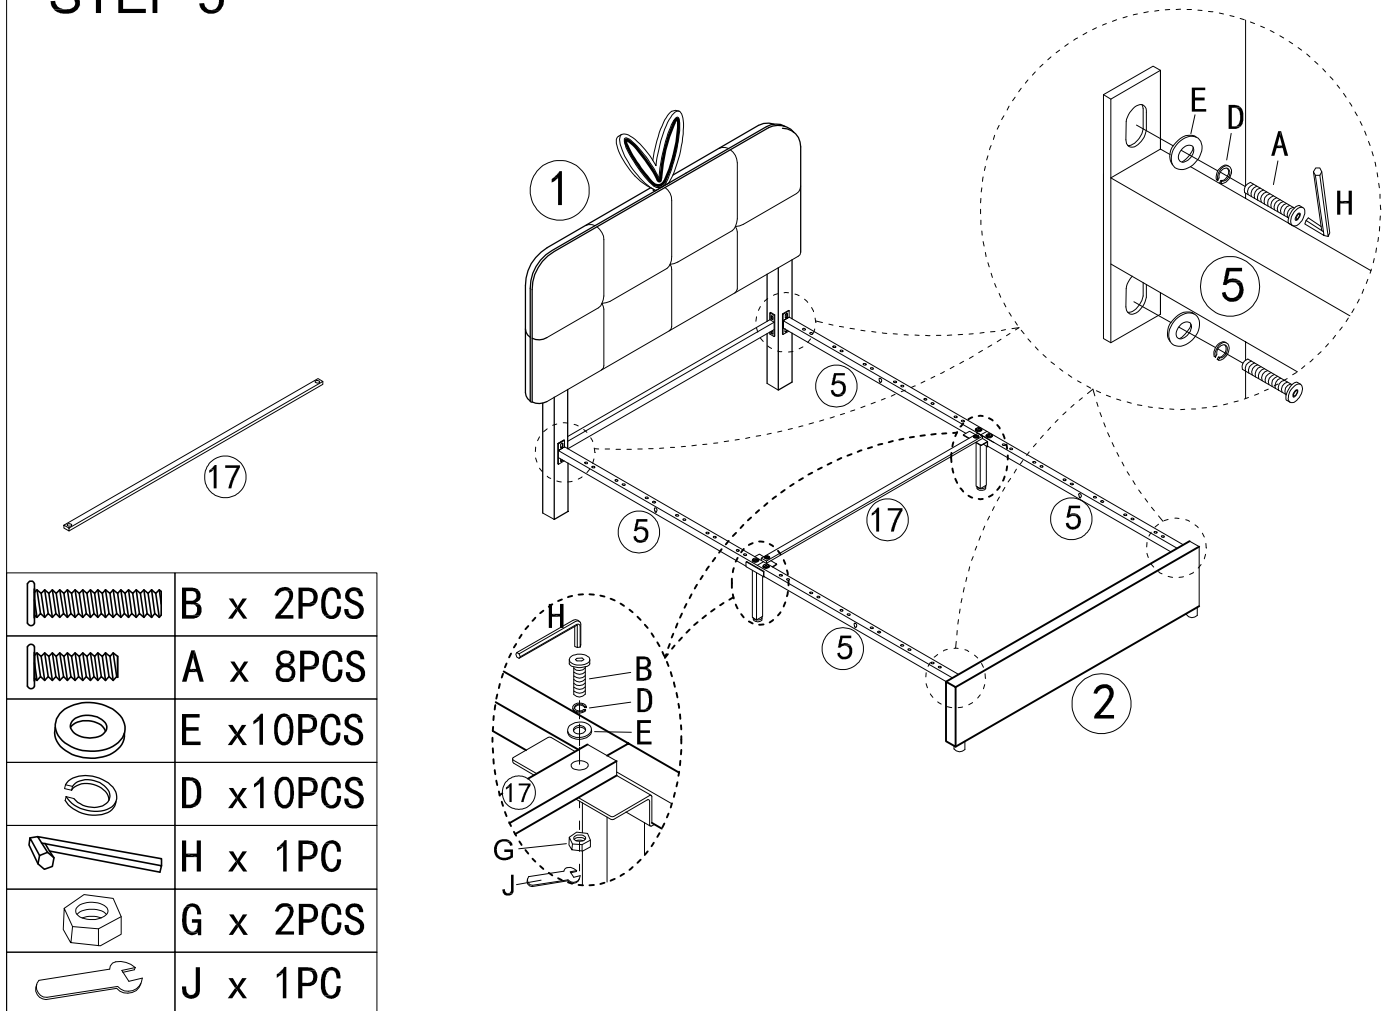


STEP 6

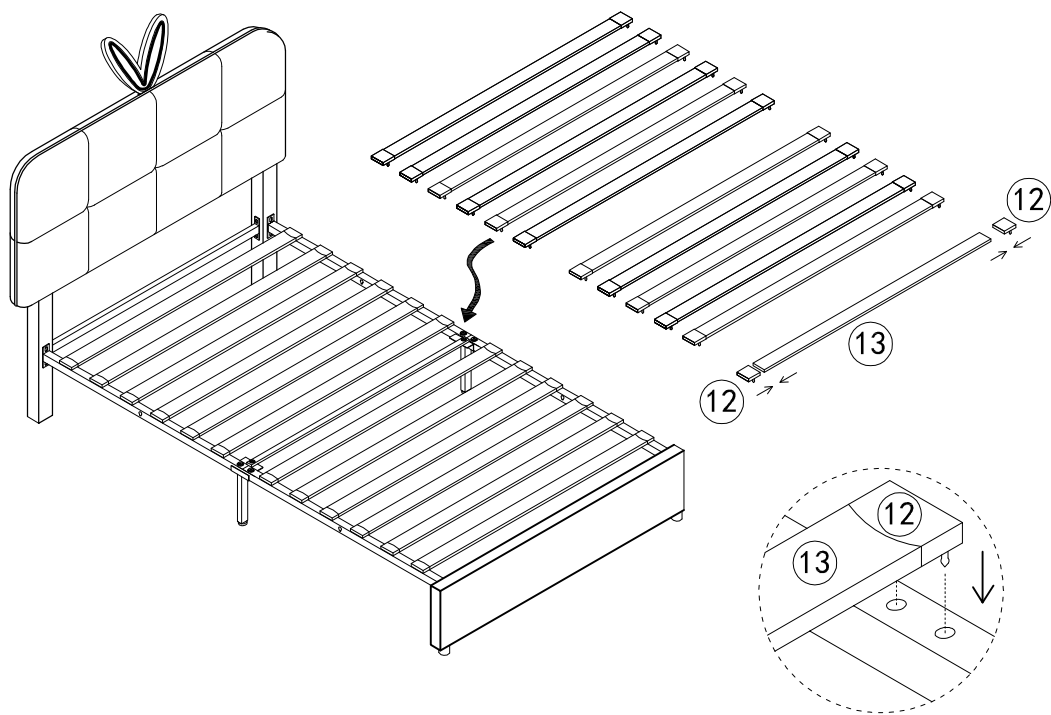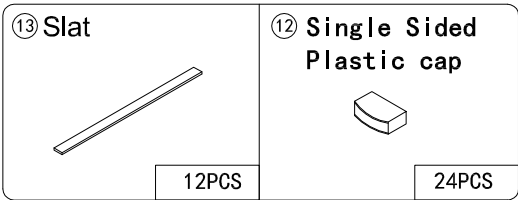

STEP 7:

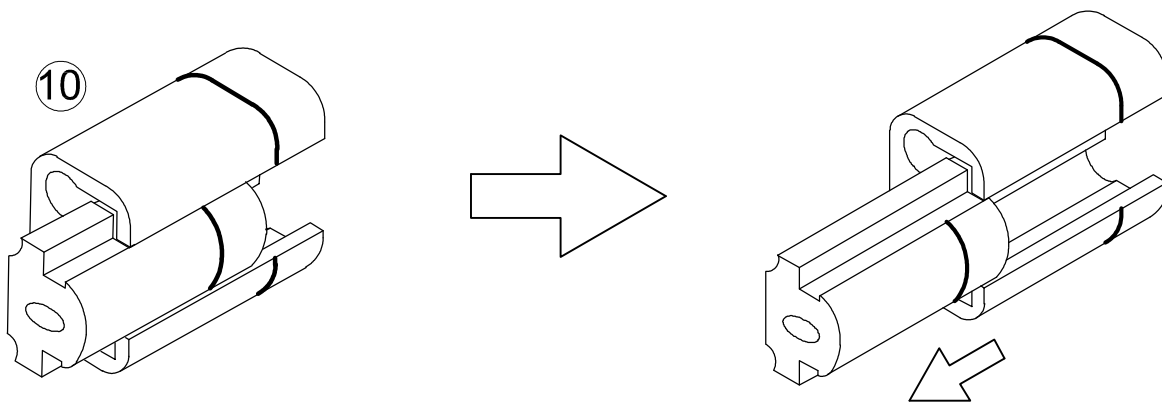


You can pull the buckle out by following the direction indicated by the arrow

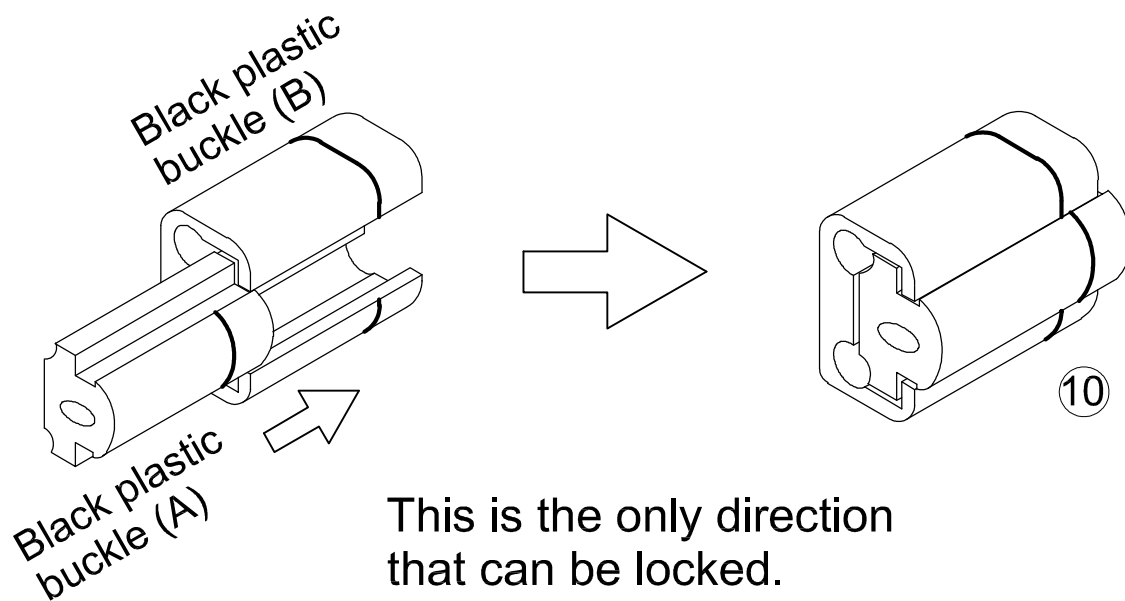


This is the only direction
that can be locked.

STEP 8:

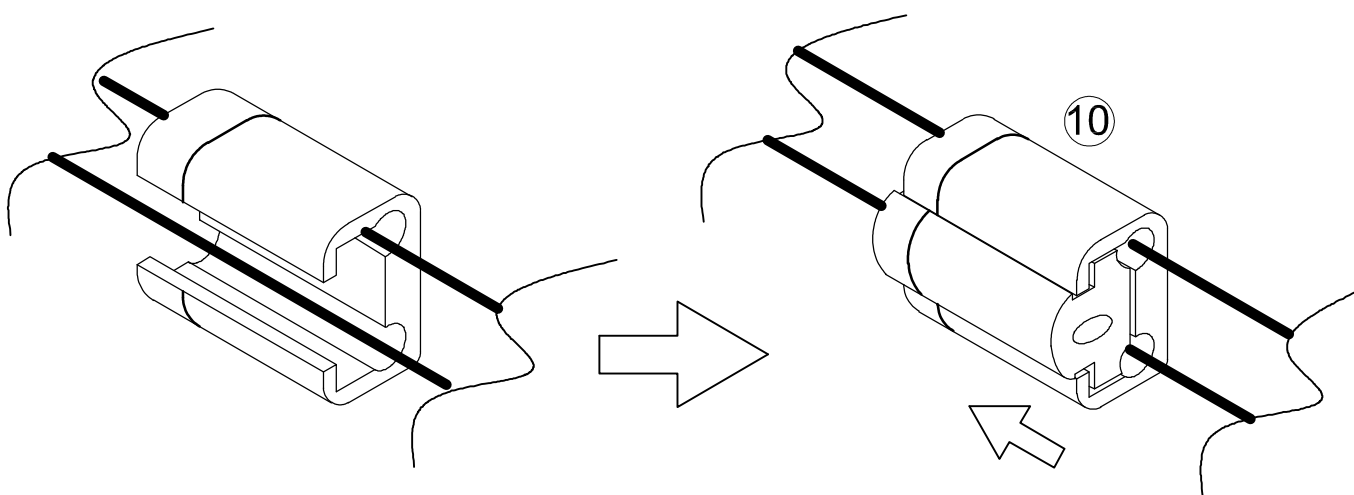


Place round iron tube as shown
for better drawer assembly

STEP 9:


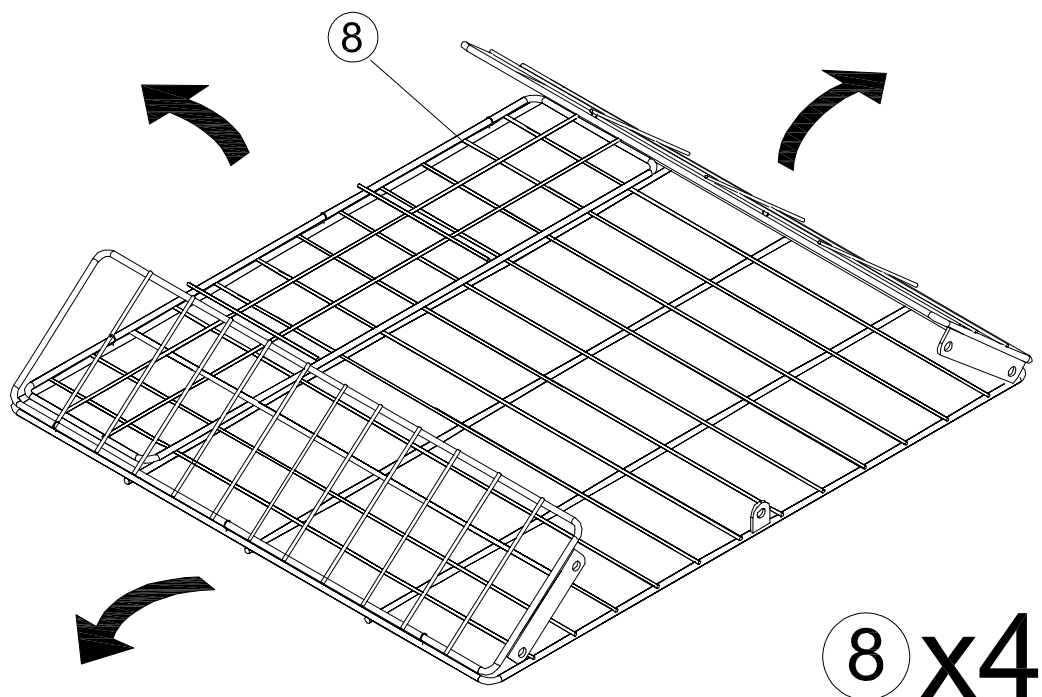


STEP 10:

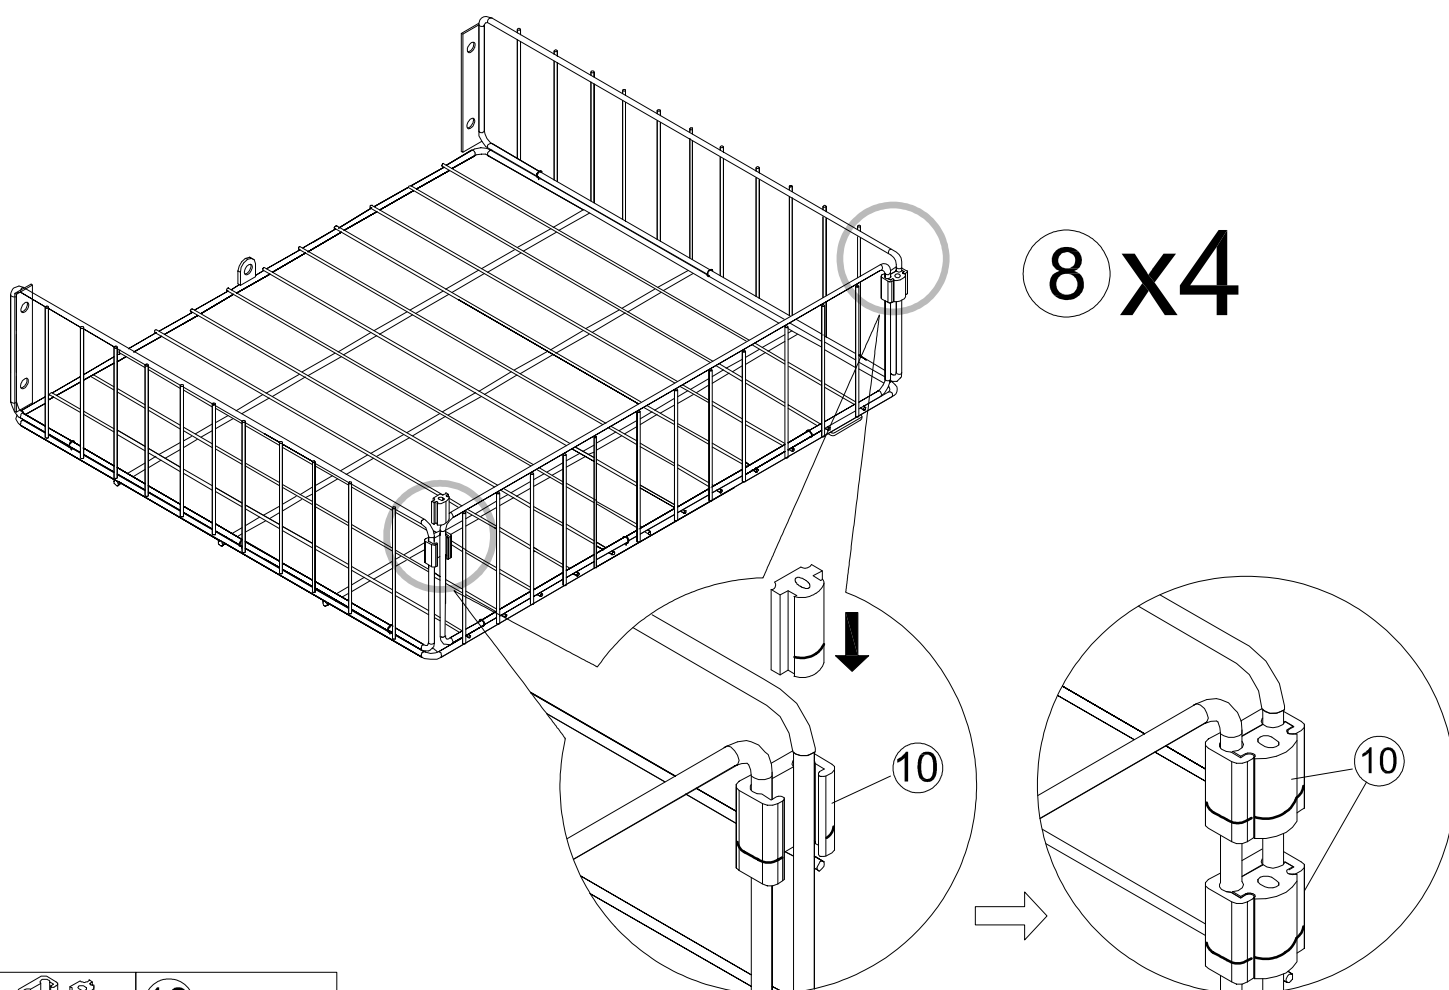

10 x16PCS

STEP 11:

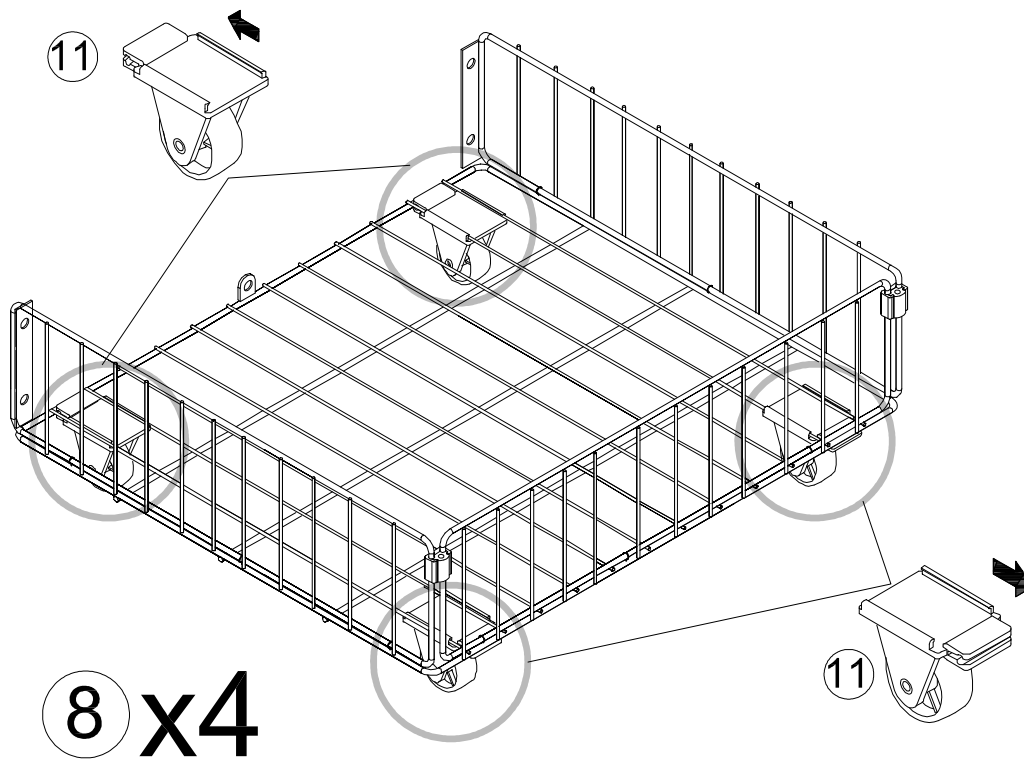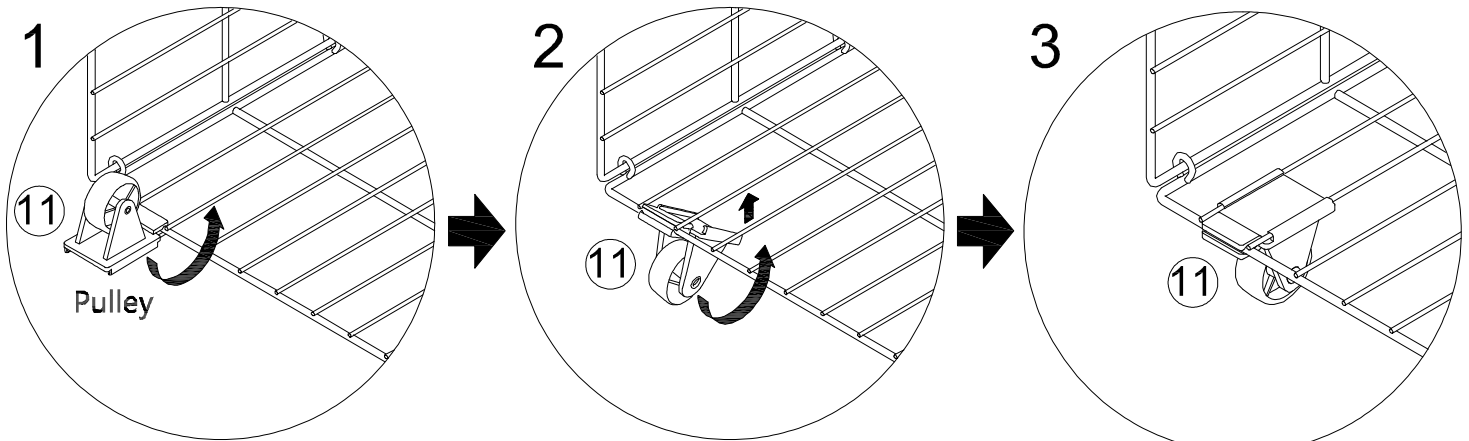


Place the round iron tubes as shown for better assembly of the drawers.



11 x 16PCS


STEP 12:

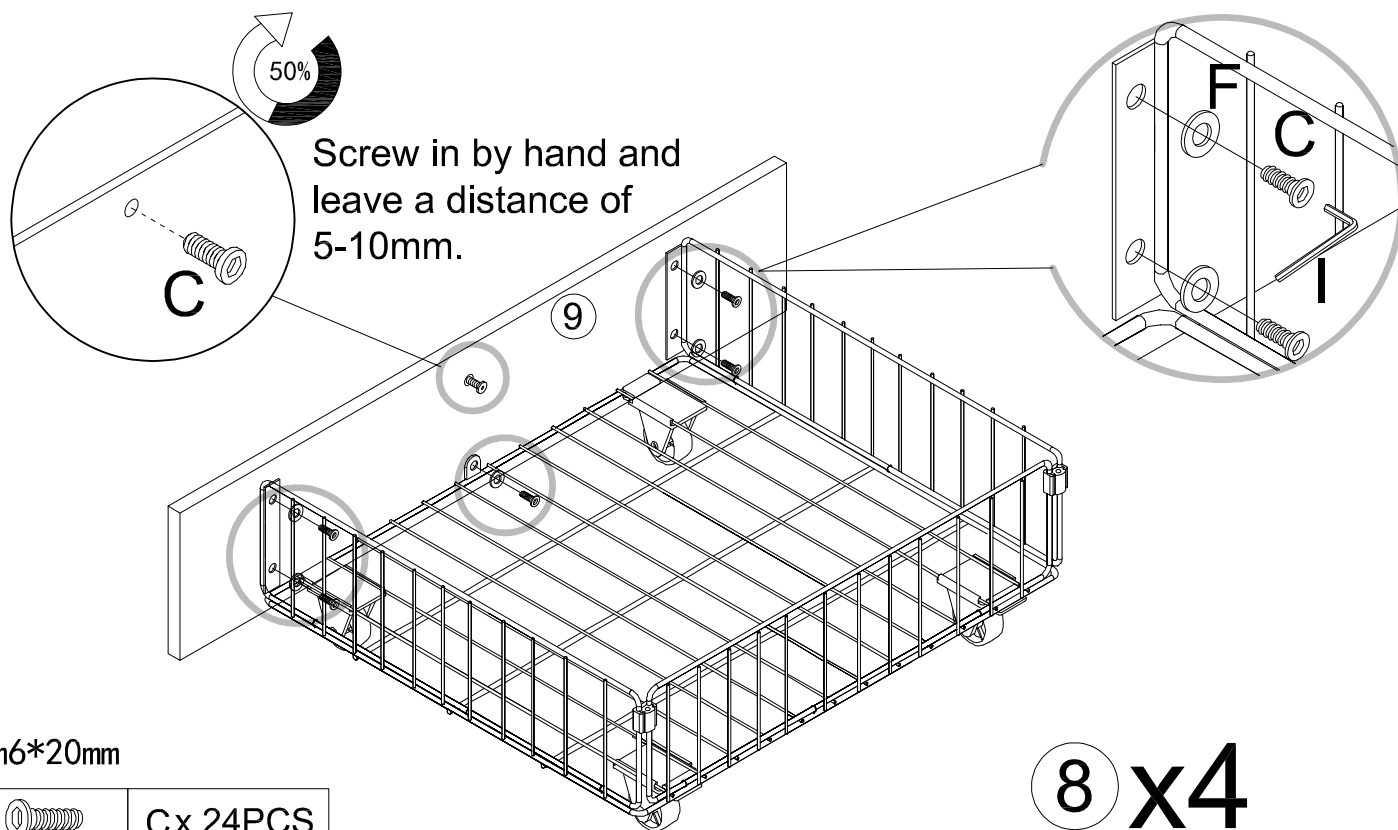

m6*20mm


	C x 24PCS
	F x 20PCS
	I x 1PC

STEP 13:

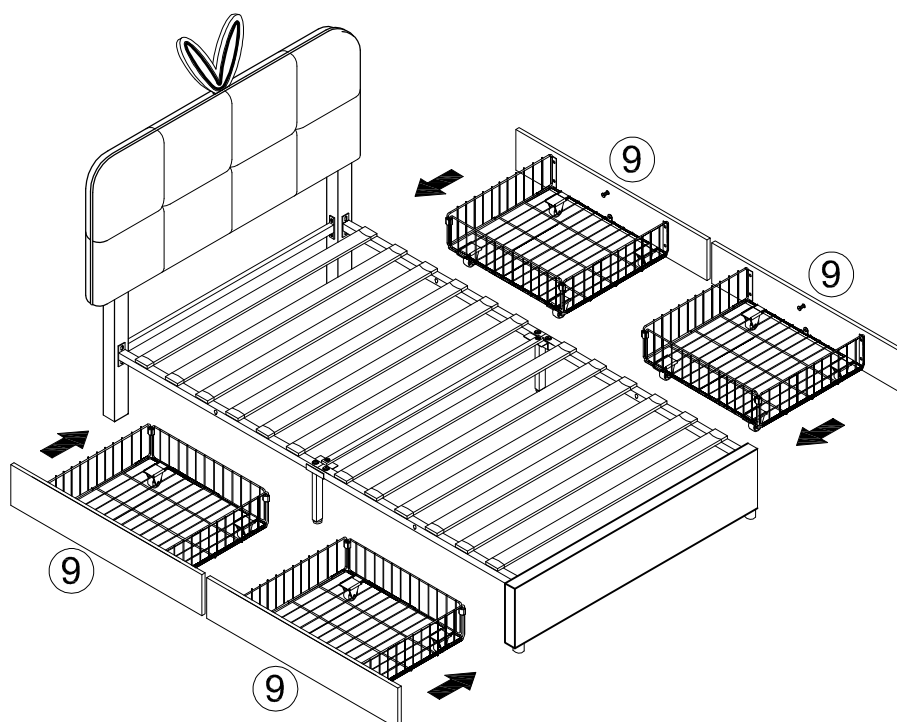

STEP 14:

Drawer panel screw hang into side cross beam hole.

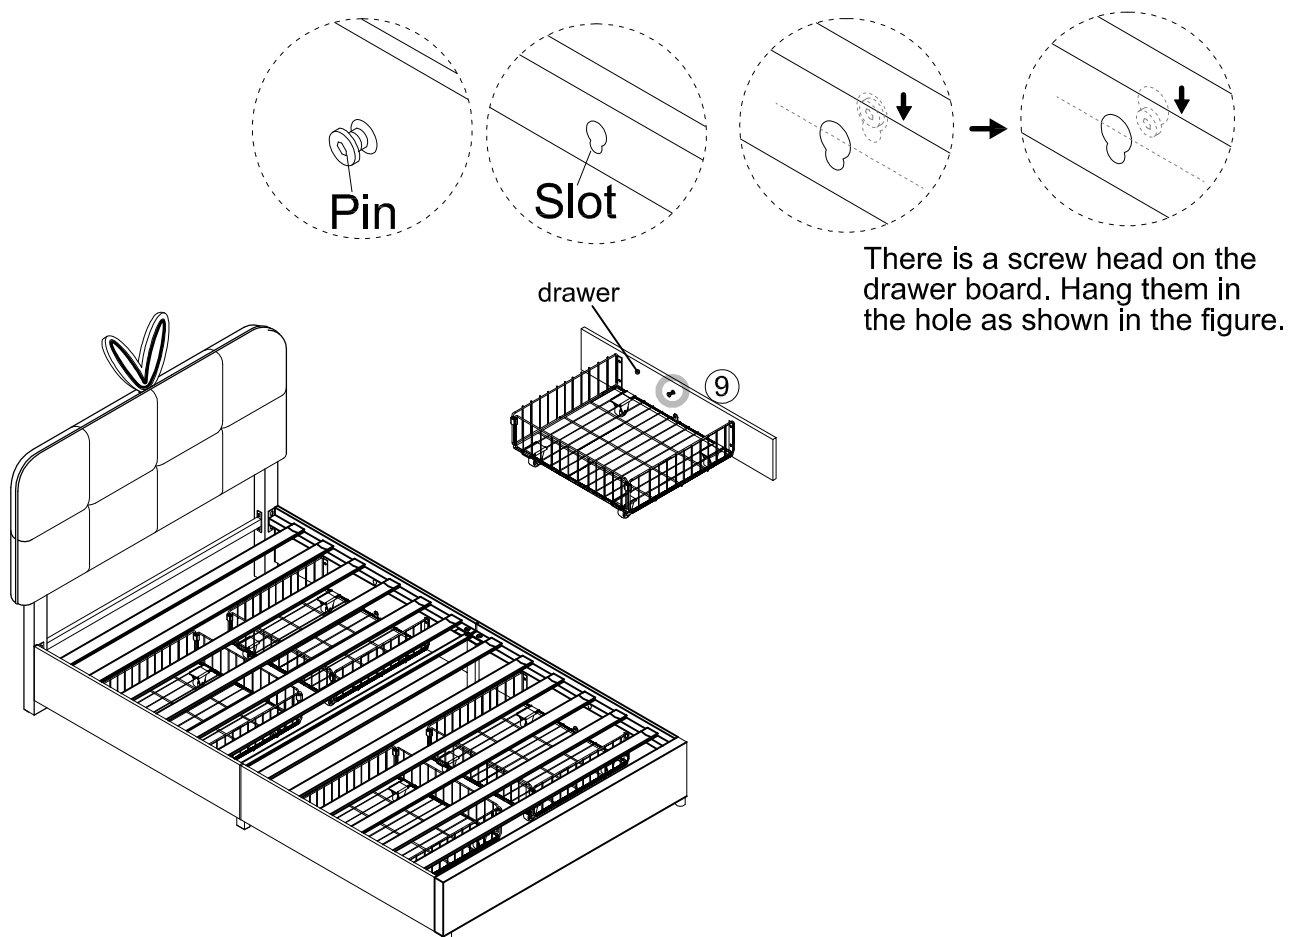

STEP 15:

