



Warnings and Cautions

Please retain this instruction for future usage and read carefully before assembly.

Make sure you have all the parts & hardware as item list shows.

3 adults or more are recommended to install your Sunroom.

Do not discard any of the packaging until you have checked that you have all the parts and pack of fittings.

Check all bolts for tightness before use, and periodically check and tighten bolts ensure your gazebo works properly.

Some parts might have sharp edges/corners/Please follow basic safety precautions to reduce the risk of hurts.

Avoid installing and settling the solarium in a corridor of heavy wind.


Some assembly parts contain sharp edges, you should wear protective gloves when handling these items.

For safety issues you must not leave the unit unattended if it is not completed, even if it is already anchored to the ground.

It is essential to place the gazebo on level ground and not less than **6 feet** from any obstruction such as fences, garages, overhanging branches, laundry lines, or electrical wires.

If you have questions or concerns.

*Please contact us via email at **service@domioutdoorliving.com***

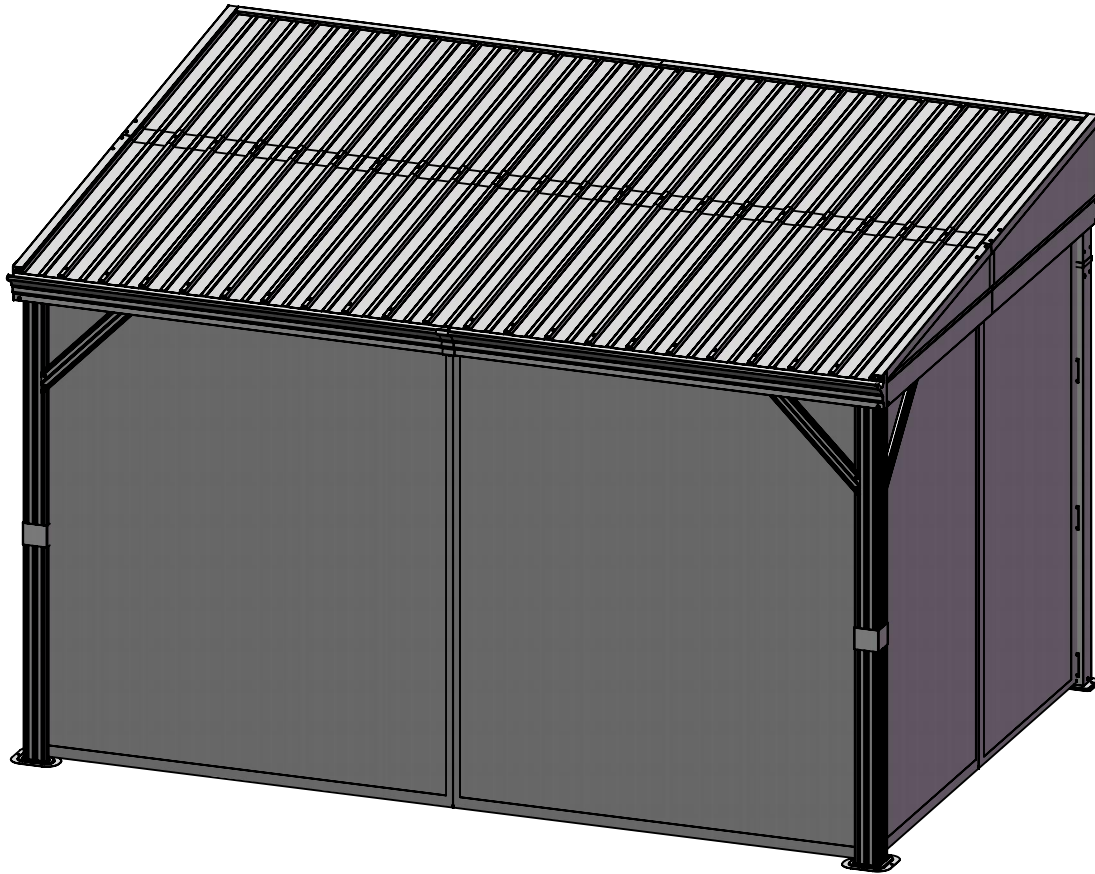

8'x12'

SKU: LGMF1679

Wall-Mounted Gazebo

Assembly Manual

*Thank you for your purchase of
Domi outdoor living's Sunroom*

Read and follow this assembly and operation huide.

To reduce personal injury and damage to you Sunroom.

*We recommend a **three-person team** for assembly and disassembly.*

*Please **remove** snow accumulation at all times.*

Please scheduie enough time to complete the assembly of the sunroom.

It will takes approximately 5 hours to set up.

If you like our products,please tell other customers.

If you have problem with our products,please tell us.

Please feel free to contact us.


Pre-assembly

TOOLS THAT MAY BE REQUIRED (Not included in boxes)

*NOTE: Tools / equipment are not shown to actual size and scale.



LEVEL

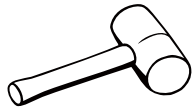


RUBBER Mallet




PHILLIPS SCREW



DRILL

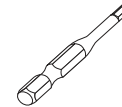

ALLEN KEY

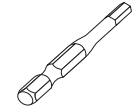

ALLEN KEY

EQUIPMENT REQUIRED (Not included in boxes)

*NOTE: Equipment are not shown to actual size and scale.



SAFETY HAT



GLOVES



SAFETY GOGGLES



STEPLADDER

Matters needing attention



1. Three or more people are required for assembly.



2. Do not fully tighten screws prior to complete assembly.



Regulation

IMPORTANT: A sunroom may entail to purchase a municipal permit or be subject to specific building codes. It is the consumer's responsibility to inform themselves of any restrictions.

Care and Cleaning:



For cleaning, use a domestic soap or detergent and wash with warm water using a sponge or fabric. Rinse with clean water.

1

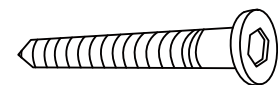
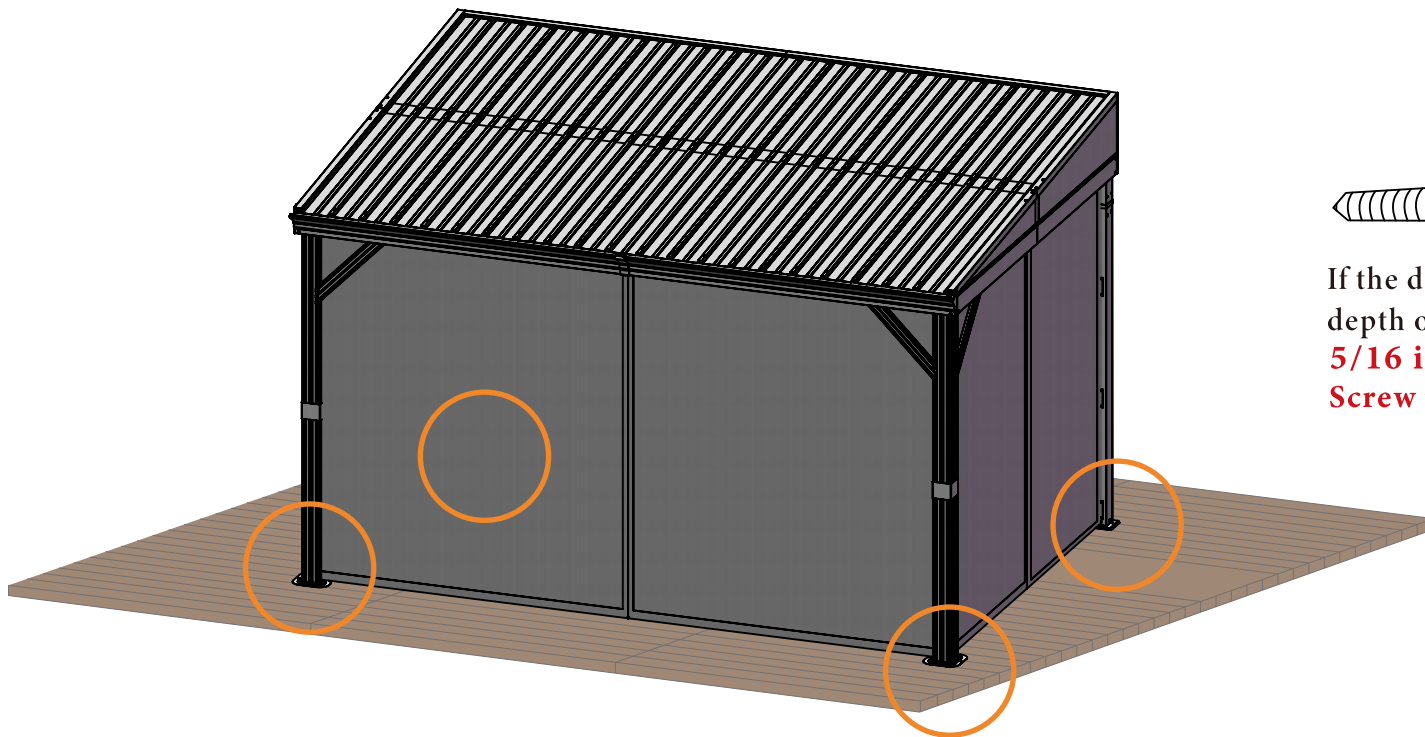


X12

If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in.x4 in. Structural Wood Screw** to mount the pergola.

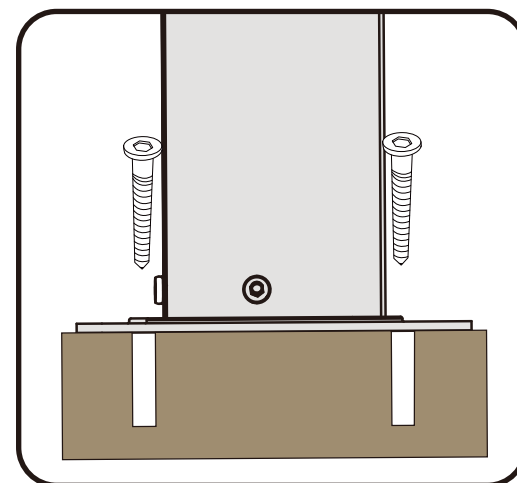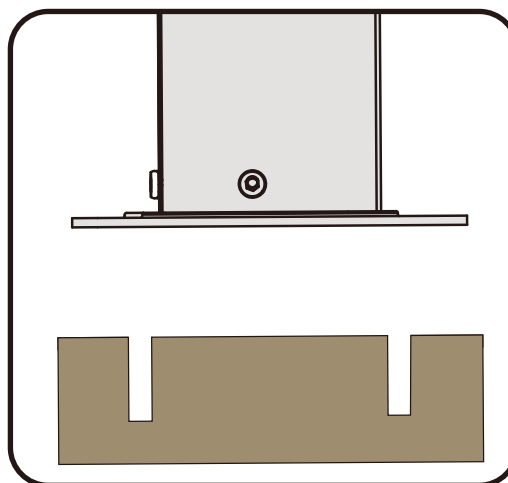


2

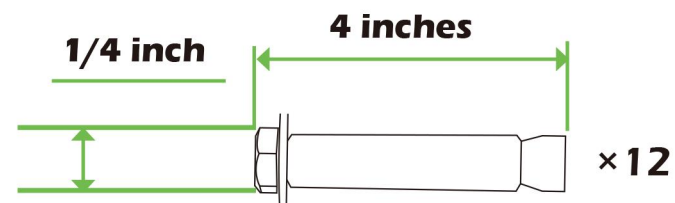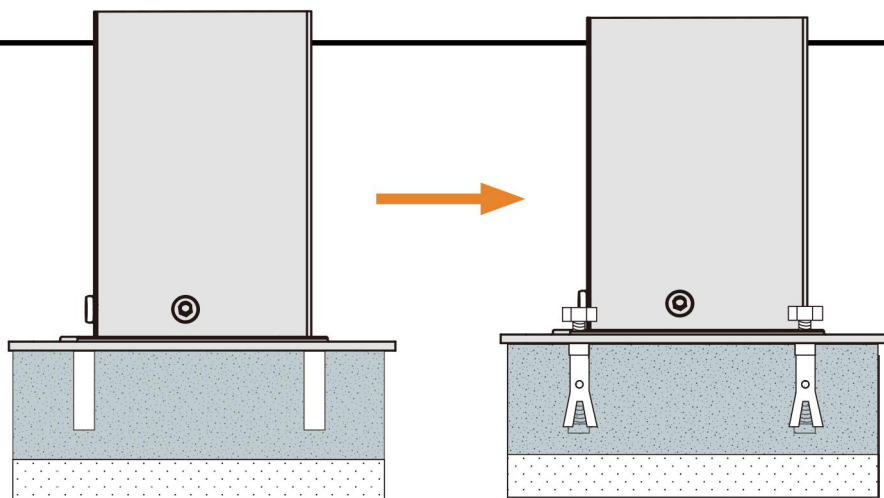

If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the gazebo


3

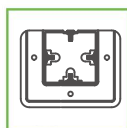


Or you can make a concrete footing for gazebo, **11.8×11.8×11.8 inches** is recommended. Use expansion bolts to mount the gazebo like ② shows.


















IMPORTANT:
Anchor is not recommended











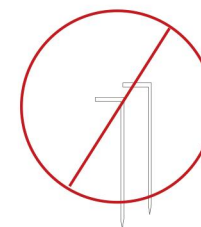



LGMF1679

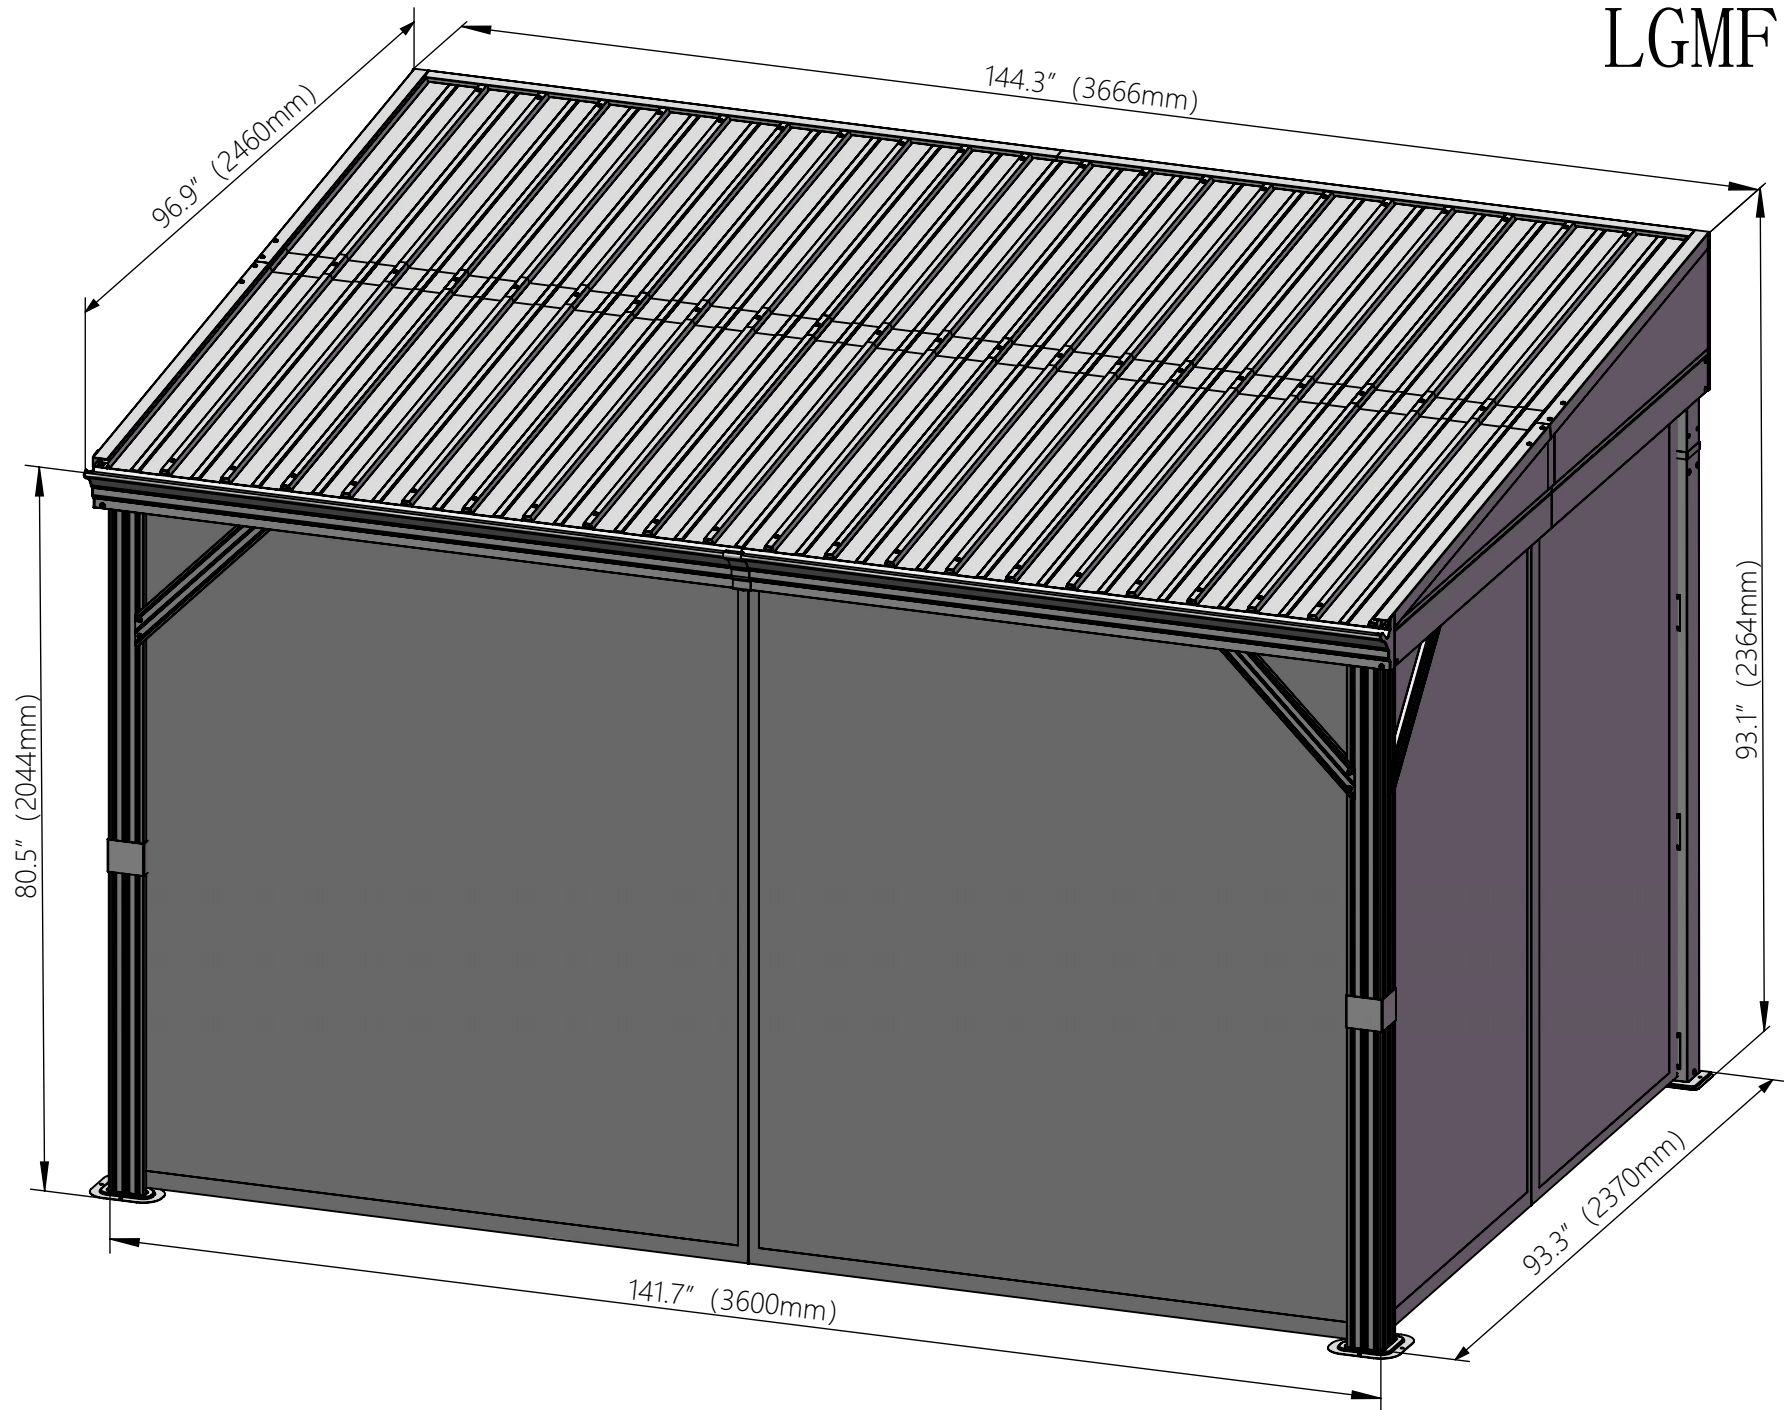

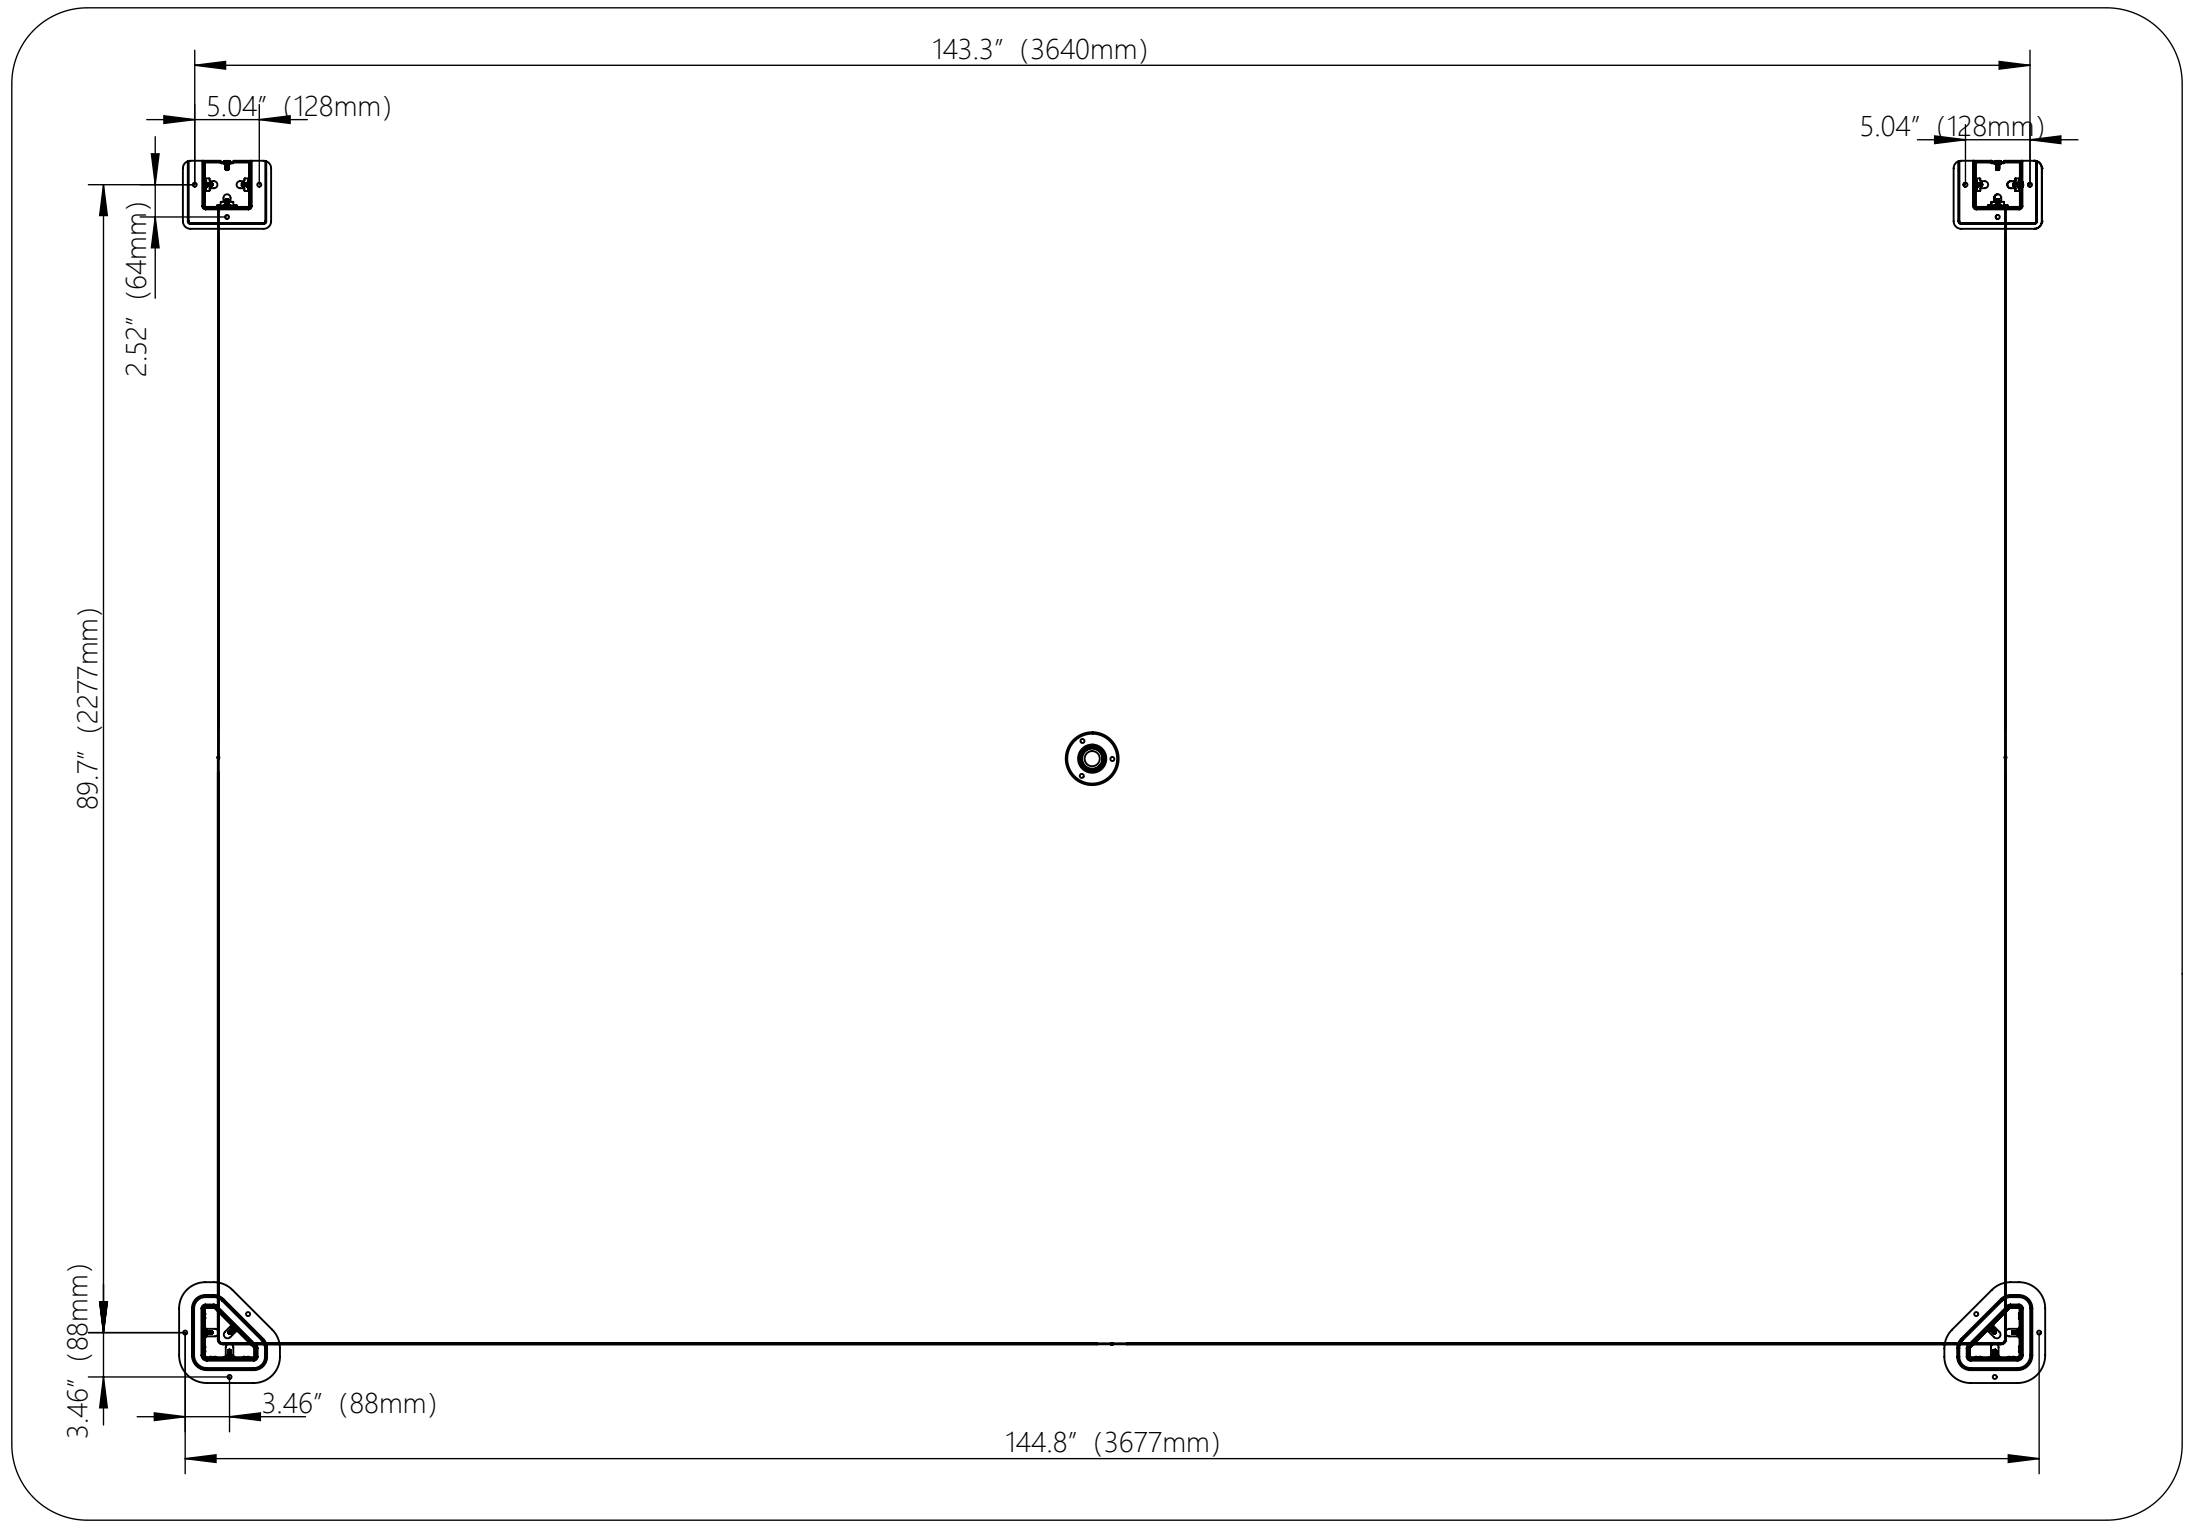


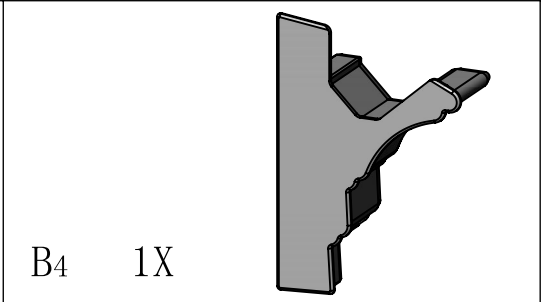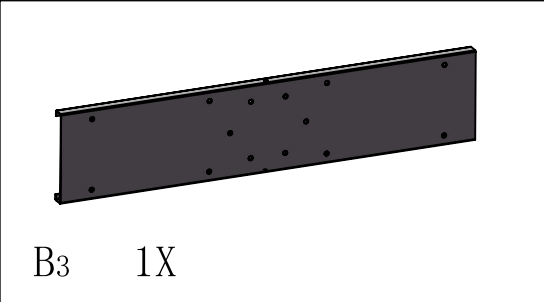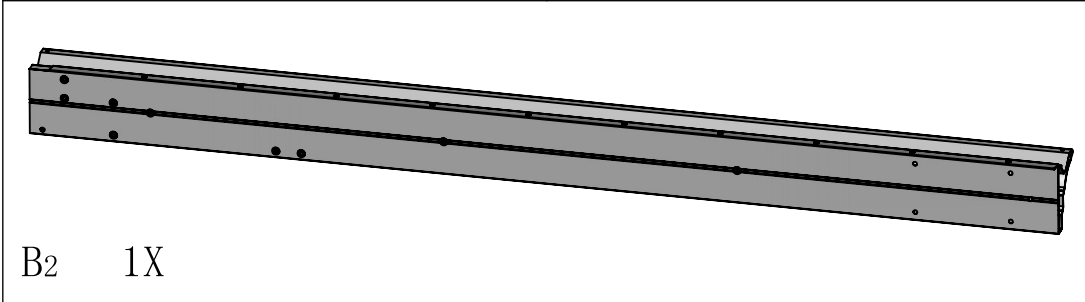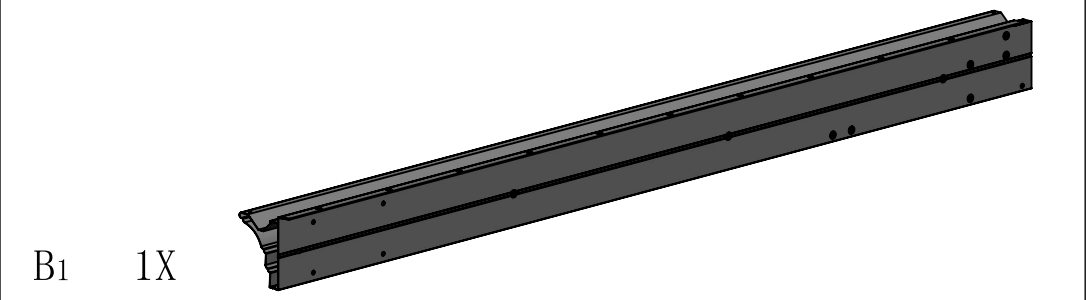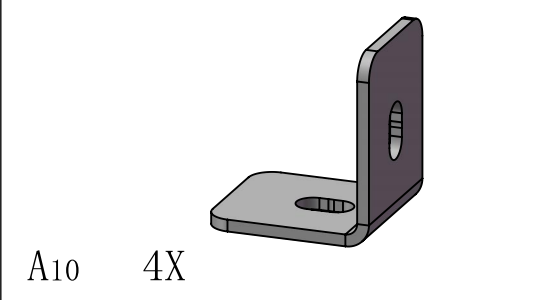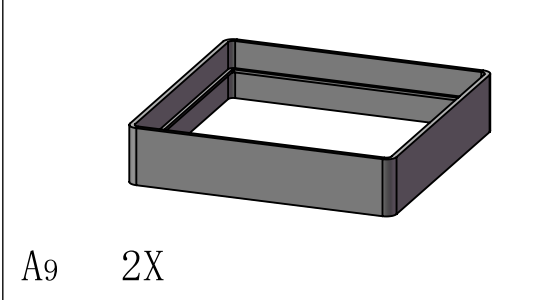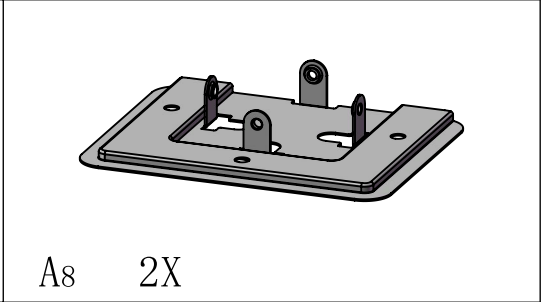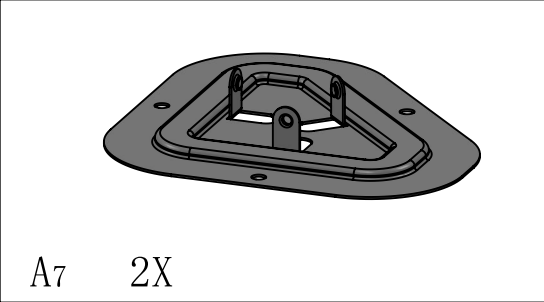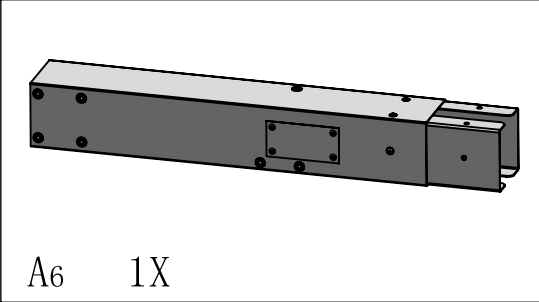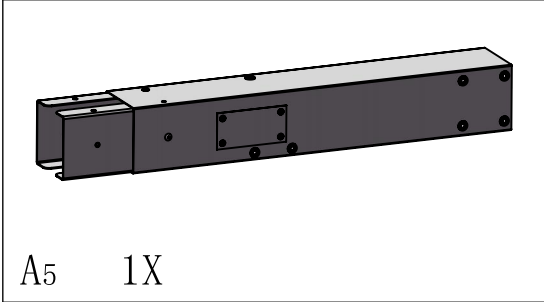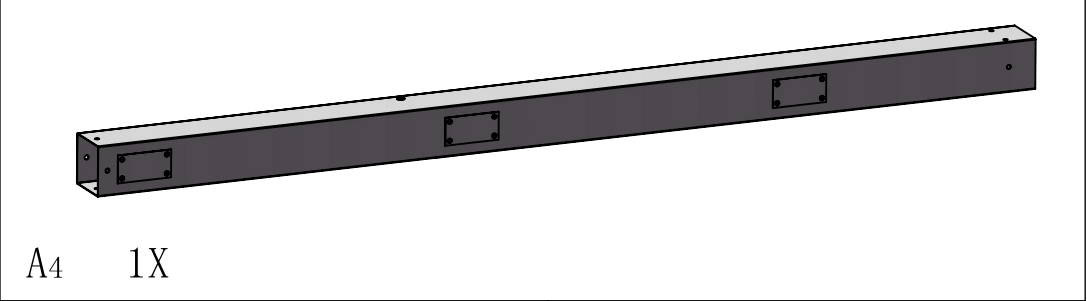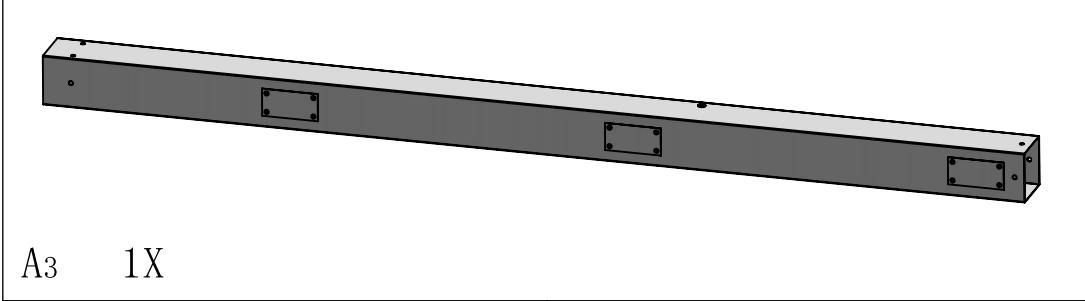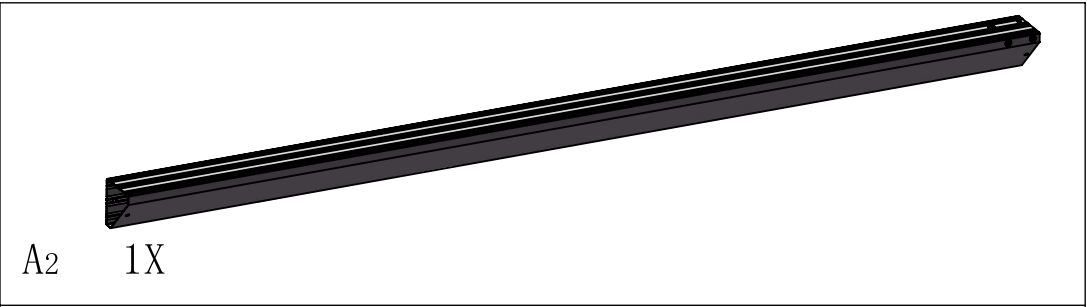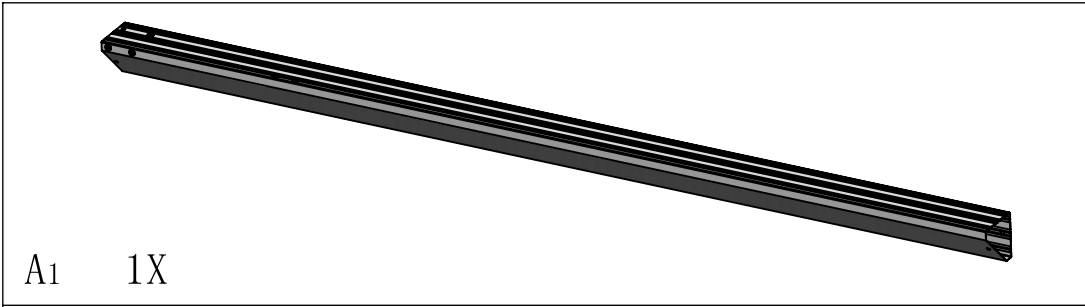

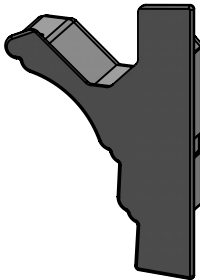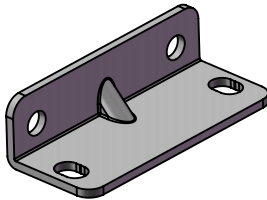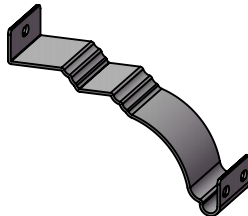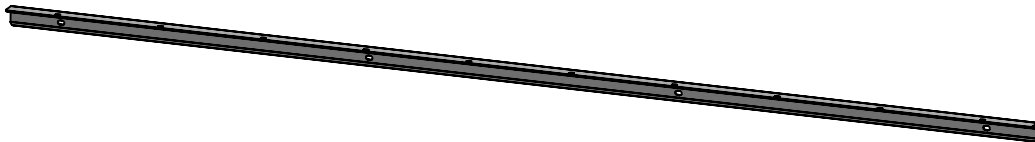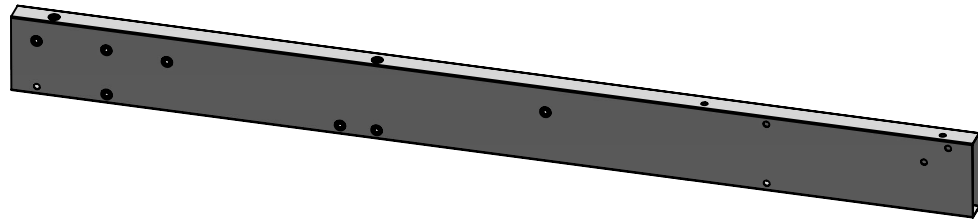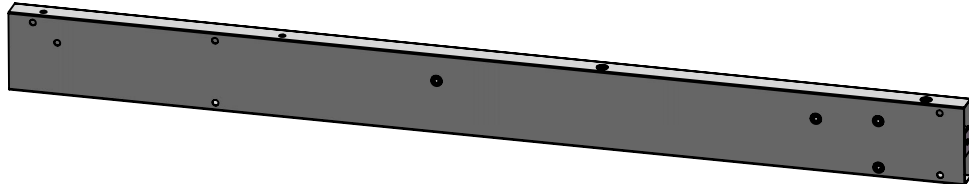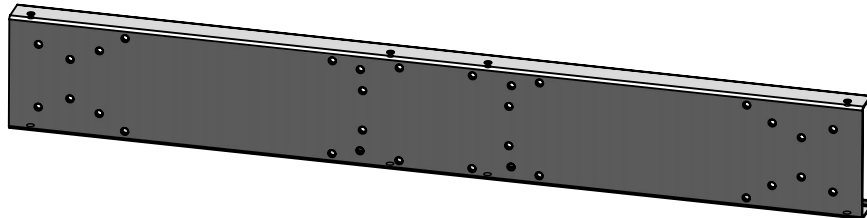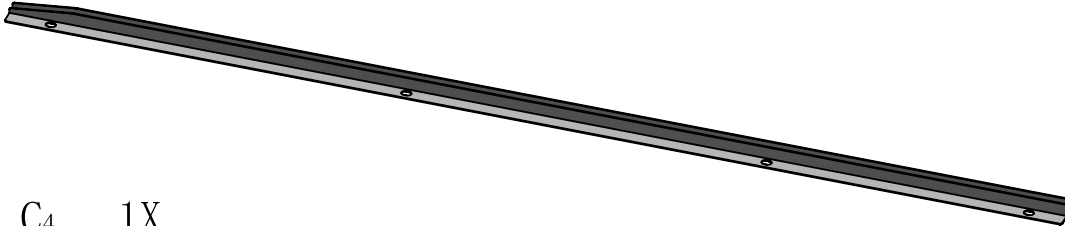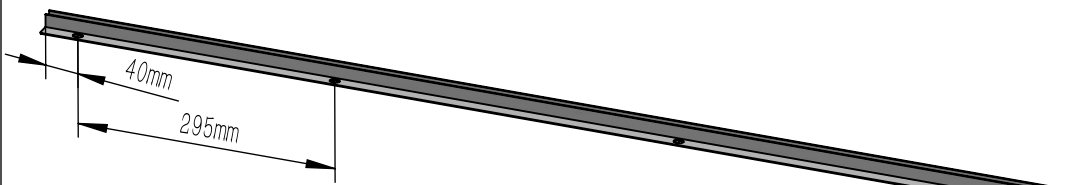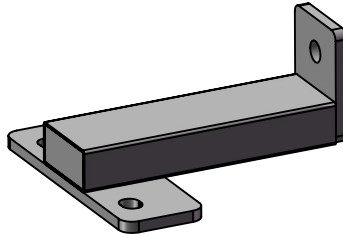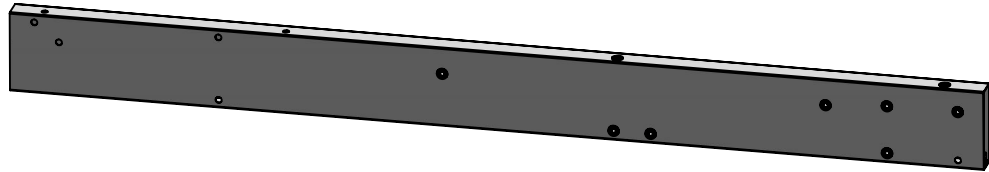
<div></div> <div>B₅ 1X</div>	<div></div> <div>B₆ 6X</div>	<div></div> <div>B₇ 1X</div>
<div></div> <div>B₈ 4X</div>	<div></div> <div>C₁ 1X</div>	
<div></div> <div>C₂ 1X</div>	<div></div> <div>C₃ 4X</div>	
<div></div> <div>C₄ 1X</div>	<div></div> <div>C₅ 1X</div>	
<div></div> <div>C₆ 2X</div>	<div></div> <div>D₁ 1X</div>	

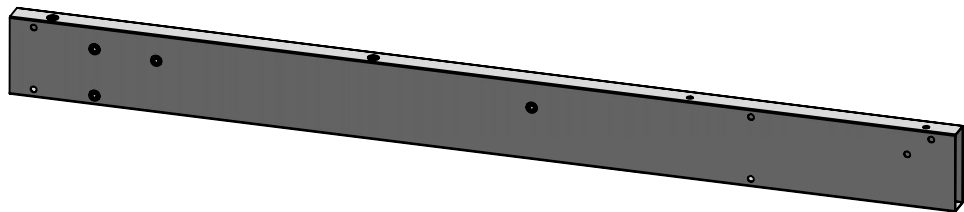


D₂ 1X

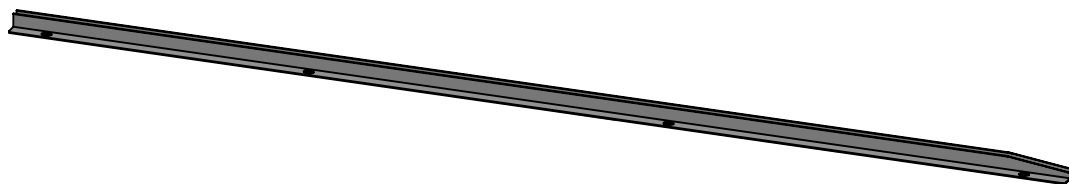


D₃ 1X

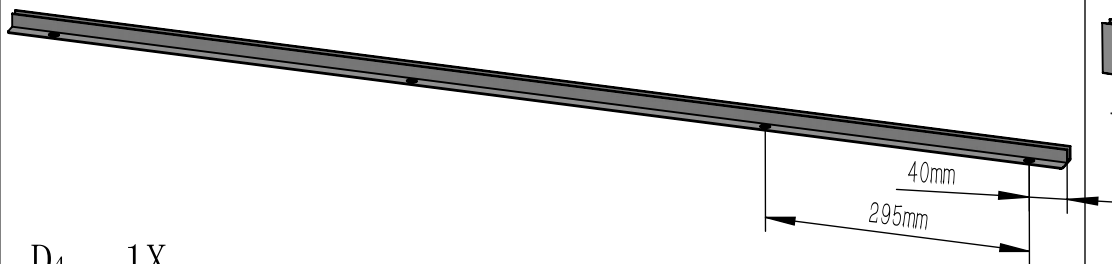


D₄ 1X

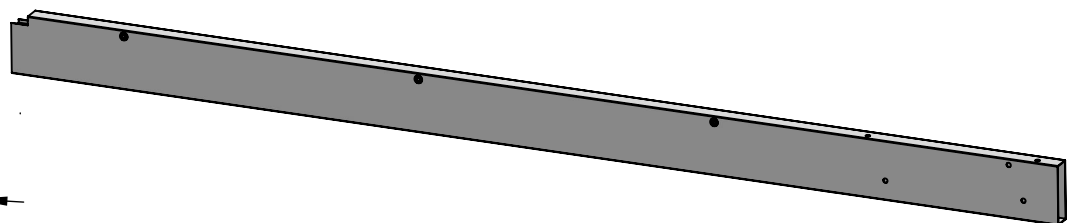


E₁ 1X

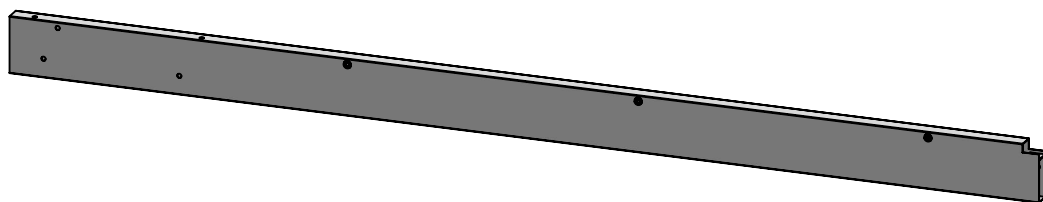


E₂ 1X

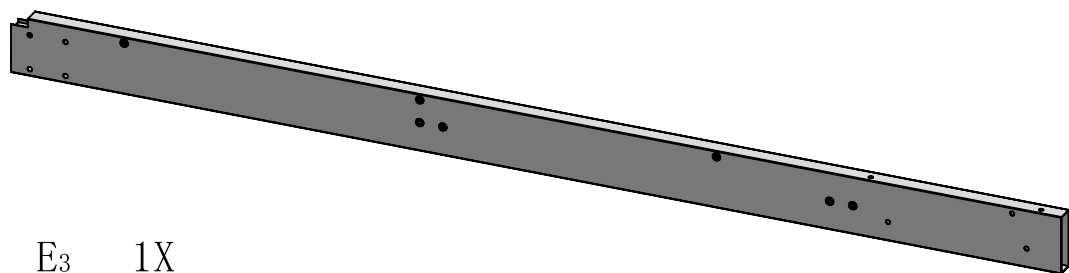


E₃ 1X

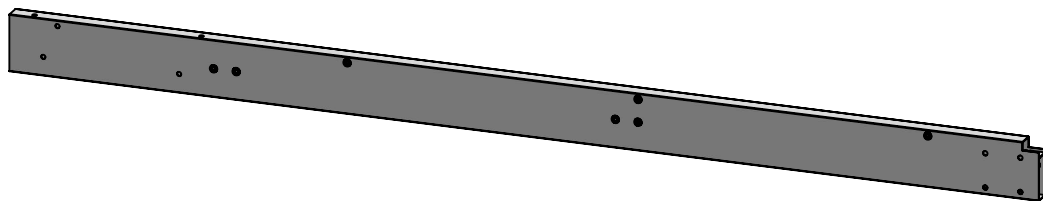


E₄ 1X

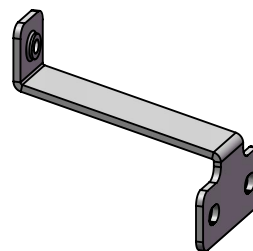


E₅ 4X

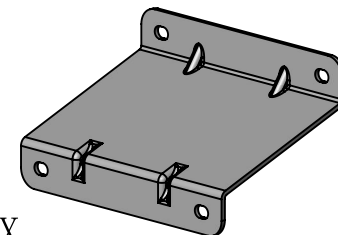












E₆ 1X

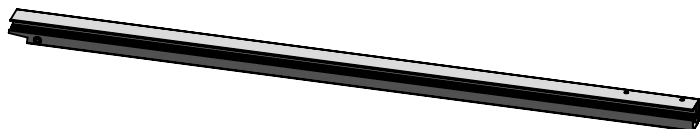


F₁ 1X

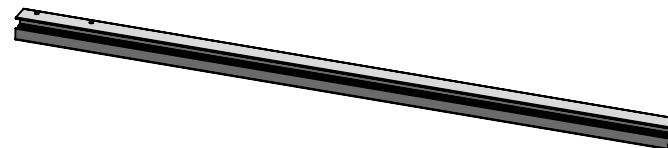


F₂ 1X

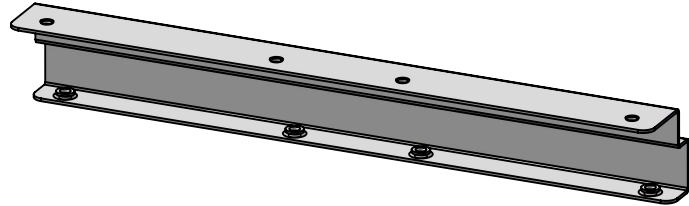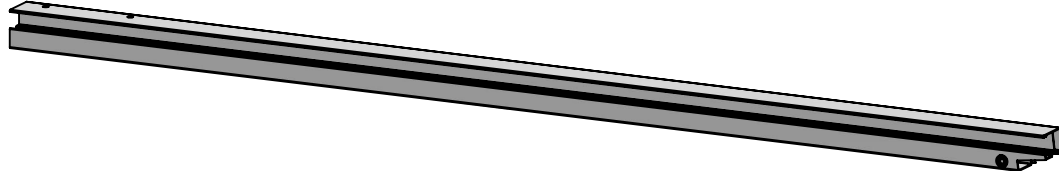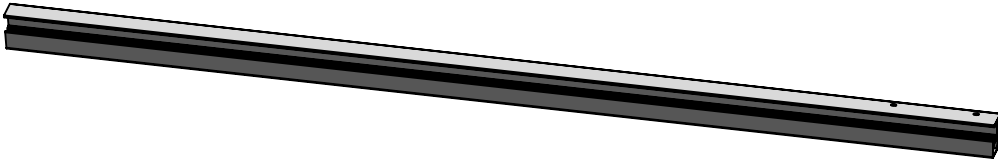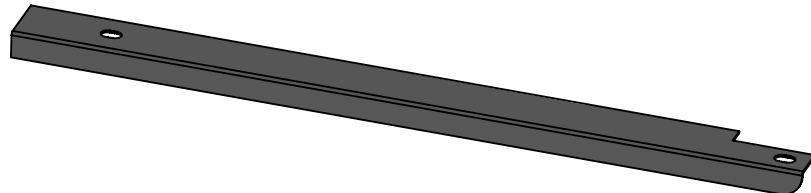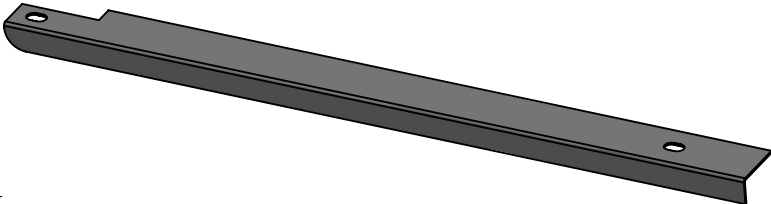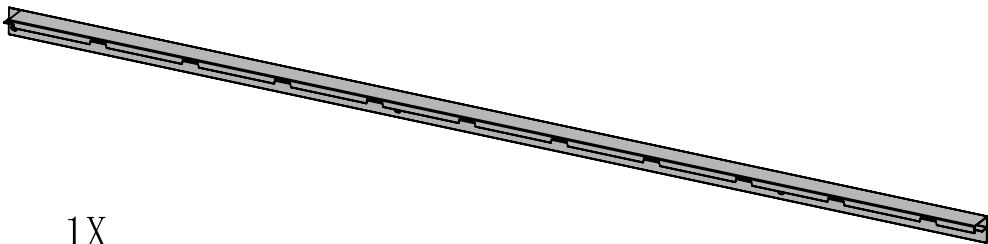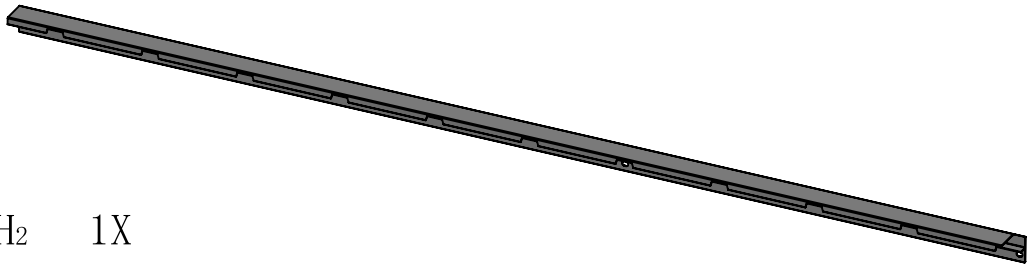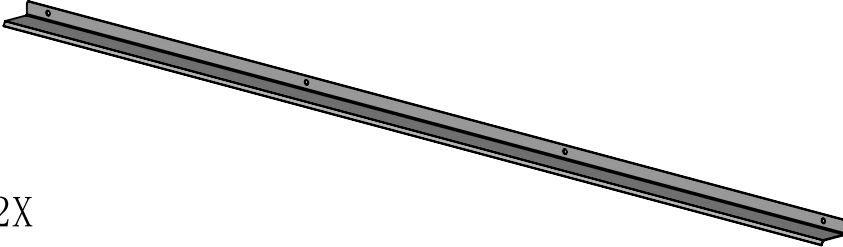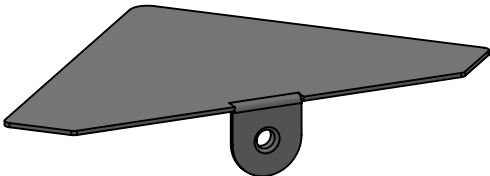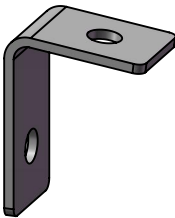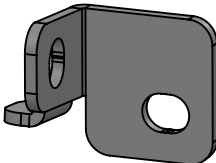			
F ₃ 2X		F ₄ 1X	
			
F ₅ 1X		G ₁ 1X	
			
G ₂ 1X		H ₁ 1X	
			
H ₂ 1X		H ₃ 2X	
			
I ₁ 2X	I ₂ 4X	I ₃ 1X	I ₄ 1X


J₁ 1X

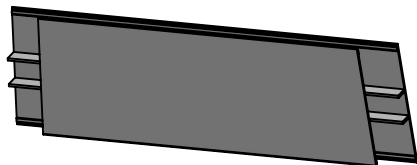


J₂ 1X

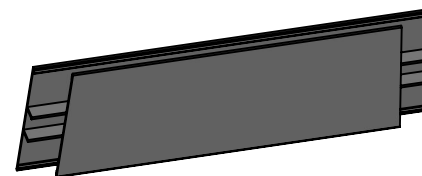


J₃ 1X

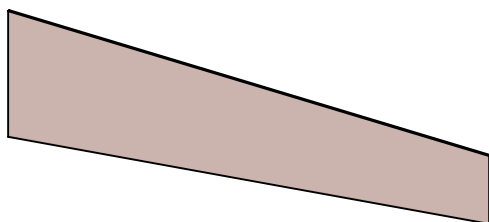


J₄ 1X

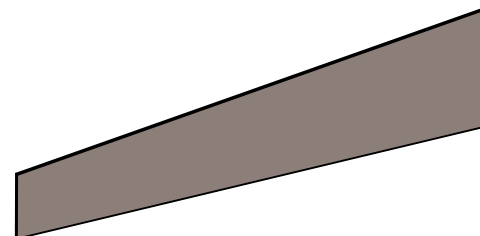


J₅ 1X

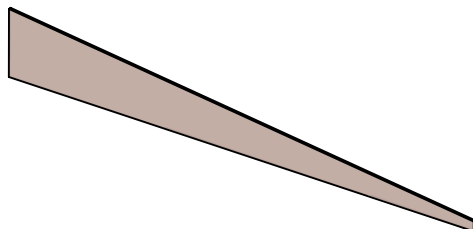


J₆ 1X

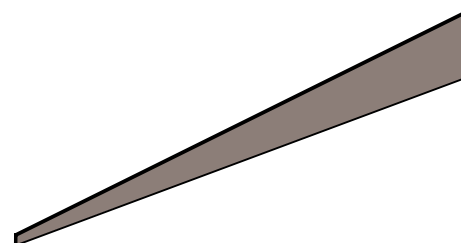


K₁ 2X

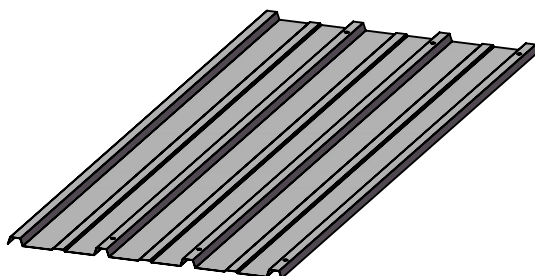


K₂ 5X

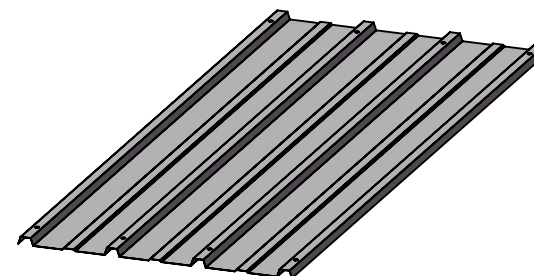


K₃ 2X

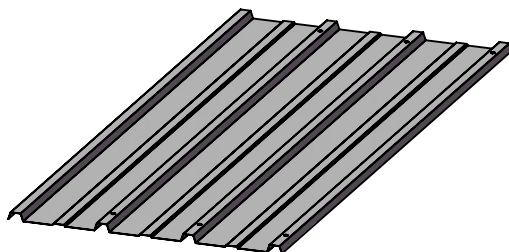


K₄ 5X

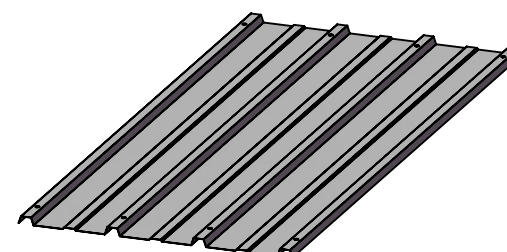


Black Rubber

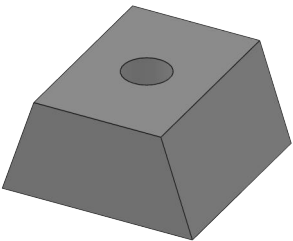


K₅ 60X

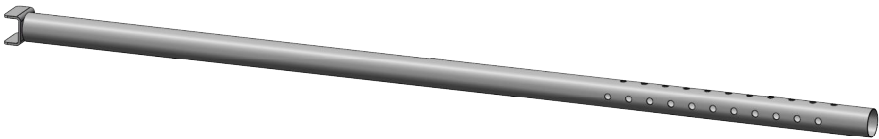


L₁ 1X

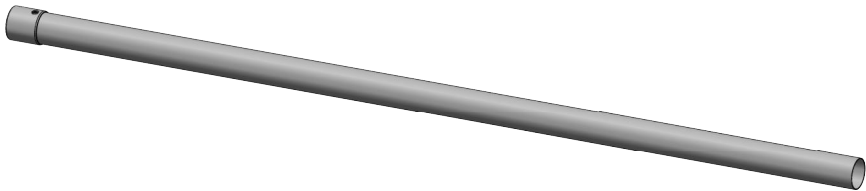


L₂ 1X

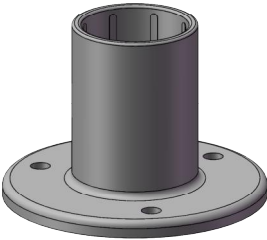


L₃ 1X

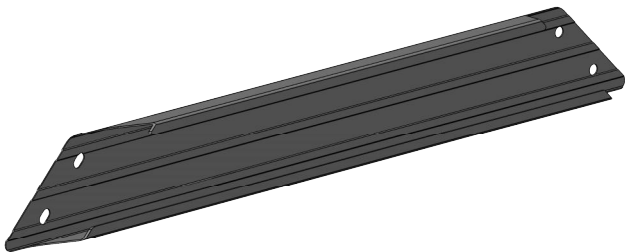


M₁ 2X

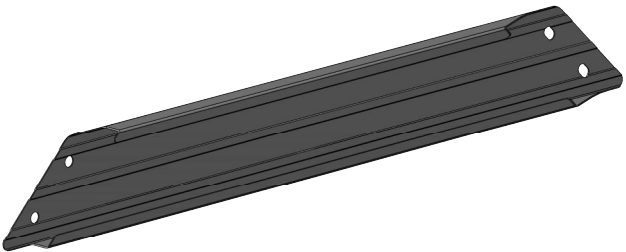


M₂ 2X

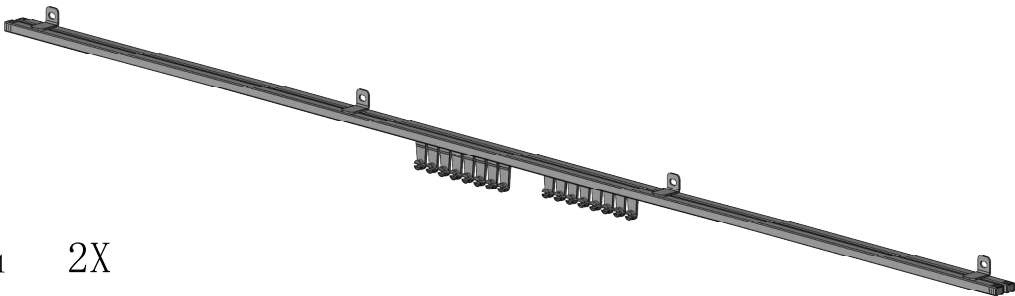


N₁ 2X

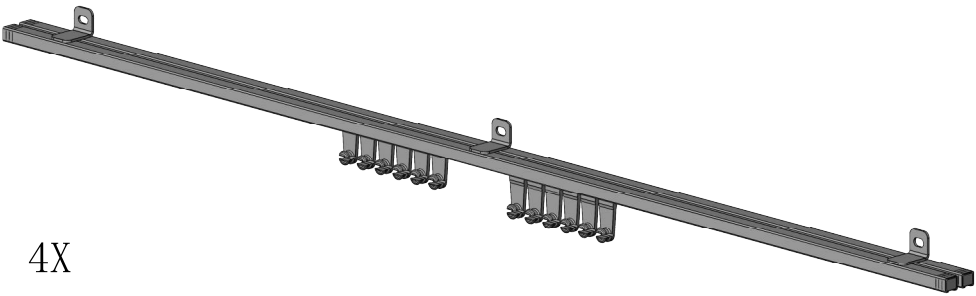








N₂ 4X

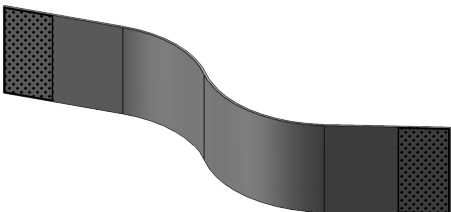

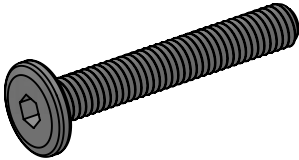
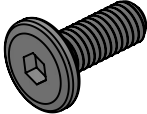
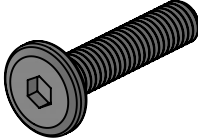
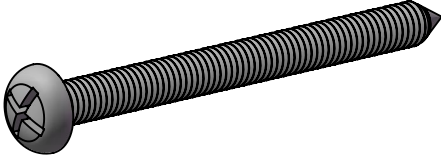







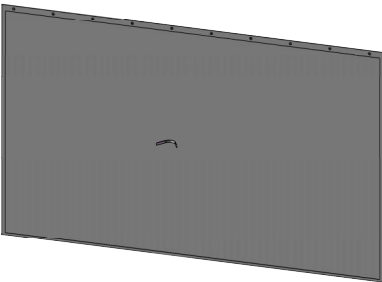



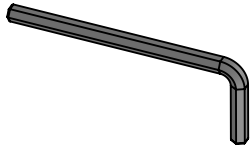
O₁ 4X

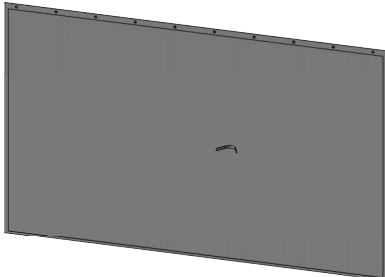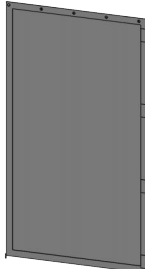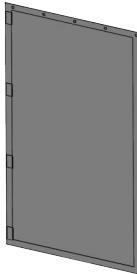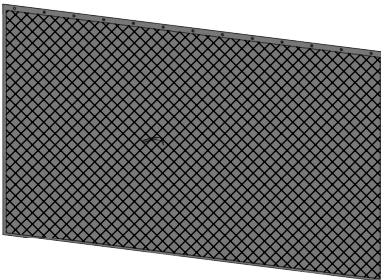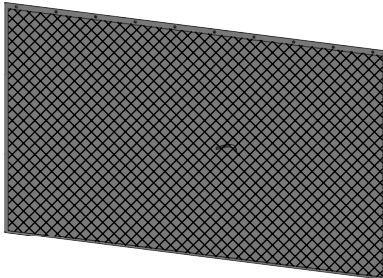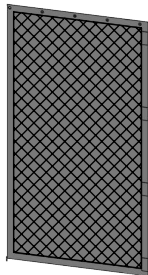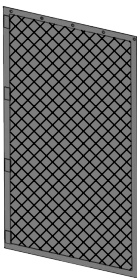


O₂ 1X
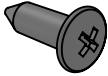
<div><div>0₃</div><div>1X</div></div> <div></div>		<div><div>0₄</div><div>1X</div></div> <div></div>	<div><div>0₅</div><div>1X</div></div> <div></div>
<div><div>0₆</div><div>1X</div></div> <div></div>		<div><div>0₇</div><div>1X</div></div> <div></div>	
<div><div>0₈</div><div>1X</div></div> <div></div>	<div><div>0₉</div><div>1X</div></div> <div></div>		

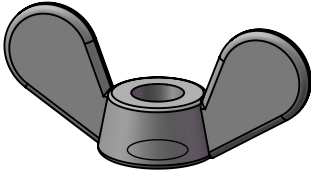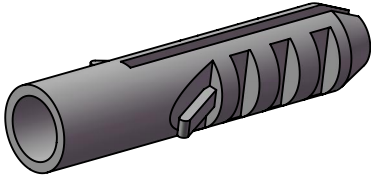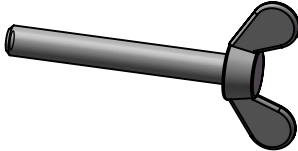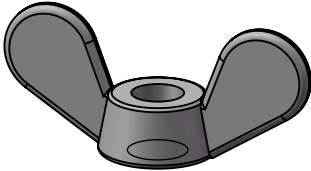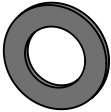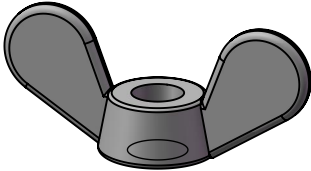
 1# 6 ST4. 8*13	 2# 17 M5*12	 6# 8 M6*40
 4# 210 M6*16	 5# 60 M6*28	 9# 14 ST6*70
 7# 2	 8# 6	 14# 1 M8
 10# 14	 12# 1 M8*60	 14# 1 M8
 13# 1 M8	 14# 1 M8	 15# 1 silicone sealant



23# 1 S4





25# 1 S13



Rubber Gaskets

26# 60 D12/d6. 2*H2

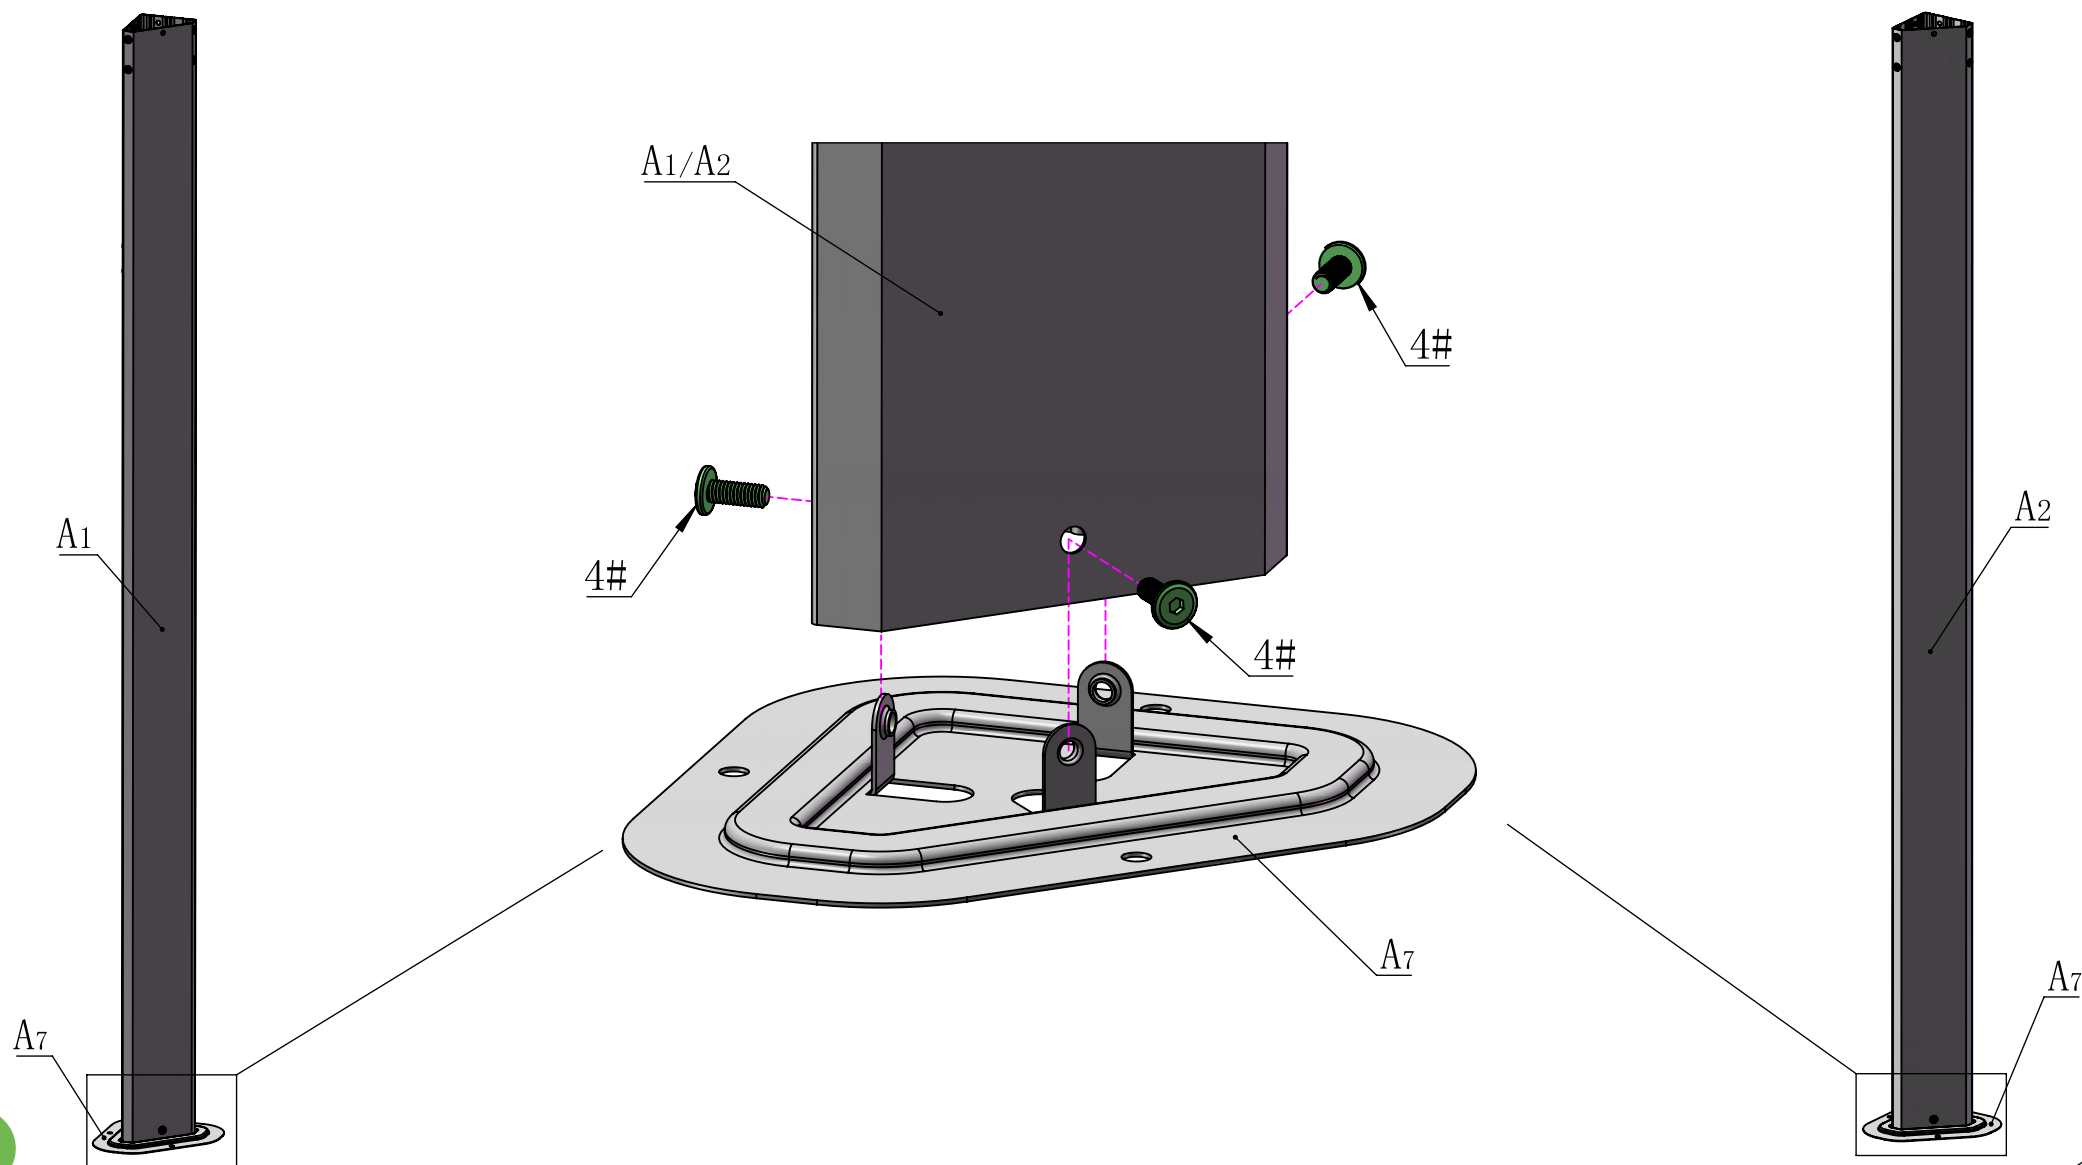


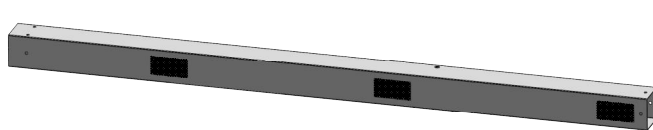

A3 1X




A4 1X



A8 2X





M6*16

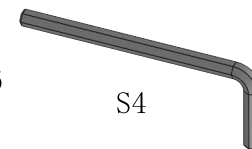


S4

23# 1X

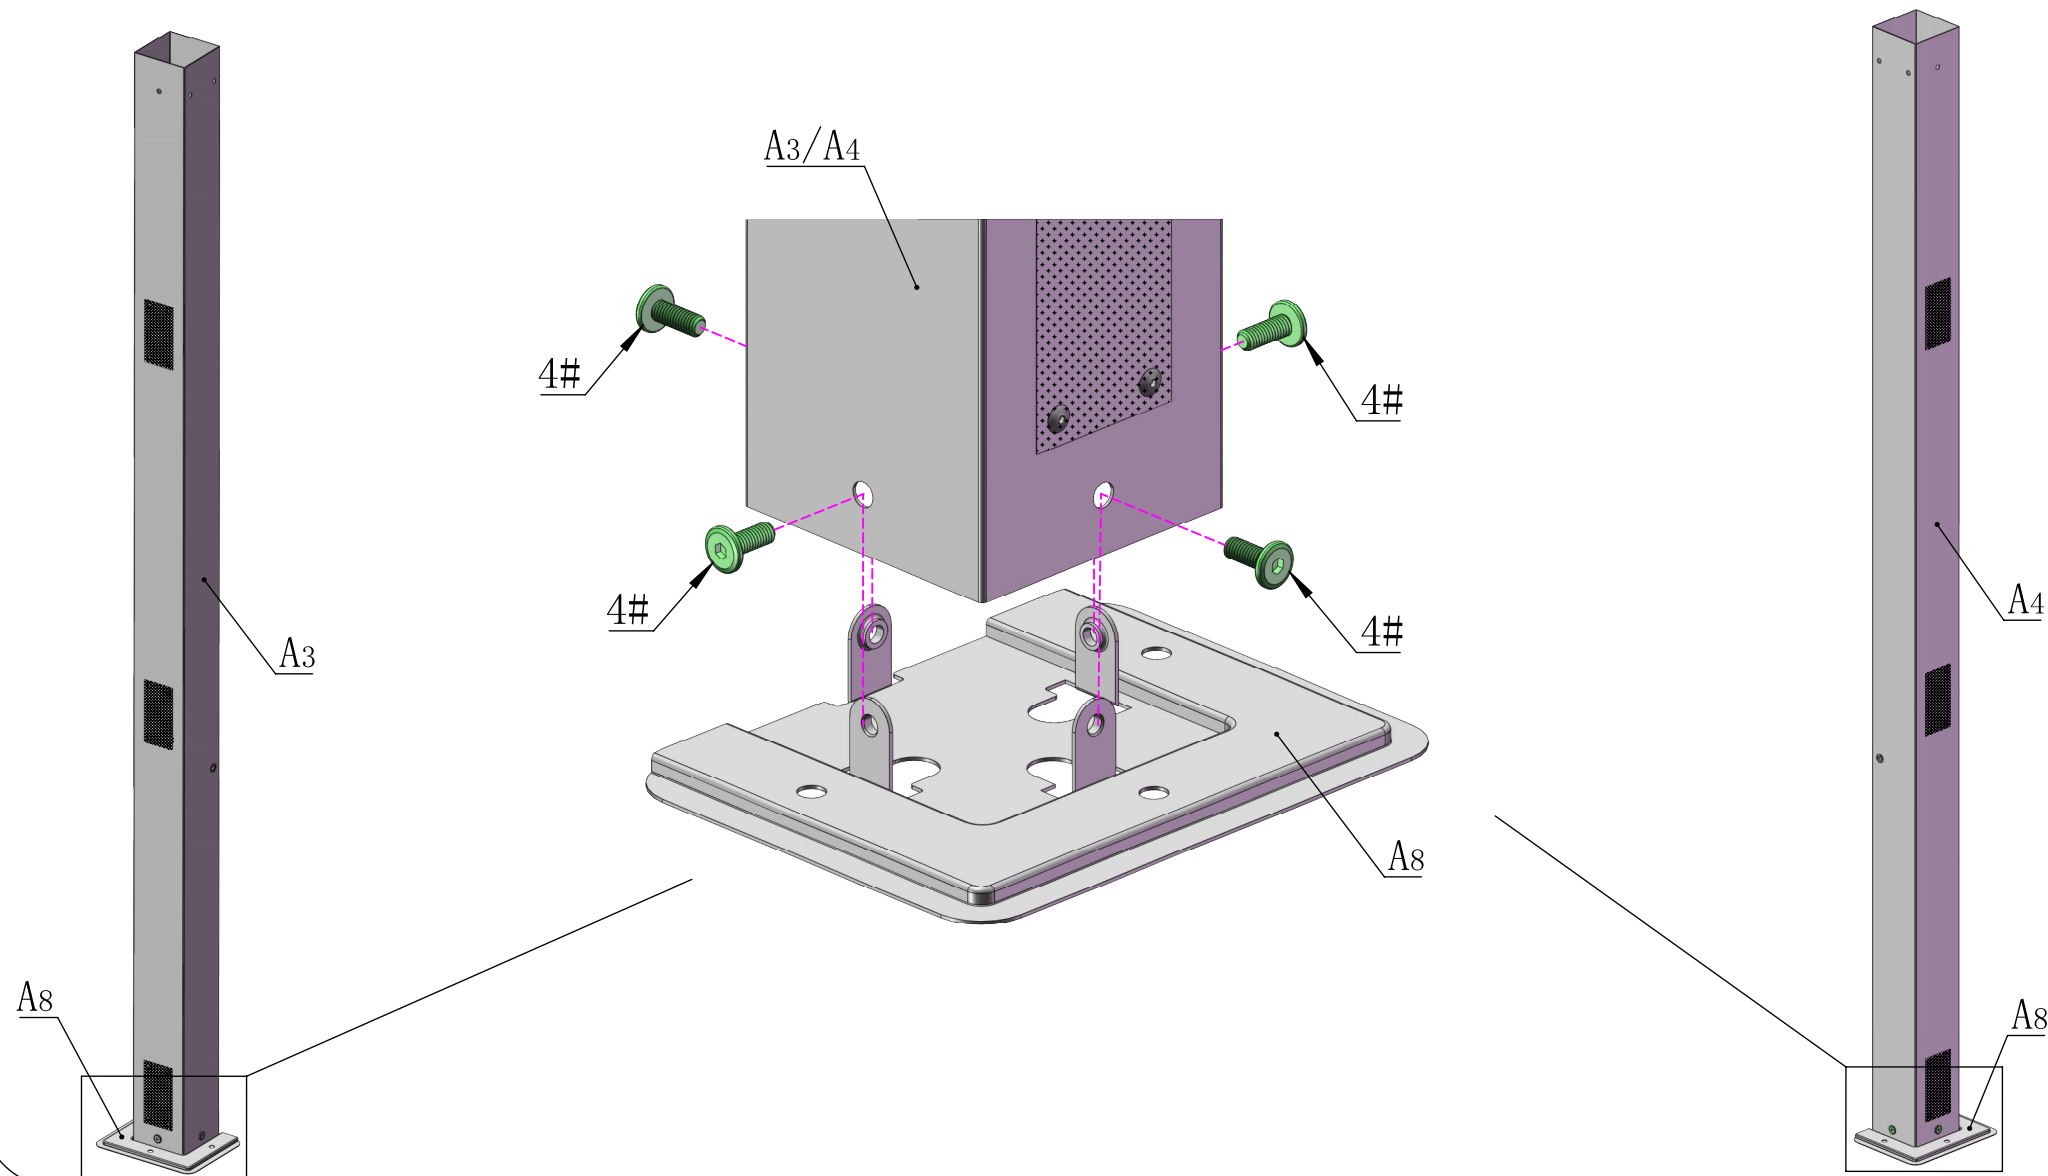


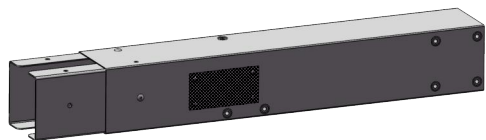


A5 1X

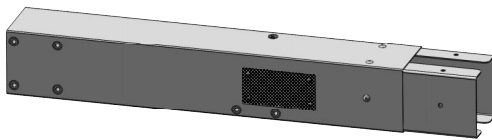


A6 1X

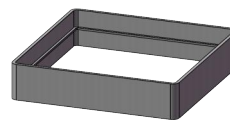


A9 2X

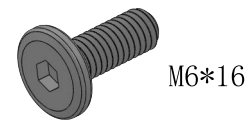


4# 12X

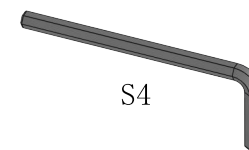


23# 1X

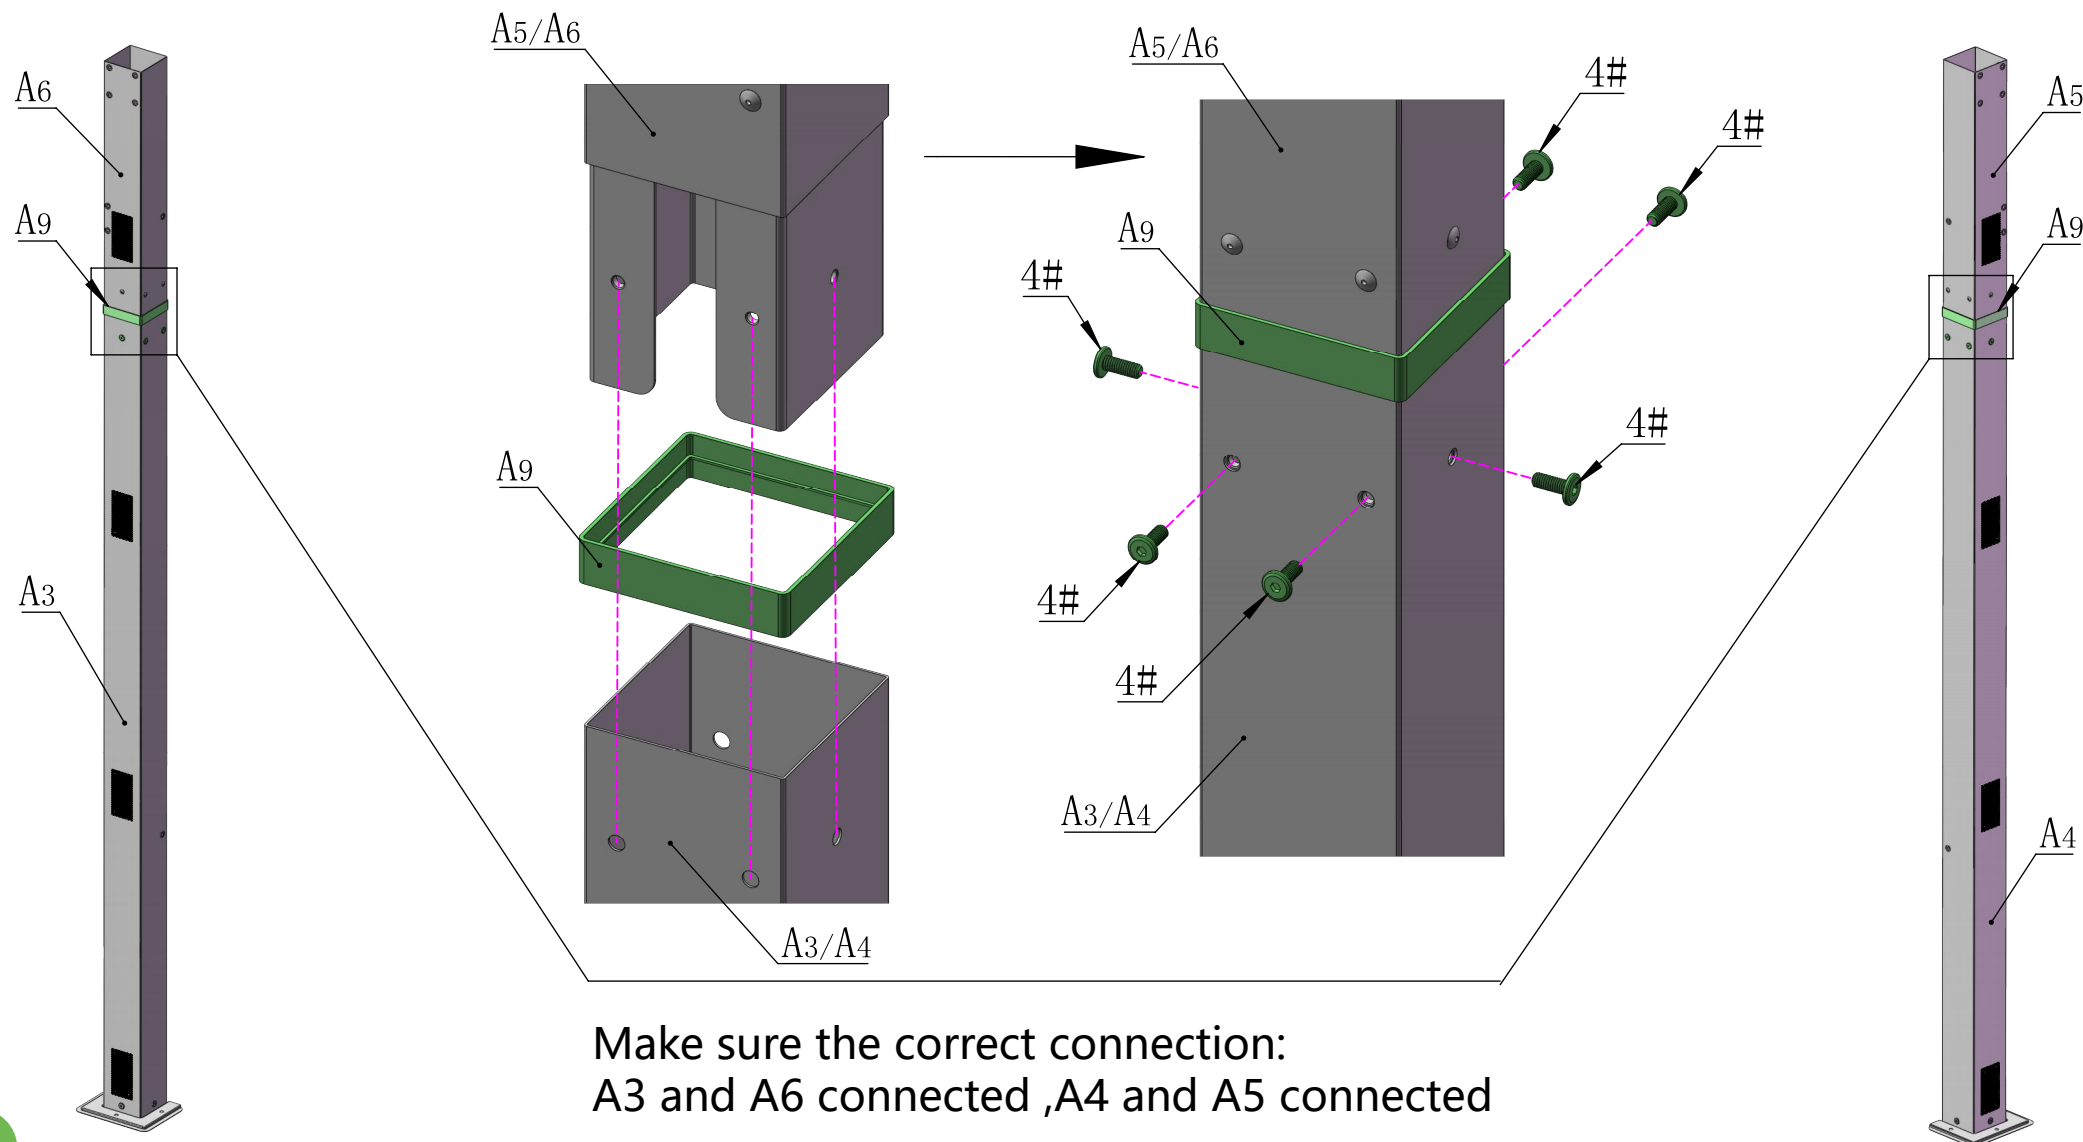


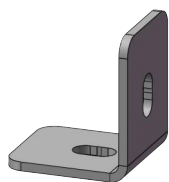

A10 4X




4# 4X

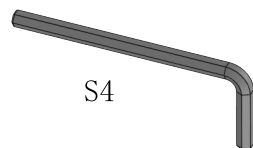



23# 1X

The bracket #A10 is used to fix the post against the wall.
If you don't need it fixed, please retain for future use and skip this step.

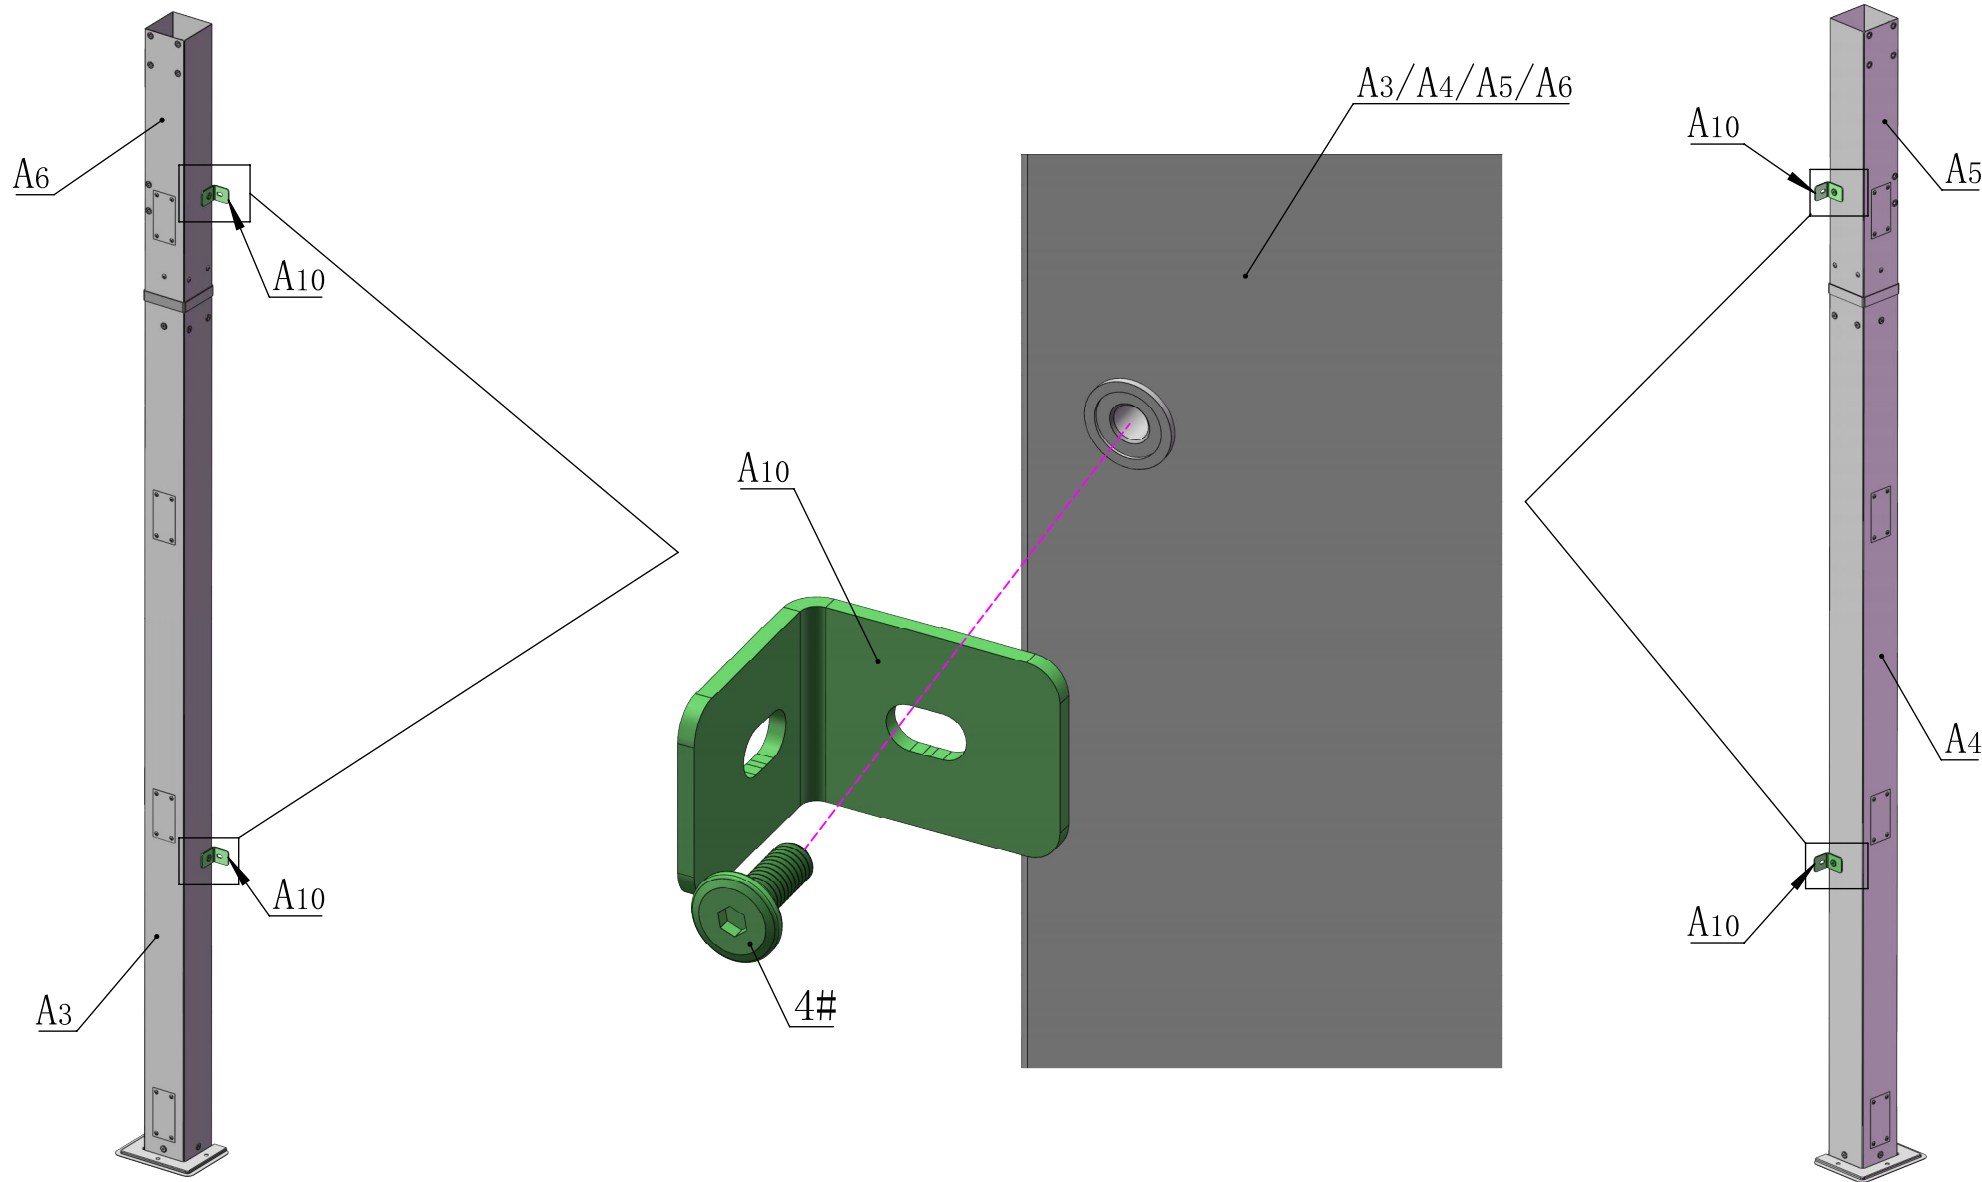


Front Beam Assembly

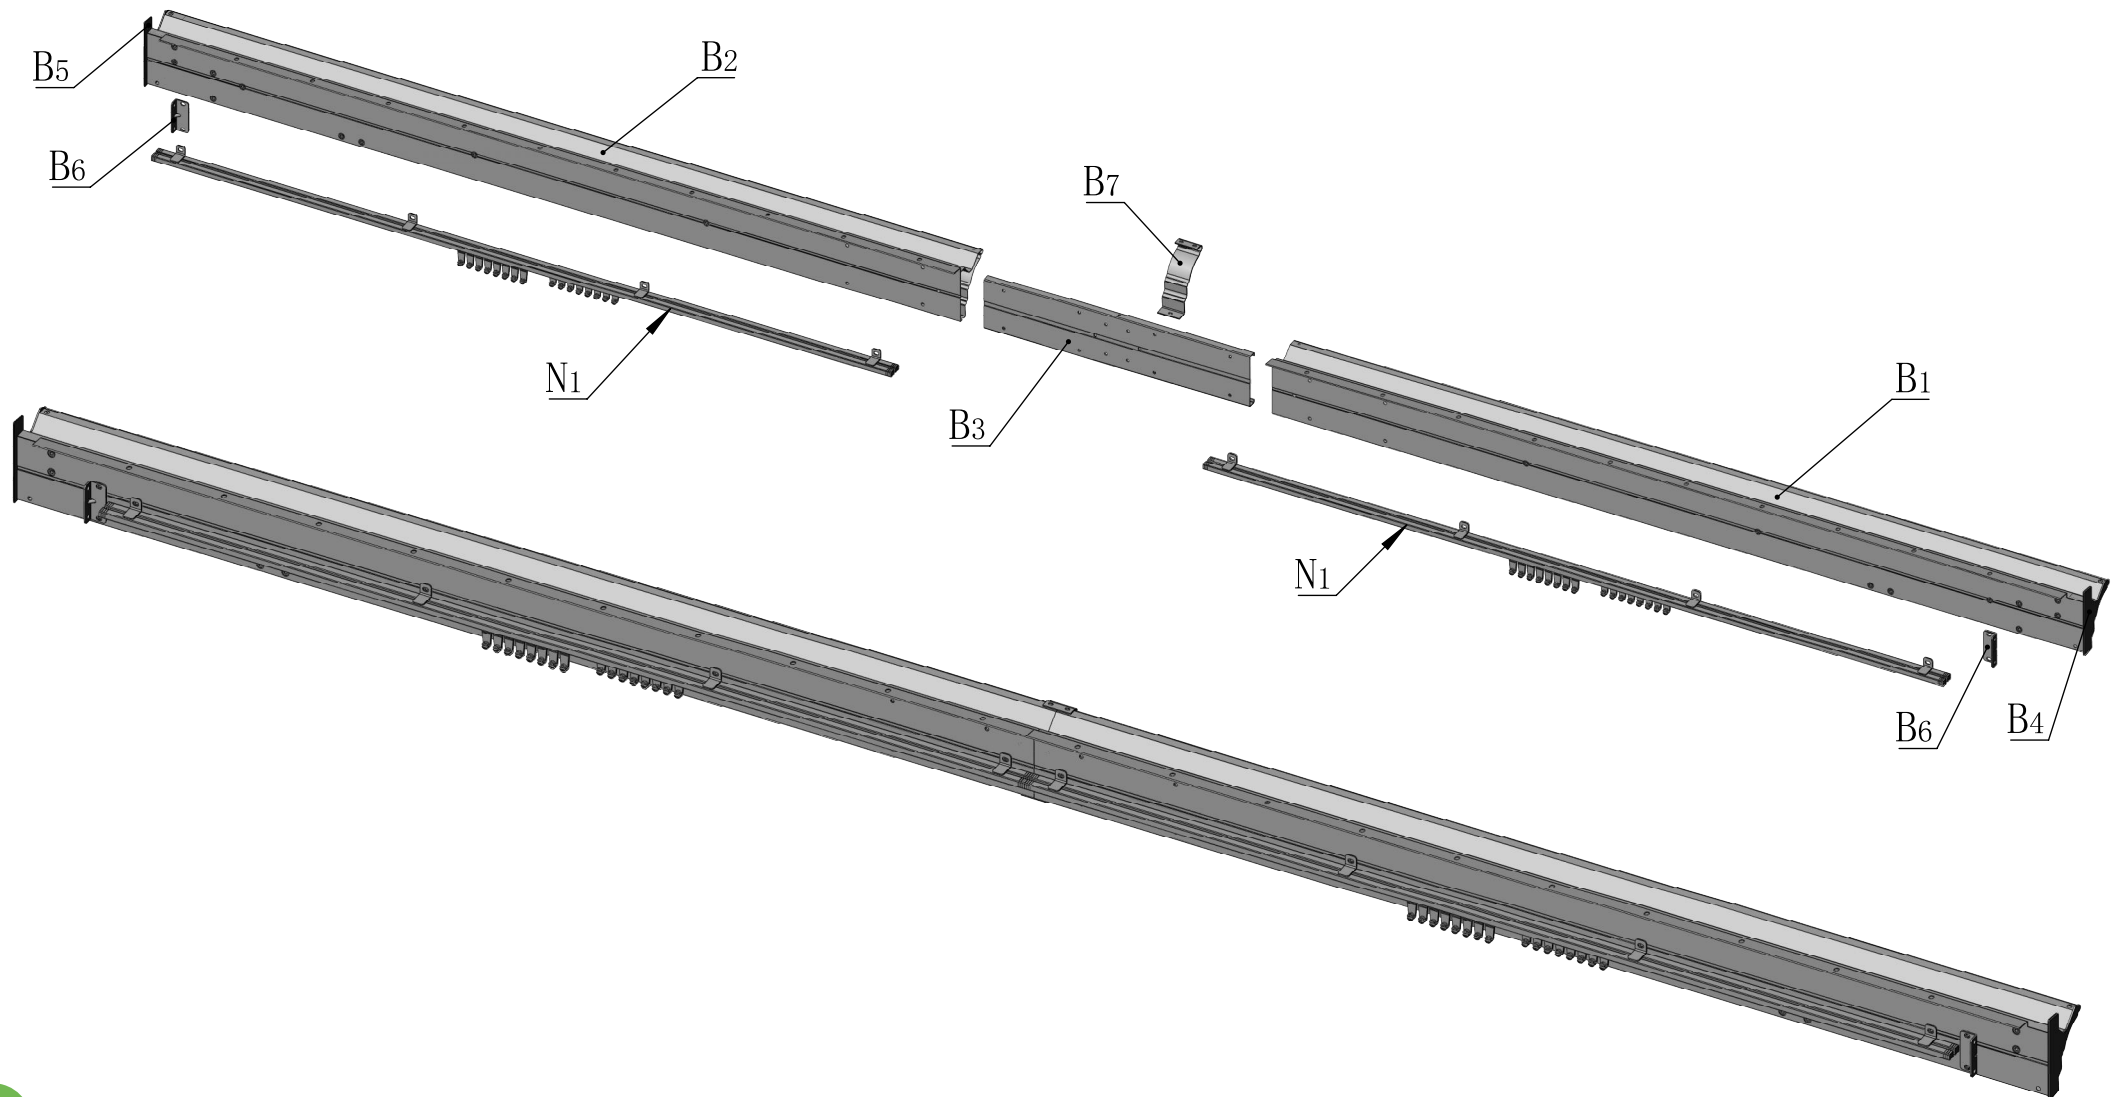

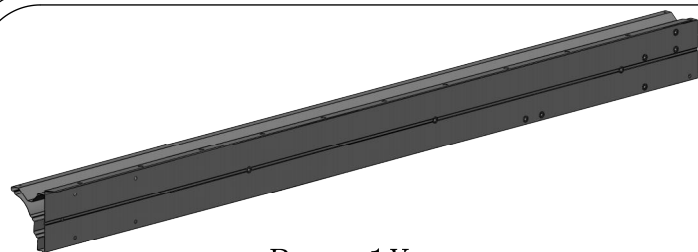

B1 1X


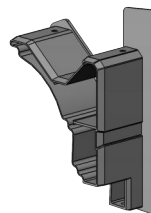



B4 1X



ST4. 8*13


1# 2X

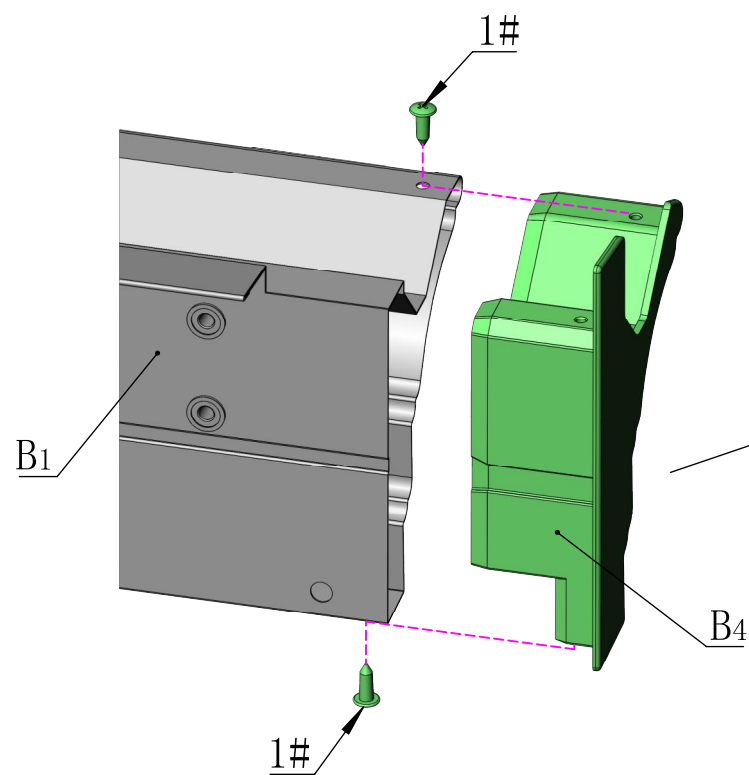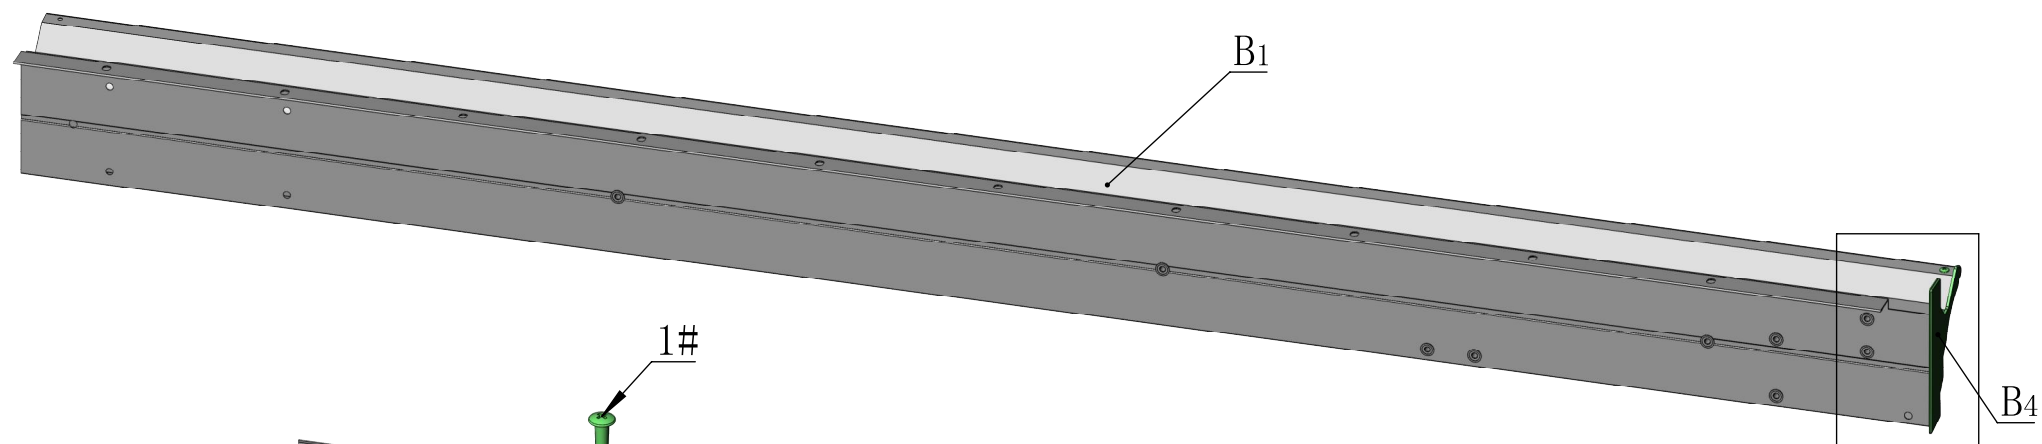

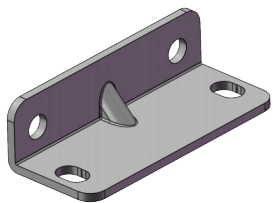

B6


1X



M6*16

4#


2X

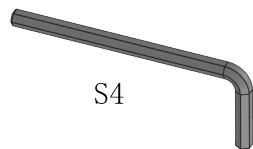

S4

23#

1X

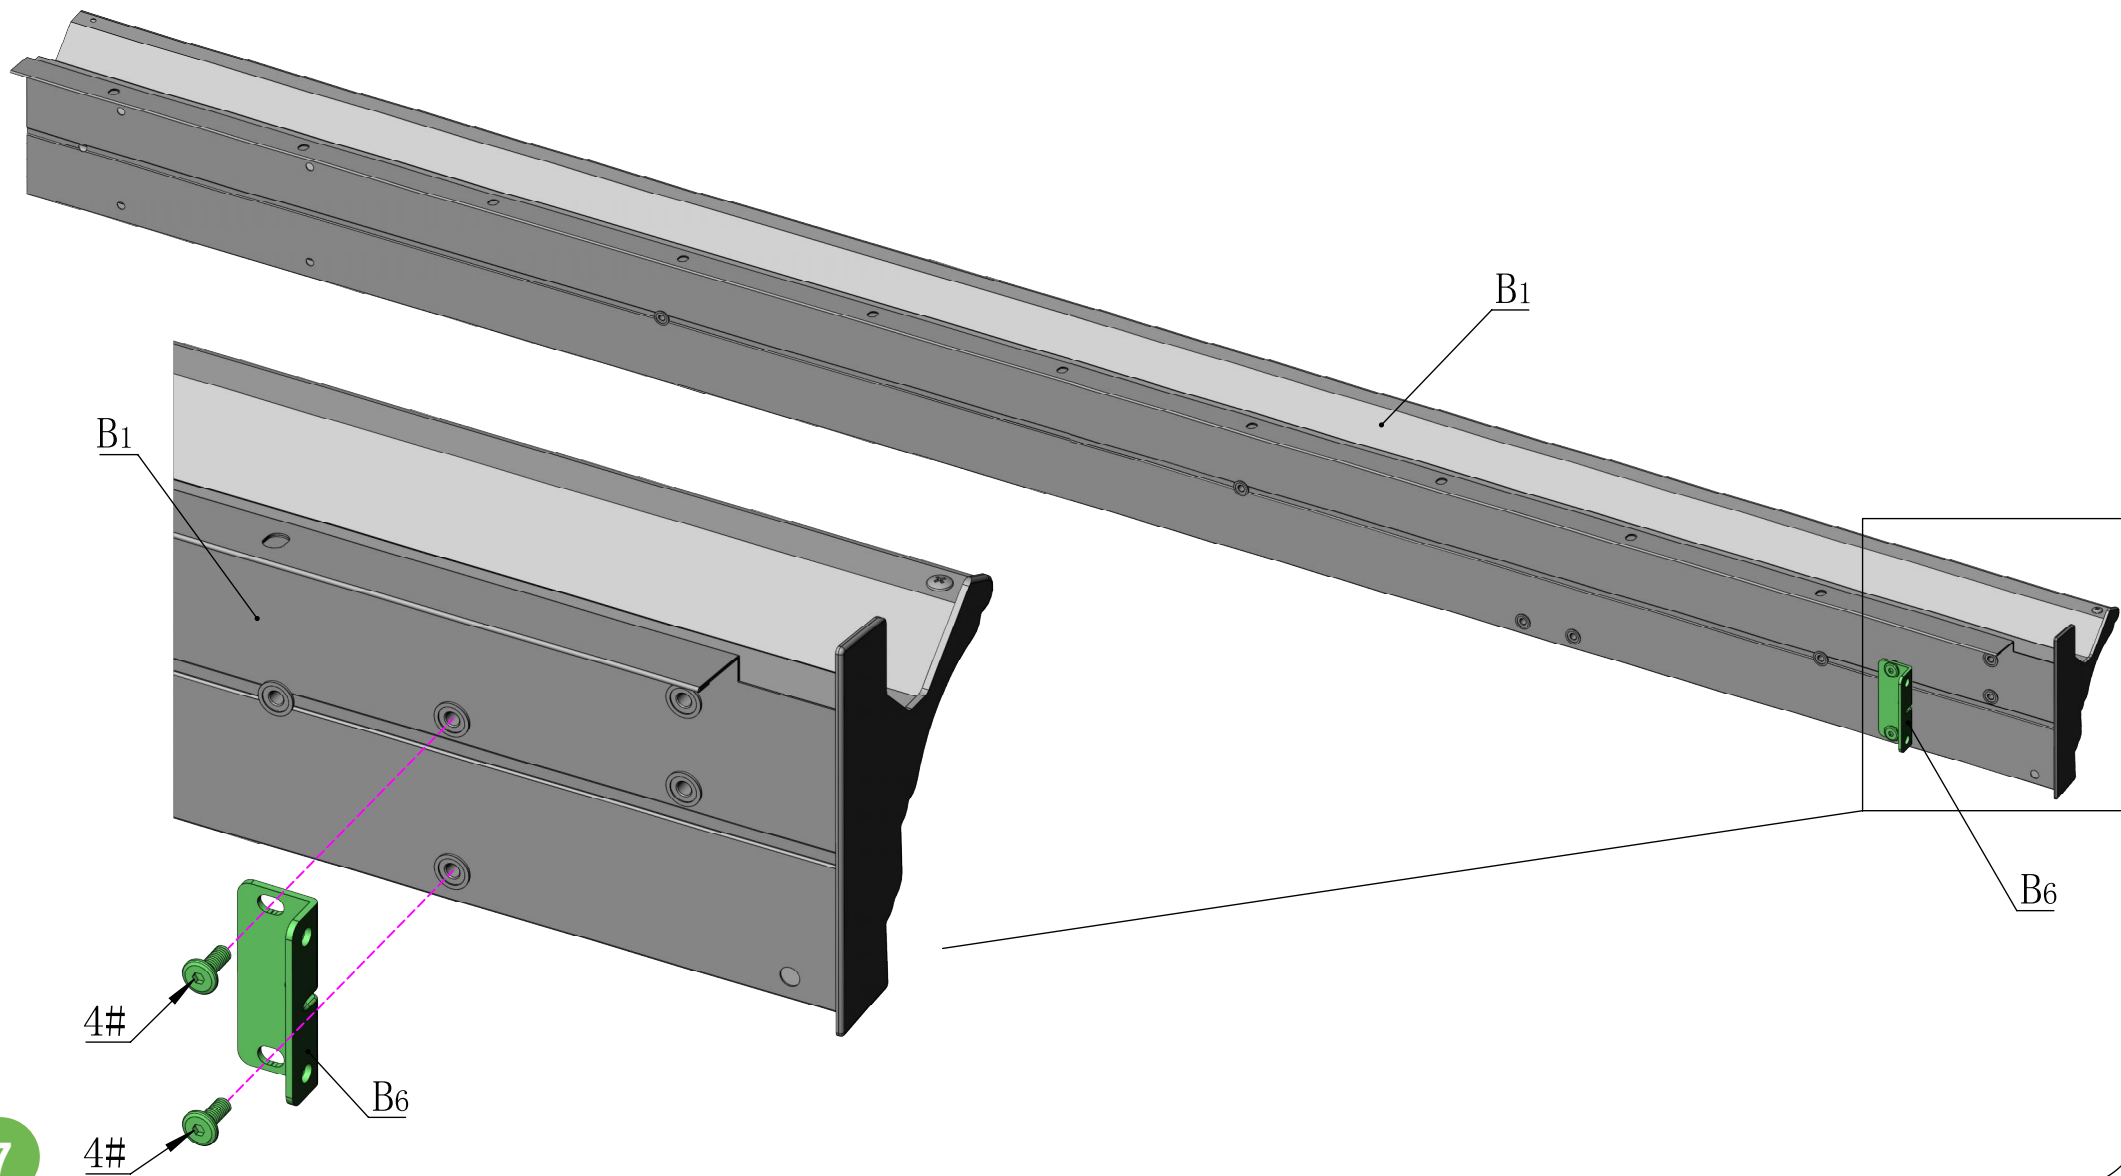

B1


B1

B6


4#

B6


4#

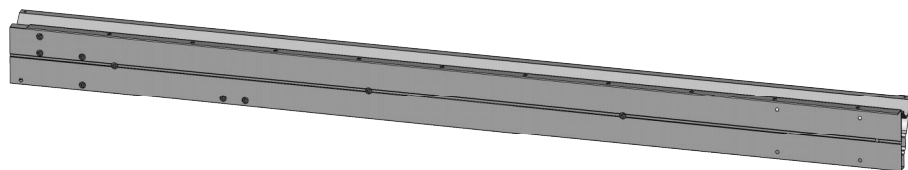

B2 1X

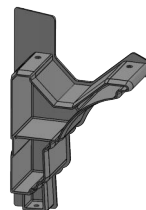



B5 1X




ST4. 8*13

1# 2X

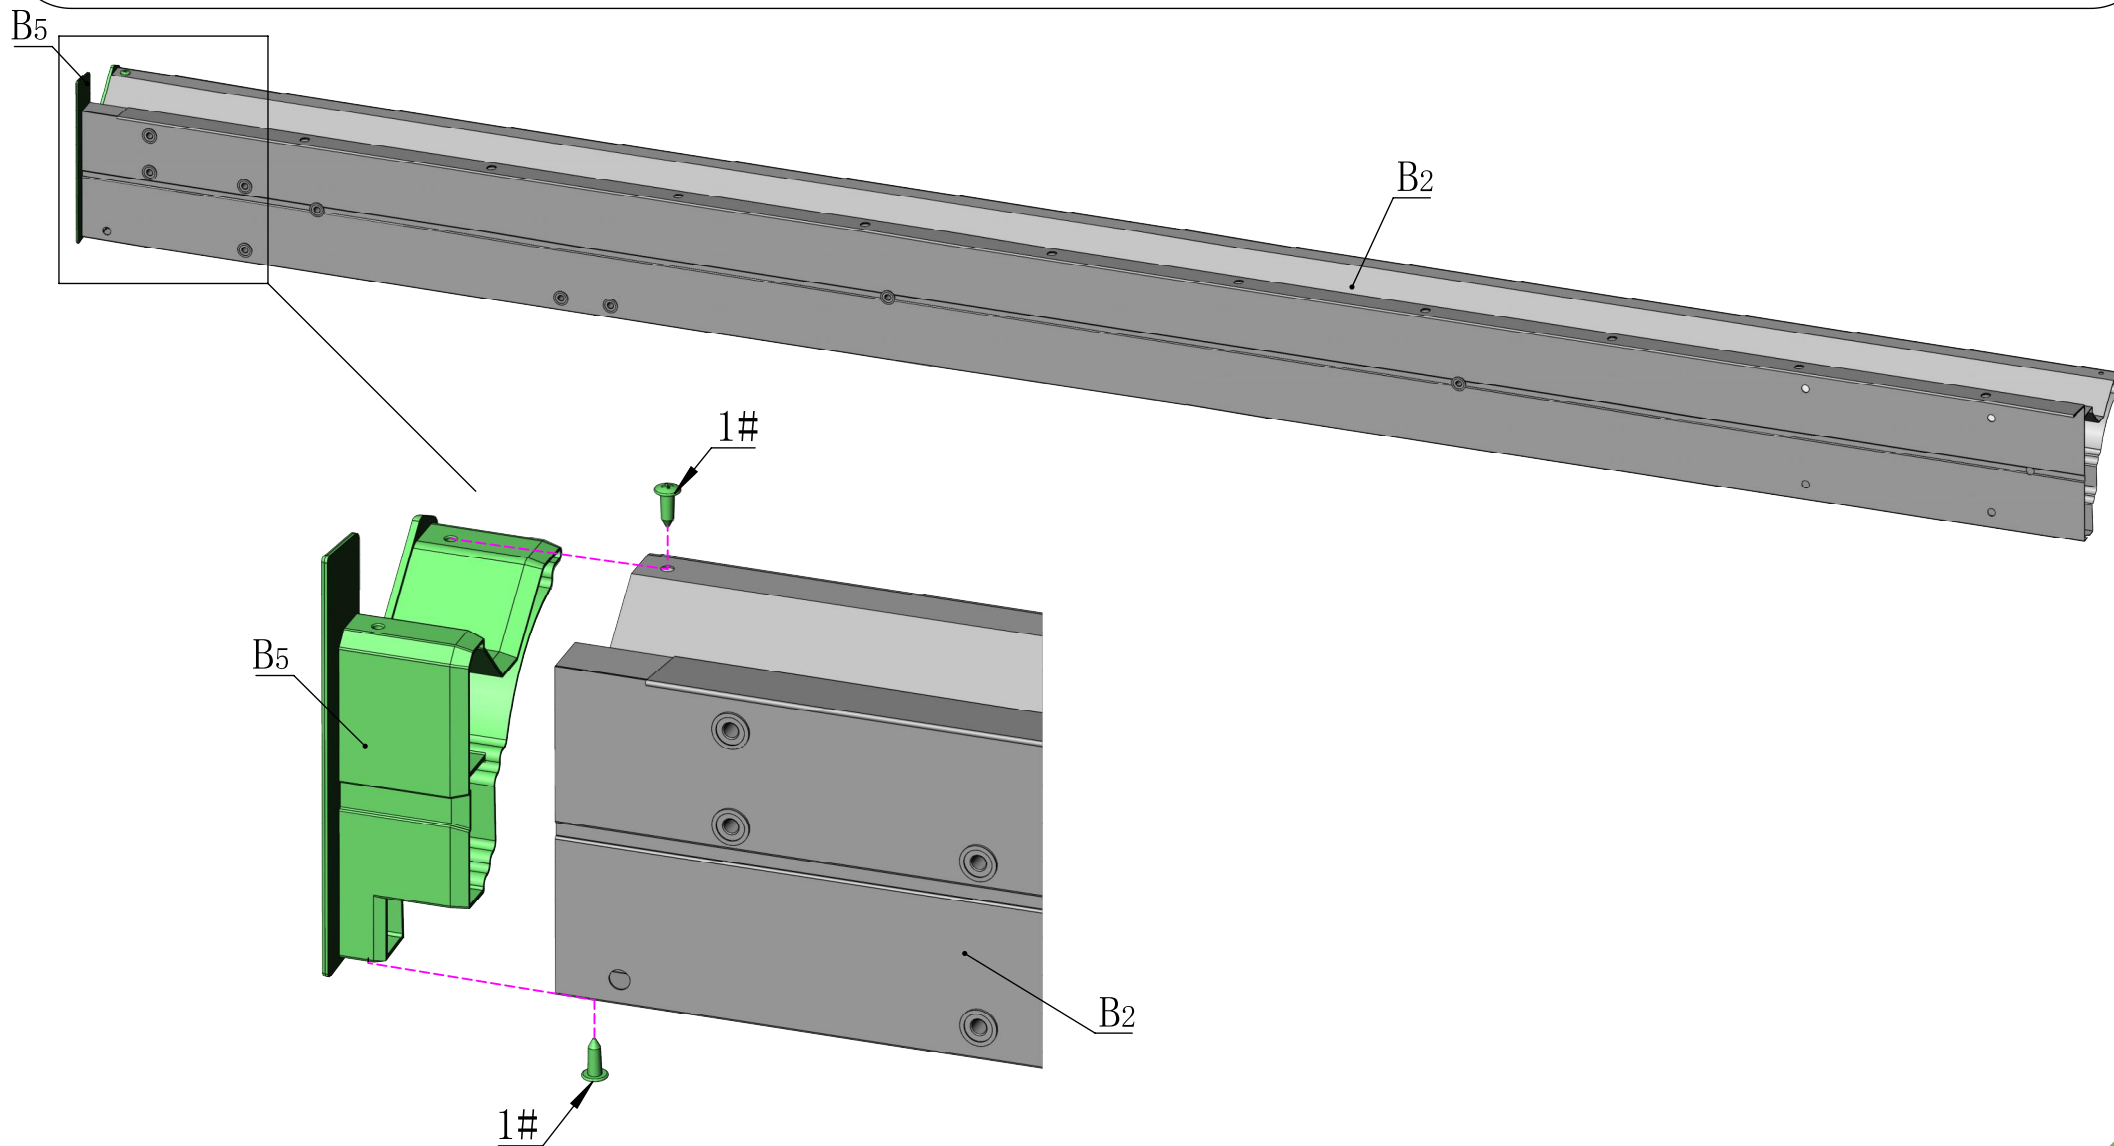

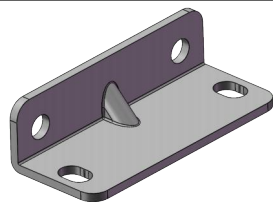


B6 1X

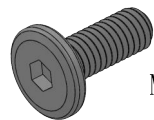


M6*16



4# 2X

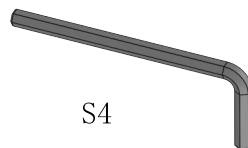


S4

23# 1X

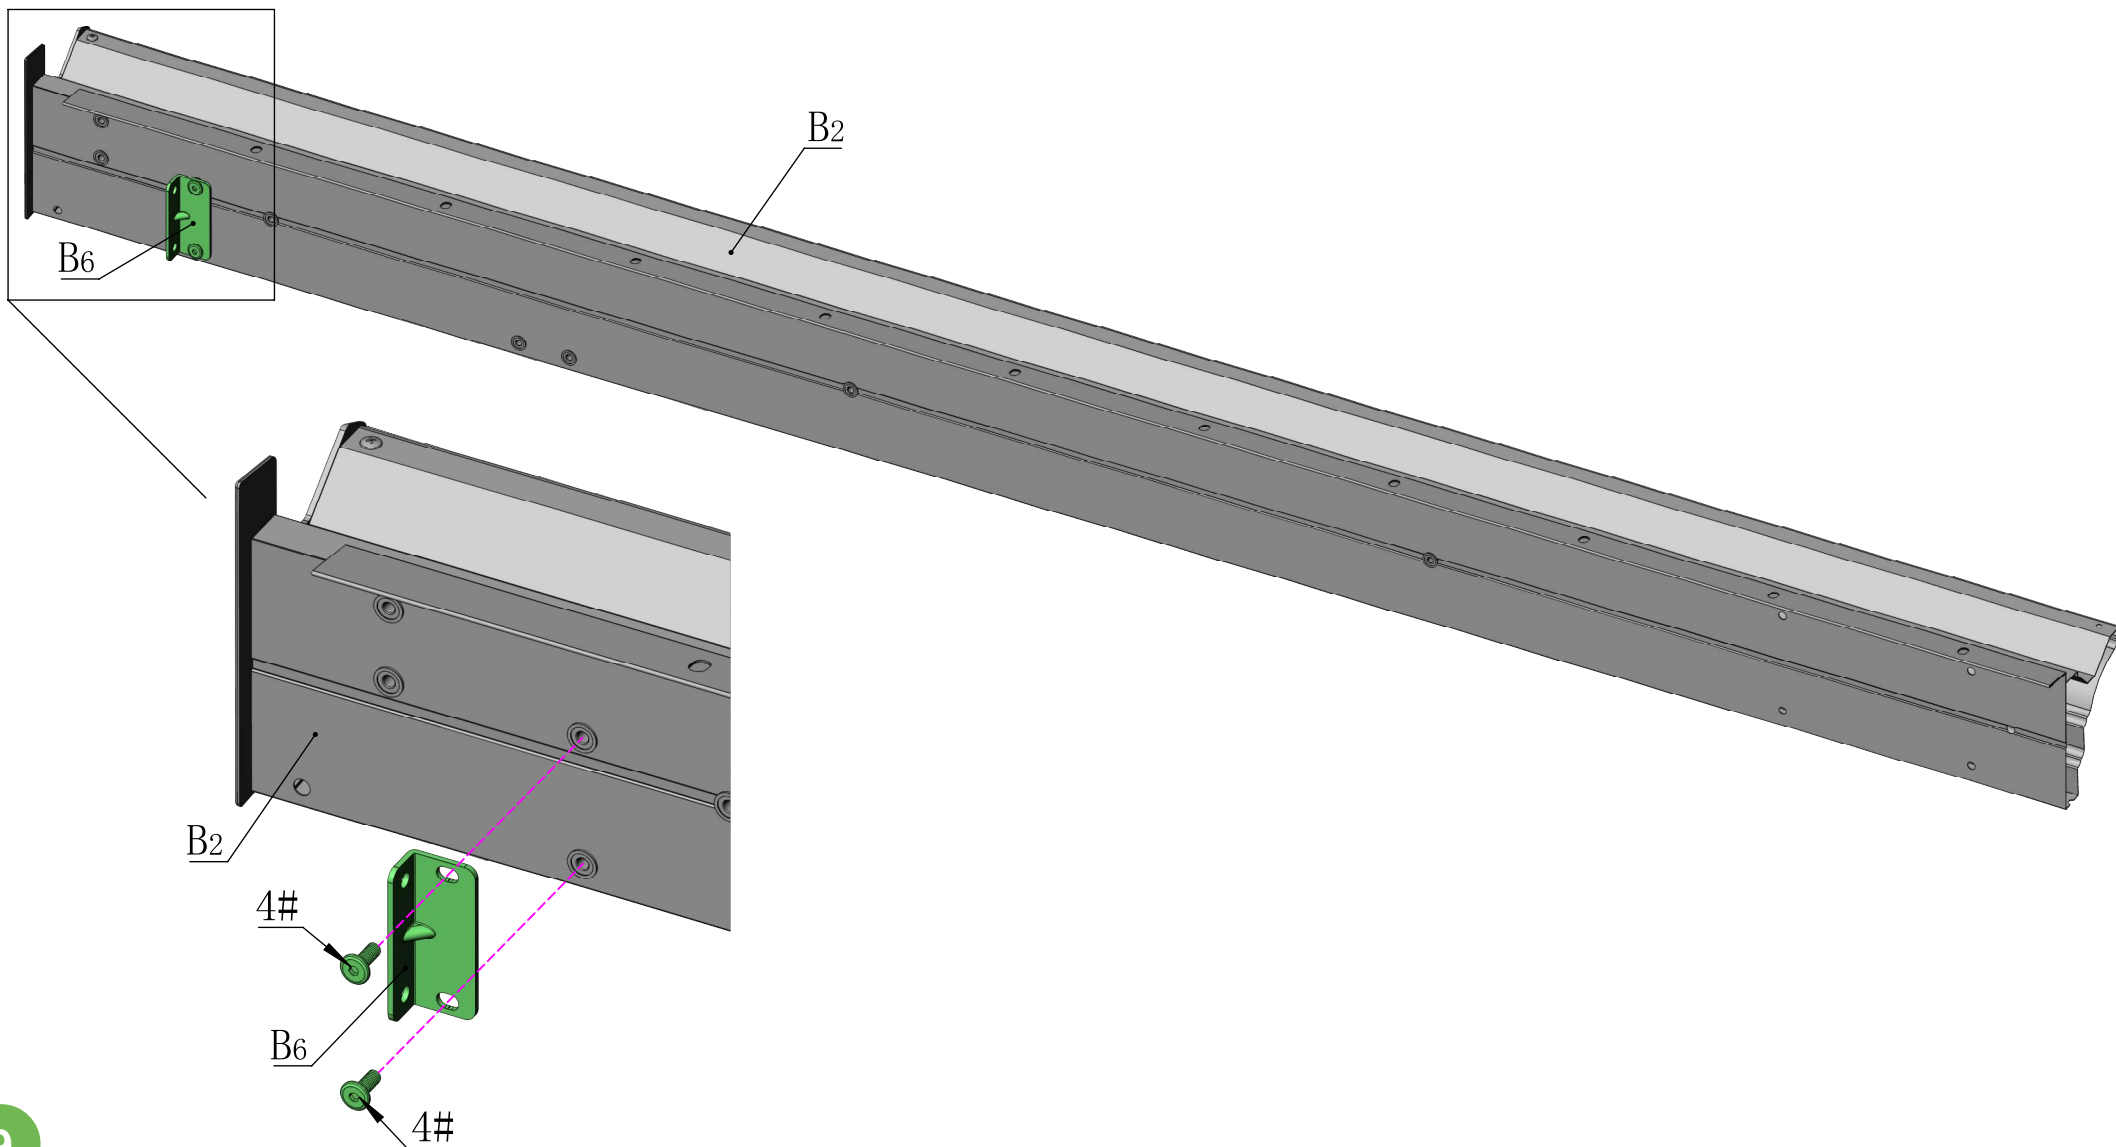

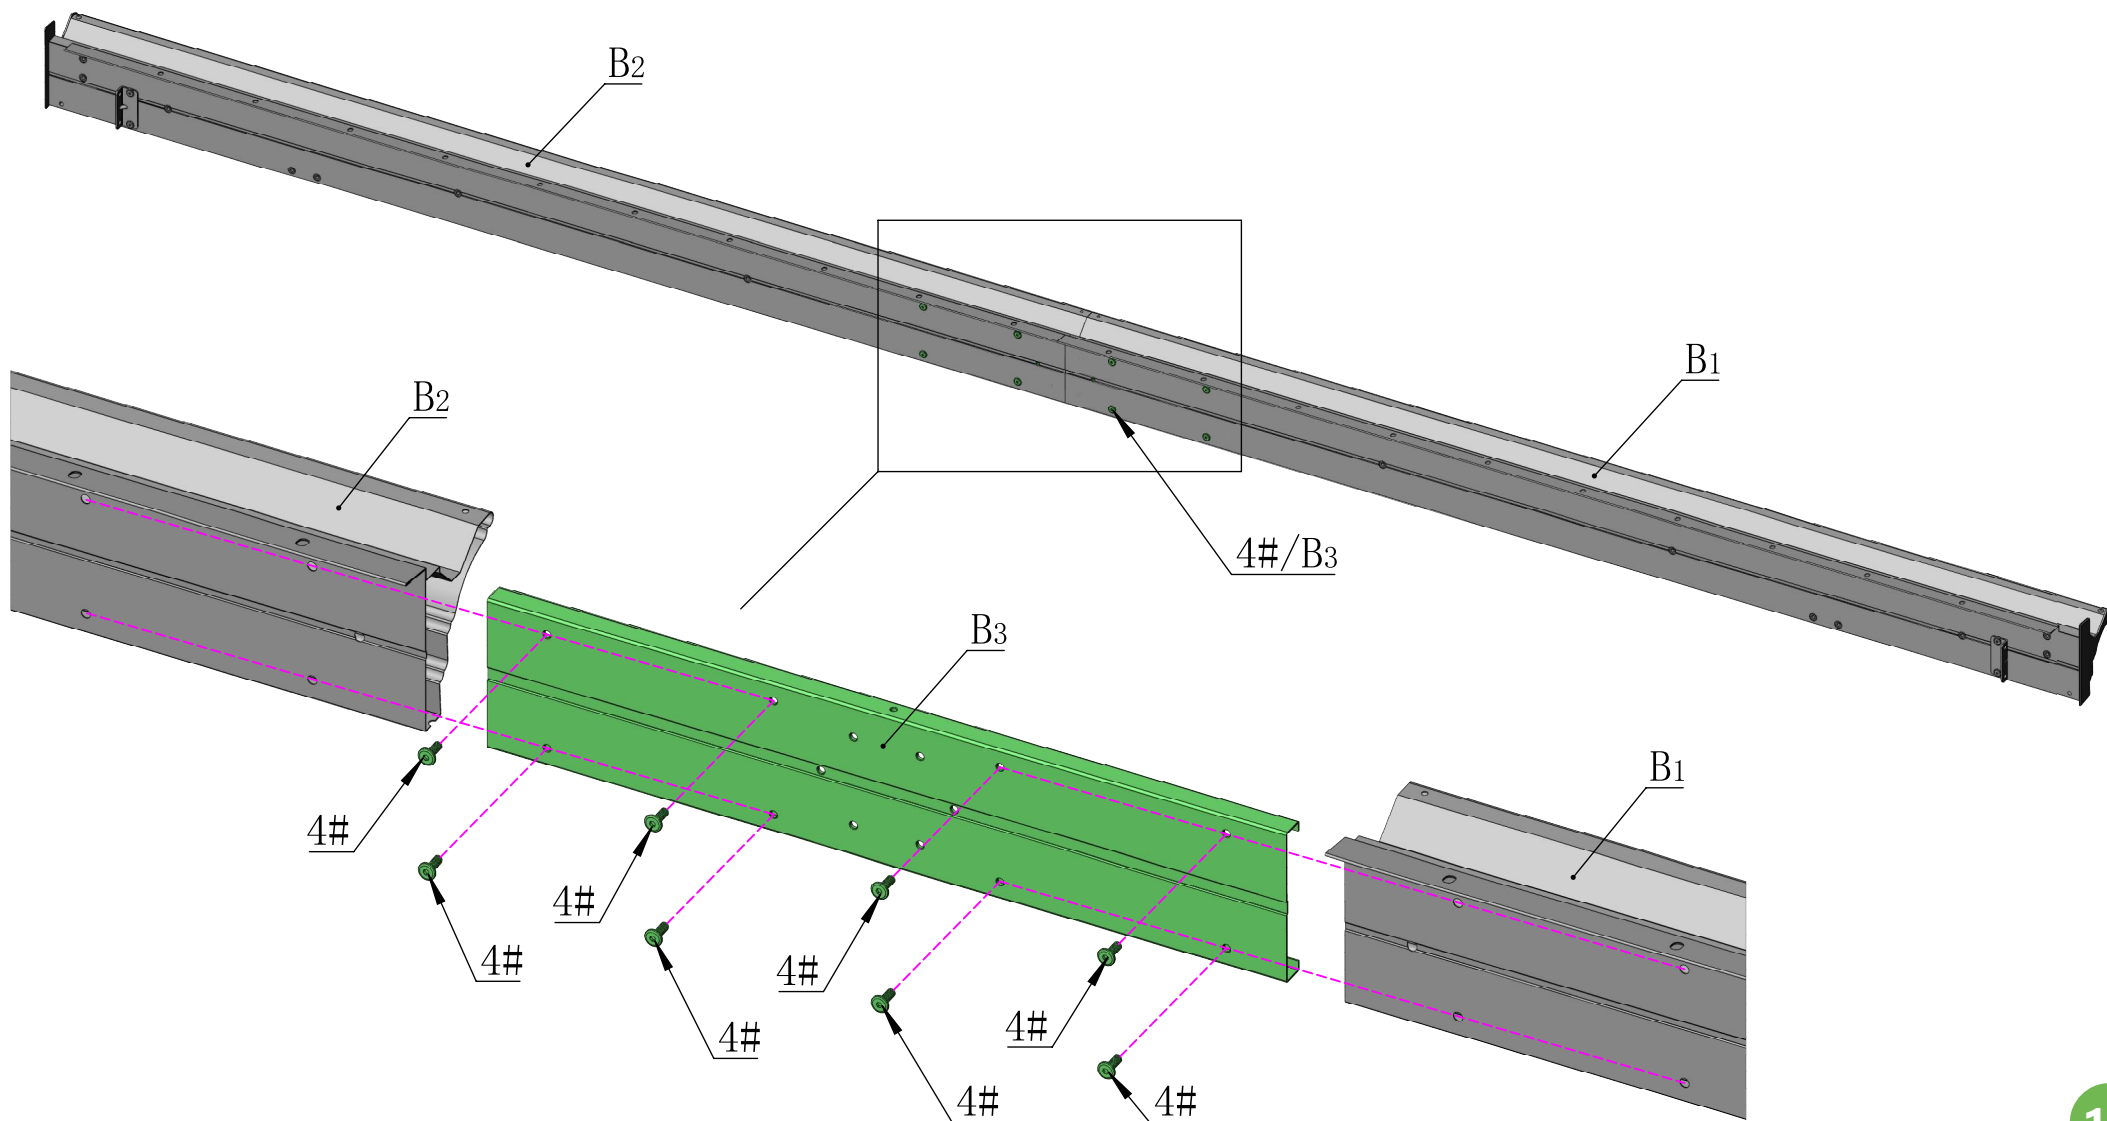


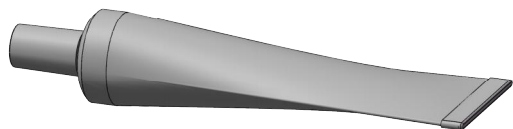


15#

1X

Use silicone sealant (part # 15) to affix the gap between the two beams.

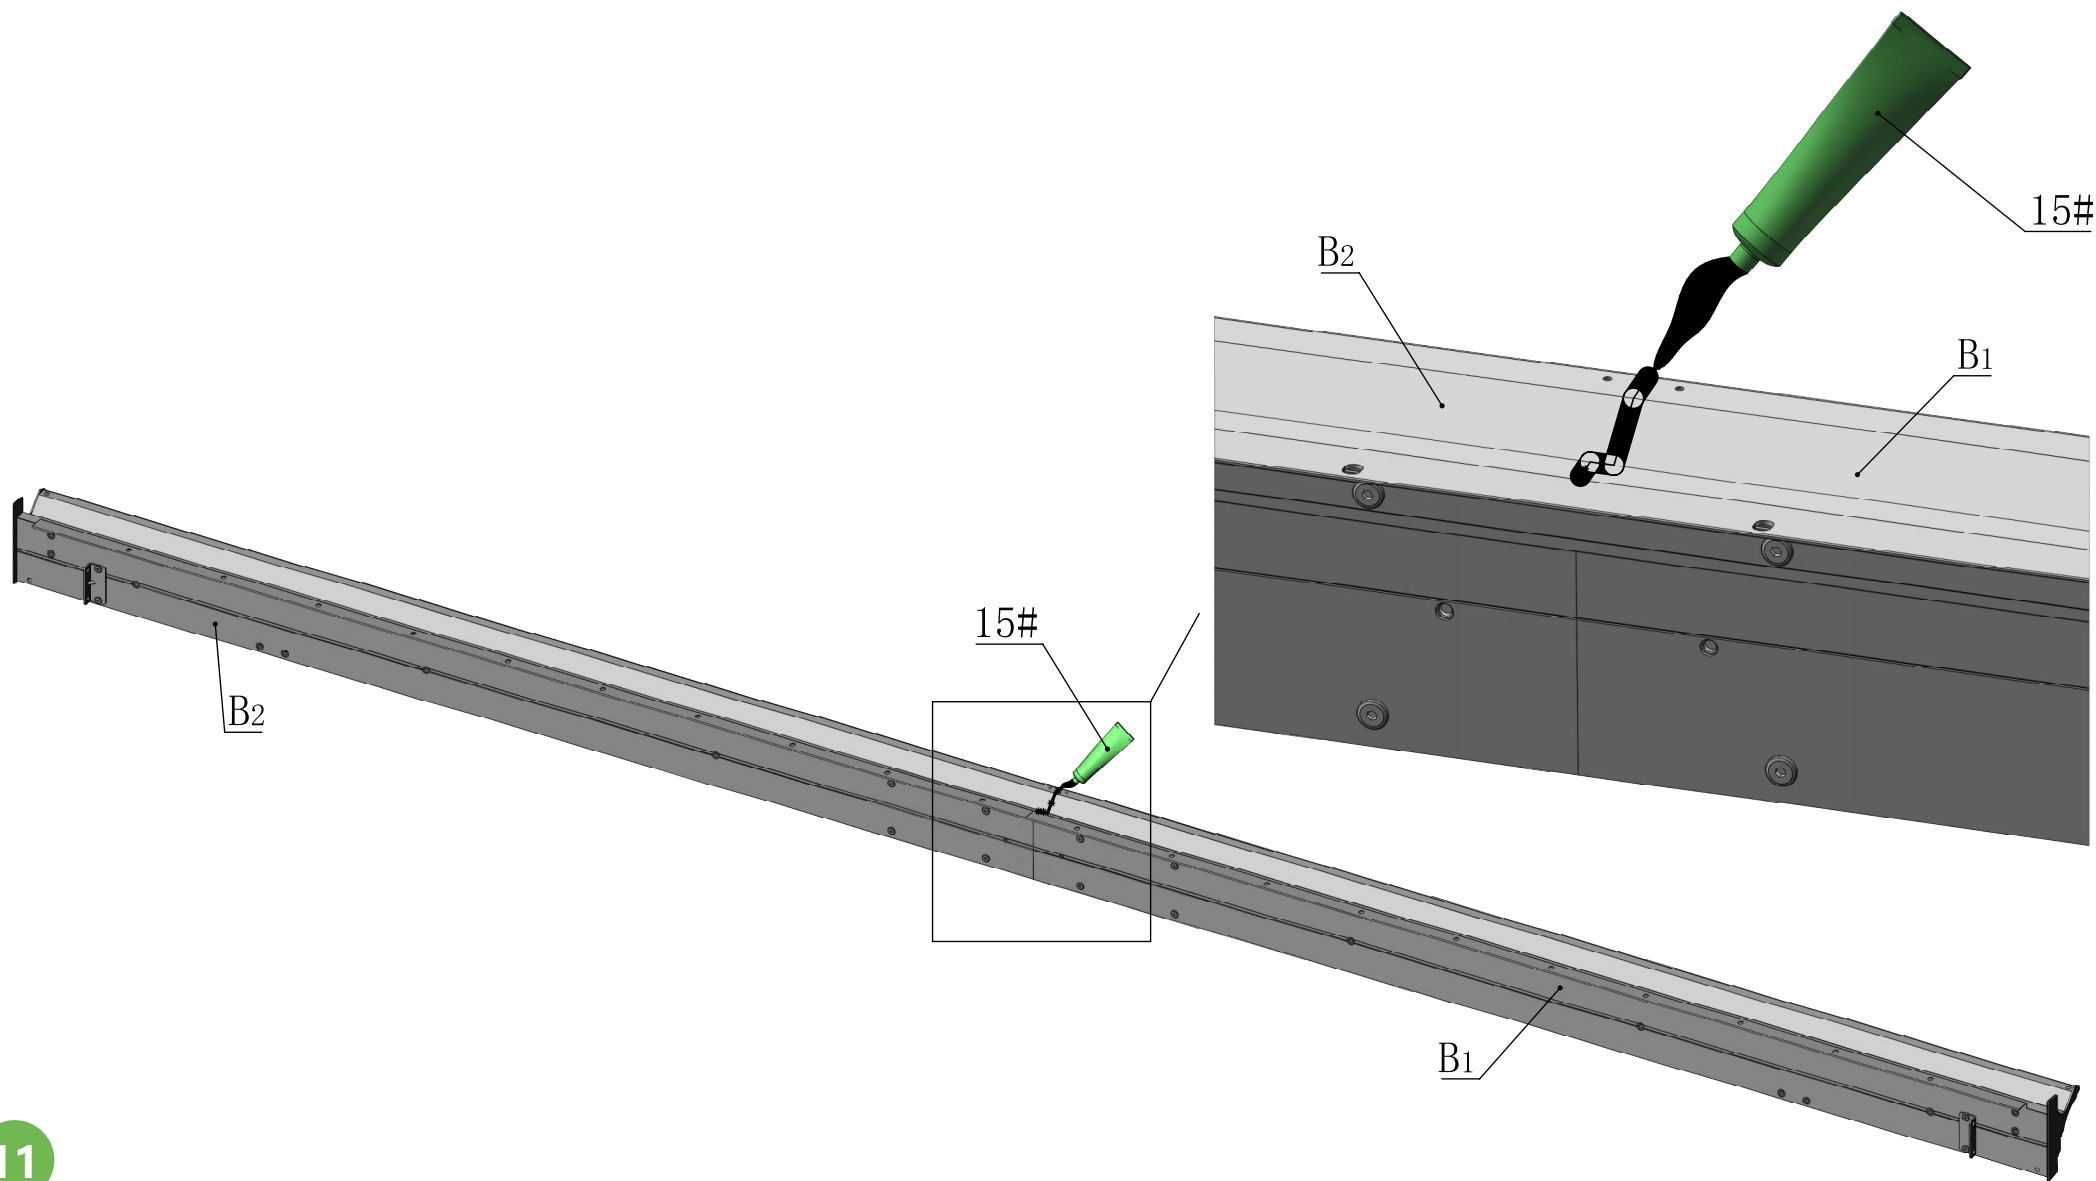

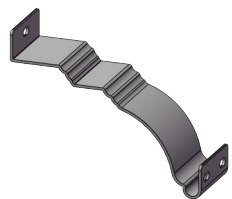

B7 1X




ST4. 8*13

1# 2X




M5*12





2# 1X

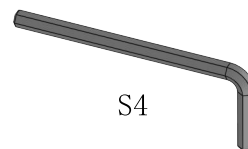


S4


23# 1X



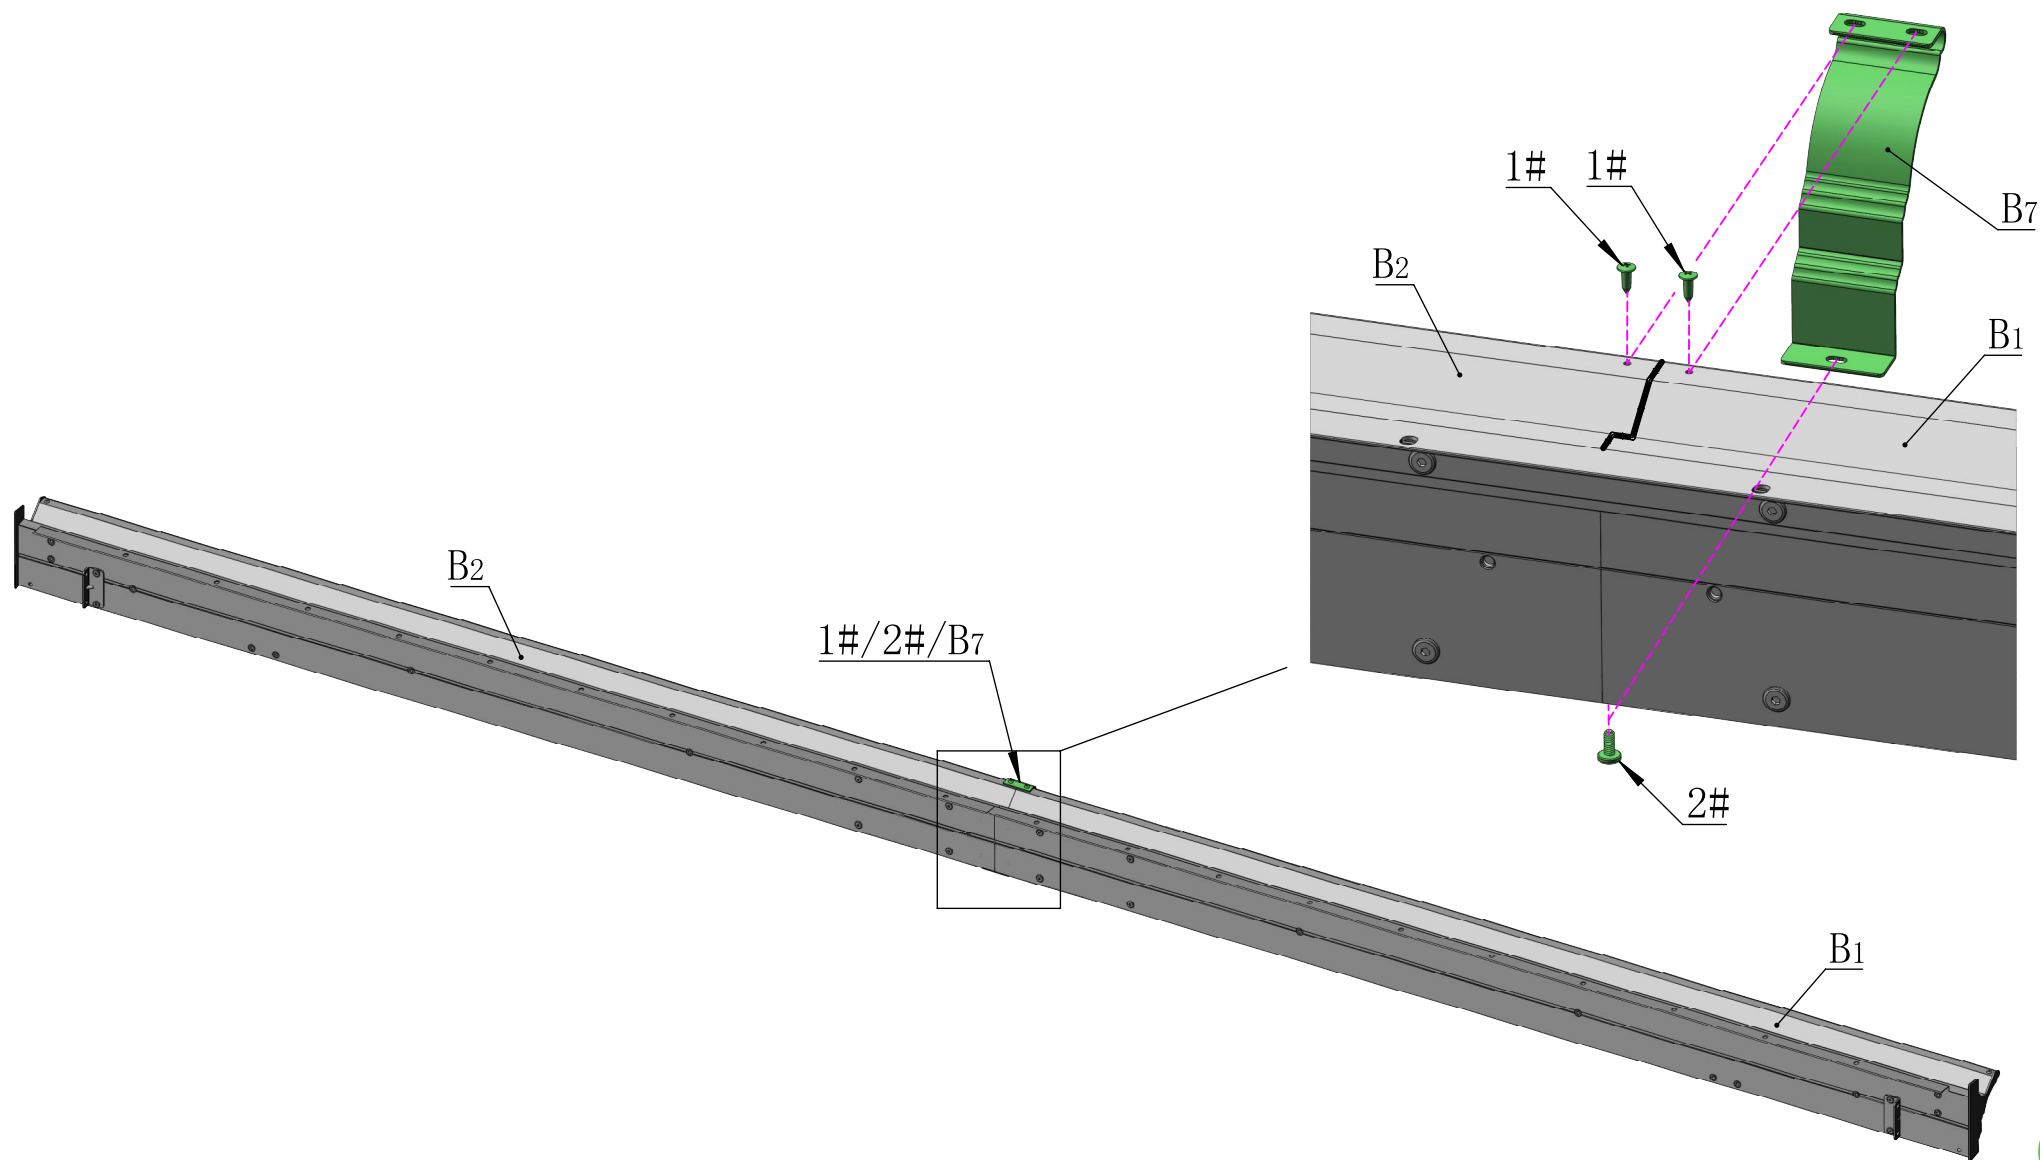


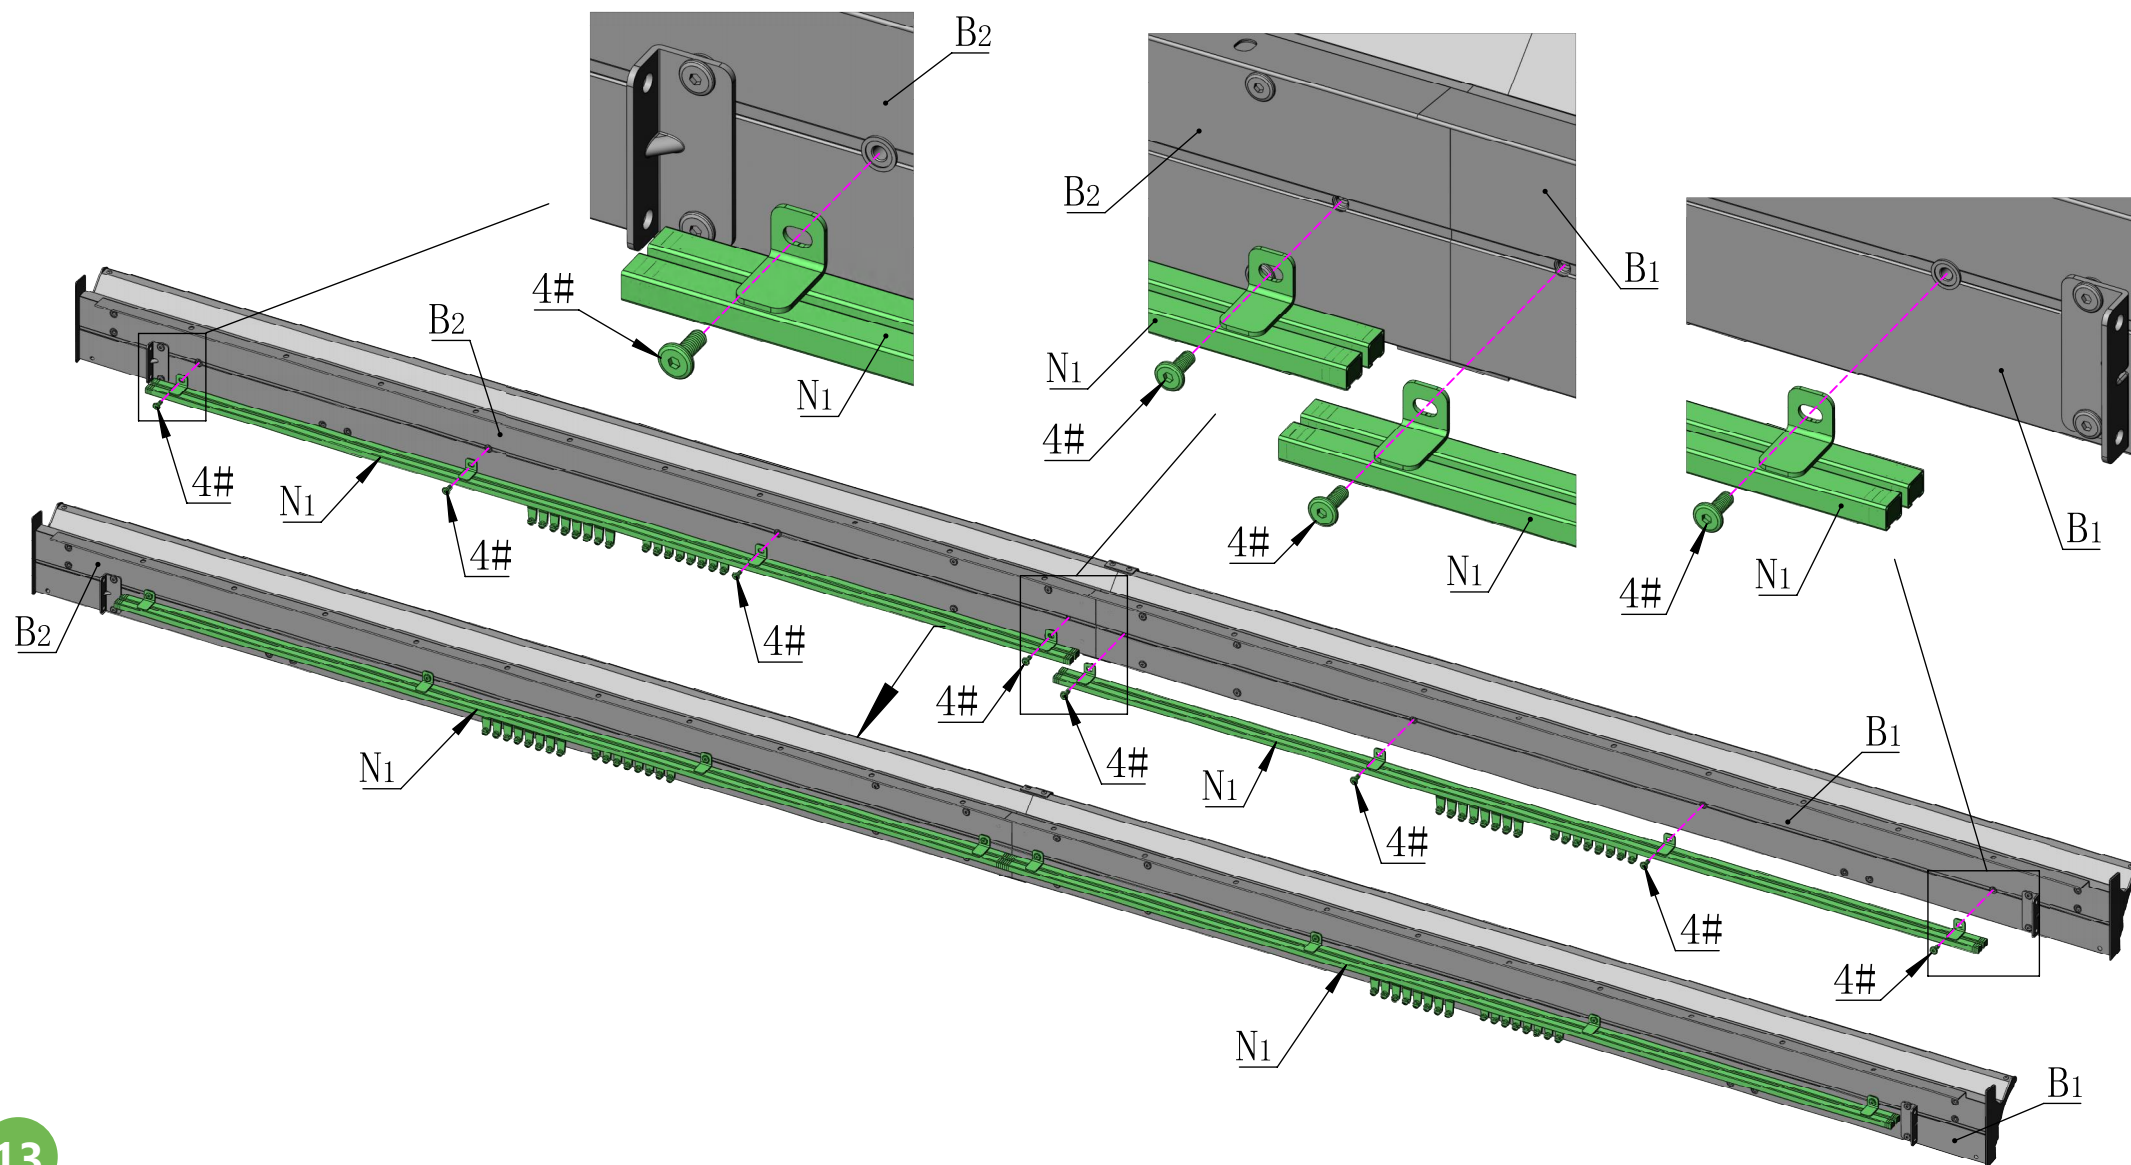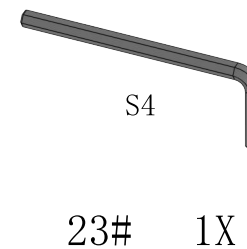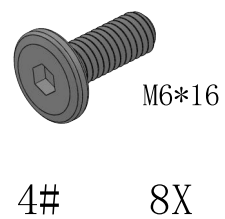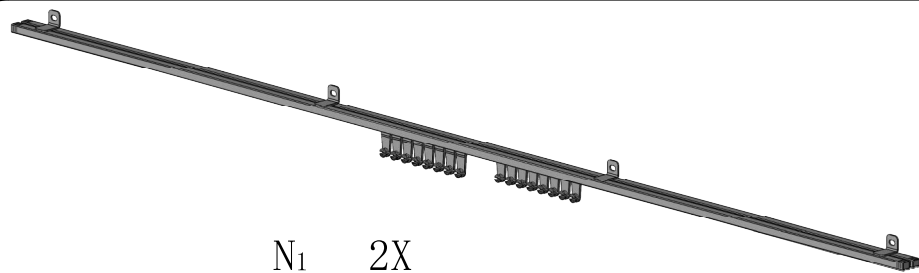

Side Beam Assembly

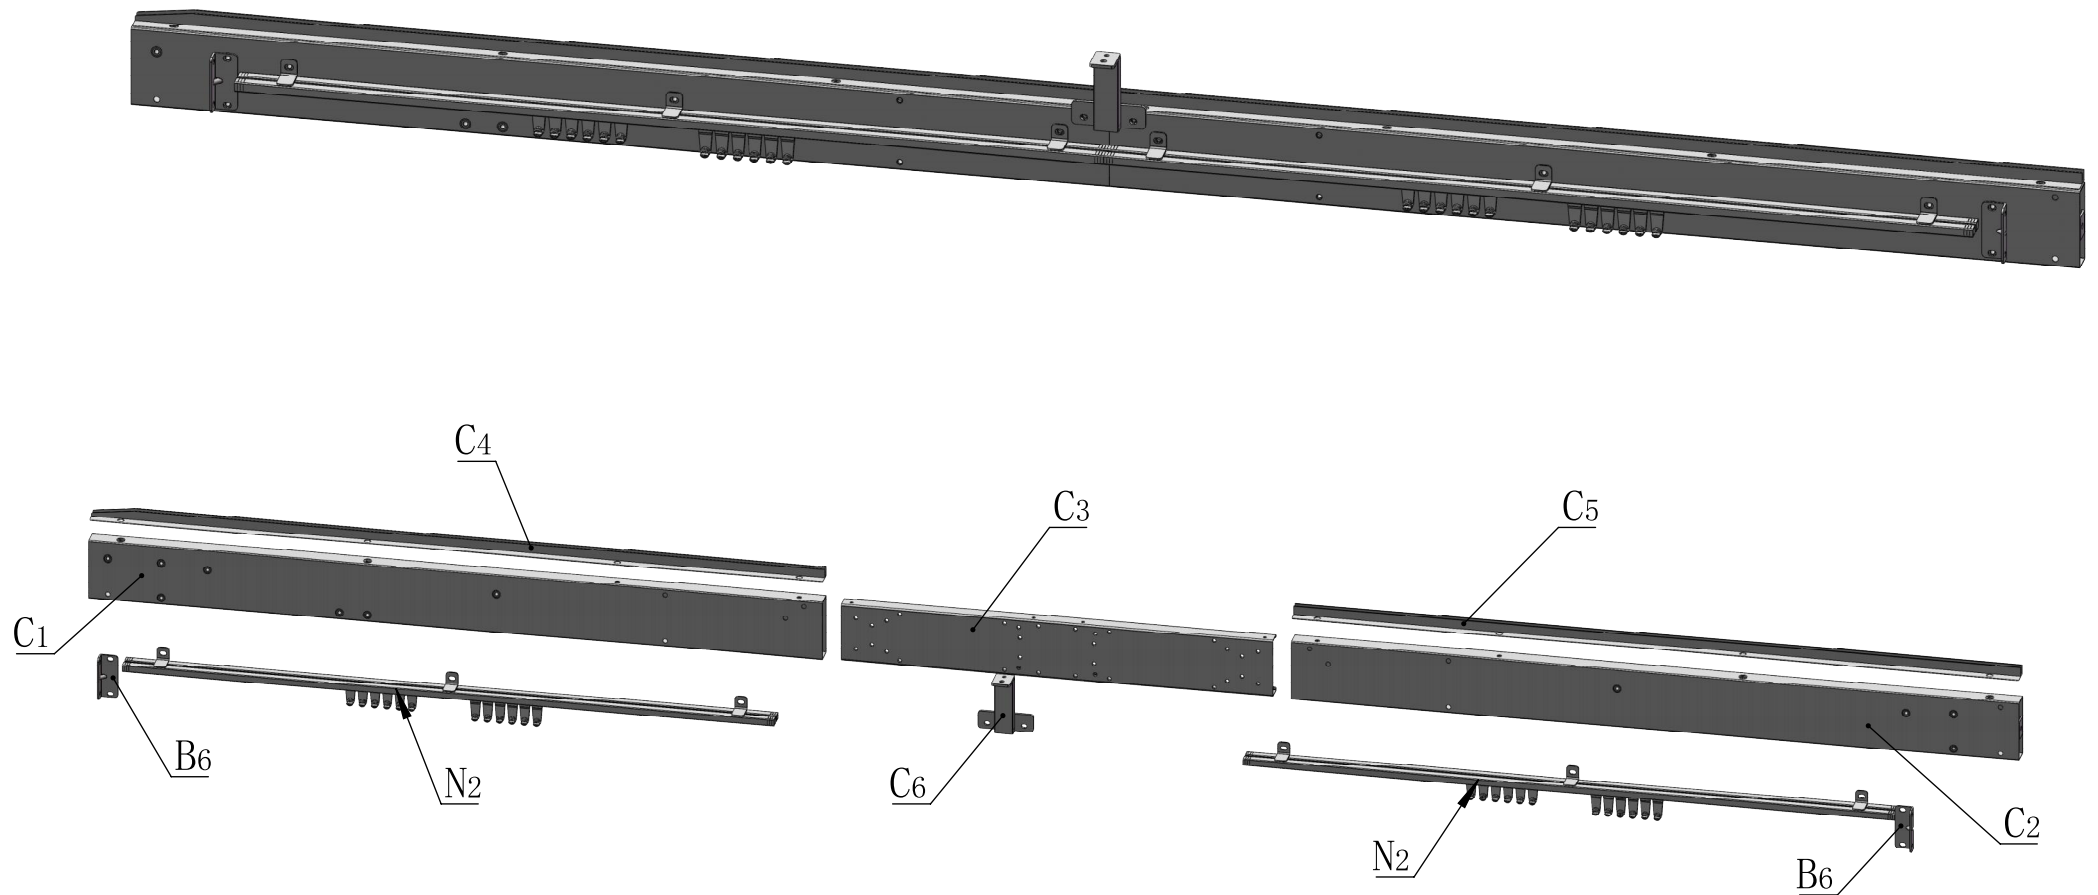



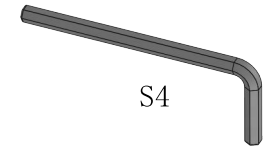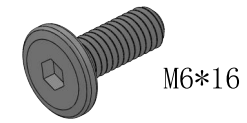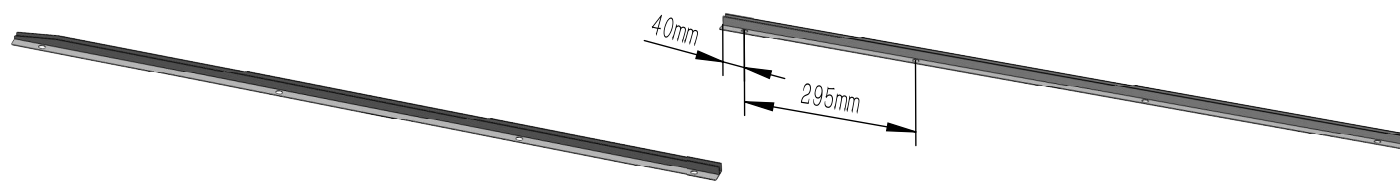



C4 1X

C5 1X

4# 8X


23# 1X

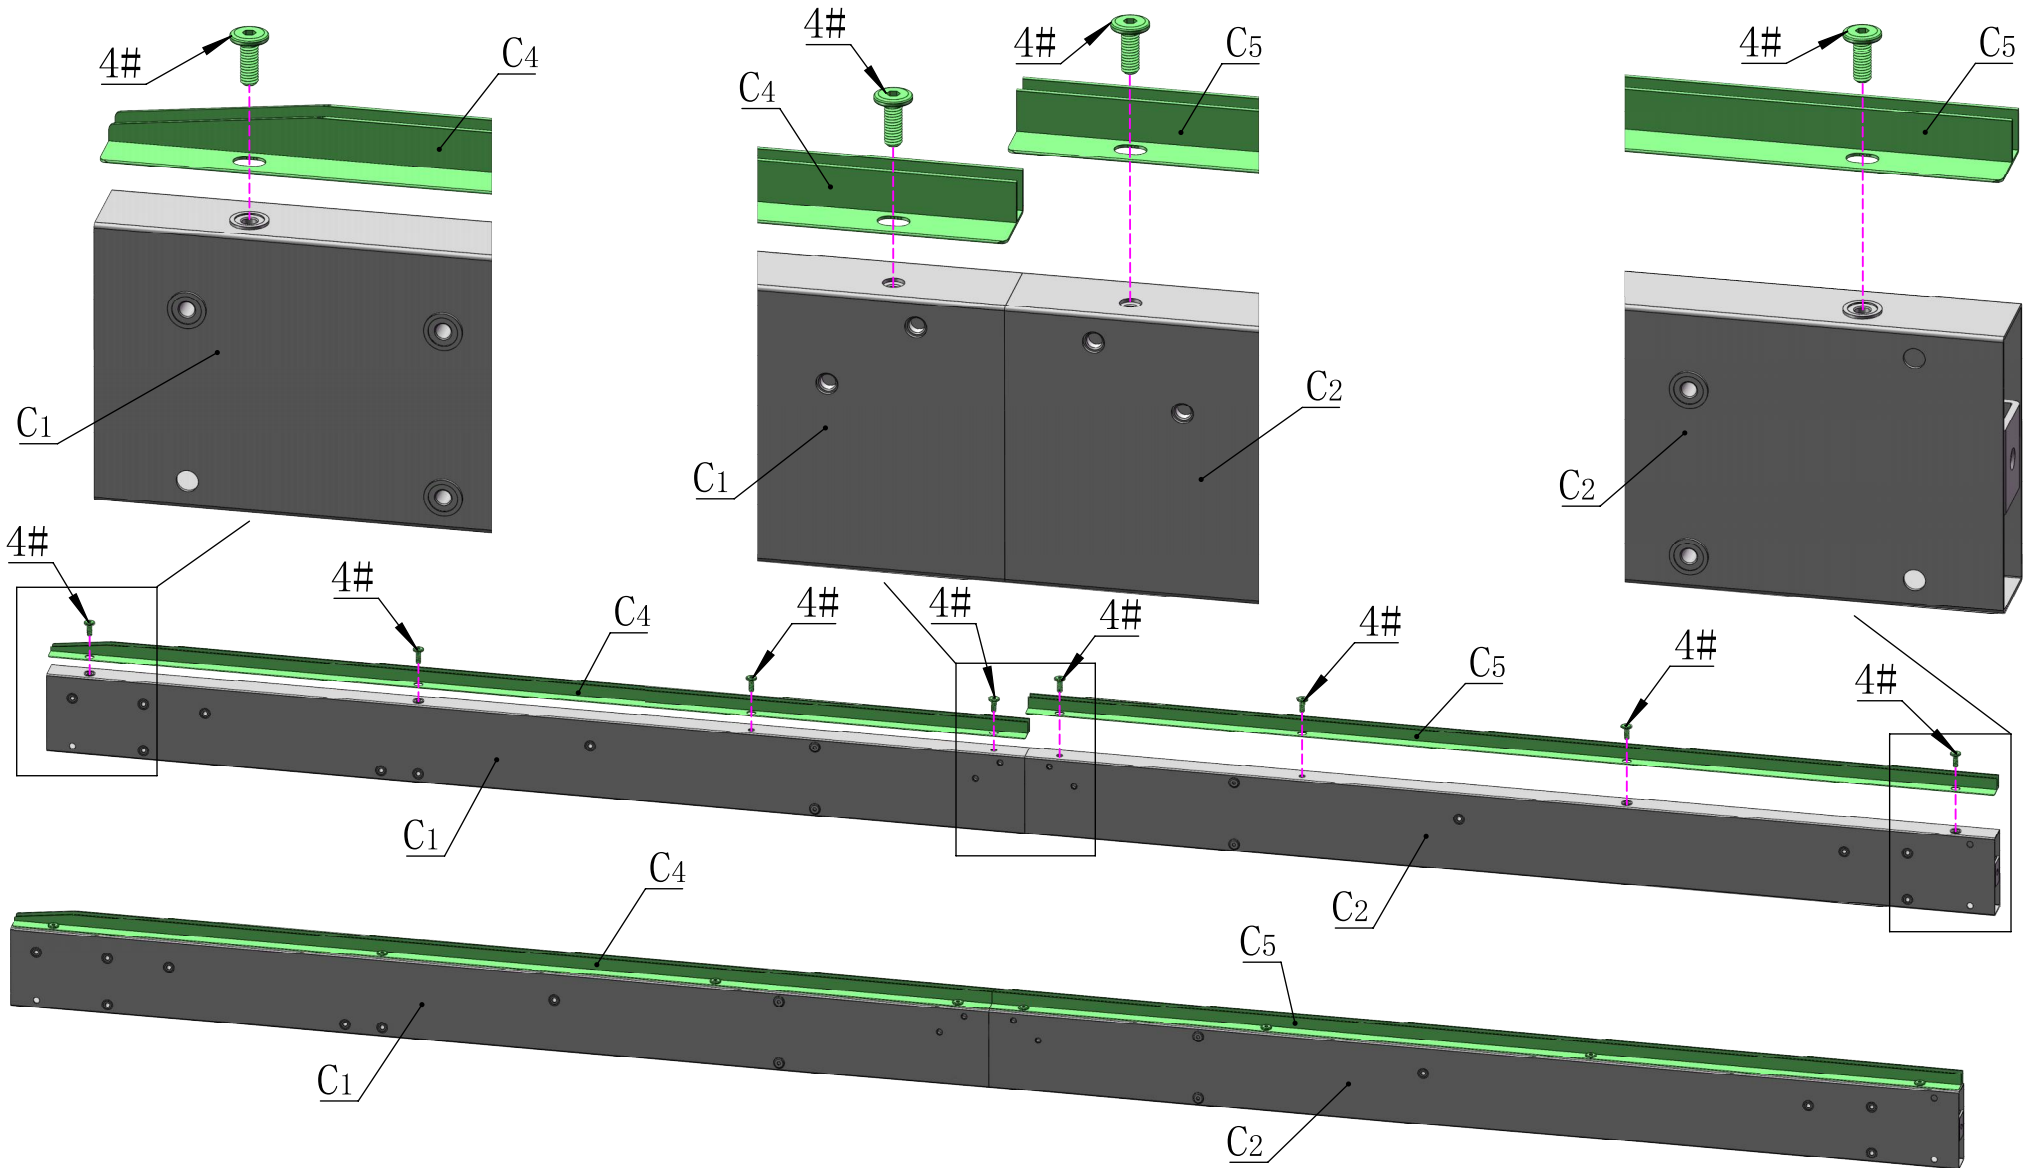

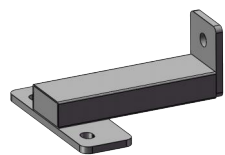

C6


1X

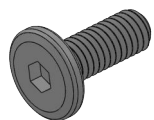

M6*16

4#


2X

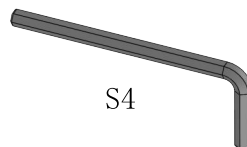


S4


23#

1X

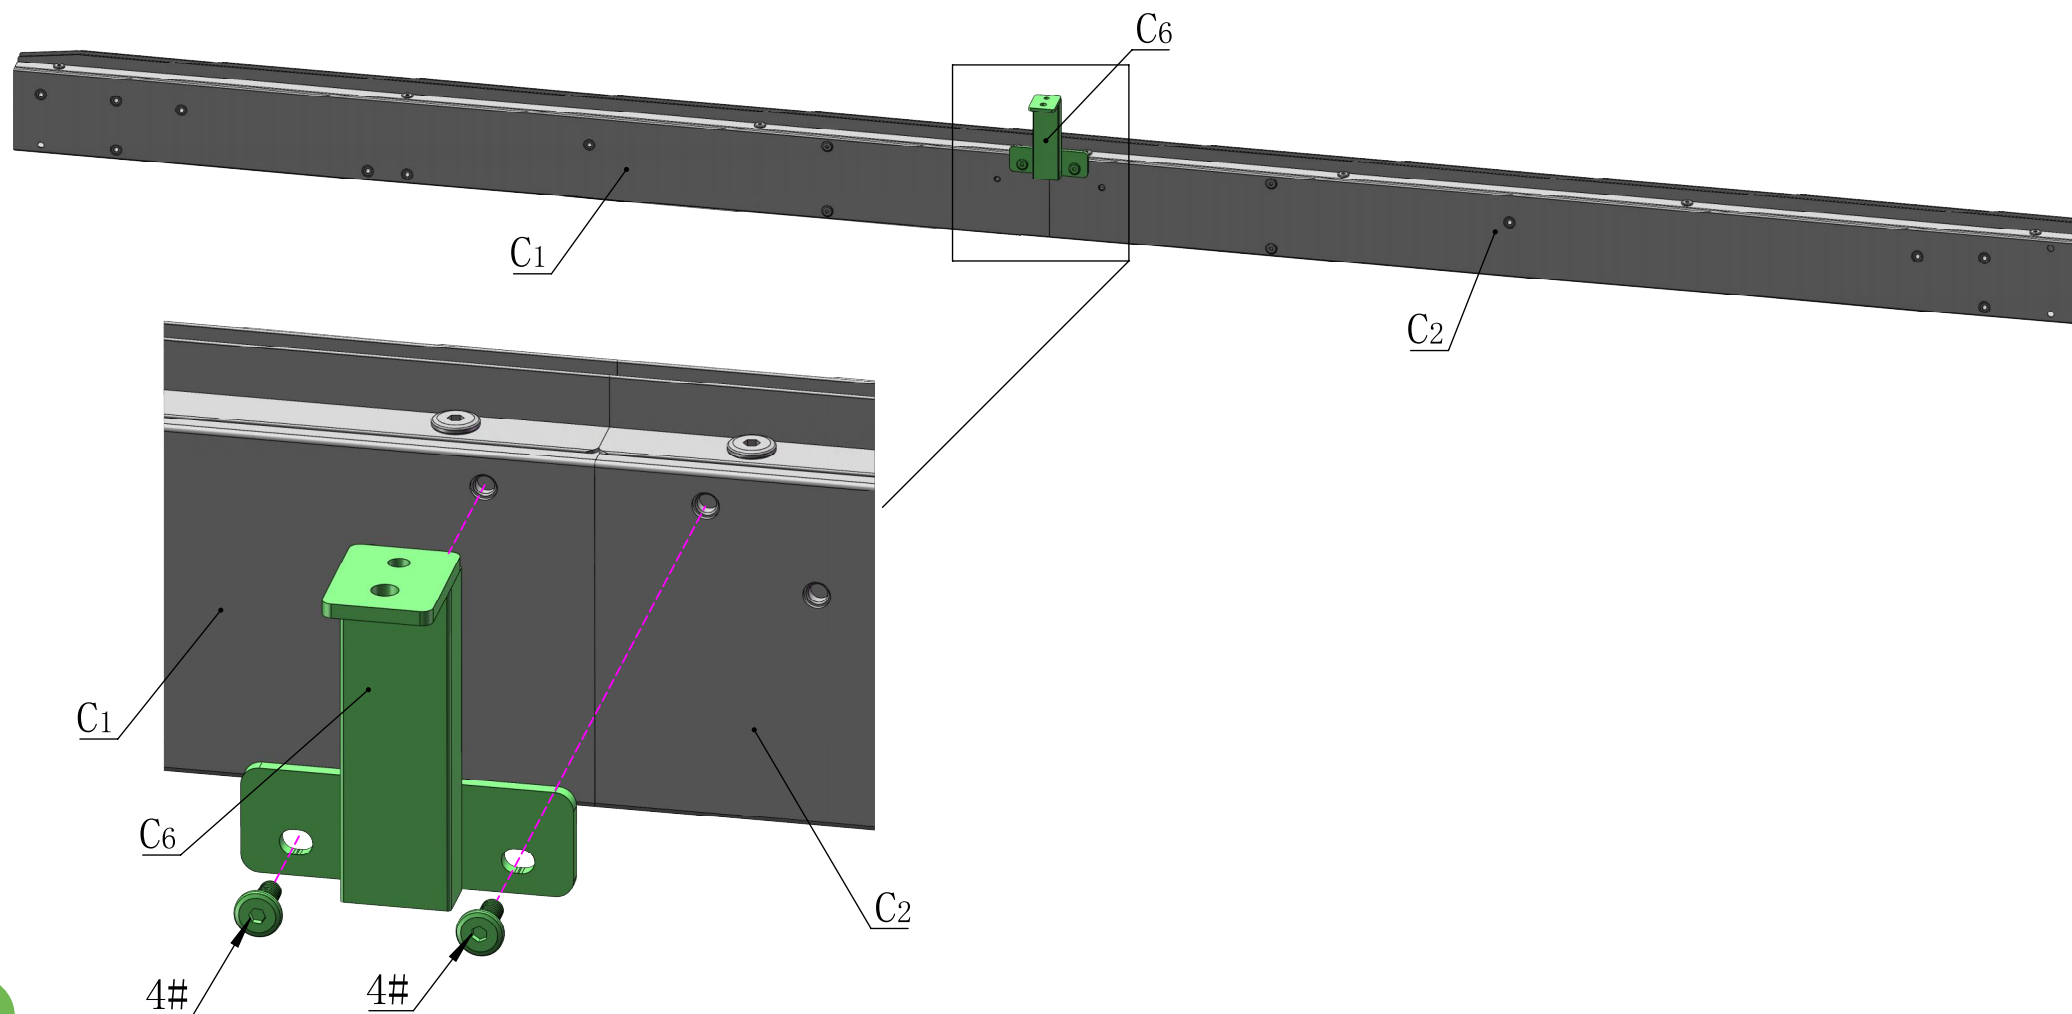

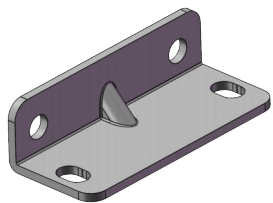


B6 2X

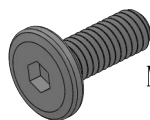





M6*16

4# 4X

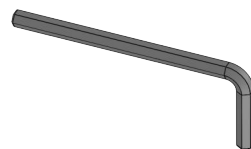





23# 1X

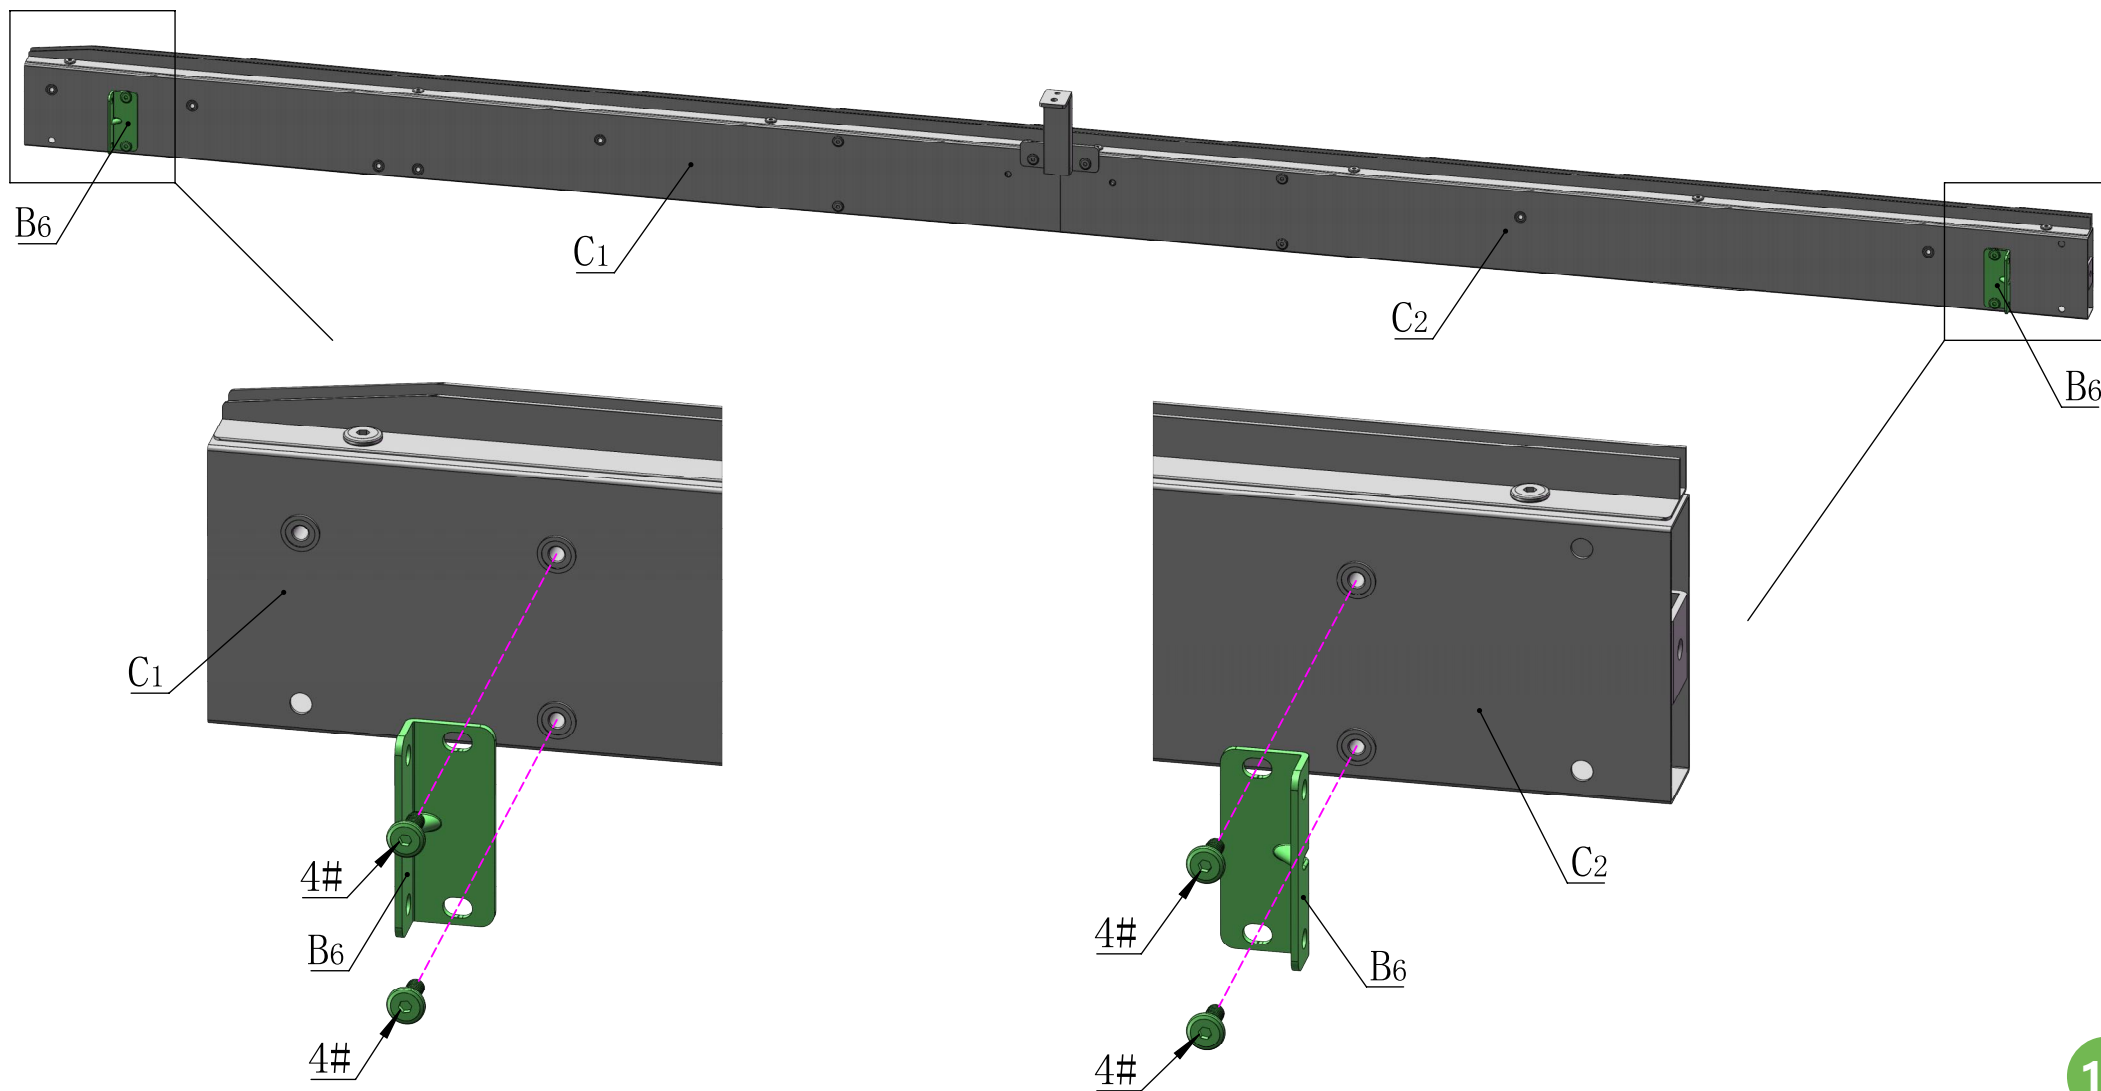

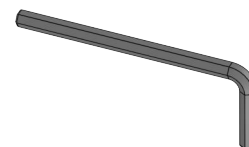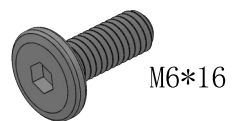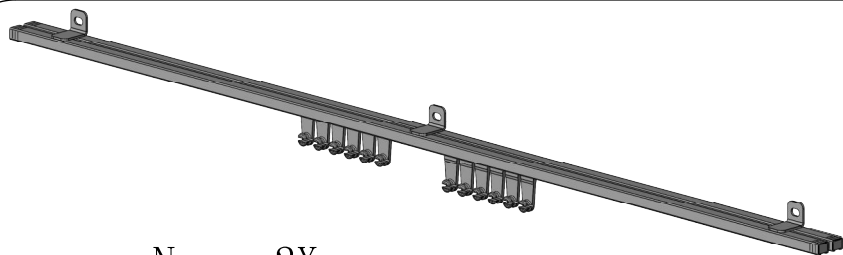




4# 6X



23# 1X

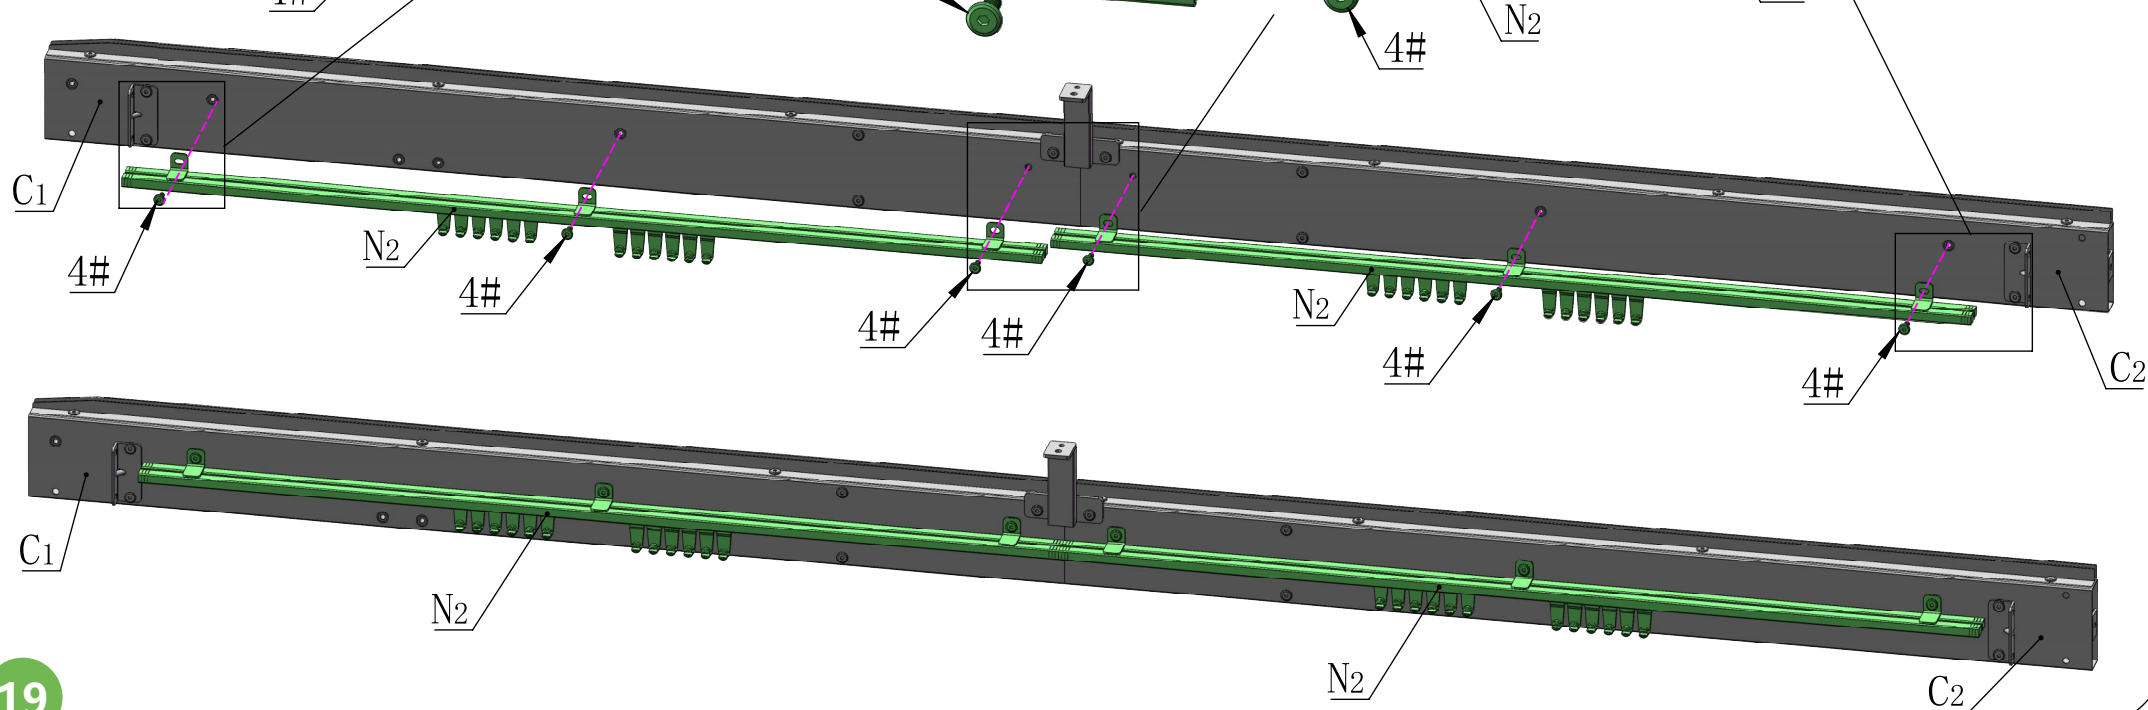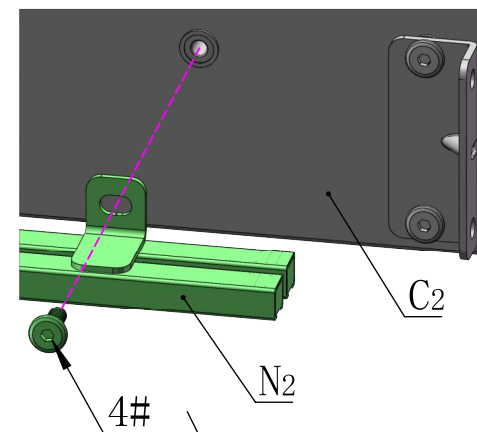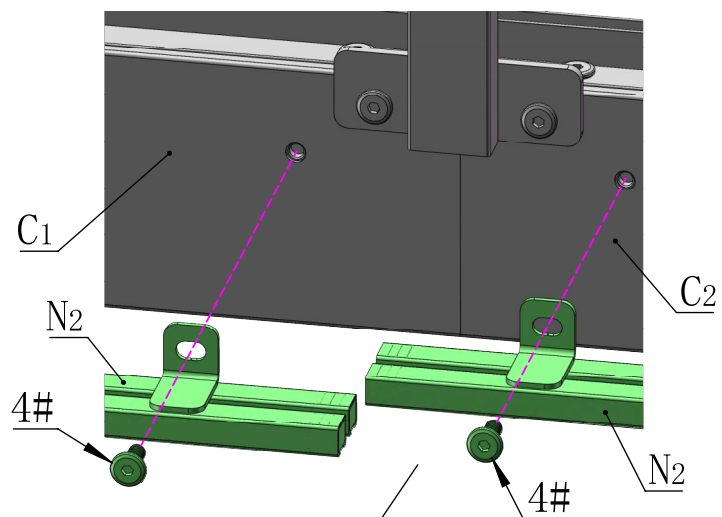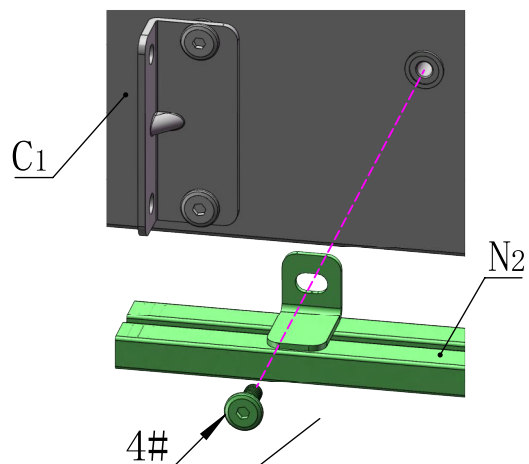


Side Beam Assembly

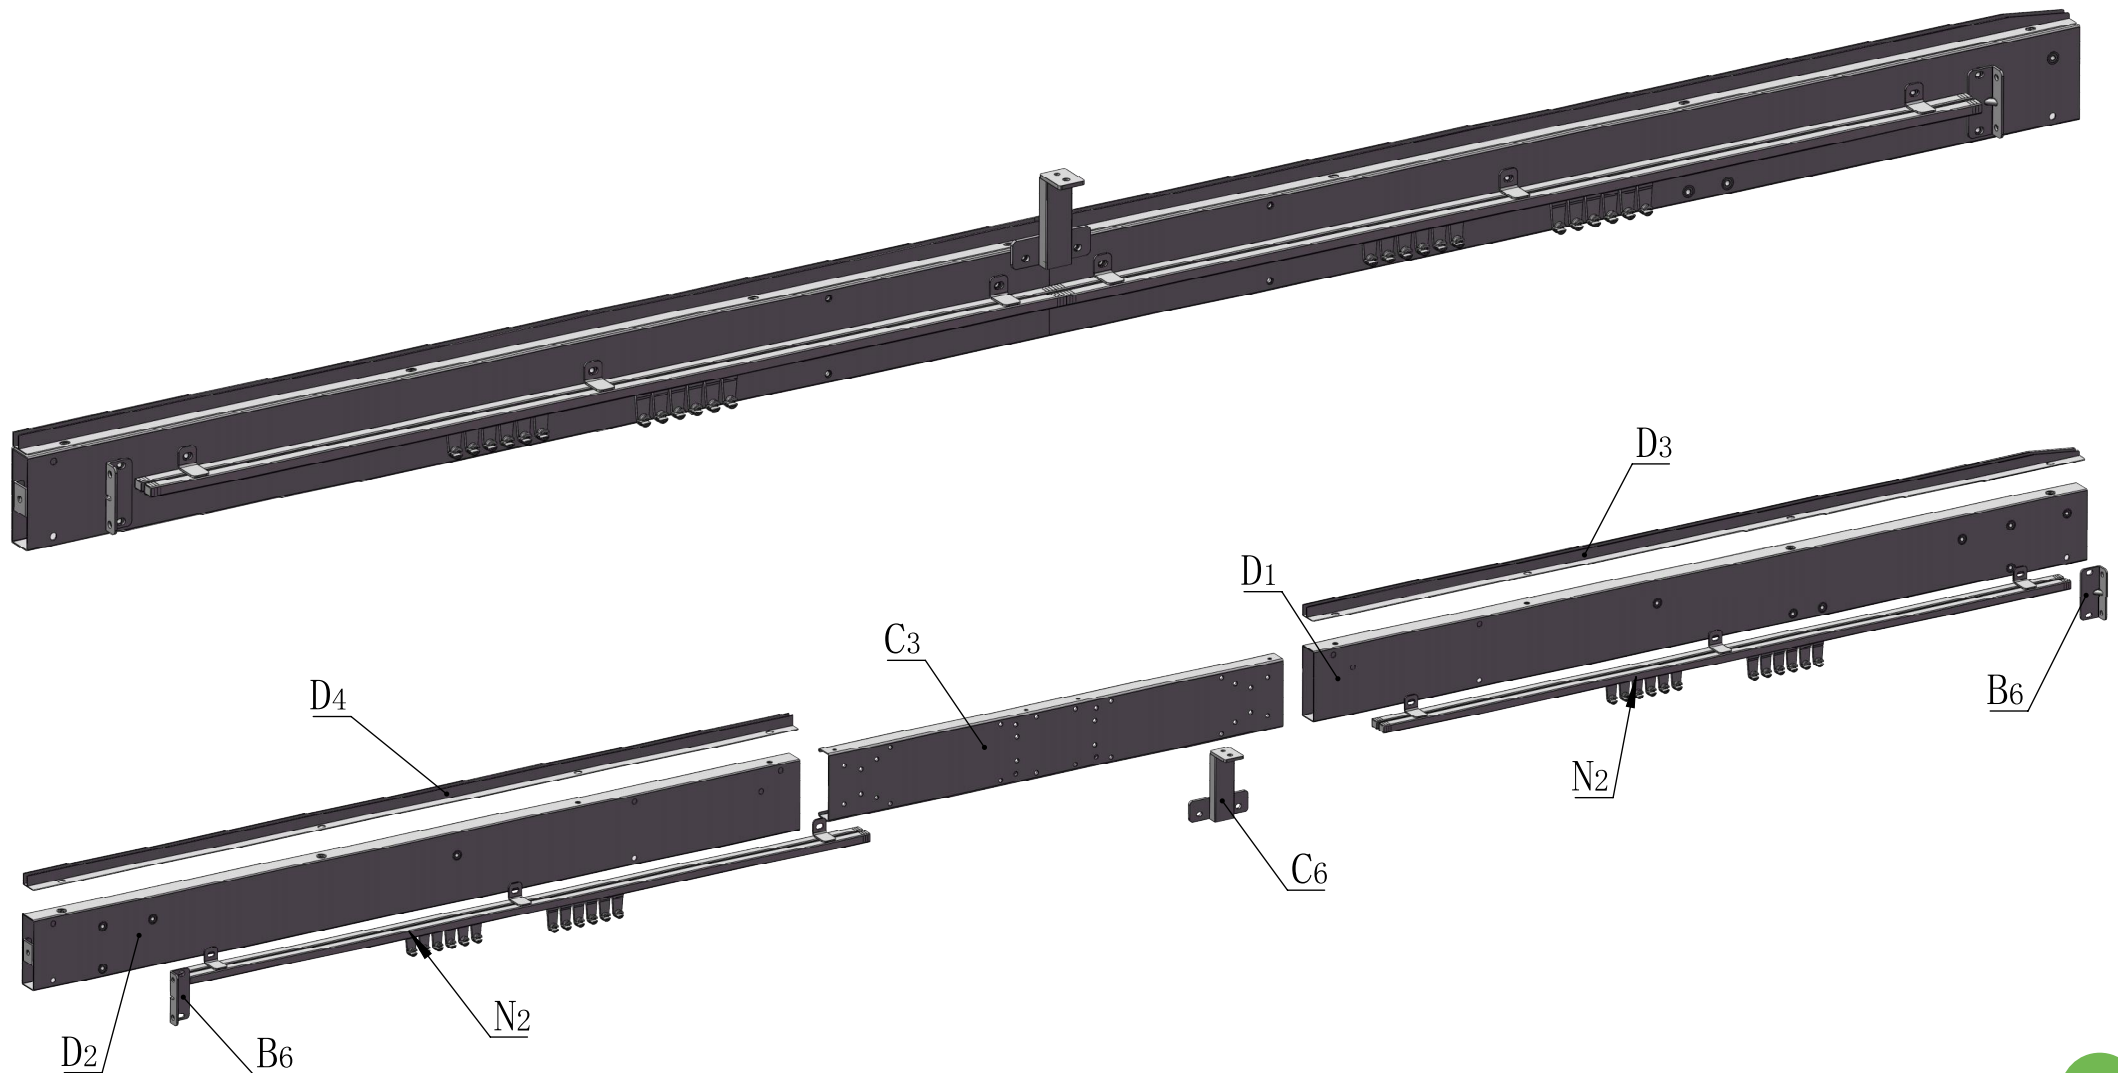


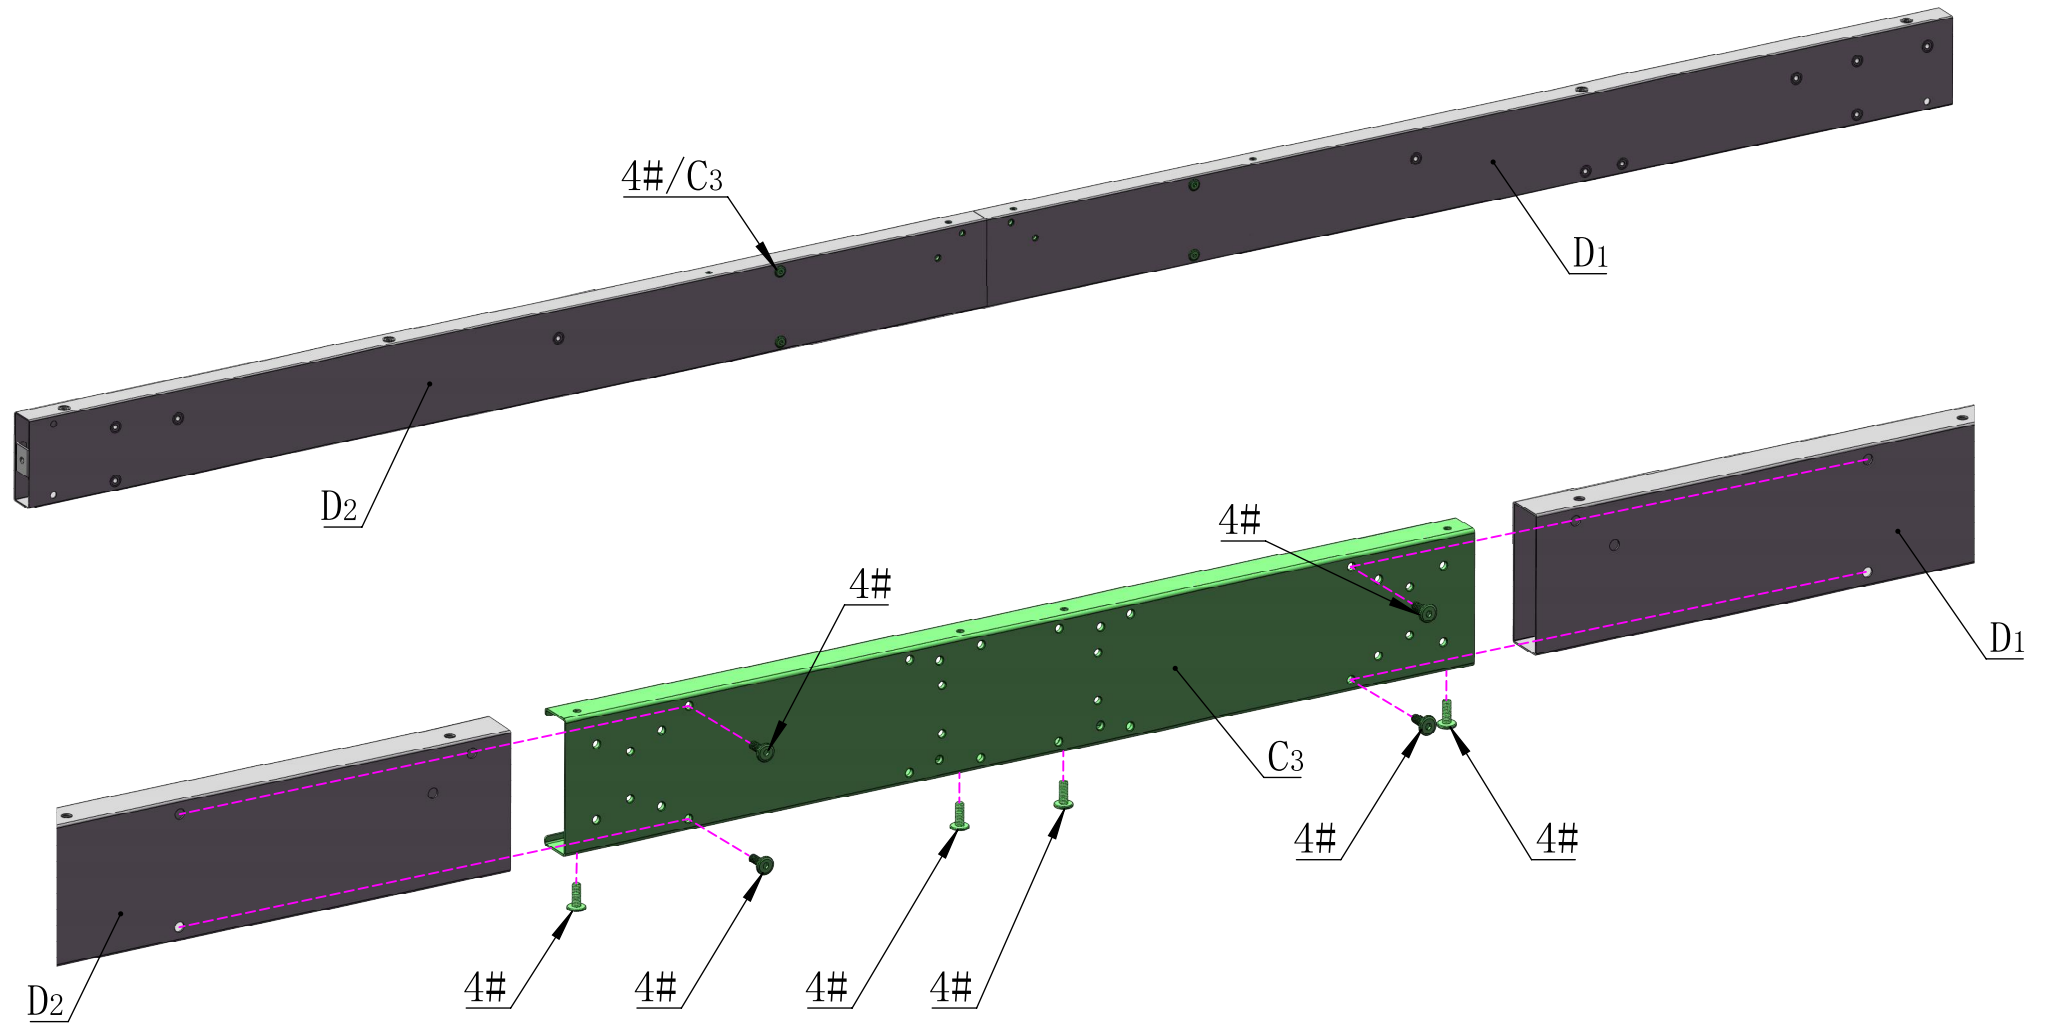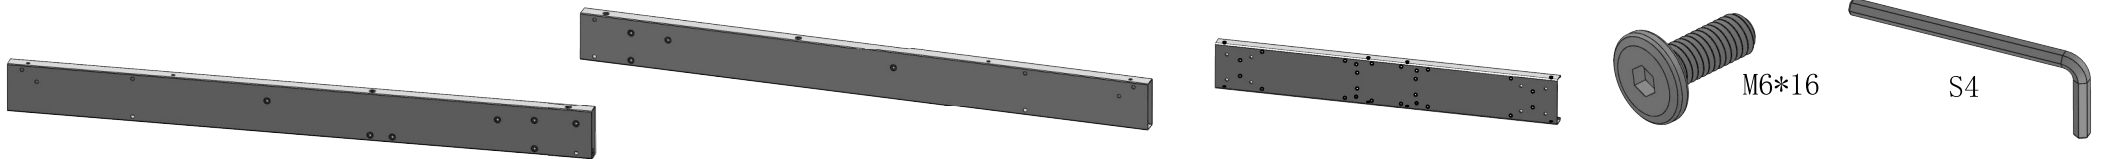

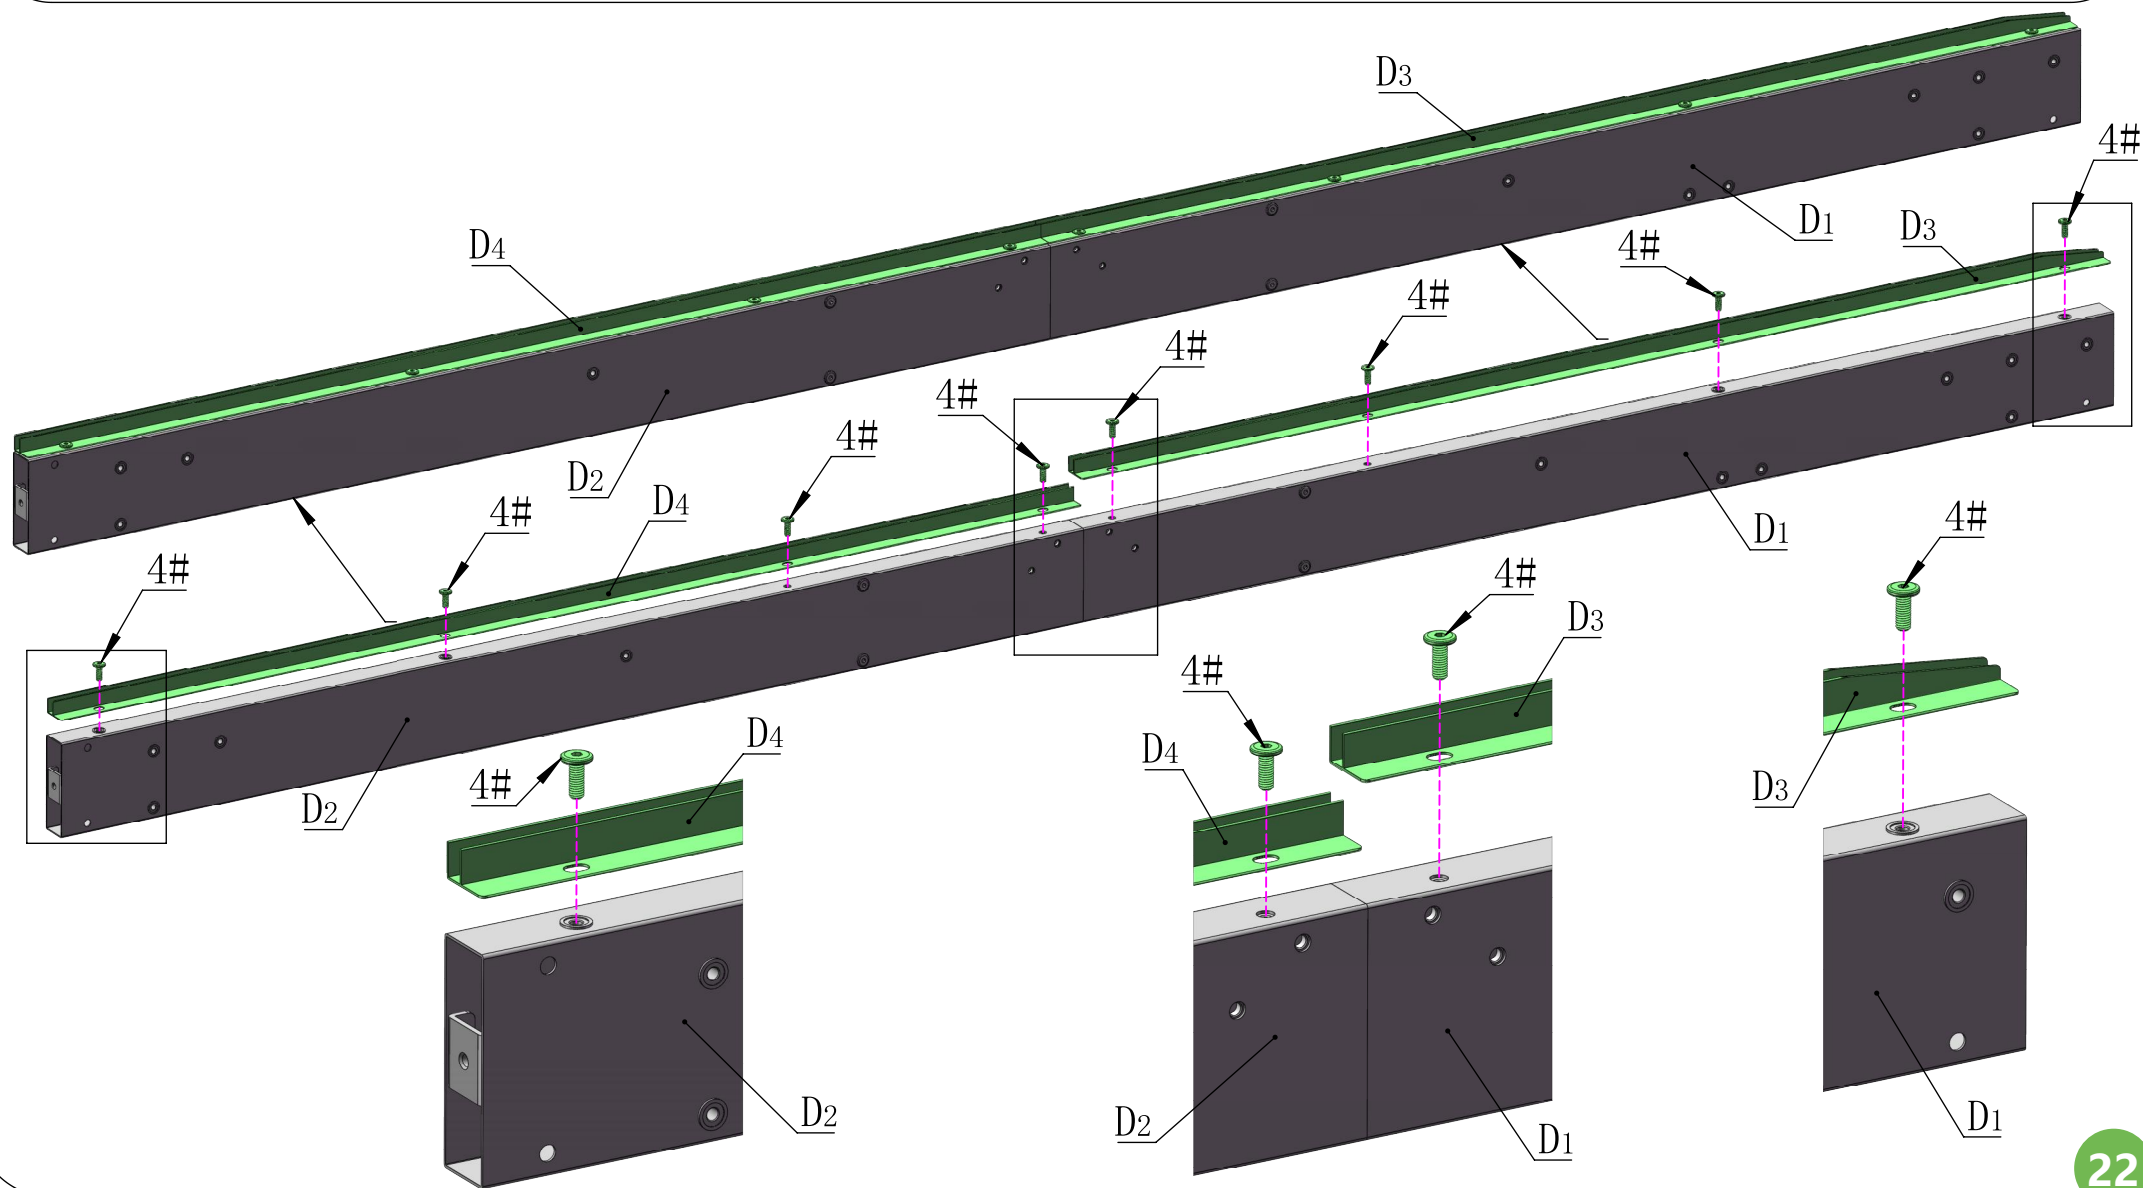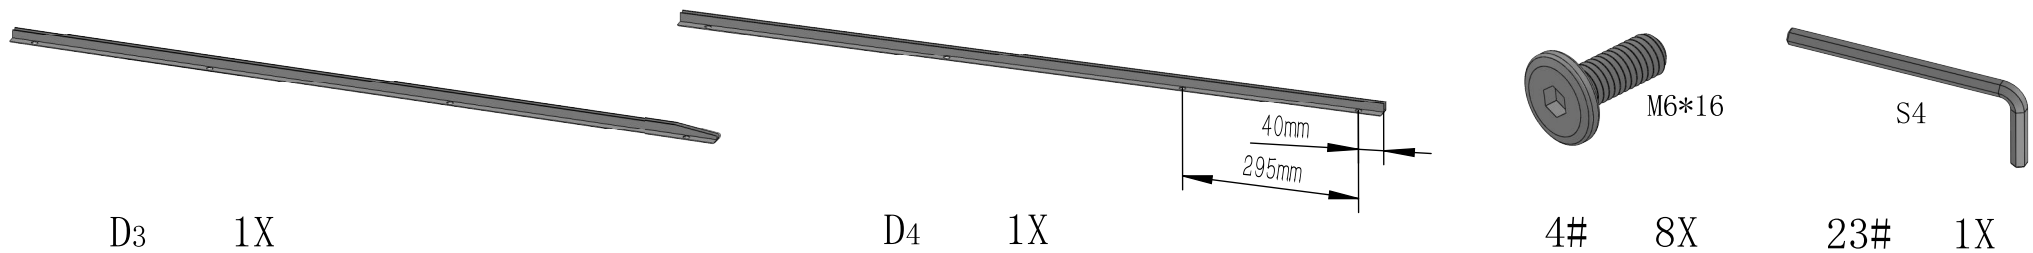


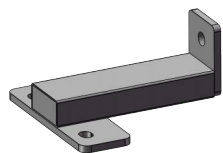


C6 1X

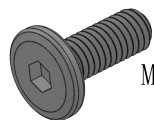


M6*16
4# 2X

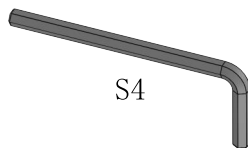


S4
23# 1X

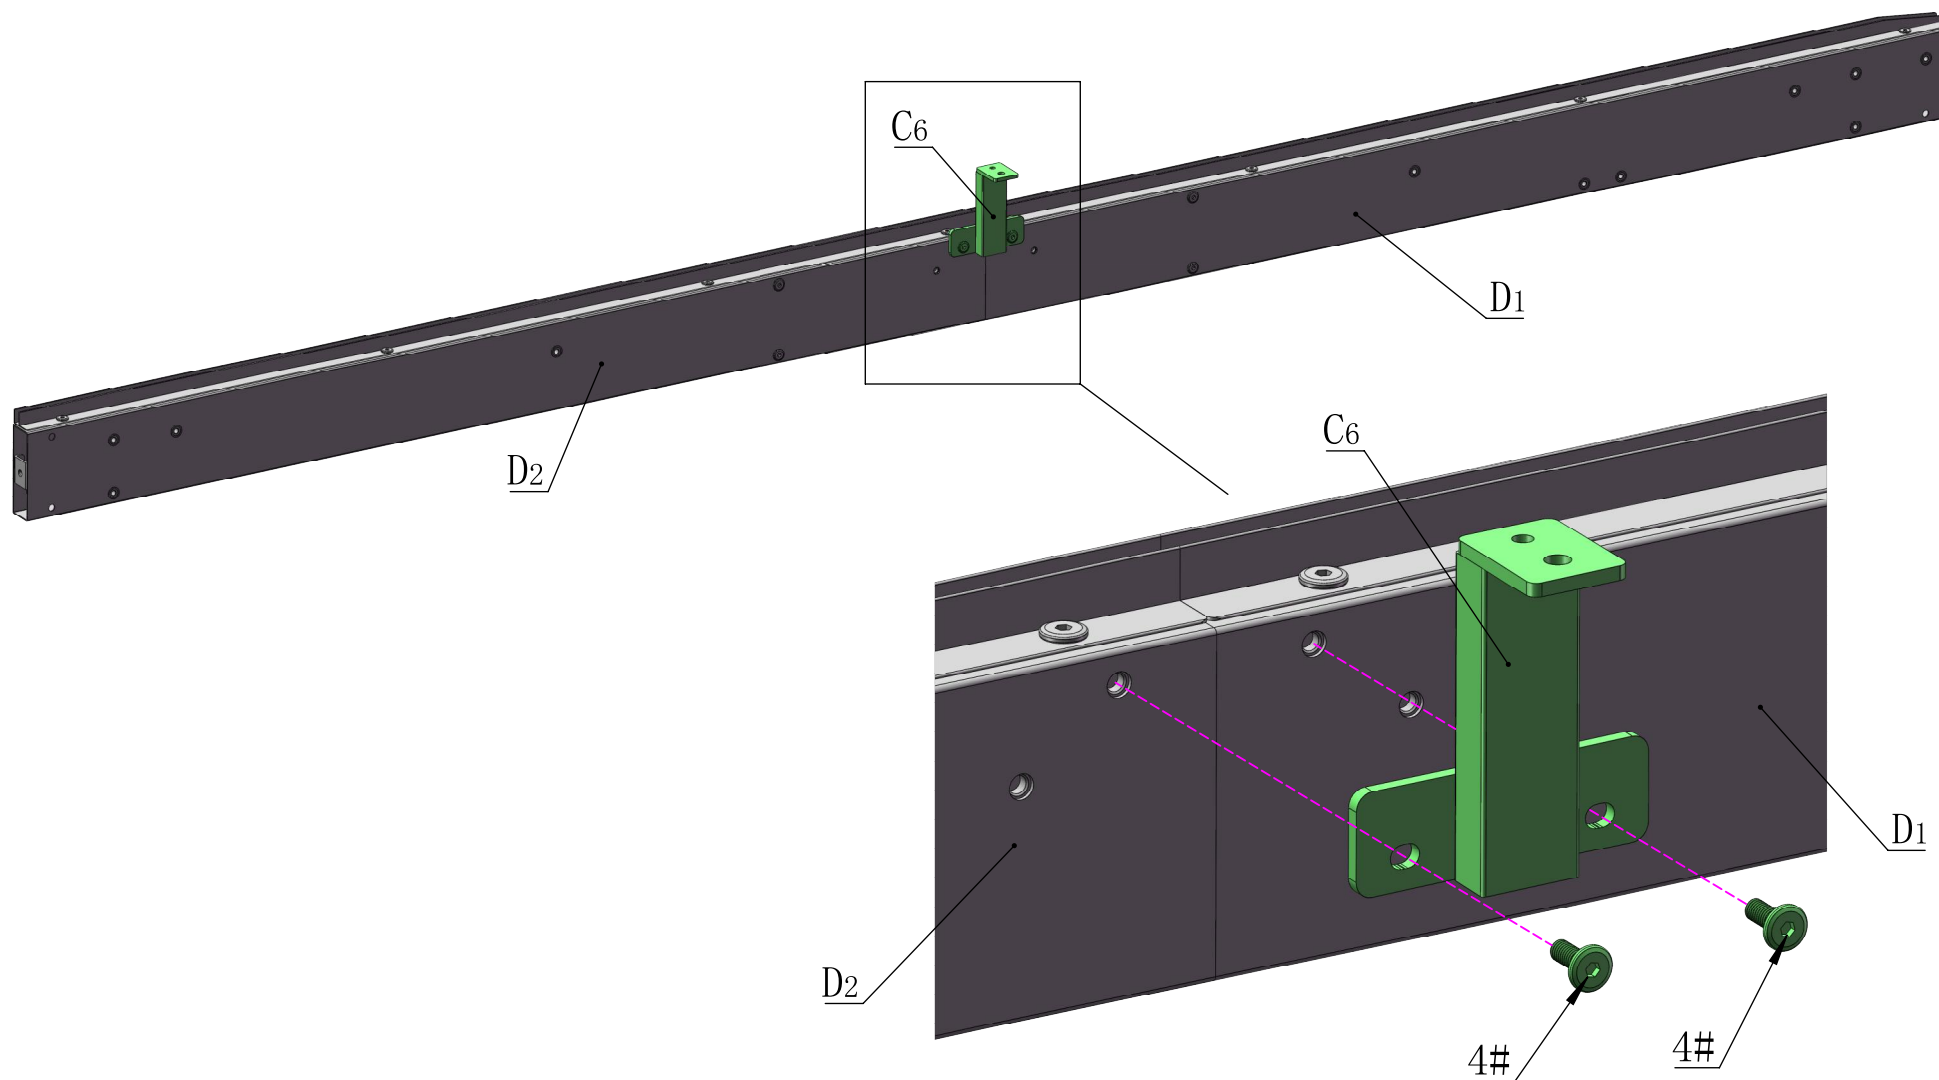

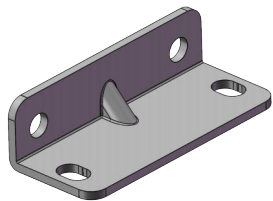


B6 2X




M6*16





4# 4X

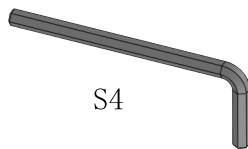


S4



23# 1X

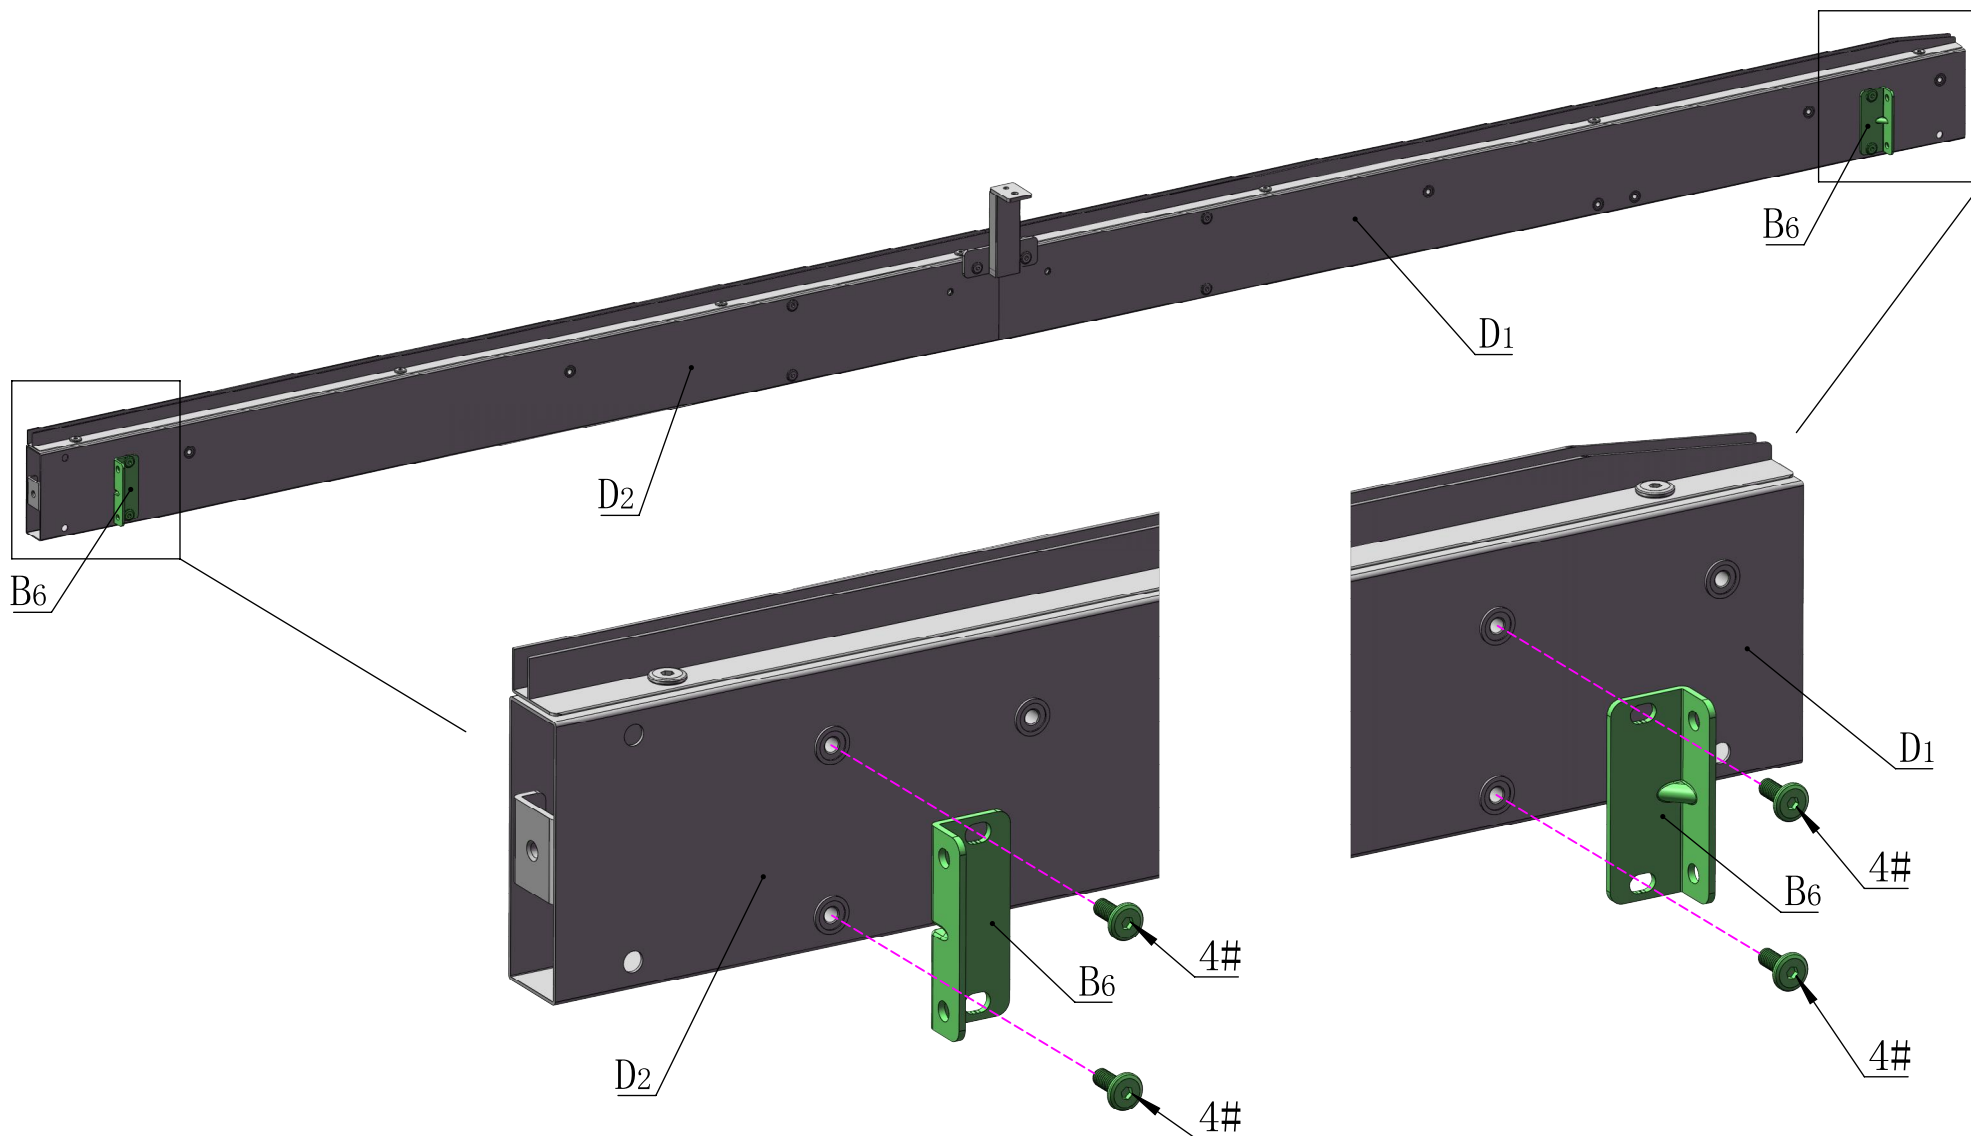


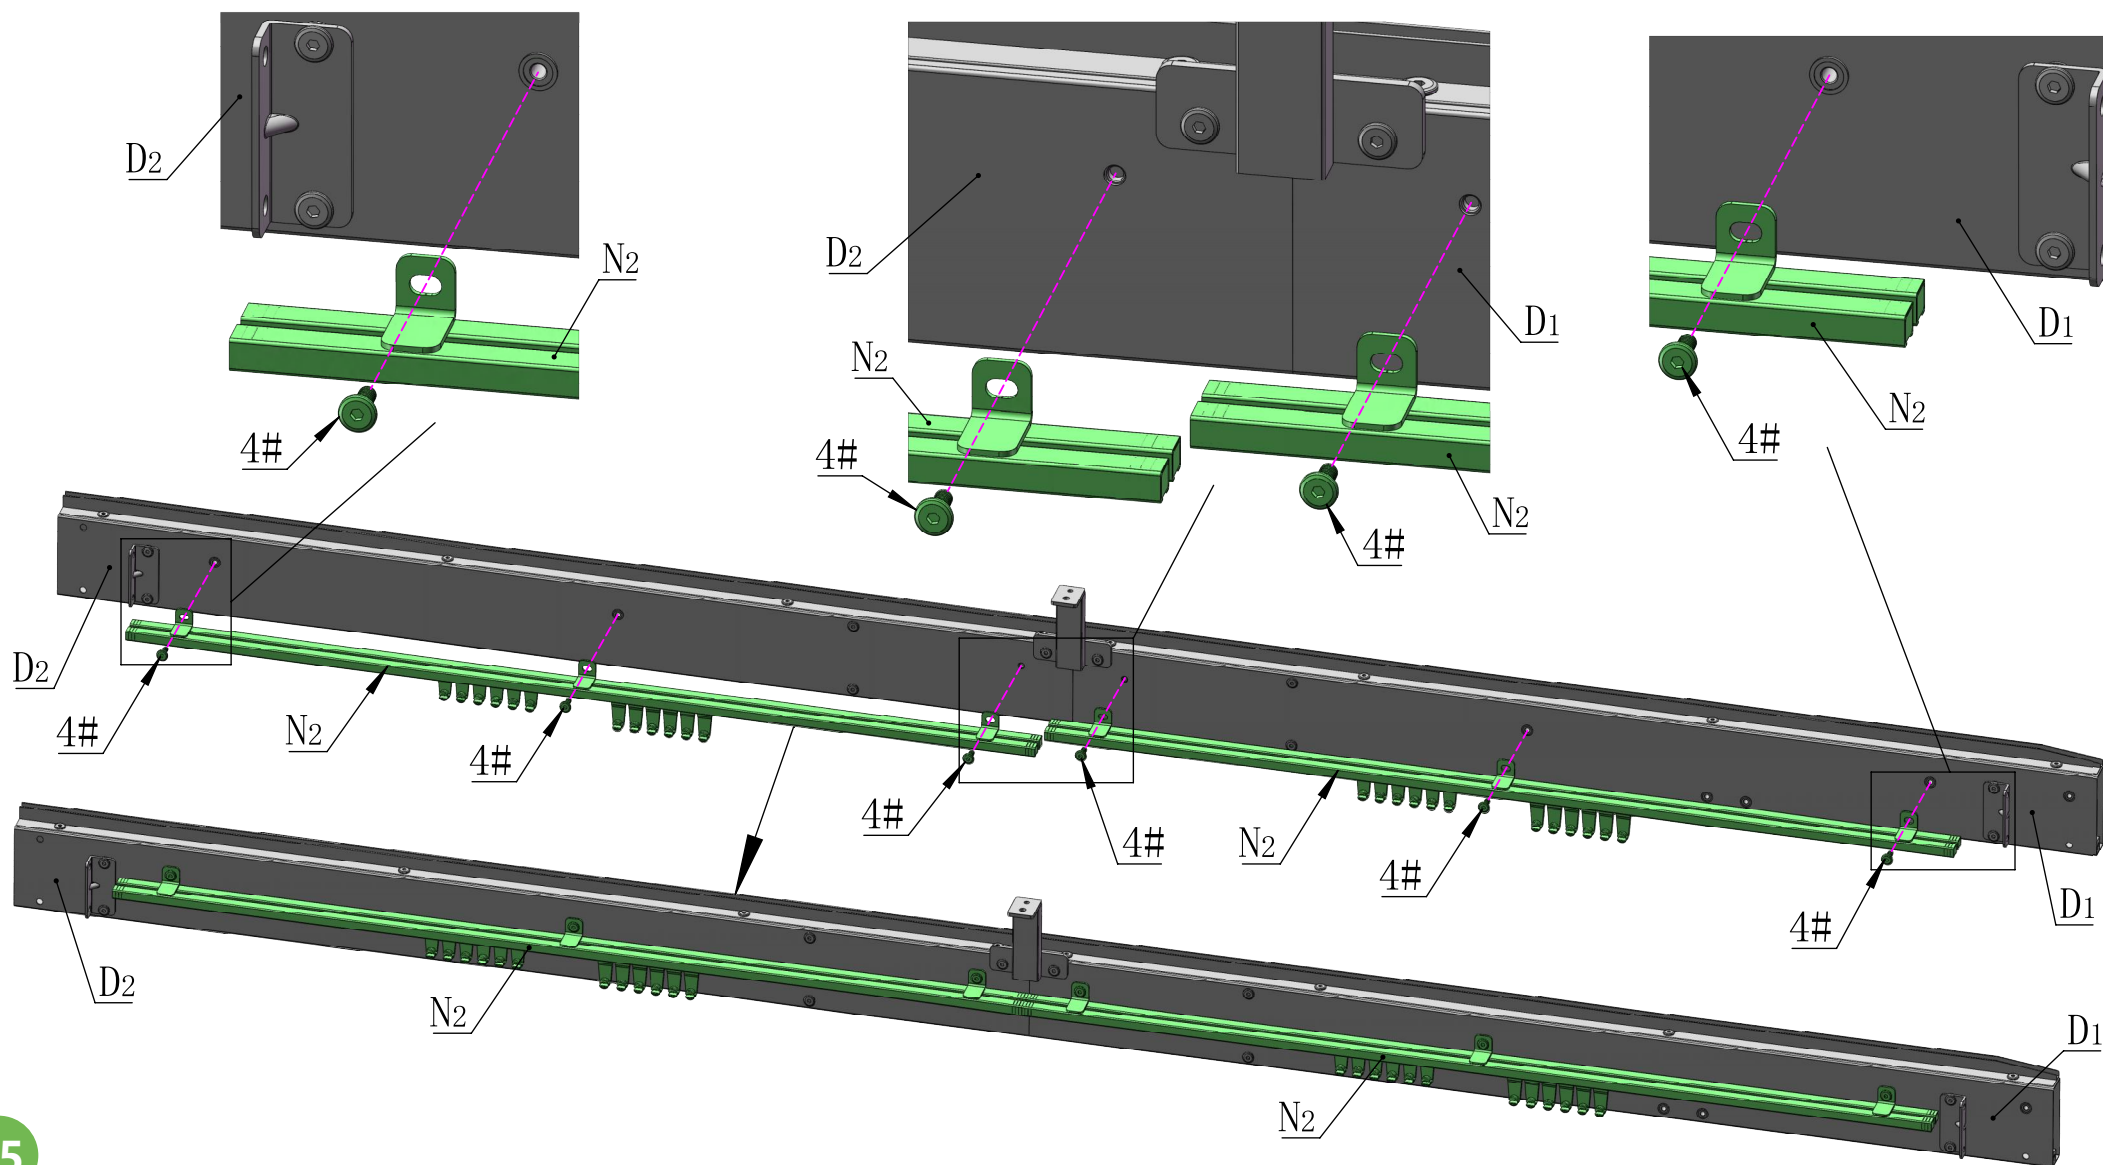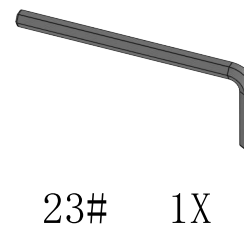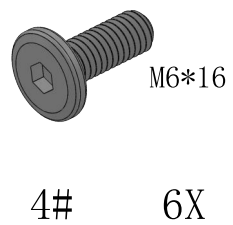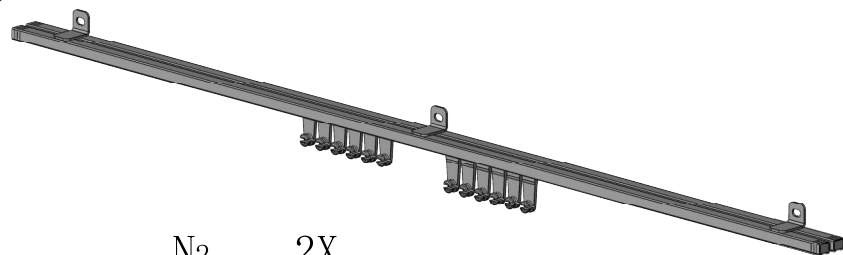


Rear Beam Assembly

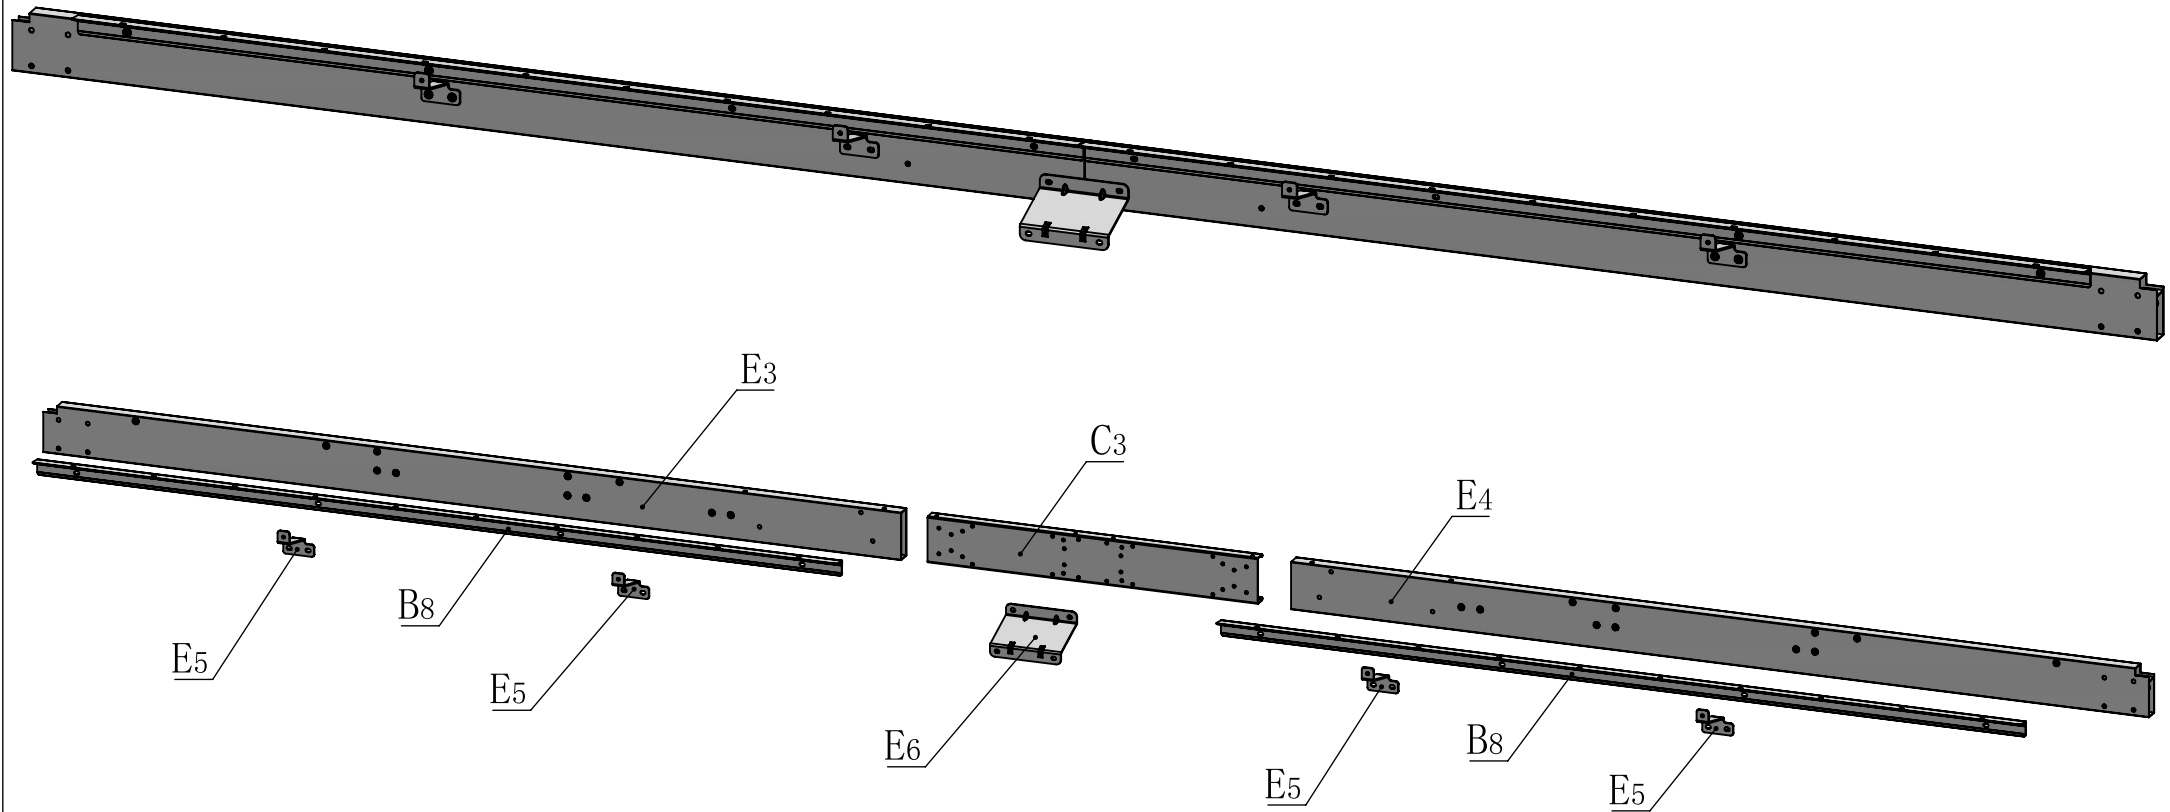

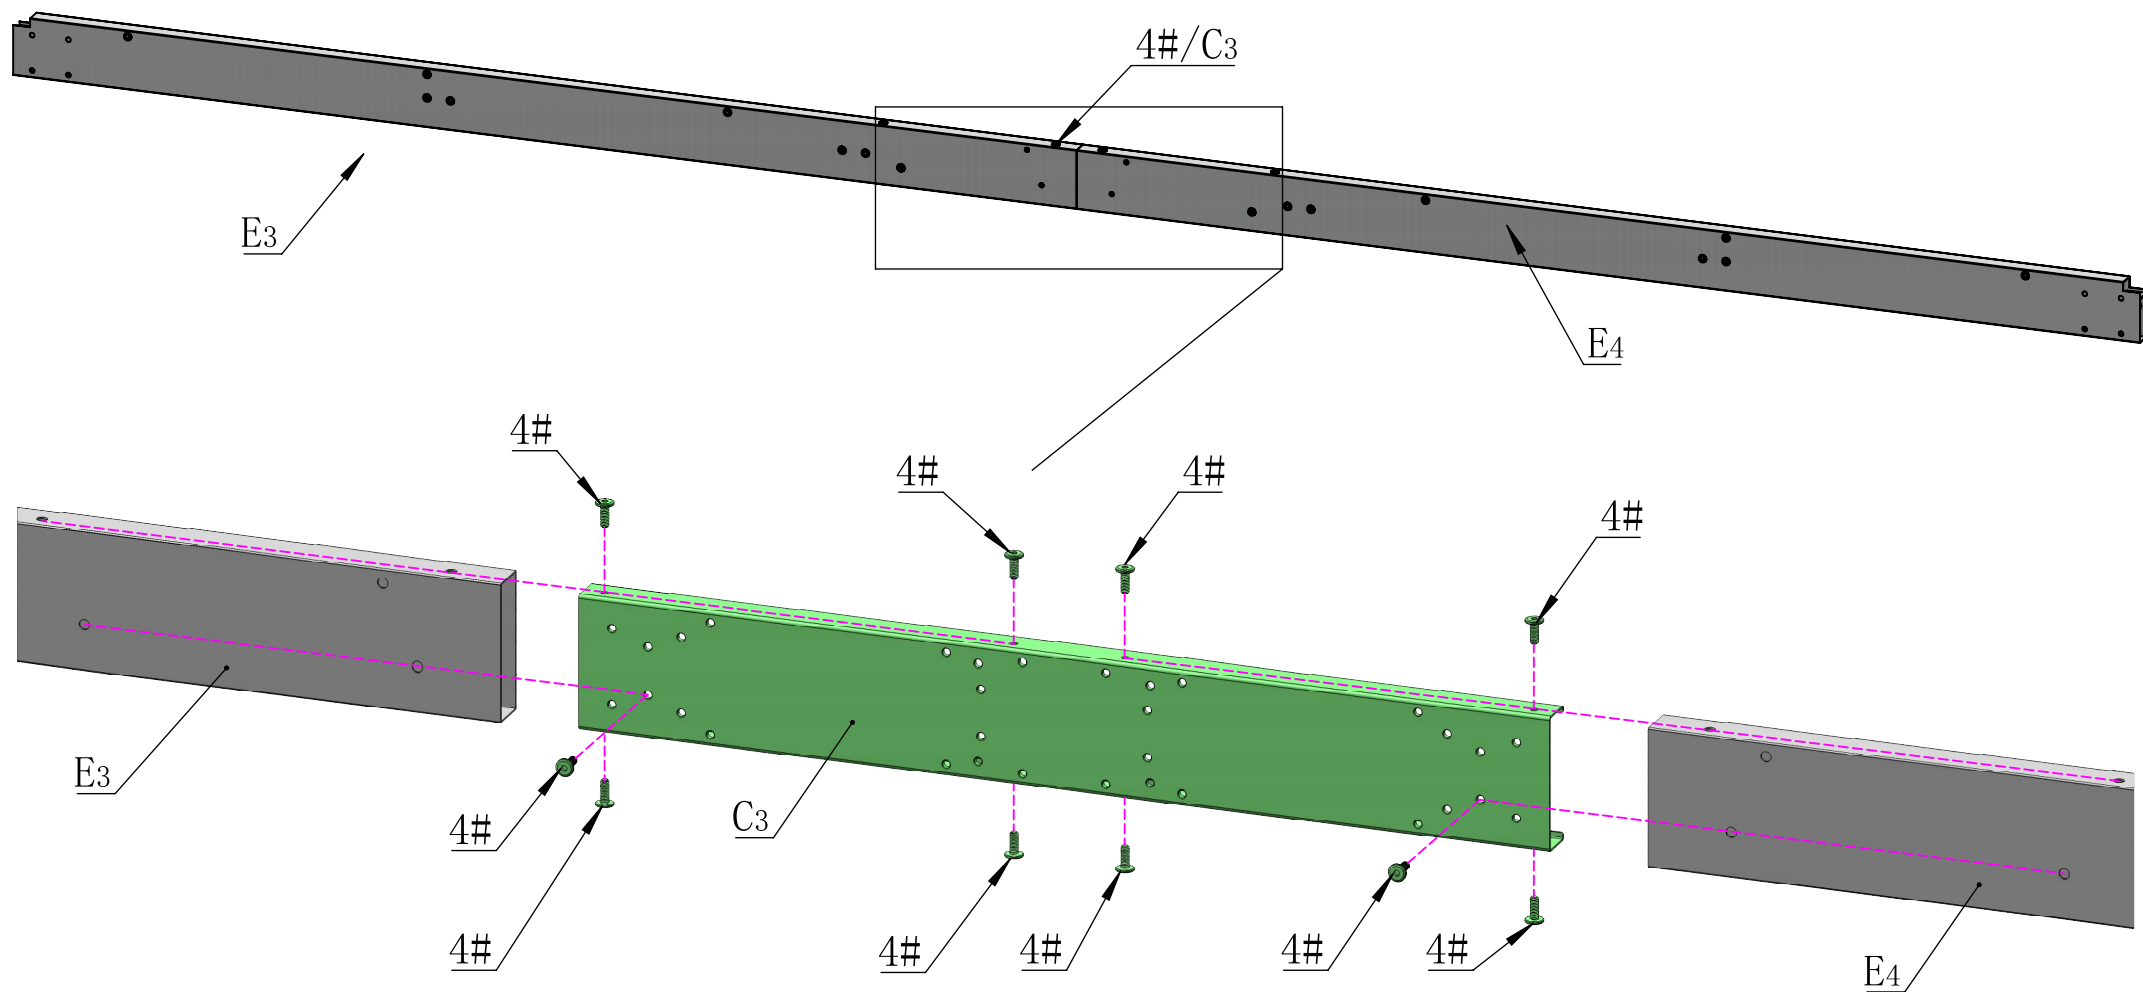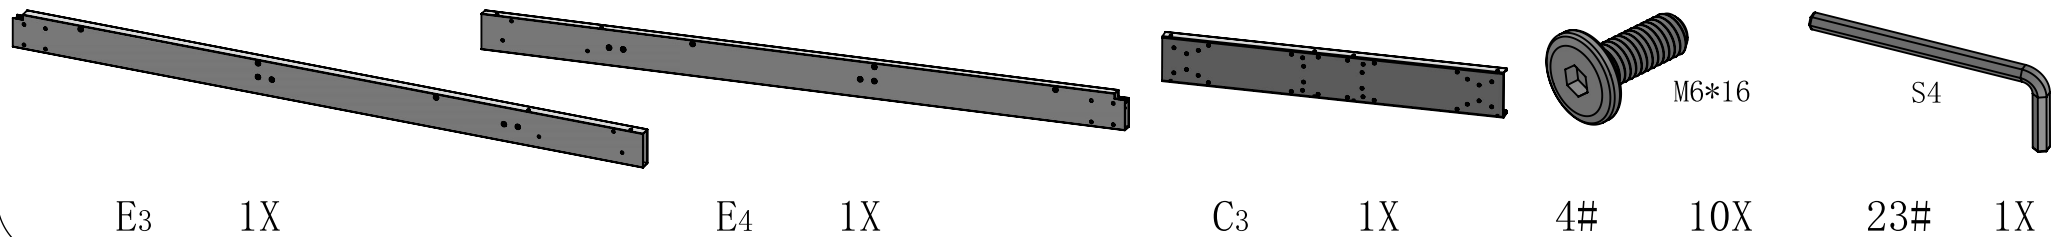

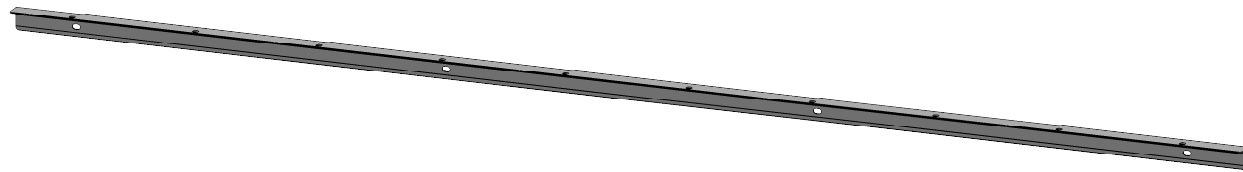


B8 2X

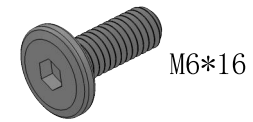



M6*16


4# 8X

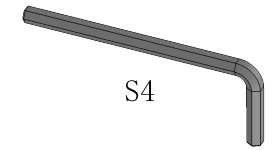

S4


23# 1X

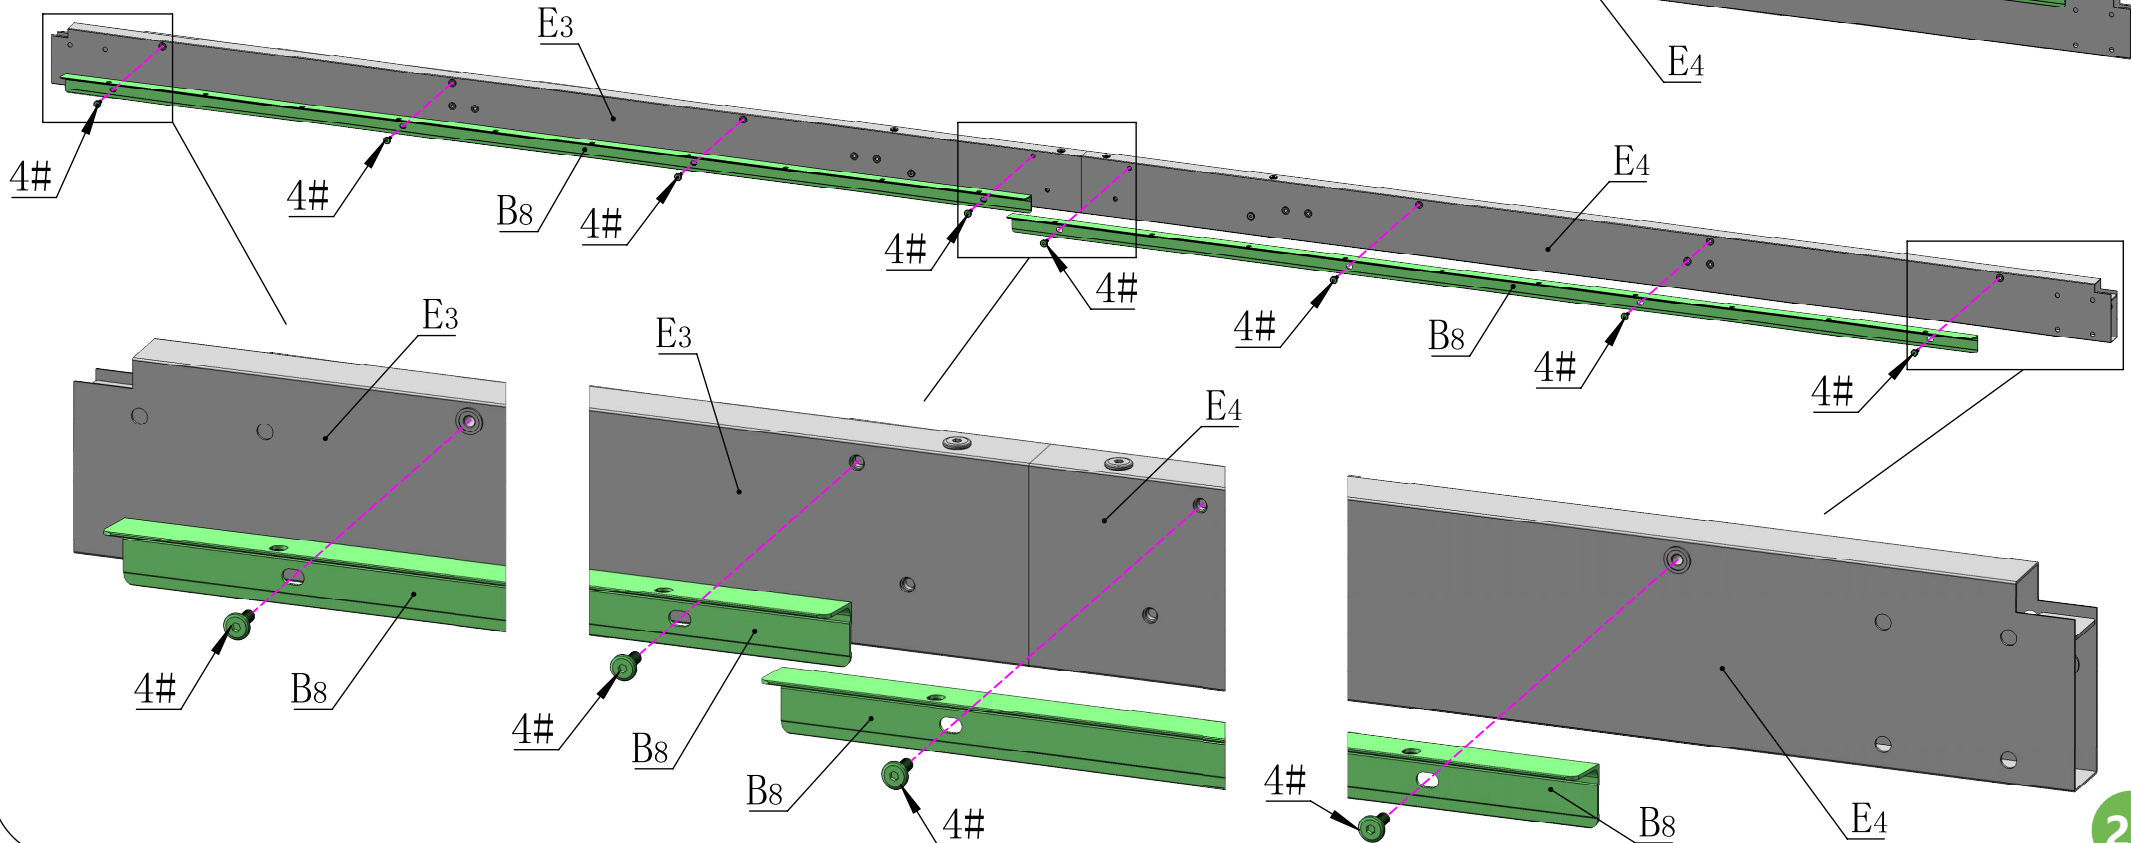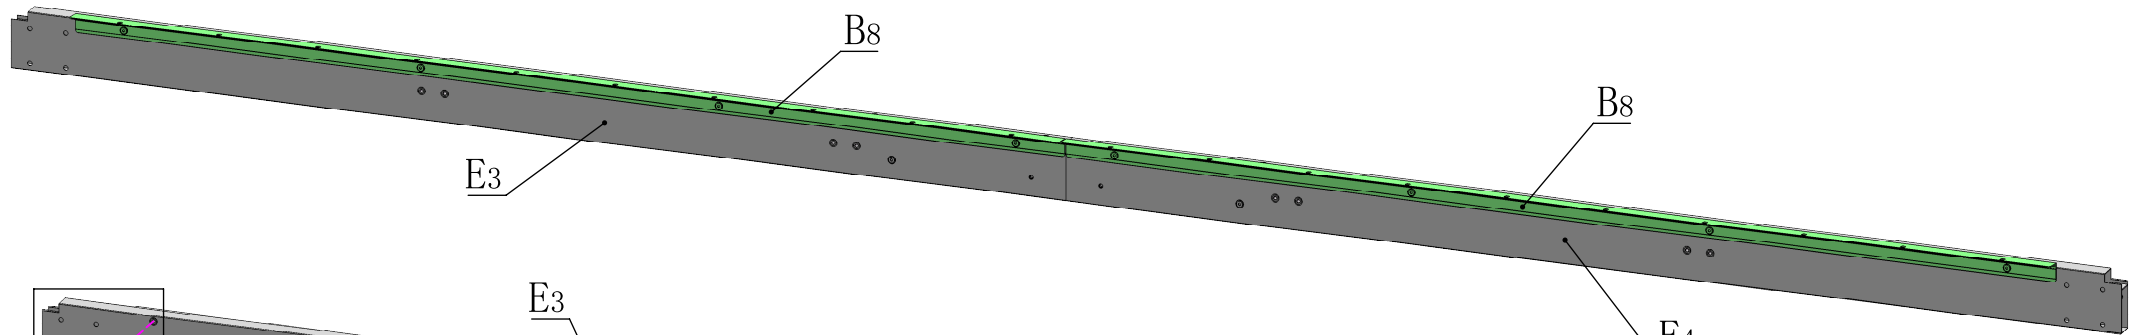

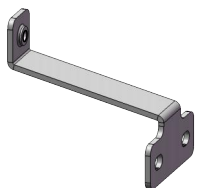

E5


4X

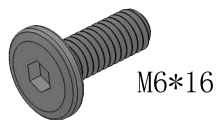

4#

M6*16


8X

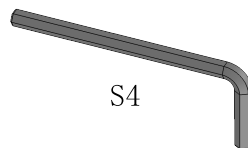


23#


S4

1X

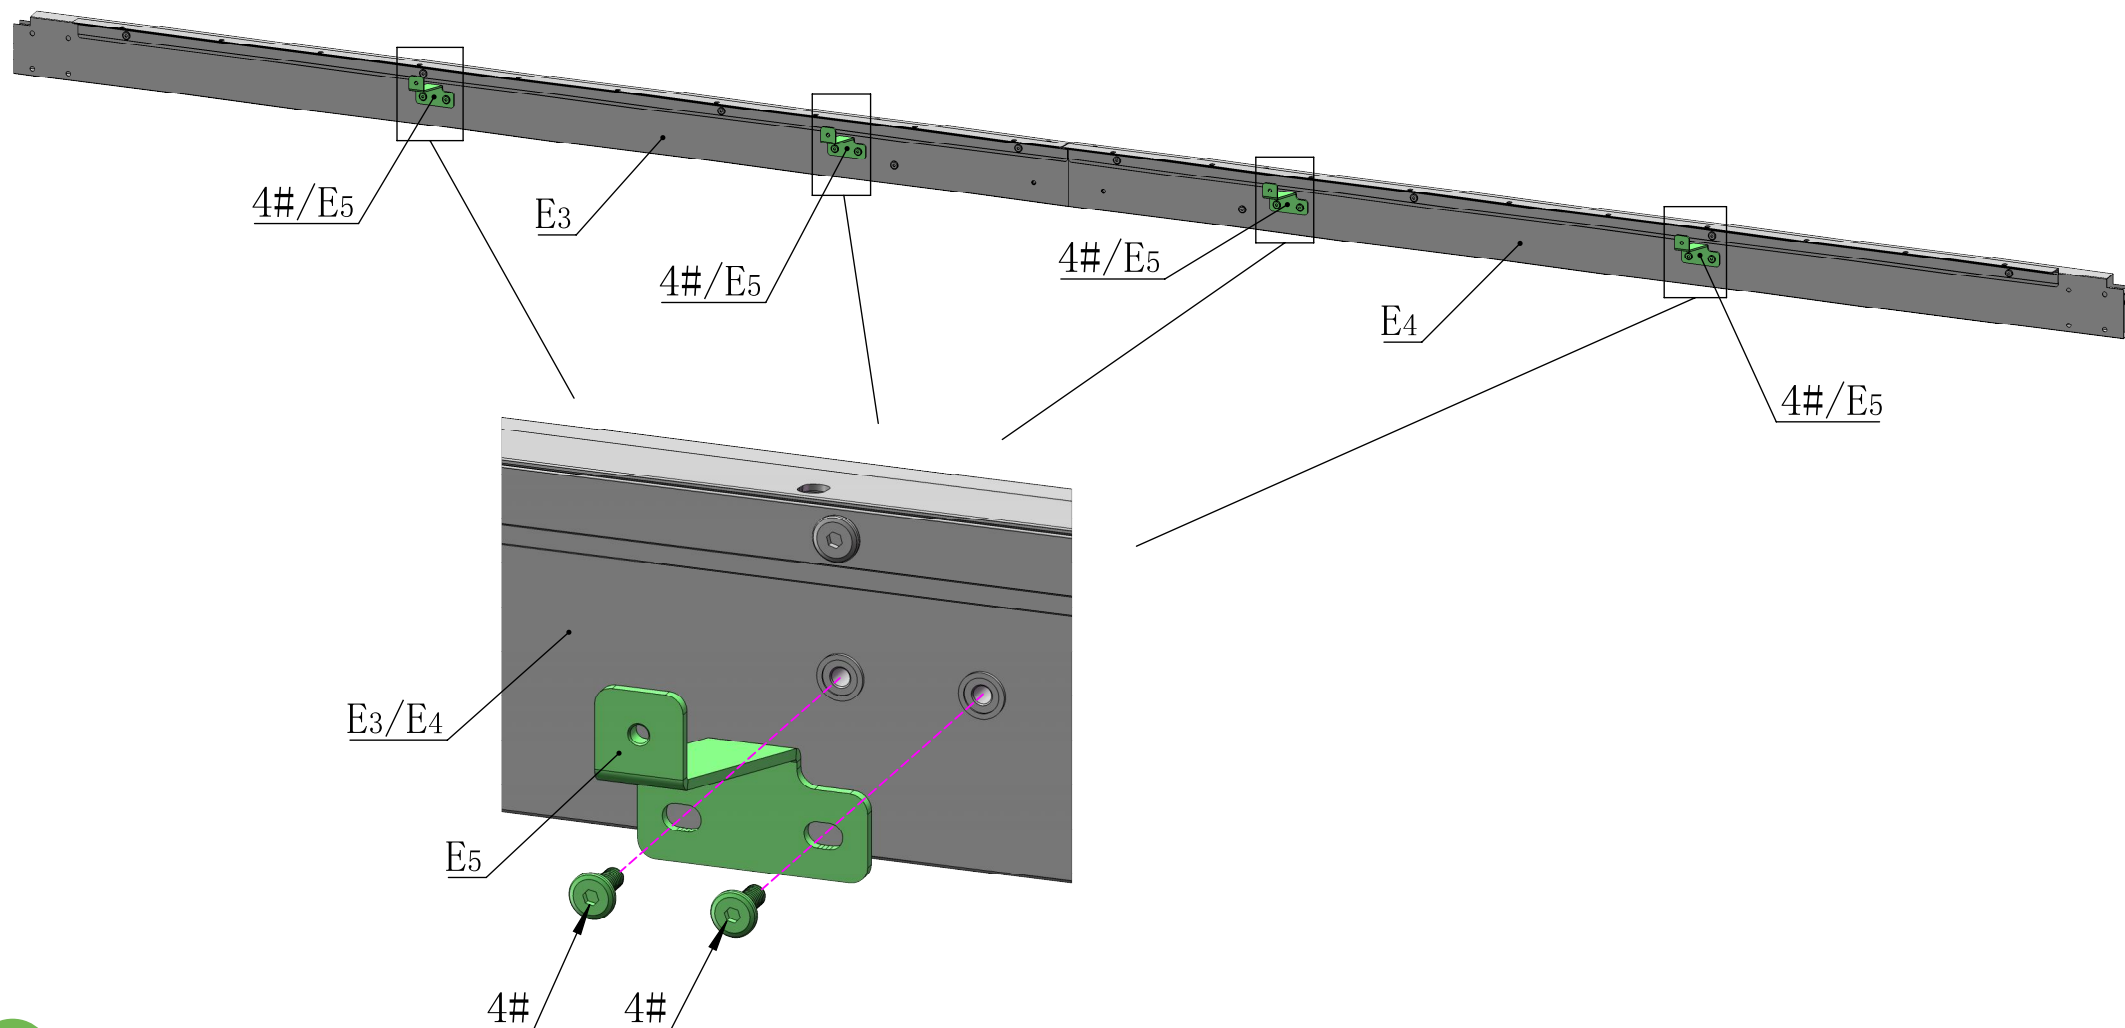


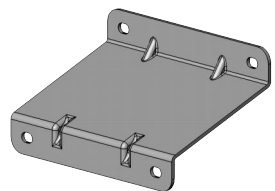


E6 1X

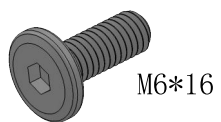


4# 2X

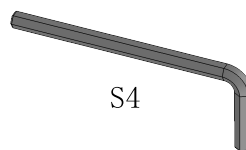


23# 1X

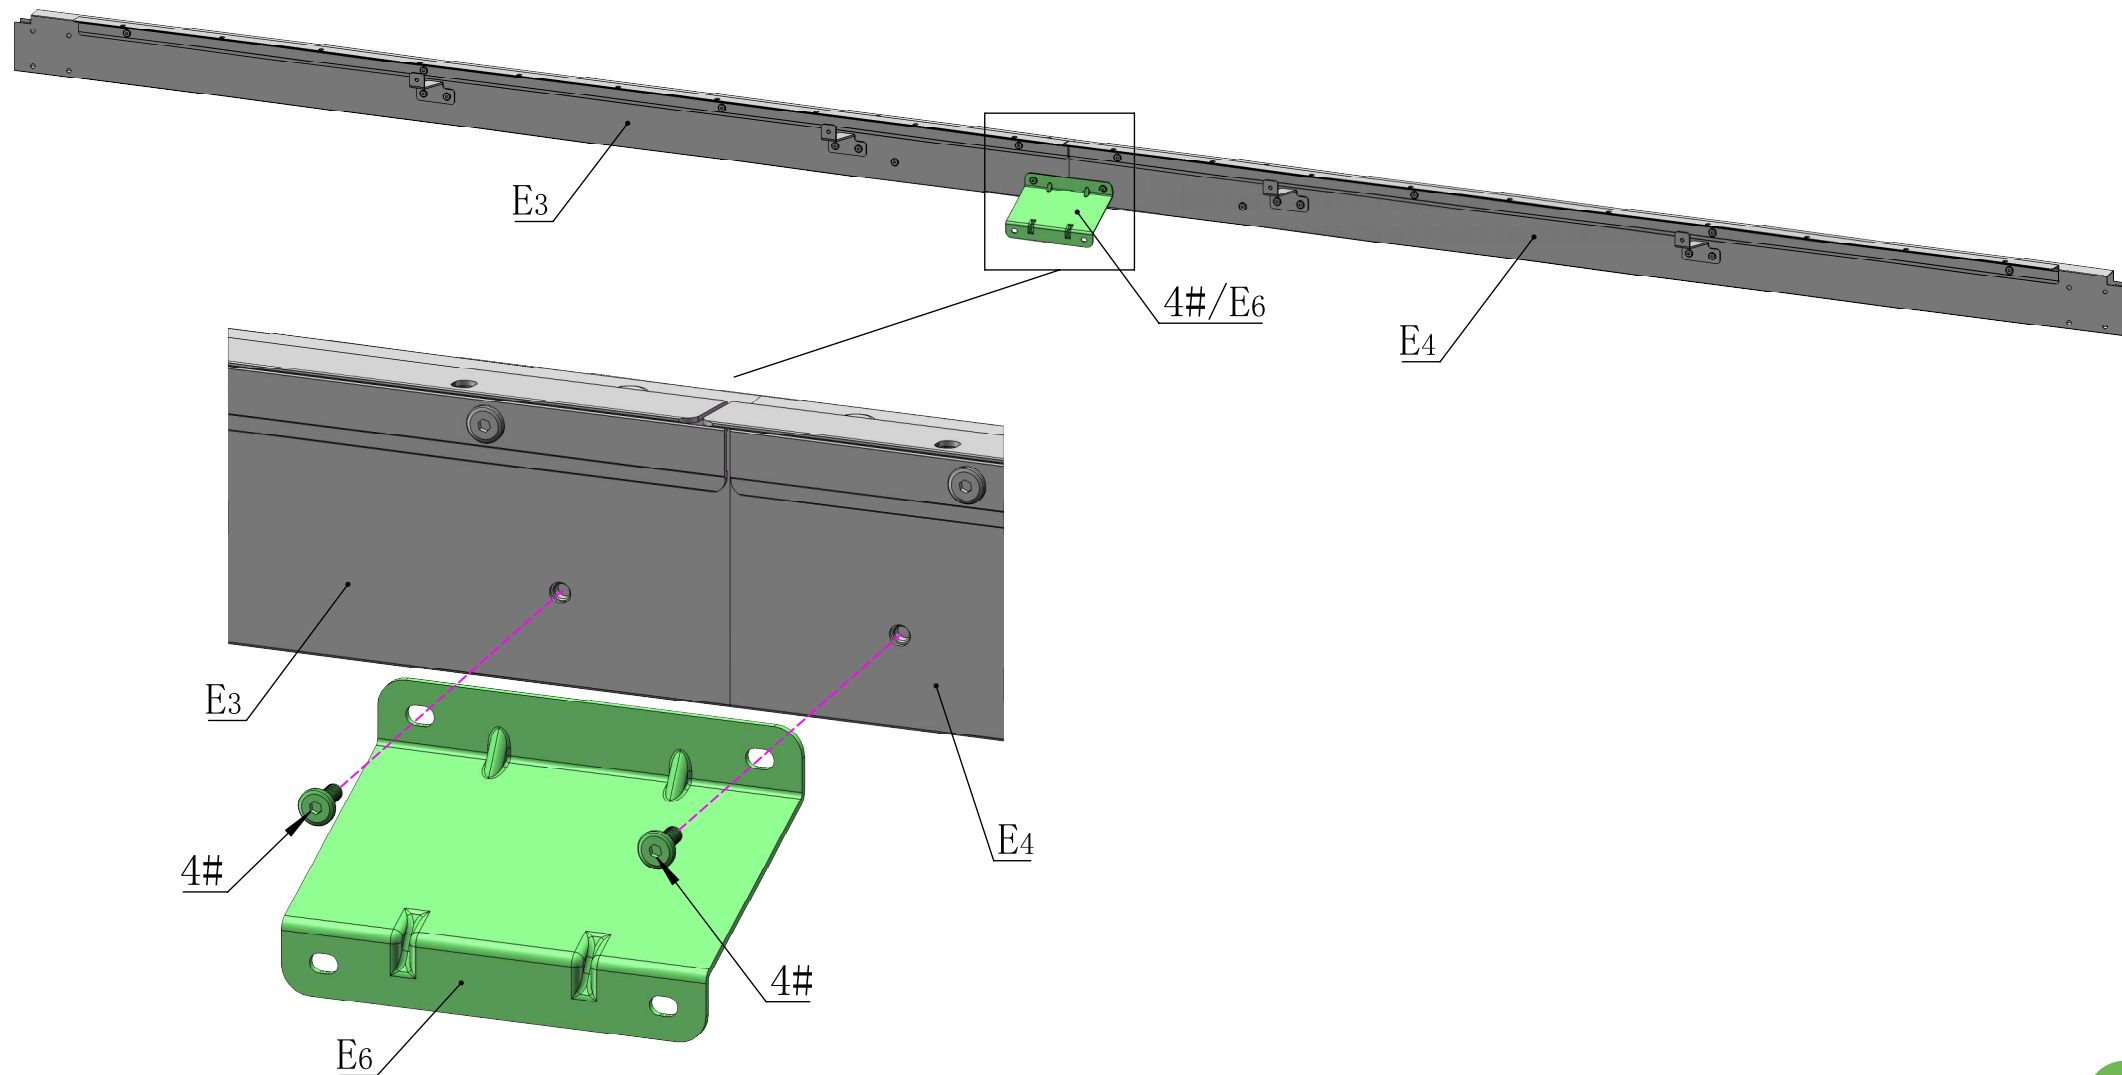


Frame Assembly

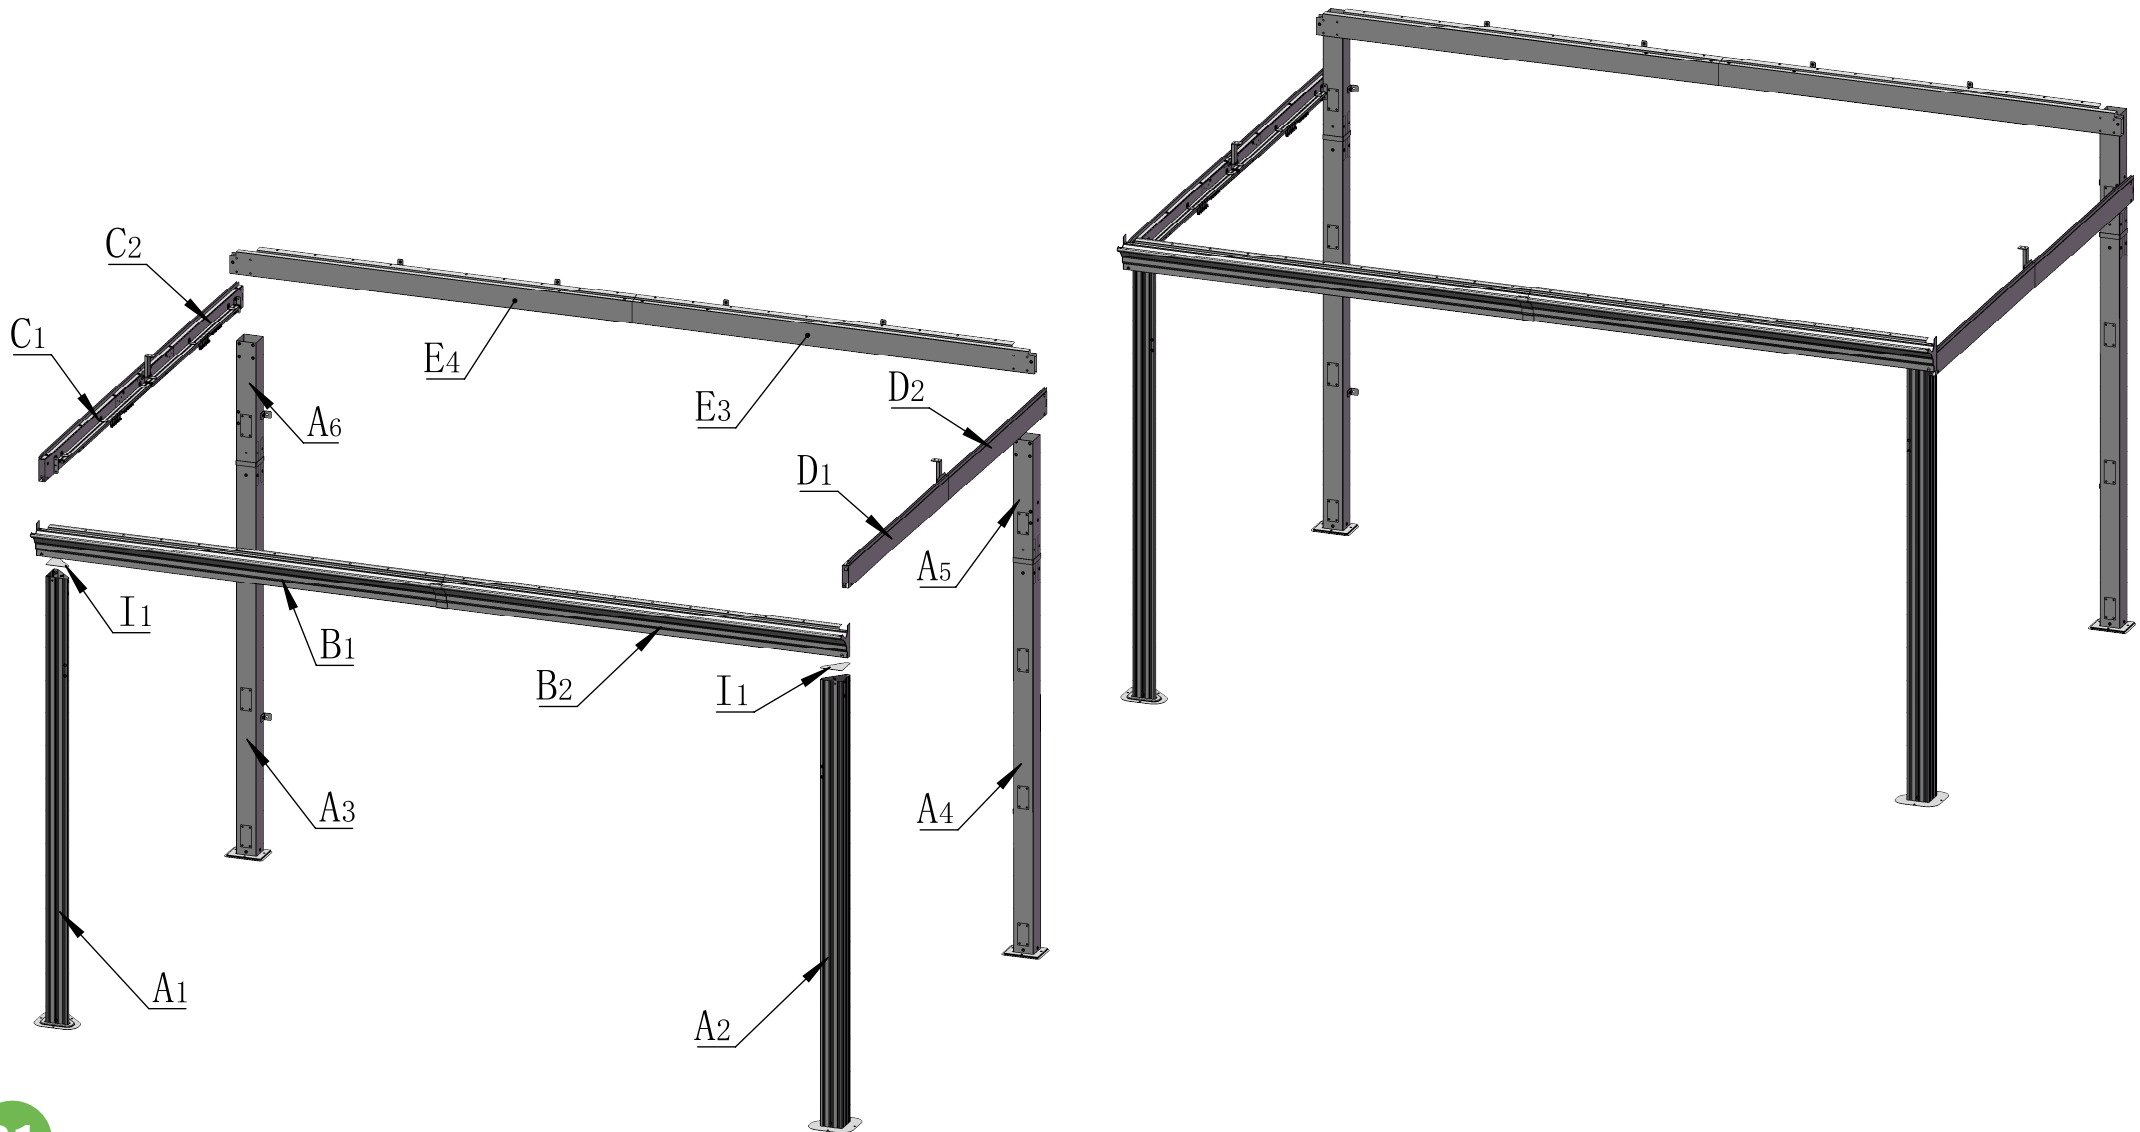

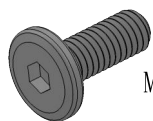

M6*16

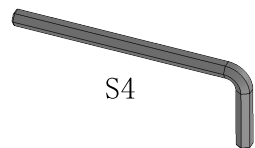


S4


4#

6X

23#

1X

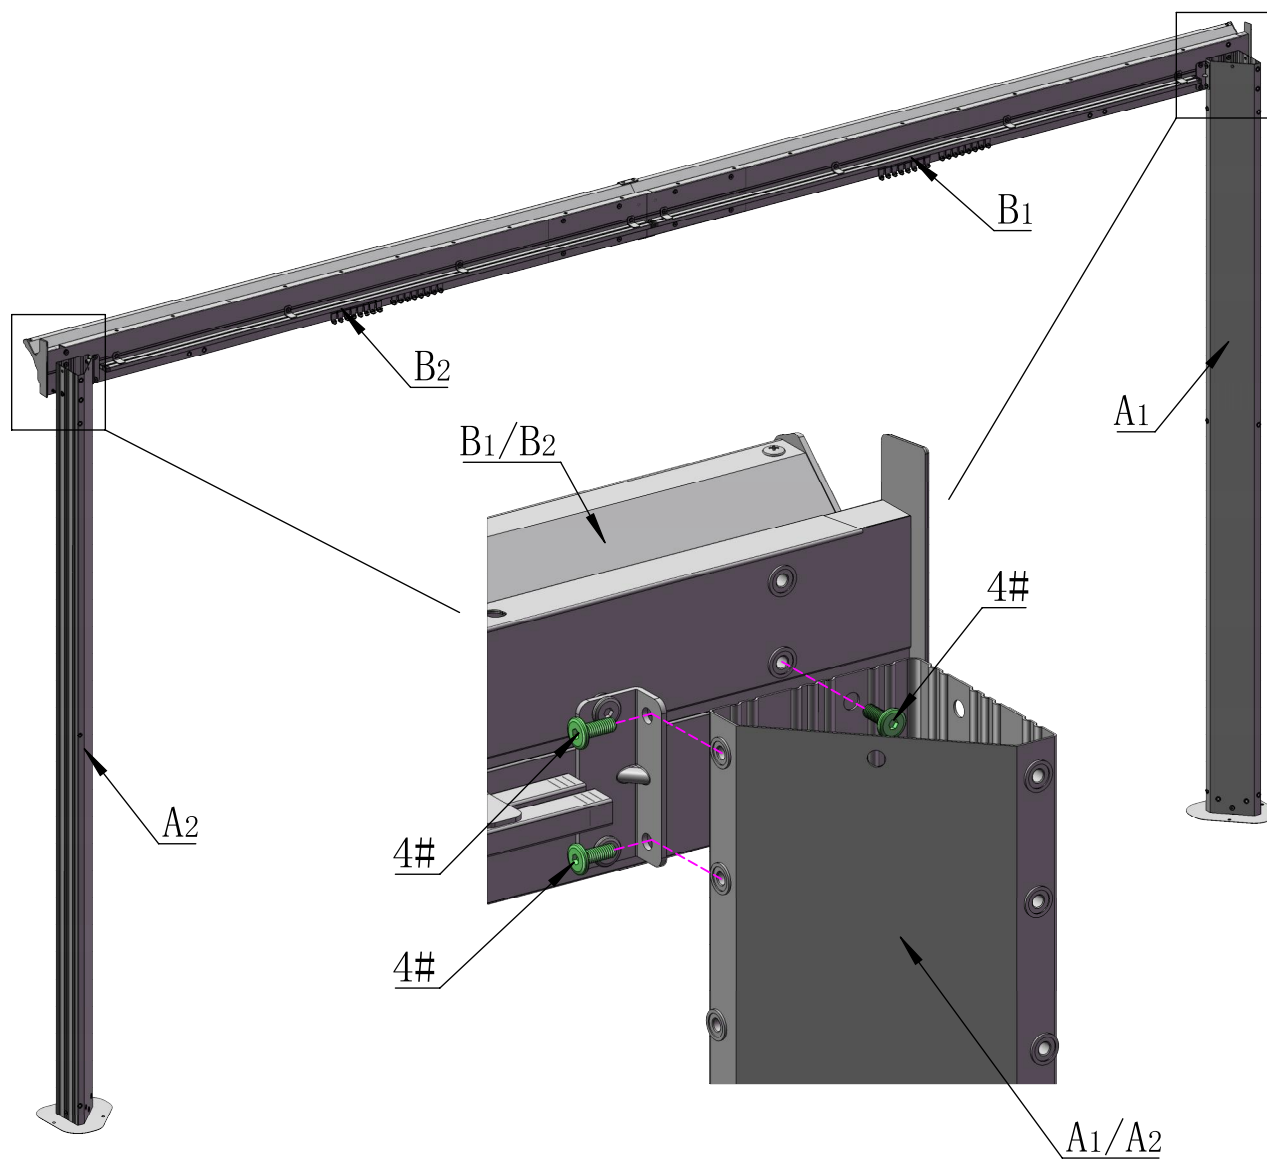



M6*16




7#

2X



8#

6X

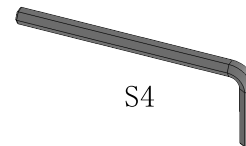


S4


23#

1X

4#


10X

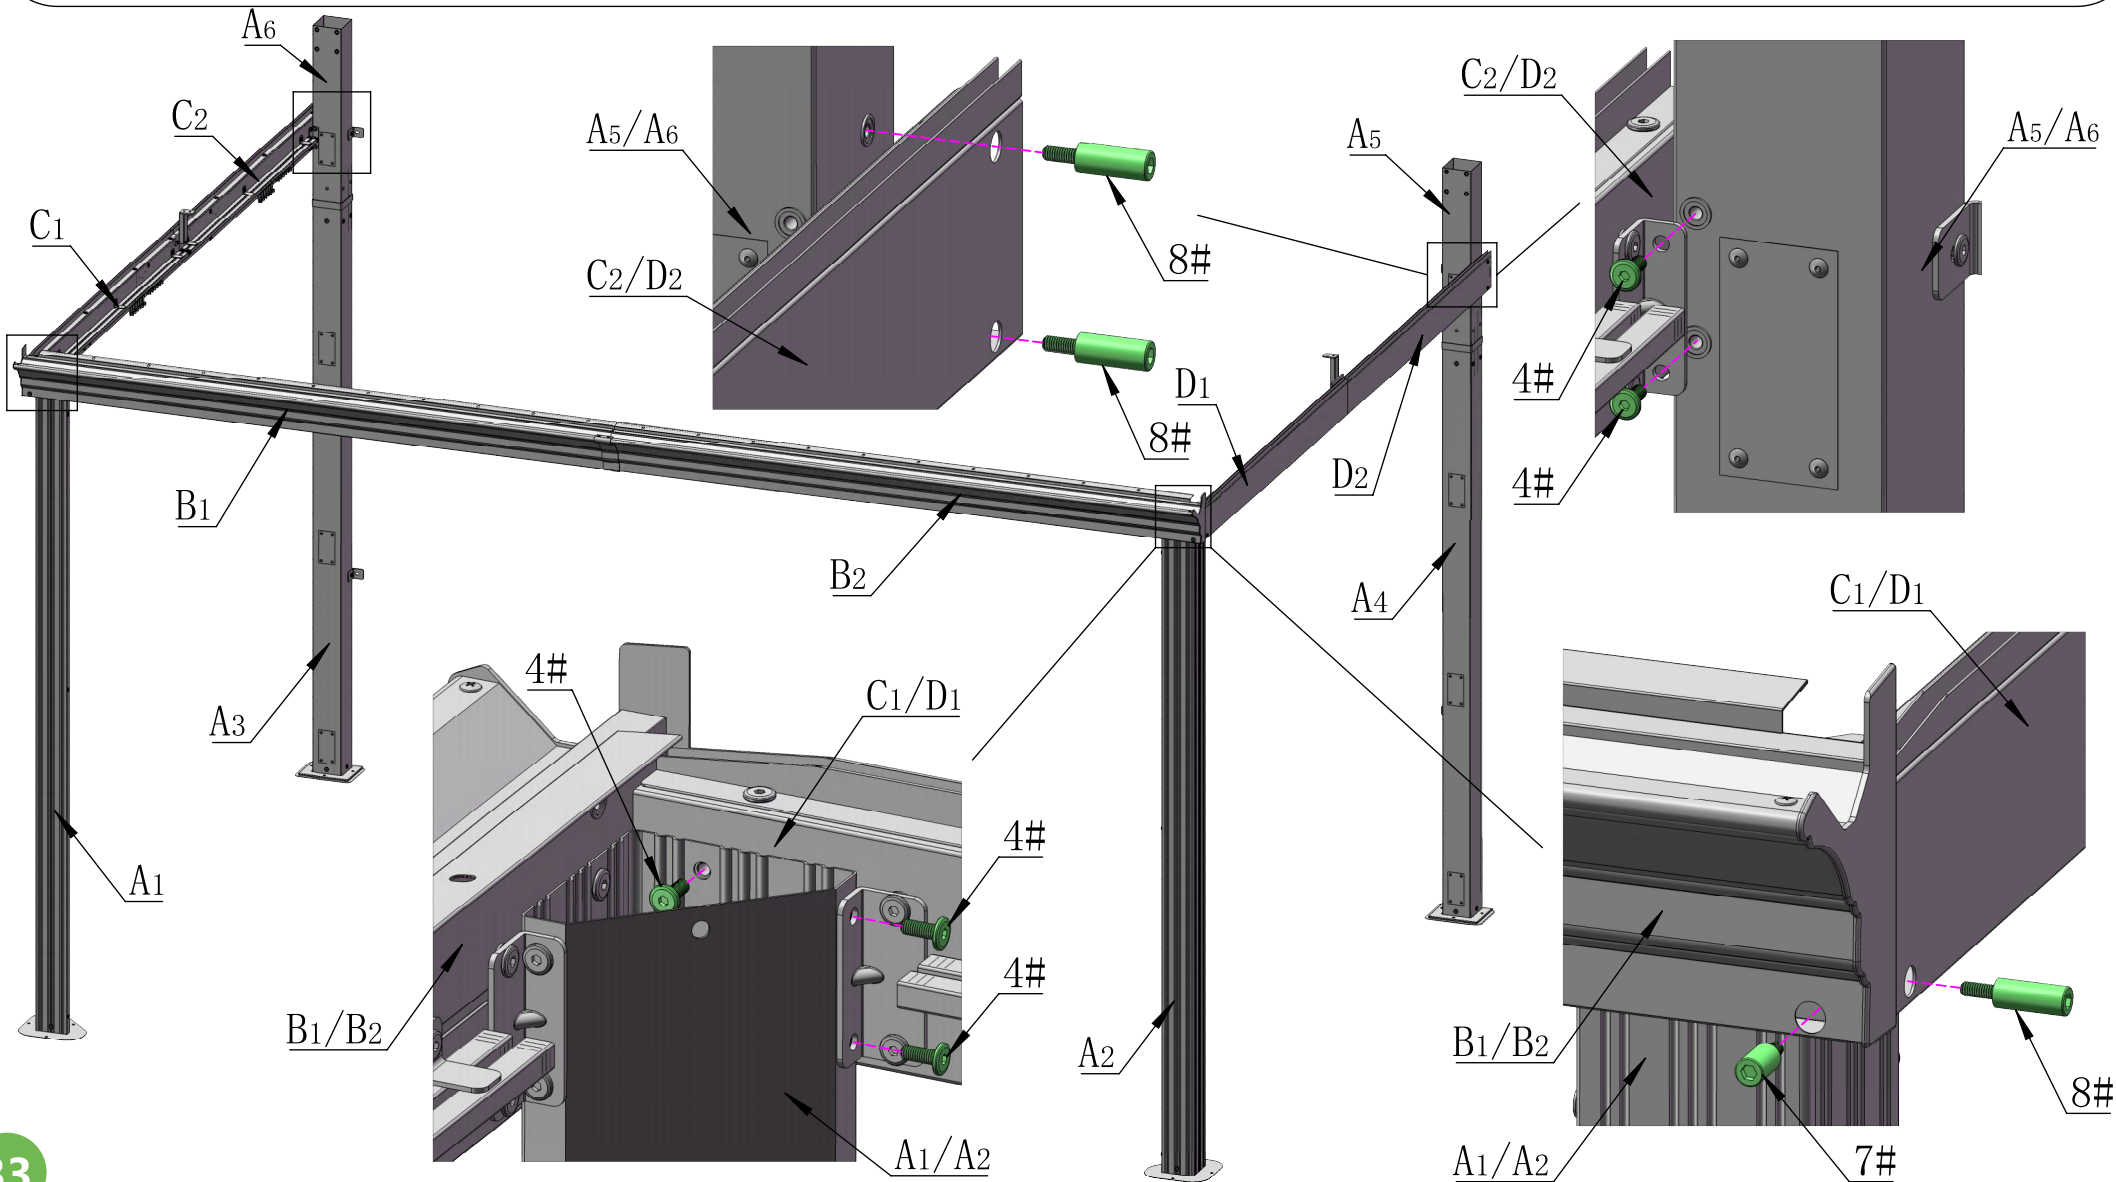

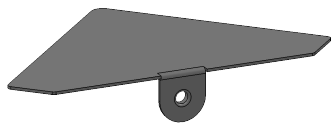

I₁


2X

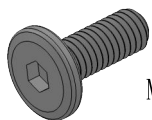

M6*16

4#


2X

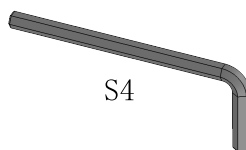


S4


23#

1X

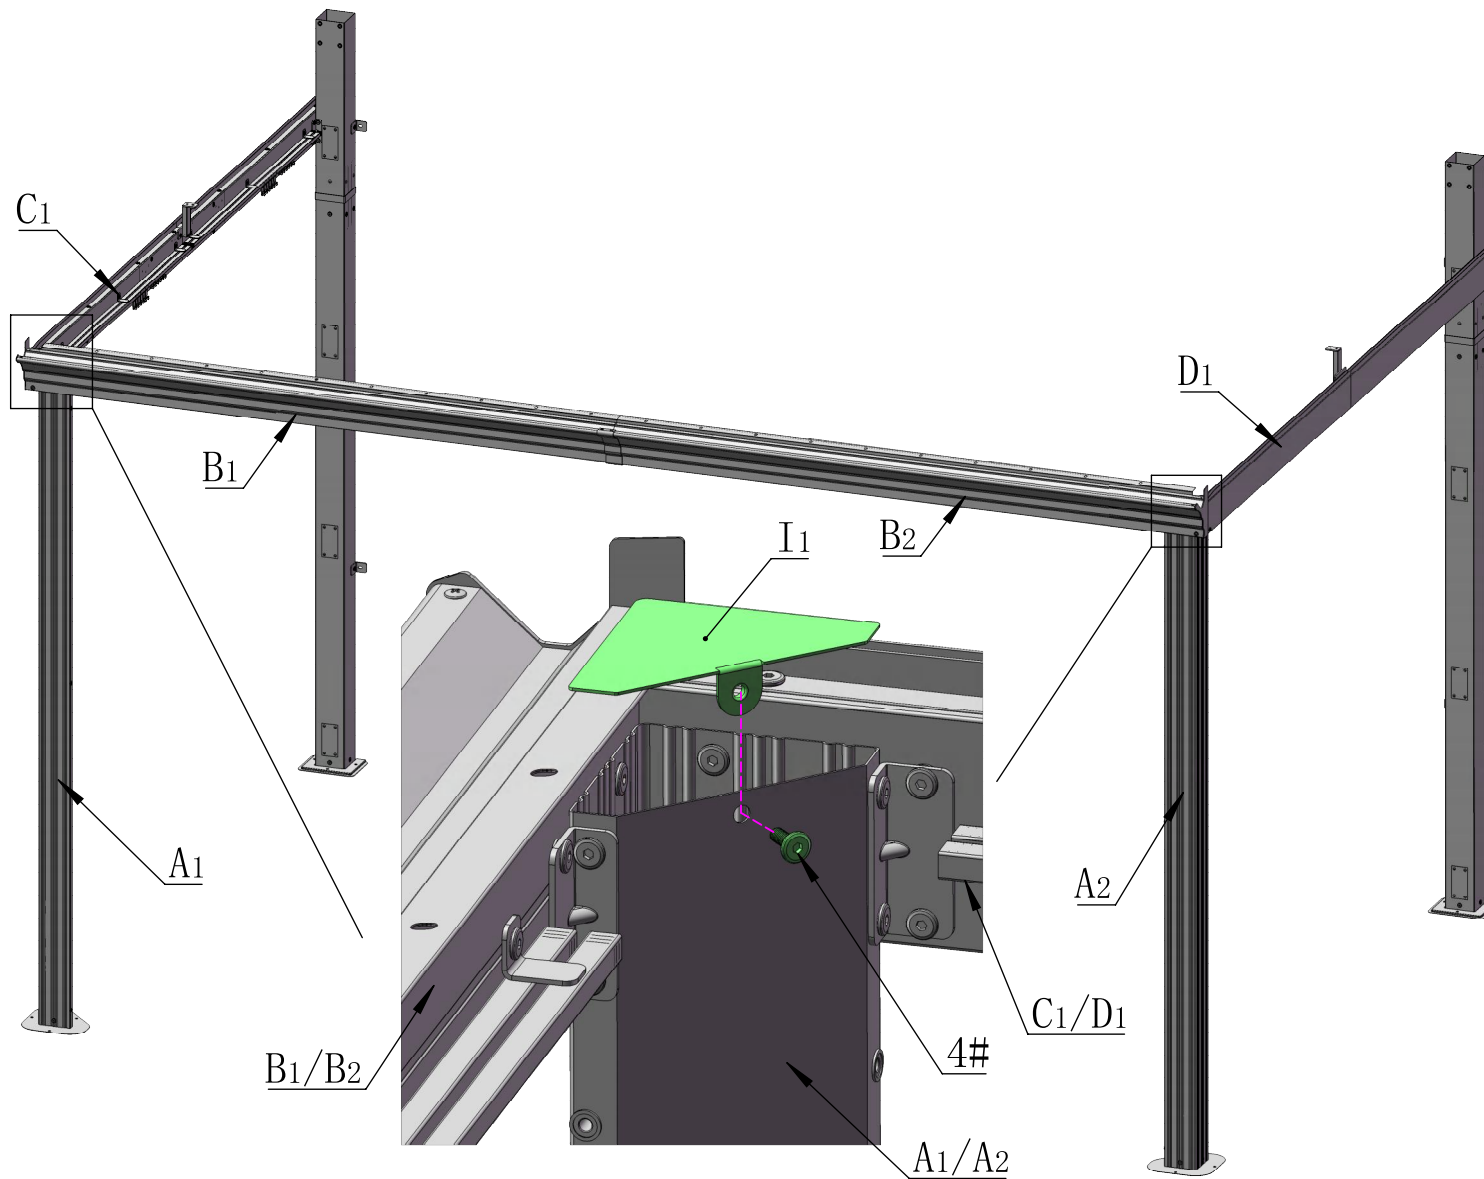

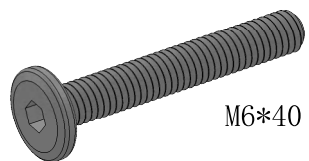

M6*40

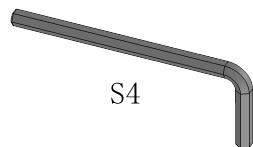


S4


6#

8X


23#

1X

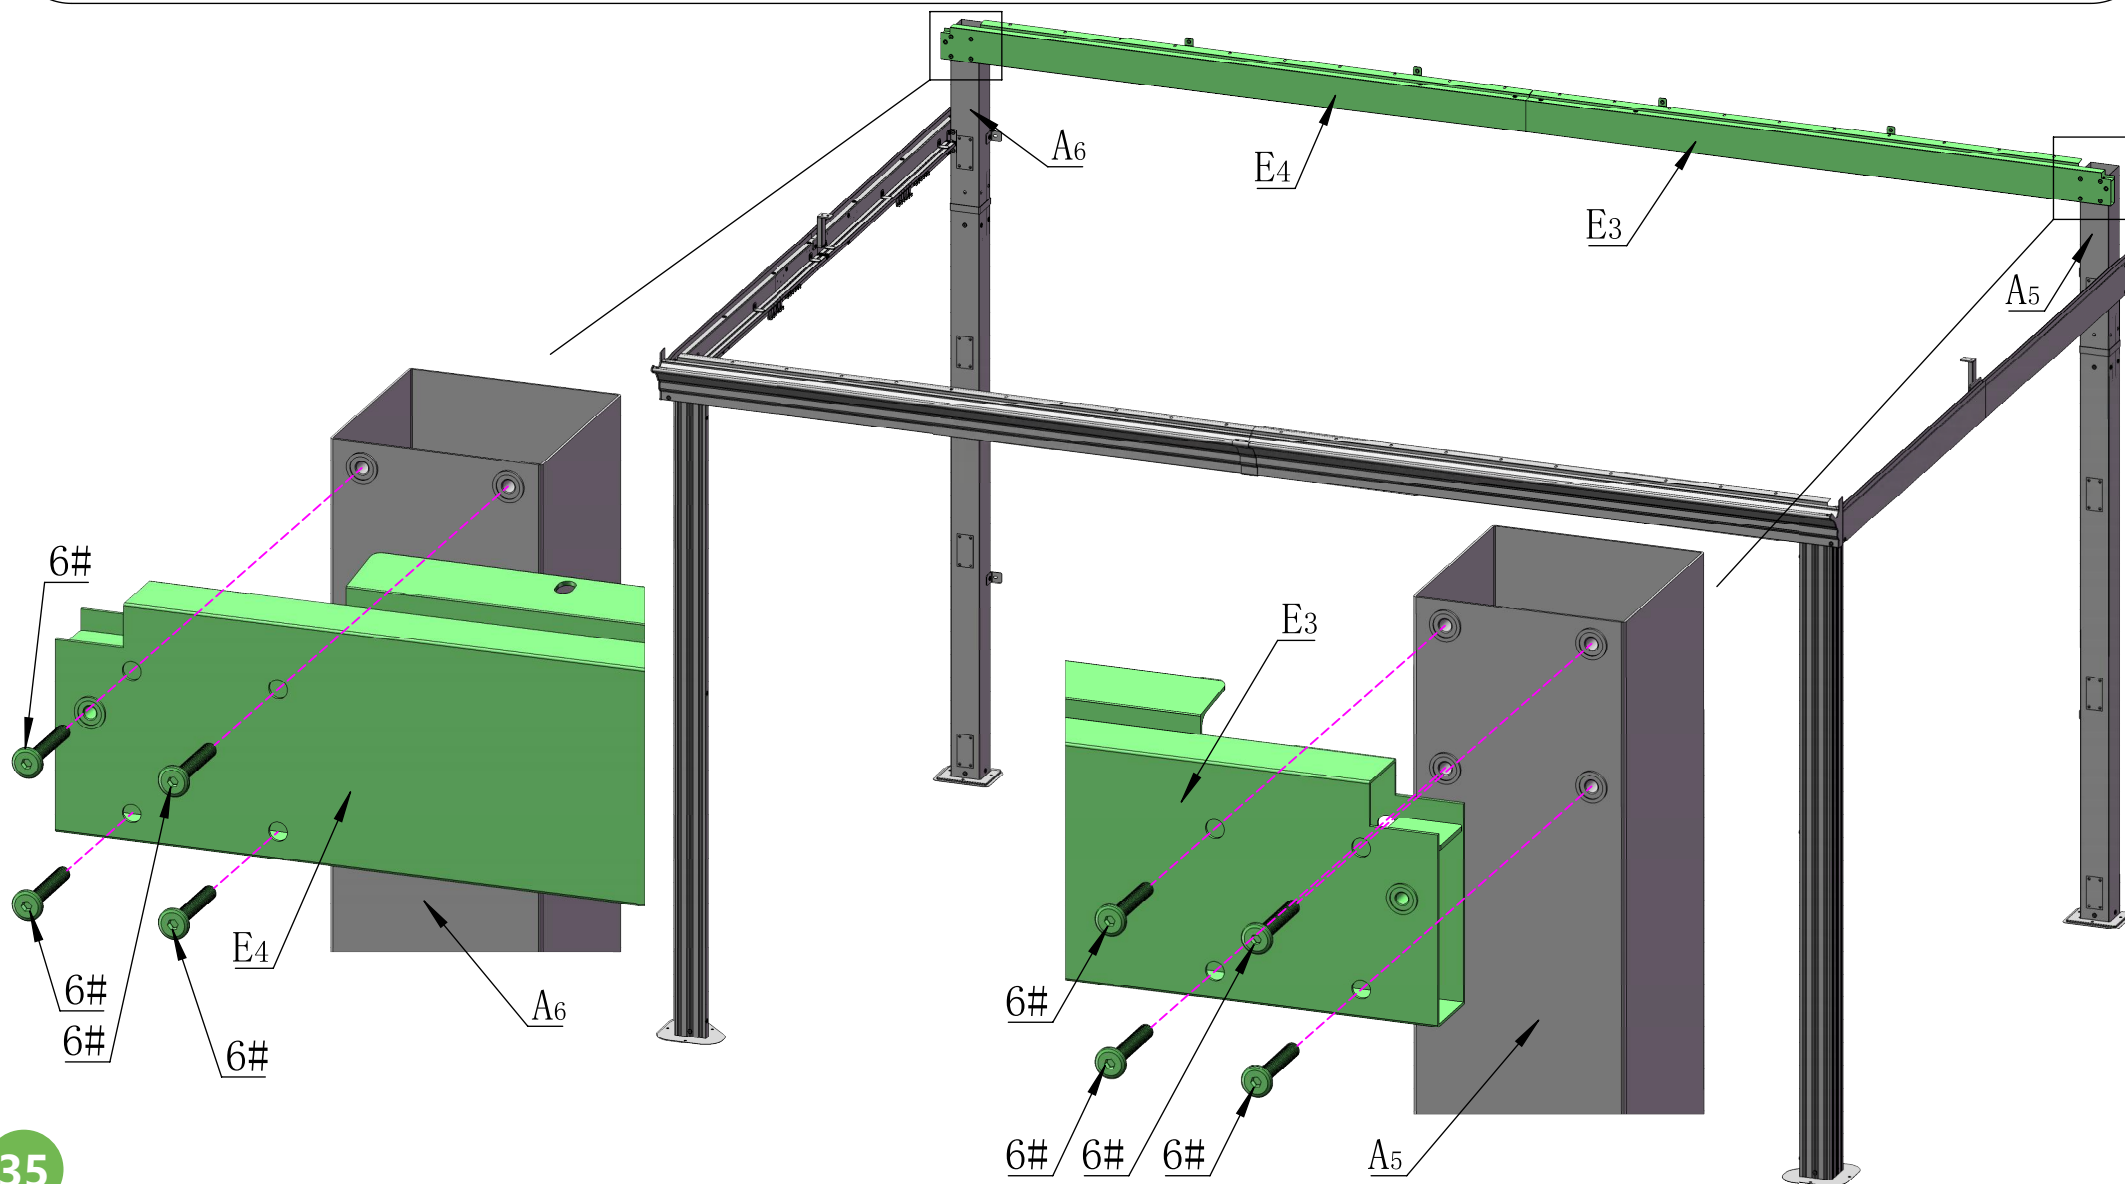


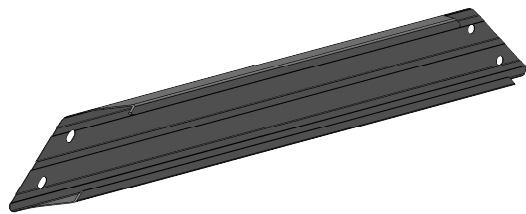


M1 2X

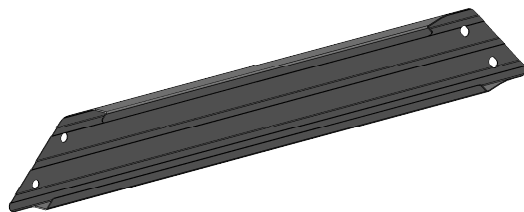

M2 2X



M6*16

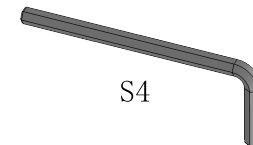

S4


4#

16X

23#


1X



Inside View

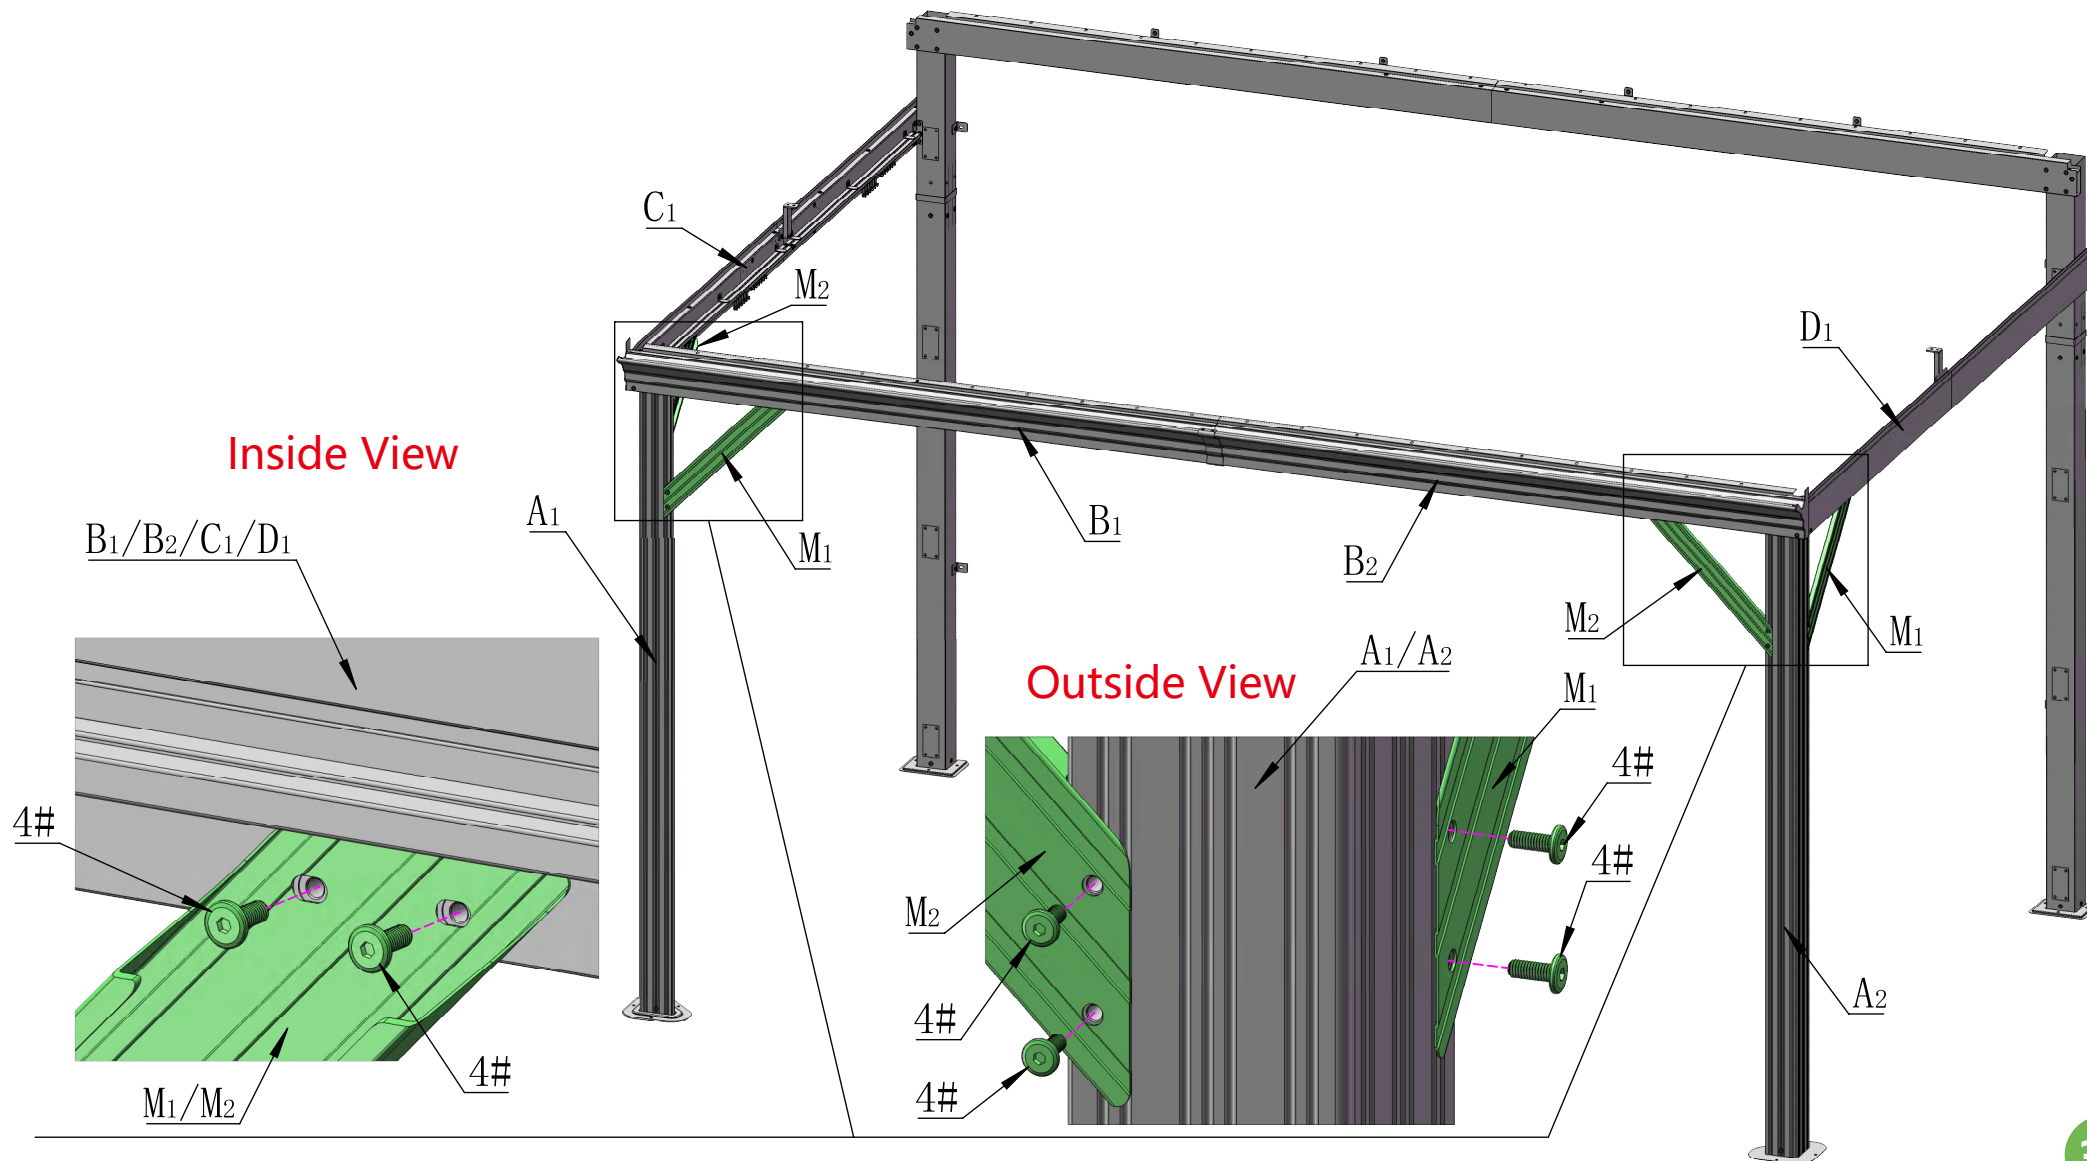


Outside View

Middle Beam Assembly

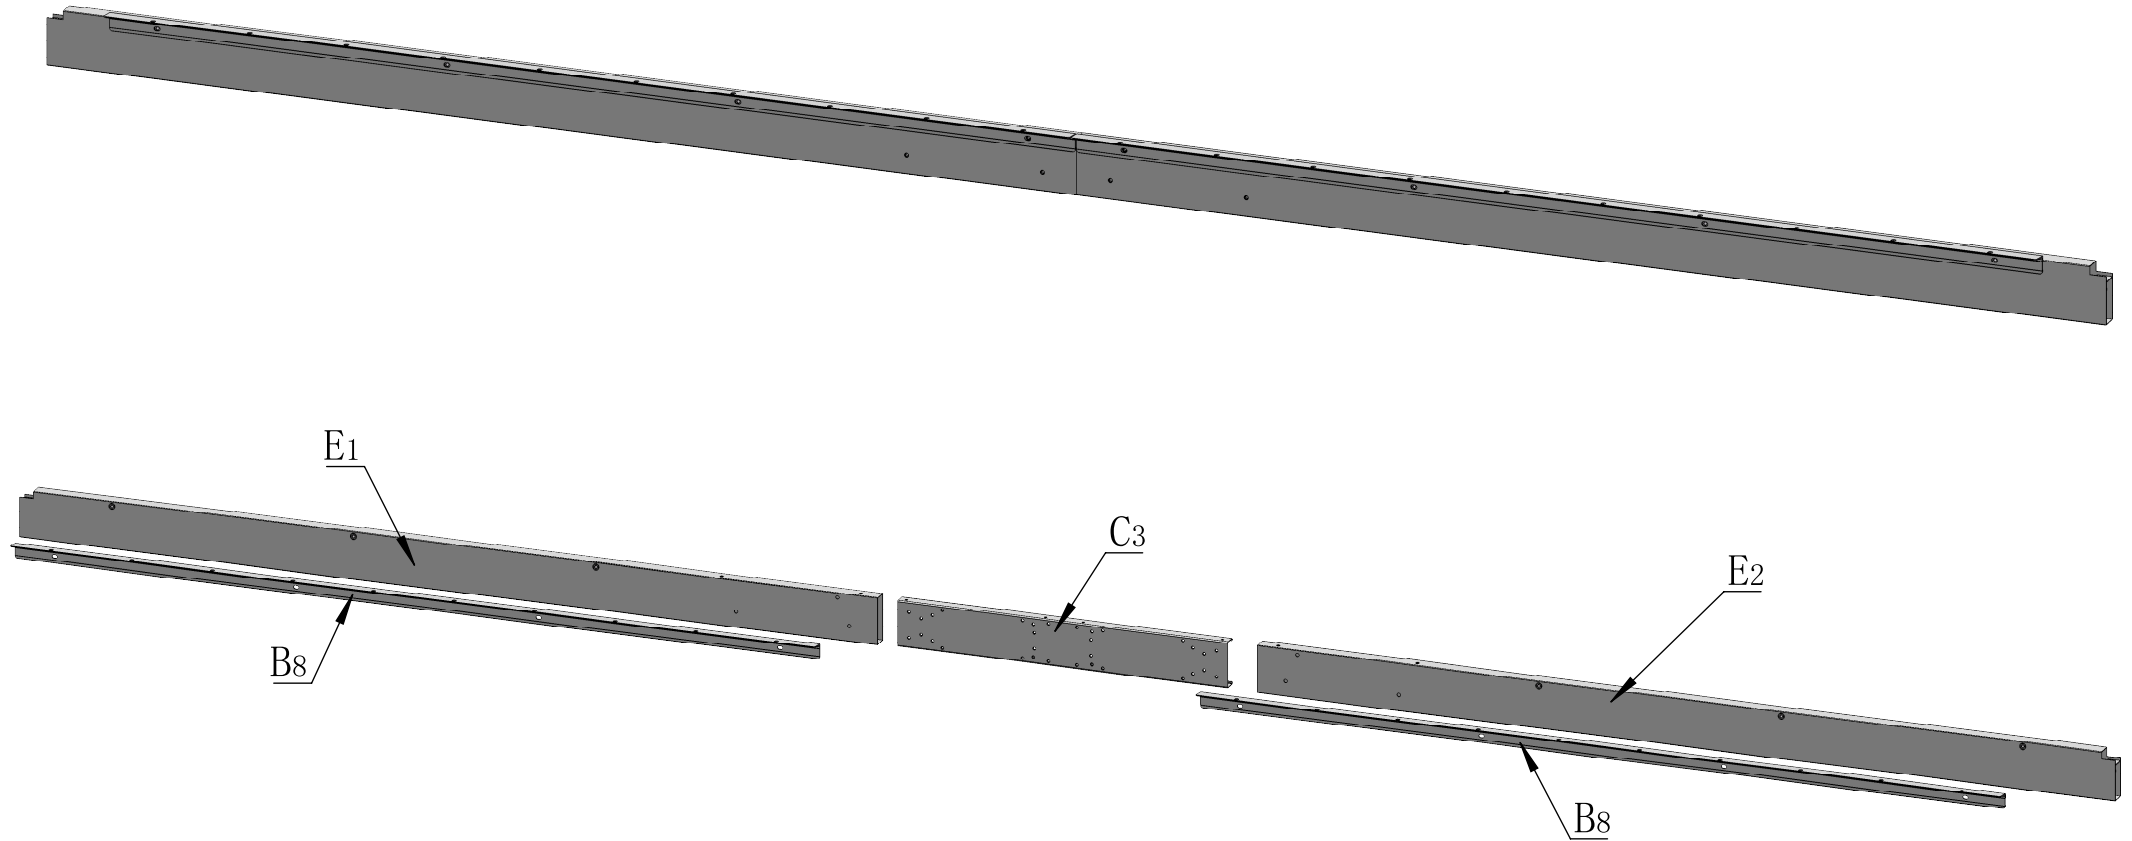


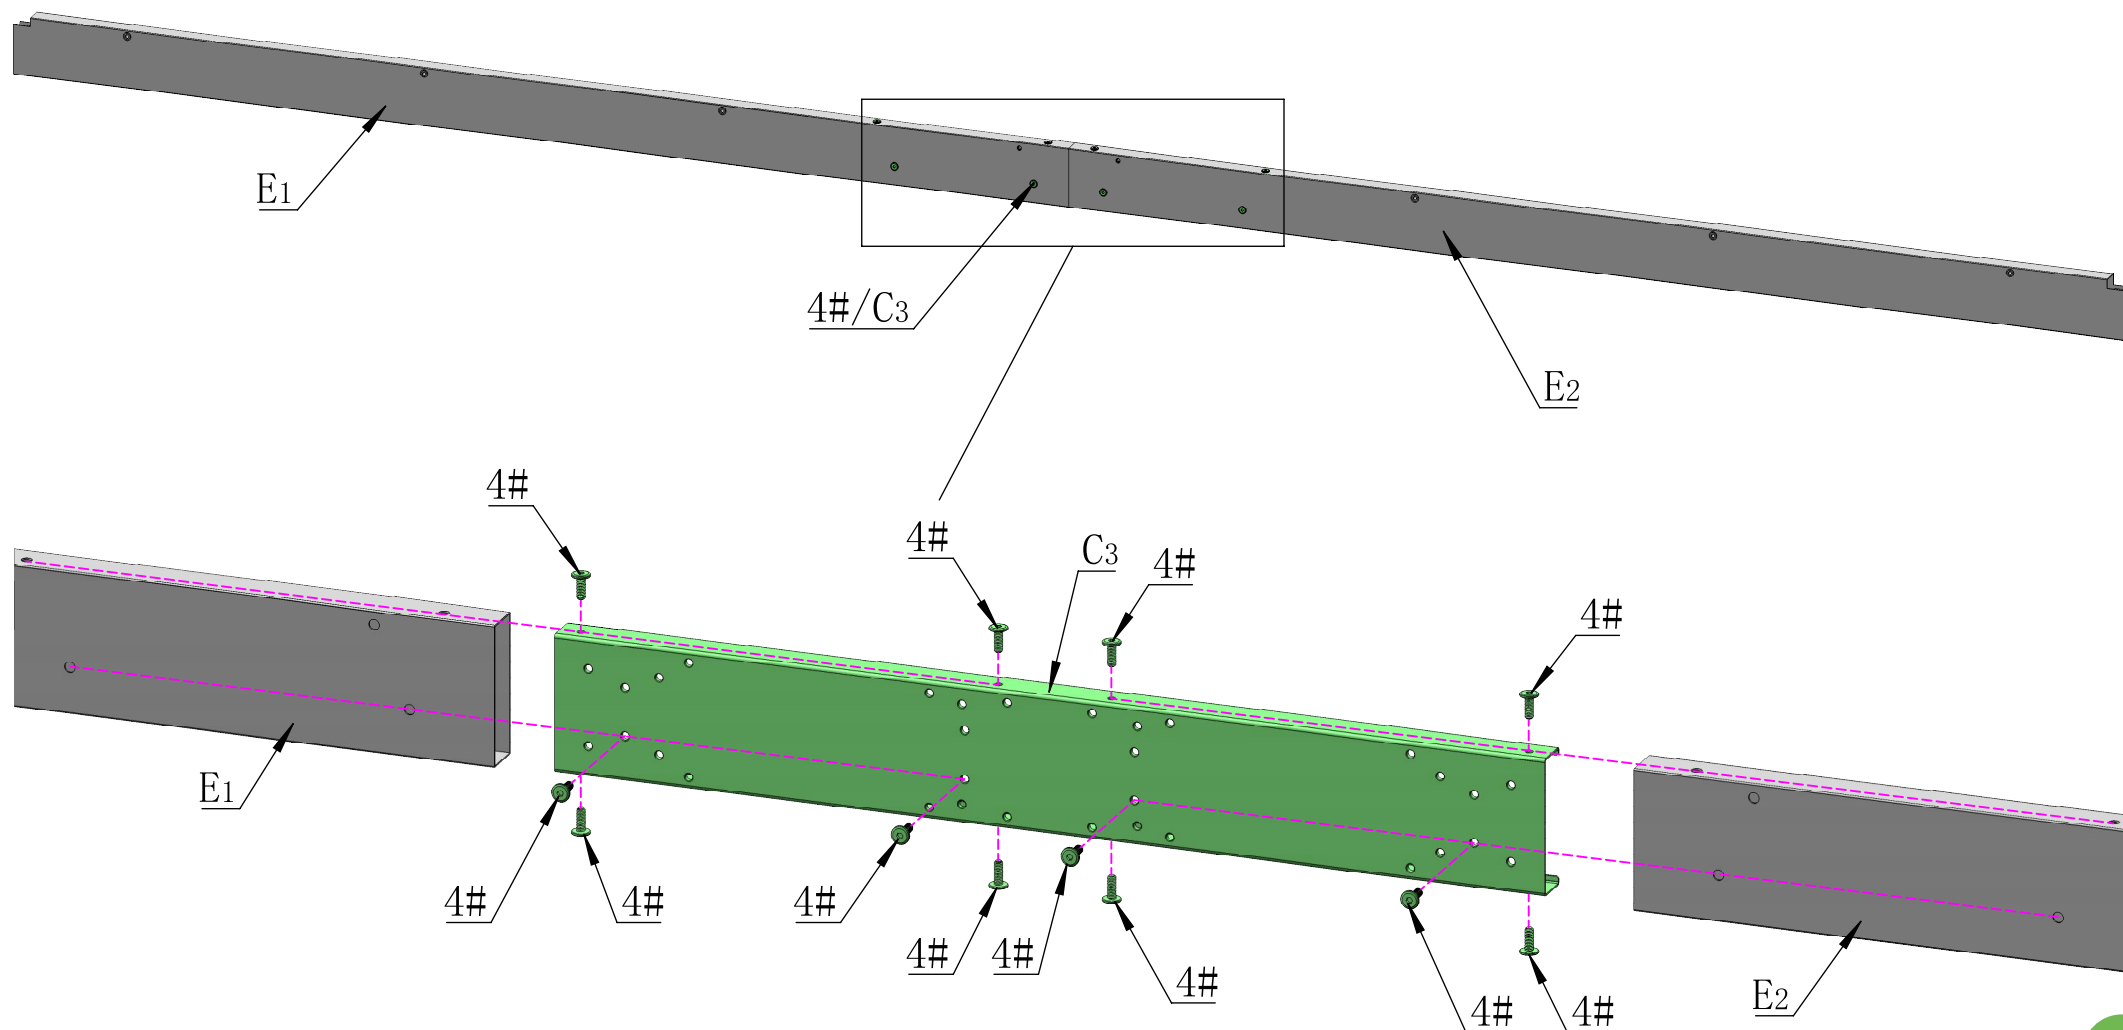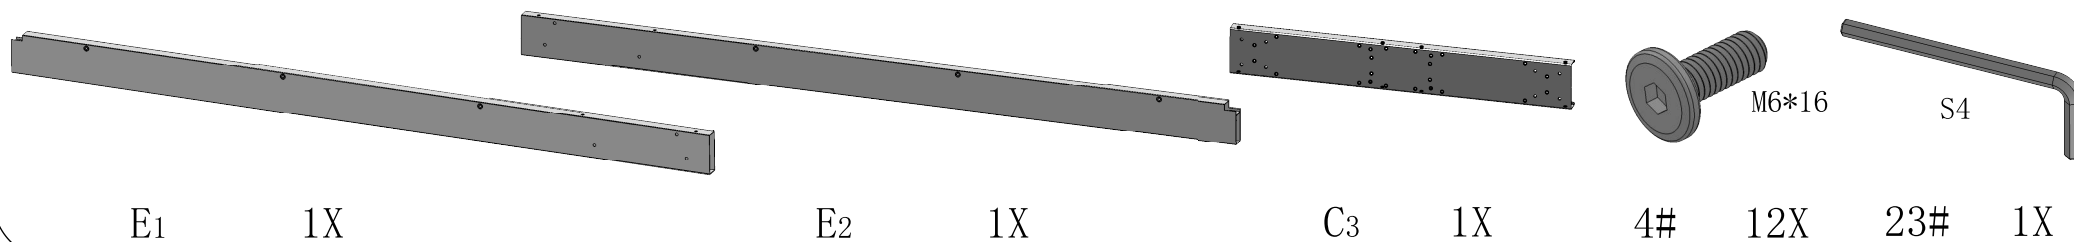





M6*16

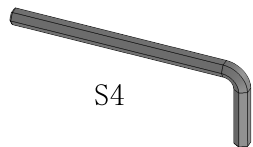


S4



4#



2X


23#

1X

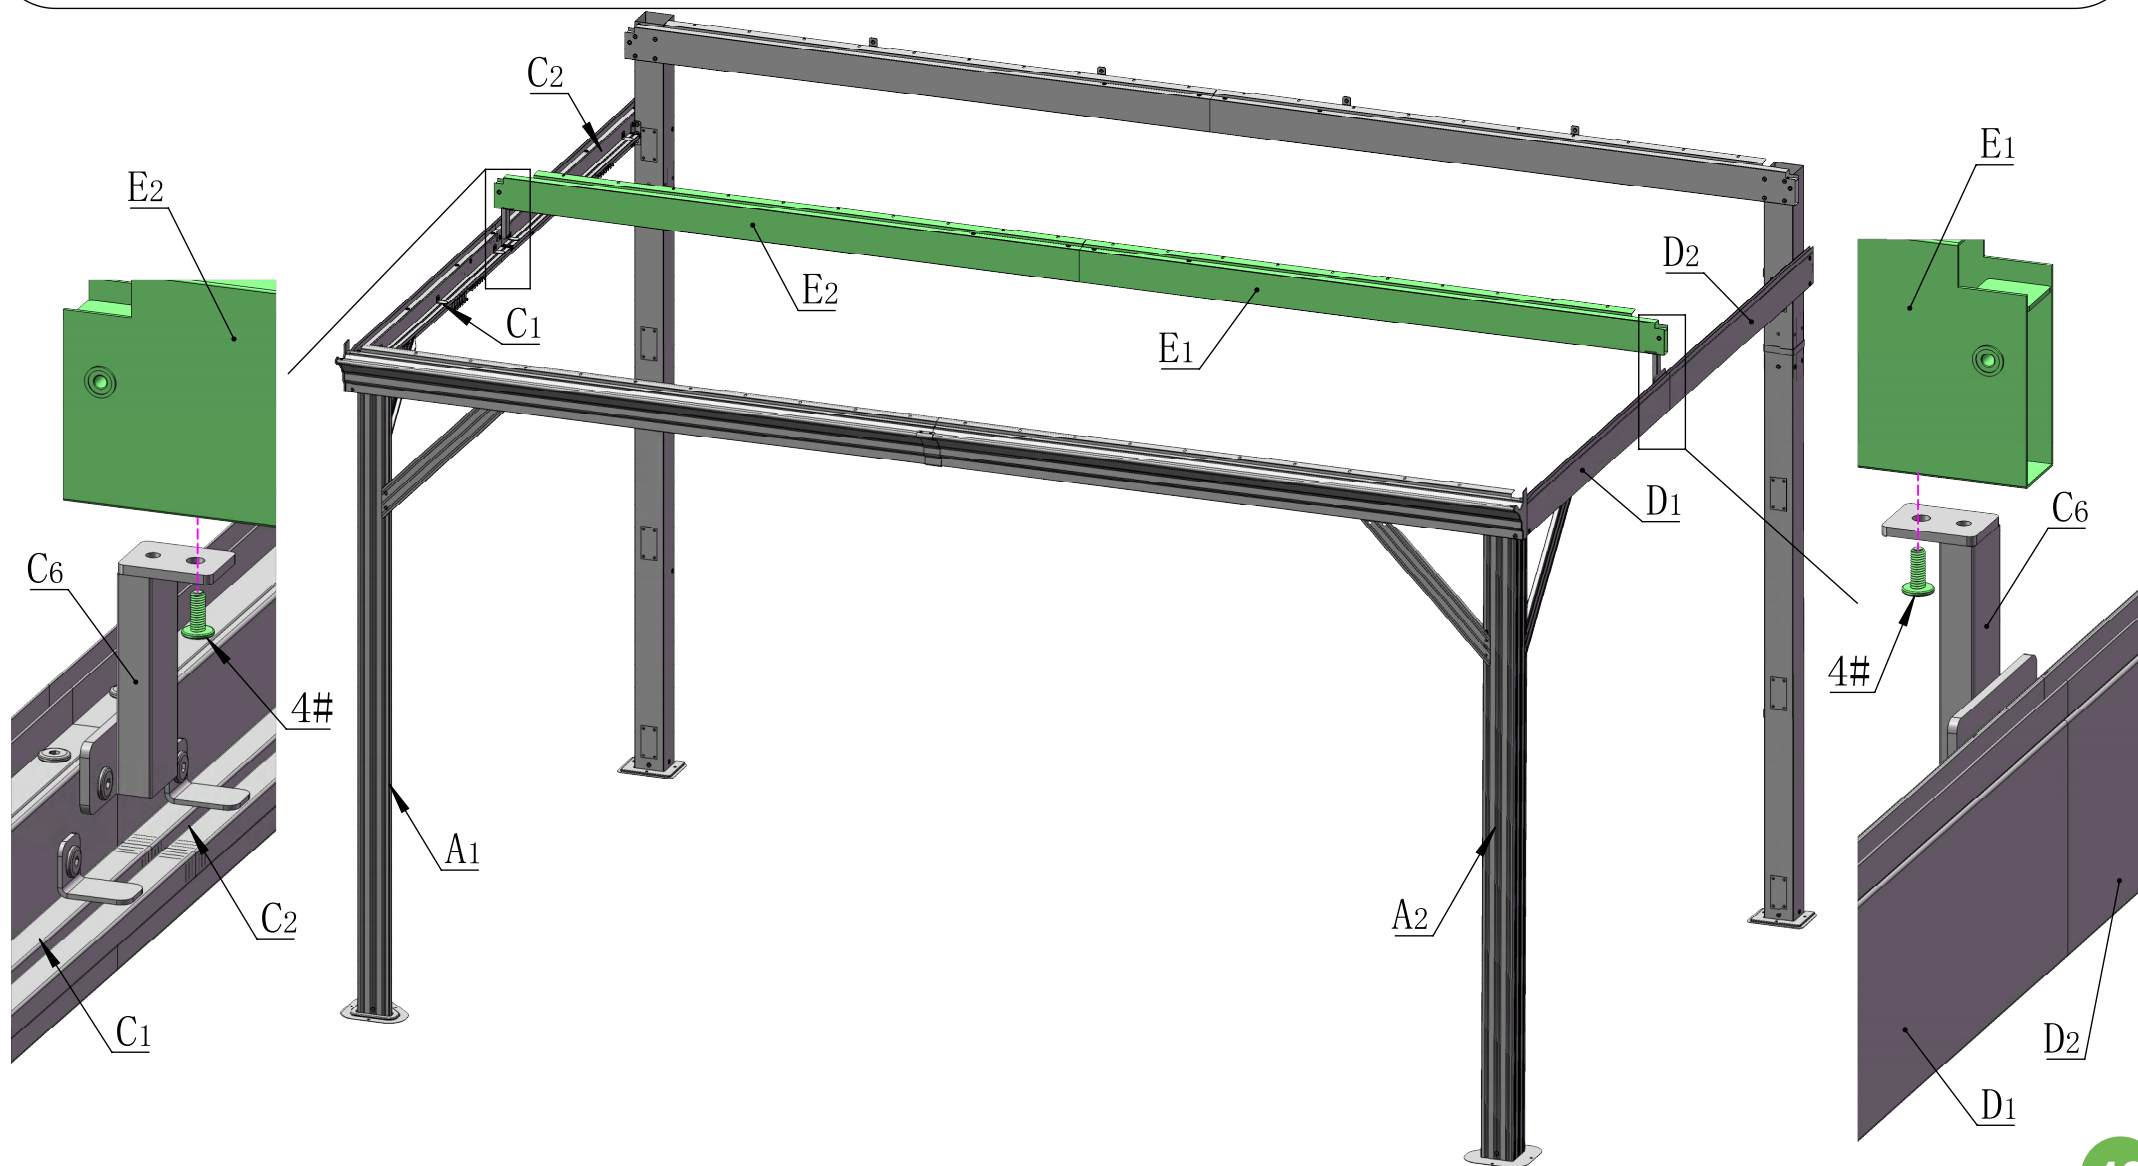


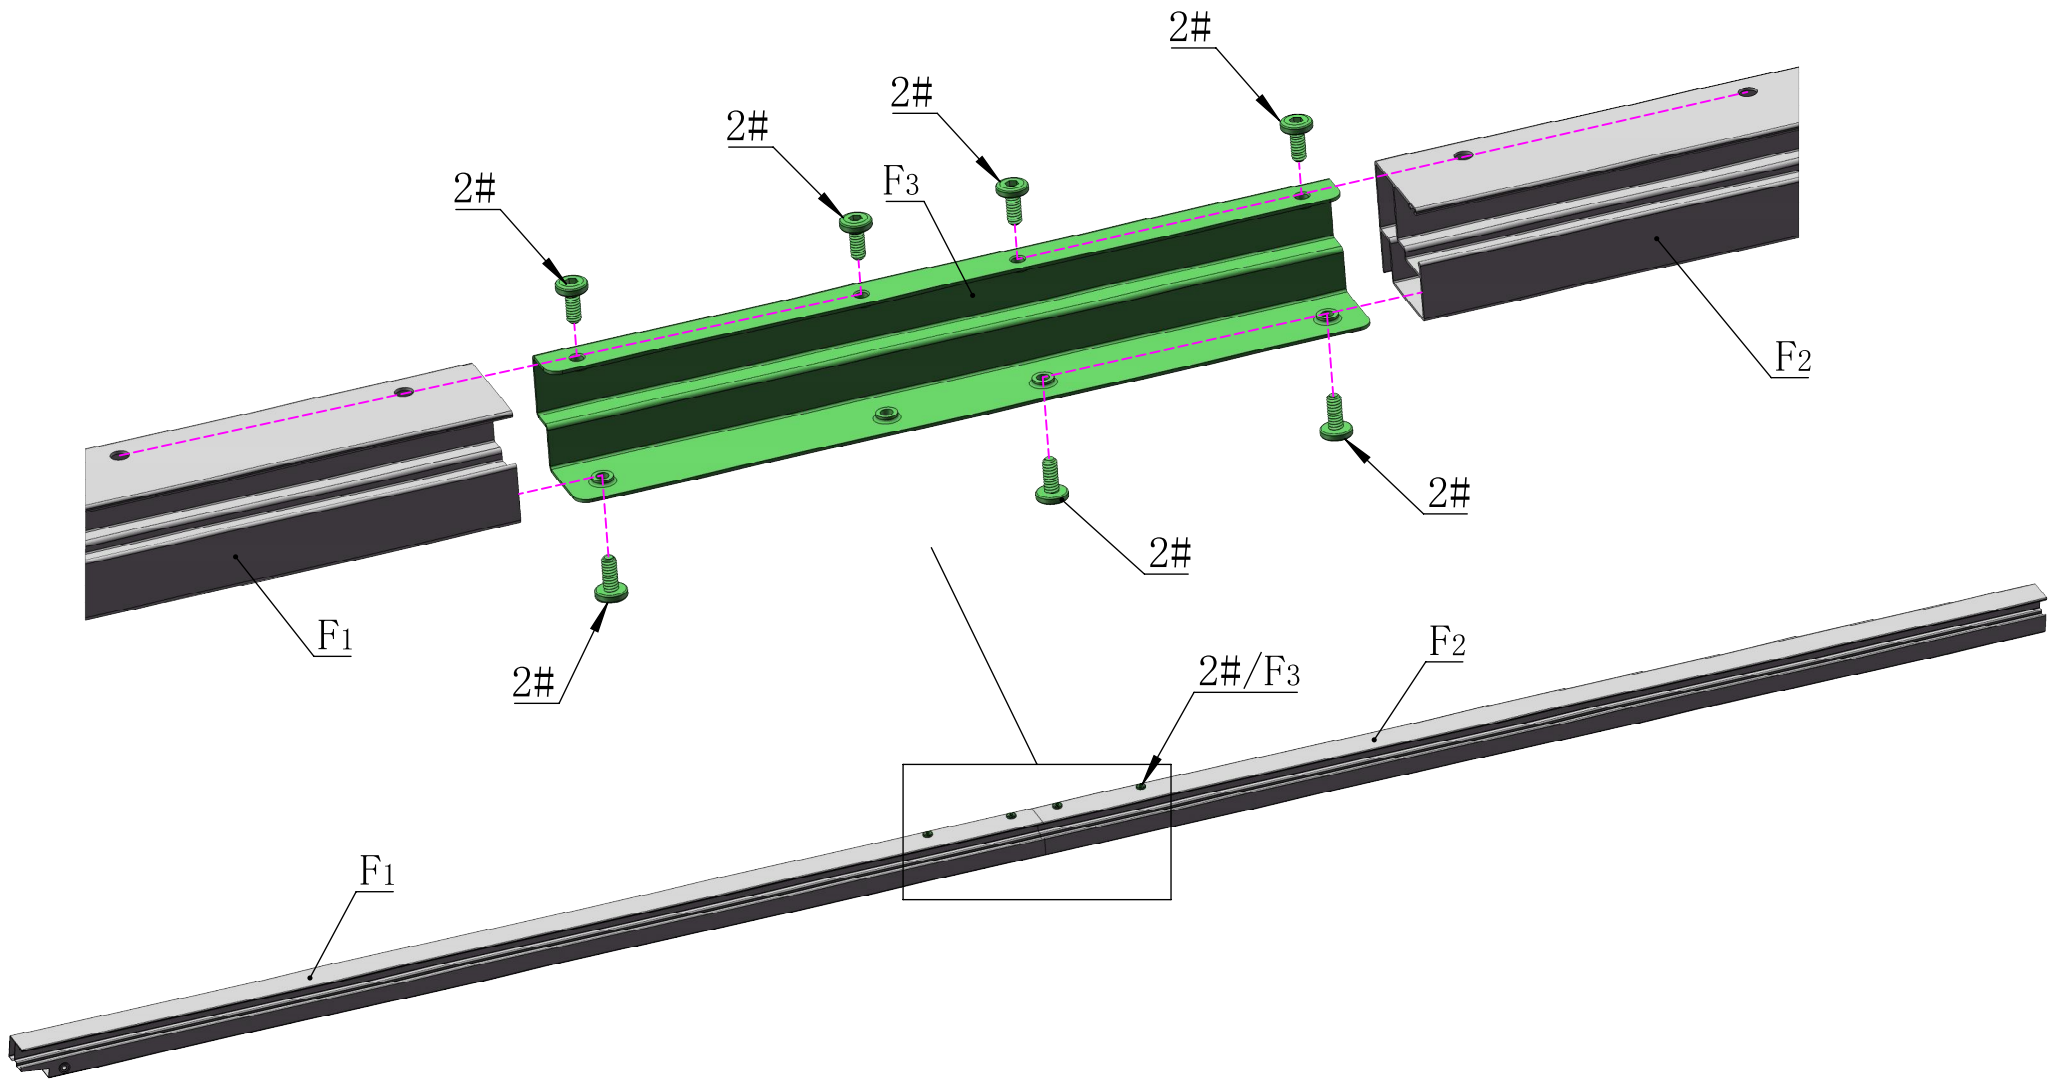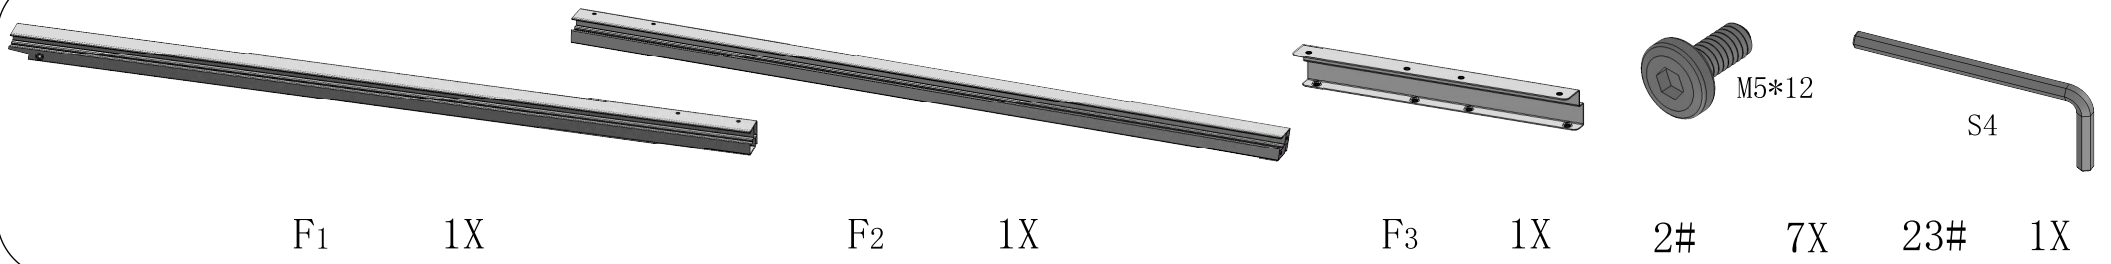

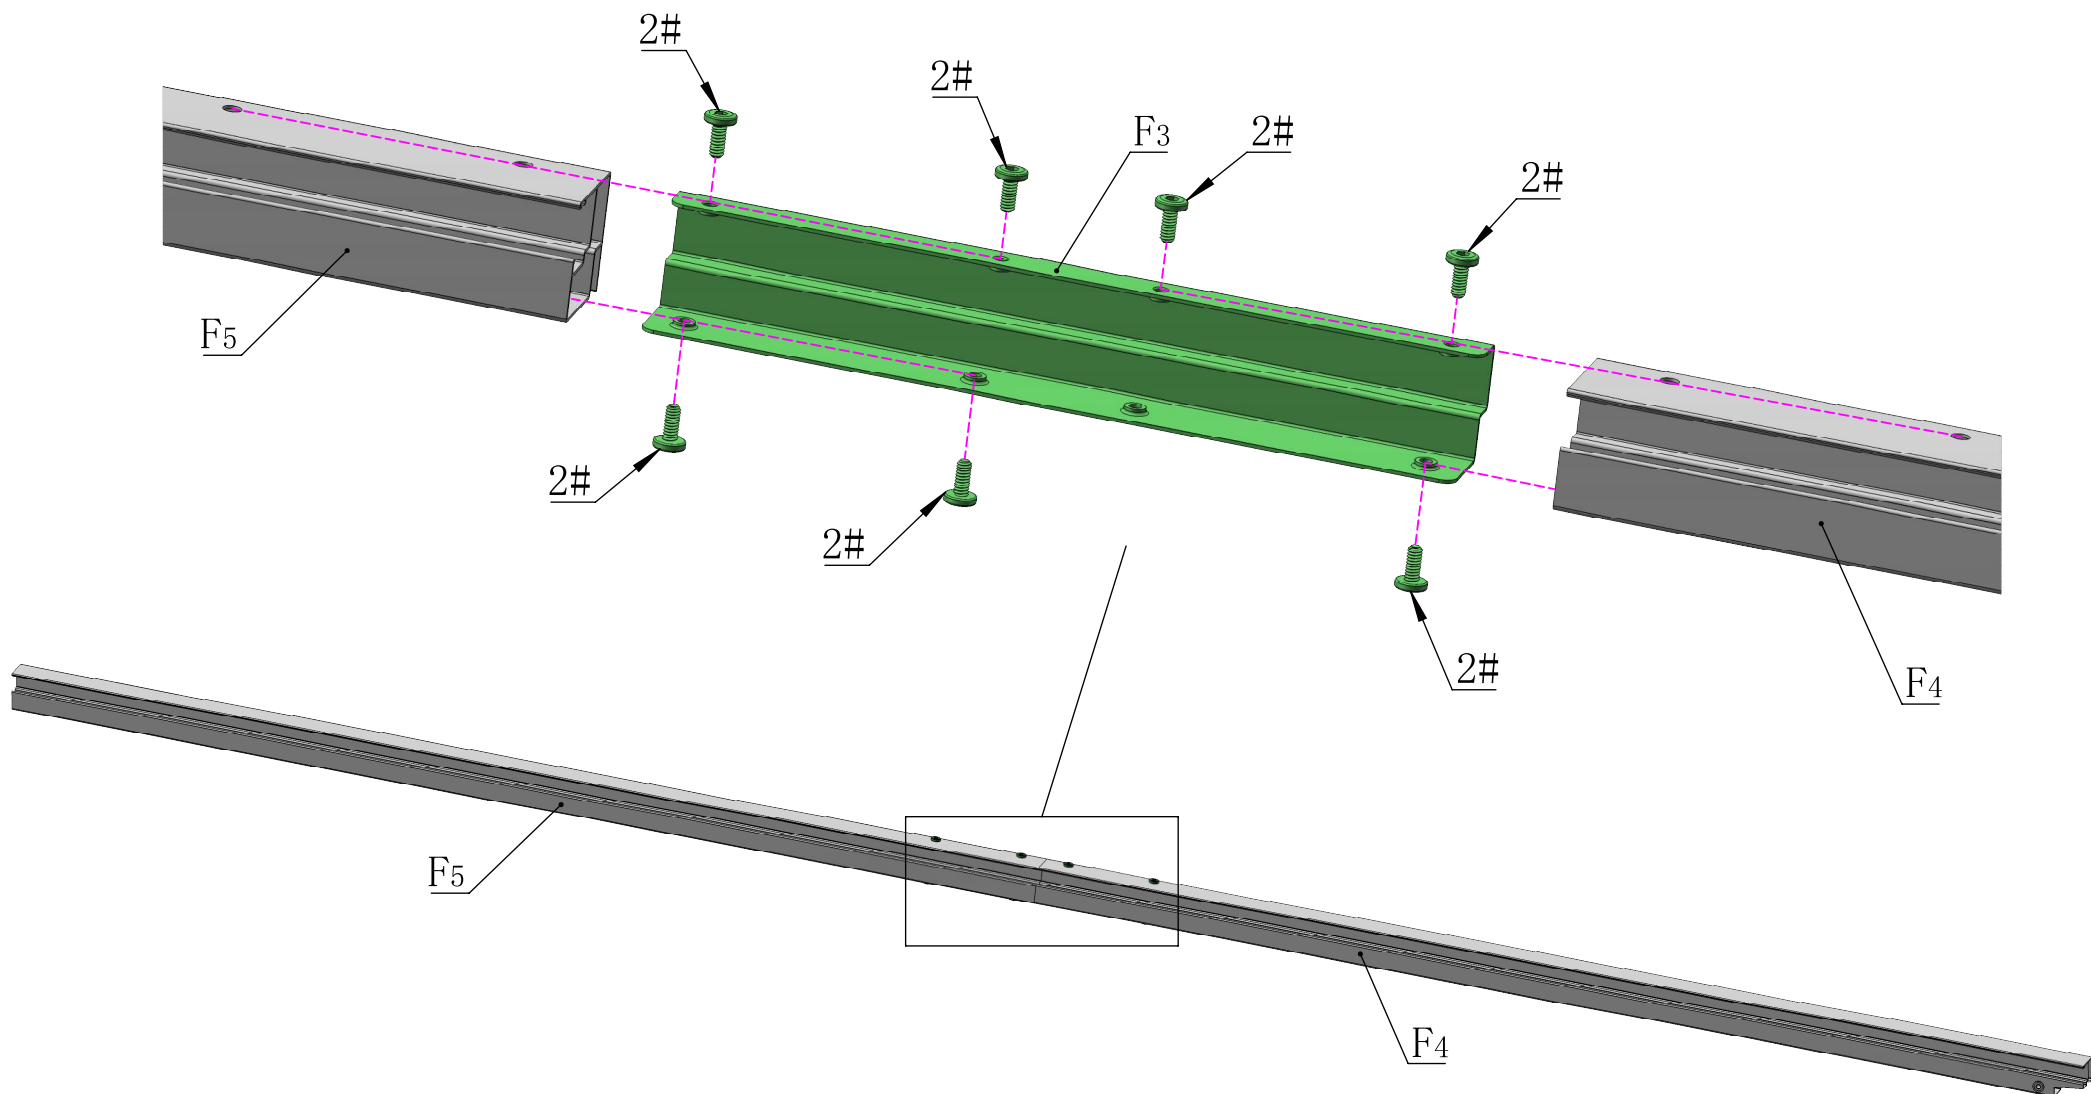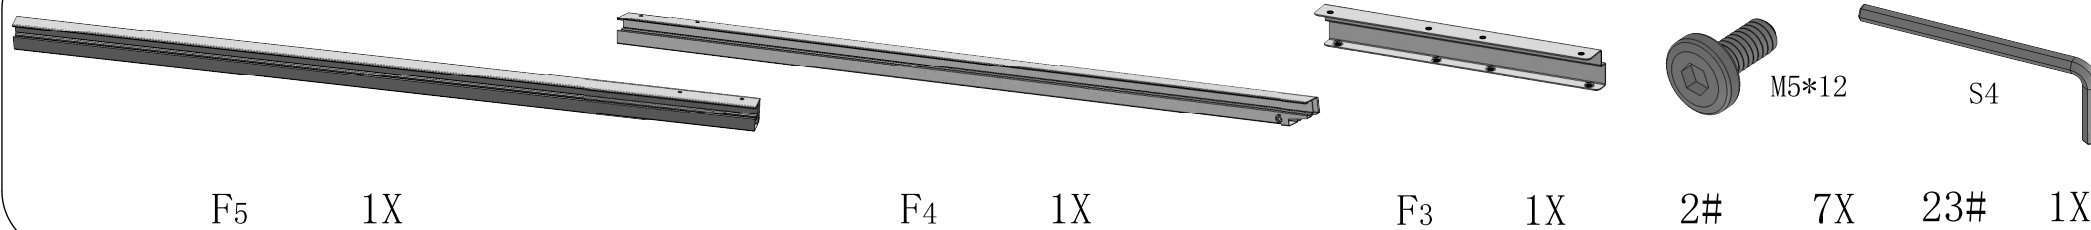


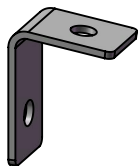


I2 4X

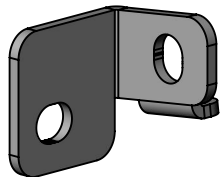

I3 1X

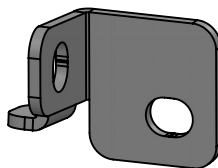


I4 1X

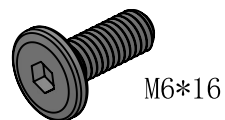


4# 10X




2# 2X

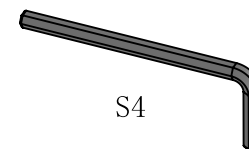


23# 1X

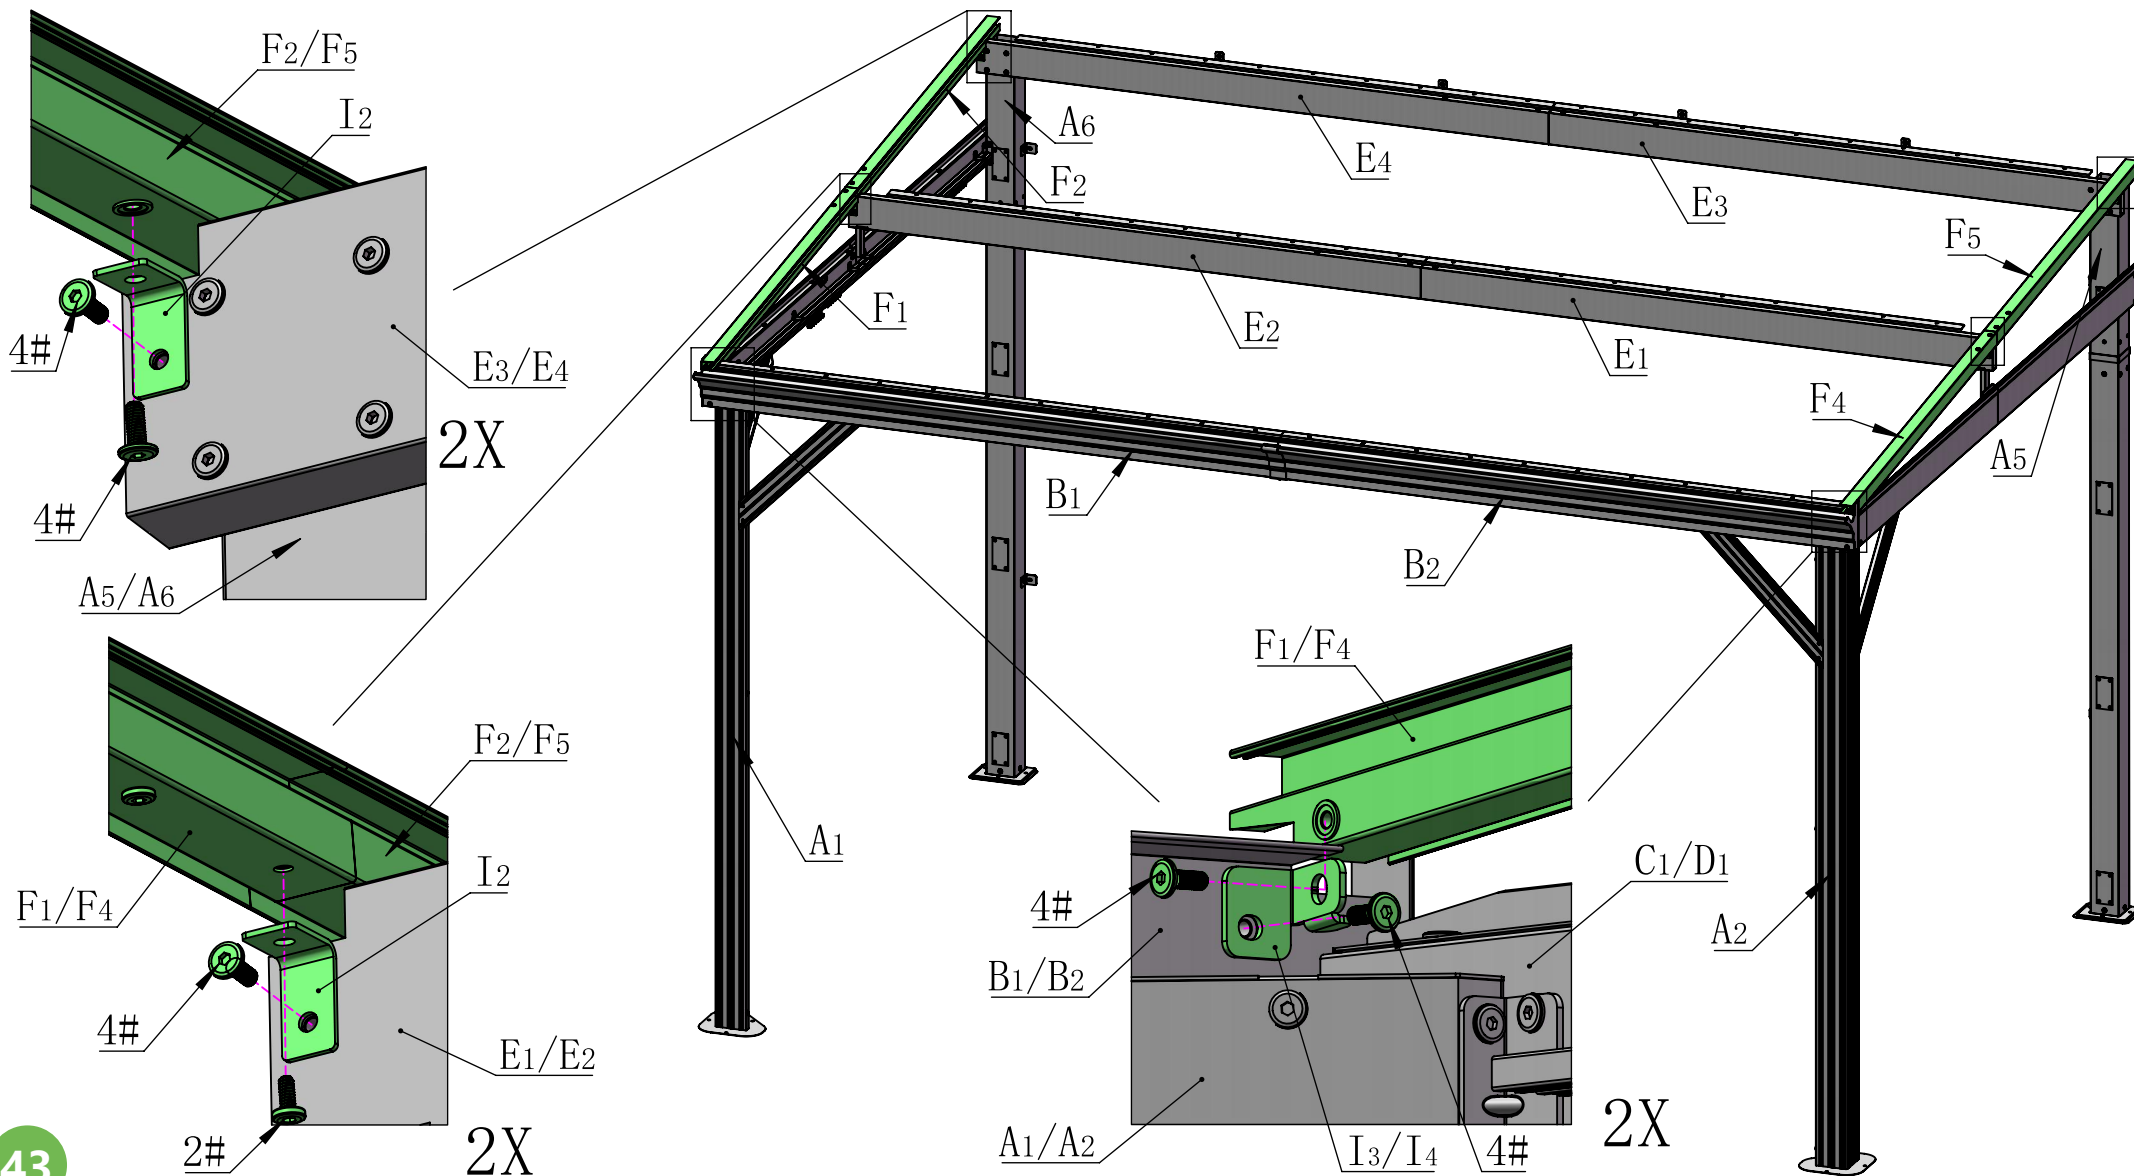

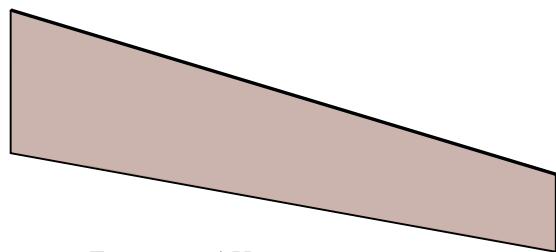


J3 1X

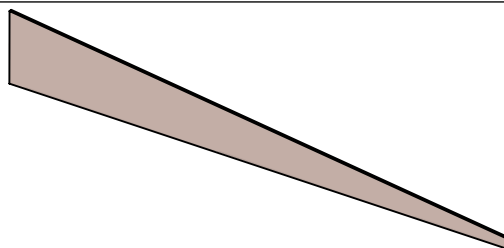


J5 1X




J1 1X

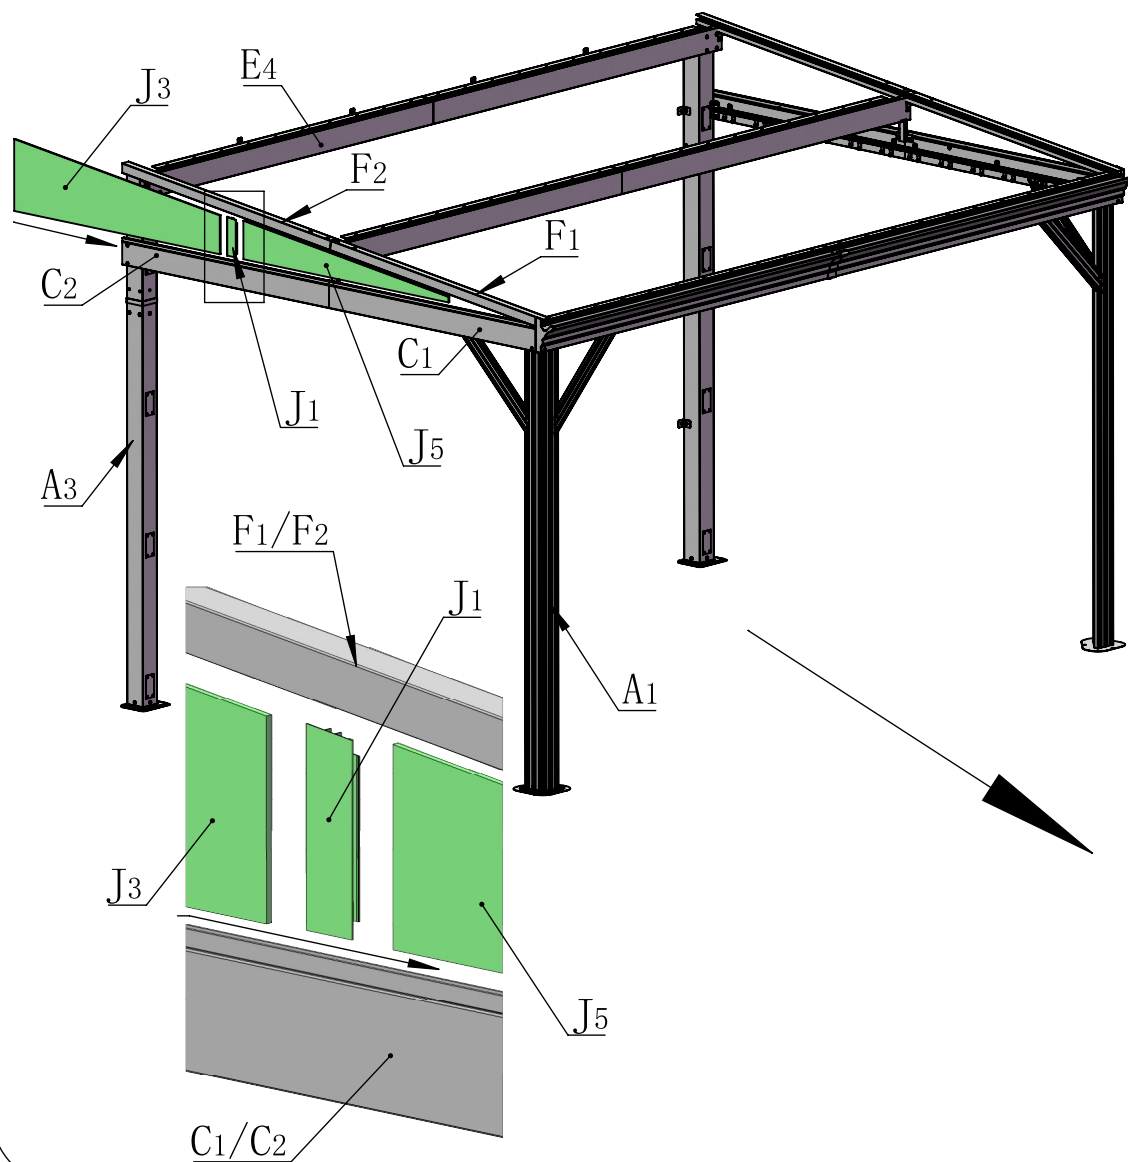


⚠ The notches of #J1 are facing inward.

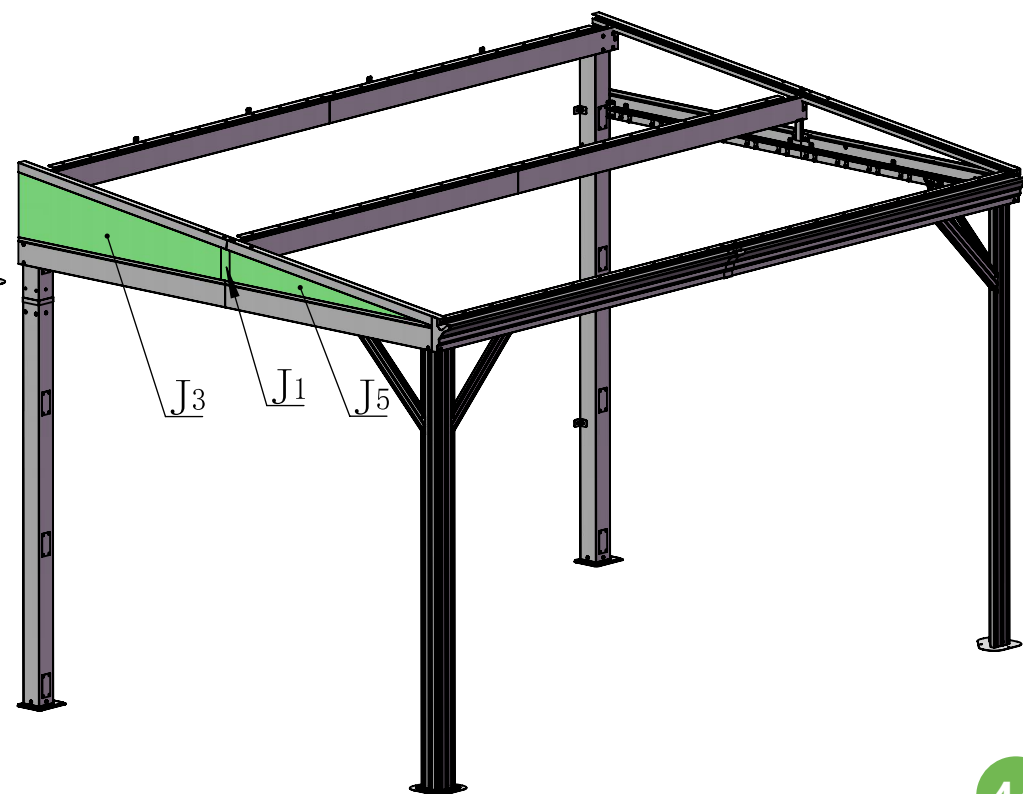


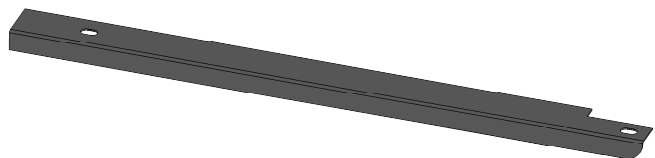


G1 1X

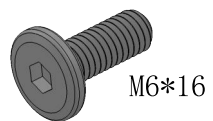


4# 2X

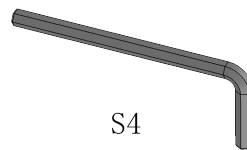


23# 1X

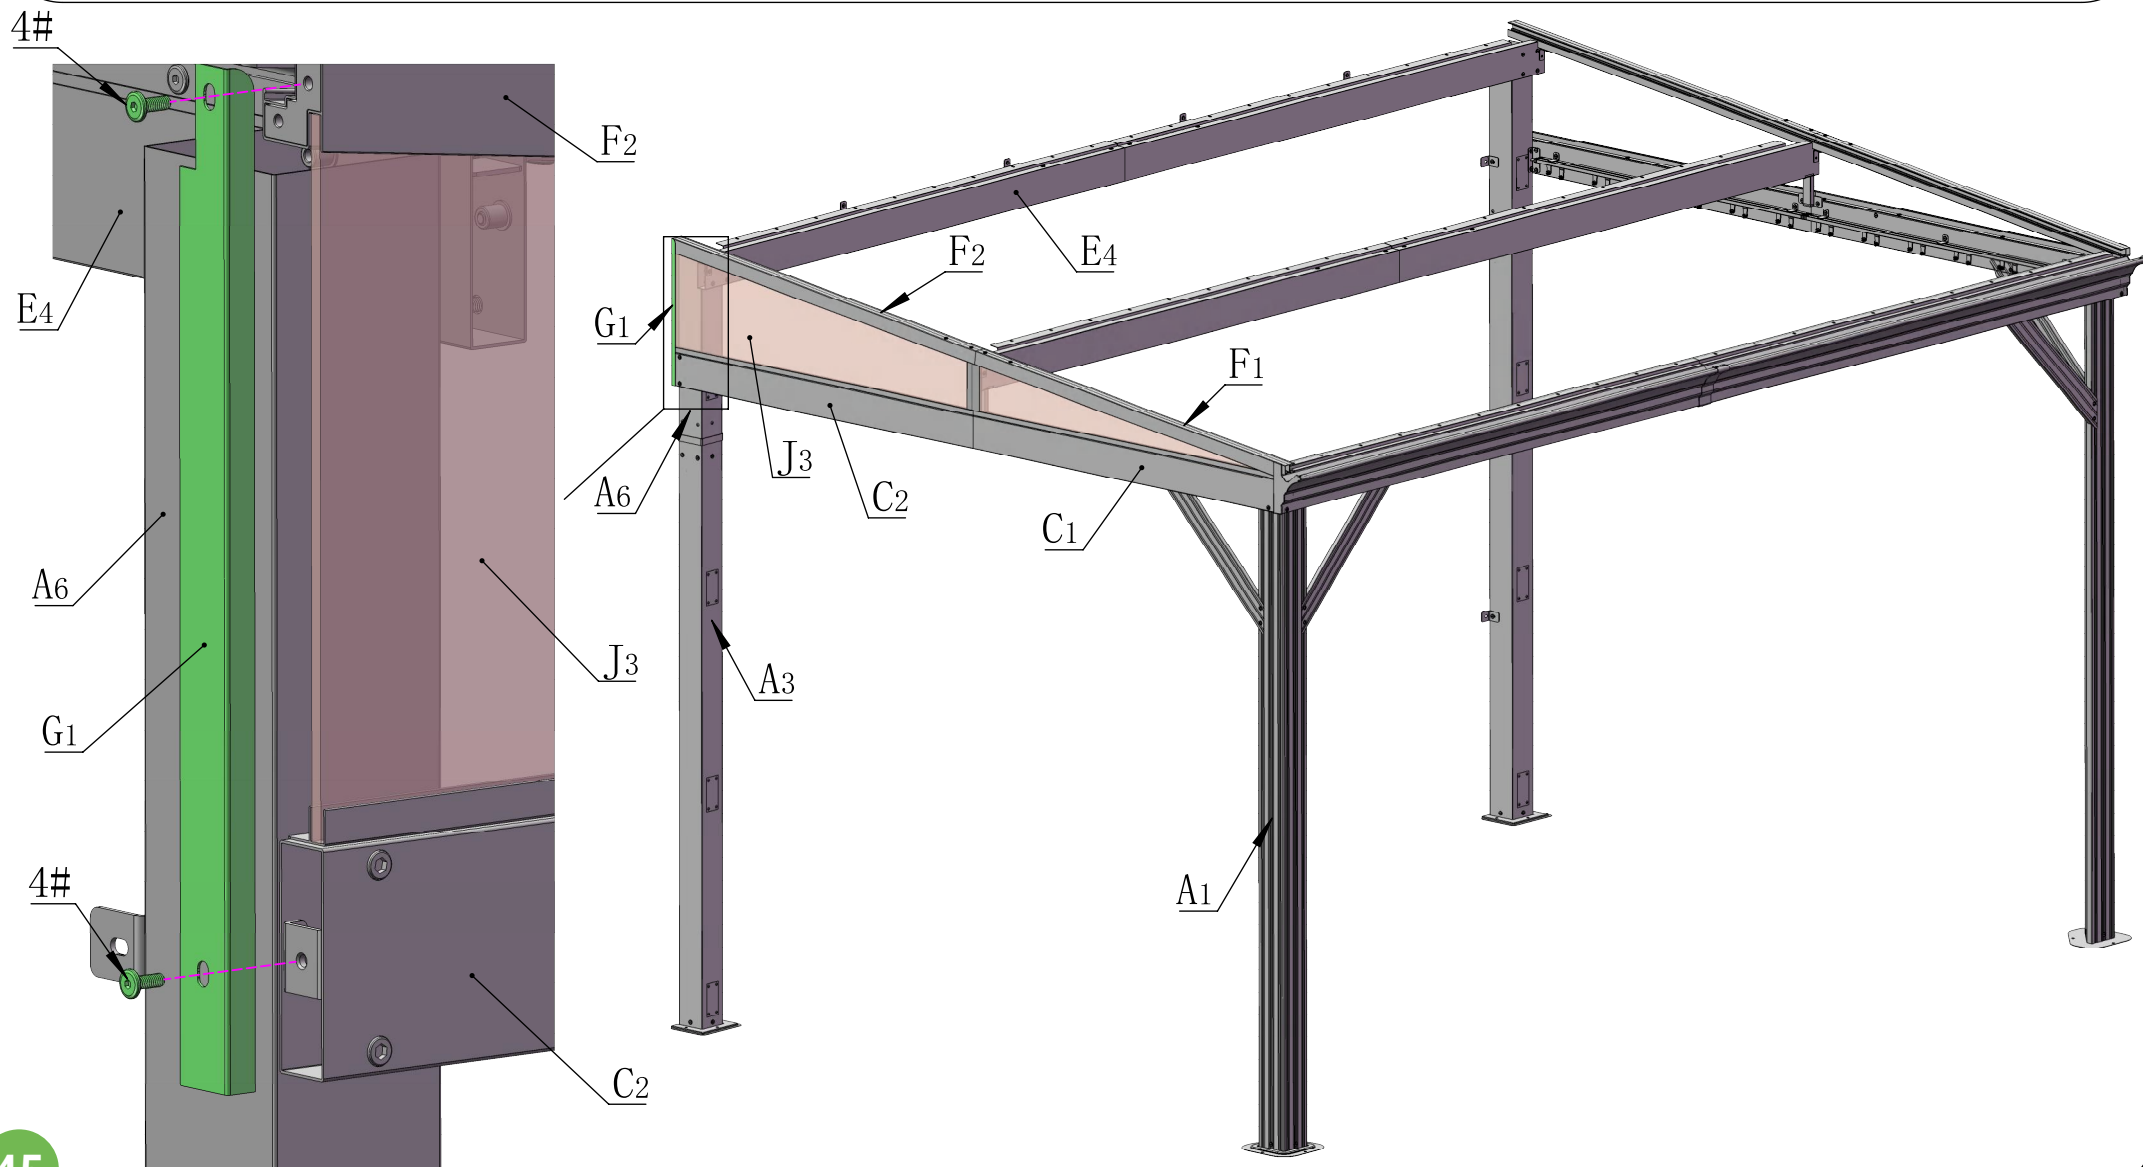

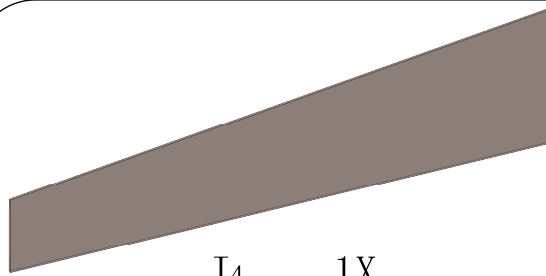



J4 1X

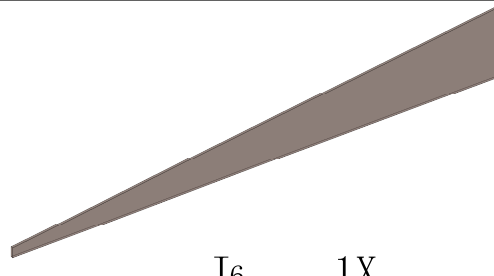


J6 1X




J2 1X

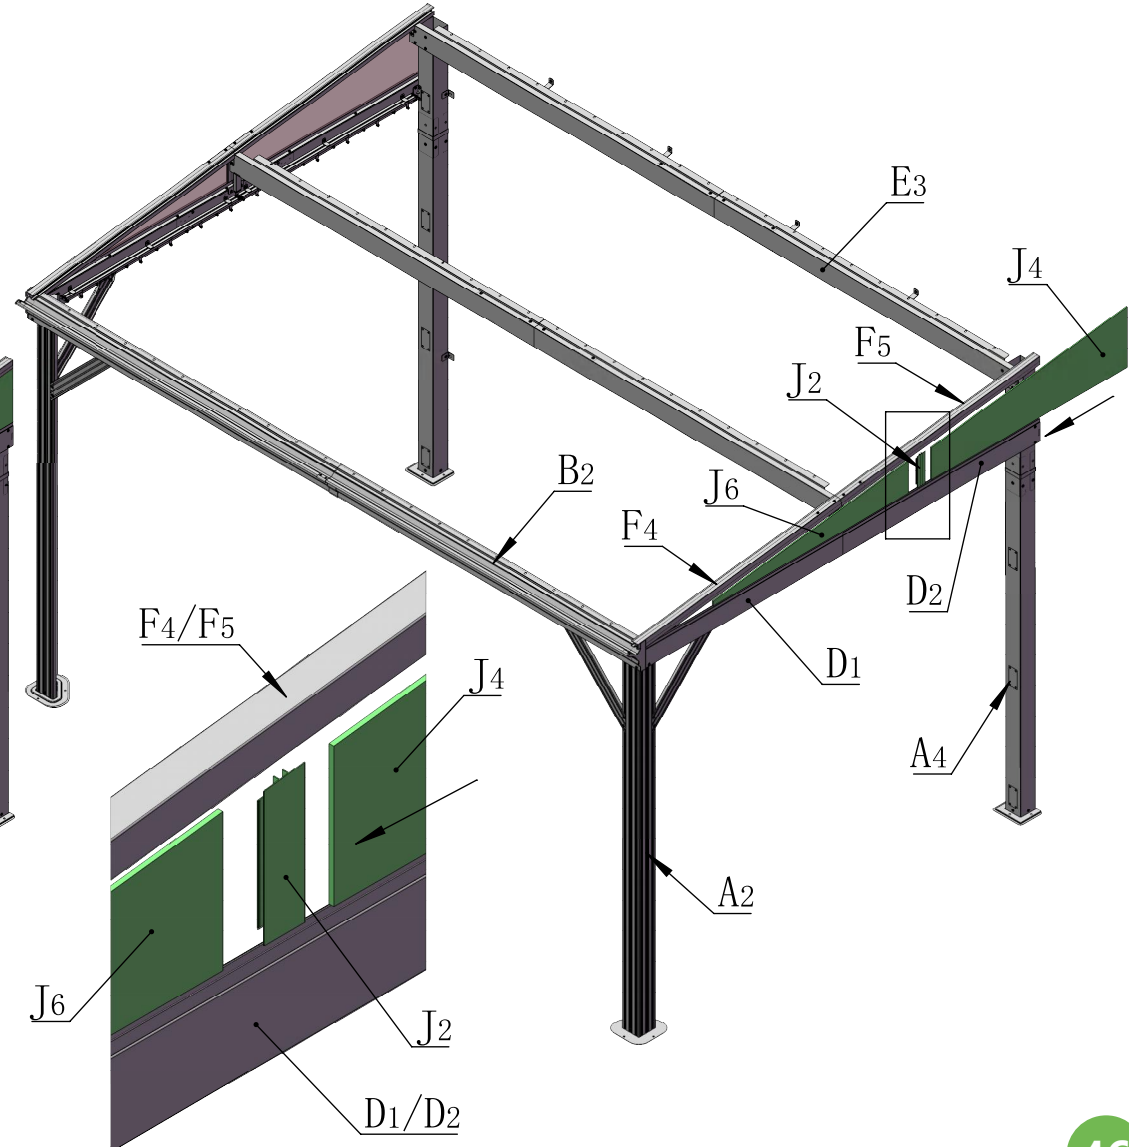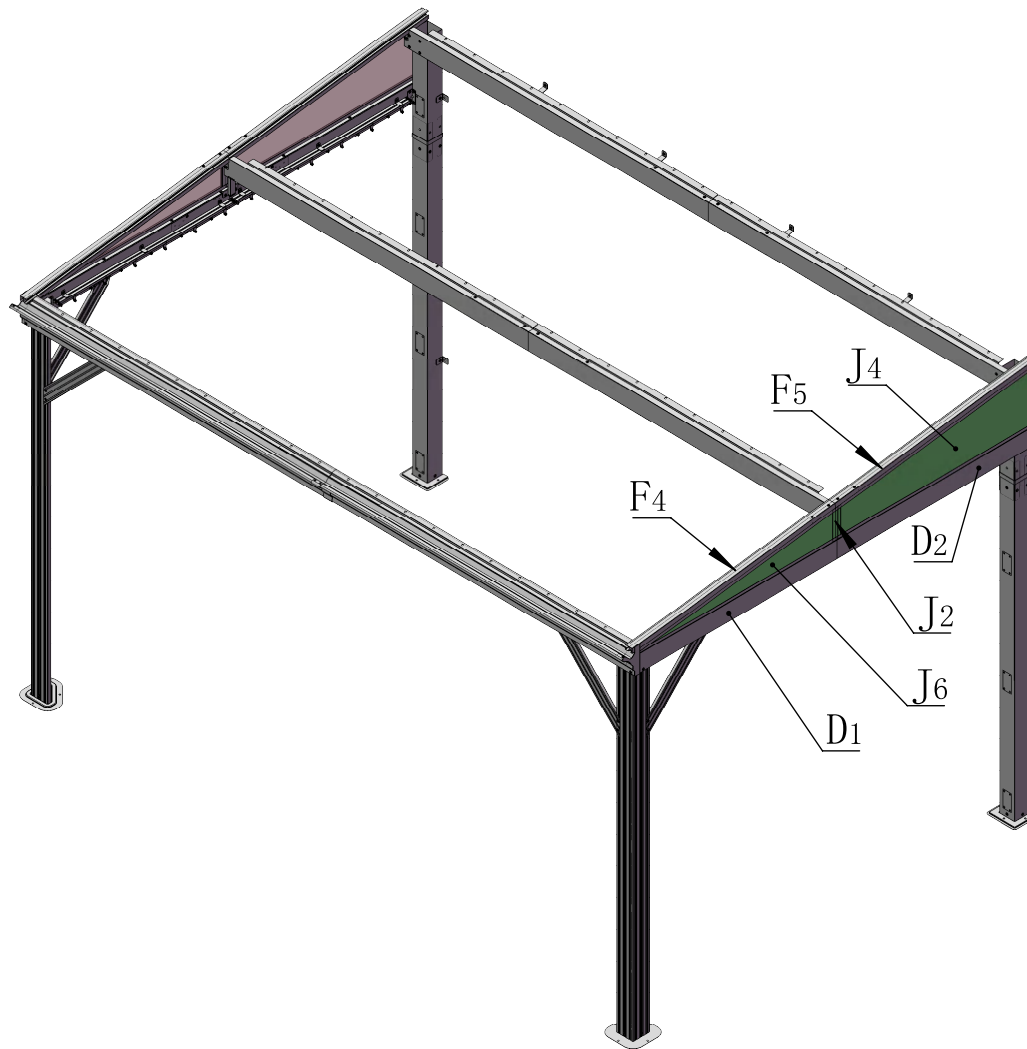


The notches of #J2 are facing inward.

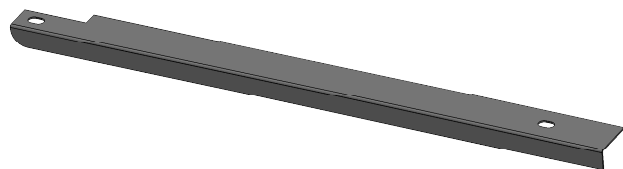


G2 1X

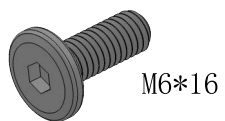


4# 2X

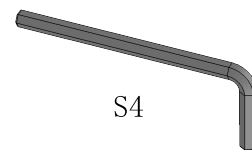


23# 1X

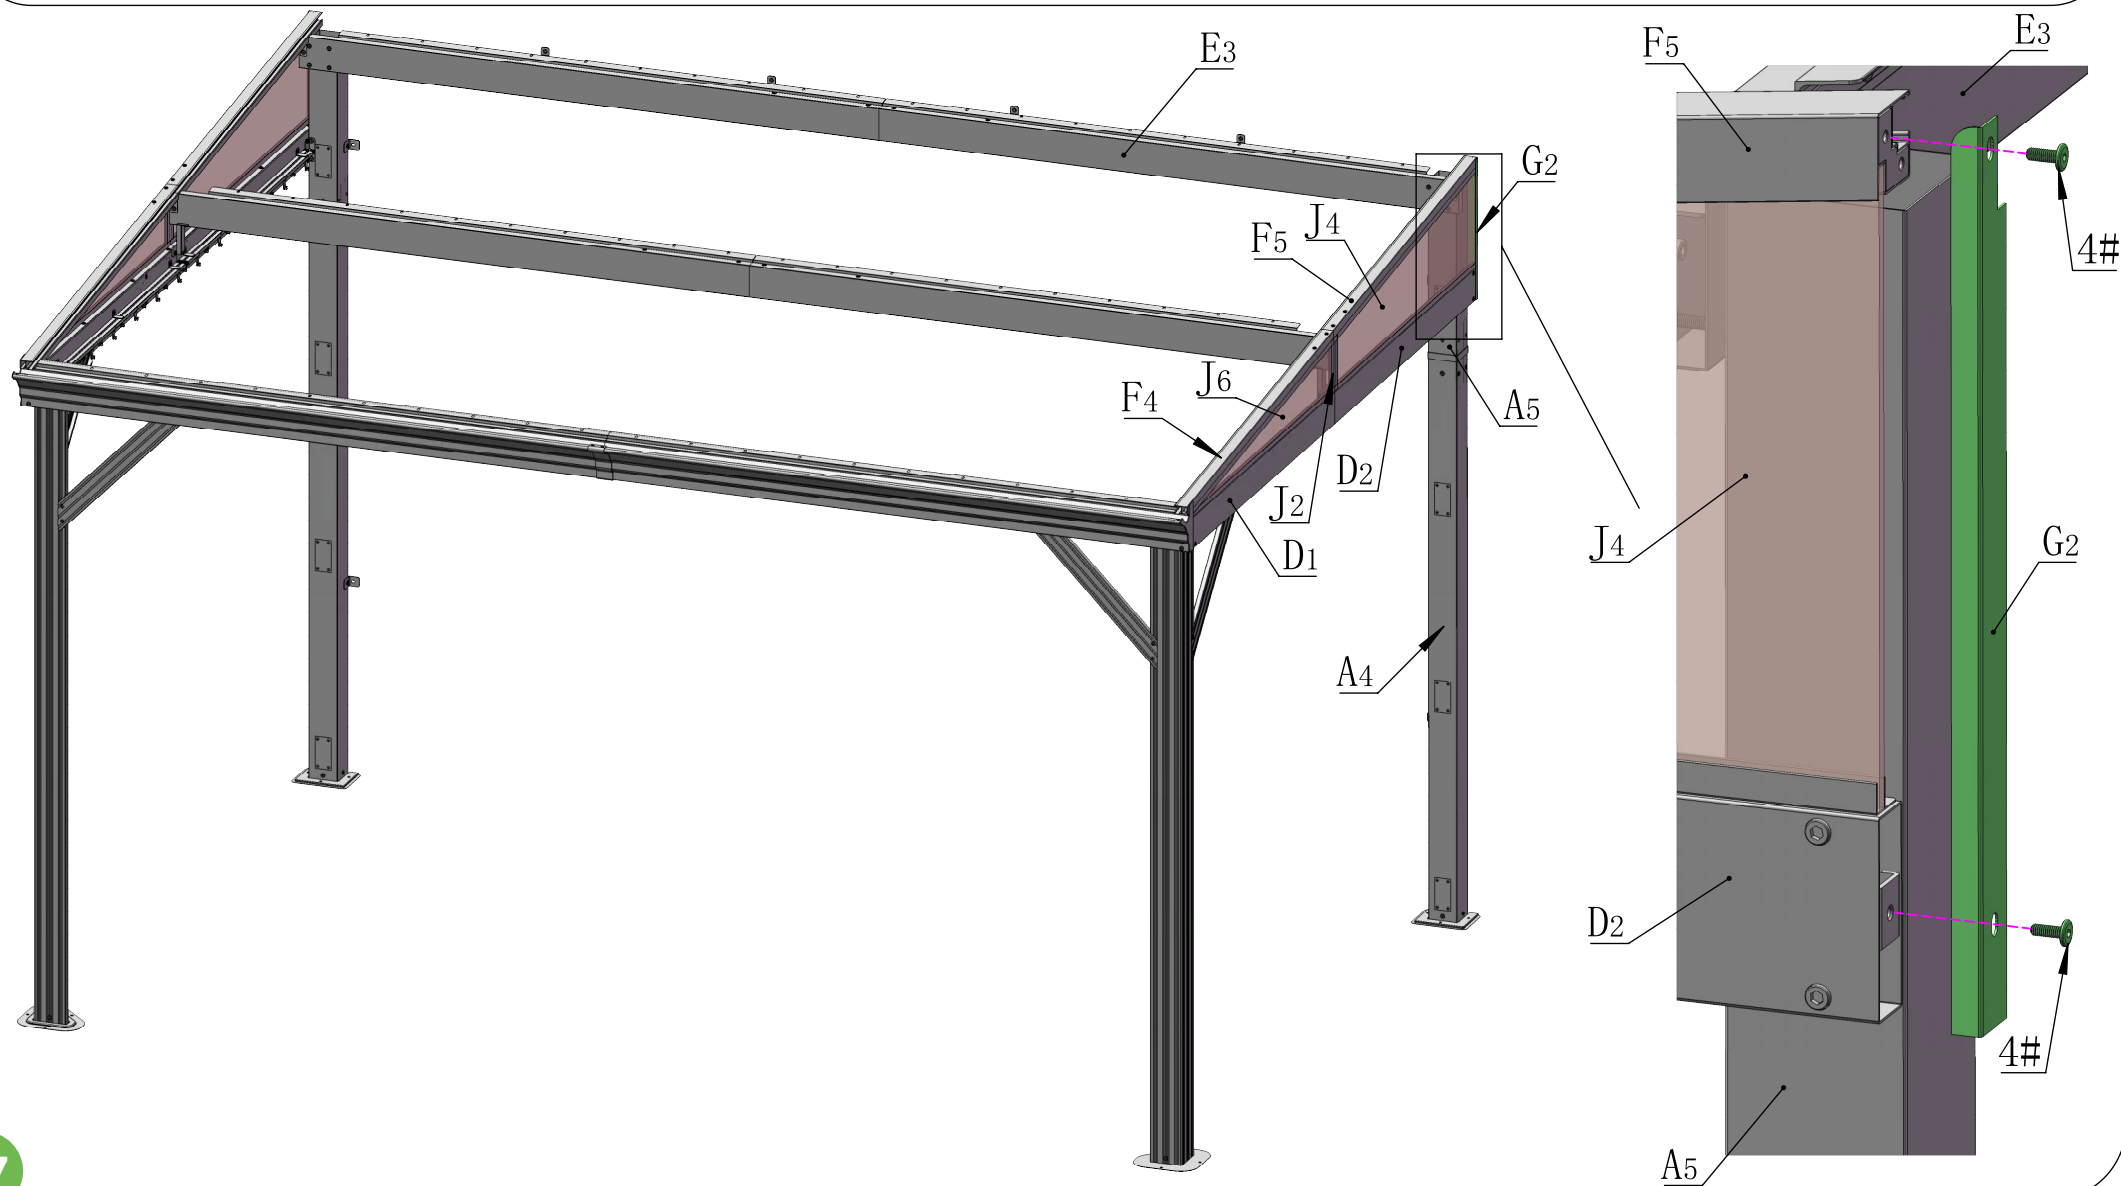

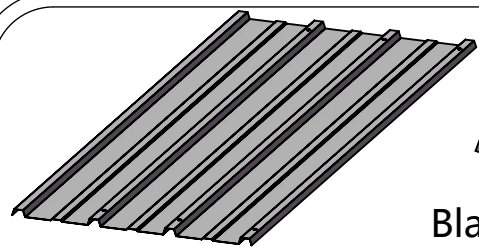


K1 1X

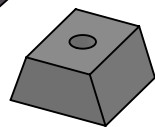

Black Rubber

K5 2X

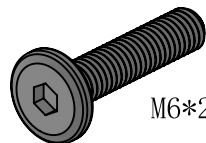

M6*28




5# 2X



D12/d6. 2*H2

Rubber Gaskets

26# 2X

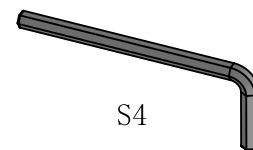




S4









23# 1X



25# 1X

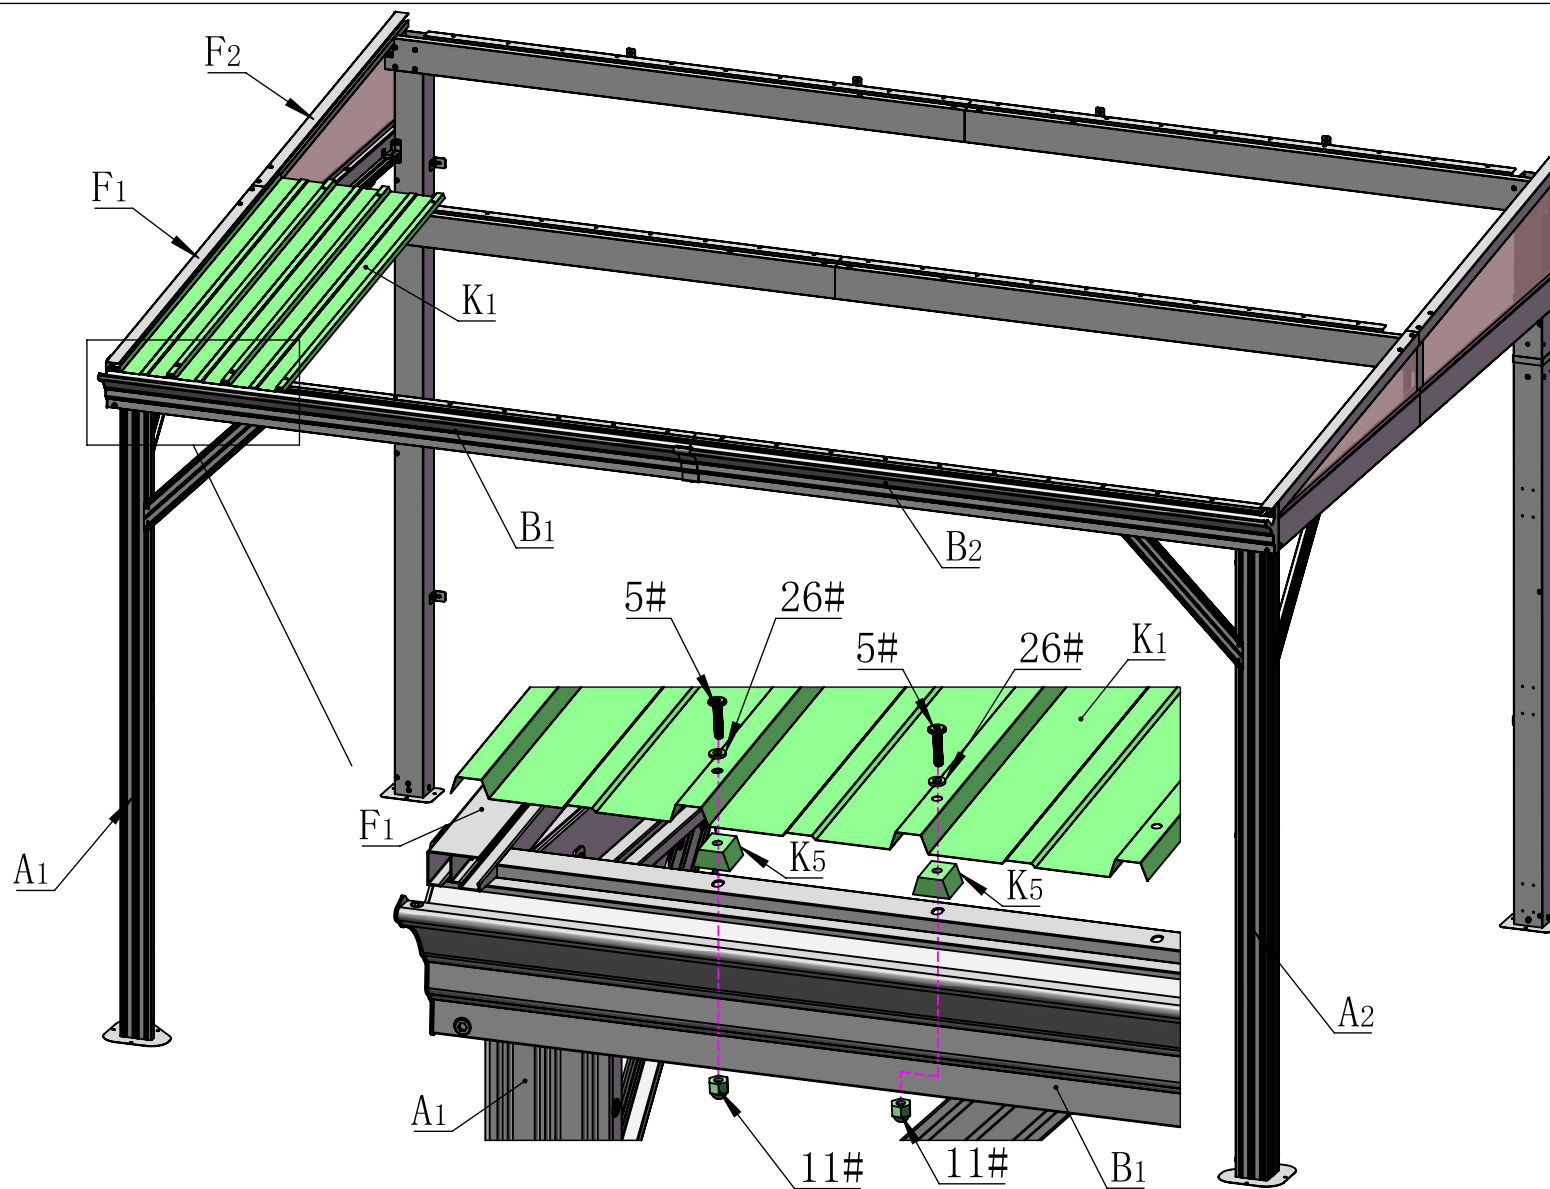


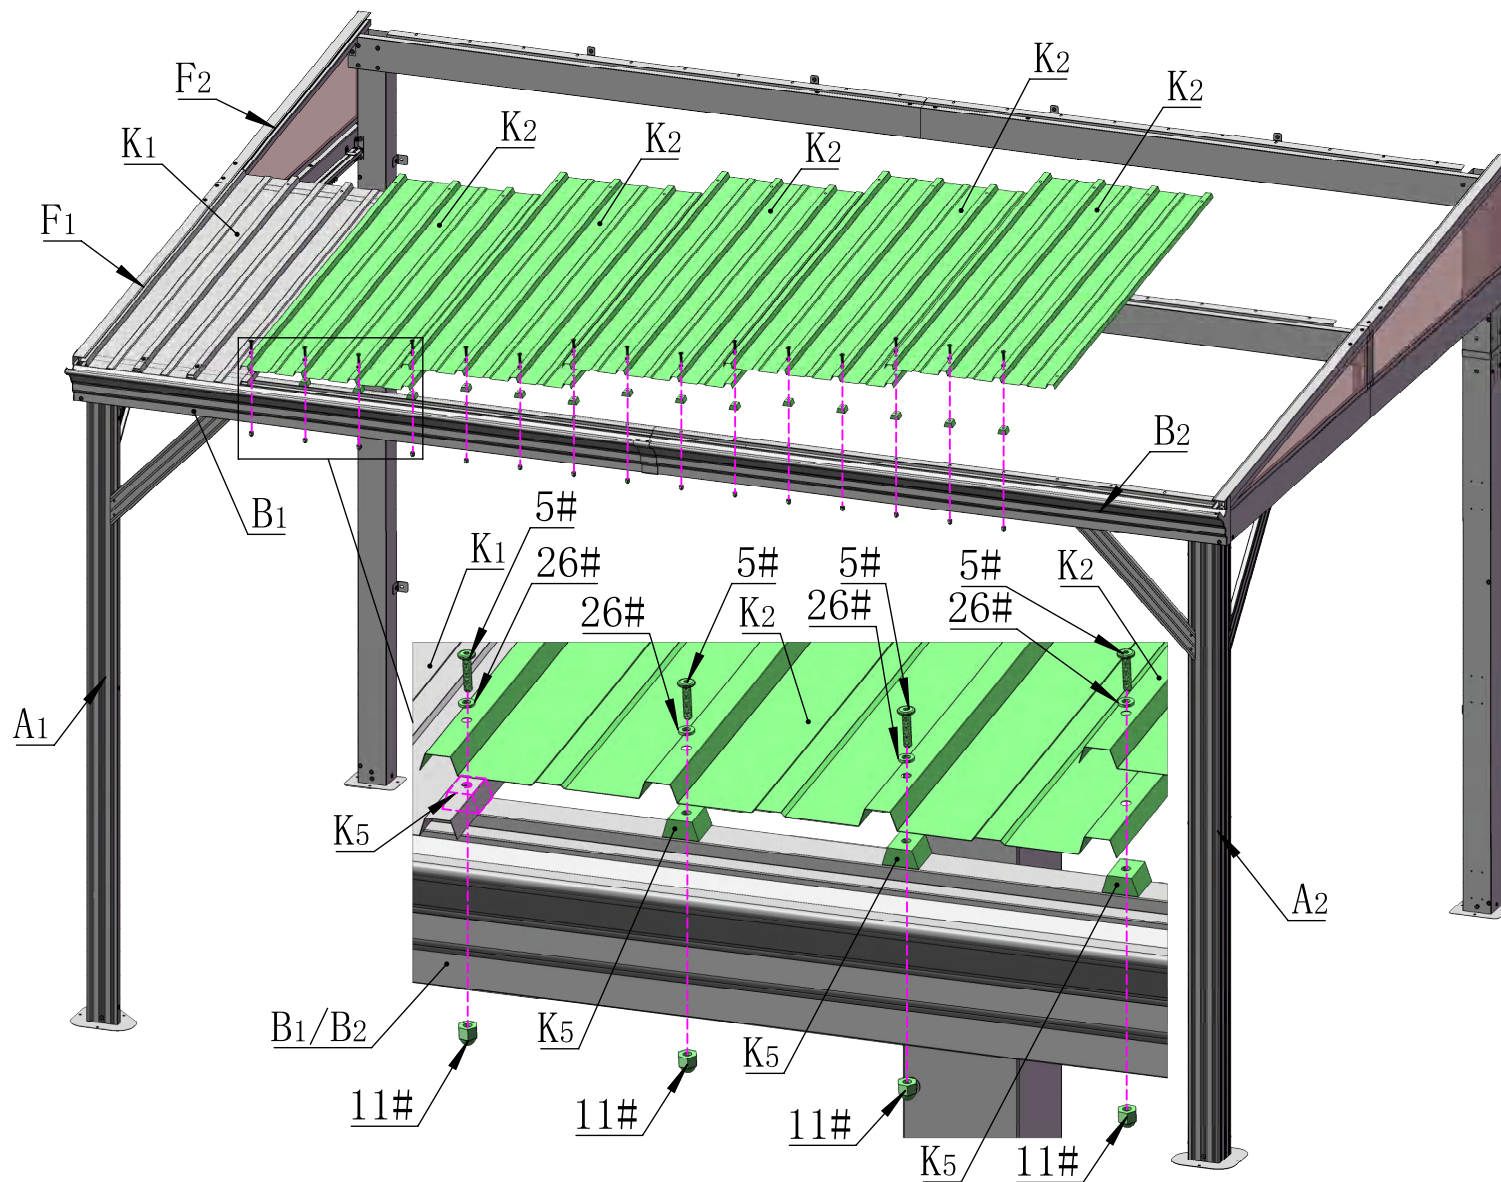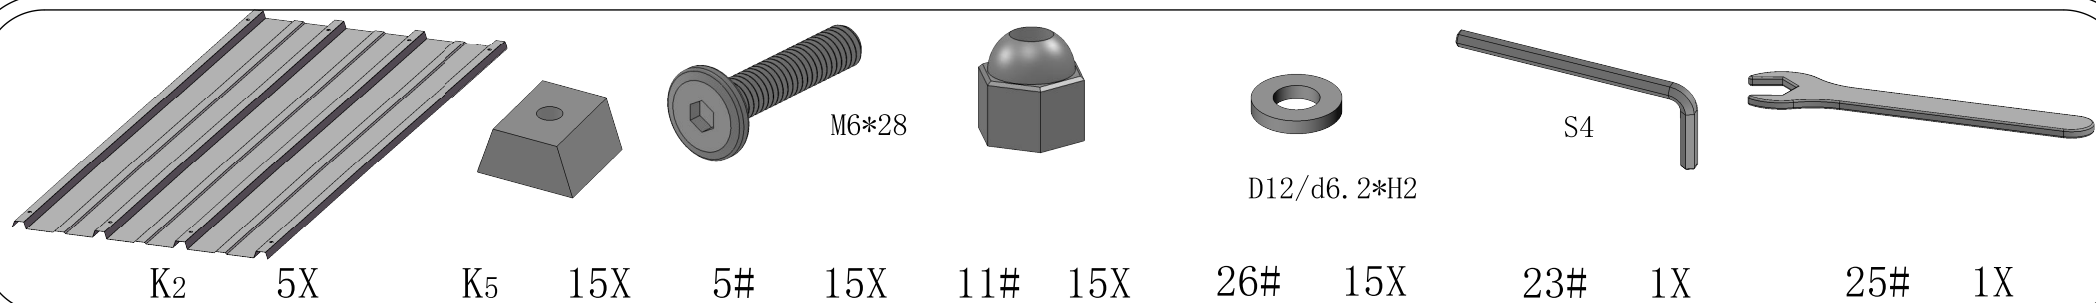

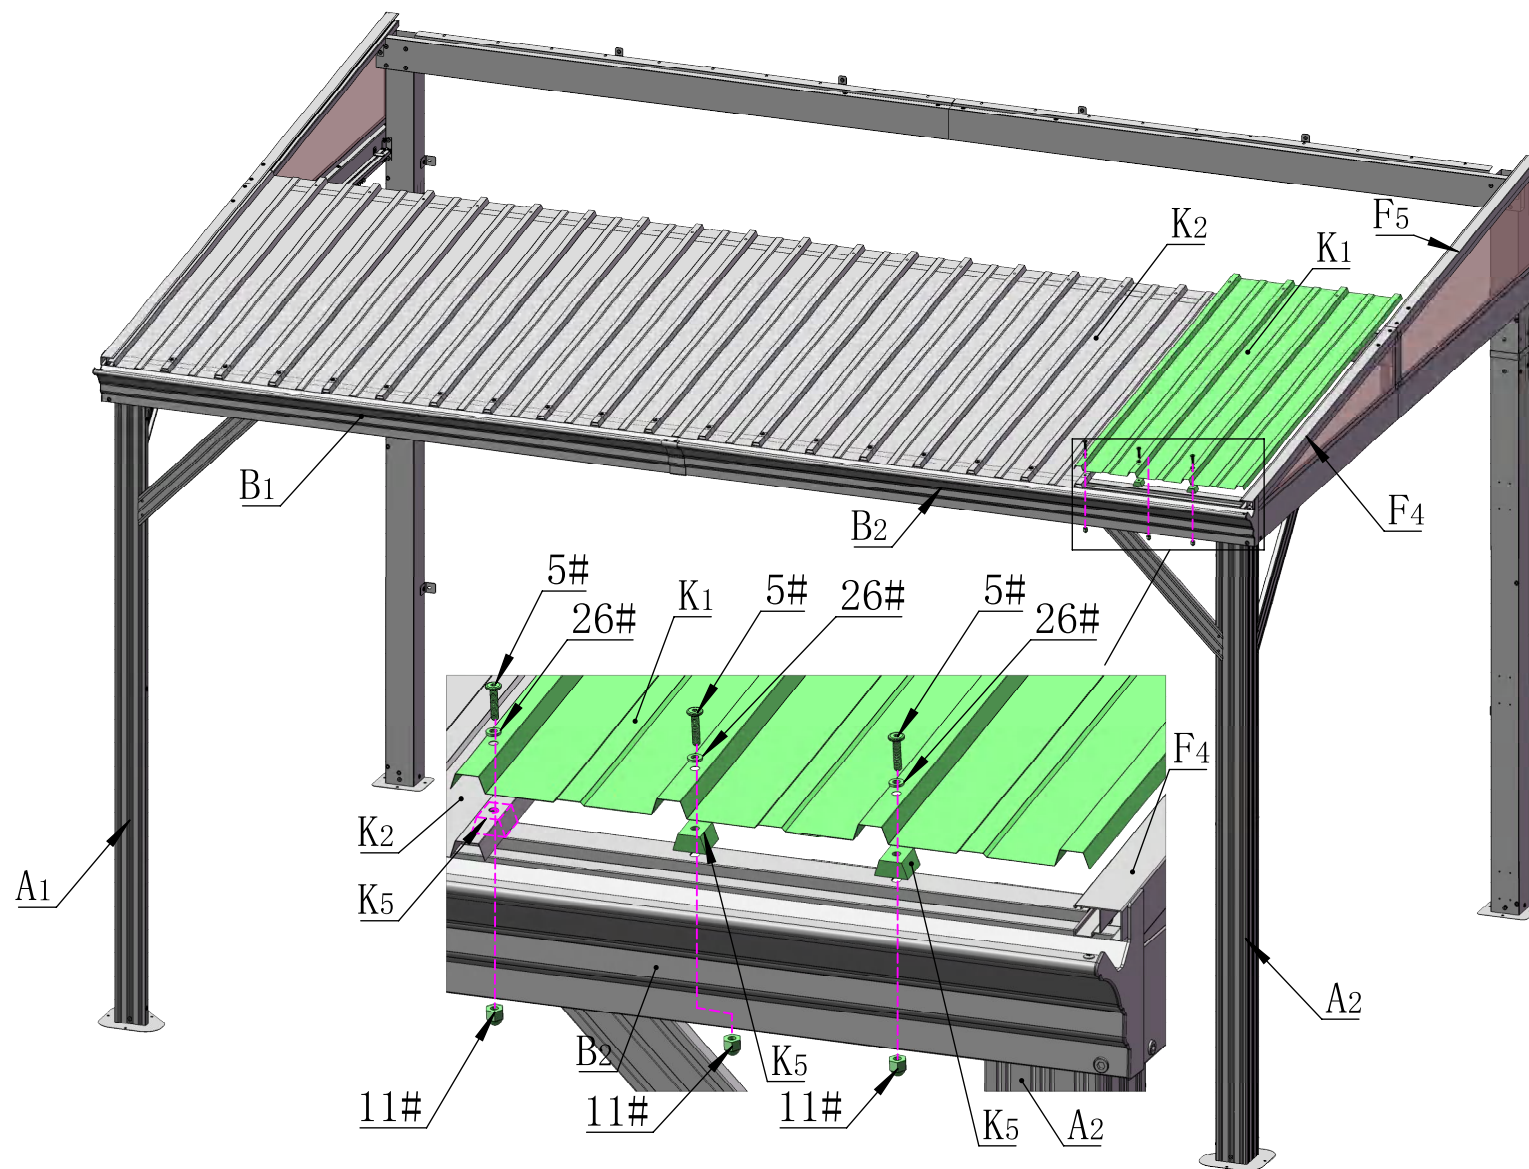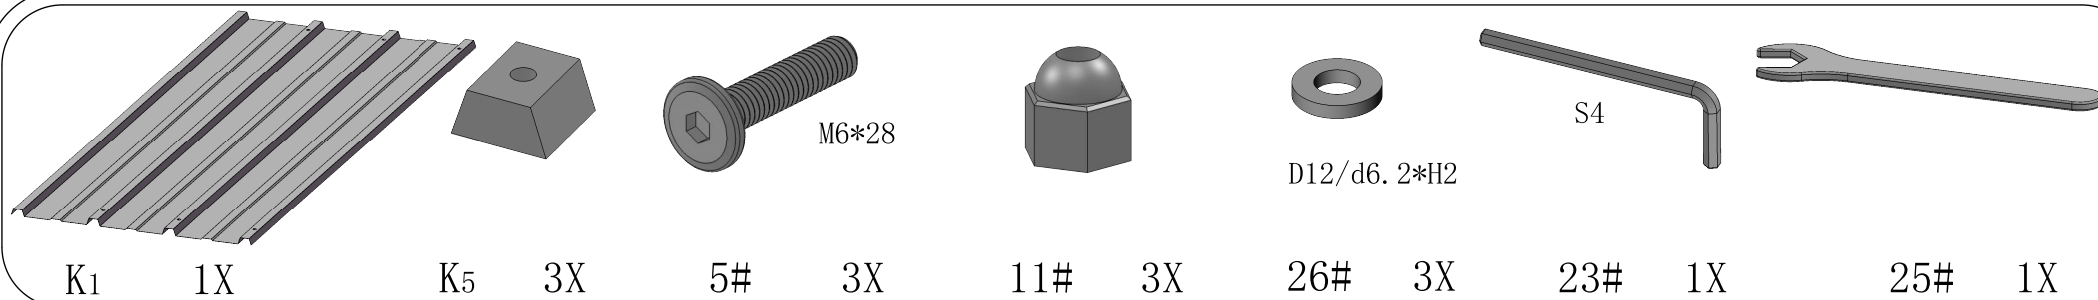


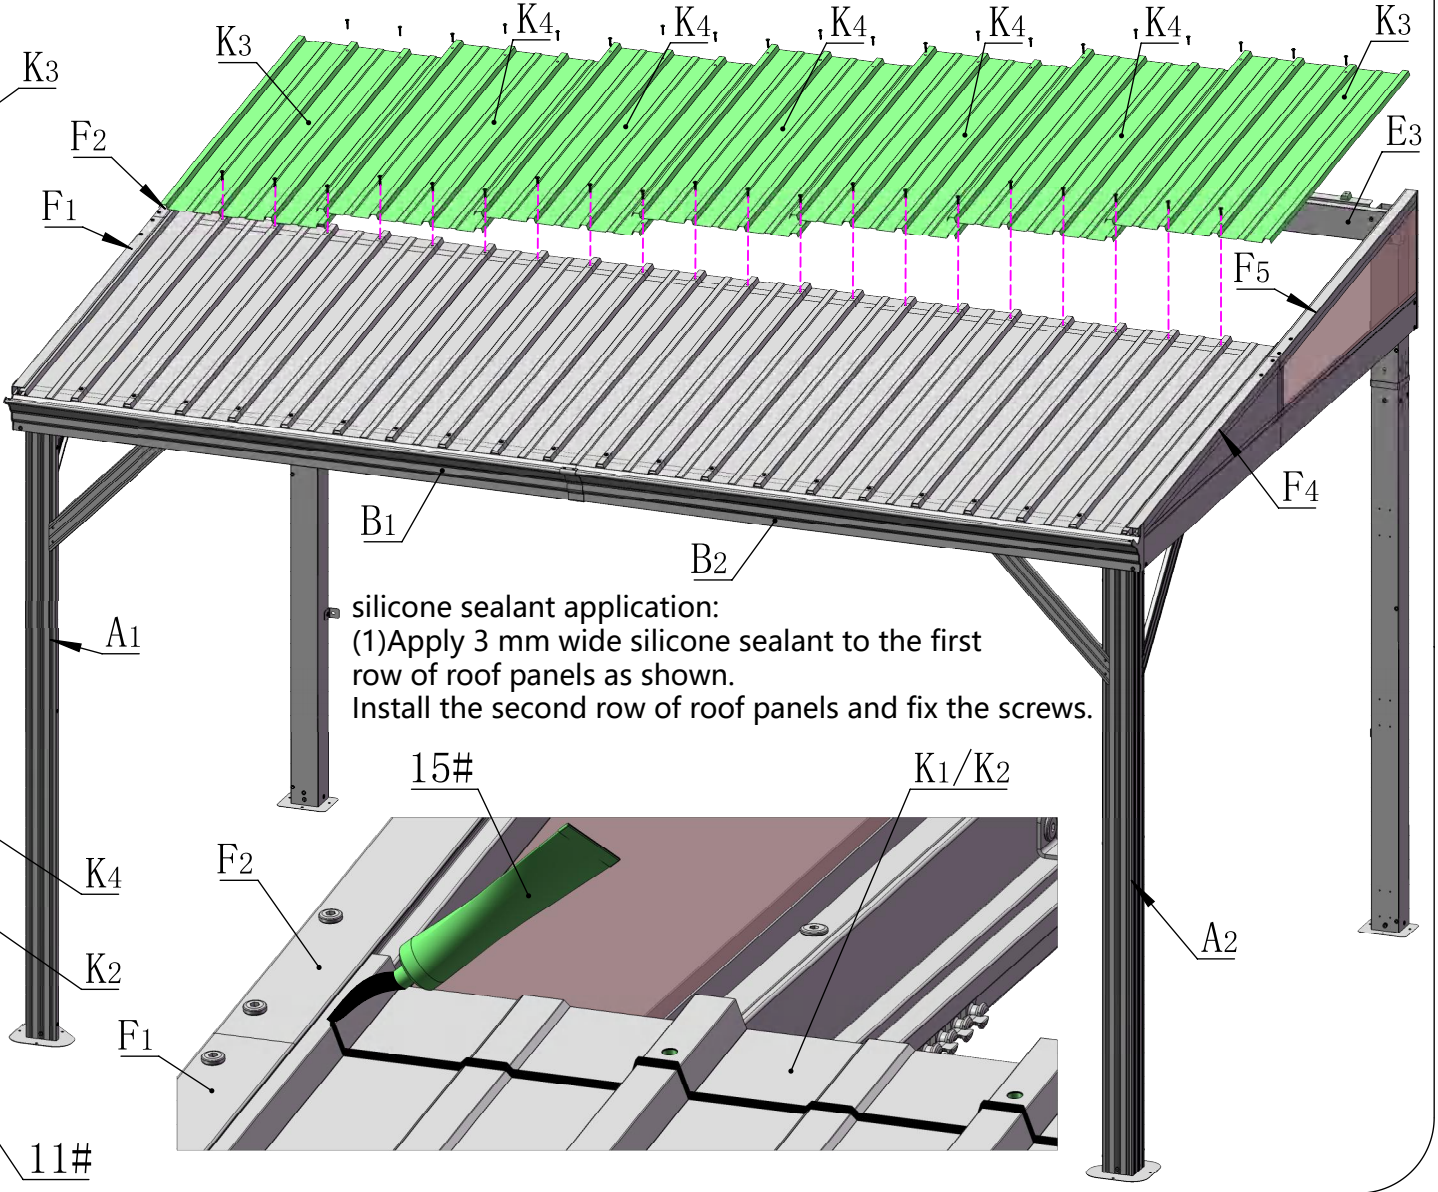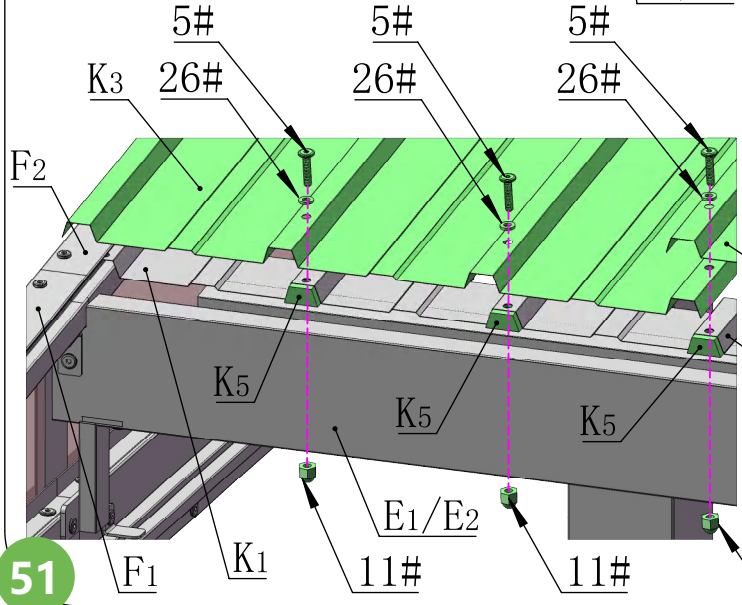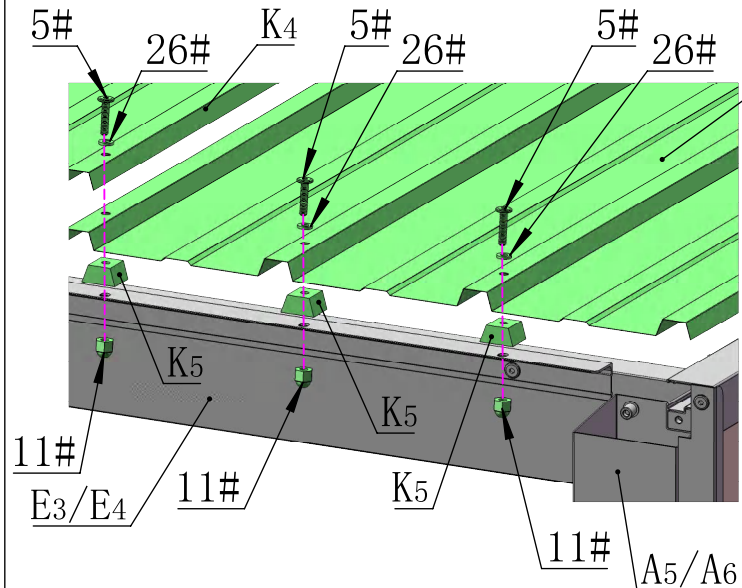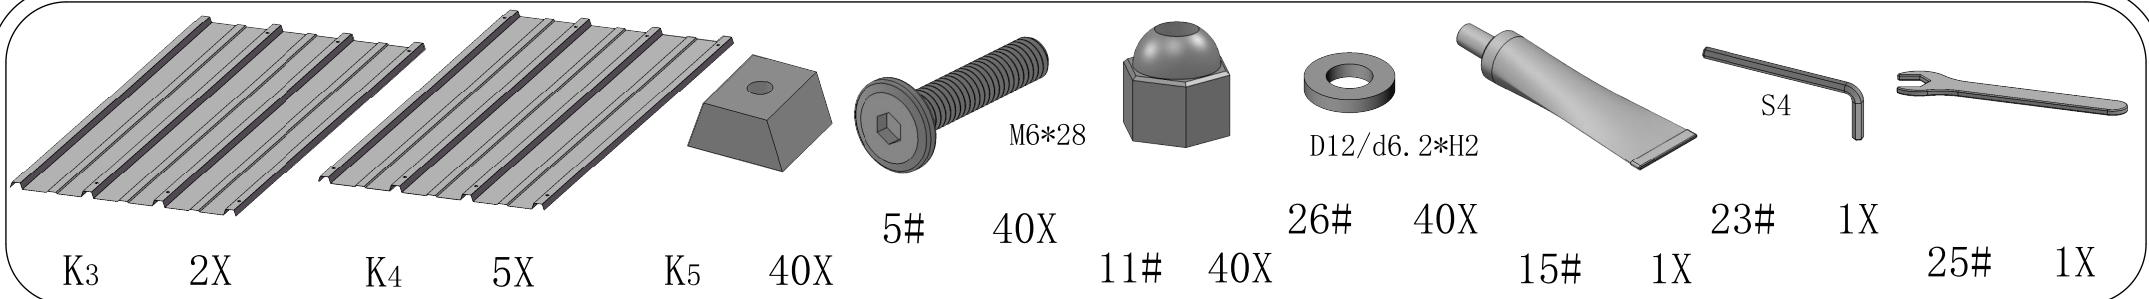

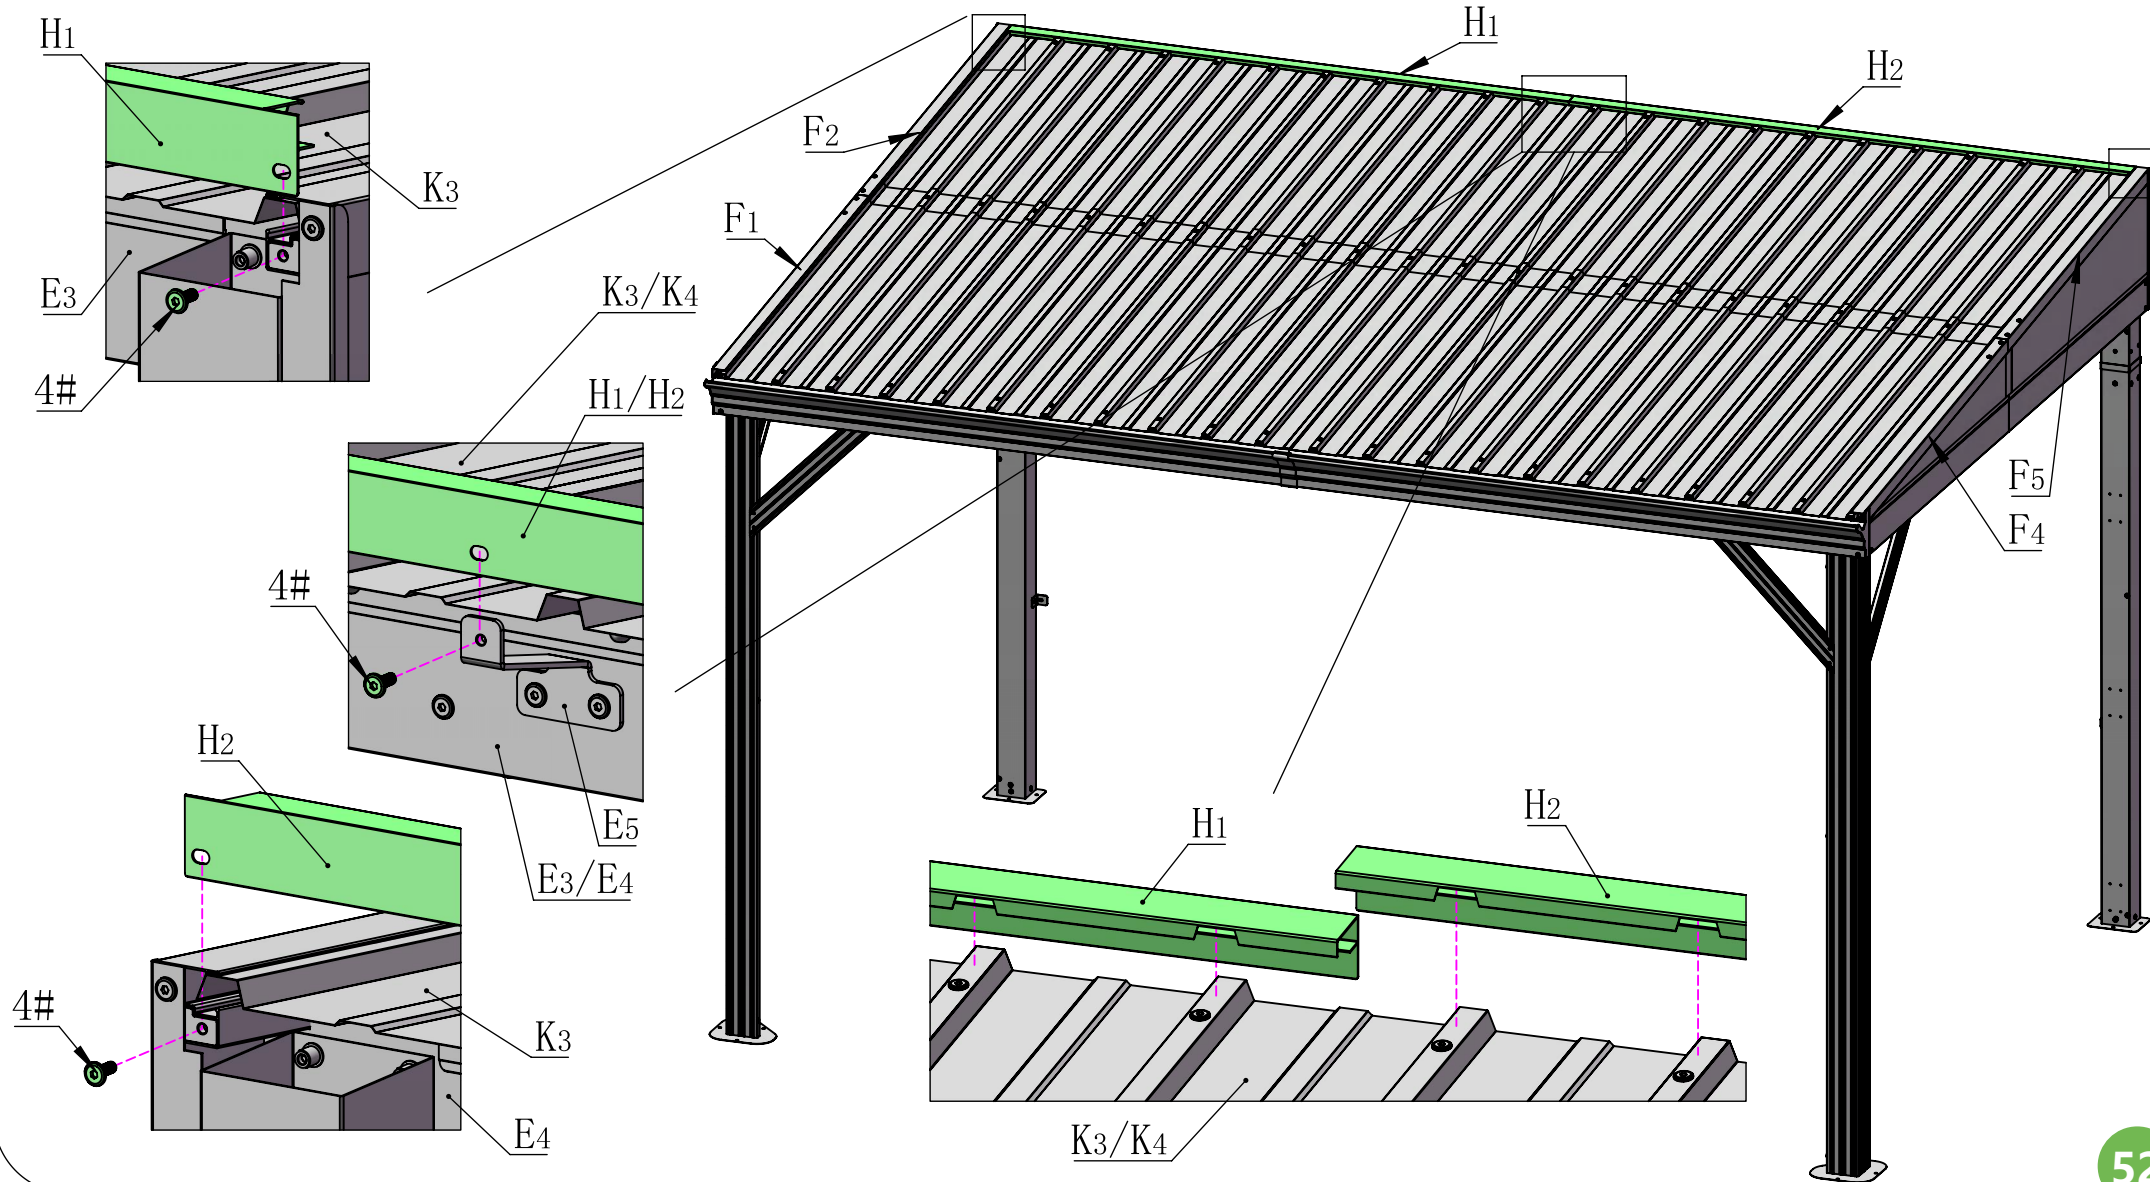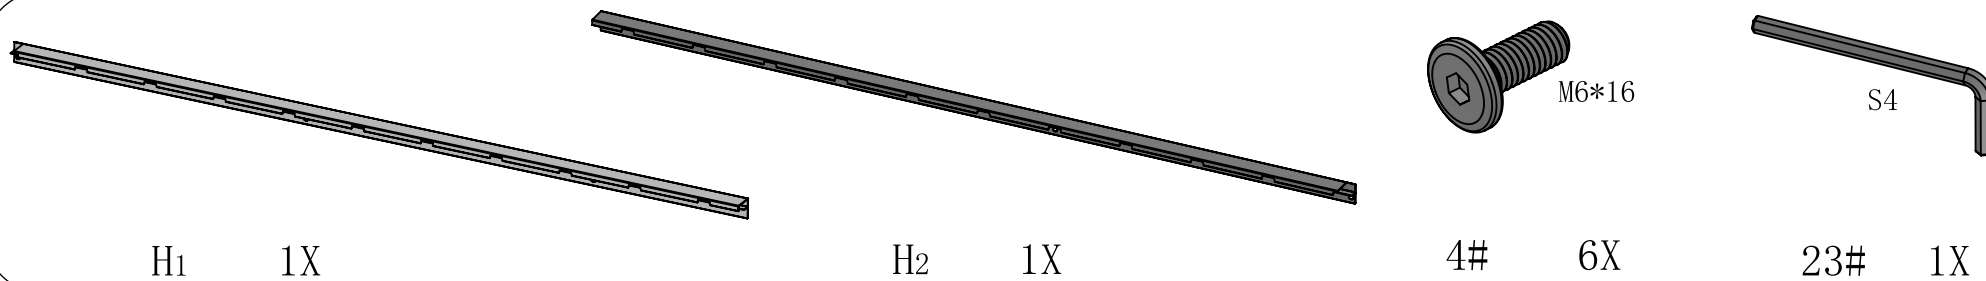

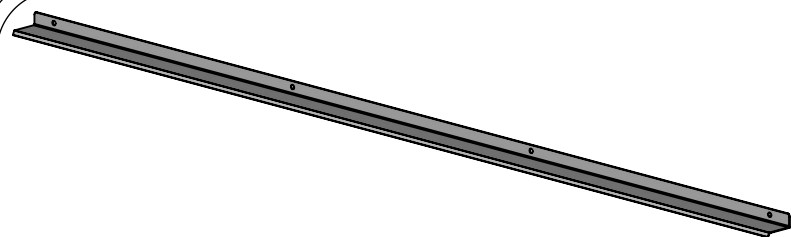


H3 2X






ST6.0*70


9# 8X

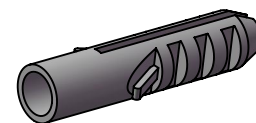

10# 8X

⚠ Install this step if you need
fix the canopy to the wall
(you need to drill holes into the wall).
Otherwise please skip this step.

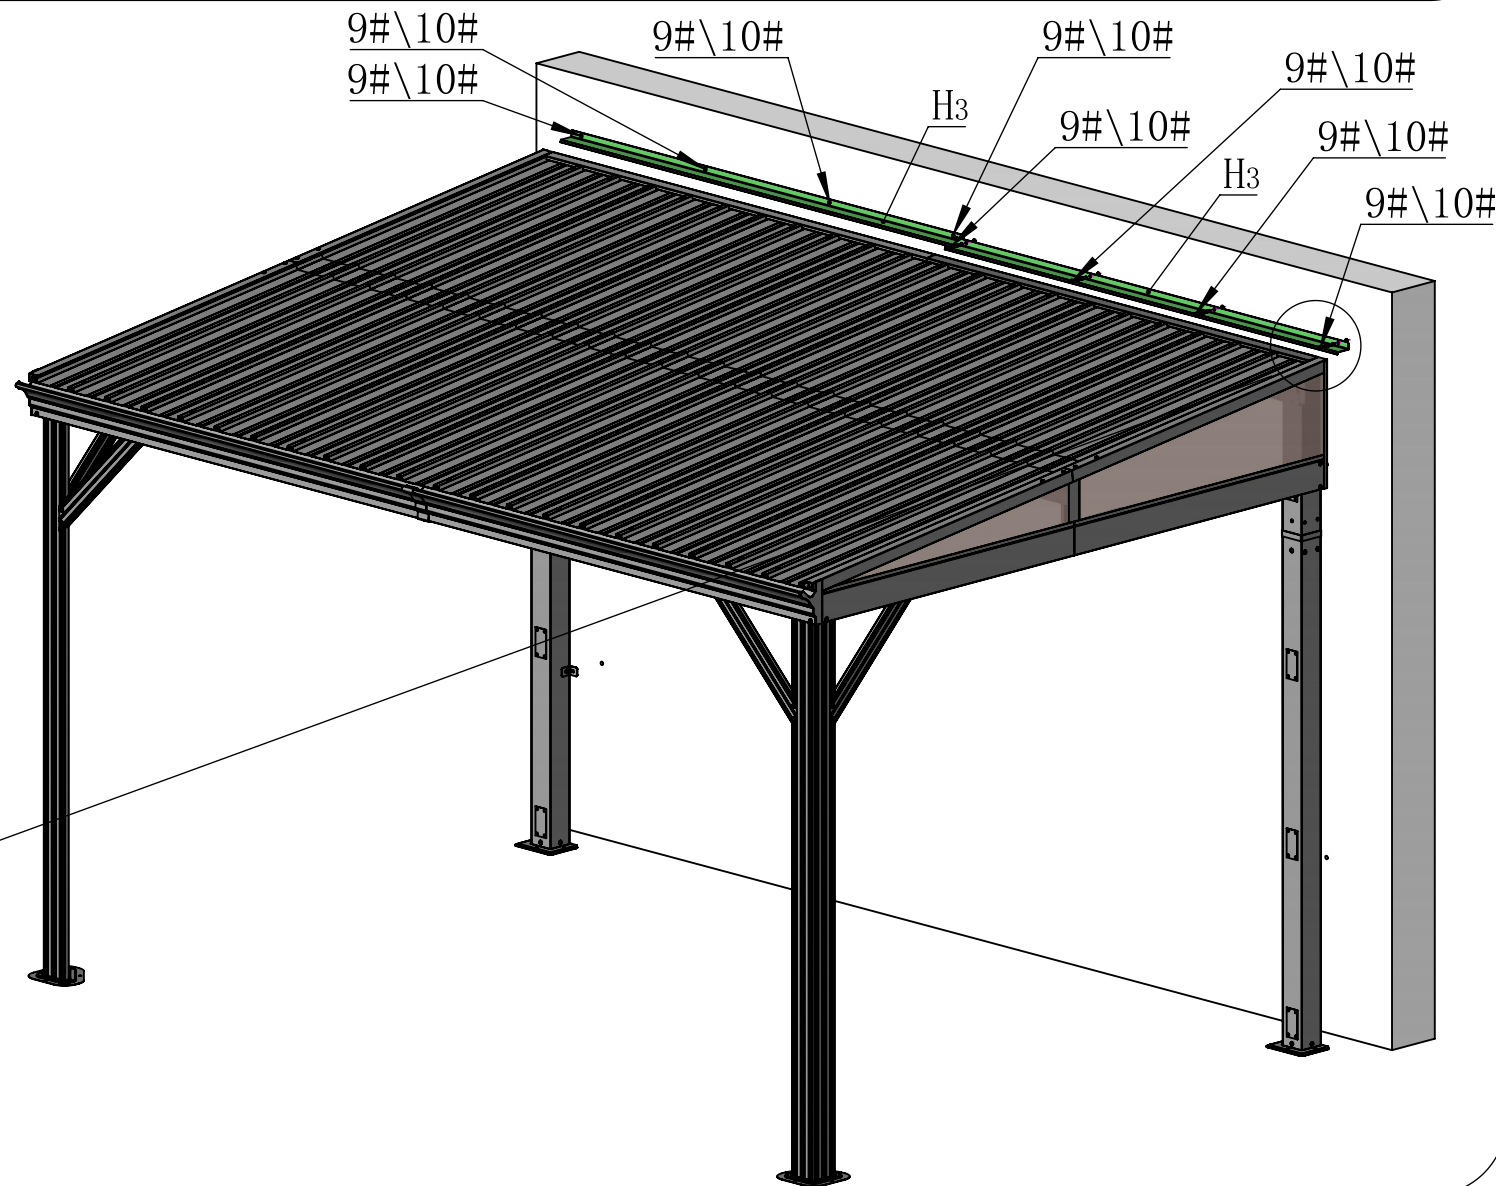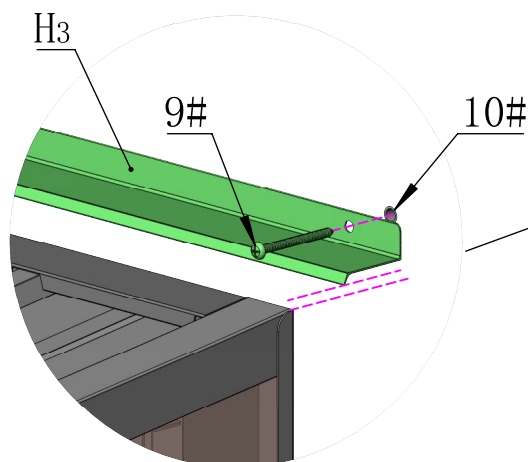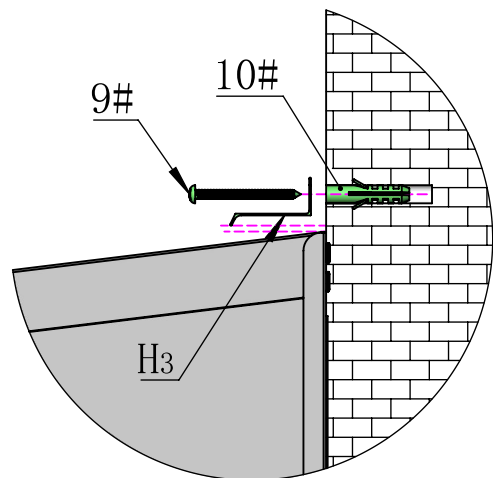


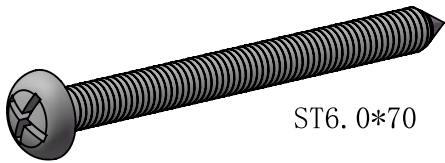

ST6.0*70

9#



6X

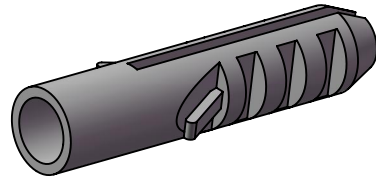


10#


6X

⚠ Install this step if you need
fix the canopy to the wall
(you need to drill holes into the wall).
Otherwise please skip this step.

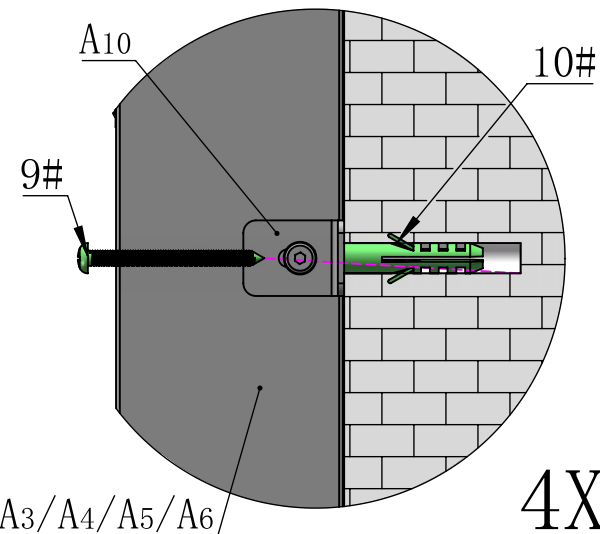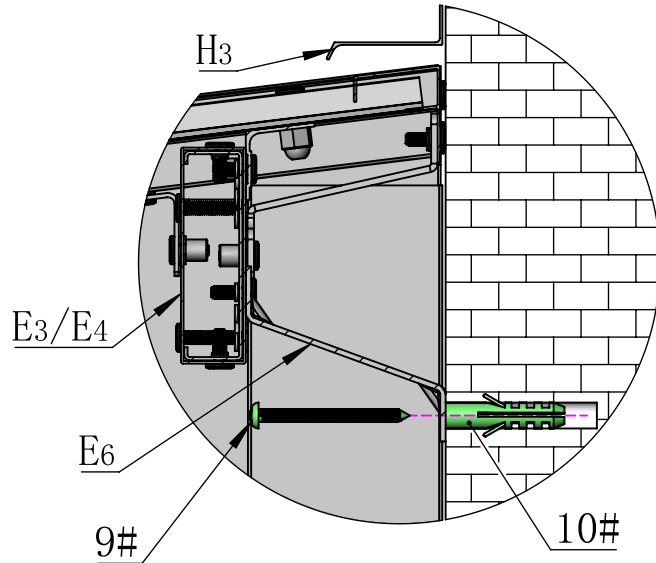

4X

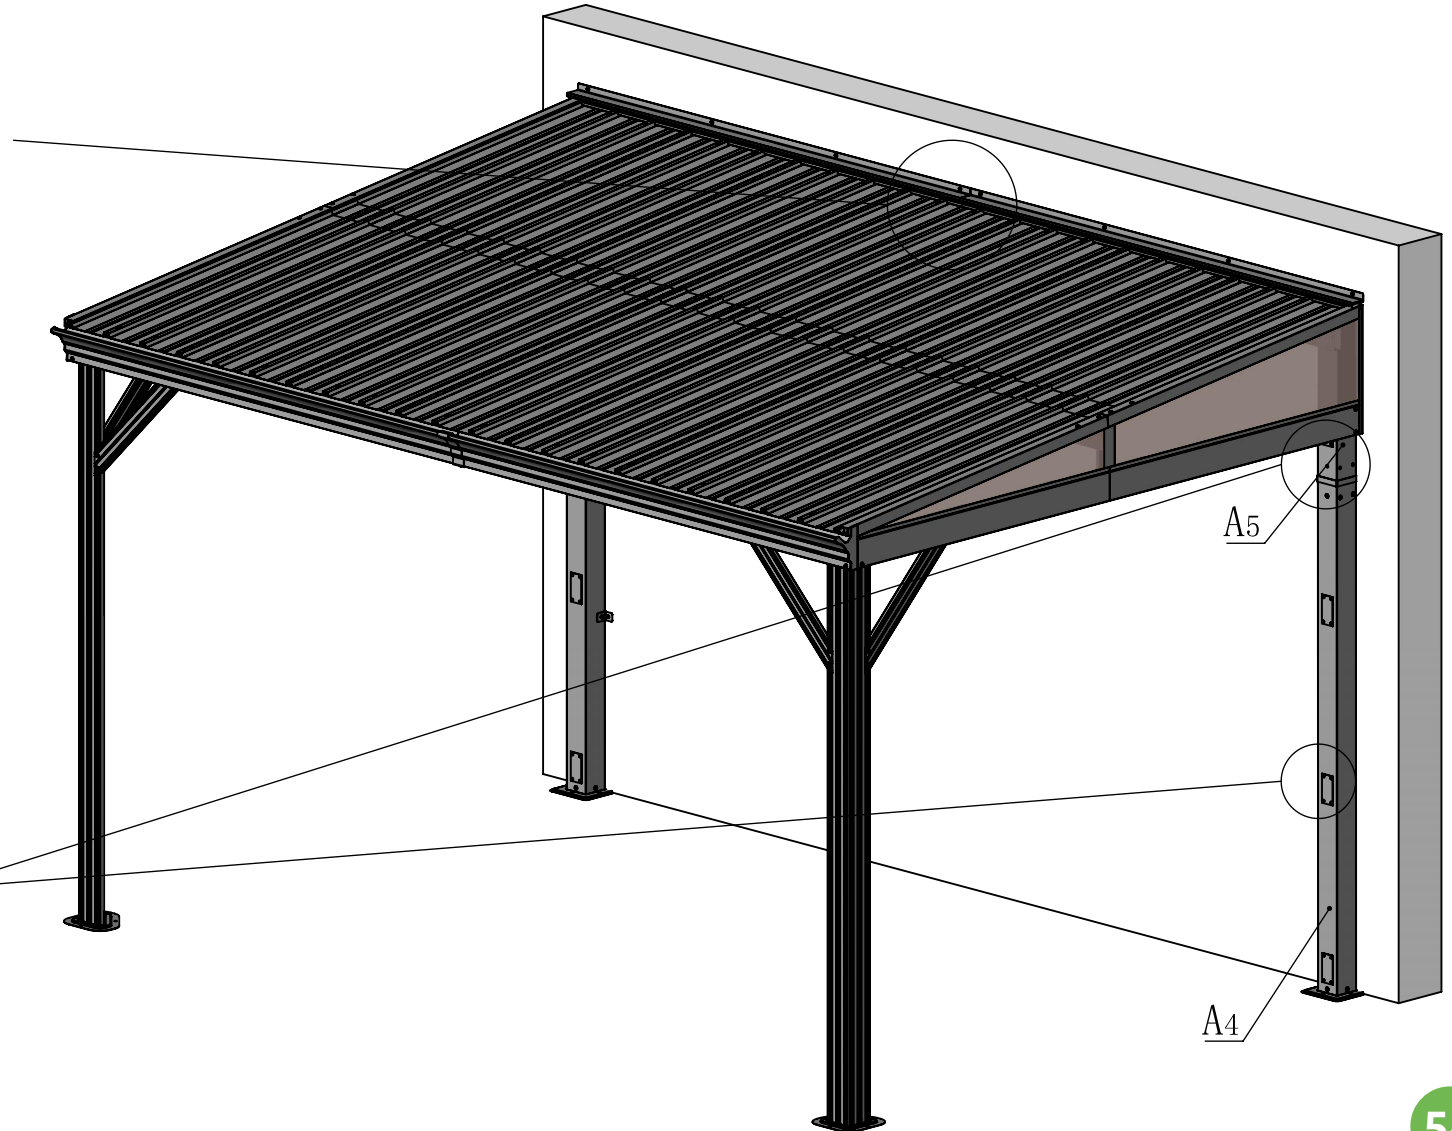

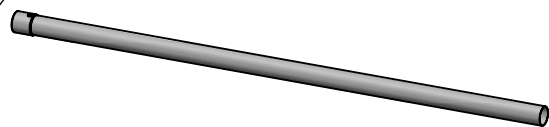

L2

1X




L3

1X



L1

1X



M8*60

12#

1X



M8

13#

1X





M8


14#

1X


Support Tube Assembly

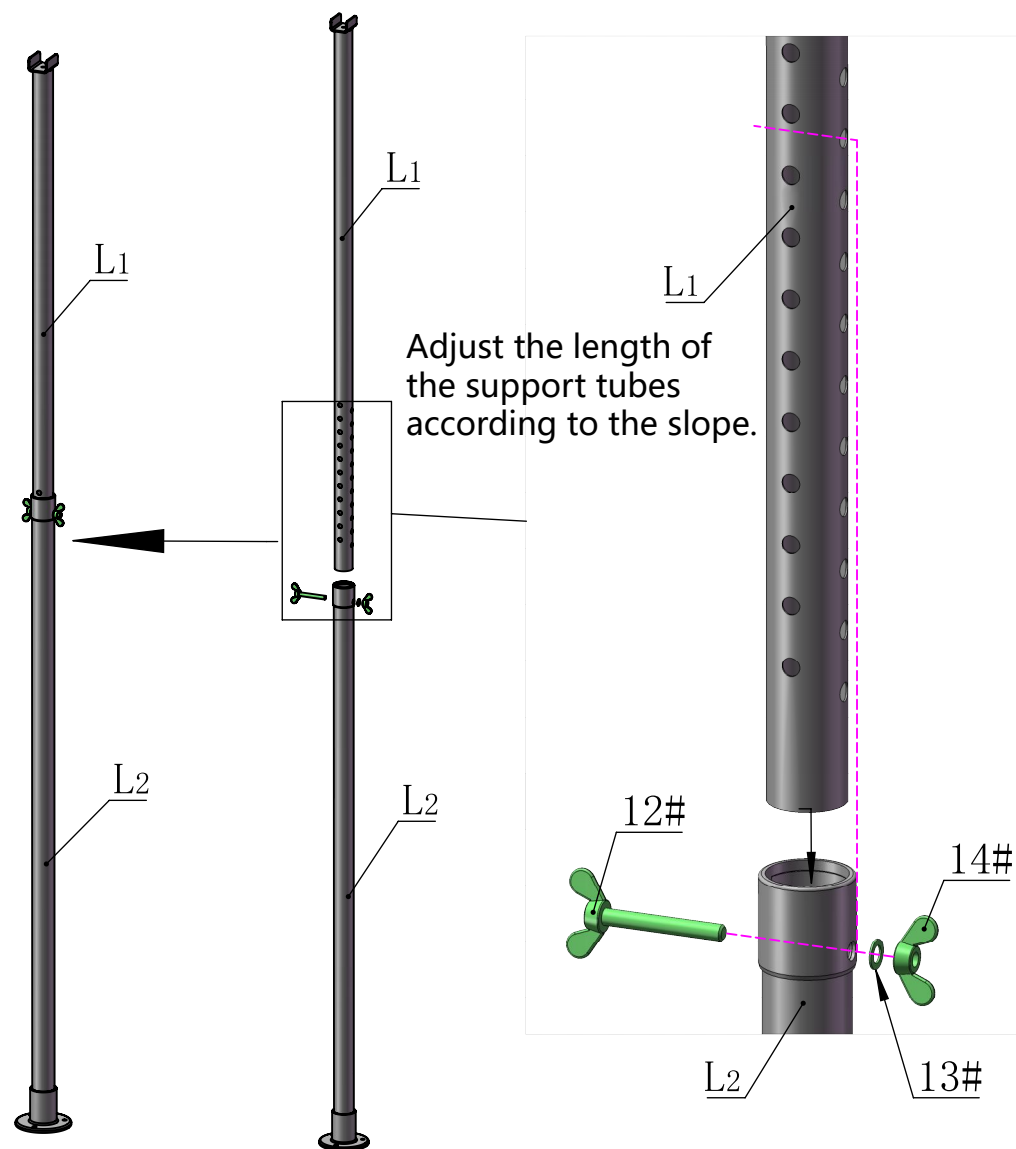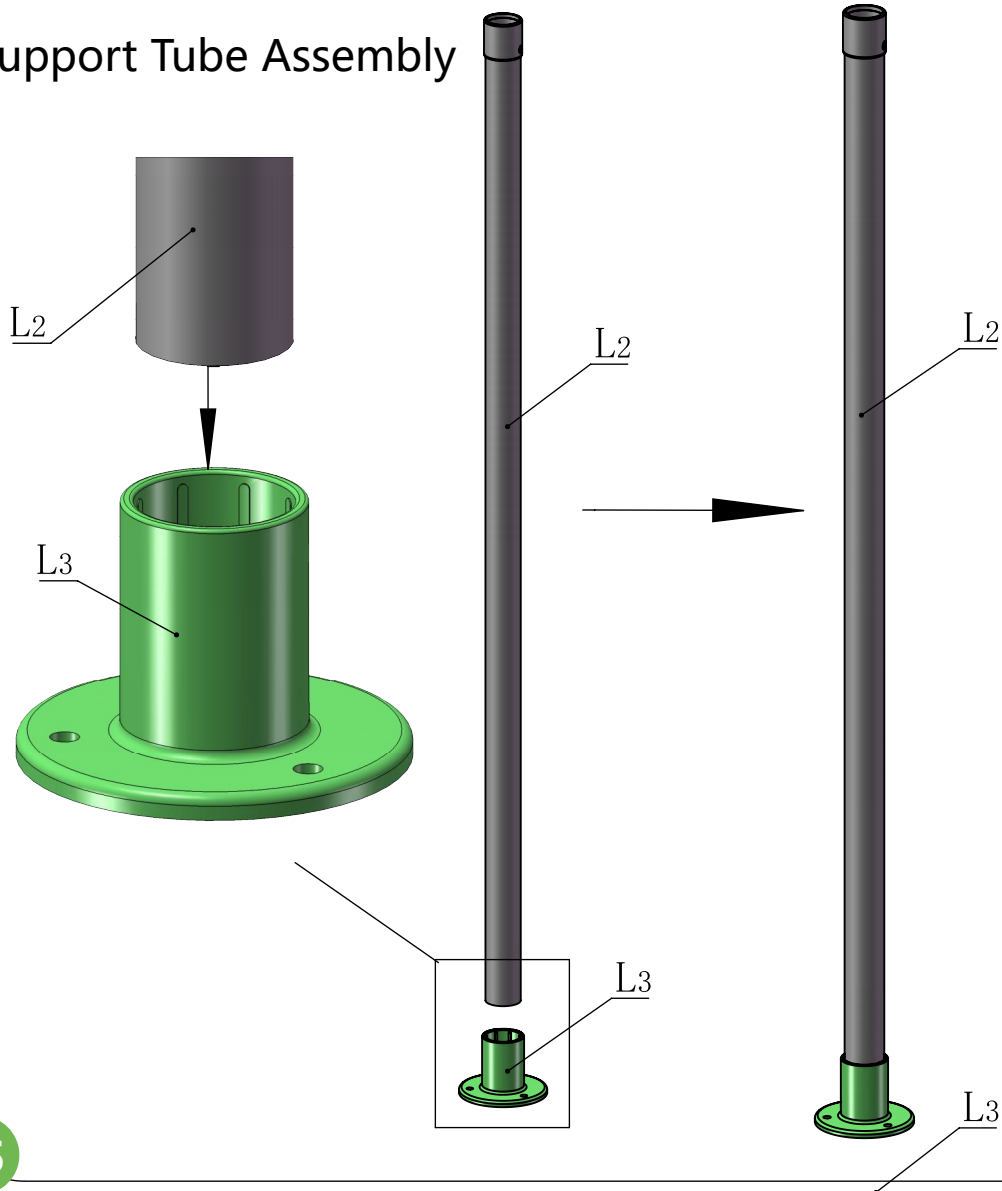


The support tube can strengthen the weight capacity of the metal roof.
In bad weather, especially snowstorm, it is essentially needed to prevent the roof from collapsing under heavy snow; In daily life, you can put it away.

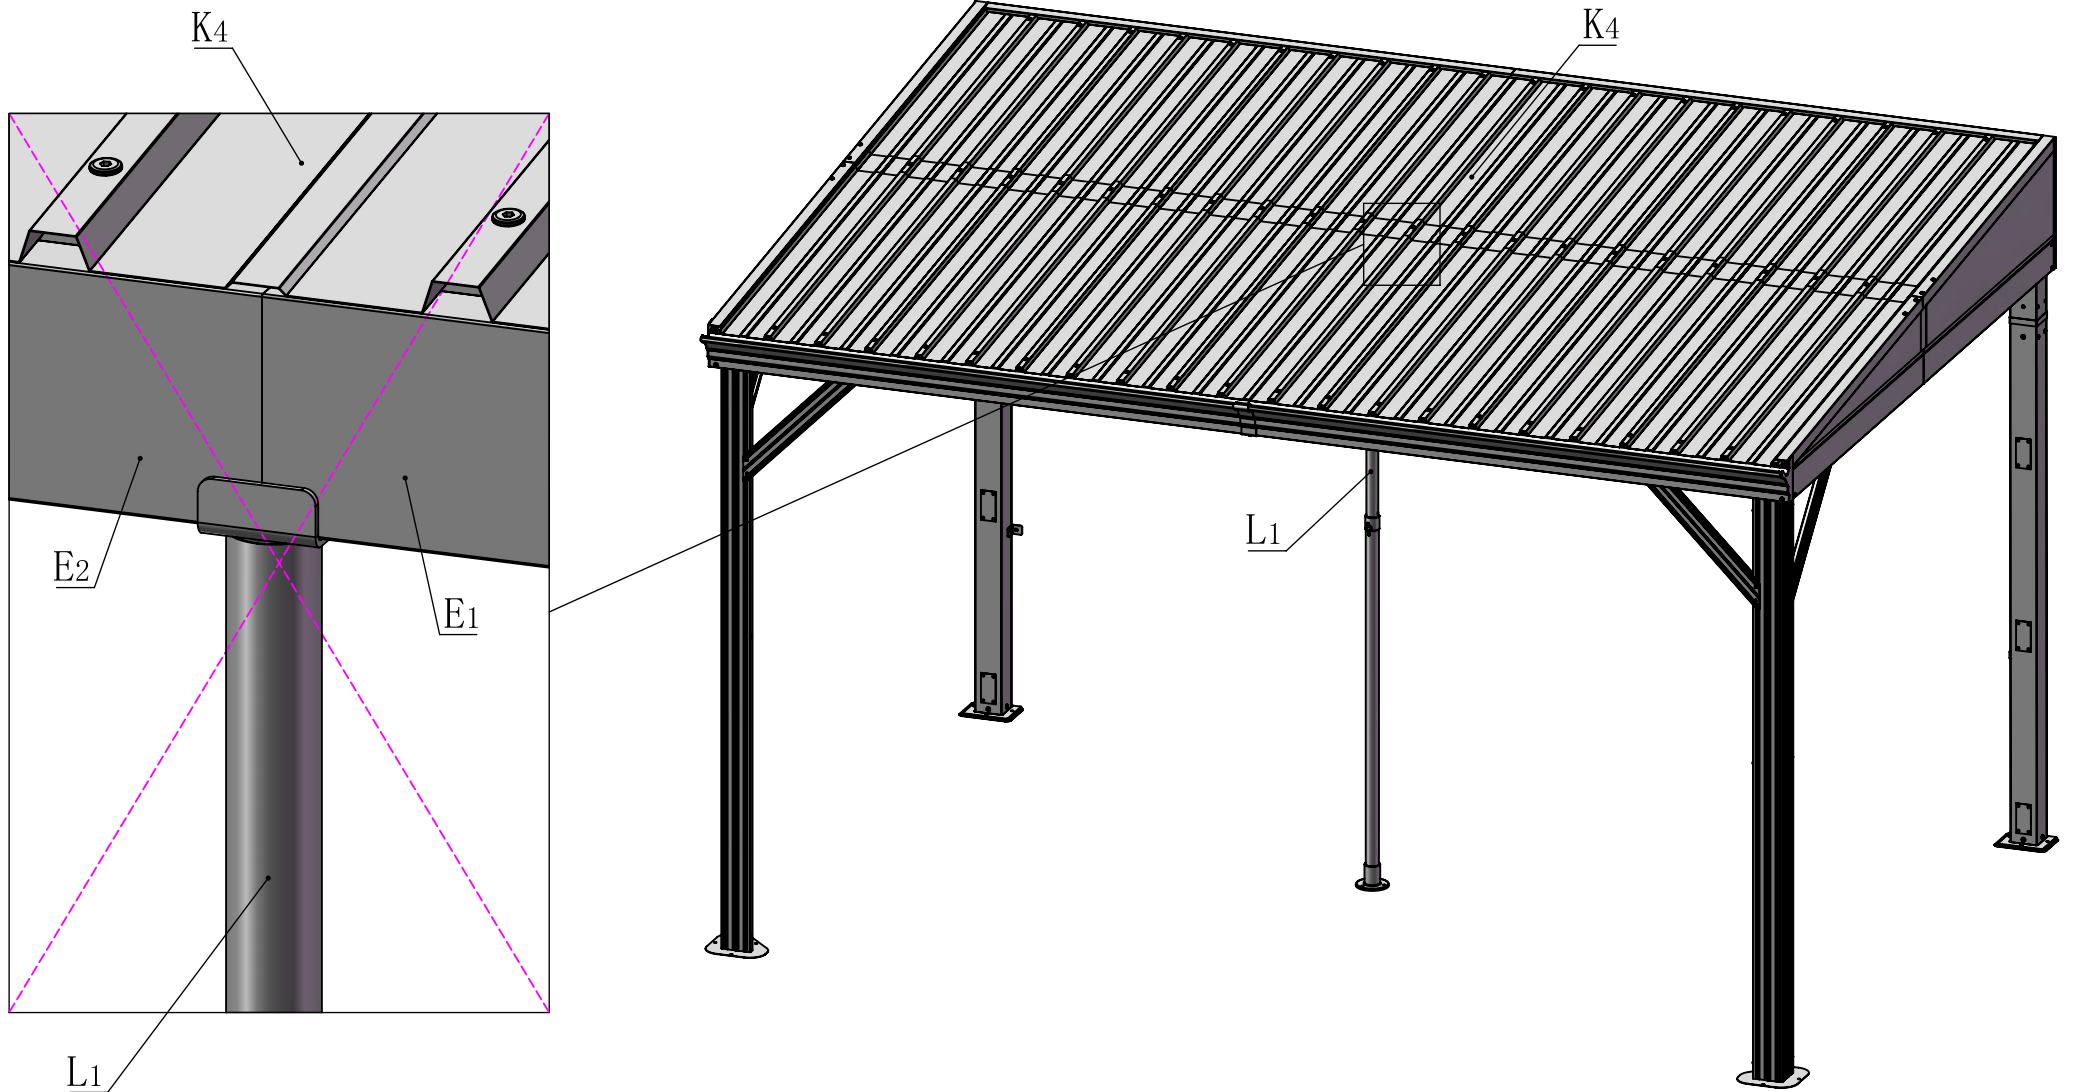


Nettings and Curtains Assembly

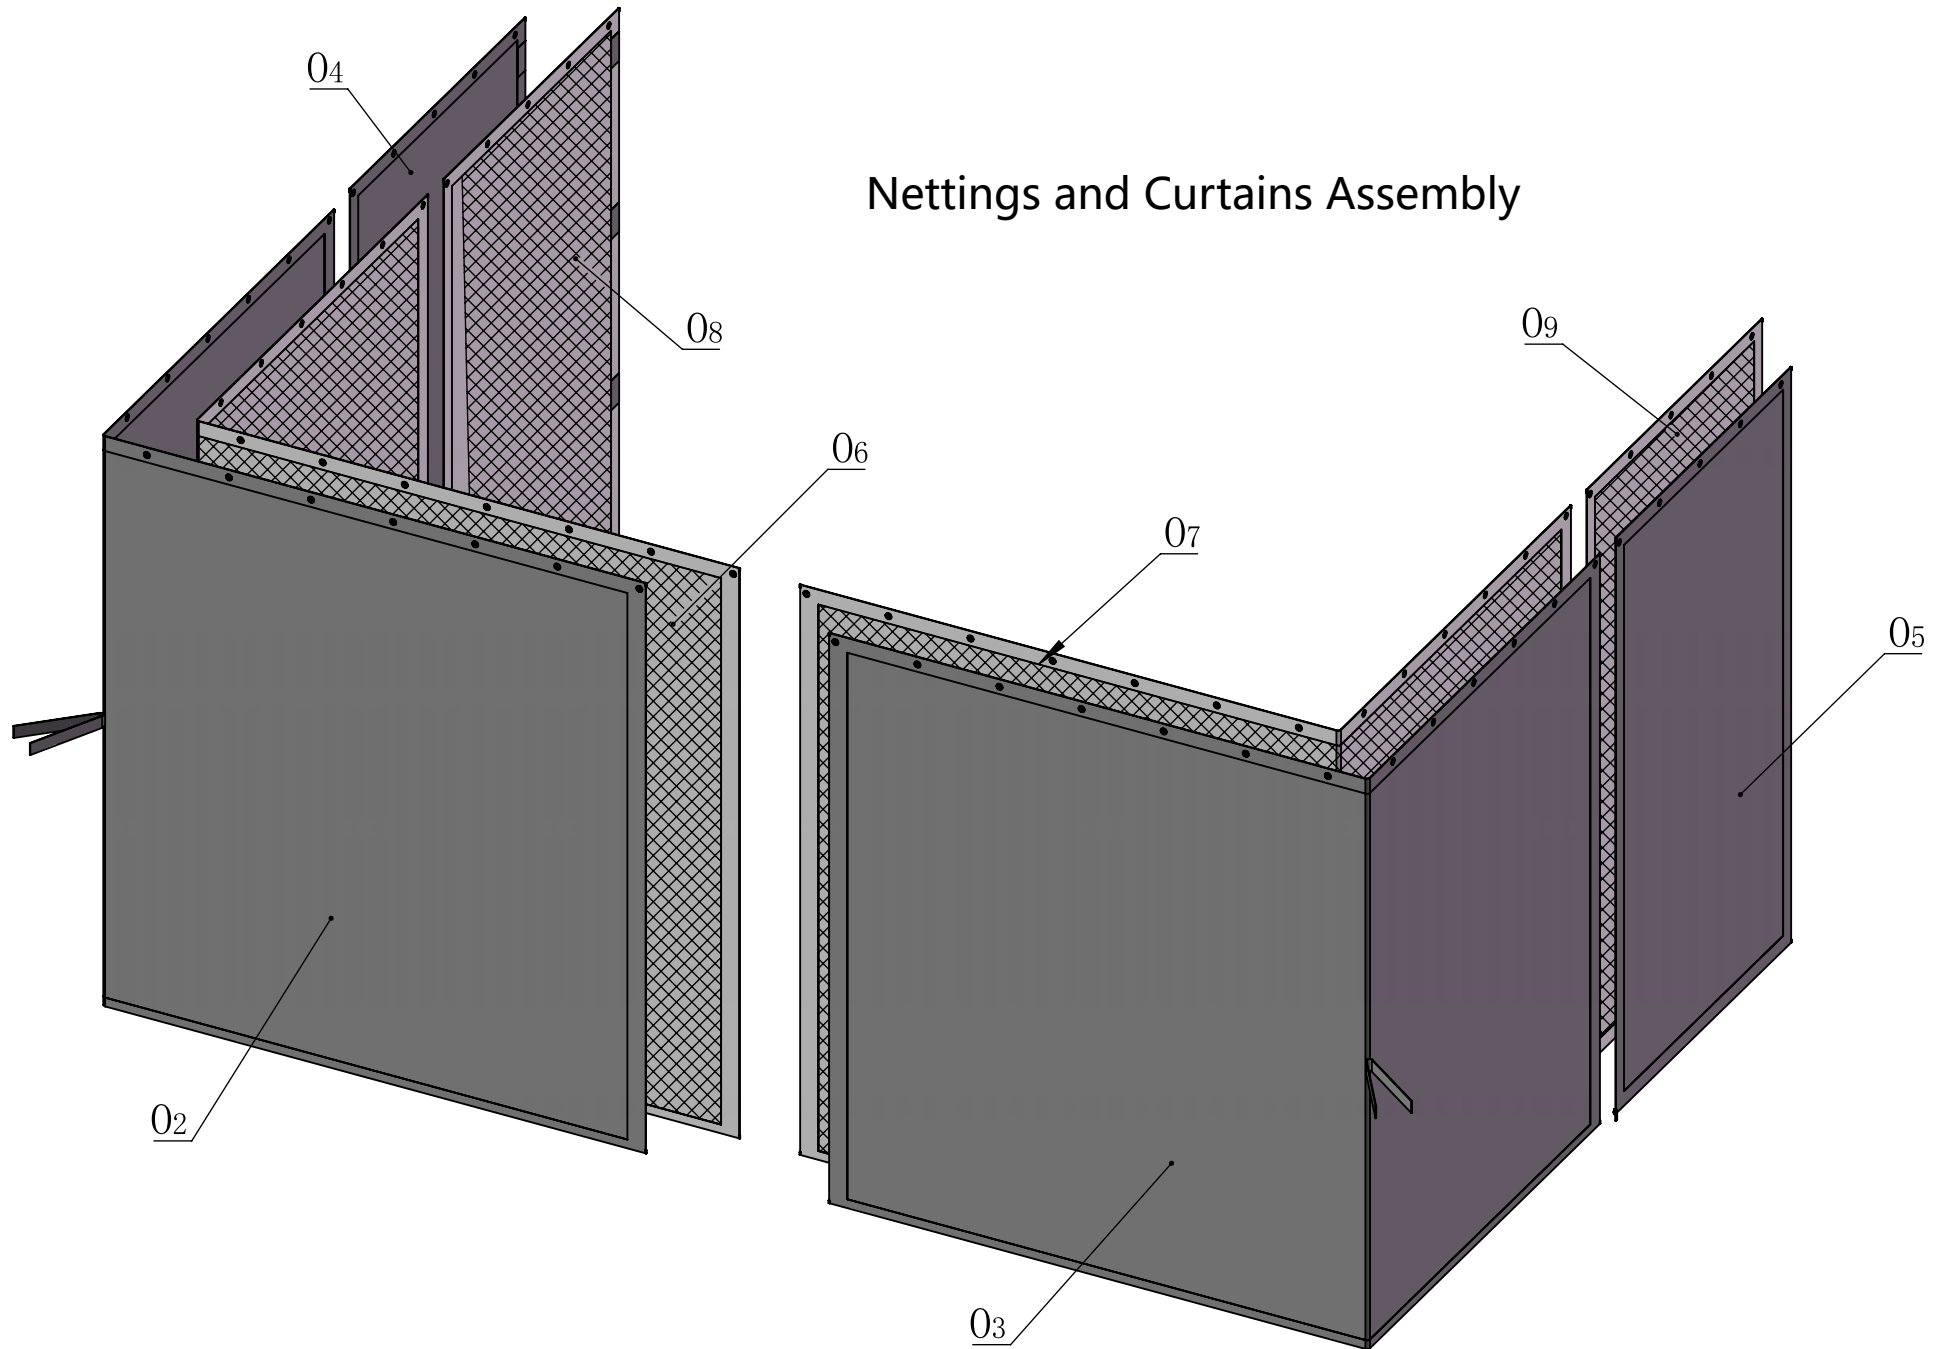


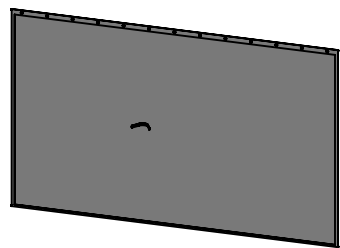


O2 1X

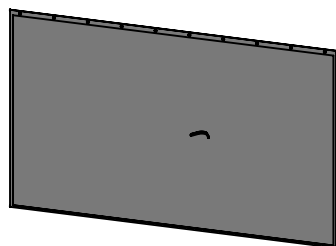


O3 1X

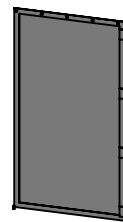


O4 1X




O5 1X

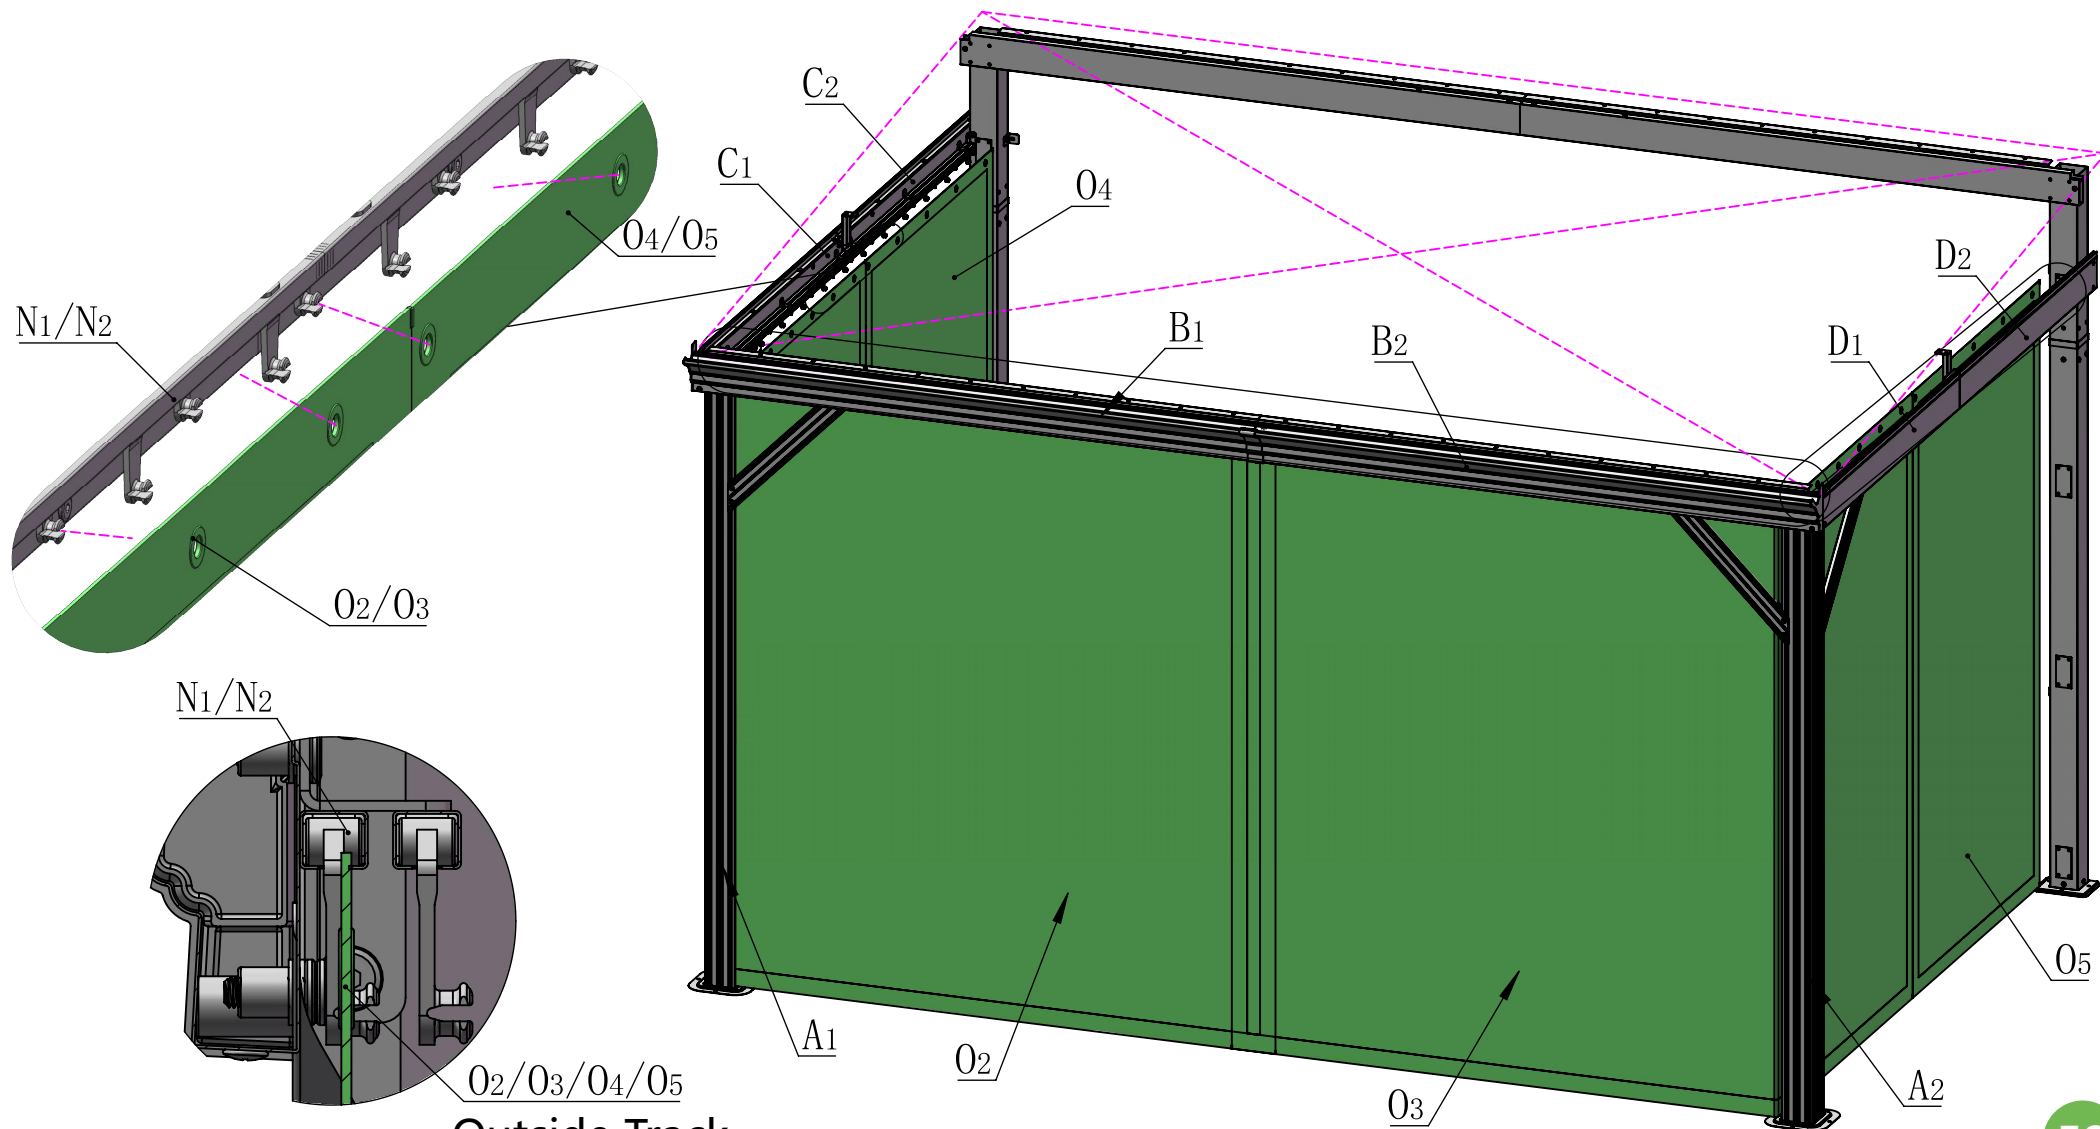


Outside Track

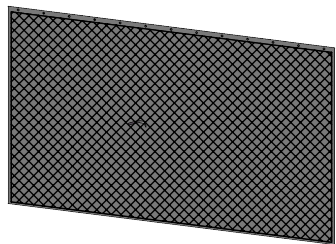


O6 1X

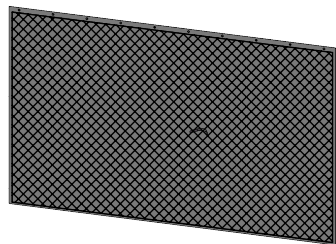


O7 1X

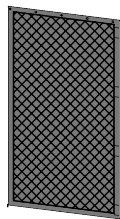

O8 1X




O9 1X

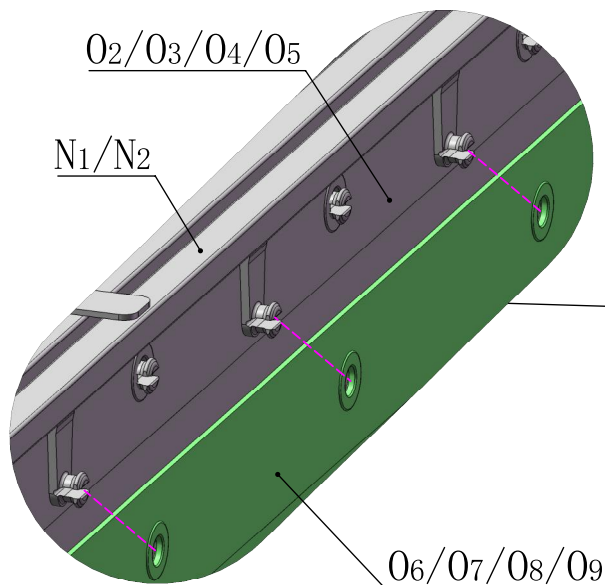

O2/O3/O4/O5

N1/N2

O6/O7/O8/O9

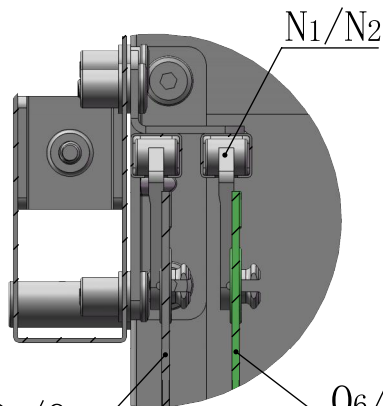





N1/N2

O2/O3/O4/O5


O6/O7/O8/O9

Inside Track

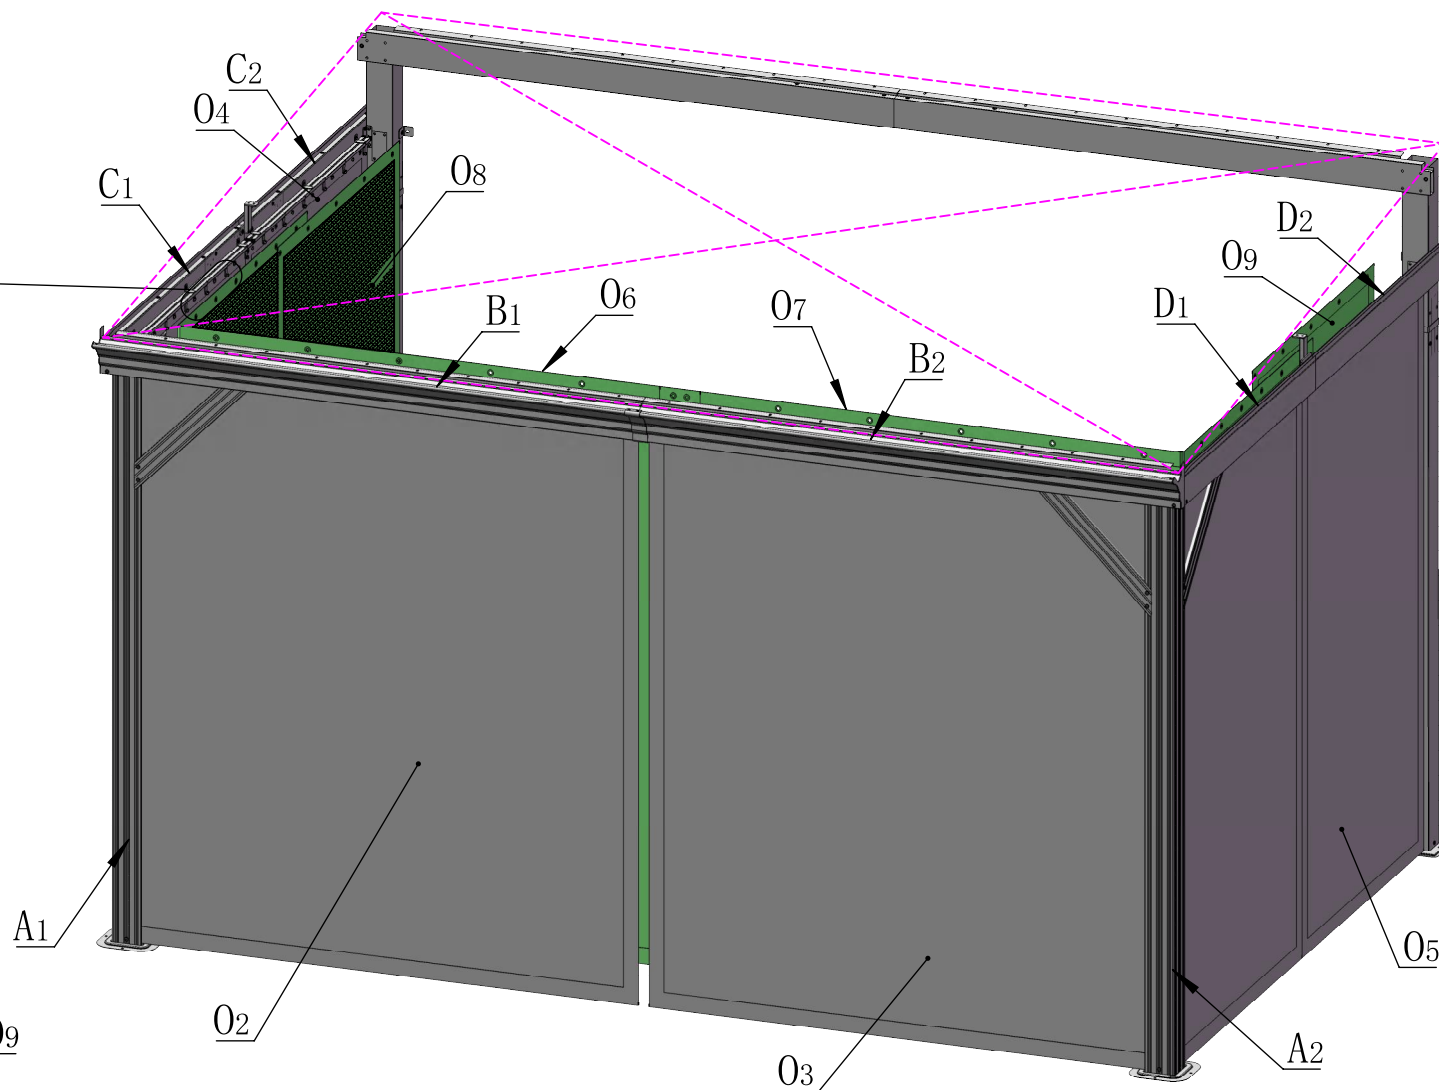

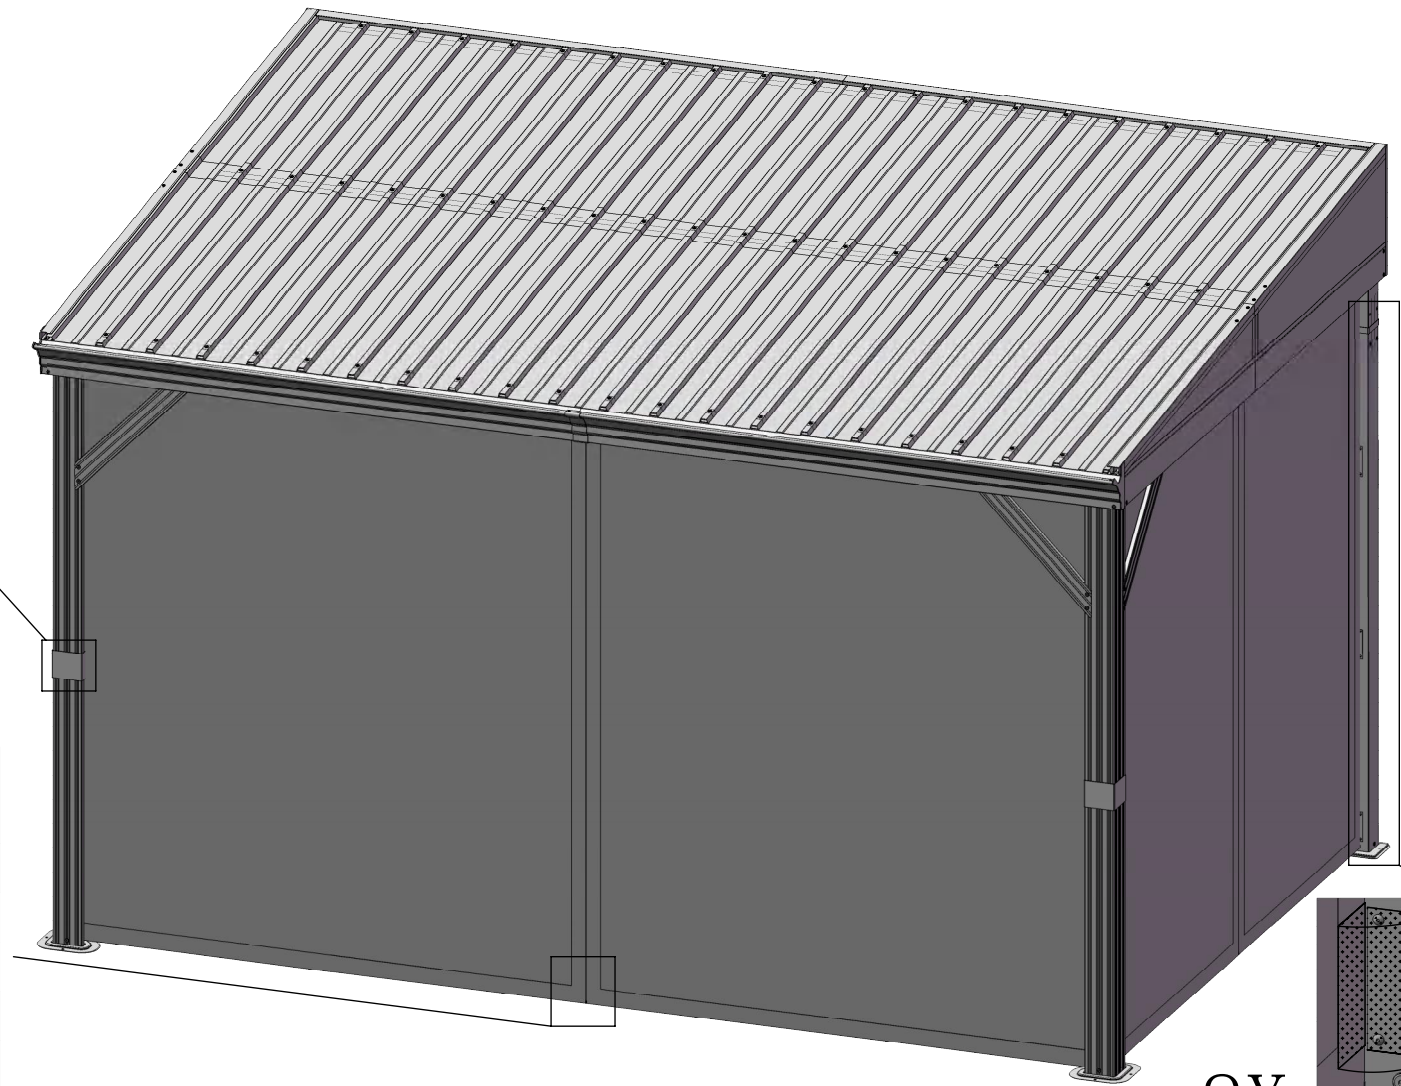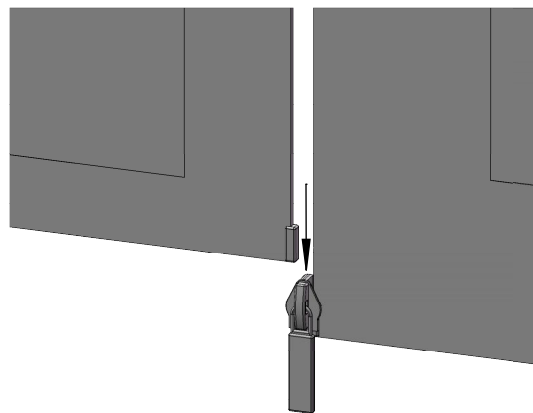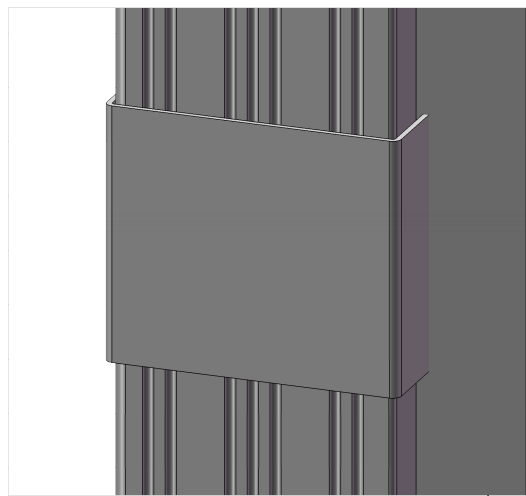

Velcro

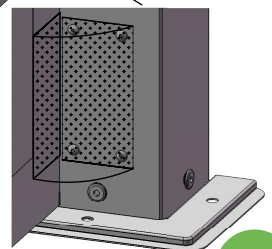


8X



Please close your gazebo curtain when it is incoming over 30 mph wind.
Use strap to tie the curtain to the poles.

01 4X

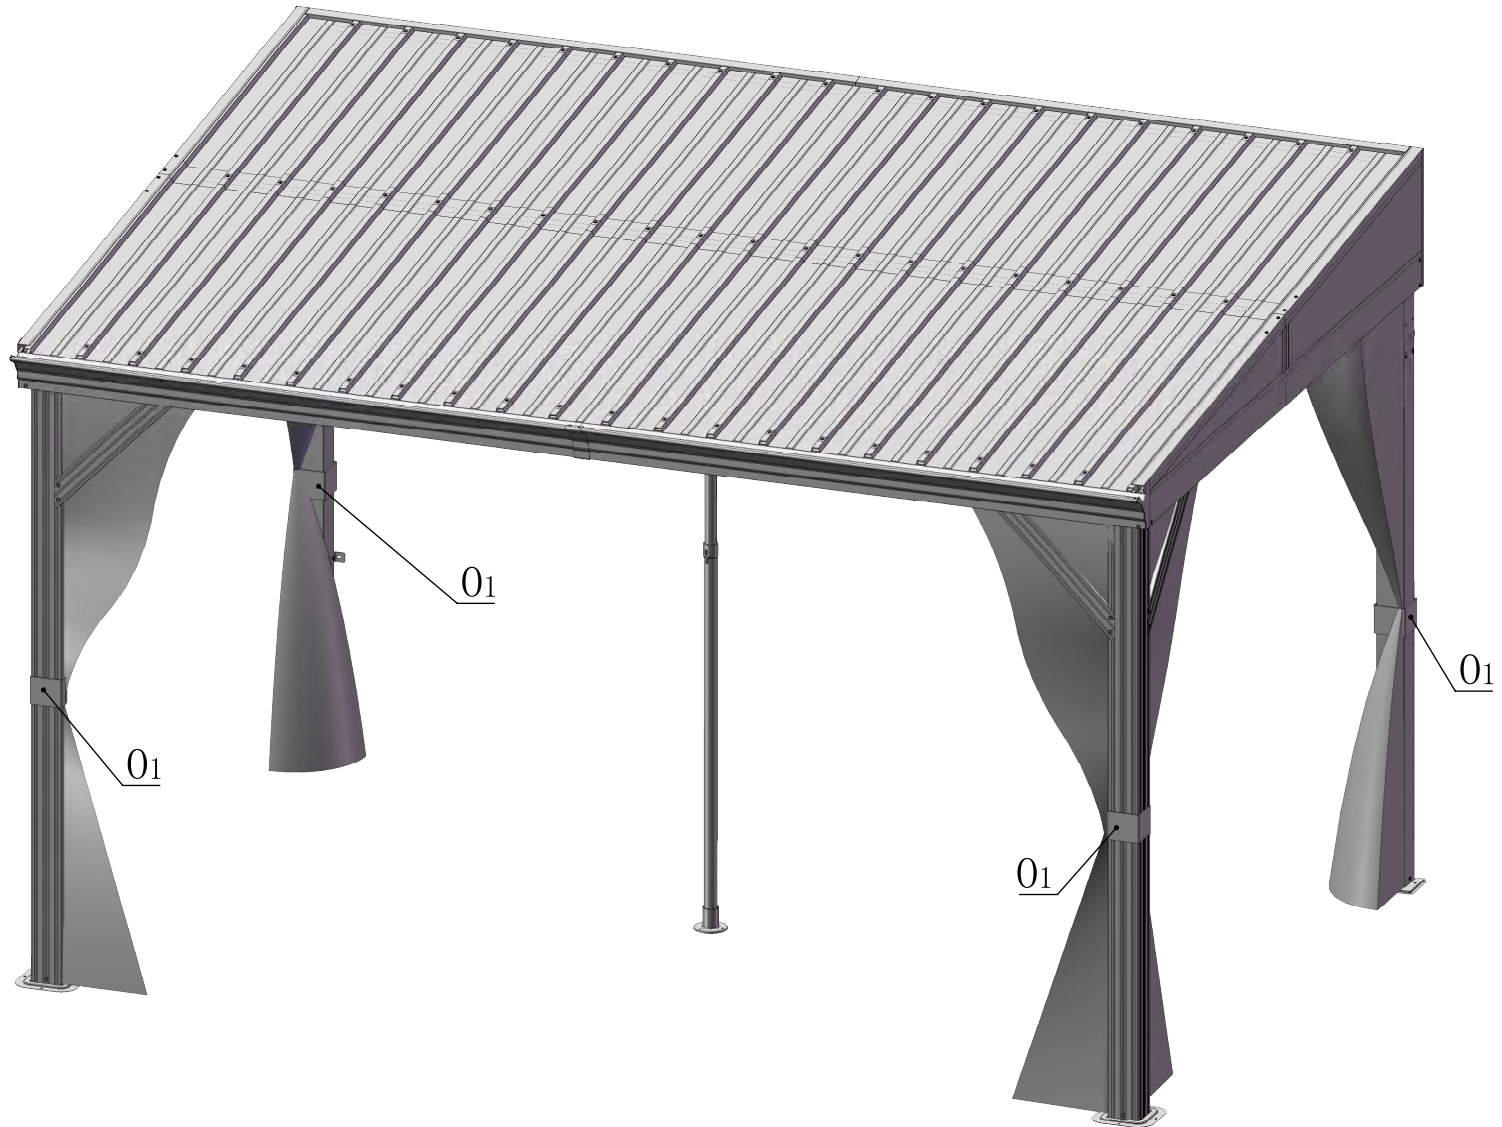

Care and Cleaning

Wash frame parts and fabric with mild soap and water, rinse thoroughly.

Dry frame completely and allow the fabric to drip dry.

Do not use bleach, acid, or other solvents on the fabric or frame parts.

Please inspect and tighten all bolts or fasteners on a regular basis to ensure proper performance and safety of your gazebo.

Warranty

Frames

Frames constructions are warranted to be free from defects in material and workmanship for 1 year from item purchased. Damage to frame from negligence won't be covered by this warranty.

Netting

Netting are warranted to be free from defects in material and workmanship for 1 year from item purchased. Damage from exposure to chemicals (including but not only oils ,spills, fluids) won't be covered by this warranty.

Bolts & nuts

Bolts and nuts are warranted to be free from defects in material and workmanship for 1 year from item purchased. Damage from exposure to chemicals (including not only oils ,spills, fluids) won't be covered by this warranty.

Warranty Limitation

This warranty is for the original purchase order only. (Order number required). This warranty is non-transferable. Domi outdoor living is responsible for the free replacement part including shipping charges for the 1 year warranty.

Warranty Exclusion

This warranty does not cover products subject to negligence, abuse usage, inappropriate installation. Domi outdoor living reserves the right to explain warranty exclusions. When the replacement item is applied, the 1 year warranty automatically expires. Please feel free to contact us for applying warranty.



RESORT COMFORT IN YOUR
OWN BACKYARD

Support:



Business cooperation contact email:

marketing@domioutdoorliving.com

After-sales contact email:

service@domioutdoorliving.com

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.