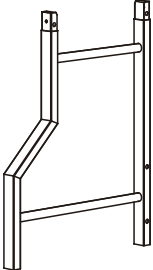

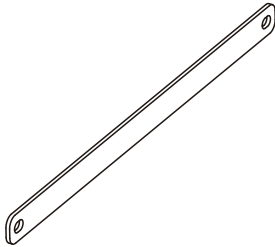

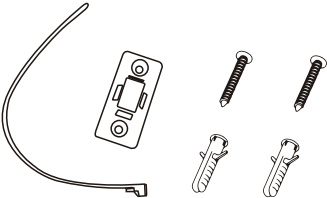


INSTALLATION MANUAL


PART DESCRIPTIONS			
			
A Wooden Shelf①*3	B Wooden Shelf②*3	C Bottom Tube①*1	D Bottom Tube②*1
			
E Bottom Frame*2	F Vertical Tube①*4	G Vertical Tube②*4	H Vertical Tube③*4
			
I Horizontal Tube*2	J Toilet Paper Holder*1	K Metal Rack*2	L Leveling Foot*4
			
M M5×8 *13	O Hex Key*1	Q Wall Anchor Strap Kit*2	
			
N M5×35 *18	P Hook*5		

GUARANTEE

If you have any queries regarding your product, please feel free to contact us. We will offer you a replacement or a FULL refund.

INSTALLATION STEPS



STEP 1: Connect A and B to get a long wooden shelf, repeating 3 times. Connect C and D with M to get a long tube.

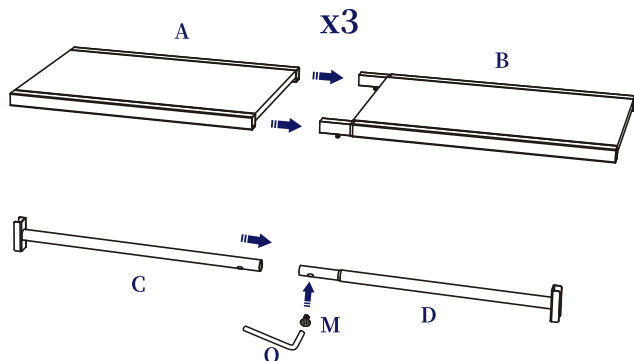


STEP 2: Attach 4 Ls to 2 Es. Then fasten the long tube (Step 1) to Es with 2 Ns and O.

NOTES: 1. If there is no gap between the wall and the water tank, pass the long tube underneath the tank, then connect both sides.

2. The long tube can be installed to the upper or lower screw hole of E based on the water supply valve's position.

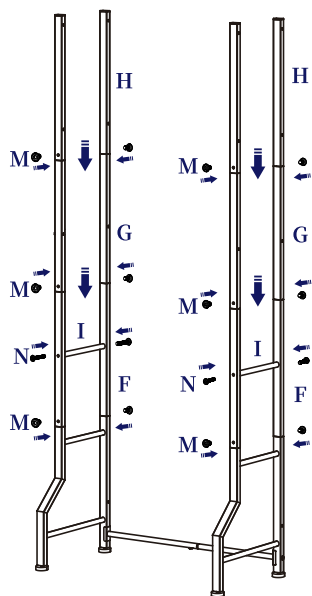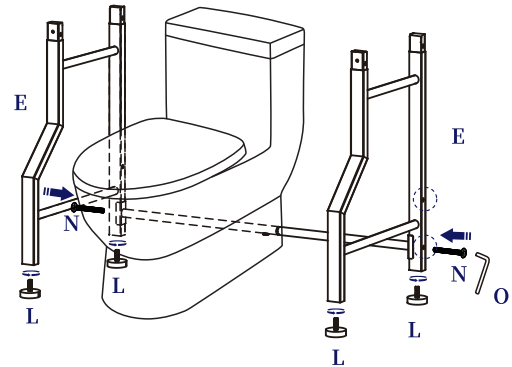


STEP 3: As the picture shows, use 12 Ms and O to fasten 4 Fs, 4 Gs and 4 Hs in turns. Then use 4 Ns to secure 2 Is into Fs.

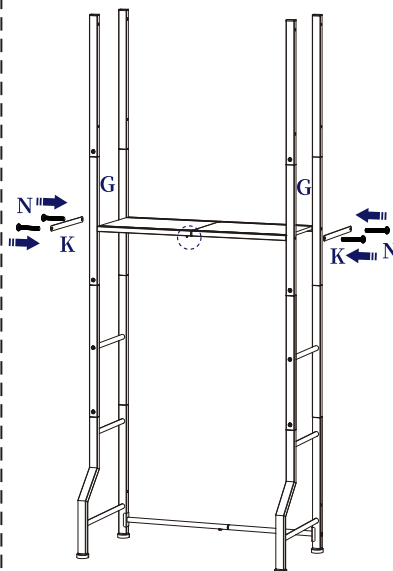

STEP 4: Fasten one long wooden shelf (Step 1) and 2 Ks to Gs with 4 Ns, as the picture shows.


NOTE: Make sure the wooden shelf's spring side faces down.

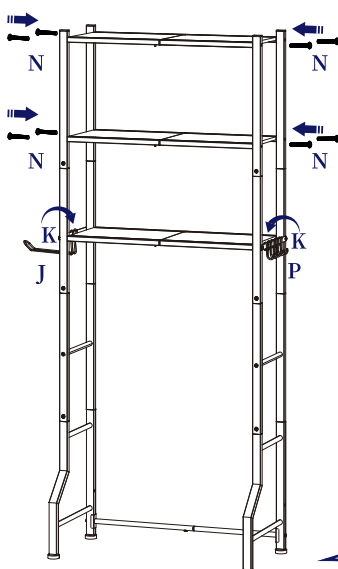

STEP 5: Attach 2 long wooden shelves (Step 1) to the assembled rack with 8 Ns. Hang J on K, and Ps anywhere as needed.

NOTES: 1. Tighten up all screws before use.

2. Adjust Ls to adapt to uneven floors if needed.

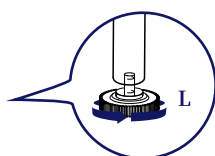

INSTRUCTIONS FOR WALL ANCHOR STRAP KIT

1. Mark and drill the drilling holes.
2. Hammer the drywall anchors.
3. Fix the bracket to the wall with screws.
4. Connect **Tube G (close to the wall)** and the bracket with the strap.

