

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please Email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key



CARE AND MAINTENANCE

WOOD CARE: Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on nonabrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

UPHOLSTERY CARE: To prevent overall soiling, frequent vacuuming or light brushing is recommended. Cushions and pillows should be turned on a weekly basis. Down-filled cushions should be brushed rather than vacuumed. Spot clean, using a mild water-free solvent or dry cleaning product. Only a professional cleaner should undertake a complete overall cleaning. The use of steam or water-based cleaners may cause excessive shrinking or staining.



ITEM ID: COF5901B
ITEM DIMENSION: L 41 inch x W 21 inch x H 15 inch

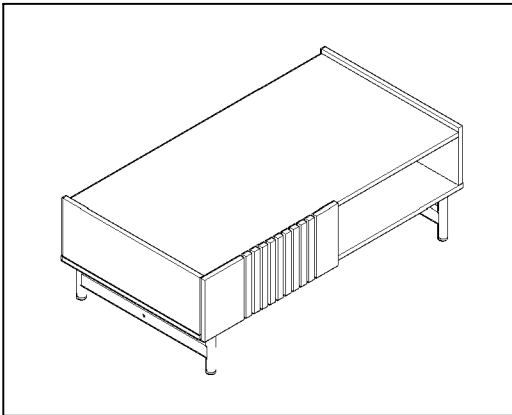


Total Weight Capacity : 127 lbs
Warning: Do not stand on the cabinet.
Warning: Do not over torque bolts.

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QTY	PIECE	DESCRIPTION	PICTURE	QTY	PIECE	DESCRIPTION	PICTURE	QTY
1	Top Panel		1x	6	Door Panel		1x				
2	Bottom Panel		1x								
3	Side Panel		2x								
4	Center Panel		1x								
5	Back Panel		1x								

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QTY	PIECE	DESCRIPTION	PICTURE	QTY	PIECE	DESCRIPTION	PICTURE	QTY
A	Cam Pin M5x24MM		8x	F	Screw M4x32MM		8x	K	Allen Key		1x
B	Cam Lock		8x	G	Aluminium M Rail		1x				
C	Wood Dowel M8x30MM		8x	H	Screw M4x16MM		4x				
D	338 Sliding Roller Screw M3x12MM		2x 16x	I	Metal Leg		1x				
E	Screw M6x50MM		8x	J	JCBC Screw M6x50MM		6x				

PREPARATION


- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key.

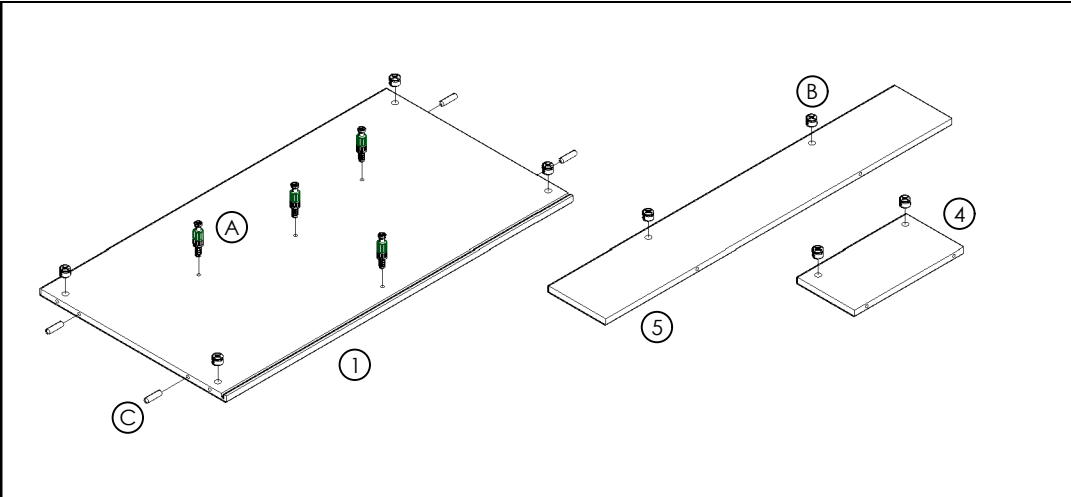


Step 1: As shown, Install the provided hardware. Fasten the screw (A) and do not tighten it too tight. Put in the Camlock(B) into the hole. Please using the hammer to insert the wood dowel(C).

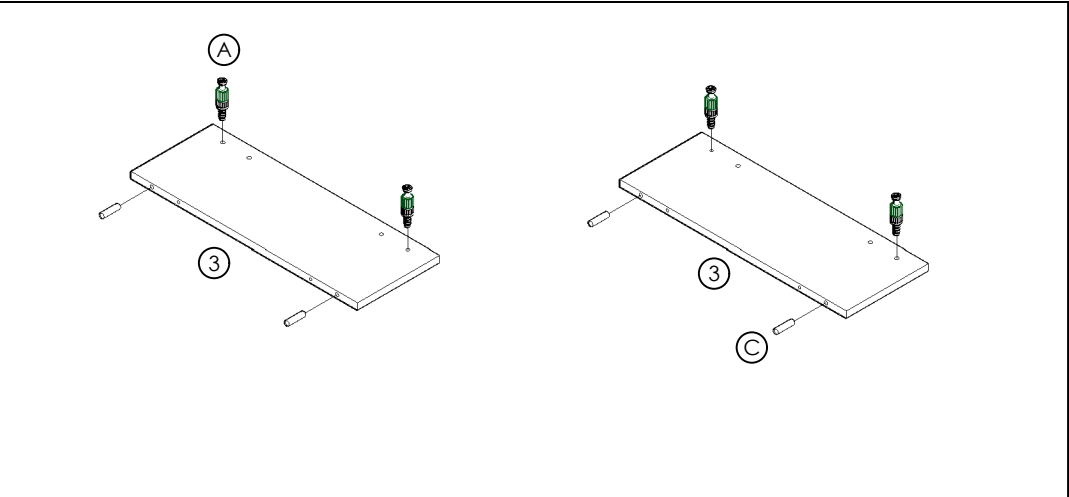


Step 2: Install the provided hardware. Fasten the screw (A) and do not tighten it too tight. Please using the hammer to insert the wood dowel(C).

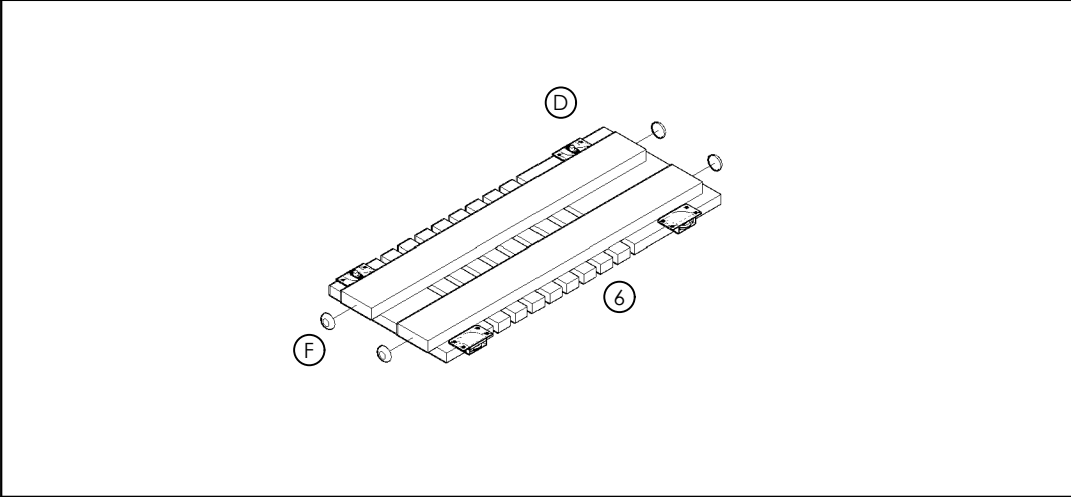


Step 3: Install the provided hardware. Fasten the Hardware (D) and do not tighten it too tight. Put in the door buffet (F).

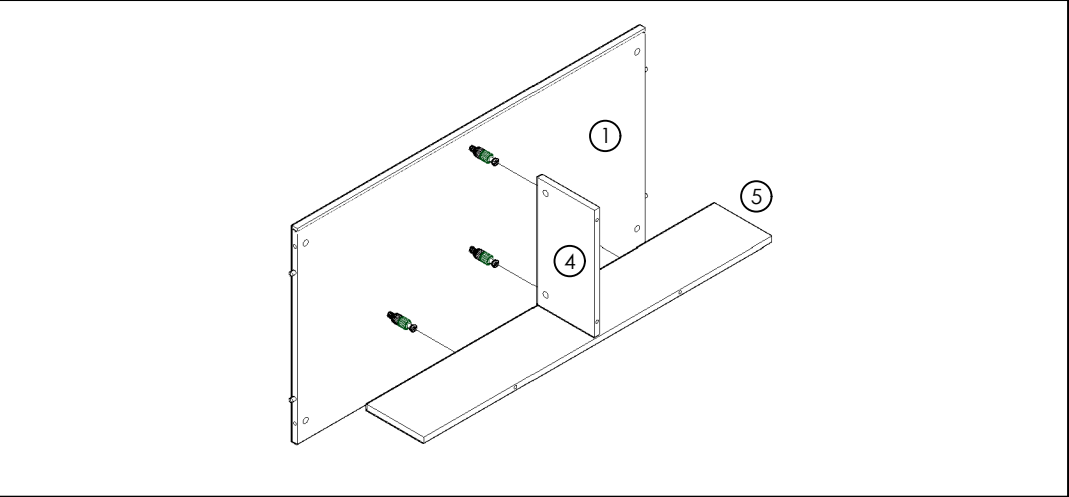


Step 4: As shown, on the position tight the head of minifix housing goes into the open mouth of the minifix bolt, Use Allen Key then(L) turn the minifix housing so it tighten over the minifix bolt.

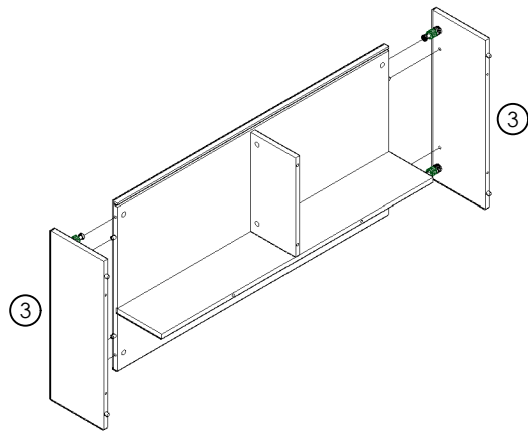


Step 5: Tight the head of minifix housing goes into the open mouth of the minifix bolt, Use Allen Key (K) then turn the minifix housing so it tighten over the minifix bolt.

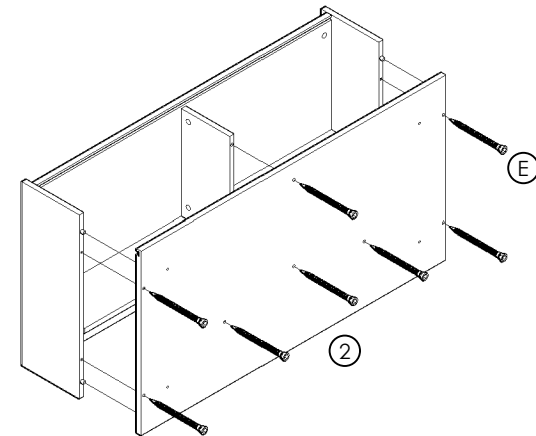


Step 6: As shown, Use allen key (K) to make the screw (E) goes into the hole until the screw is tight.

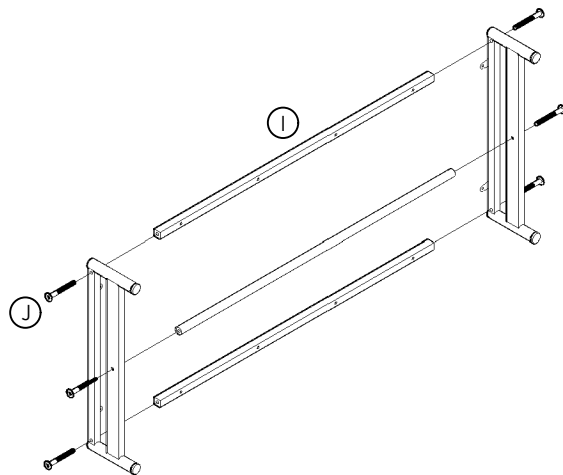


Step 7: Install the hardware (I) and insert the screw (J) on holes of hardware using allen key (K). Hold the allen key firmly and turn it clockwise to tighten the screw. Make sure the panel is firmly secured without being overtightened.

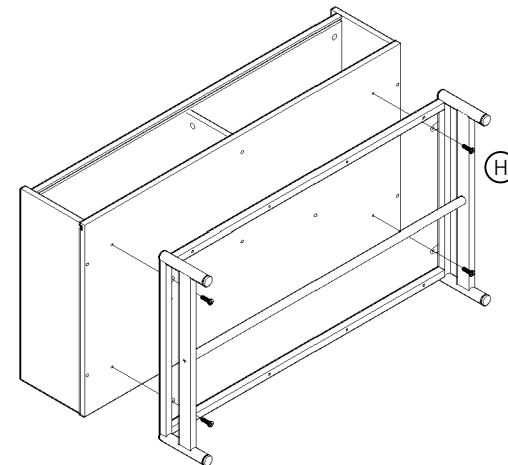


Step 8: Insert the screw (H) on holes of hardware using screwdriver. Hold the screwdriver firmly and turn it clockwise to tighten the screw. Make sure the panel is firmly secured without being overtightened.

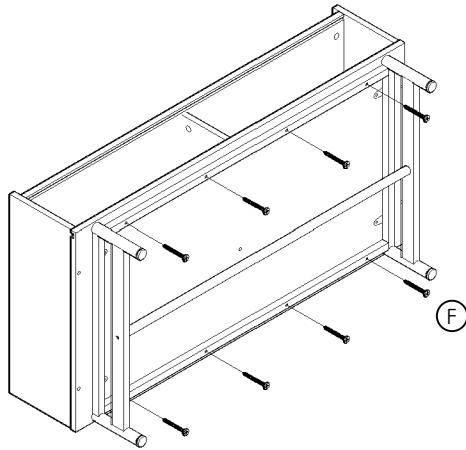



Step 9: Please insert the screw (F) on holes of panel using a screwdriver. Hold the screwdriver firmly and turn it clockwise to tighten the screw. Make sure the panel is firmly secured without being overtightened.

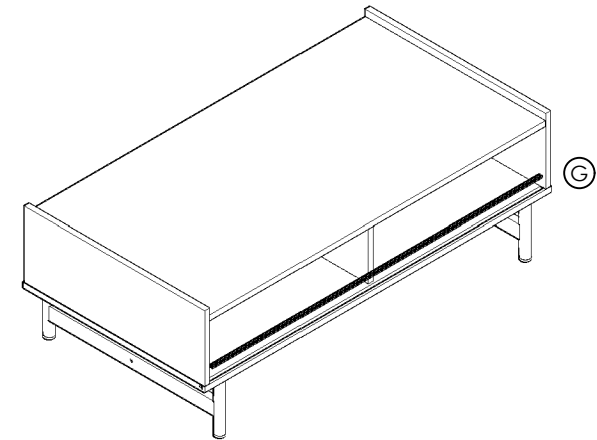

Step 10: As shown, Put hardware(G) into the groove of the panel.

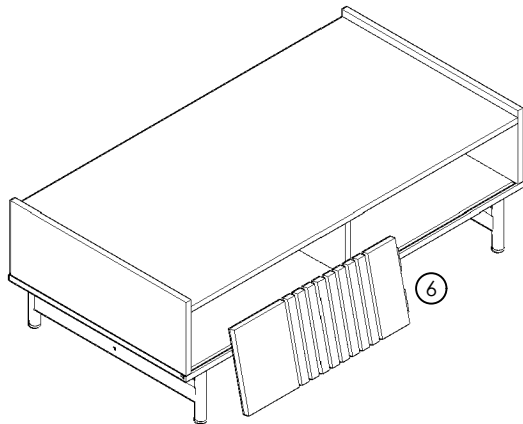

Step 11: Slide the door into the groov of cabinet.

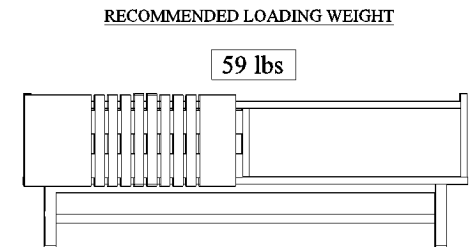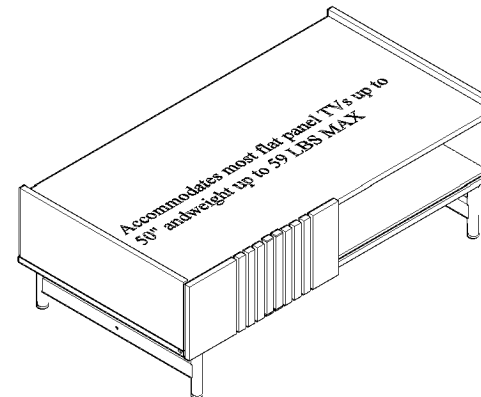

Step 12: Completed.The Cabinet has been ready installed.