


D

Modular Sectional Sofa -Single seats

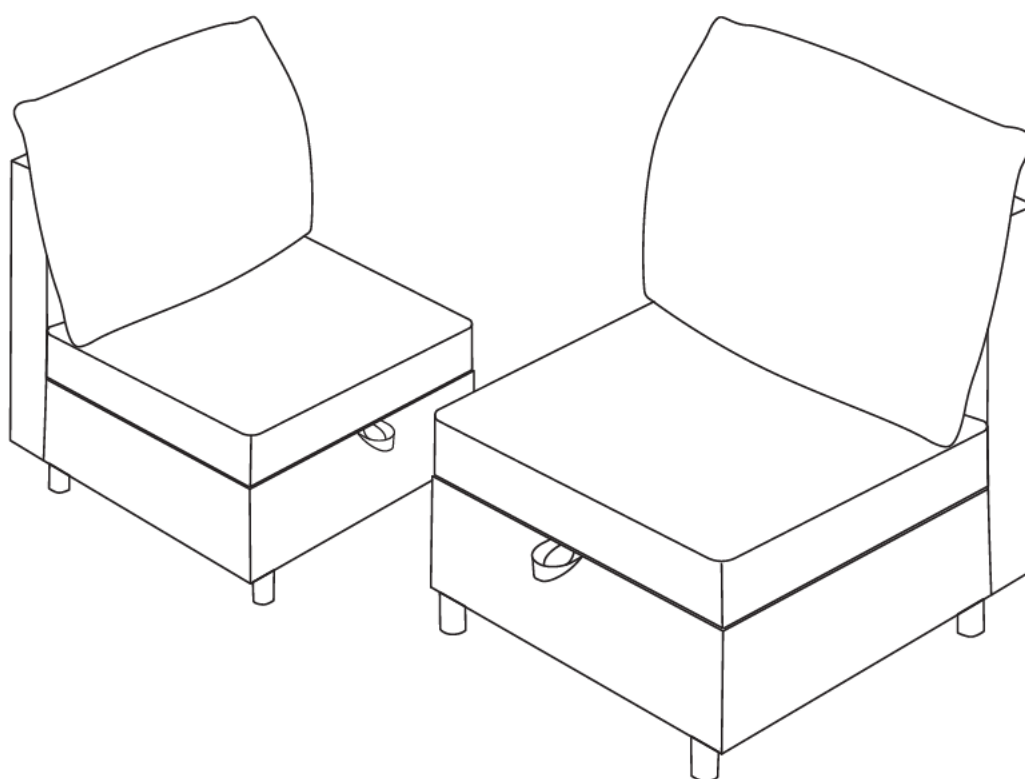

NOTICE

Please keep these instructions for future reference.

Dear Customer

● Thank you for your purchase. When you receive the product, please make sure that all the parts are intact. If any parts are missing, please contact us promptly to request replacement parts.

● Then follow the entire installation instructions to install.

● Each part is crucial, so please be careful not to lose any. It is recommended to store parts with different lettered identifiers in separate boxes or bags to avoid confusion during installation.

A . The outer box is damaged

B . The product is damaged / bent / cracked while you open the box







C . The parts / accessories / assembly tools are missing

D . The instructions are not clear and can not be referred




E . The product has functional problems

PART LIST


Upholstery

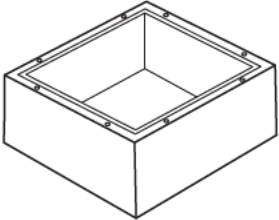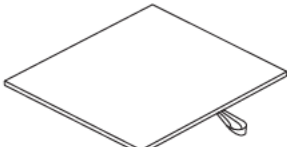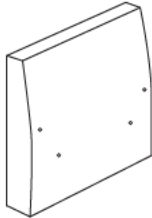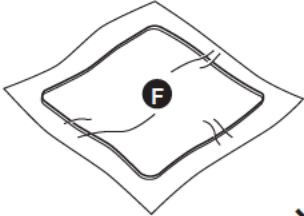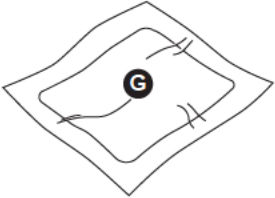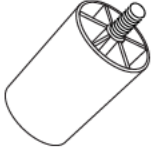
A Storage stool base  x2	B Storage stool covers  x2	E Backrest  x2
F Cushion seats  x2	G Cushion backrest  x2	I Bracket legs  x8

Connectors

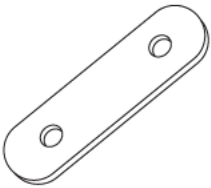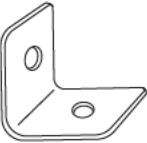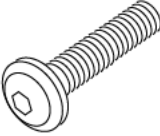J Connectors  x6	K Corner connectors  x4	S Screw  x20
--	---	--

Tool

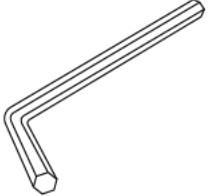L  x1

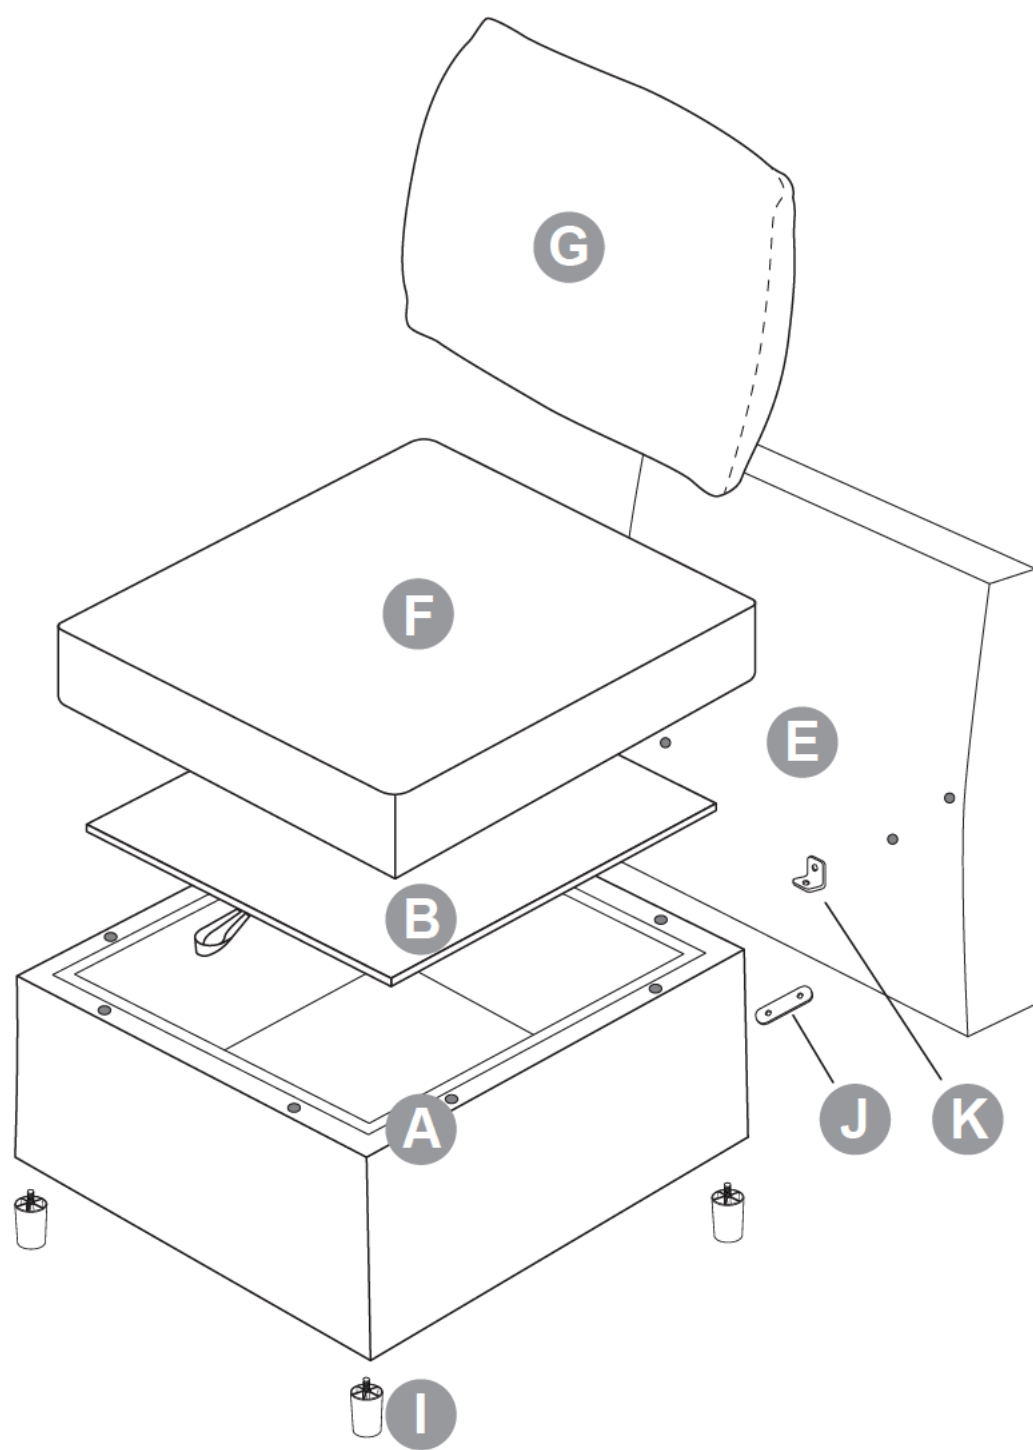


Single seats

STEP

1

The storage stool (A) and the backrest (E) are connected by part (K).



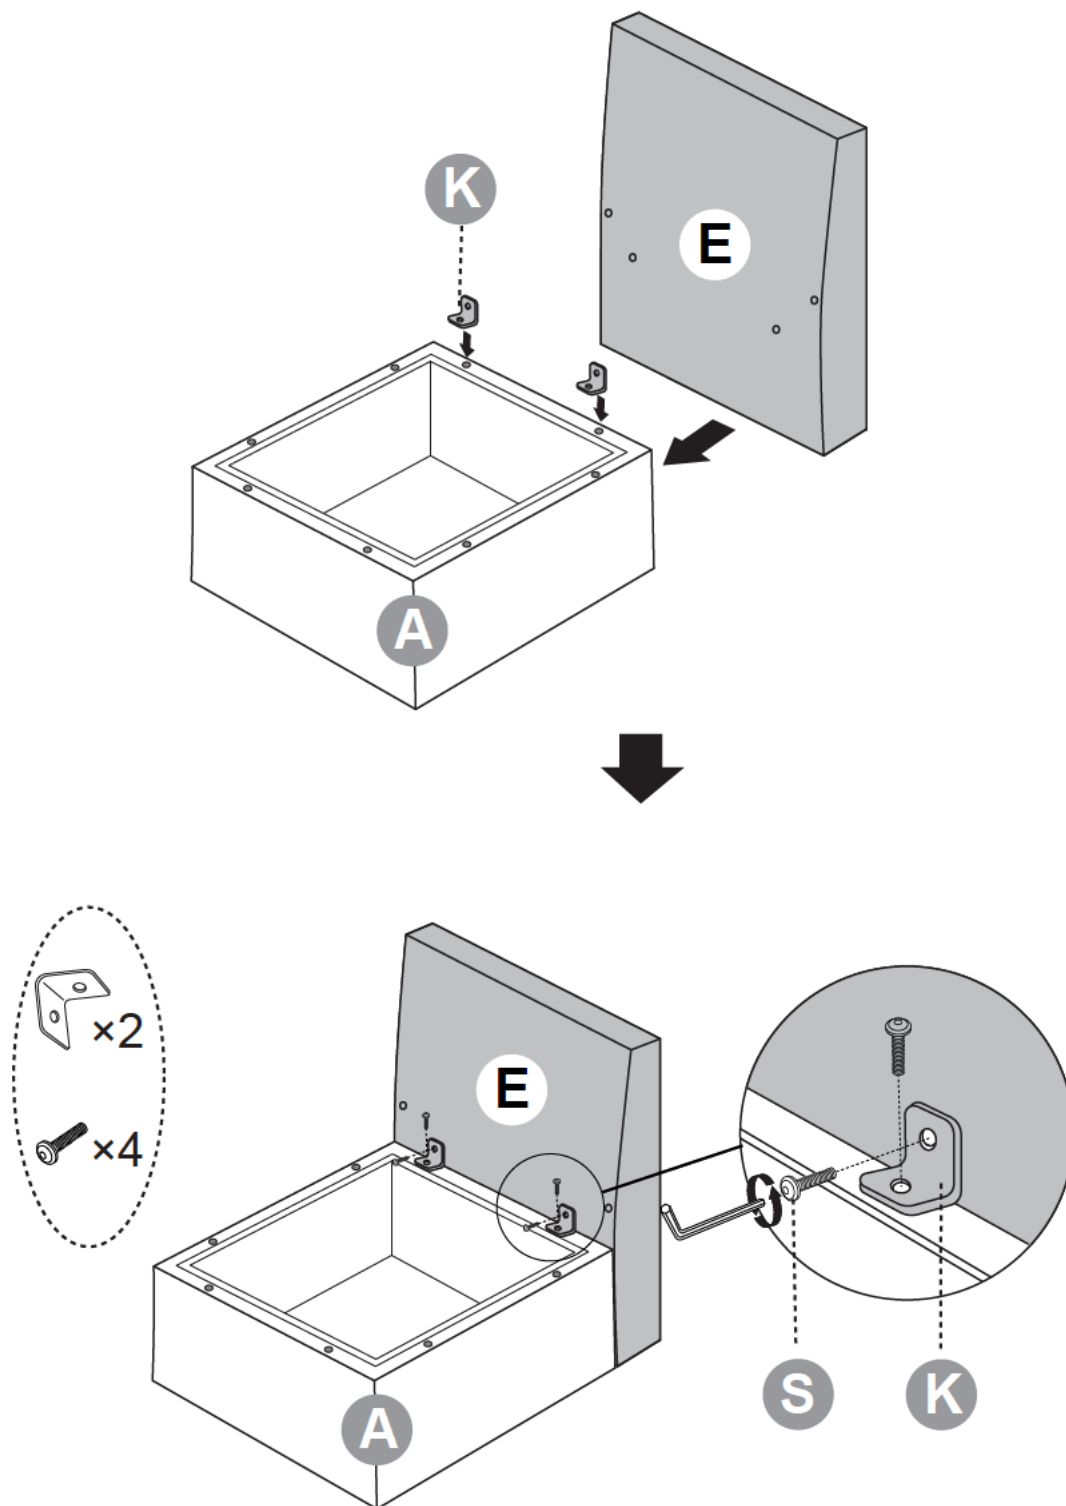


Please tighten the screws to 50% first.
Wait for all screws to be fixed and then tighten to 100%.

STEP

2




Flip it so that its bottom is facing outward, and then use part (J) to connect the bottom of the storage stool (A) and backrest (E).

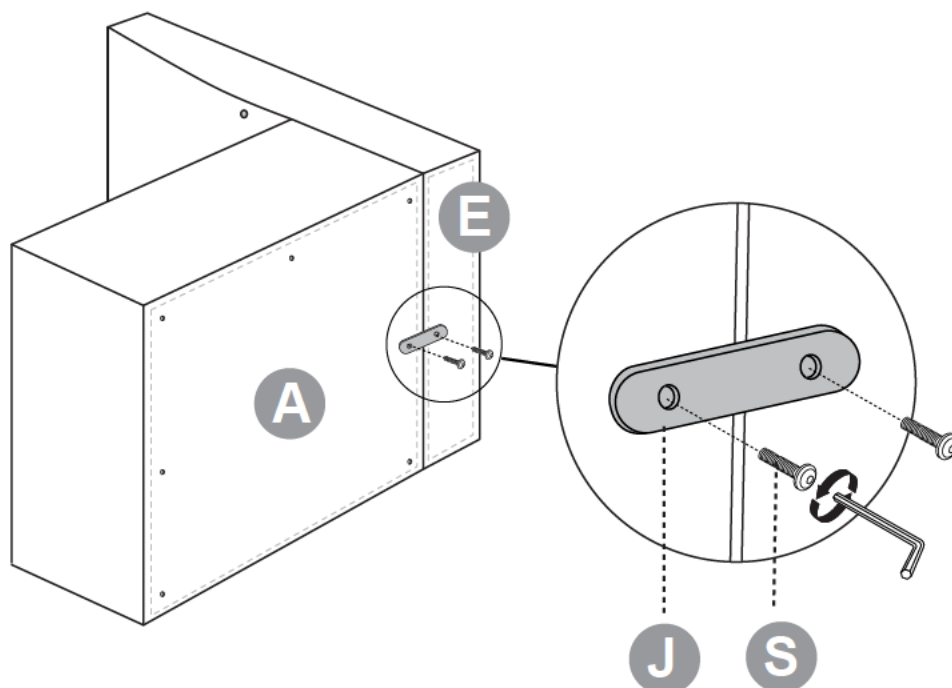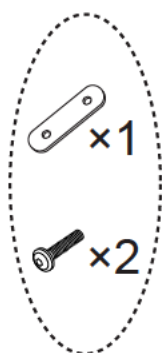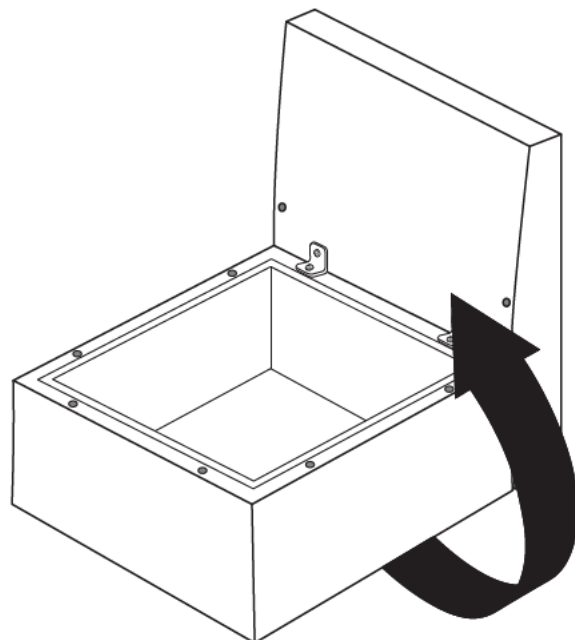

STEP

3

Tighten the bracket legs (I) to the hole at the bottom of the corresponding storage stool (A).

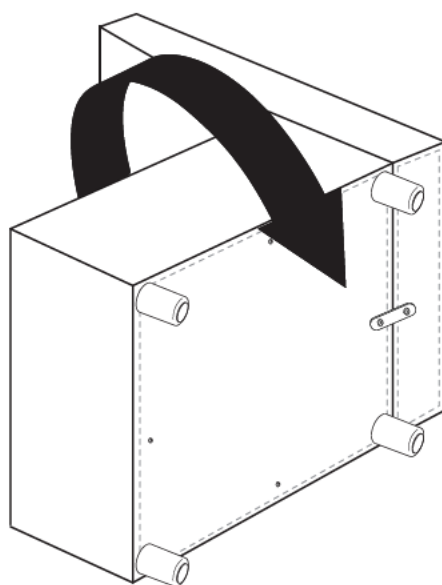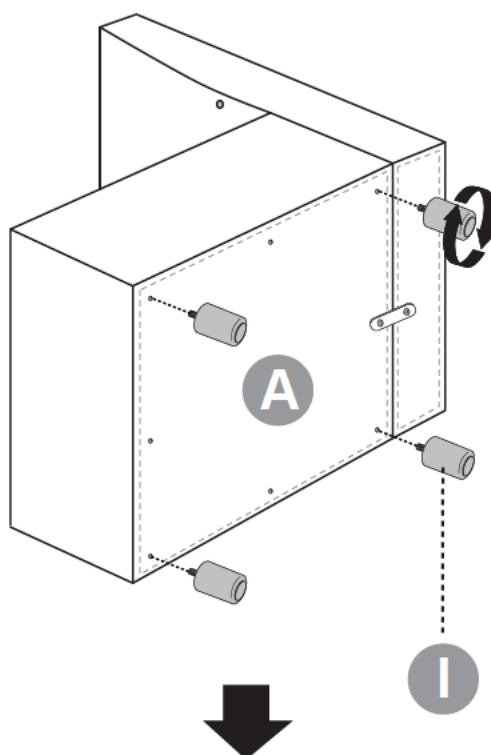
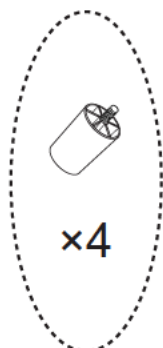


Flip to face up

STEP

4

Place the storage stool cover (B) in the corresponding card slot above the storage stool (A) and place it flat.

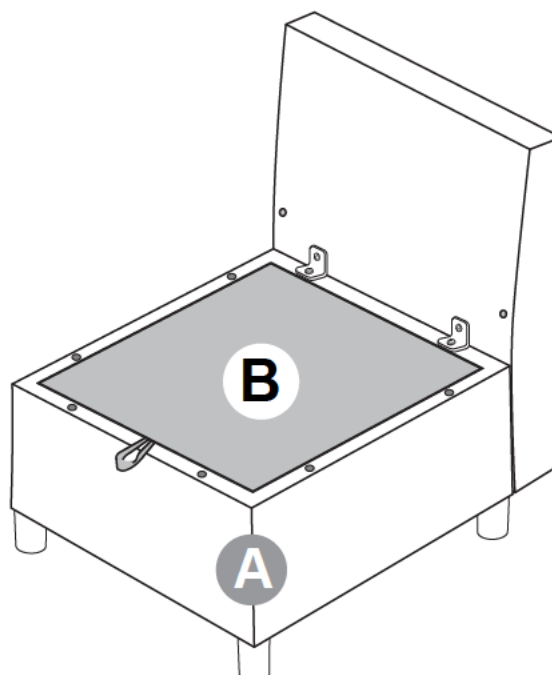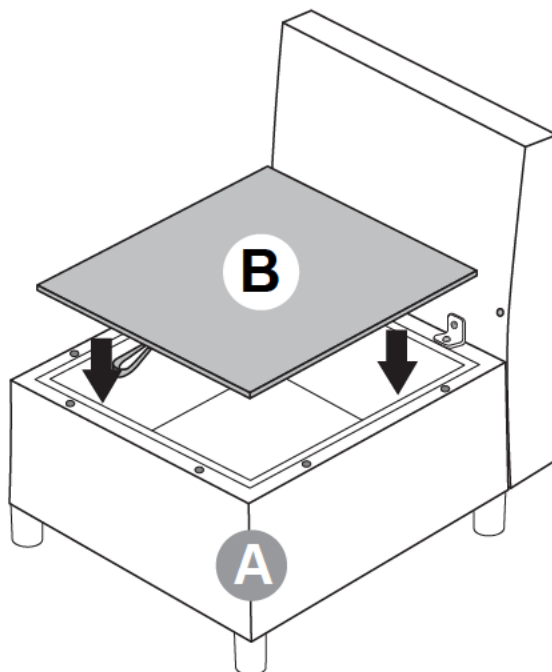


STEP

5


Cut open the plastic packaging of the compression pad (F) and take it out.

Remove and pat fluffy and let stand for 30 minutes.

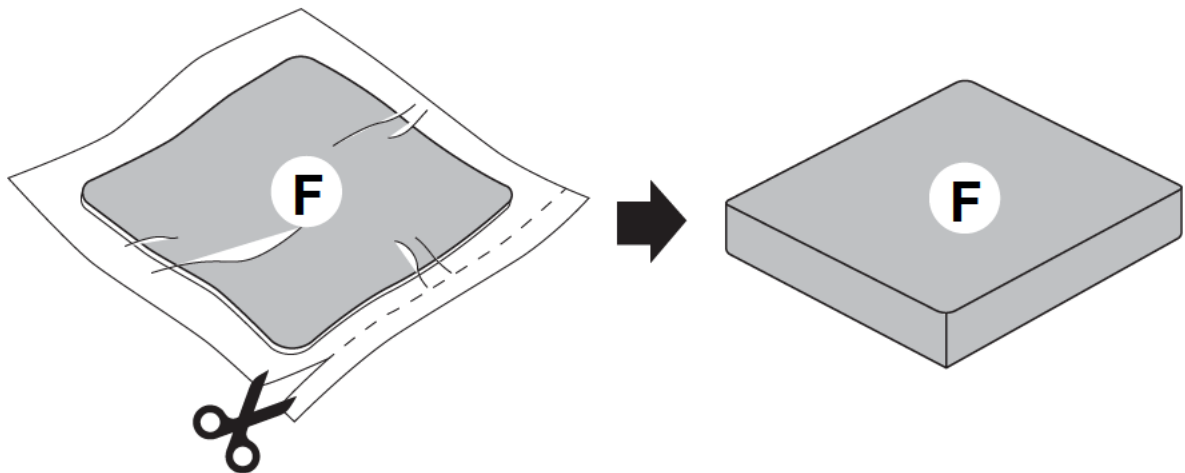

6

Make the cushion (F) is fluffy and placed above the Storage stool (A).

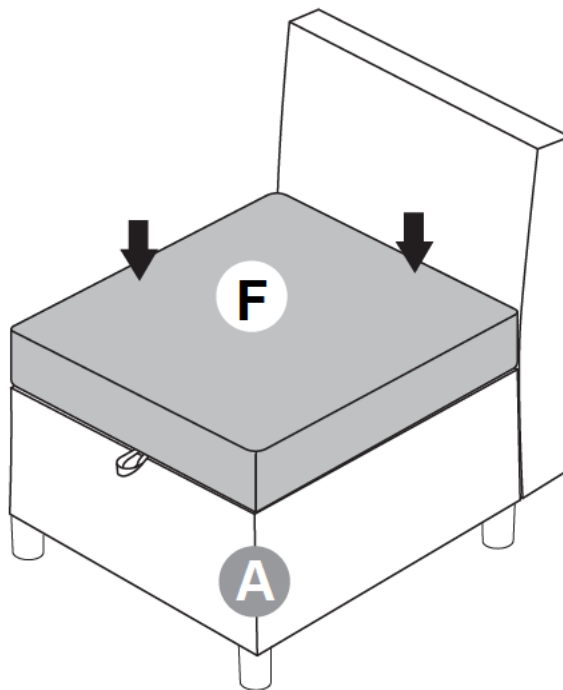


STEP

7


Cut open the plastic packaging of the compression pad (G) and take it out.

Remove and pat fluffy and let stand for 30 minutes.

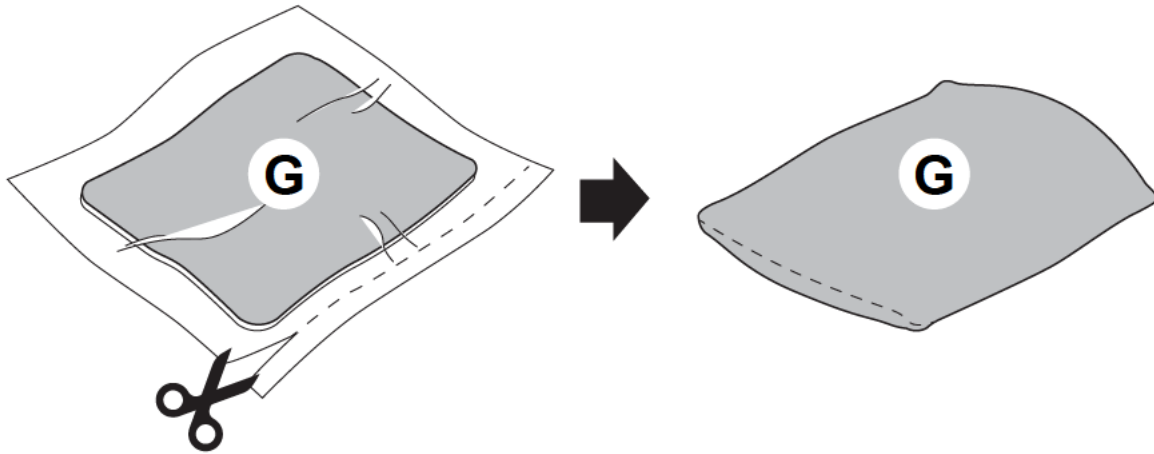


8

Make the cushion (G) is fluffy and placed above the compression pad (F).

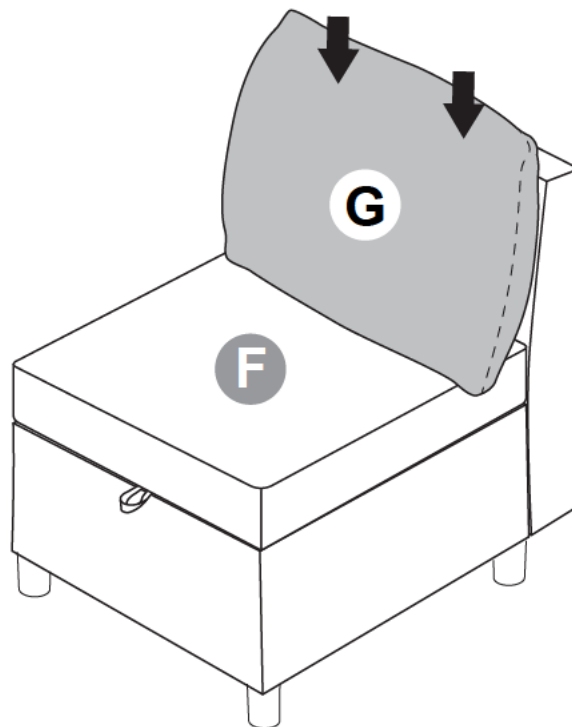

STEP

9

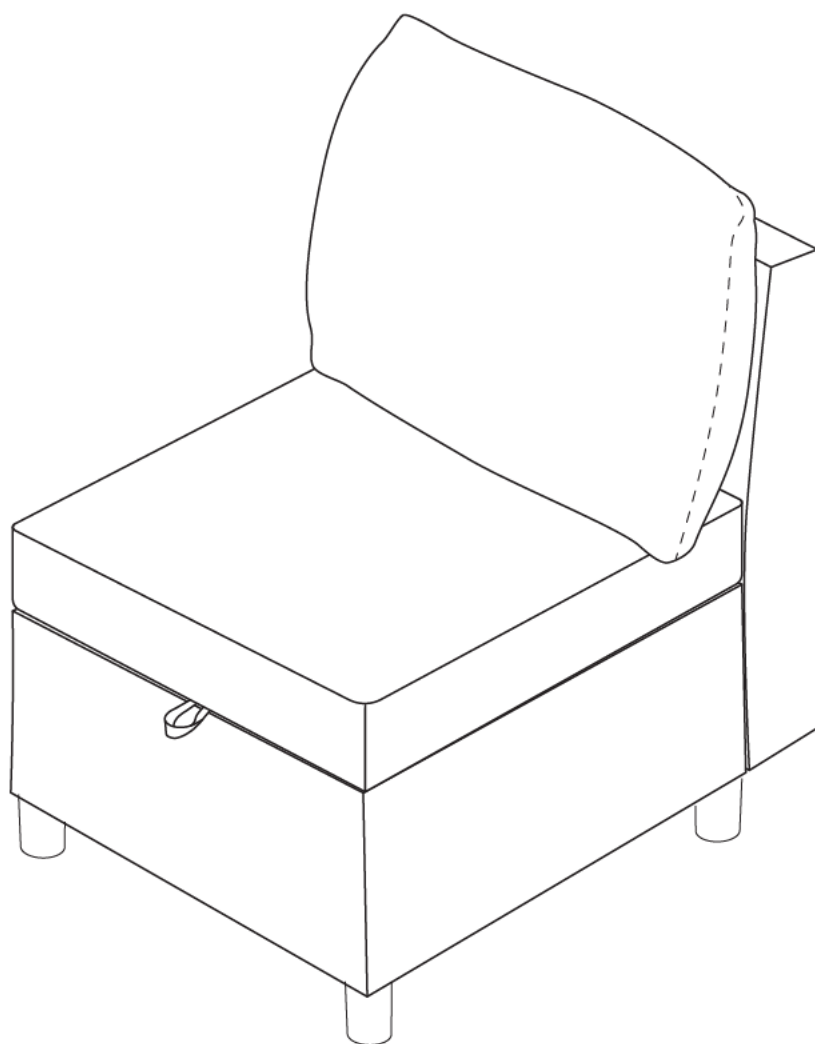

Now that the corner seat is complete
you can freely combine it with other modules

STEP

You can fix the connection between the seats by means of a connector (J).

