
安装方式

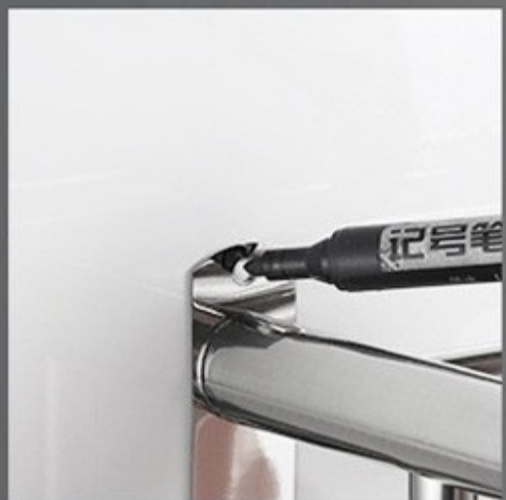


1.在打孔位置做上打孔记号
Step 1: Mark the drilling locations



2. 用6mm钻头打孔
Step 2: Drill a hole using a 6mm drill bit



3. 打入膨胀螺丝钉
Step 3: Insert the expansion anchor

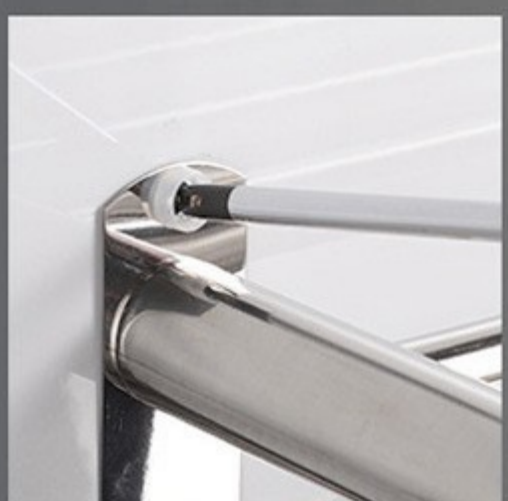

4. 拧上配送的螺丝
Step 4: Tighten the screw



5. 装上装饰盖
Step 5: Install the decorative cap



6.安装完成如图所示
Step 6: Assembly complete, as shown in the figure