



# HLG186




Version:1.0

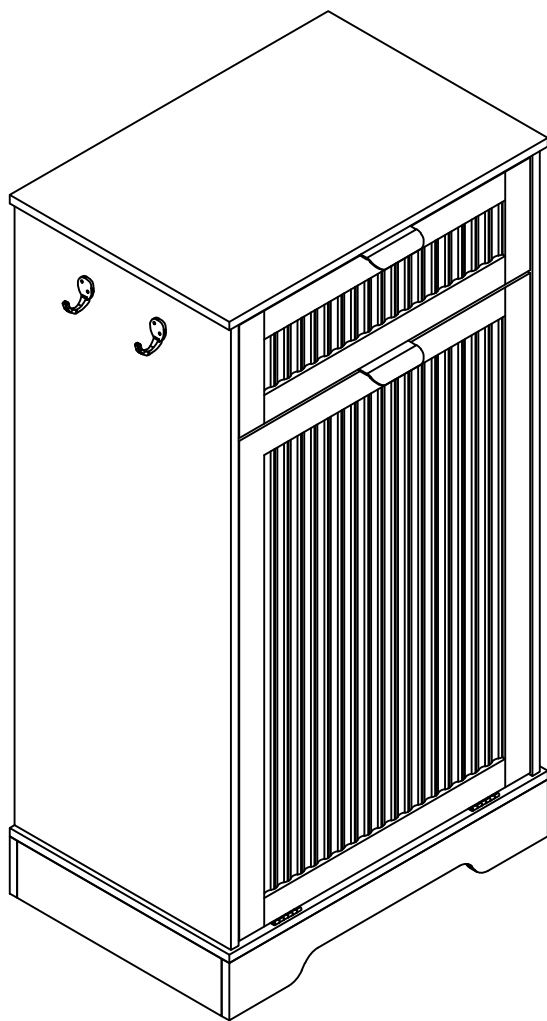


OR

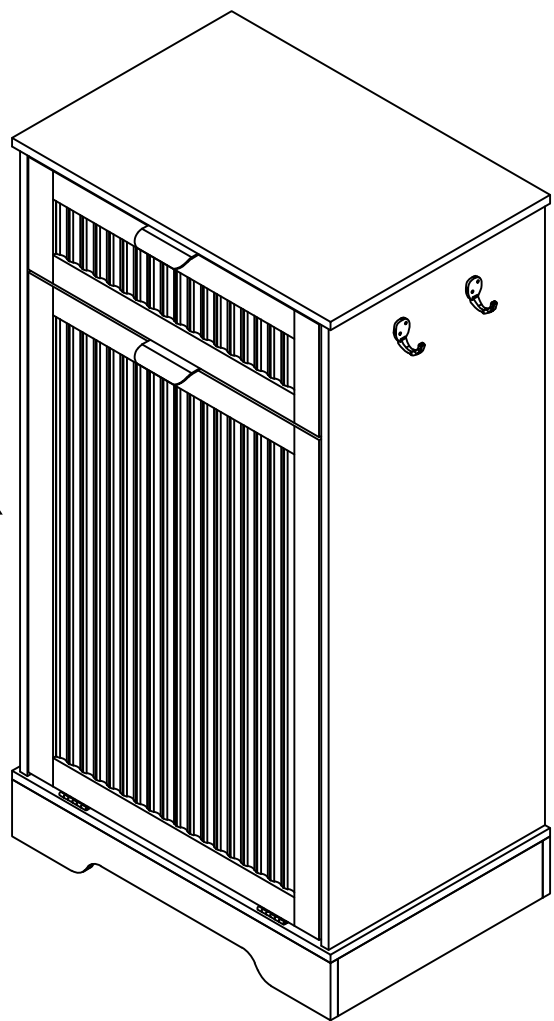


IT IS RECOMMENDED  
TO USE POWER TOOLS

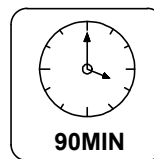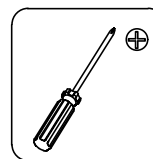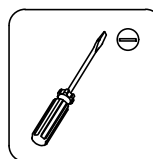


90MIN

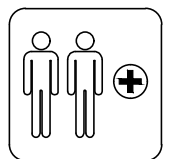


**EN\_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

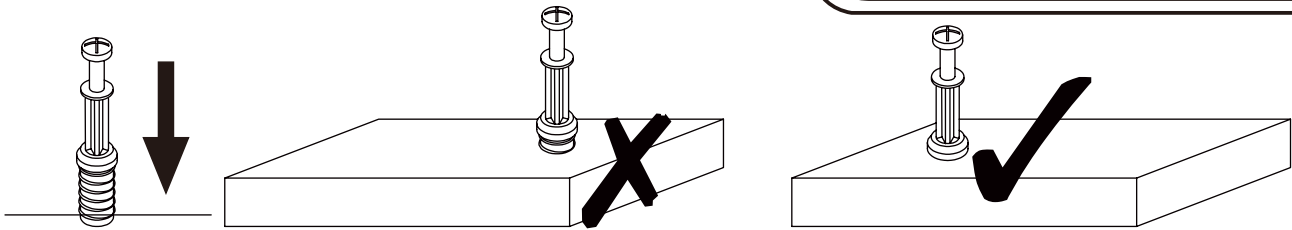


**EN\_QUICKFIT:** Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

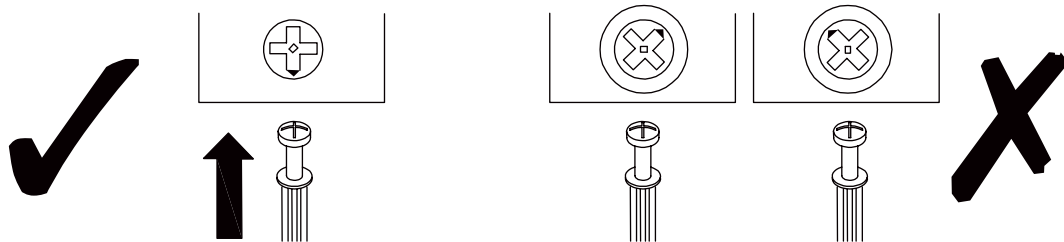











**EN\_CAM LOCK:** When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










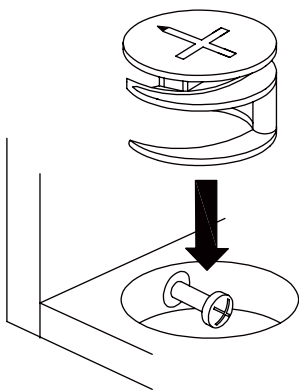



**EN\_Quickfit** head should be in the centre of the cam lock when the two panels are joined.  
Cam lock should be inserted before quickfit.



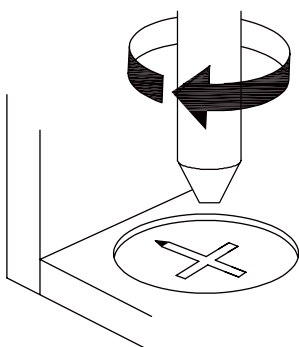







**EN\_Turn** cam lock clockwise to tighten.

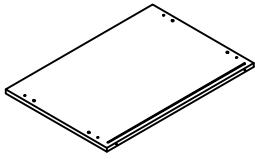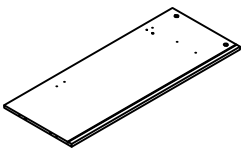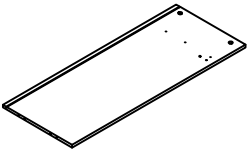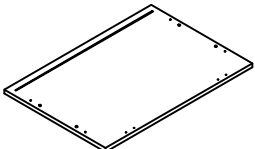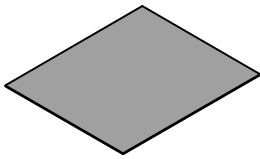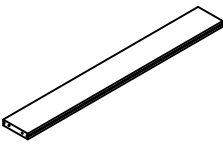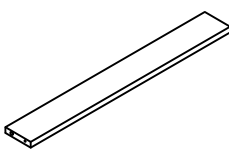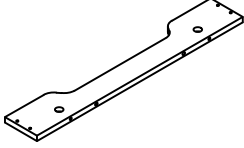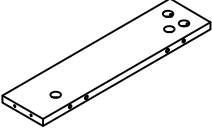
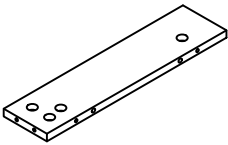
| NO. | PARTS                                                                               | QTY | SPARE |
|-----|-------------------------------------------------------------------------------------|-----|-------|
| ①   |    | x1  |       |
| ②   |    | x1  |       |
| ③   |    | x1  |       |
| ④   |    | x1  |       |
| ⑤   |  | x2  |       |
| ⑥   |  | x1  |       |
| ⑦   |  | x1  |       |
| ⑧   |  | x1  |       |
| ⑨   |  | x1  |       |
| ⑩   |  | x1  |       |
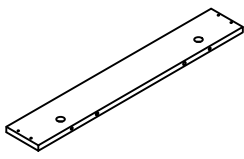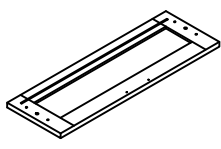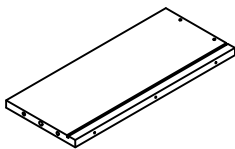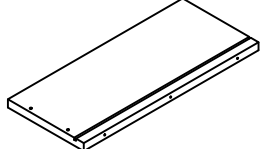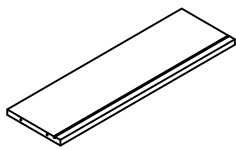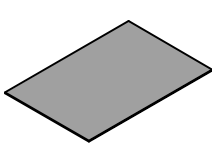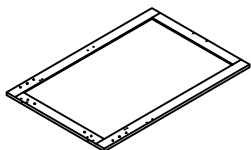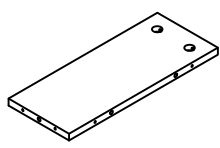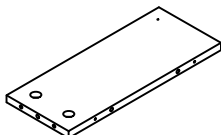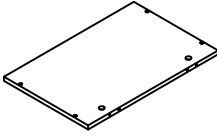
| NO. |                                                                                      | QTY | SPARE |
|-----|--------------------------------------------------------------------------------------|-----|-------|
| ⑪   |    | x1  |       |
| ⑫   |    | x1  |       |
| ⑬   |    | x1  |       |
| ⑭   |    | x1  |       |
| ⑮   |  | x1  |       |
| ⑯   |  | x1  |       |
| ⑰   |  | x1  |       |
| ⑱   |  | x1  |       |
| ⑲   |  | x1  |       |
| ⑳   |  | x1  |       |


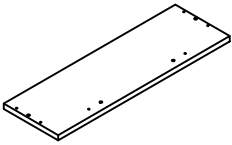
| NO. | PARTS                                                                                             | QTY | SPARE |
|-----|---------------------------------------------------------------------------------------------------|-----|-------|
| ②1  |                  | x1  |       |
|     | <br>Hardware Kit | x1  |       |

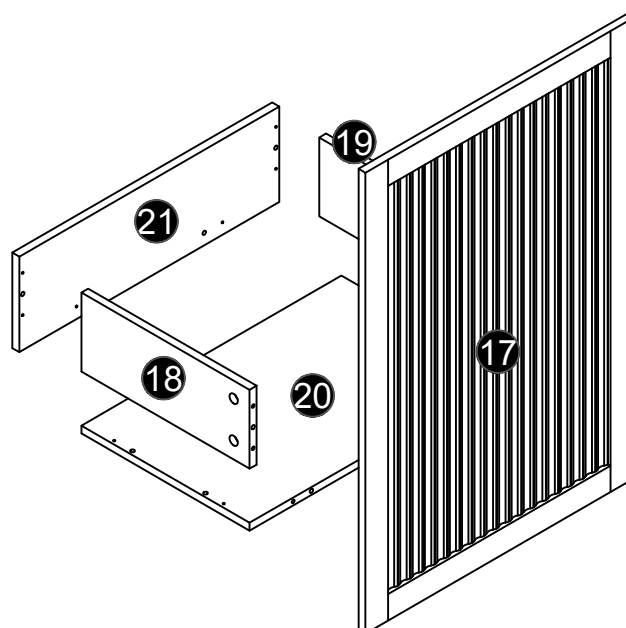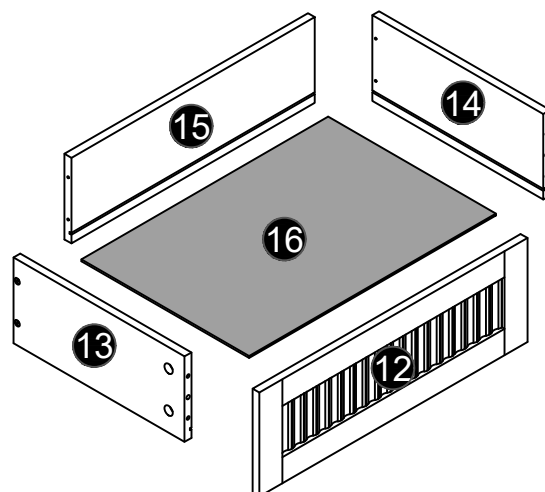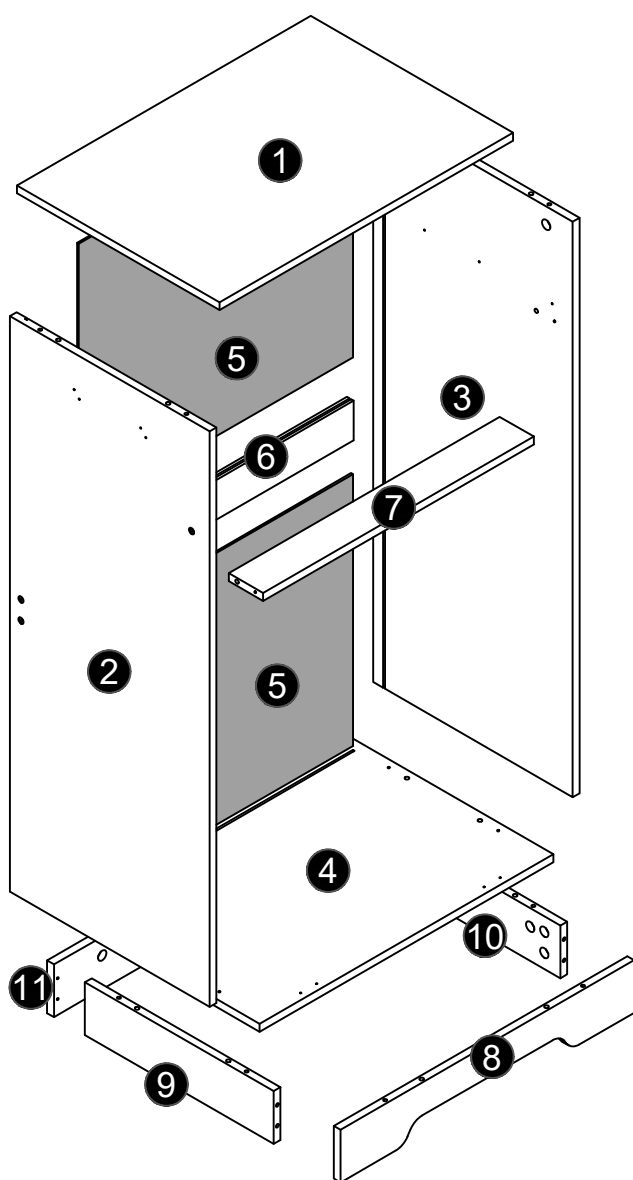

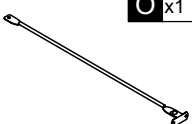
|                                                                                                                           |                                                                                                                            |                                                                                                                           |                                                                                                                           |                                                                                                                               |                                                                                                                  |                                                                                                               |
|---------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
| <br><b>A</b> x26<br>Ø6x35mm<br>+2(spare) | <br><b>B</b> x26<br>Ø15x10mm<br>+2(spare) | <br><b>C</b> x32<br>Ø6x30mm<br>+3(spare) | <br><b>D</b> x30<br>Ø4x35mm<br>+3(spare) | <br><b>E</b> x37<br>Ø3.5x12mm<br>+3(spare) | <br><b>F-1</b>                | <br><b>F-2</b>             |
| <br><b>G</b> x1                          | <br><b>H</b> x2                           | <br><b>I</b> x2                          | <br><b>J-1</b>                           | <br><b>J-2</b>                               | <br><b>K</b> x10<br>+1(spare) | <br><b>L</b> x2<br>Ø6x30mm |
| <br><b>M-1</b>                           | <br><b>M-2</b>                            | <br><b>N-1</b>                           | <br><b>N-2</b>                           | <br><b>O</b> x1                              |                                                                                                                  |                                                                                                               |
| <br><b>CL</b> x1<br>L300mm               | <br><b>CR</b> x1<br>L300mm                | <br><b>DL</b> x1<br>L300mm               | <br><b>DR</b> x1<br>L300mm               |                                                                                                                               |                                                                                                                  |                                                                                                               |

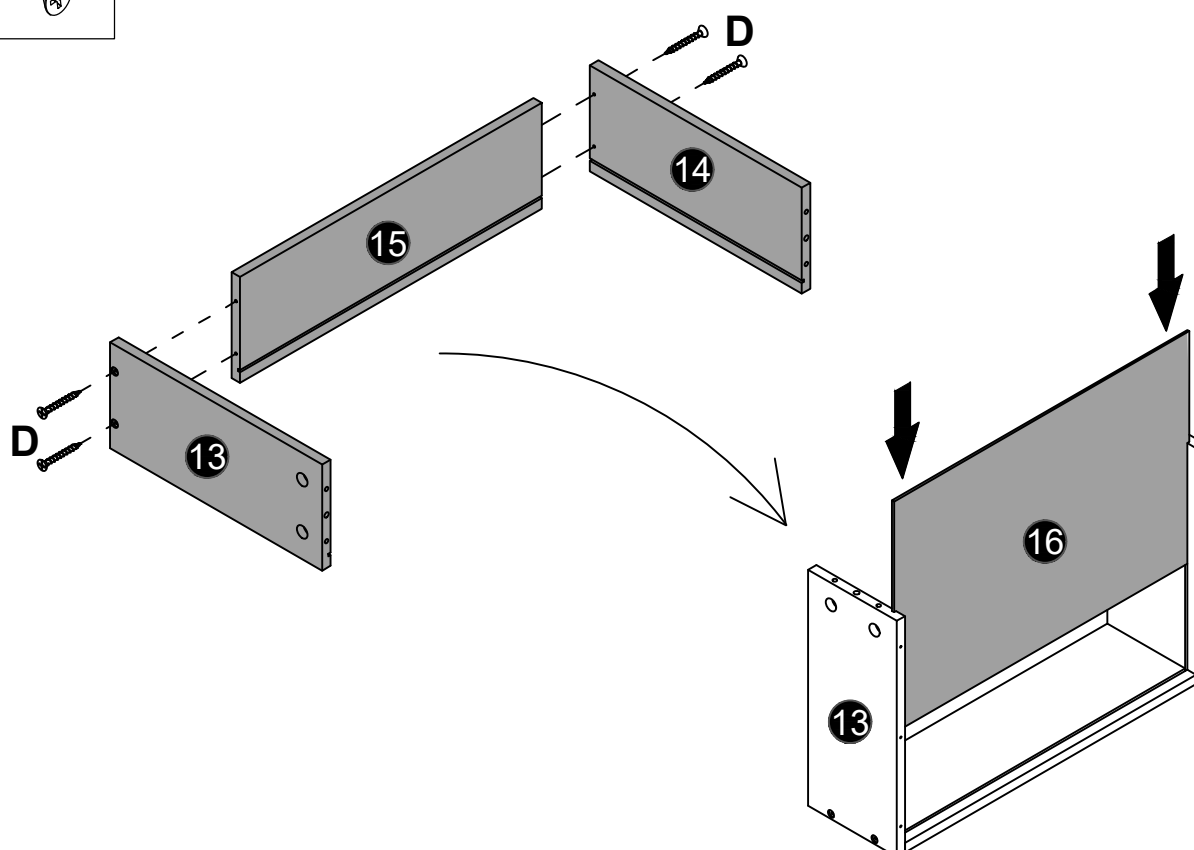**D** x4

01

|                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                                                                                                                         |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>A</b> x4                                                                       | <b>B</b> x4                                                                       | <b>C</b> x2                                                                       | <b>E</b> x6                                                                       | <b>F</b> x1                                                                                                                                                                             |
|  |  |  |  | <br>F-1<br><br>F-2 |
| <b>DR</b> x1                                                                      | <b>DL</b> x1                                                                      |                                                                                   |                                                                                   |                                                                                                                                                                                         |
|  |  |                                                                                   |                                                                                   |                                                                                                                                                                                         |


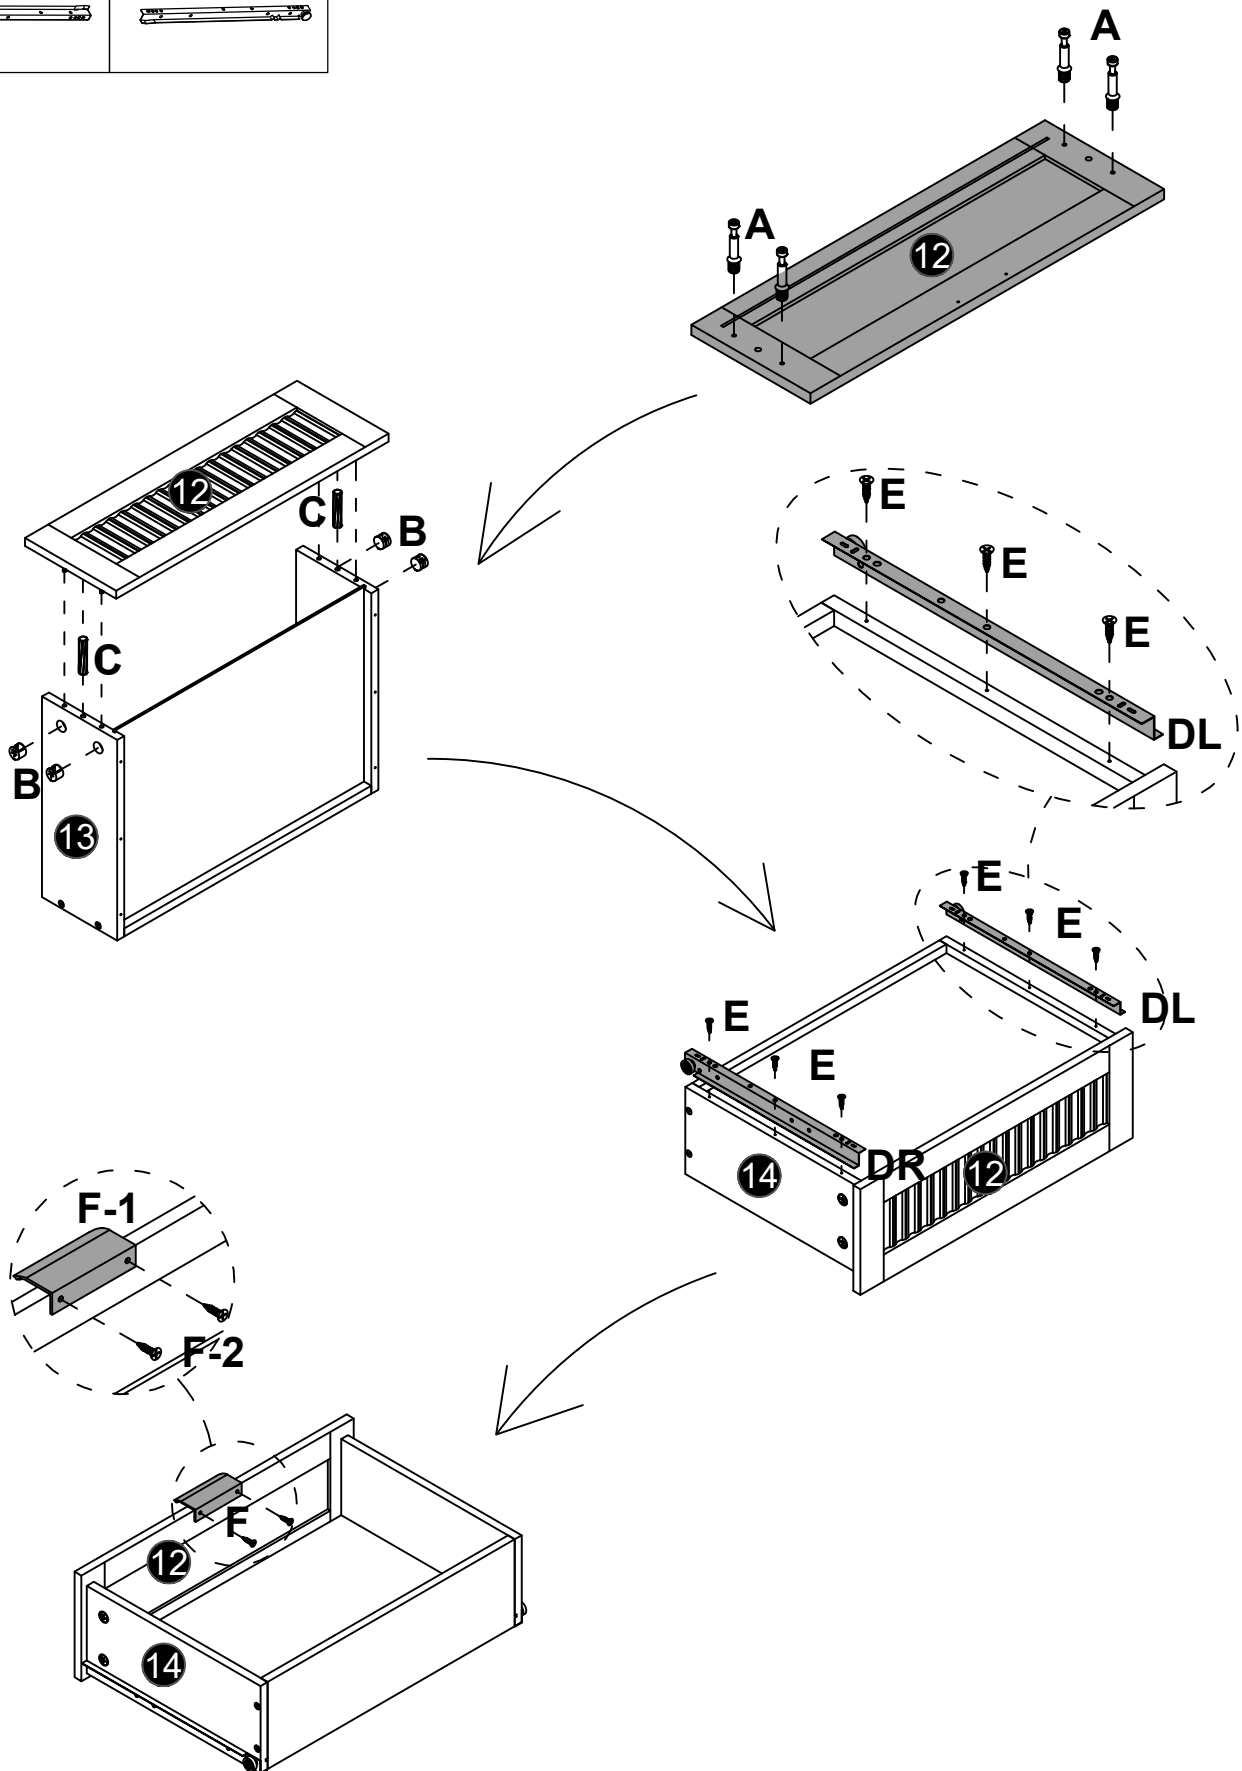


E x5

CL x1





G x1

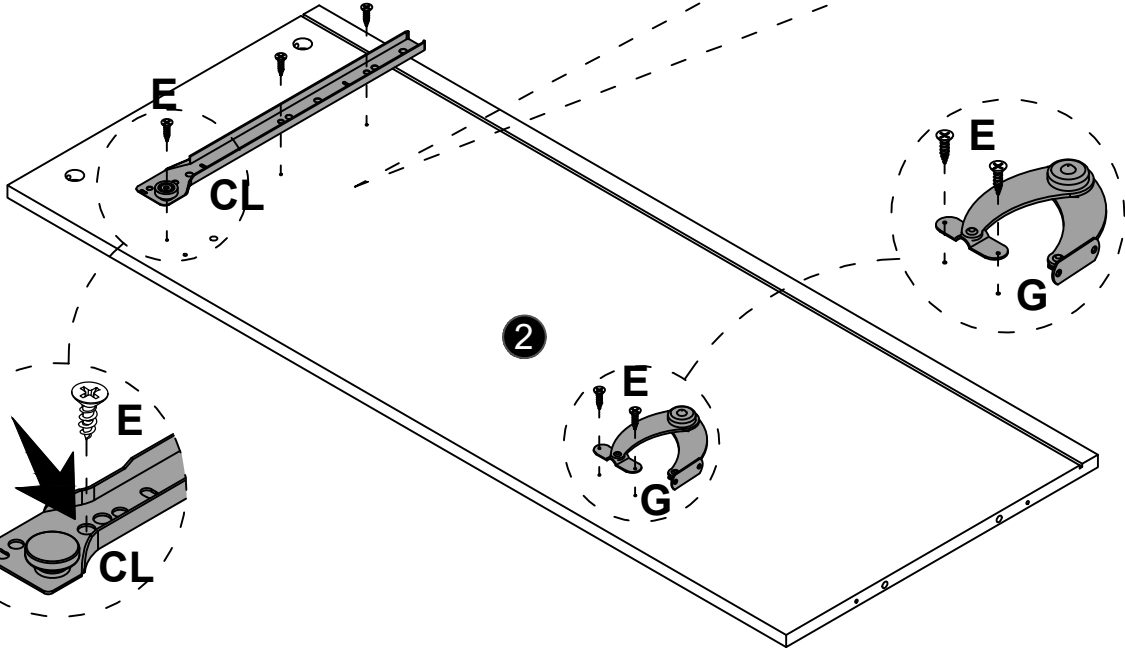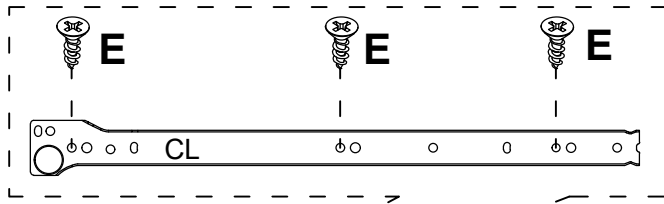

E x3




CR x1

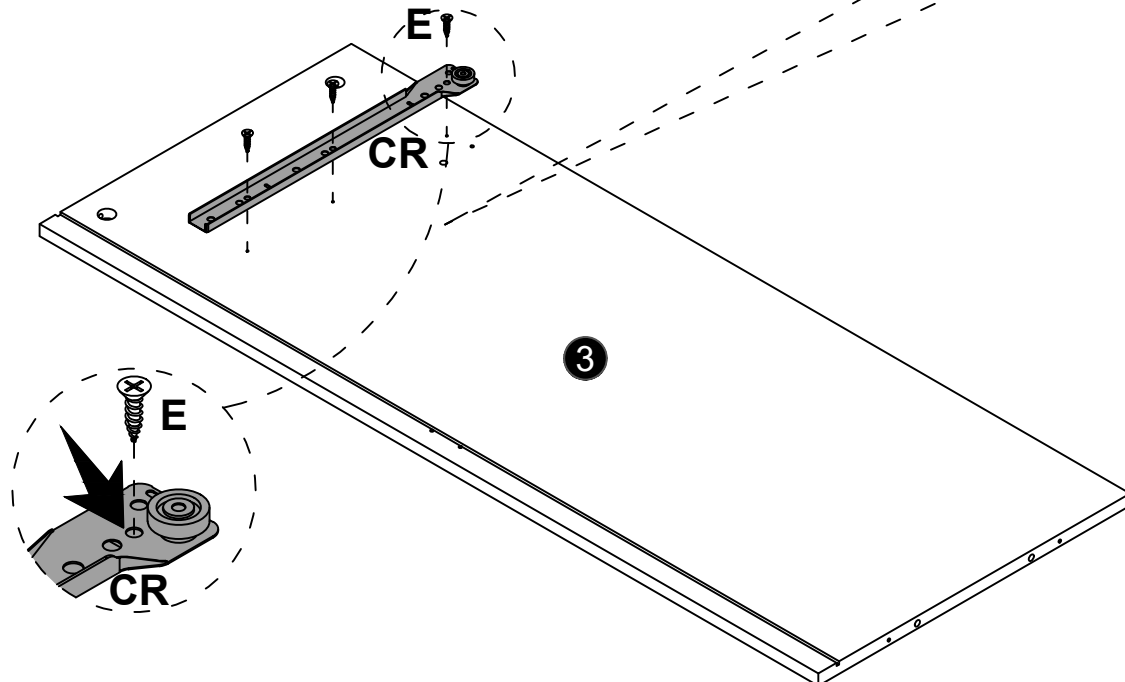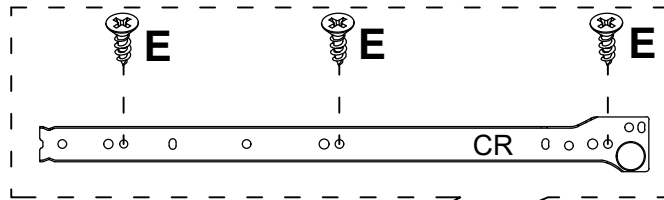


05

C x2


D x6

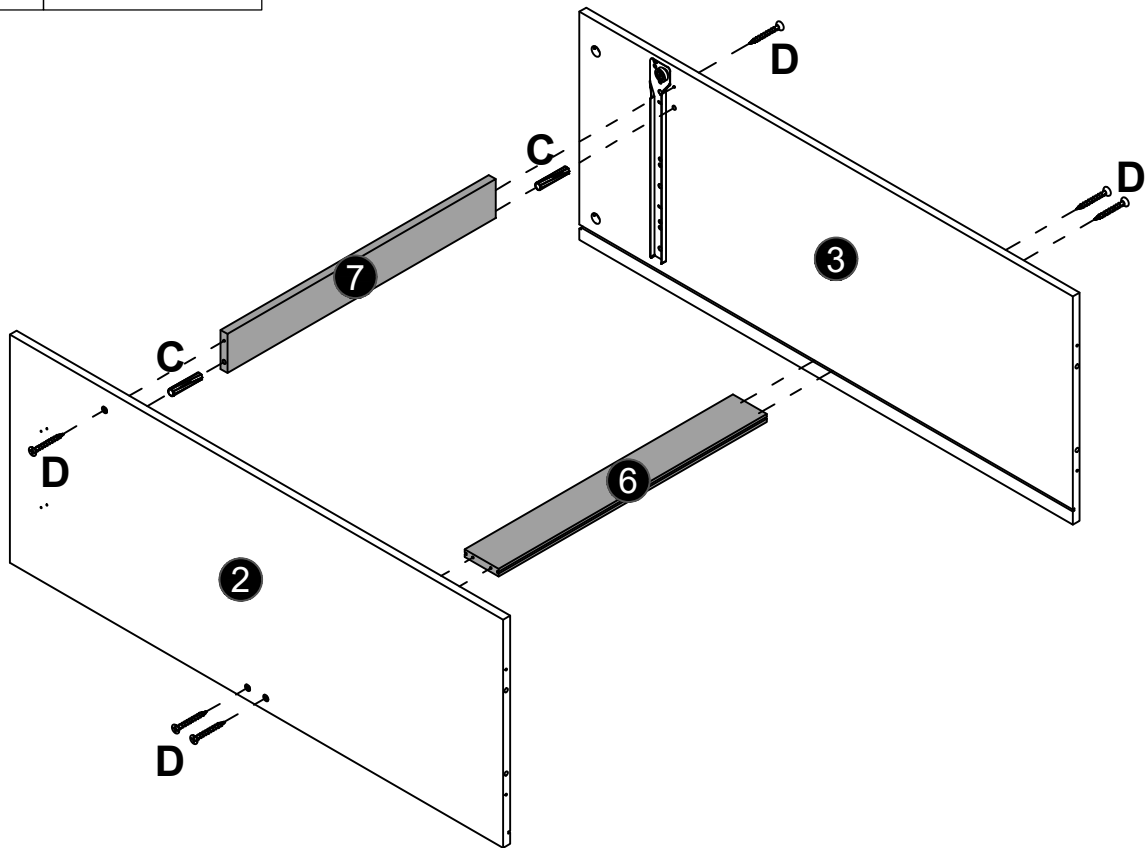



06


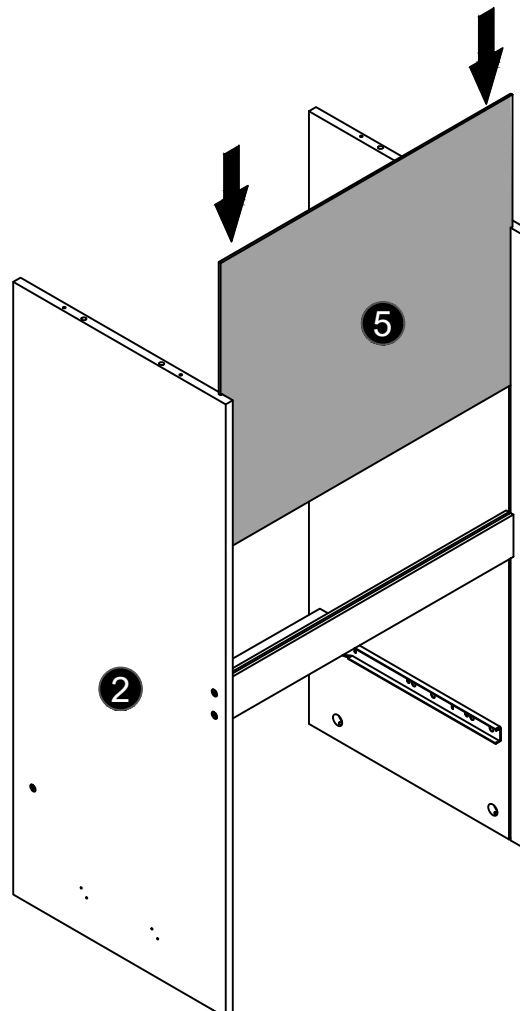


C x4




D x4

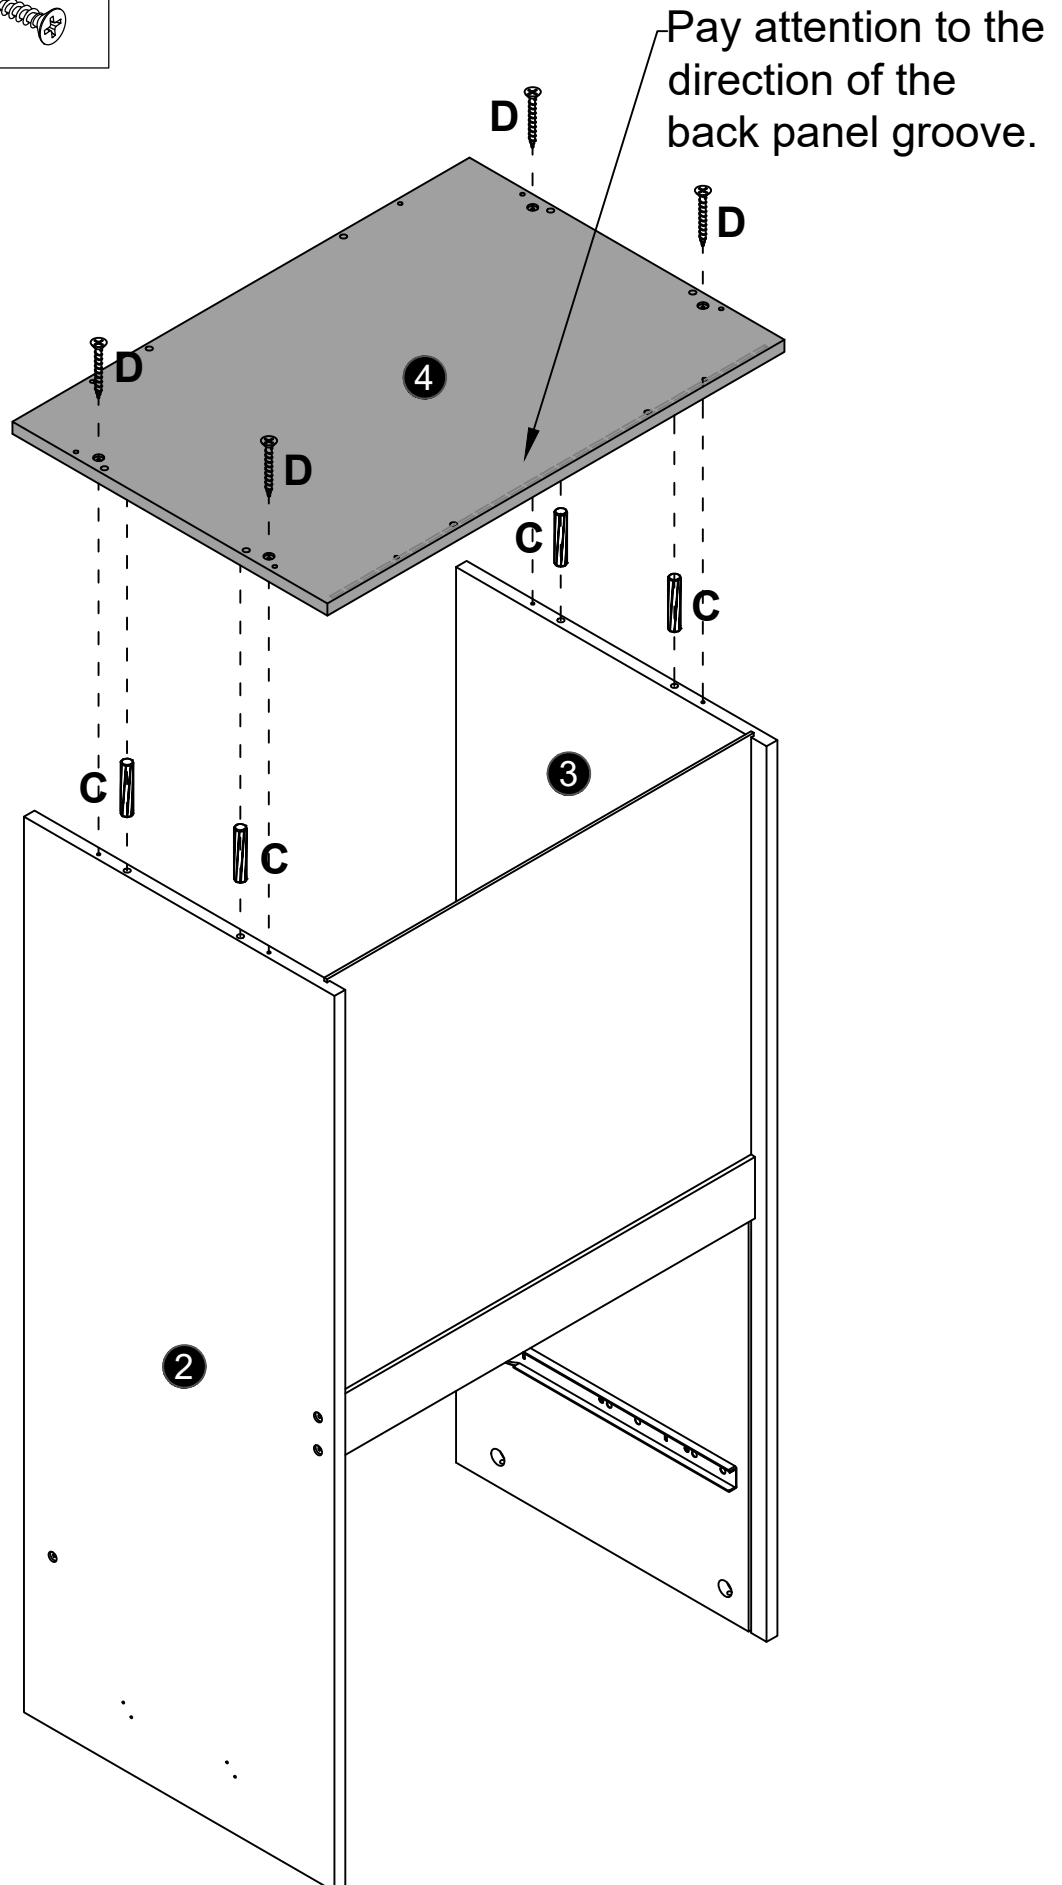

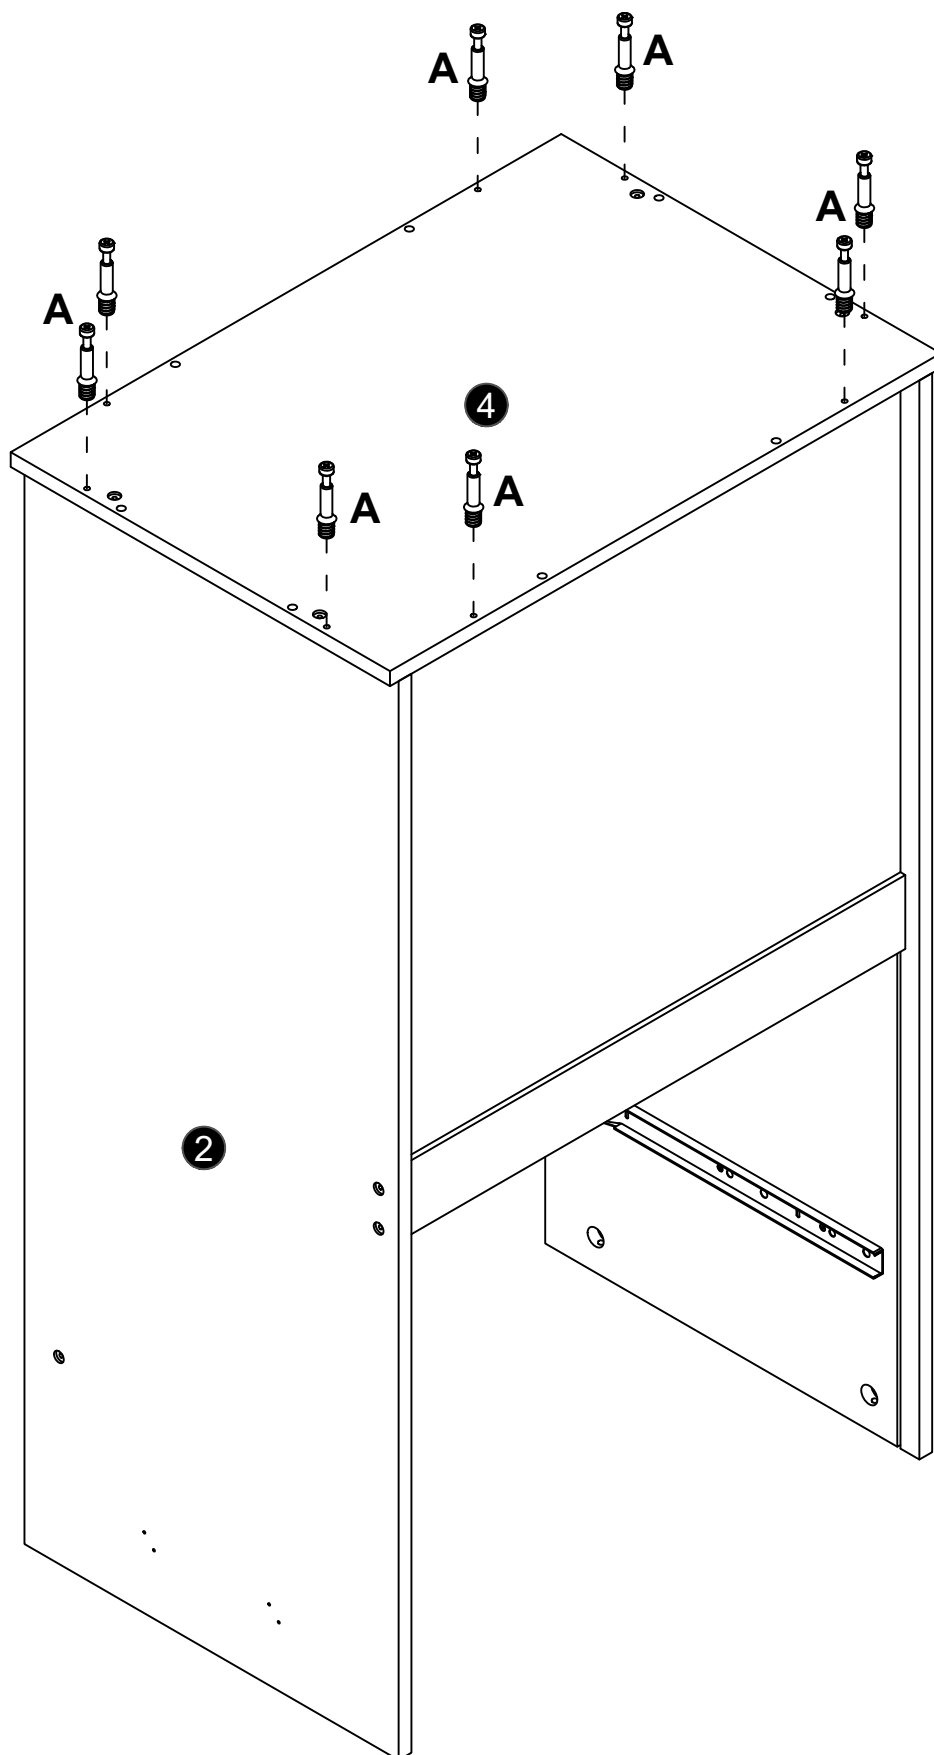





A x4



B x4




D x4

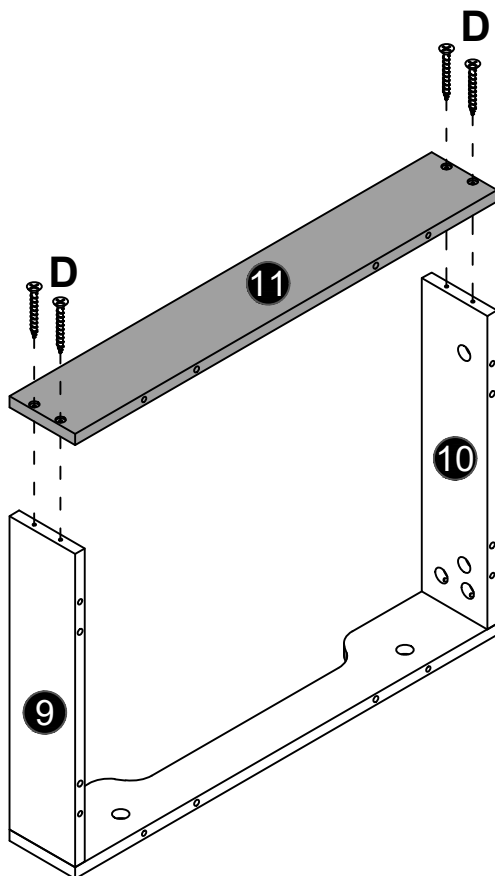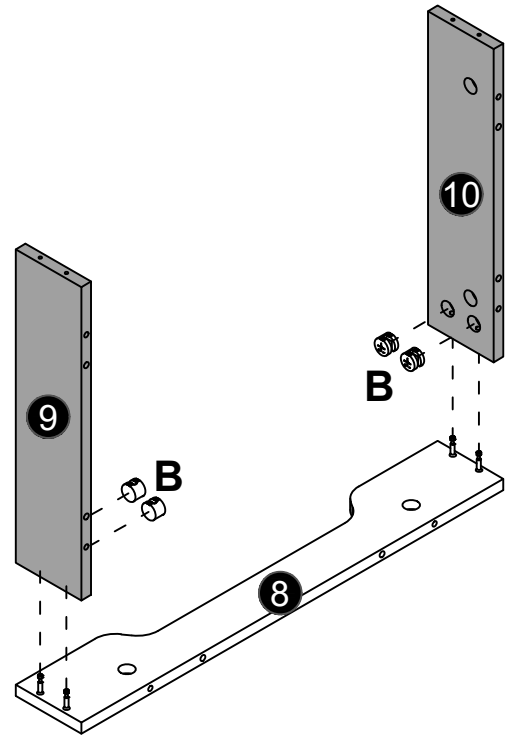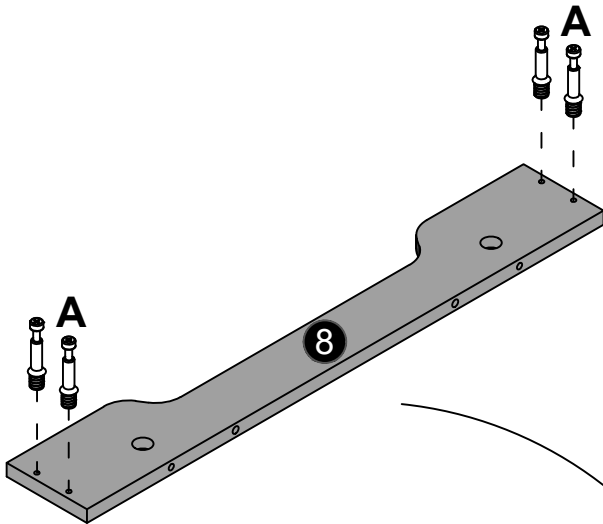


B x8





C x8

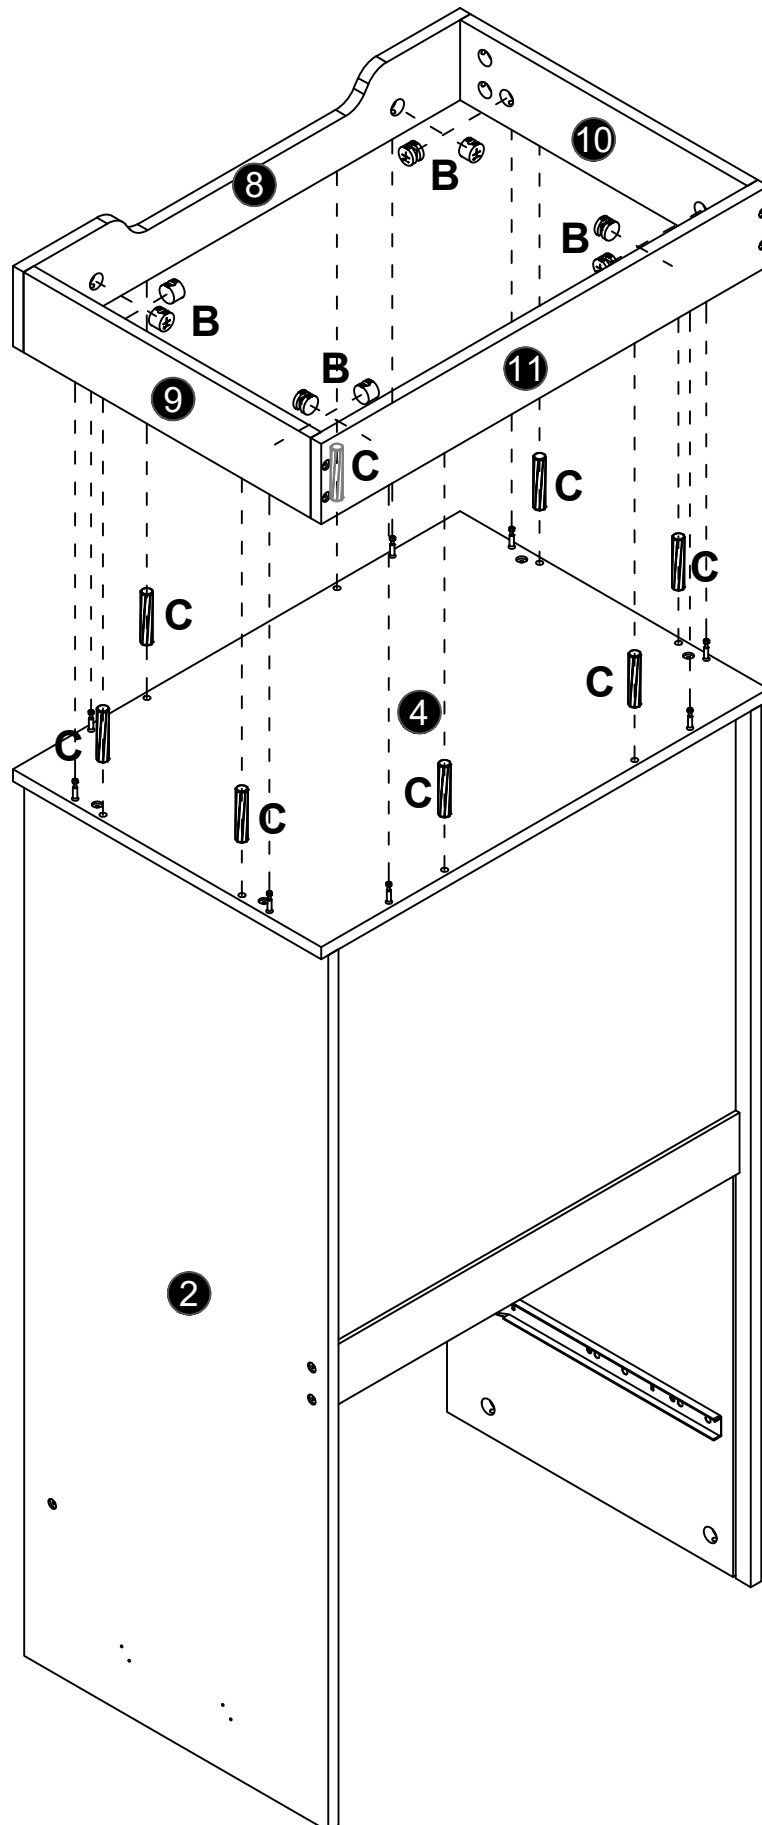

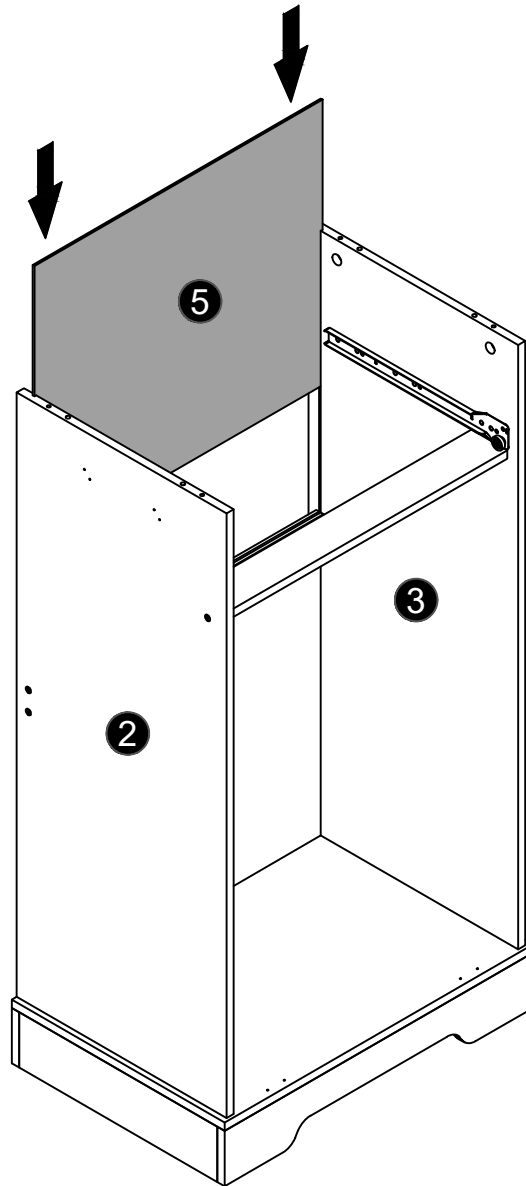


A x4

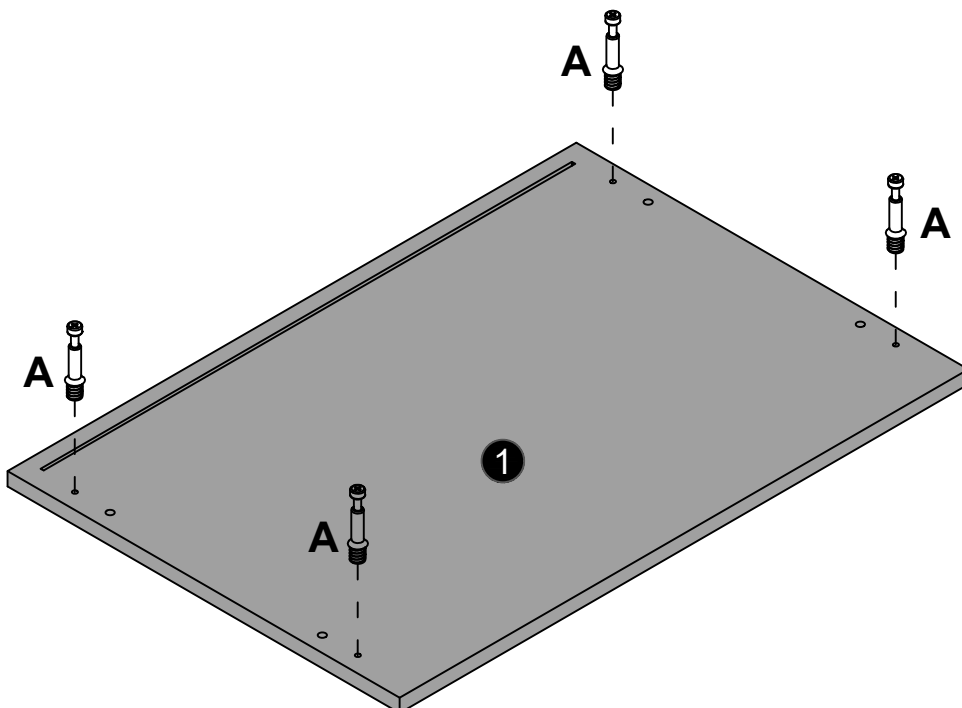



B x4



C x4

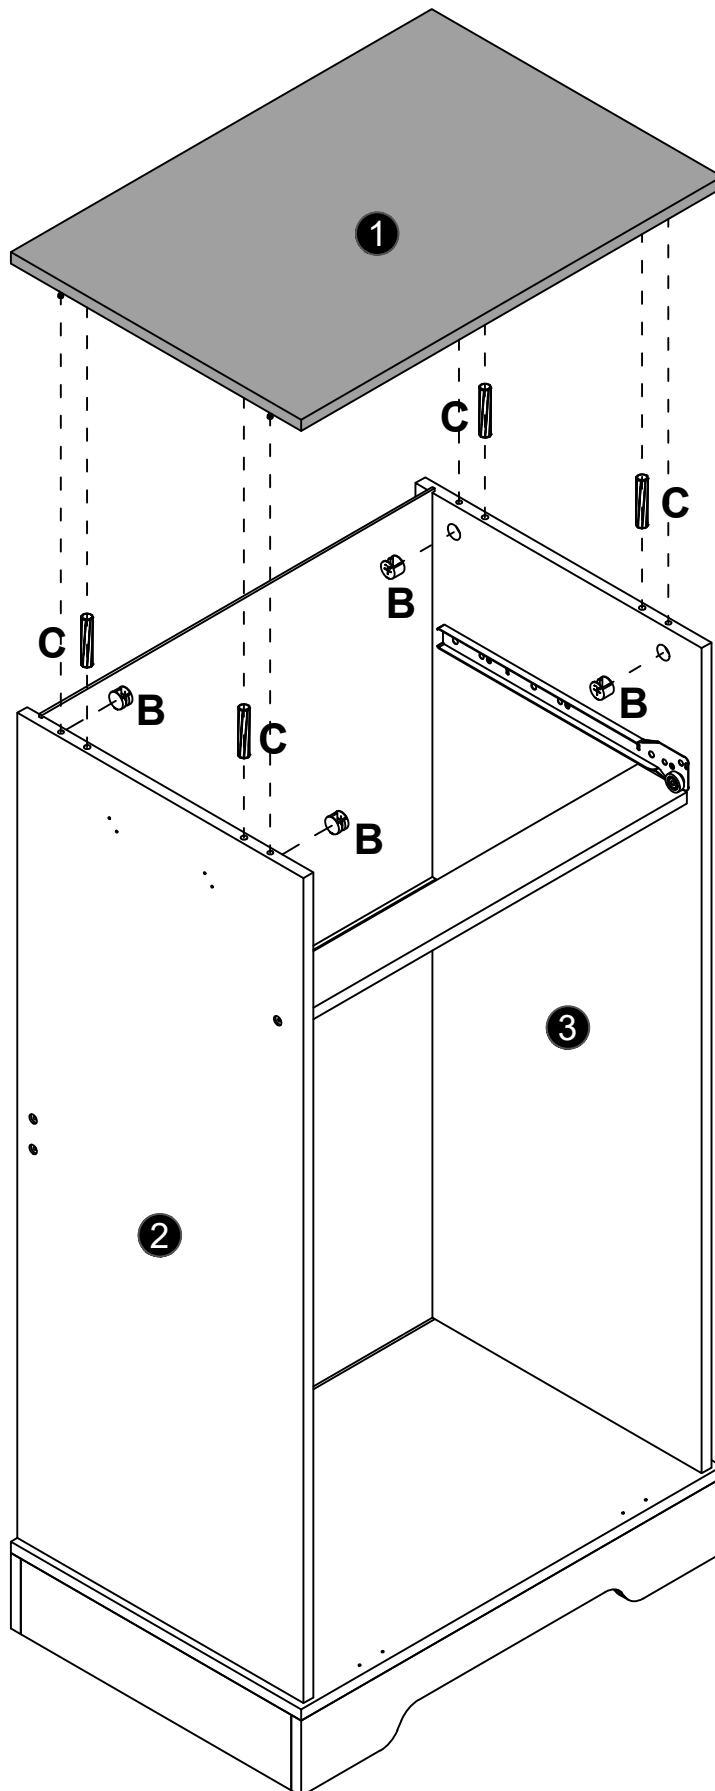


A x6

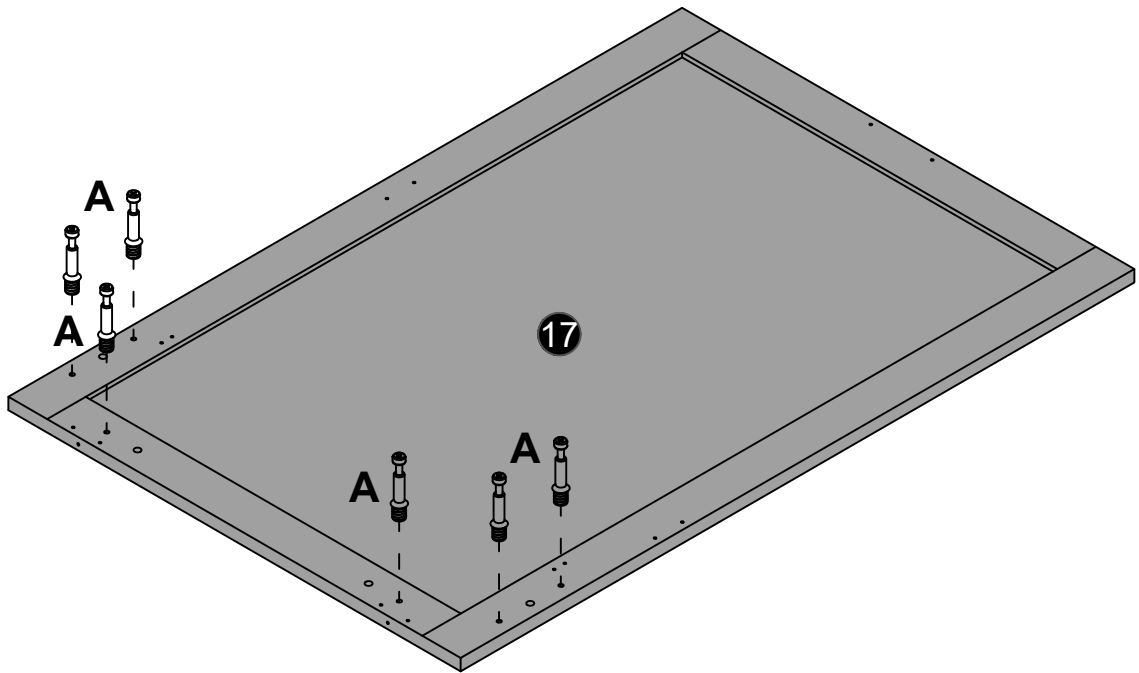

E x6




F x1



F-1




F-2

H x2

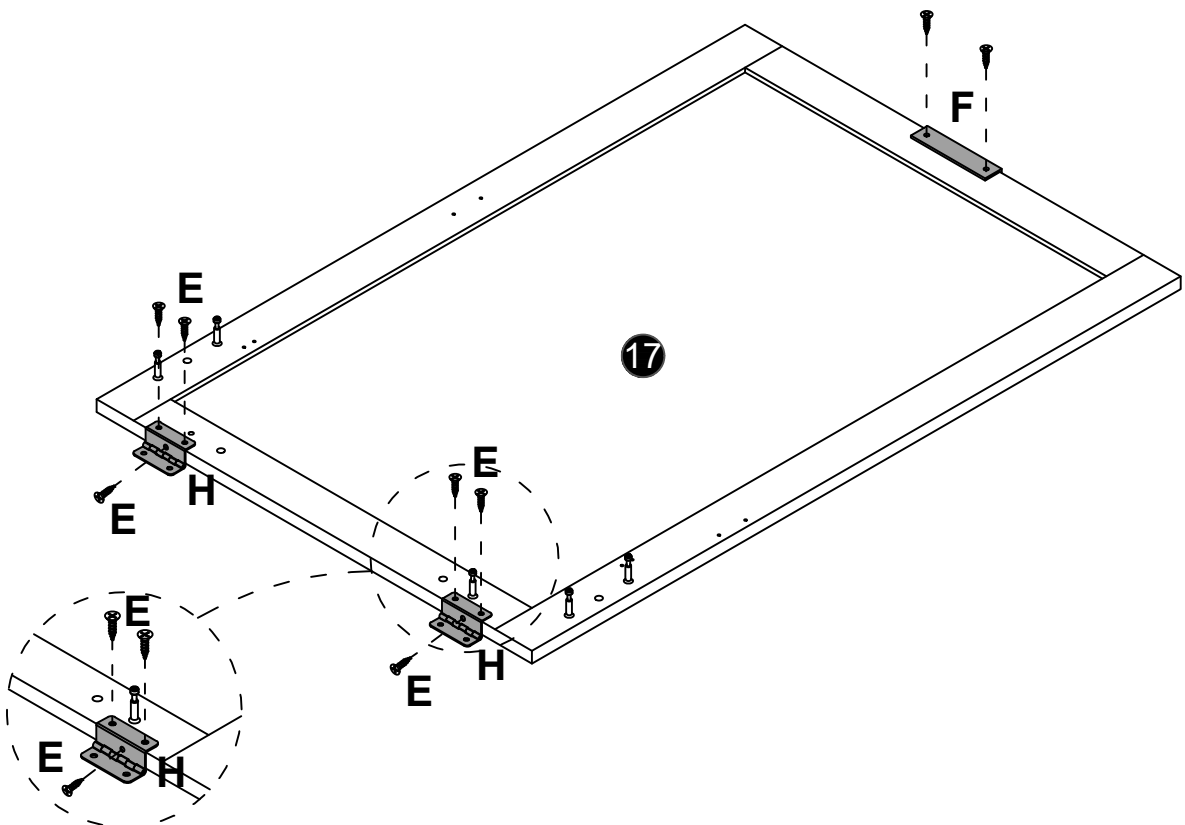



C x4

D x4

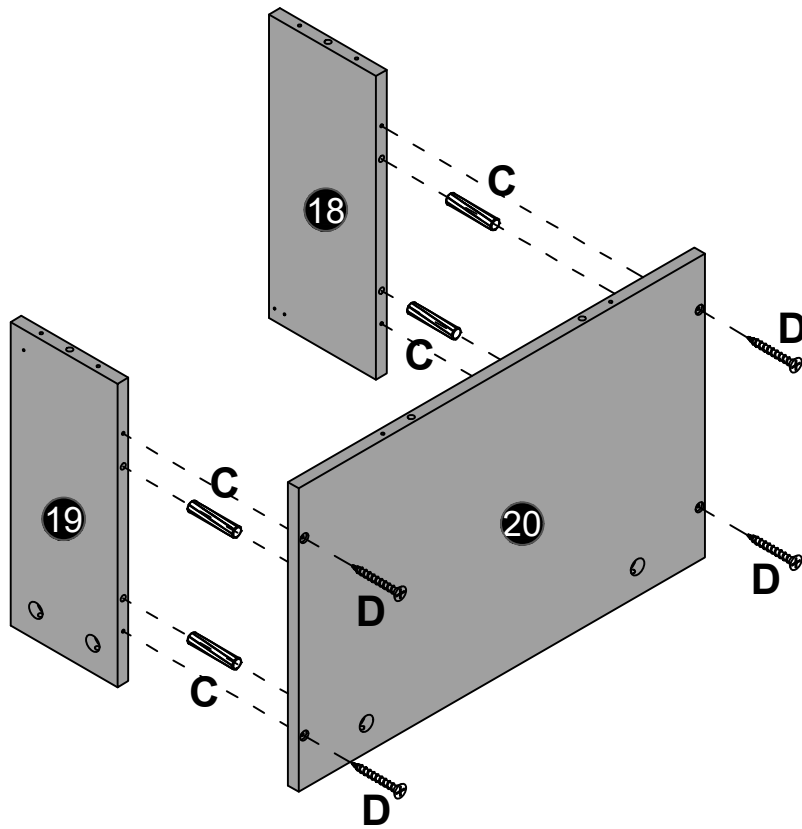

C x4



D x6

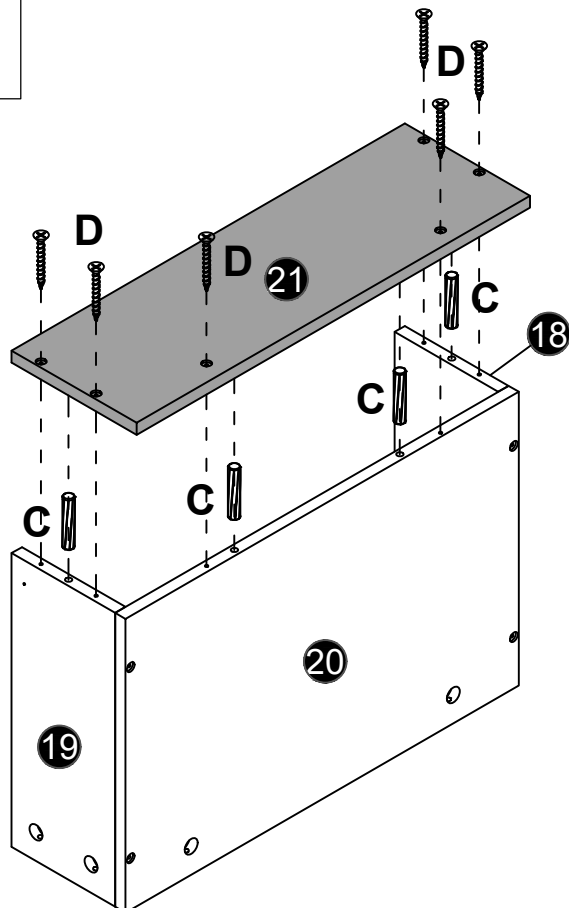

B x6



C x4

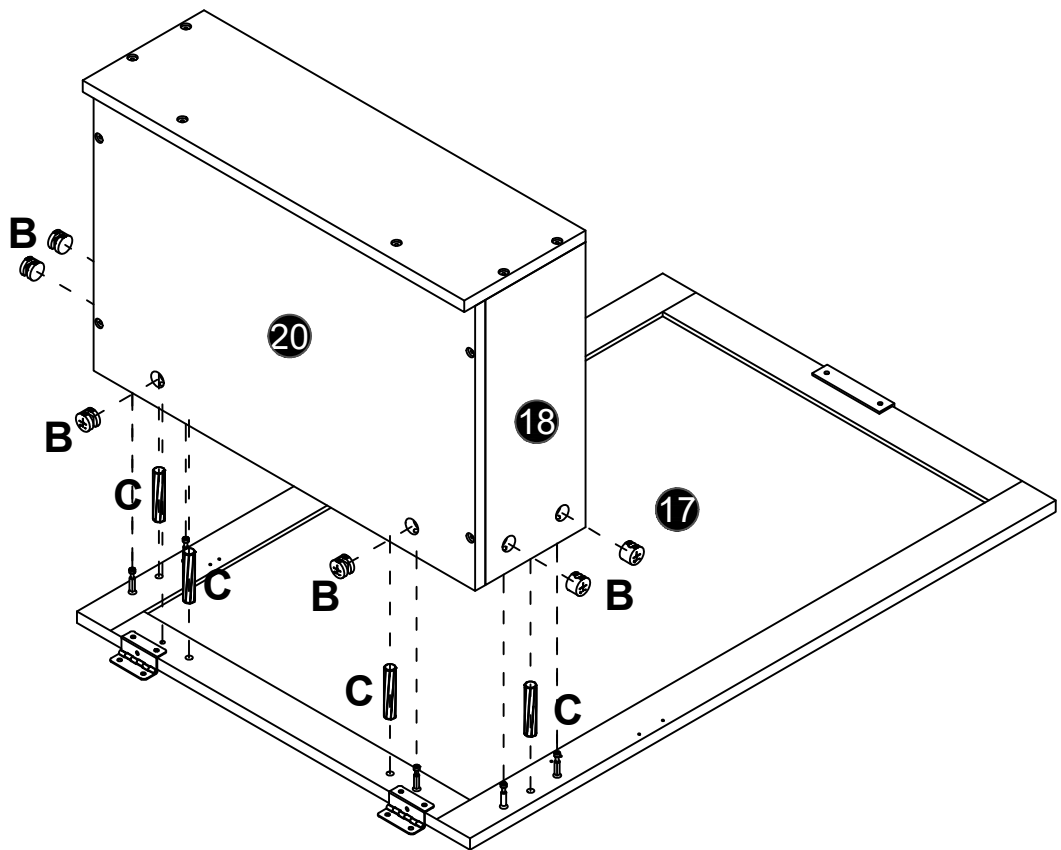



E x11






I x2





O x1

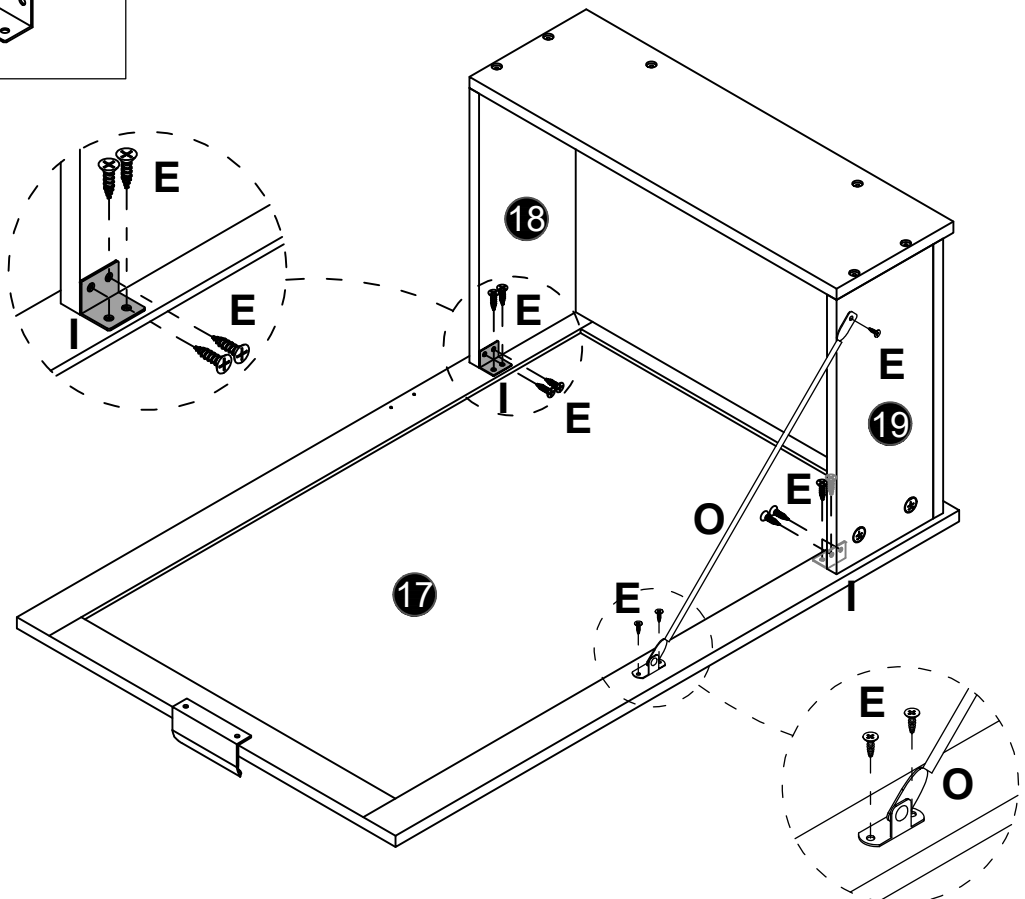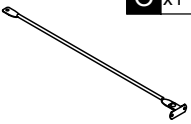


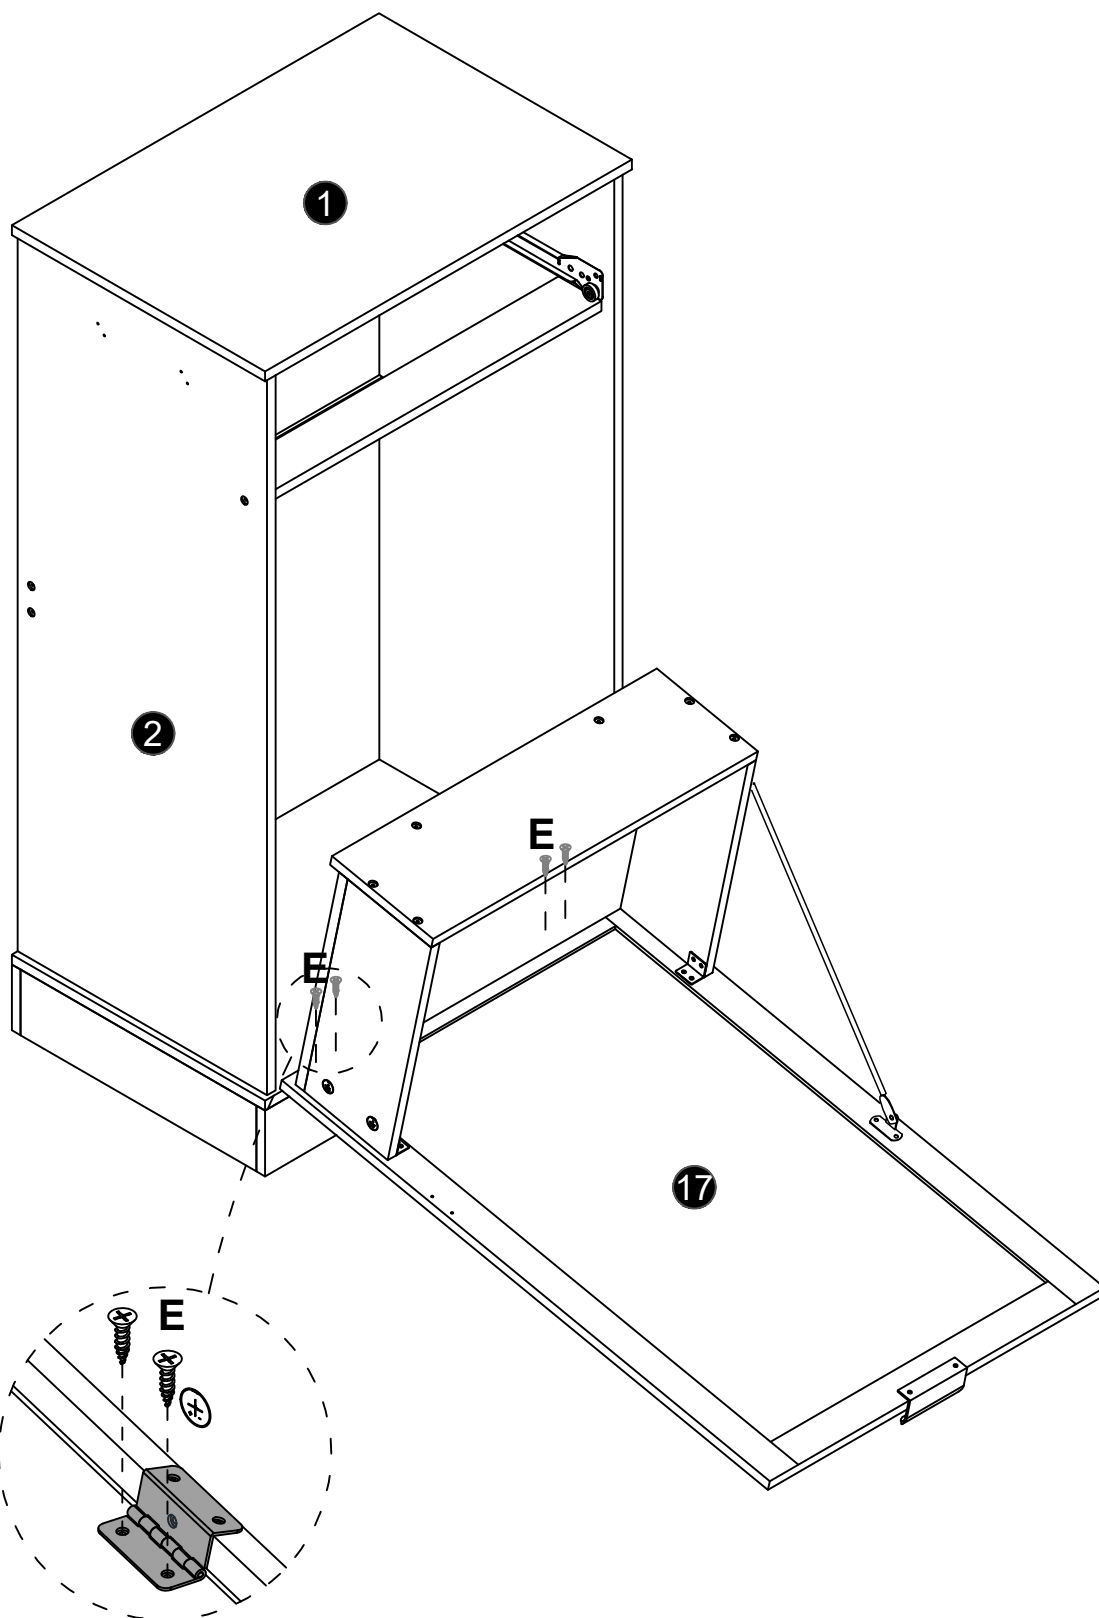

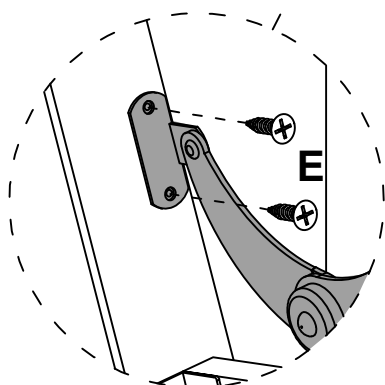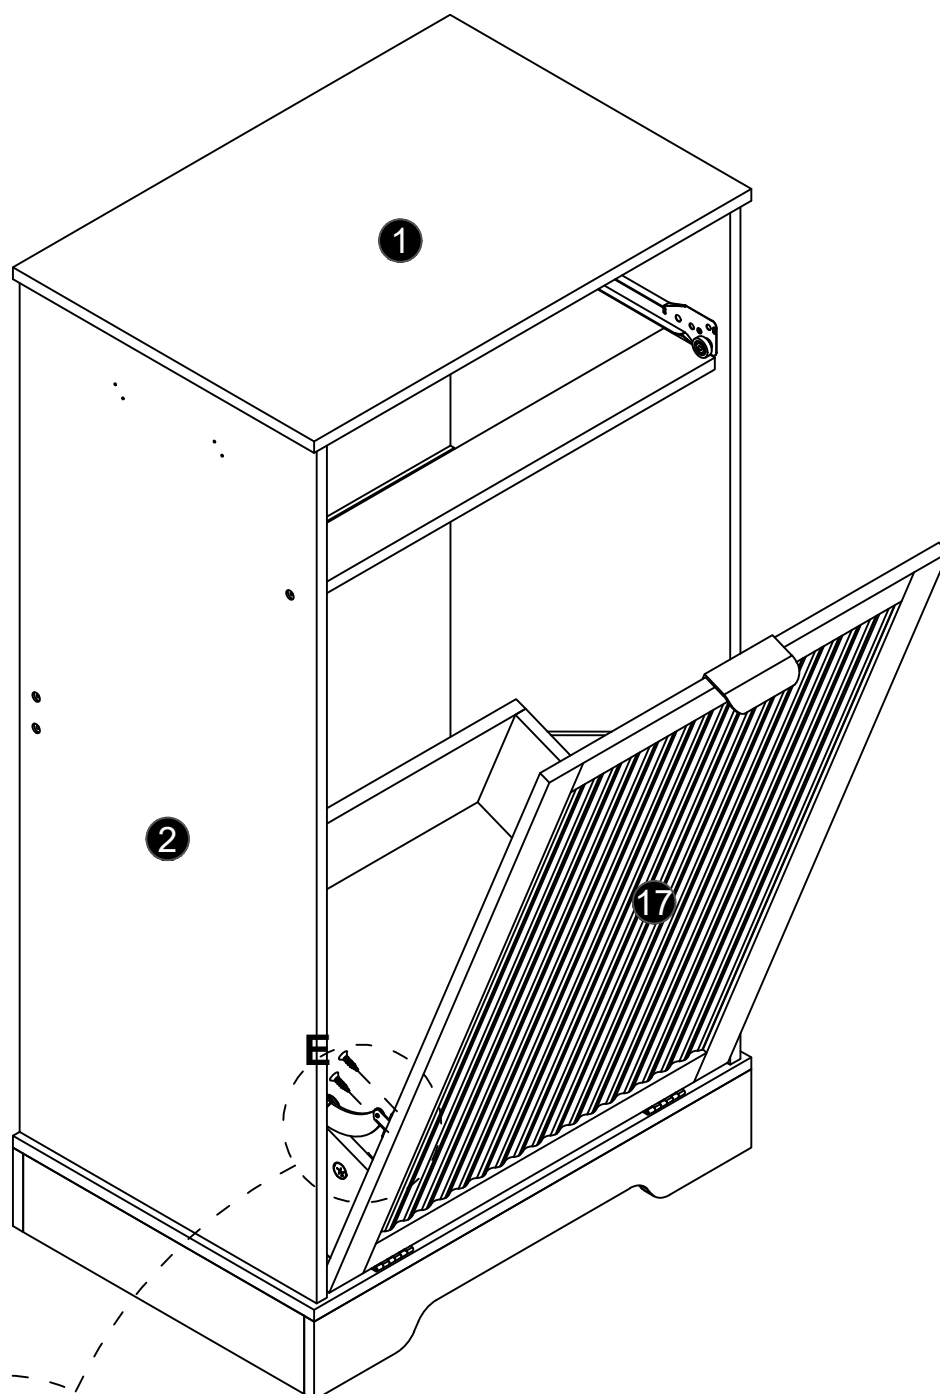

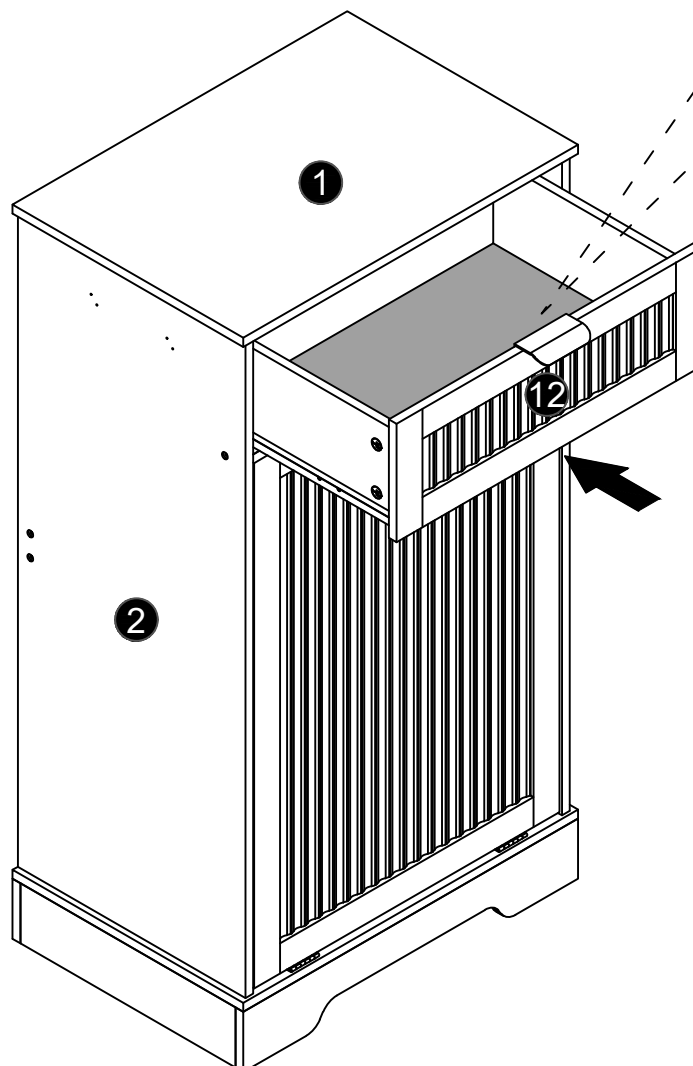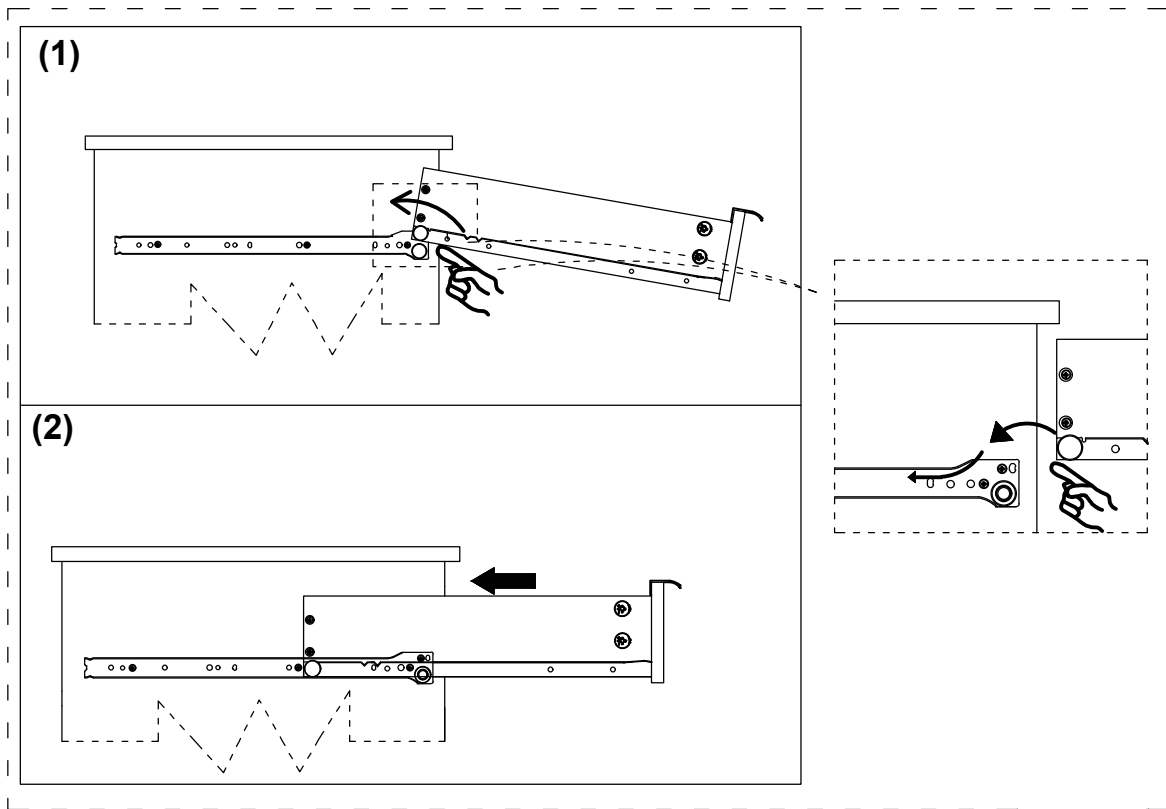

J x8

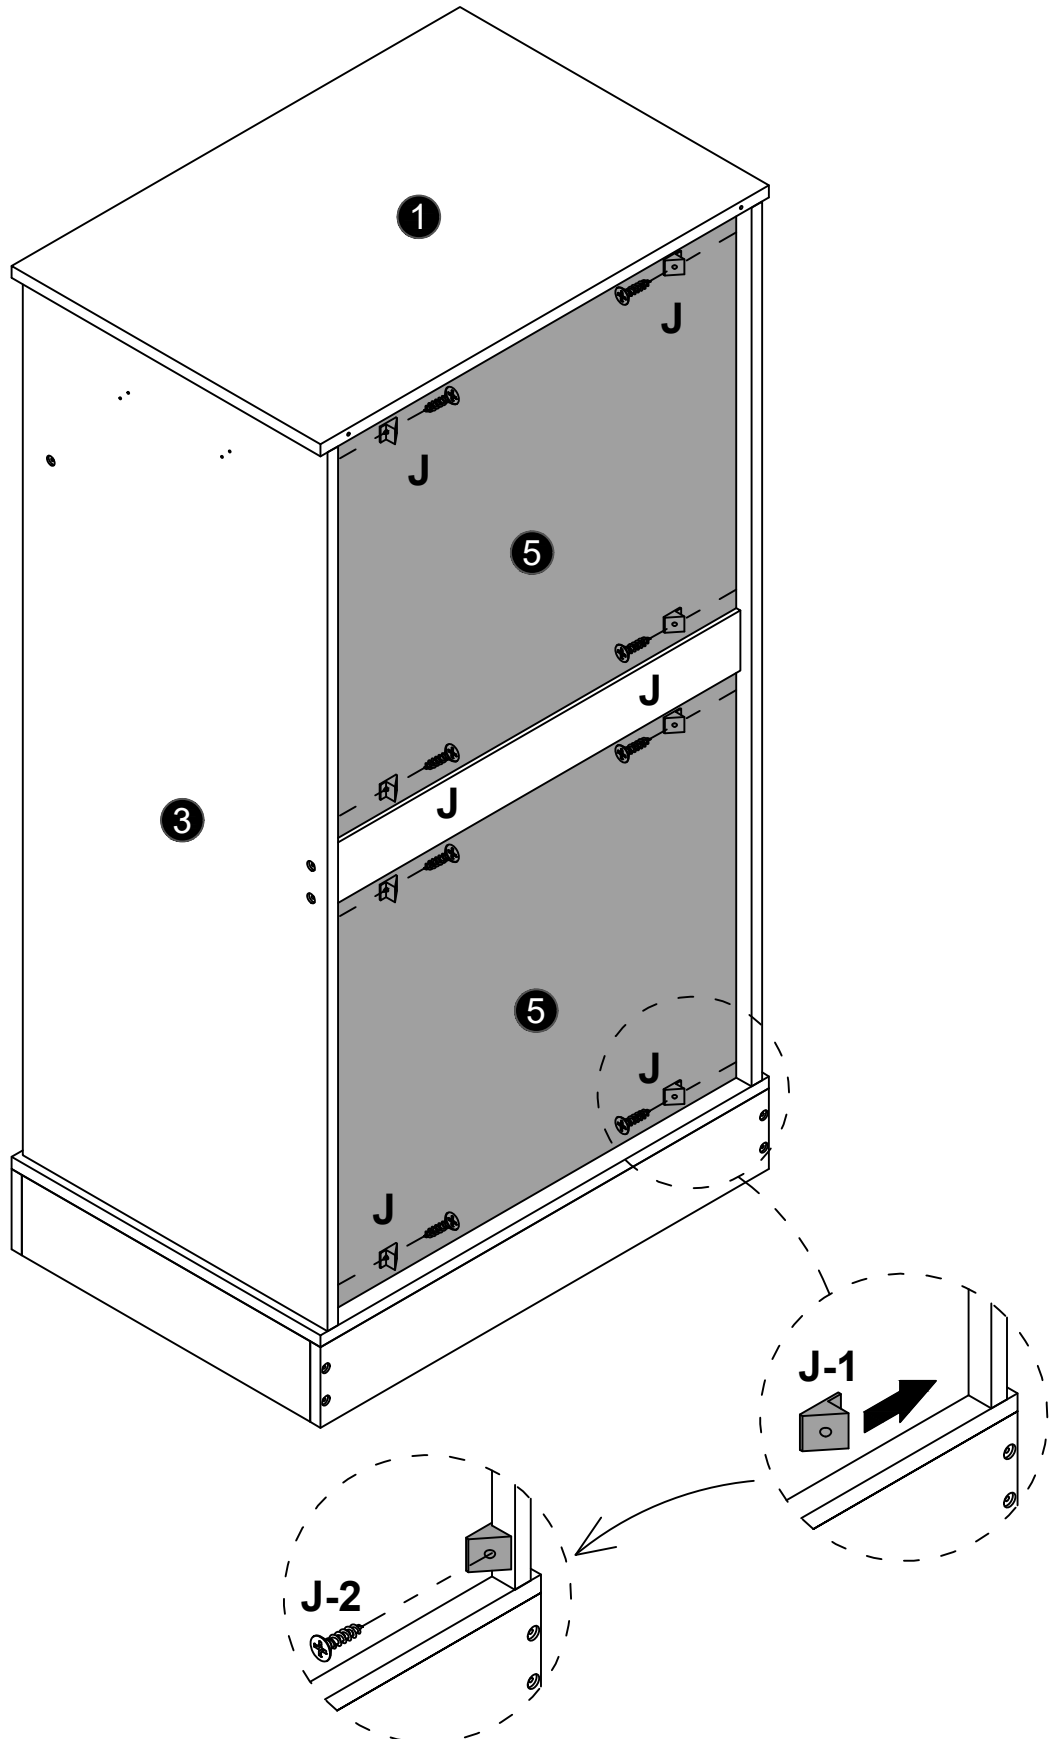

K x10

N x2




N-1



N-2


Please install the hook "N" according to your actual needs, either on the left Scheme 1 or on the right Scheme 2, and choose one of the options for installation, as shown .

Scheme 1

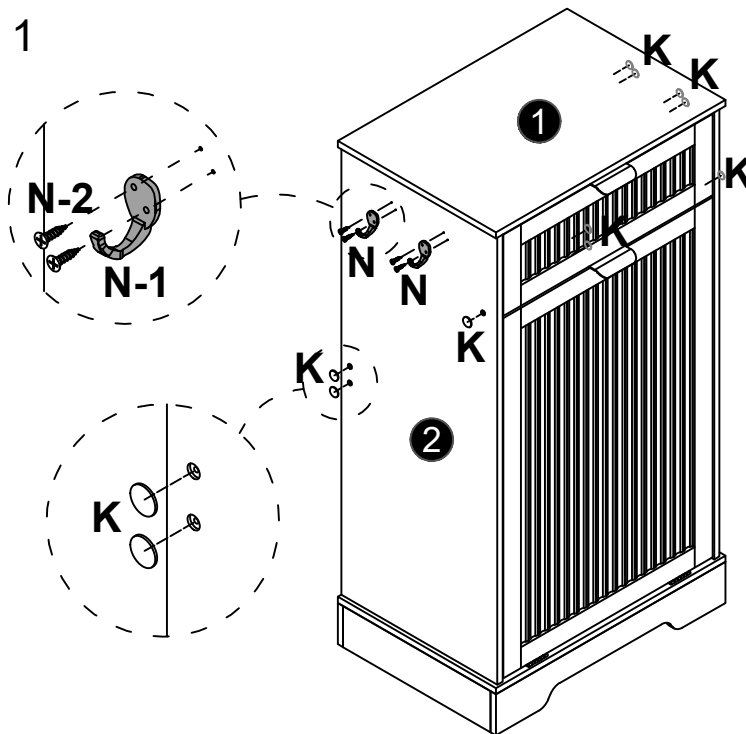

OR

Scheme 2

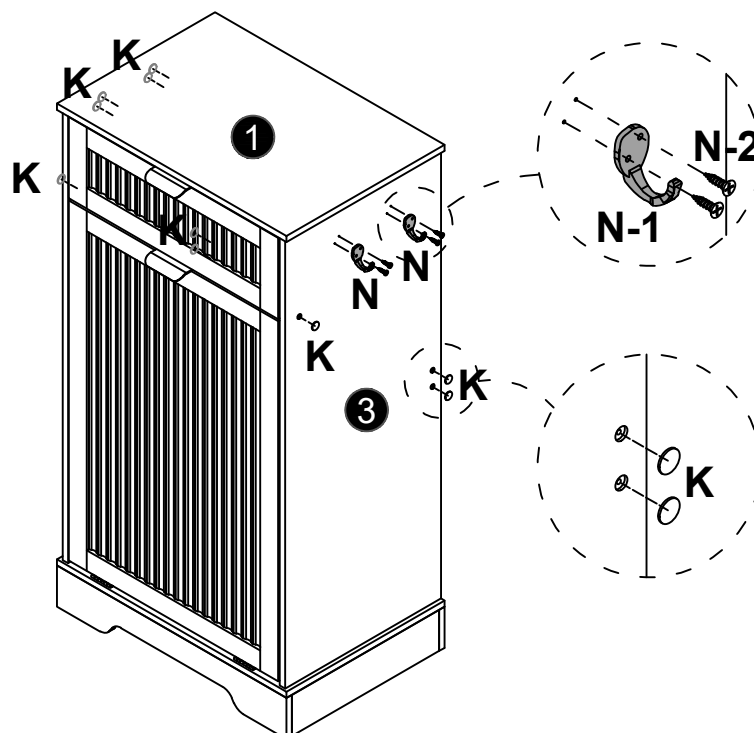

M x2




M-1 M-2


D x2




L x2

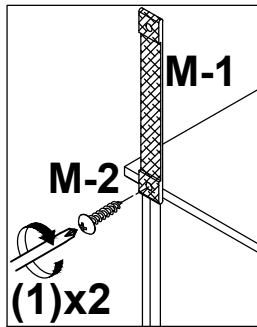


First fix the anti-rewind screw in the reserved hole of the product.

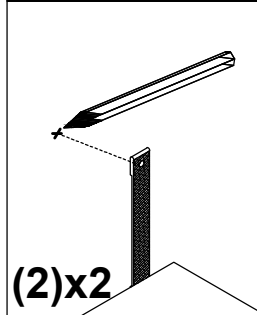

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

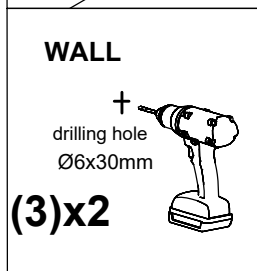


Then use a tape drill to make holes in the wall that are suitable for the product screws.

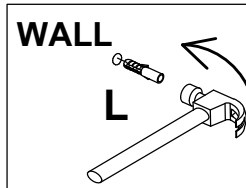

Then, put the expansion bolt into the hole

(4)x2

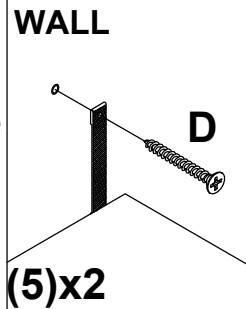

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

(5)x2

