



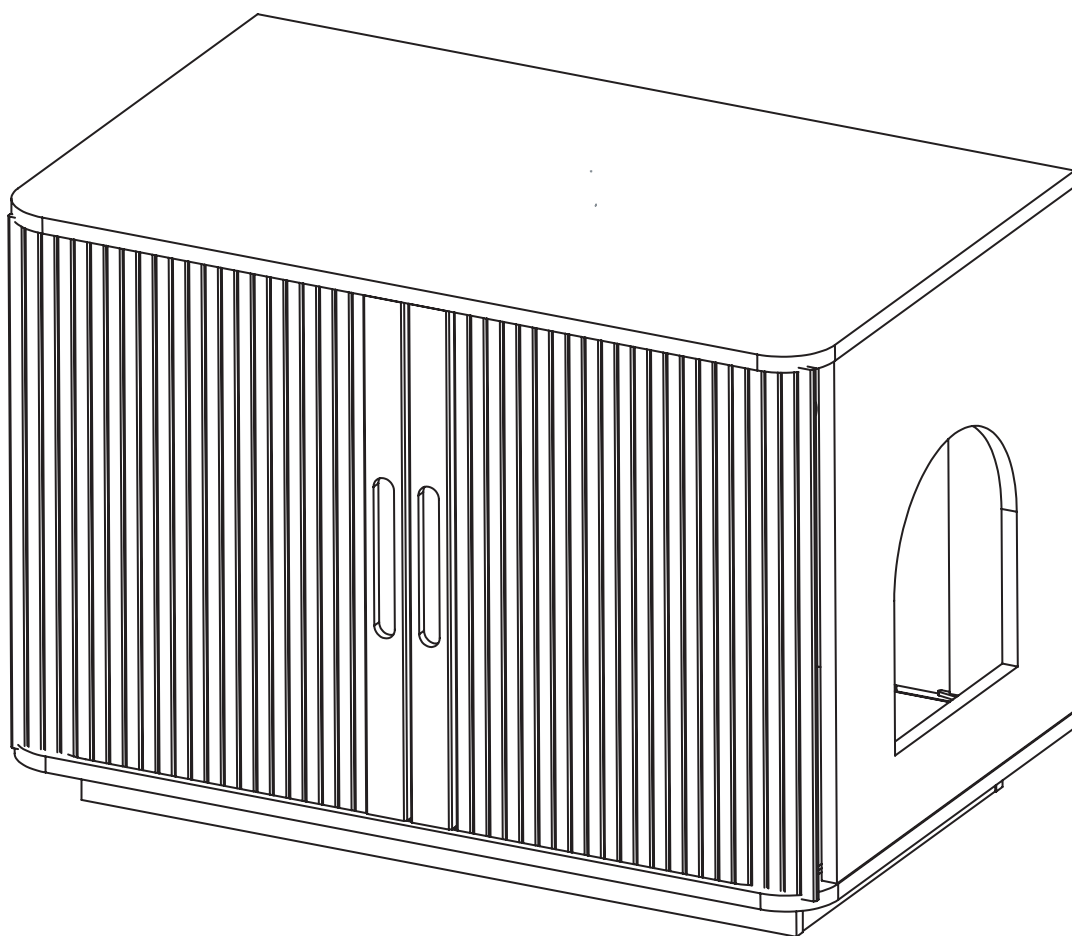

As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully.

MADE IN CHINA

Before You Start

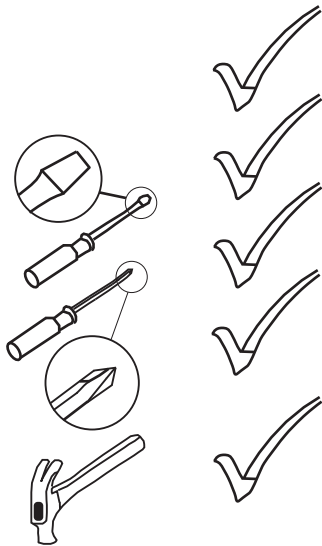

Read through each step carefully and follow the proper order

Separate and count all your parts and hardware

Give yourself enough room for the assembly process

Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer

Caution: If using a power drill or power screwdriver for screwing, please pay attention to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an R(right) and L(left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification

Not actual size

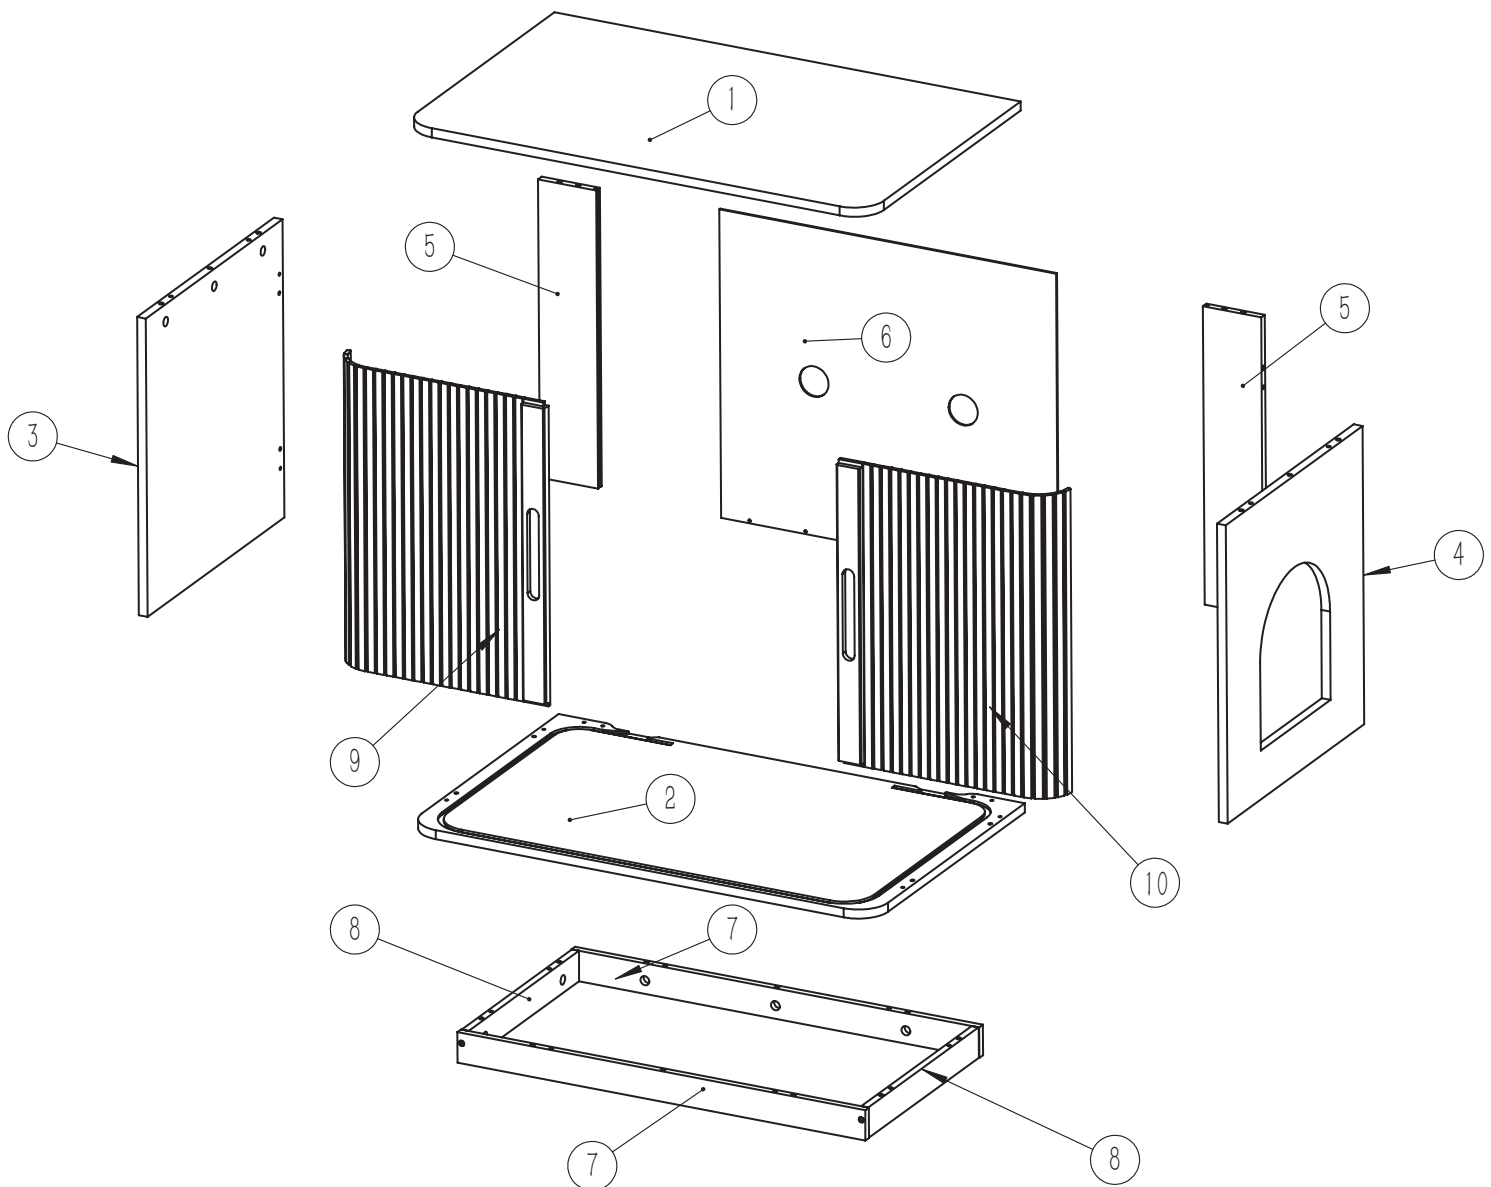

Board Identification

Not actual size

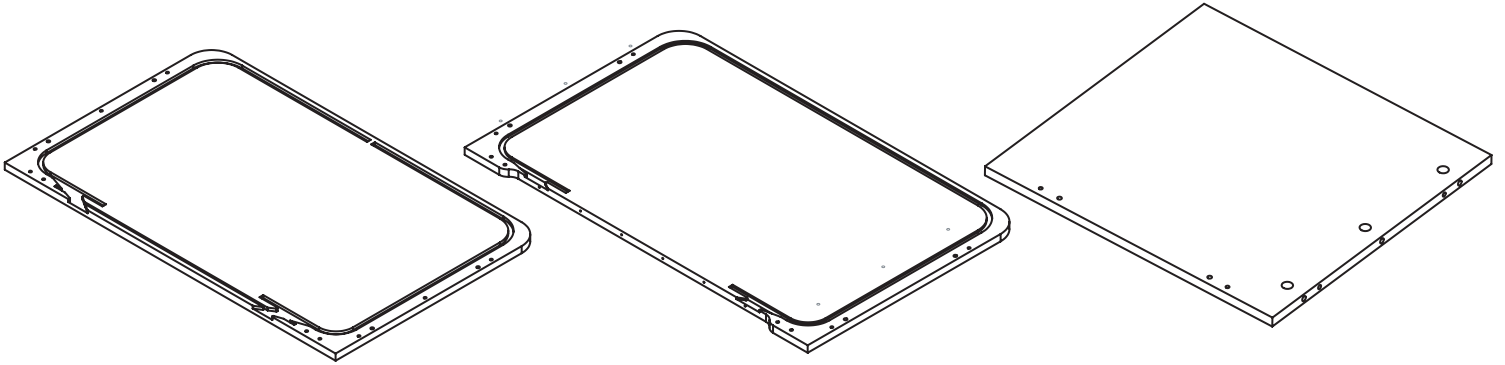

①


Qty:1

②

Qty:1


③

Qty:1

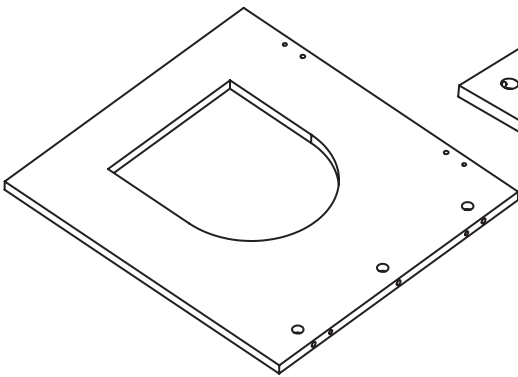


④

Qty:1

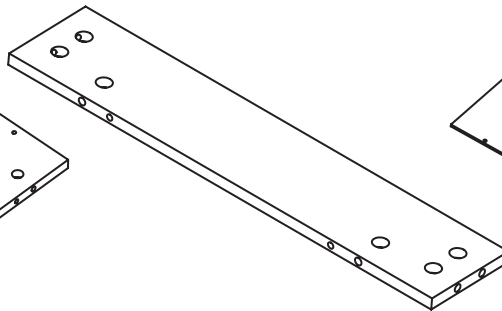


⑤

Qty:2

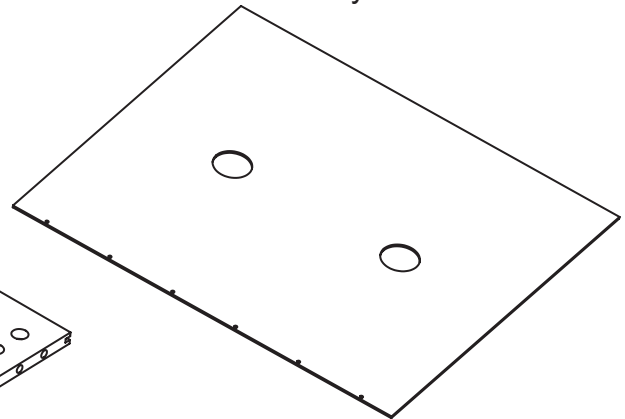


⑥

Qty:1

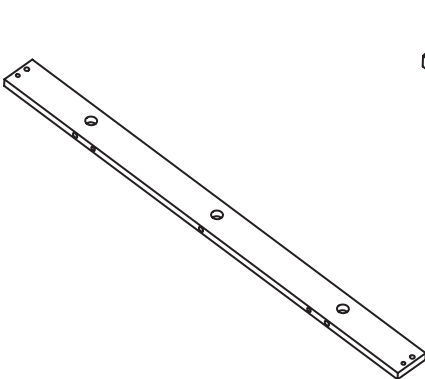


⑦

Qty:2

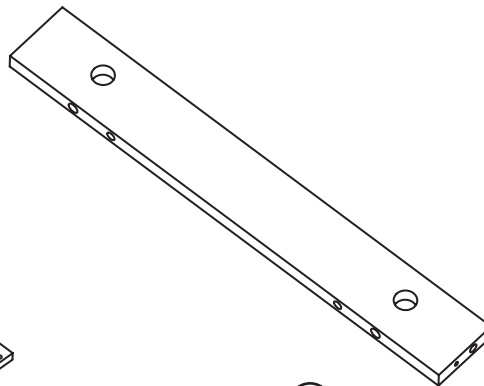

⑧

Qty:2

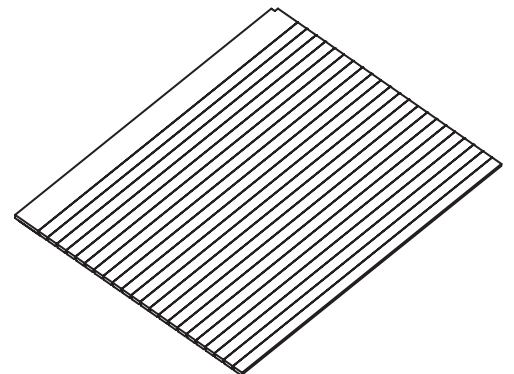


⑨

Qty:1

Board Identification

Not actual size

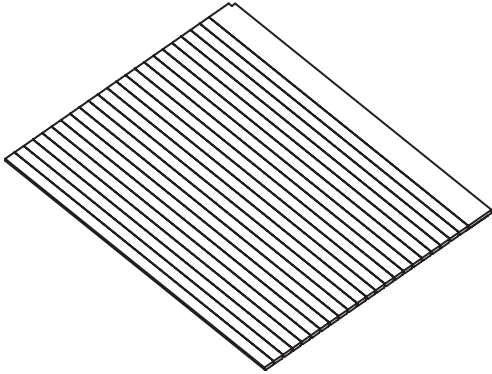

⑩

Qty:1

Part List

(A)




$\Phi 15 \times 9.5\text{mm}$

X28

CAM LOCK

(B)



$\Phi 6.5 \times 35\text{mm}$

X28

CAM BOLT

(C)



6X30mm

X24

DOWEL

(D)



M5×40mm

X8

SCREWS

(E)



$\phi 3 \times 14\text{mm}$

X6

SCREWS

(F)



X6

BACK PANEL BUCKLE

(G)



X28

HOLE PLUG

(H)




X1

SCREWDRIVER

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

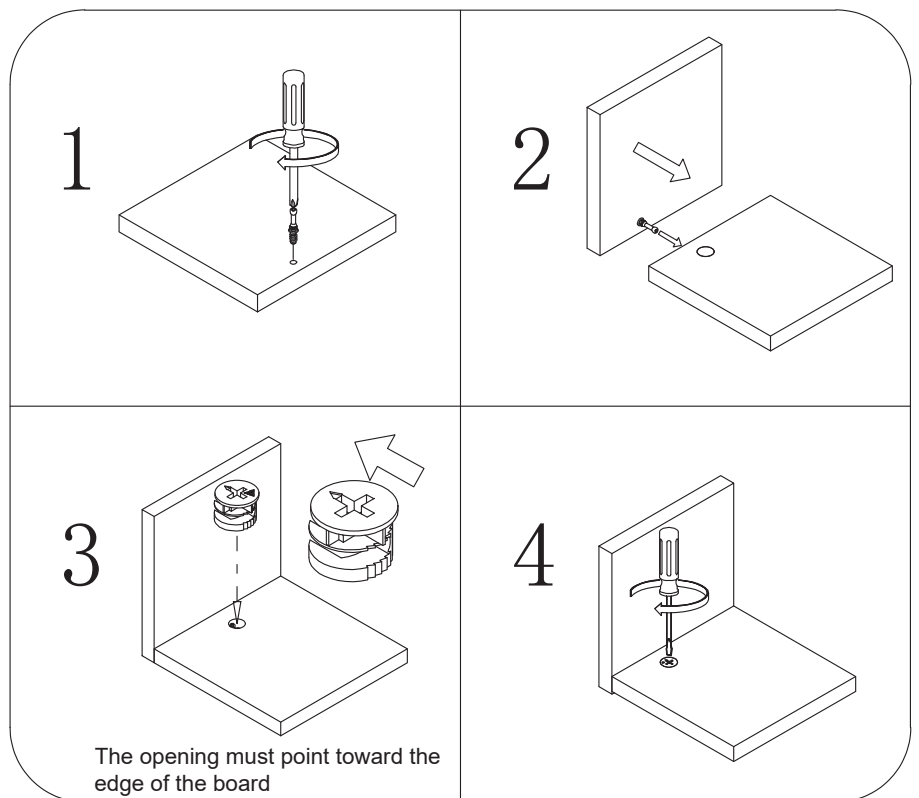


REMARK

1. Put a blanket under the board to avoid scratch or damage.

2. Please do not screw too deep or too shallow.

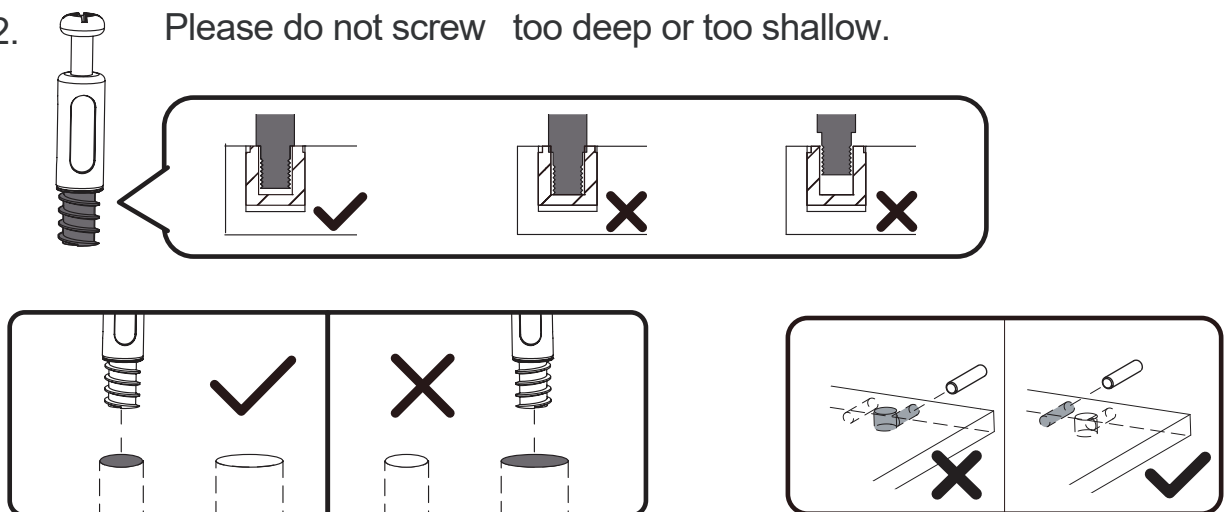

STEP1

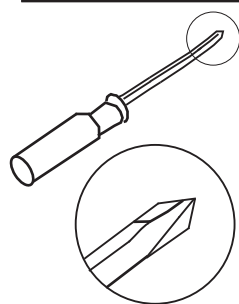


Ⓑ







Φ6.5×35mm
X10

Ⓒ







6X30mm
X4

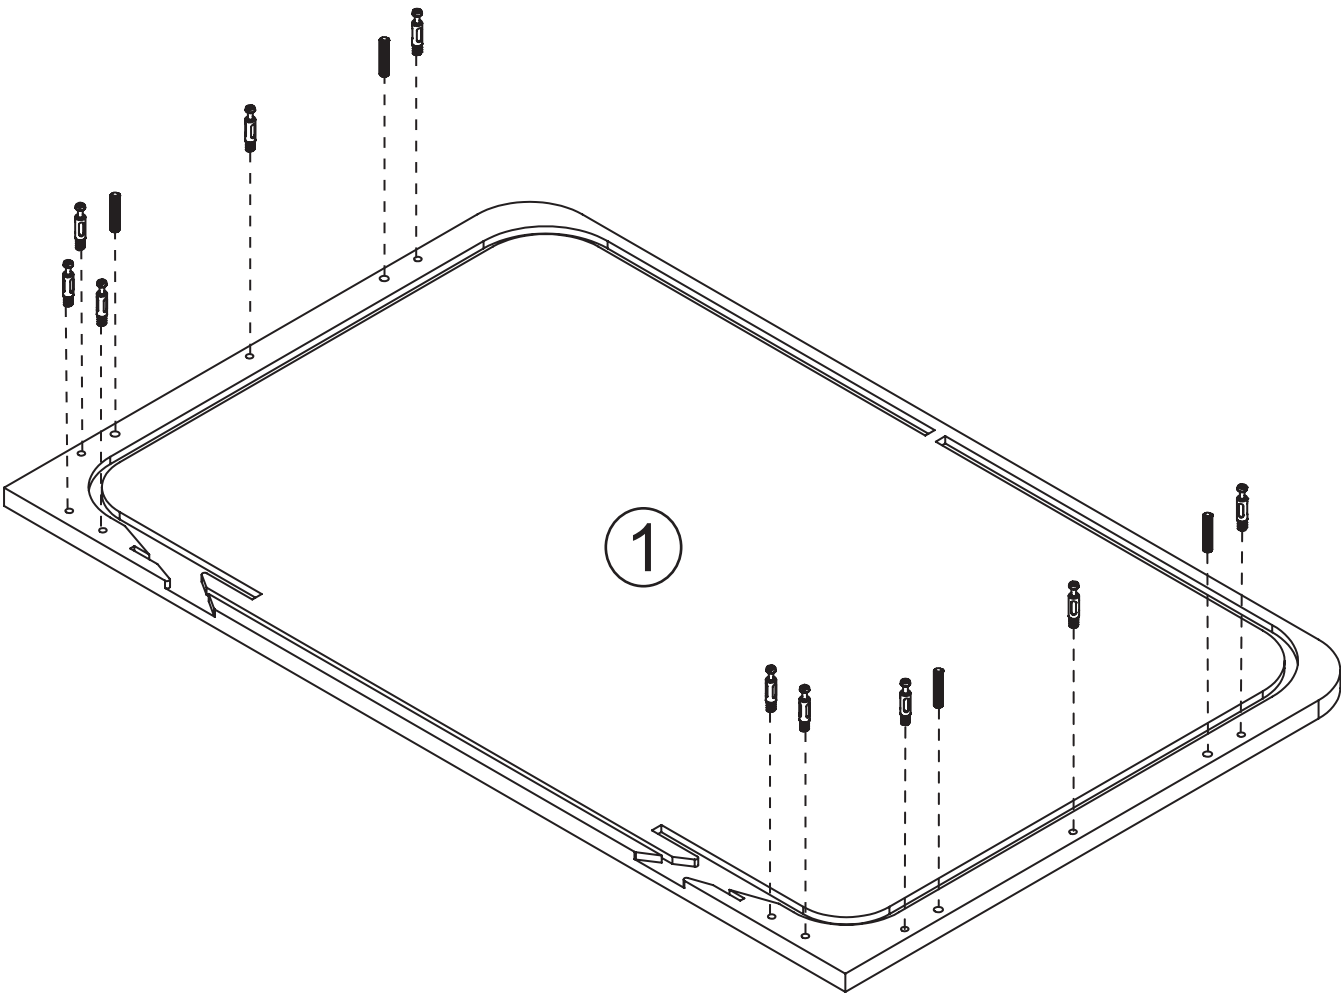




STEP2

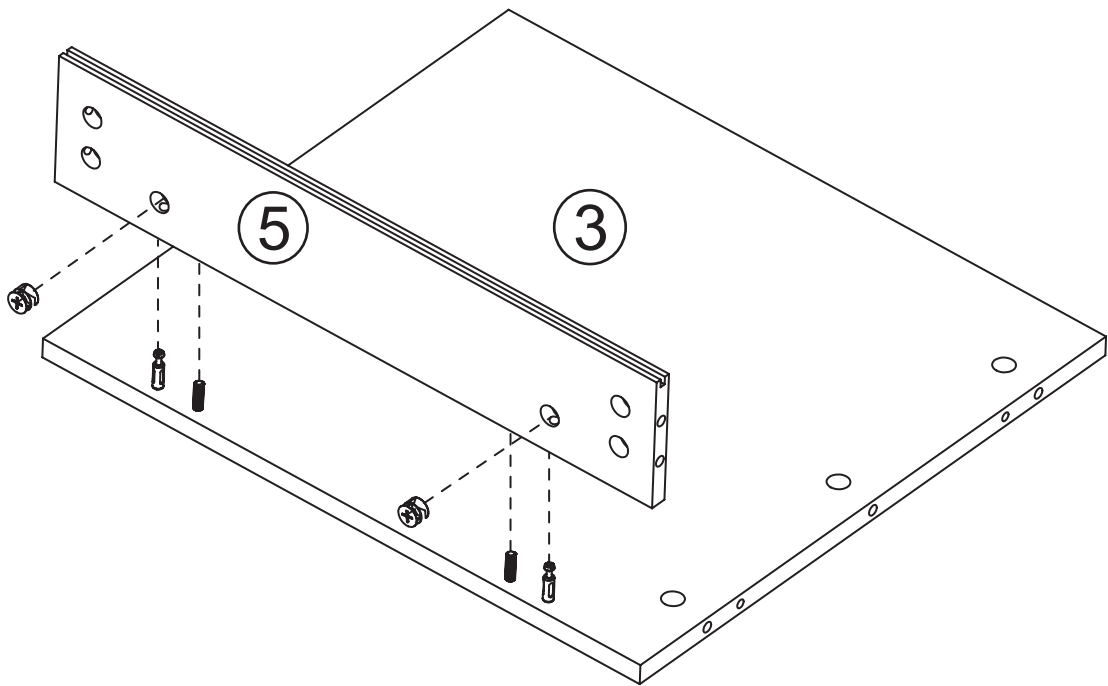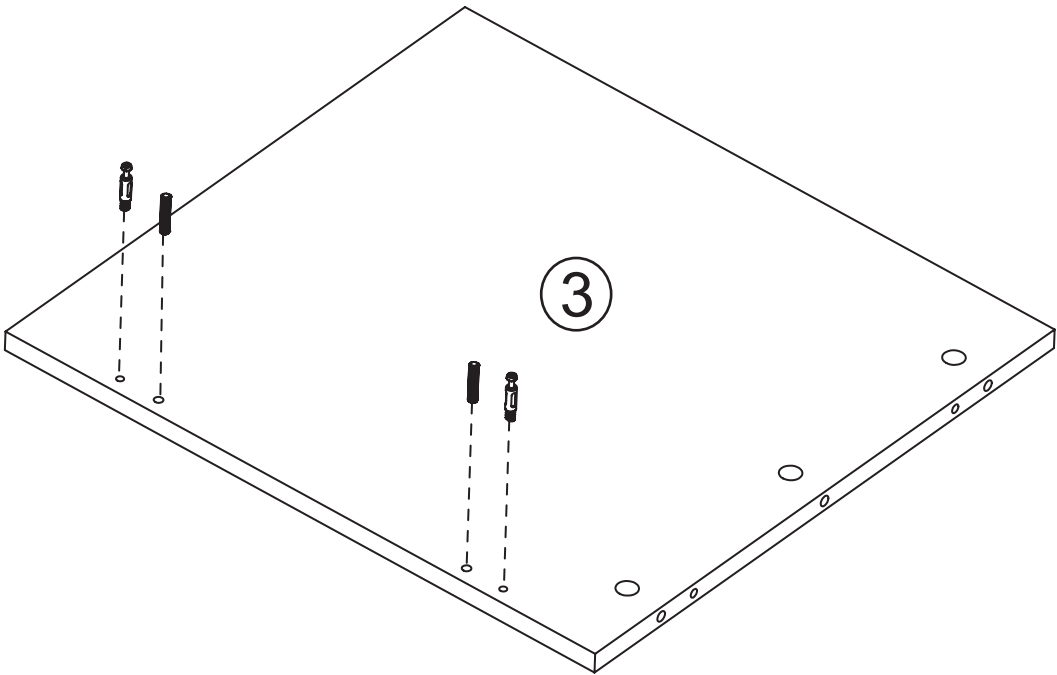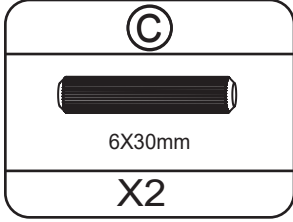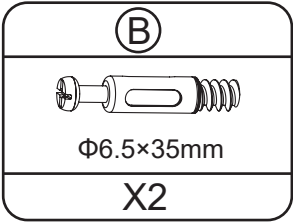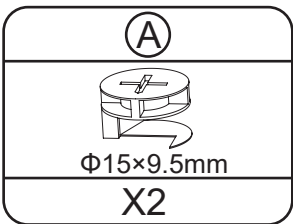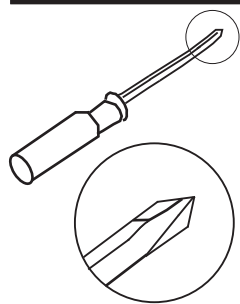





STEP3

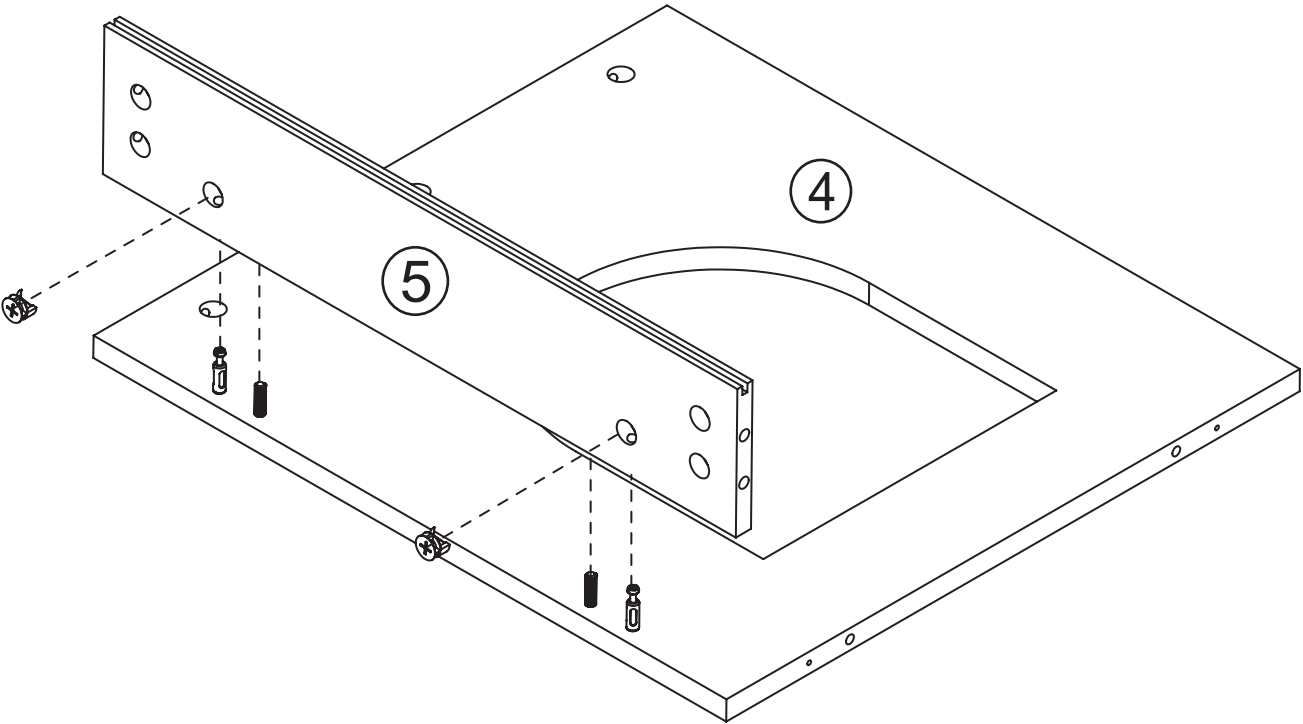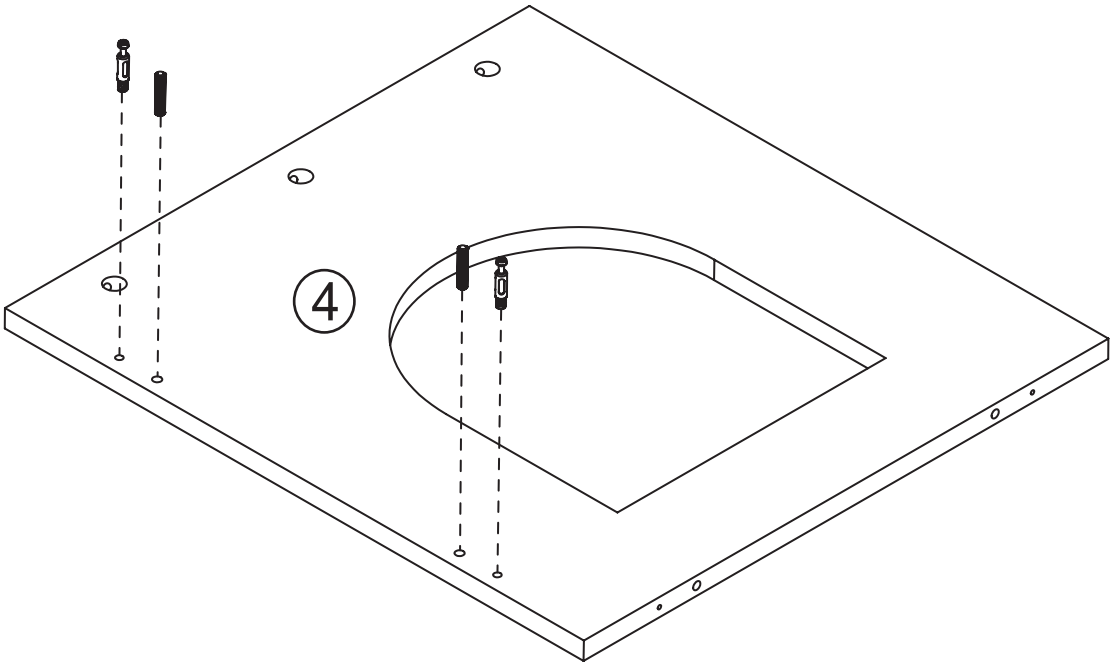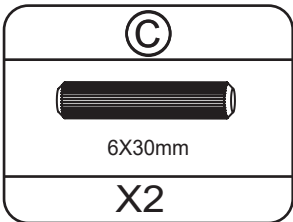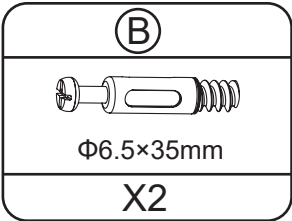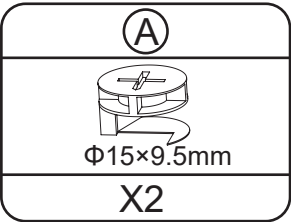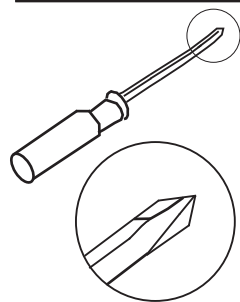




STEP4

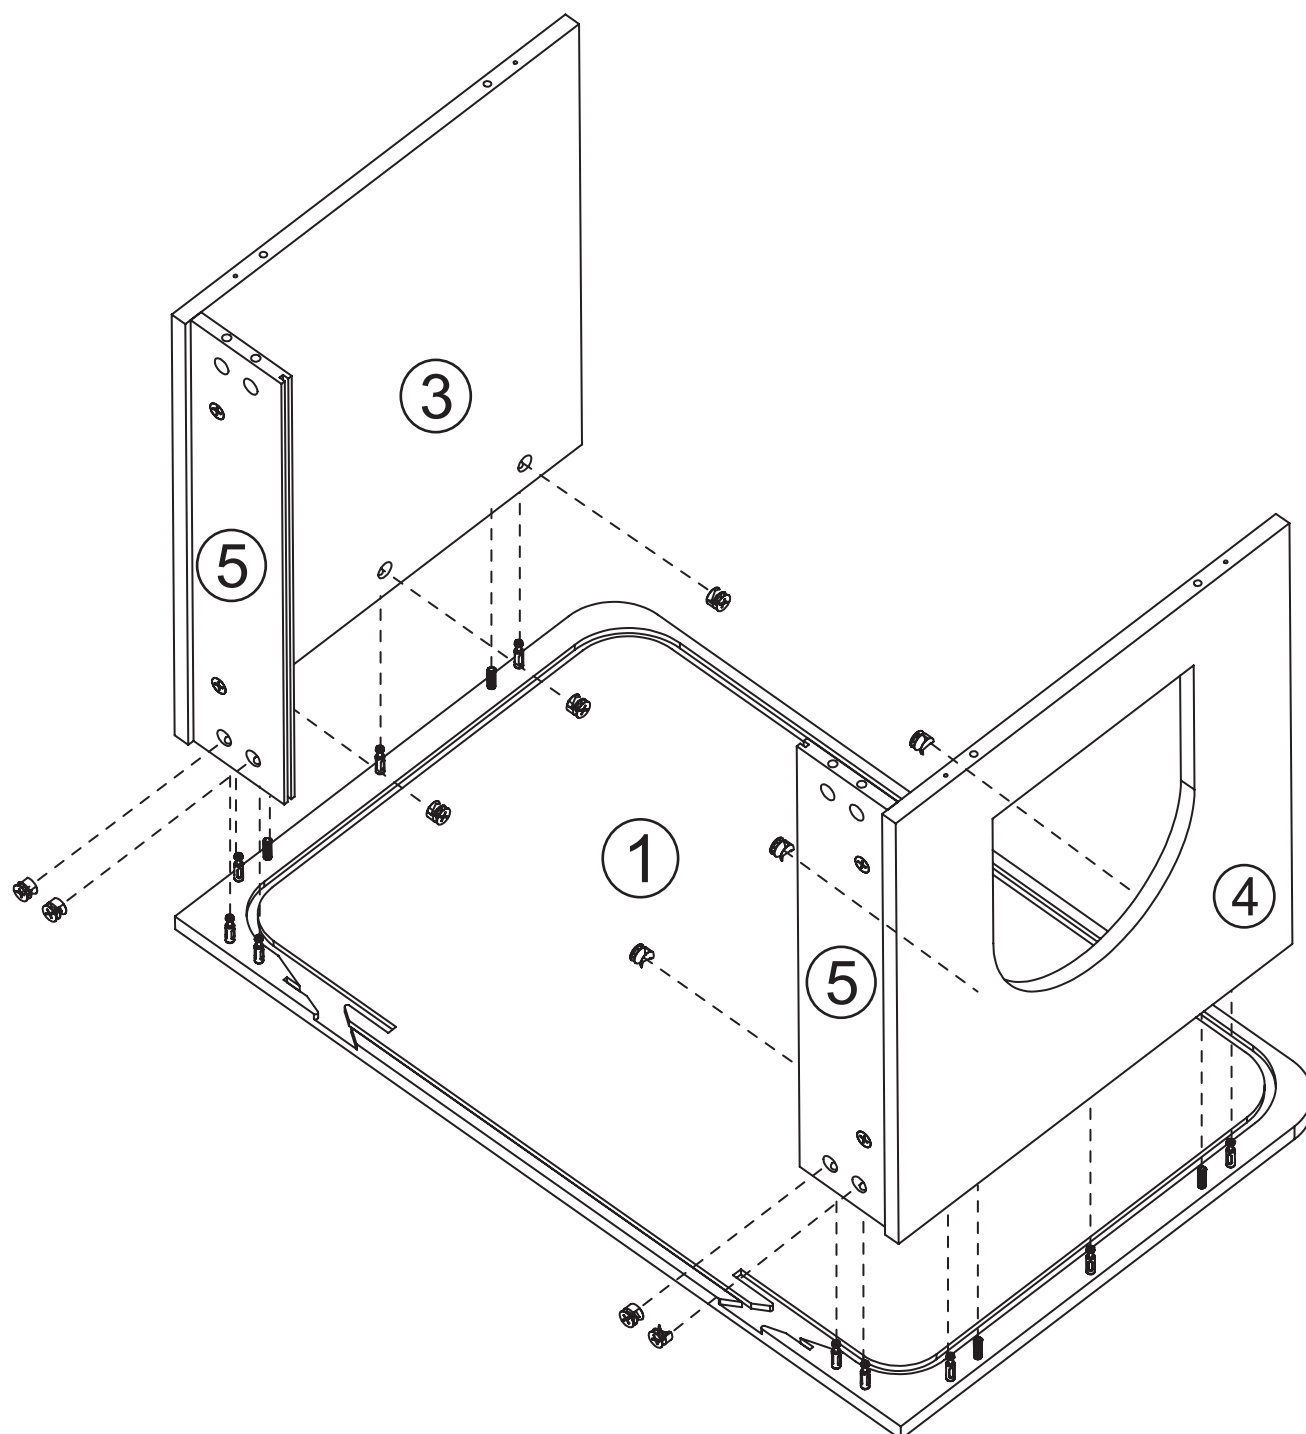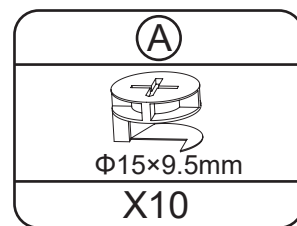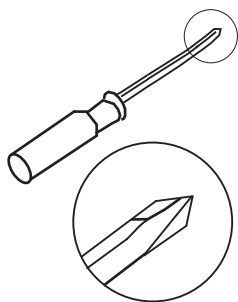




STEP5

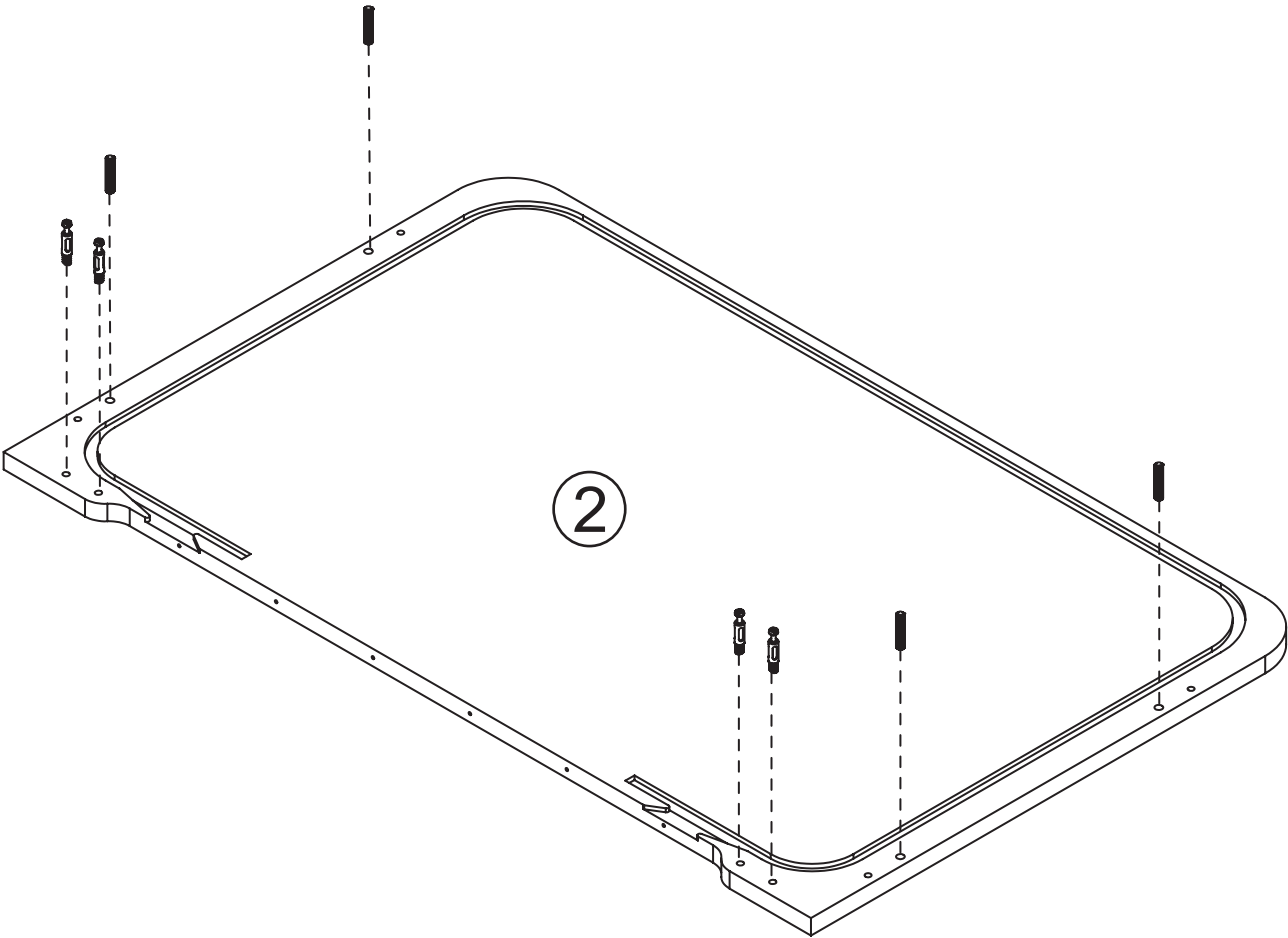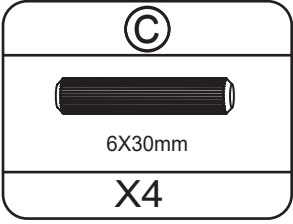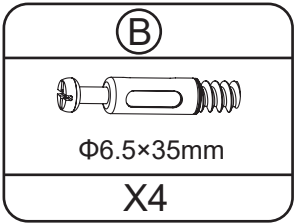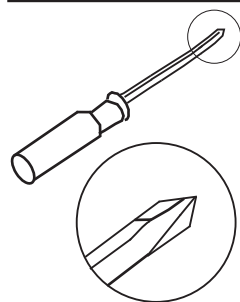





STEP6

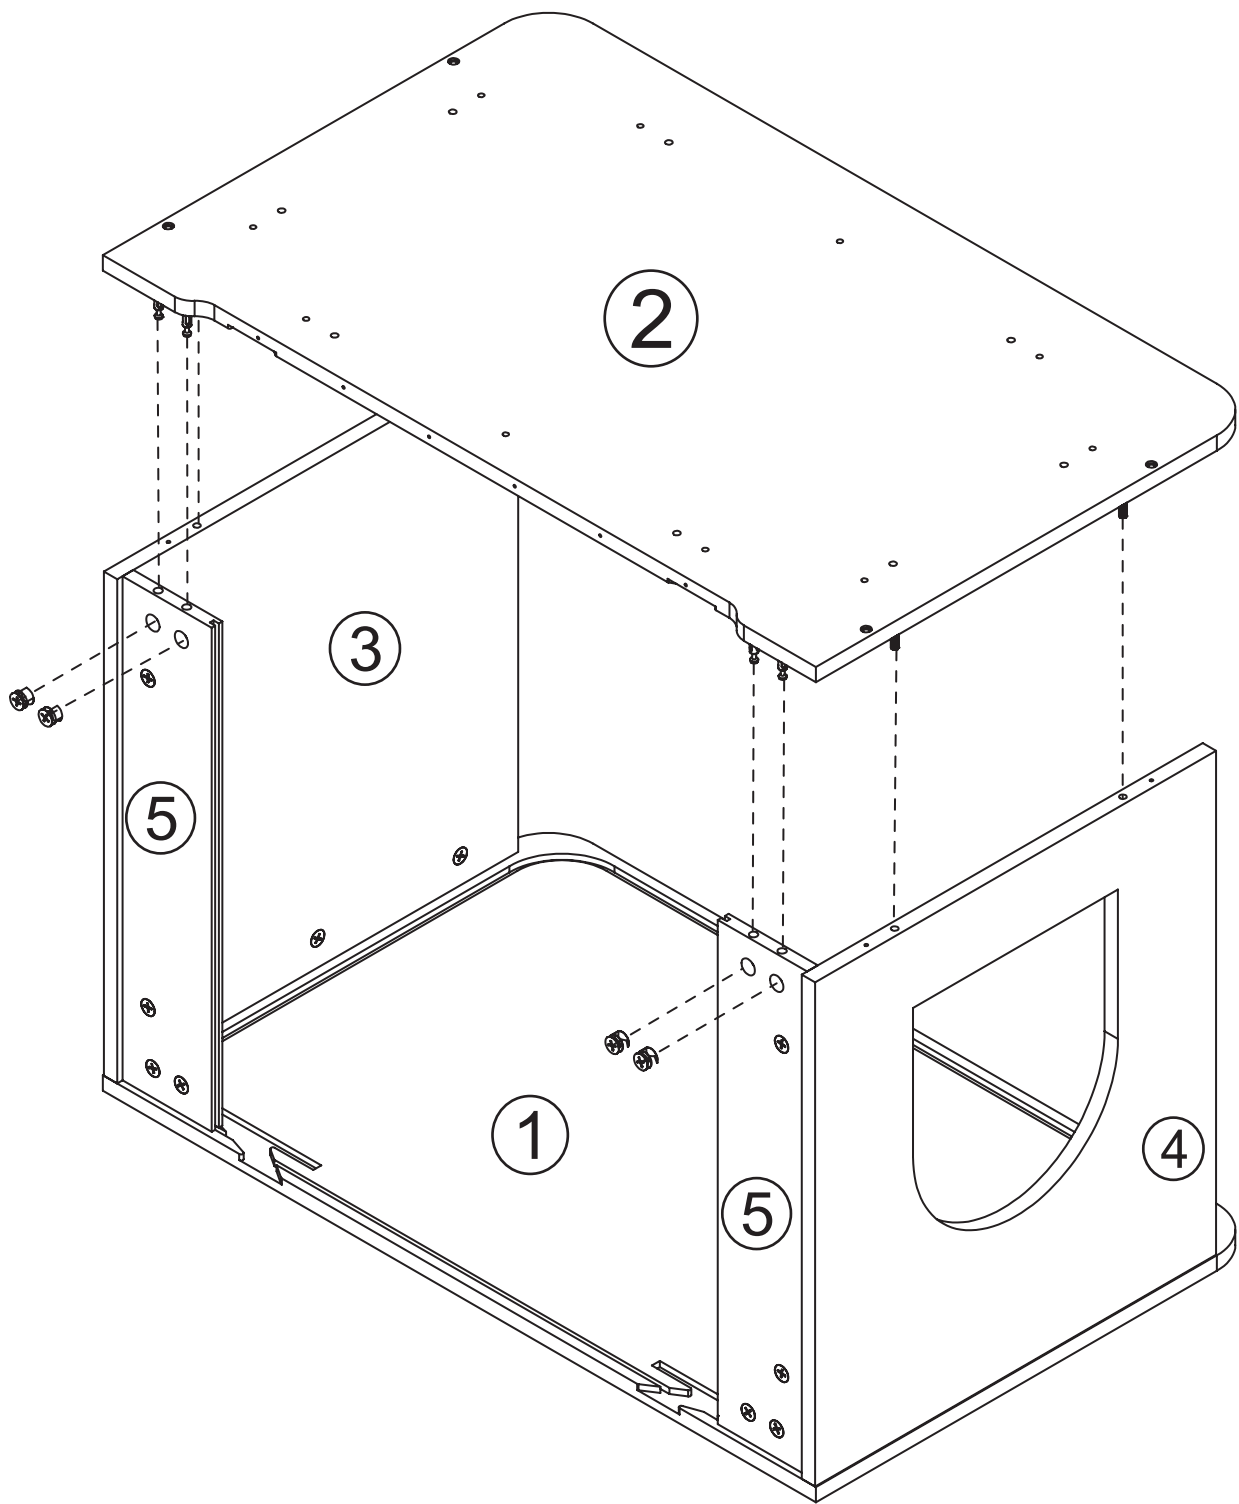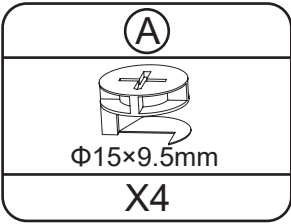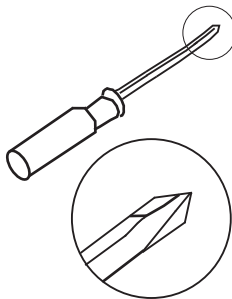


STEP7

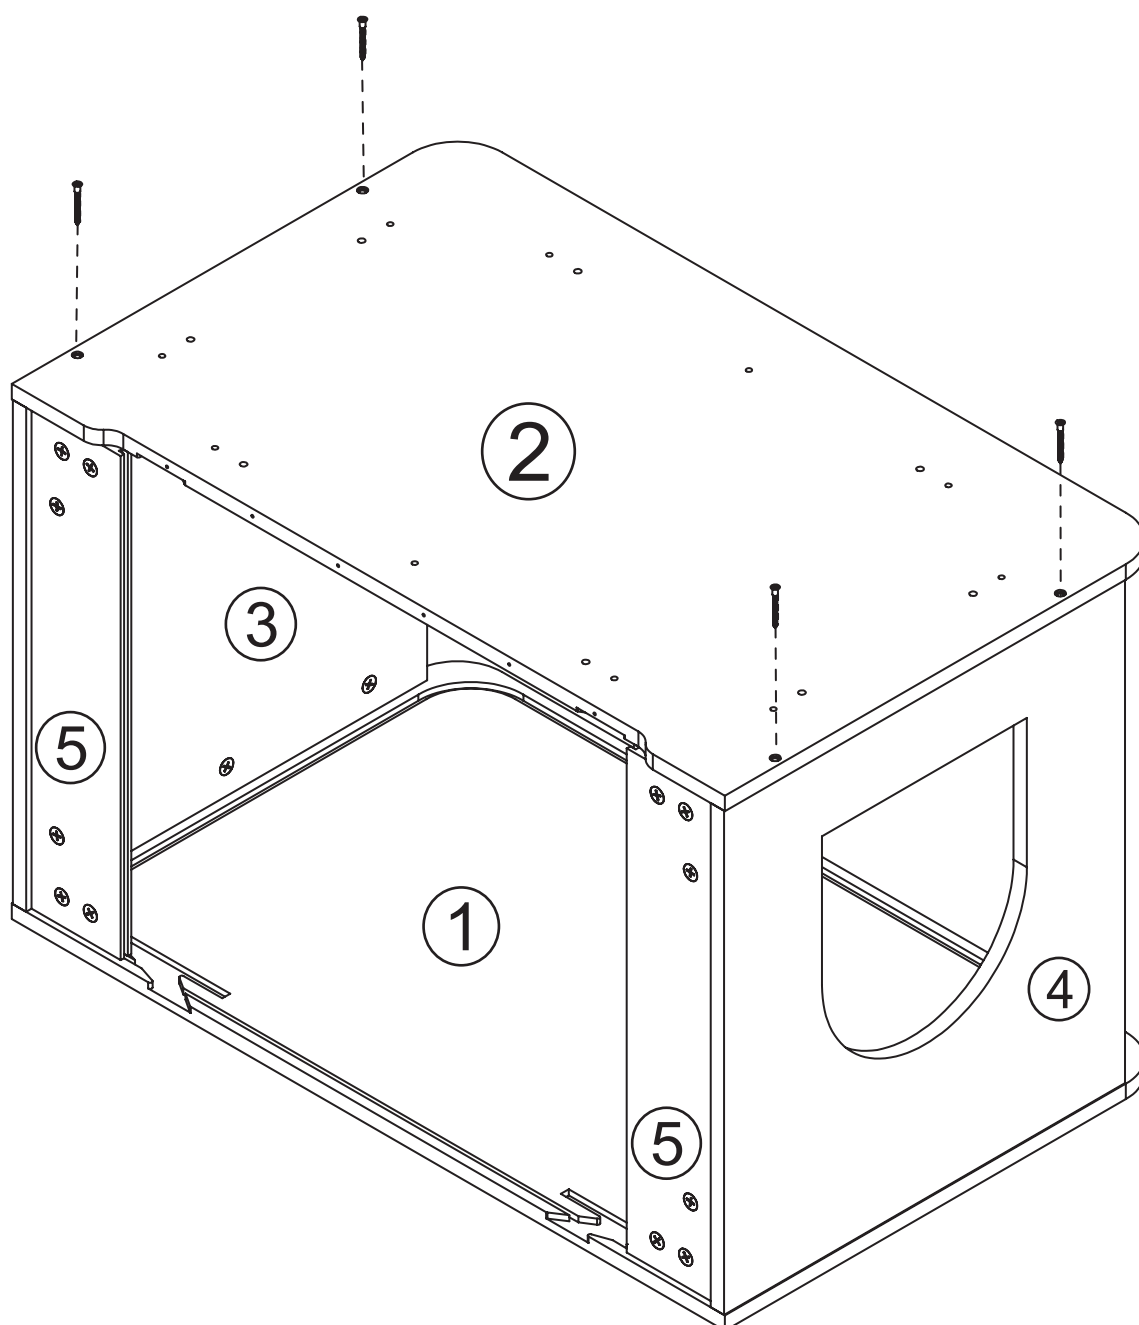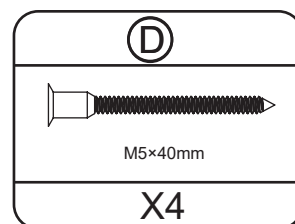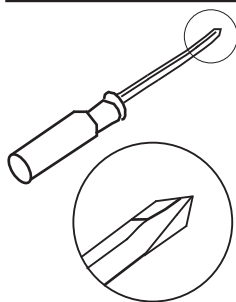

STEP8

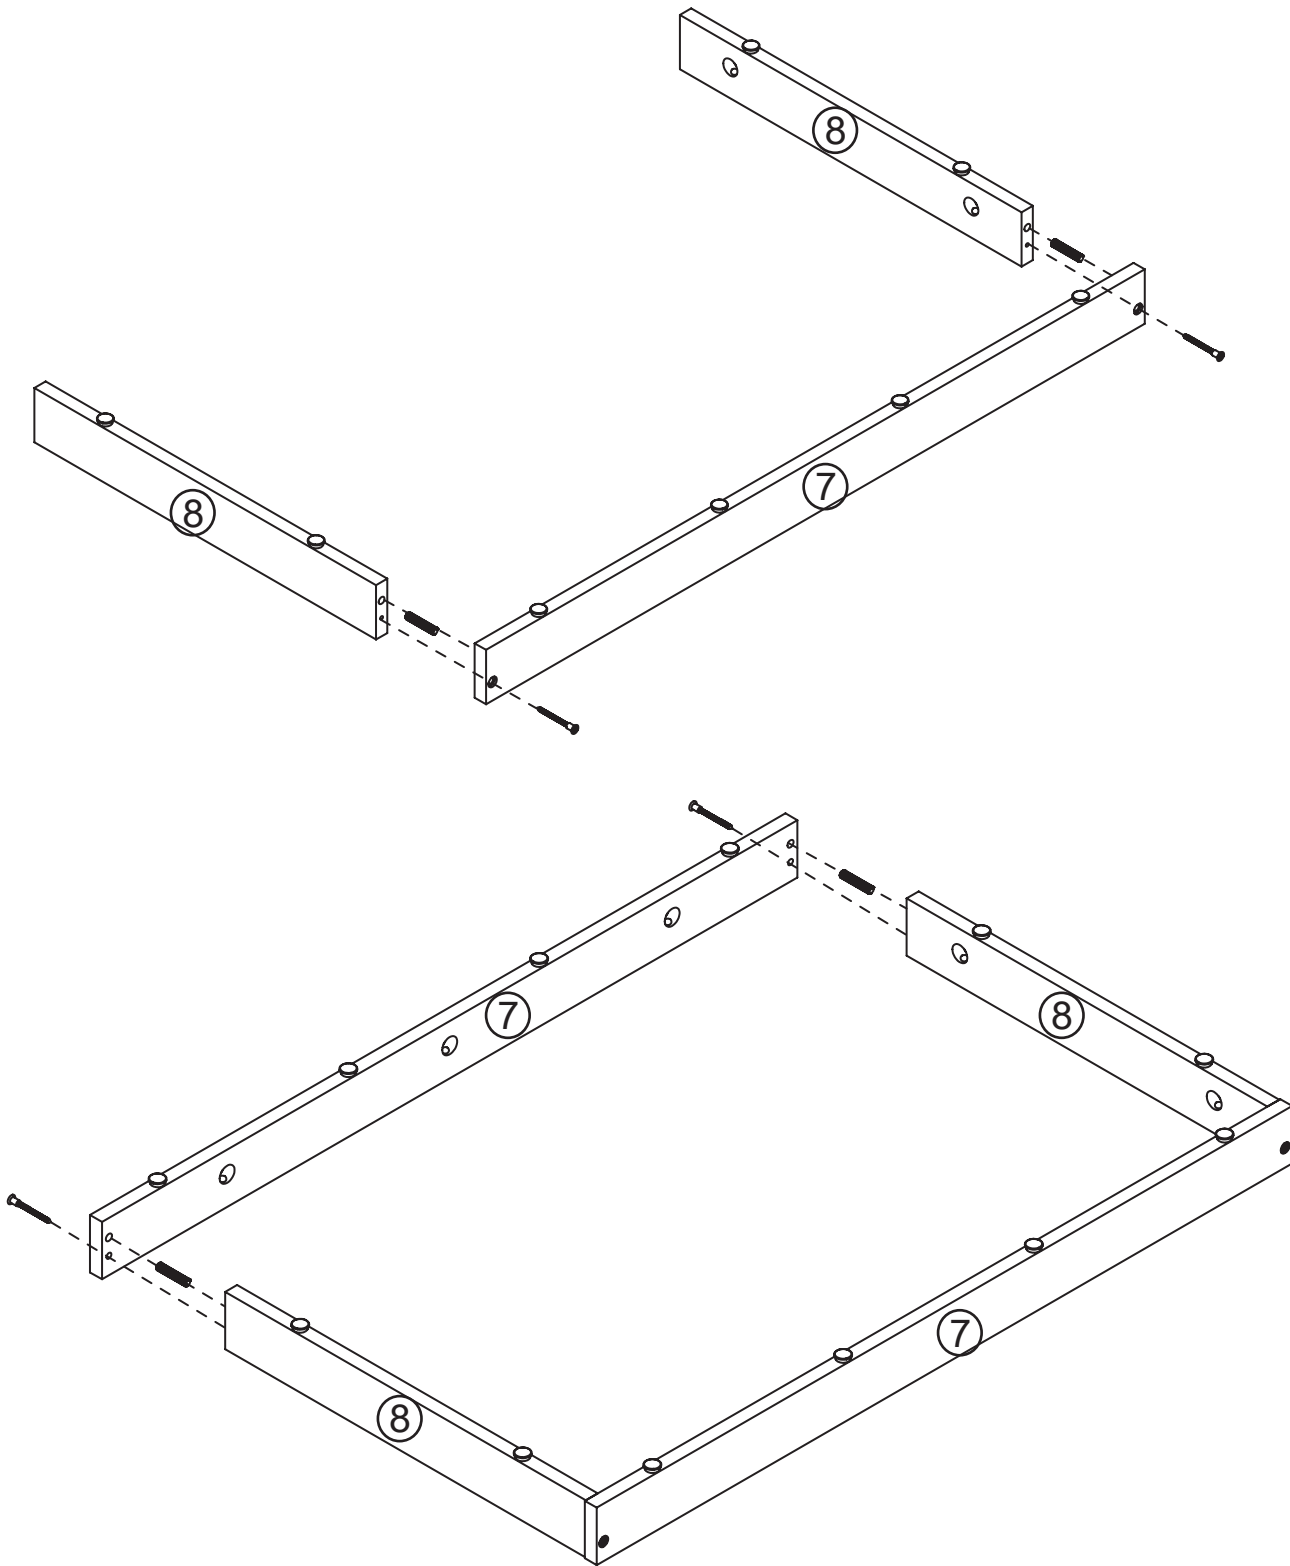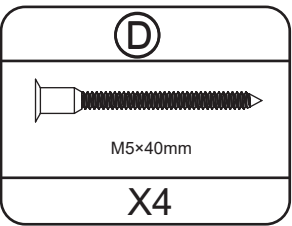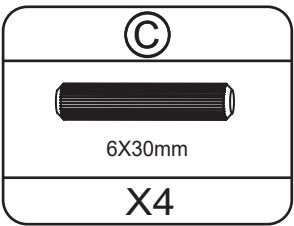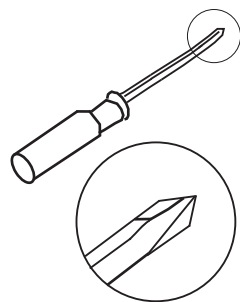

STEP9

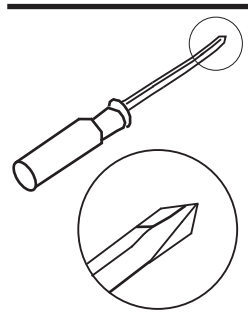

Ⓑ

A detailed illustration of a screw with a Phillips head and a threaded shaft.

Φ6.5×35mm


X10

Ⓒ




A detailed illustration of a cam bolt with a hexagonal head and a long, smooth shaft.

6X30mm





X8

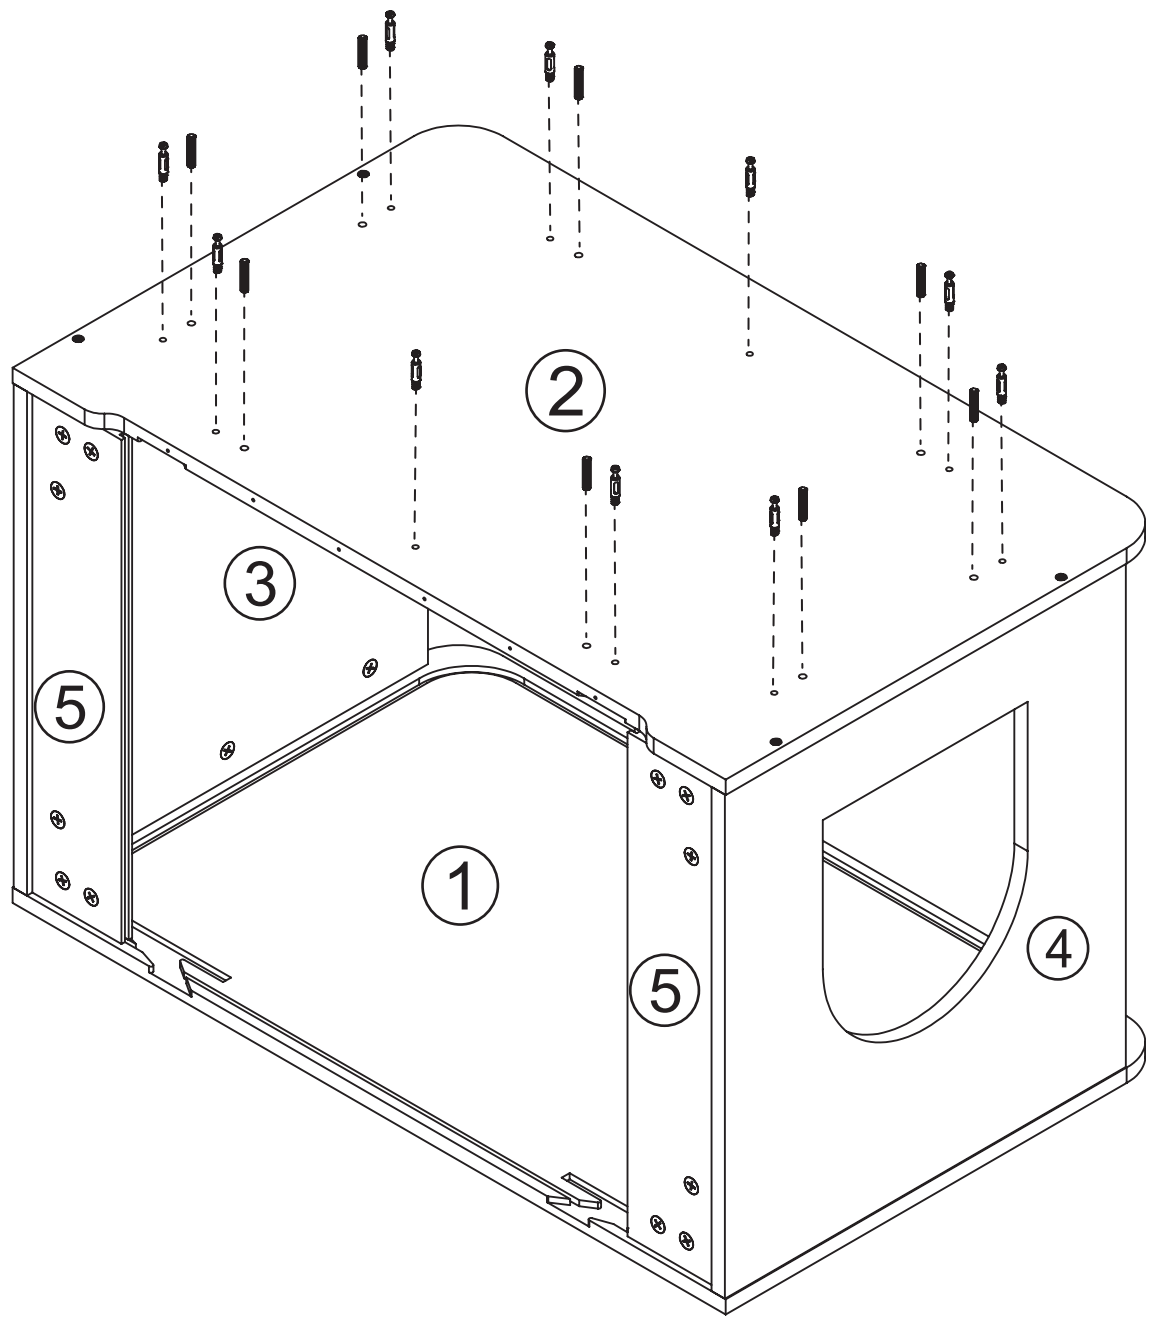



STEP10

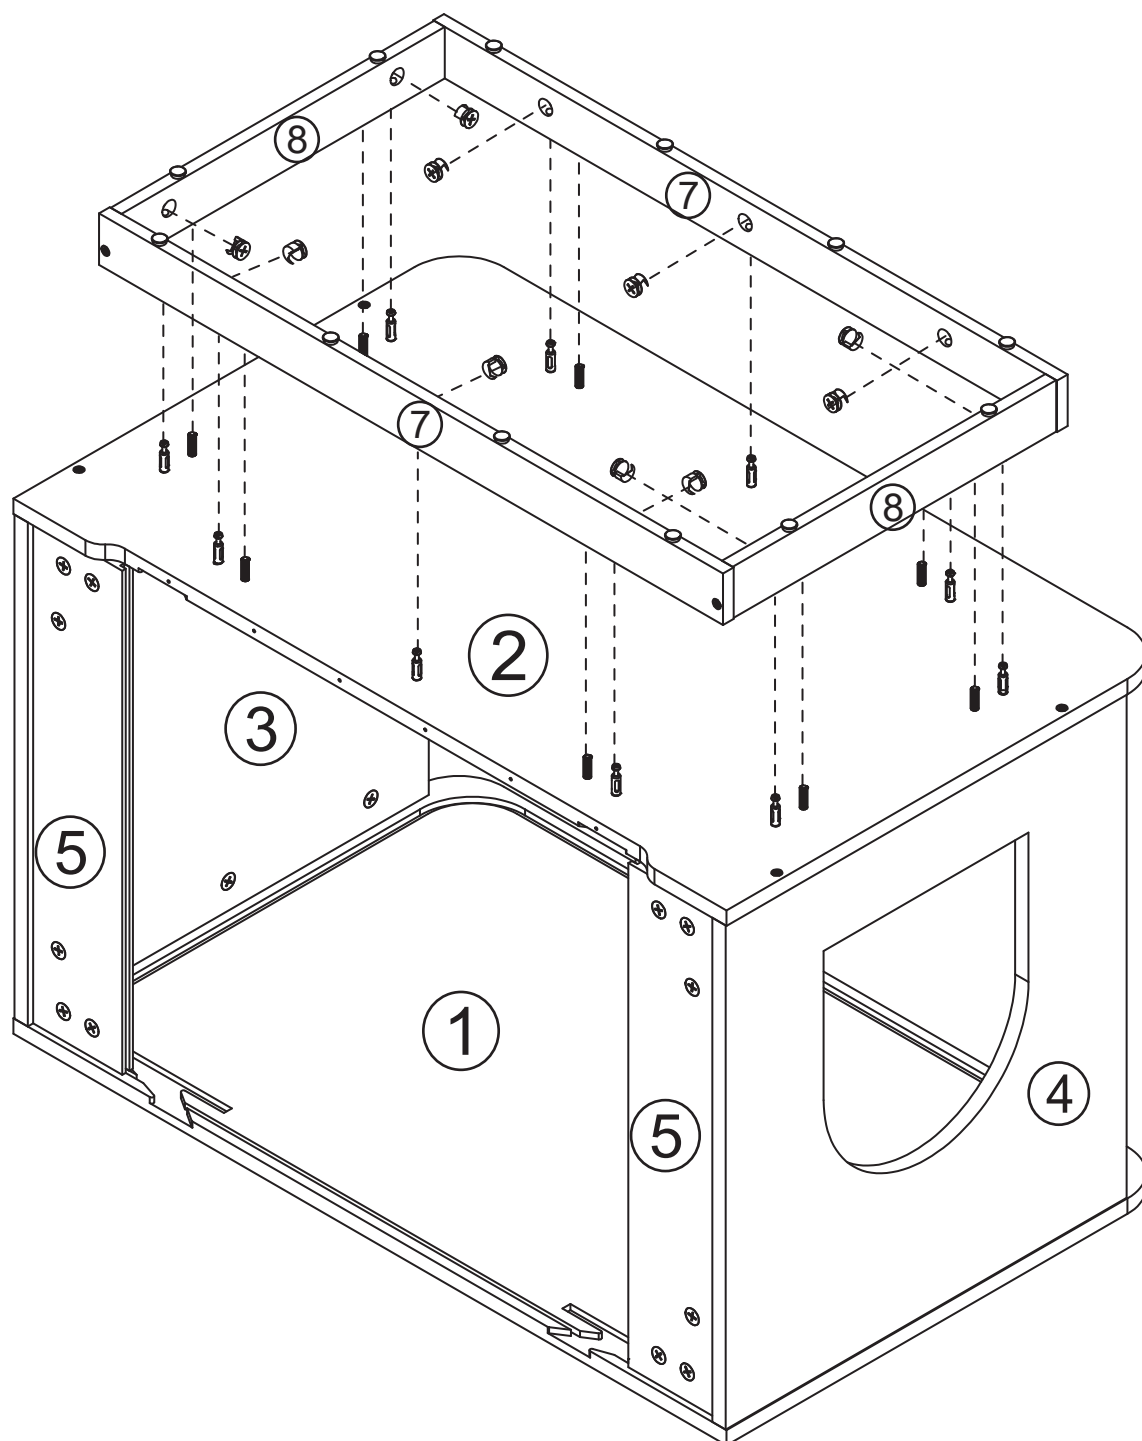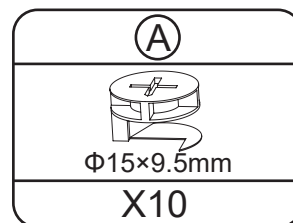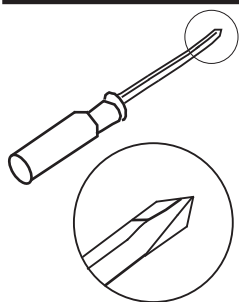



STEP11

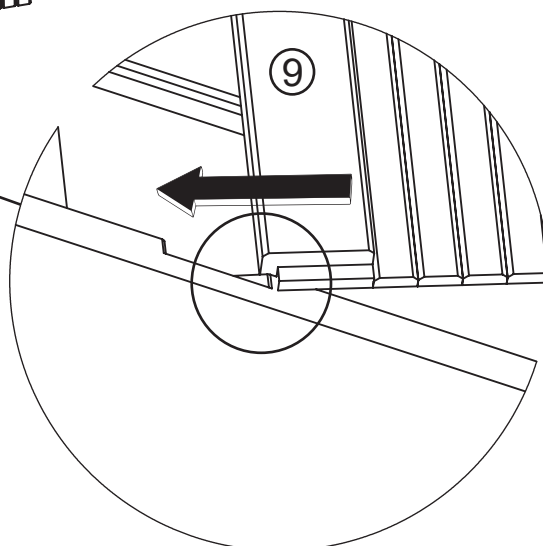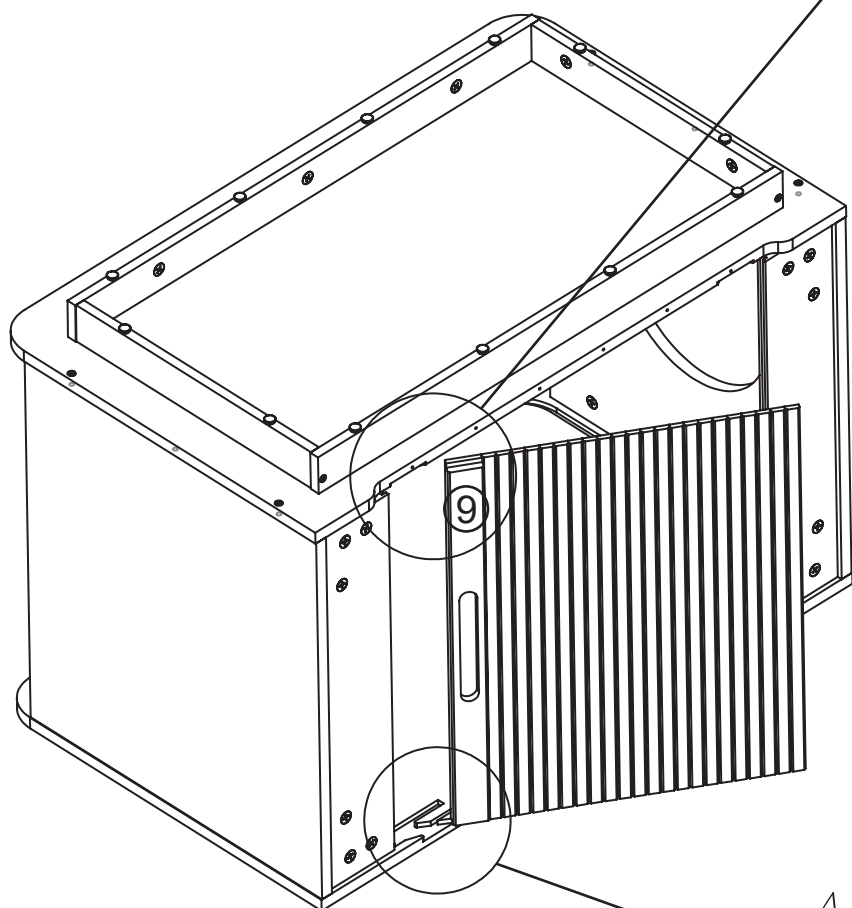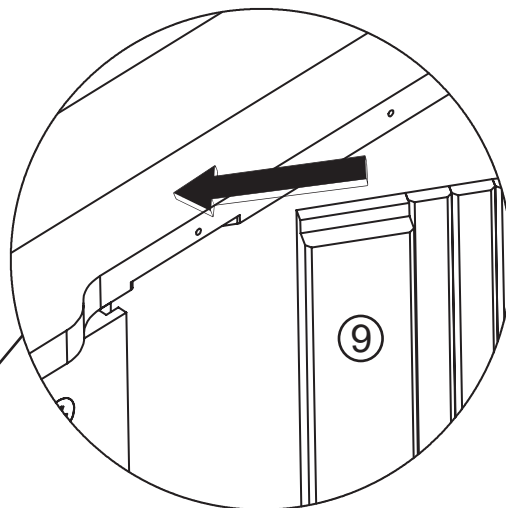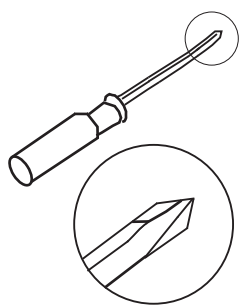





STEP12

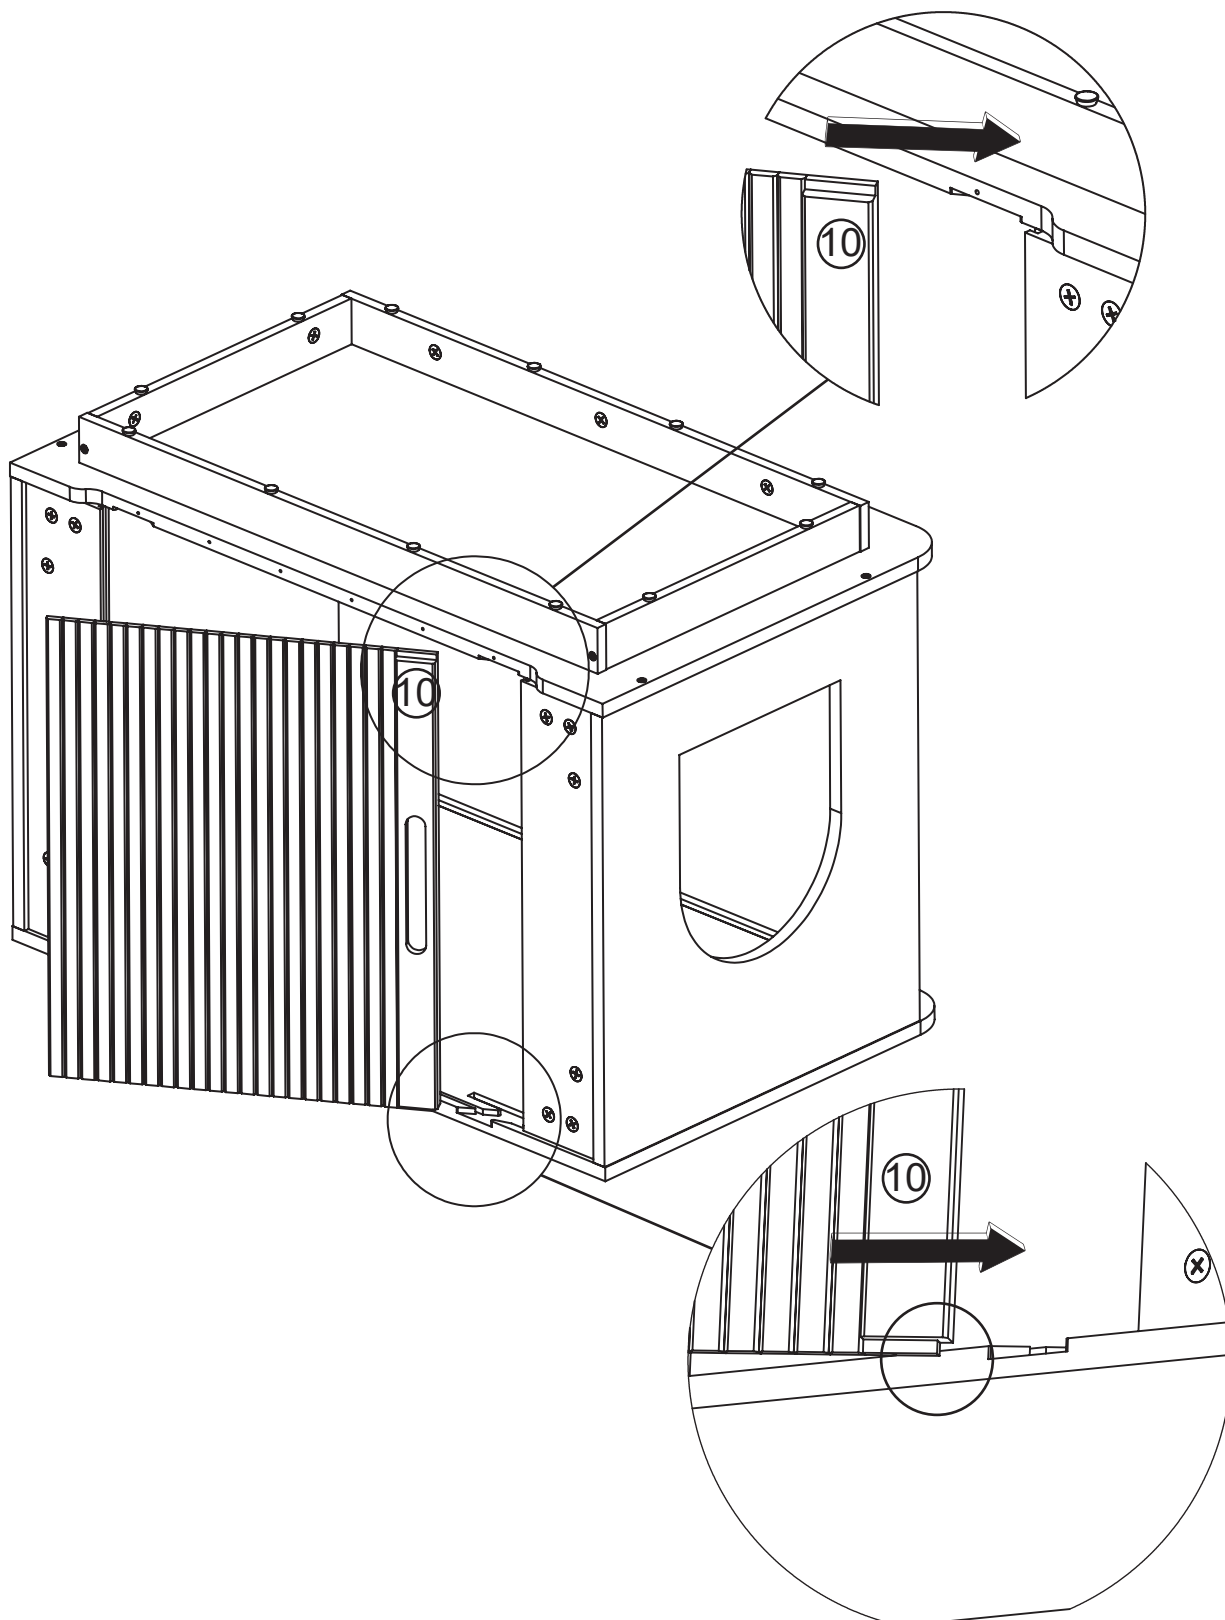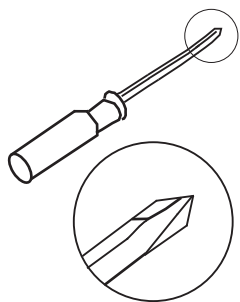







STEP13

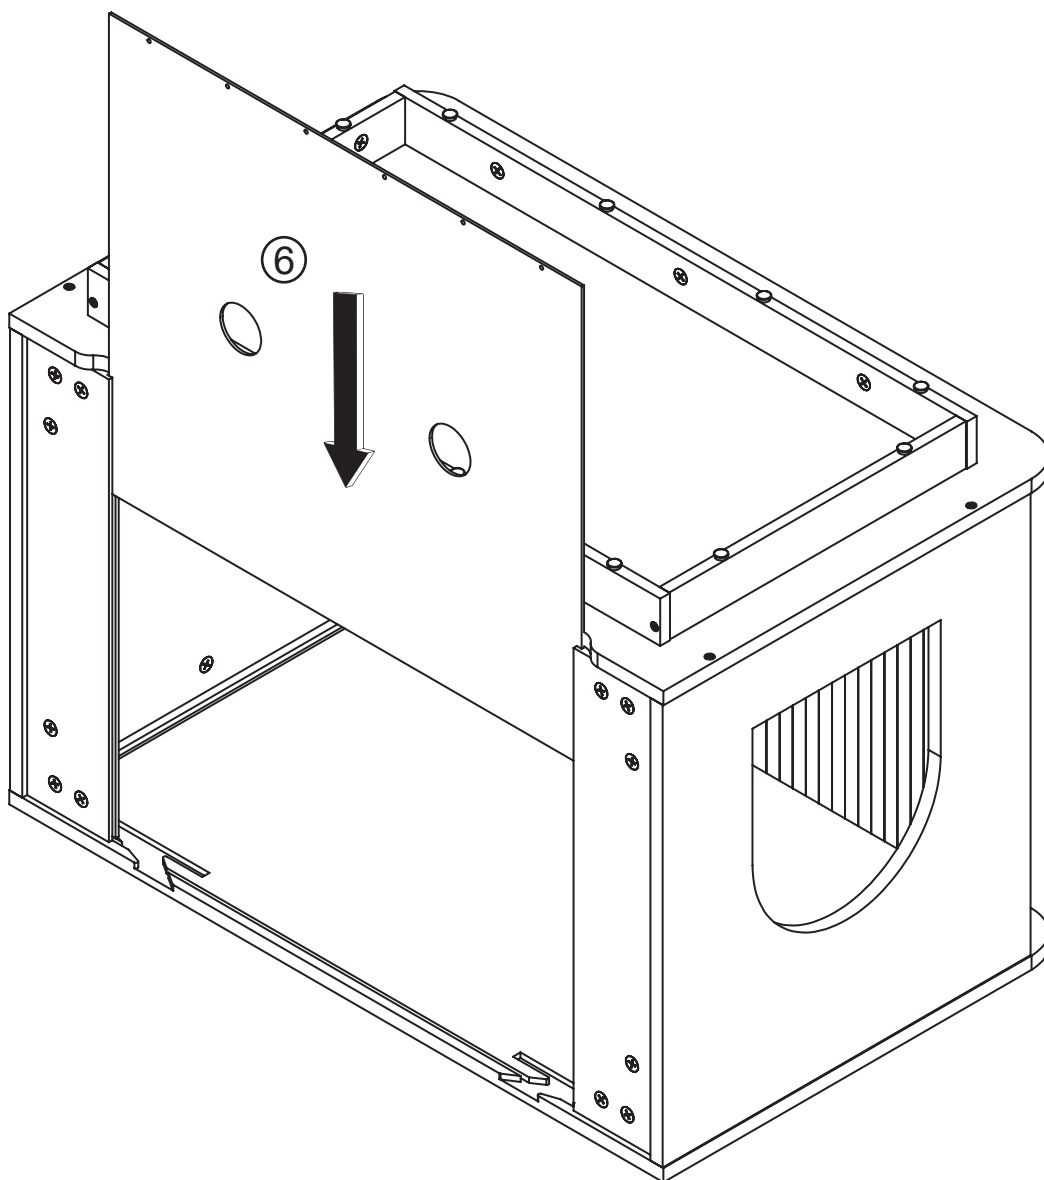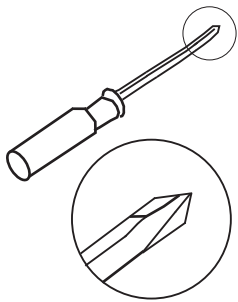

STEP14

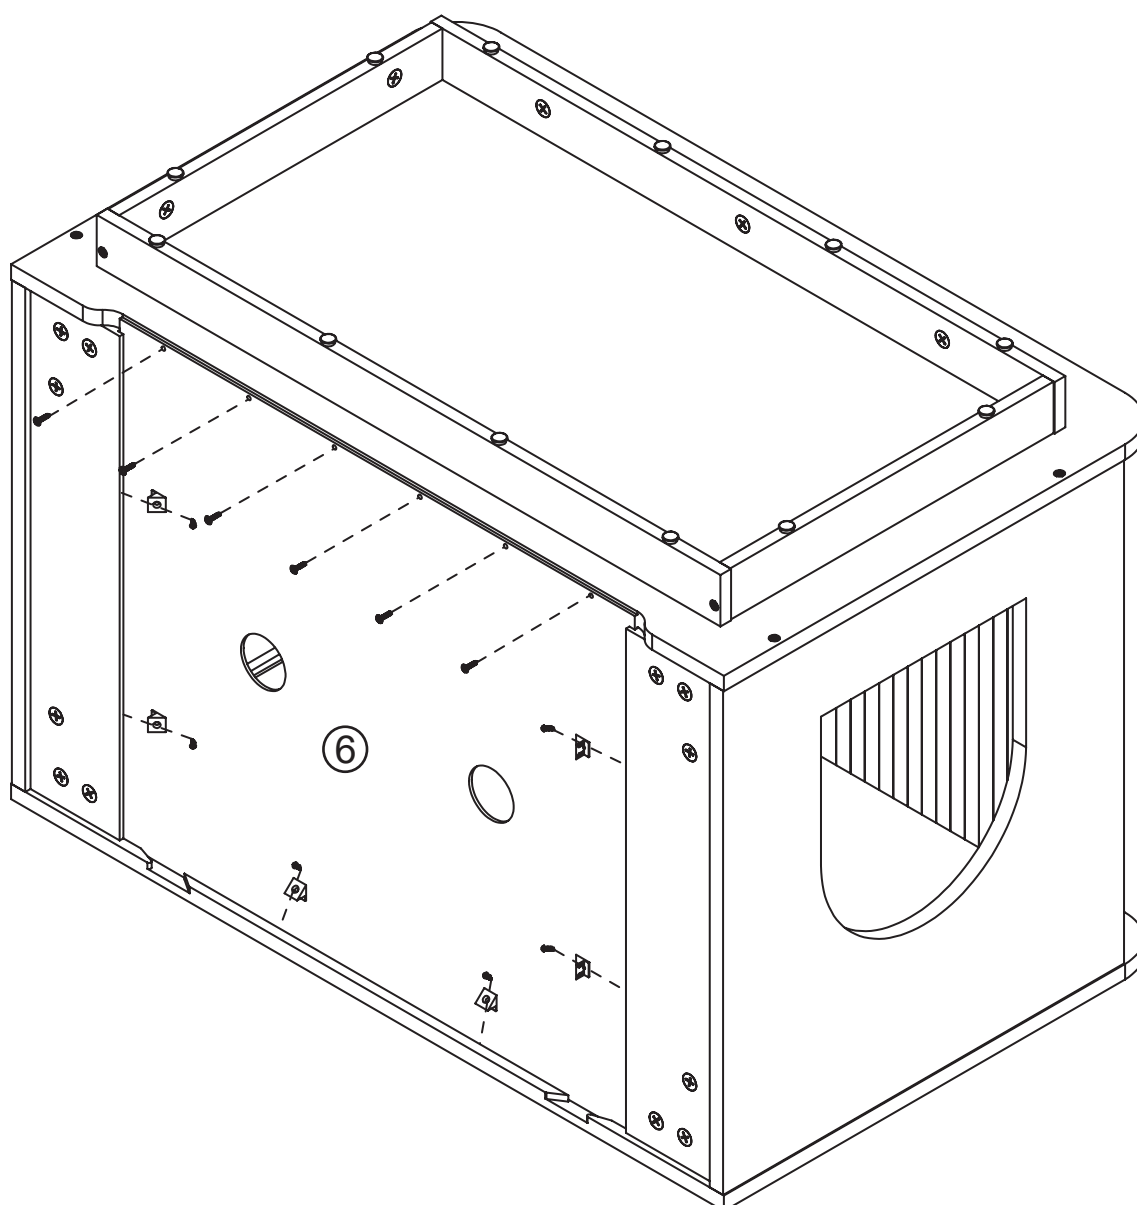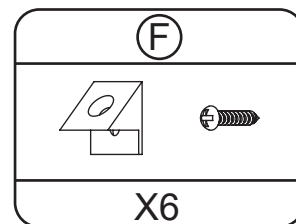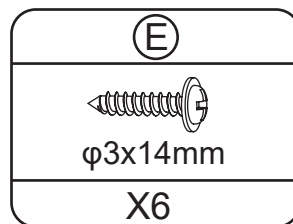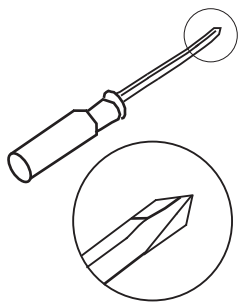

STEP15

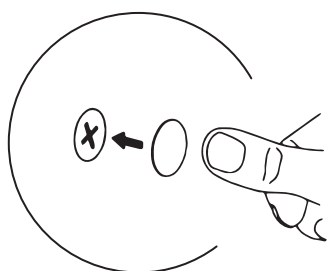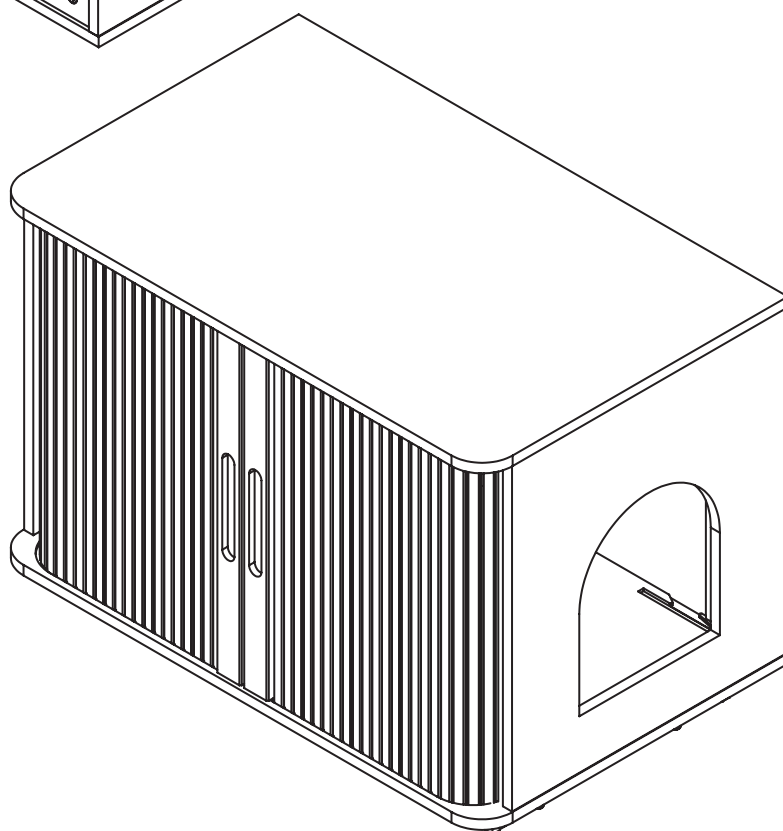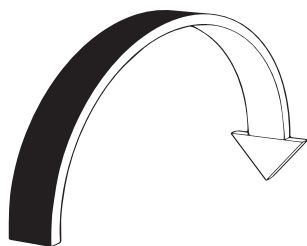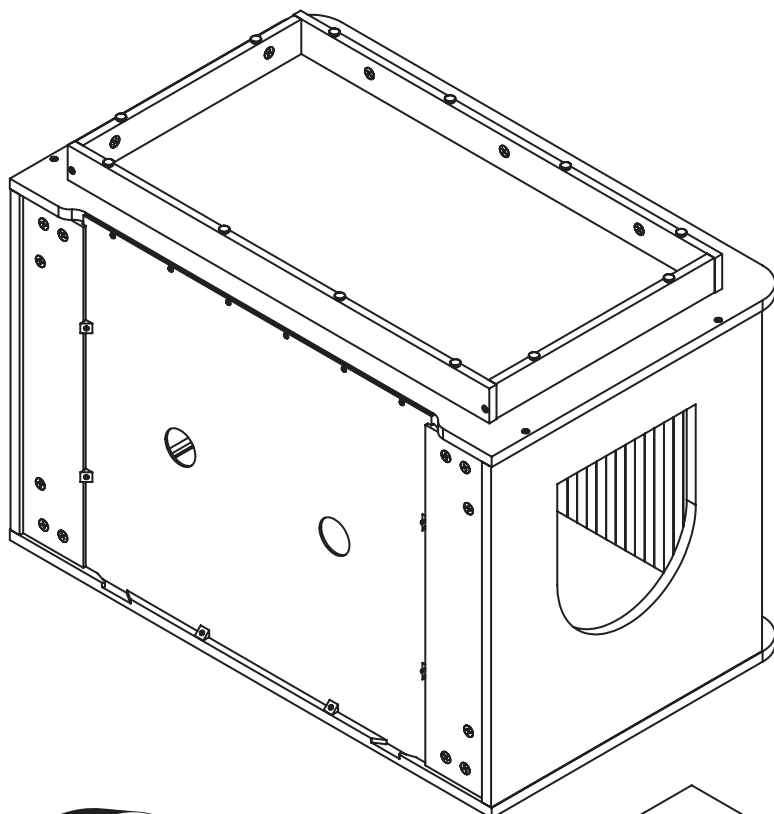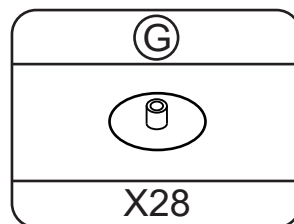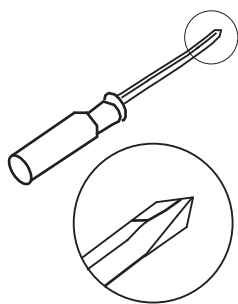

Use plastic hole plugs (G) to cover the exposed parts of the screws.